Atlas Copco

Boomer 282
Spare Parts Catalogue

PM No. 8991929400

Atlas Copco

Use Atlas Copco genuine parts only.
Any damage or mailfunction caused by the use of unauthorized parts is not covered by warranty or product liability.

This publication refers only to the mentioned product.

When ordering spare parts, please state part number (not the ref no) and the quantity.

Använd alltid Atlas Copco originaldelar.
Skador och driftstörningar orsakade av ej godkända reservdelar täcks ej av garanti och produktsäkerhetsåtaganden.

Denna publikation gäller endast för nämnda produkt.

Vid beställning av reservdelar, var god ange detaljnummer (ej ref nr) samt antal.

© Copyright 2011, Atlas Copco Rock Drills AB, Sweden
Any unauthorized use or copying of the contents or any part thereof is prohibited.
This applies in particular to trademarks, model denominations, part numbers and drawings.
Obehörigt utnyttjande eller kopiering av innehållet eller del därav är förbjudet.
Detta gäller speciellt varumärken, modellbeteckningar, reservdelsnummer och ritningar.

Atlas Copco Rock Drills AB
SE-70191 Örebro, Sweden

Table of Content / Innehållsförteckning

1. HYDR. SYSTEM / HYDRAULSYSTEM 5
2. CARRIER / UNDERREDE 201
3. BOOM / BOM 427
4. ROCK DRILL / BERGBORRMASKIN 533
5. FEED / MATARE 585
6. ELECTR. SYSTEM / ELSYSTEM 643
7. AIR/WATERSYSTEM / LUFT/VATTENSYST 709
8. CABLE REEL / KABELVINDA 757
9. HOSE REEL / SLANGVINDA 799
10. HOSE CONNECTION / SLANGANSLUTNING 829
11. HOSES / SLANGAR 849
12. CROSS REFERENCE LIST 863

HYDR. SYSTEM / HYDRAULSYSTEM
LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	HYDR. SYSTEM	HYDRAULSYSTEM	11	
3217 8835 56	– CONTROL PANEL	– MANÖVERPANEL	14	DCS 18-280 DRILL PANEL
3217 9834 00	– – DIRECTION VALVE	– – RIKTNINGSVENTIL	17	DRILLING
3217 9834 05	– – – INLET SECTION	– – – INLOPPSSEKTION	19	
3217 9834 10	– – – CONTROL SET	– – – MANÖVERSATS	21	FEED
3217 9834 23	– – – – LEVER HOLDER	– – – – SPAKLOCK	23	
3217 9834 30	– – – INTERMED. PART	– – – MELLANDEL	25	
3217 9834 35	– – – CONTROL SET	– – – MANÖVERSATS	27	DRILLING
3217 9834 23	– – – – LEVER HOLDER	– – – – SPAKLOCK	23	
3217 9834 45	– – – CONTROL SET	– – – MANÖVERSATS	29	ROTATION
3217 9834 23	– – – – LEVER HOLDER	– – – – SPAKLOCK	23	
3217 9834 51	– – – COVER	– – – LOCK	31	
3217 8968 00	– – VALVE BLOCK	– – VENTILBLOCK	33	
3217 8937 01	– – VALVE BLOCK	– – VENTILBLOCK	35	
3125 0906 91	– – VALVE UNIT	– – VENTILENHET	37	
3217 8840 05	– – THROTTLE VALVE	– – STRYPVENTIL	39	
3217 8840 05	– – THROTTLE VALVE	– – STRYPVENTIL	39	
3217 8870 40	– – PANEL FRAME	– – PANELSTOMME	41	
–	– – HOSE SET	– – SLANGSATS	43	
3217 8014 01	– – SEQUENCE VALVE	– – SEKVENSVENTIL	45	
3125 9005 02	– – DIRECTION VALVE	– – RIKTNINGSVENTIL	47	
3217 8870 41	– – ATTACHMENT	– – FÄSTE	49	
3217 8969 40	– – REAMER SET	– – GROVHÅLSATS	51	
3217 8969 21	– – – HYDRAULIC SET	– – – HYDRAULSATS	53	CUT HOLE
3177 3023 00	– – – – DIRECTION VALVE	– – – – RIKTNINGSVENTIL	55	TUBE,WANDFLUH AH4Z-A/R
3217 9082 05	– – – – PRESS.REL.VALVE	– – – – TRYCKBEG.VENTIL	57	
3217 8014 01	– – – – SEQUENCE VALVE	– – – – SEKVENSVENTIL	45	

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
3177 3156 07	– – – – DIRECTION VALVE	– – – – RIKTNINGSVENTIL	59	4 WH 6 D 5X
–	– – – HOSE SET	– – – SLANGSATS	61	CUT HOLE
–	– HOSE SET	– SLANGSATS	63	BIG HOLE
3128 2090 59	– BOOM HYD. KIT	– BOMHYD.SATS	66	BOOM POS.PANEL
3128 2090 57	– – DIRECTION VALVE	– – RIKTNINGSVENTIL	69	
–	– – – ASSEMBLY SET	– – – MONTERINGSSATS	71	
–	– – – INLET SECTION	– – – INLOPPSSEKTION	73	
–	– – – VALVE SECTION	– – – VENTILSEKTION	75	
–	– – – VALVE SECTION	– – – VENTILSEKTION	77	
–	– – – VALVE SECTION	– – – VENTILSEKTION	79	
–	– – – OUTLET SECTION	– – – UTLOPPSSEKTION	81	
3125 9005 02	– – DIRECTION VALVE	– – RIKTNINGSVENTIL	47	
8234 0200 37	– – PR.CONTR.VALVE	– – STYRTR.VENTIL	83	
9120 0893 02	– – – LEVER JOINT	– – – SPAKFÄSTE	85	
9120 0590 52	– – – LEVER SET	– – – SPAKSATS	87	
9122 4352 00	– – VALVE	– – VENTIL	89	
3128 2020 15	– – PRESS.RED.VALVE	– – TRYCKRED.VENTIL	91	R 1/4
–	– – HOSE SET	– – SLANGSATS	93	
–	– COUPLING SET	– KOPPLINGSSATS	95	
9110 8940 02	– – SHAFT COUPLING	– – AXELKOPPLING	97	
–	– – COVER SET	– – TÄCKLOCKSATS	99	
–	– HYDR. SYSTEM	– HYDRAULSYSTEM	101	
9106 1609 64	– – HYDR. SYSTEM	– – HYDRAULSYSTEM	103	RIG SYSTEM
3176 2935 10	– – – RETURN BLOCK	– – – RETURBLOCK	105	INCL. CHECK VALVE
3128 2090 74	– – – DIRECTION VALVE	– – – RIKTNINGSVENTIL	107	
3128 2091 01	– – – – INLET SECTION	– – – – INLOPPSSEKTION	109	
3128 2091 38	– – – – SPOOL VALVE	– – – – SPOLVENTIL	111	
3128 2091 39	– – – – OUTLET SECTION	– – – – UTLOPPSSEKTION	113	
9106 0658 83	– – – SUCT.CONNECTION	– – – SUGANSLUTNING	115	

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
9106 0658 52	– – – SUCT.CONNECTION	– – – SUGANSLUTNING	117	
9106 0658 85	– – – SUCT.CONNECTION	– – – SUGANSLUTNING	119	
9106 0658 73	– – – SUCT.CONNECTION	– – – SUGANSLUTNING	121	
3177 3092 88	– – – DIRECTION VALVE	– – – RIKTNINGSVENTIL	123	
9106 1509 11	– – HYDR. SYSTEM	– – HYDRAULSYSTEM	126	DRILLING SYSTEM
3217 9553 66	– – – HYDRAULIC PUMP	– – – HYDRAULPUMP	129	DEPL.100+50+11 CM3/R
3217 8762 00	– – – – HYDRAULIC PUMP	– – – – HYDRAULPUMP	131	A10VO 100 CC
–	– – – – – PUMP	– – – – – PUMP	133	
3217 9203 02	– – – – – PILOT VALVE	– – – – – STYRVENTIL	135	
3217 9554 10	– – – – HYDRAULIC PUMP	– – – – HYDRAULPUMP	137	
3214 7669 81	– – – FLOW REGULATOR	– – – FLÖDESREGULATOR	139	
3214 7669 81	– – – FLOW REGULATOR	– – – FLÖDESREGULATOR	139	
3217 8937 20	– – – VALVE BLOCK	– – – VENTILBLOCK	141	
3217 8937 40	– – – VALVE BLOCK	– – – VENTILBLOCK	143	
3217 9584 40	– – – VALVE BLOCK	– – – VENTILBLOCK	145	DCS1800 PANEL
3217 9584 42	– – – – VALVE BLOCK	– – – – VENTILBLOCK	147	
–	– – HOSE SET	– – SLANGSATS	149	
–	– – – HOSE SET	– – – SLANGSATS	151	
–	– – – HOSE SET	– – – SLANGSATS	153	
9106 1609 96	– – HYD.SET REEL	– – HYD.SATS VINDA	157	DUAL COMMAND 2 REELS
–	– – – ATTACHMENT SET	– – – FÄSTDETALJER	159	
3128 2090 77	– – – DIRECTION VALVE	– – – RIKTNINGSVENTIL	161	
3128 2091 72	– – – – ASSEMBLY SET	– – – – MONTERINGSSATS	163	
3128 2091 73	– – – – INLET SECTION	– – – – INLOPPSSEKTION	165	
3128 2091 74	– – – – VALVE SECTION	– – – – VENTILSEKTION	167	
3128 2091 75	– – – – VALVE SECTION	– – – – VENTILSEKTION	169	
3128 2091 76	– – – – OUTLET SECTION	– – – – UTLOPPSSEKTION	171	
9106 1609 60	– – HYDRAULIC SET	– – HYDRAULSATS	173	PROTECTION ROOF
9106 0630 10	– – – DOUBLE CH.VALVE	– – – HYDRAULLÅS	175	

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
3128 2090 72	– – – DIRECTION VALVE	– – – RIKTNINGSVENTIL	177	
3128 2091 22	– – – – INLET SECTION	– – – – INLOPPSSEKTION	179	
3128 2091 02	– – – – VALVE SECTION	– – – – VENTILSEKTION	181	
3128 2091 24	– – – – OUTLET SECTION	– – – – UTLOPPSSEKTION	183	
5112 3156 06	– EL.OIL FILLER	– EL.OLJEPÅFYLLN.	185	
9106 0796 62	– – HYDRAULIC PUMP	– – HYDRAULPUMP	187	WITH EL.MOTOR 0,2KW/24VOLT
9106 1434 46	– – HOSE SET	– – SLANGSATS	189	ELECTR.OIL FILLER
5112 3162 07	– – ELECTRIC SET	– – ELSATS	191	EL. OILREFILL
–	– HYDRAULIC SET	– HYDRAULSATS	193	TELESCOPE
3217 8964 07	– – HYDRAULIC SET	– – HYDRAULSATS	195	TELESCOPIC FEED
3217 8937 01	– – – VALVE BLOCK	– – – VENTILBLOCK	35	
–	– – HOSE SET	– – SLANGSATS	197	
–	– HYDRAULIC SET	– HYDRAULSATS	199	TELESCOPIC FEED/BOOM 2
3217 8964 07	– – HYDRAULIC SET	– – HYDRAULSATS	195	TELESCOPIC FEED
3217 8937 01	– – – VALVE BLOCK	– – – VENTILBLOCK	35	
–	– – HOSE SET	– – SLANGSATS	197	






HYDR. SYSTEM / HYDRAULSYSTEM

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
15	3217 8835 56	2	CONTROL PANEL	MANÖVERPANEL	Page 14	DCS 18-280 DRILL PANEL
16	–	1	HOSE SET	SLANGSATS	Page 63	BIG HOLE
140	3128 2090 59	2	BOOM HYD. KIT	BOMHYD.SATS	Page 66	BOOM POS.PANEL
255	–	2	COUPLING SET	KOPPLINGSSATS	Page 95	
300	–	1	HYDR. SYSTEM	HYDRAULSYSTEM	Page 101	
315	5112 3156 06	1	EL.OIL FILLER	EL.OLJEPÅFYLLN.	Page 185	
361	–	1	HYDRAULIC SET	HYDRAULSATS	Page 193	TELESCOPE
362	–	1	HYDRAULIC SET	HYDRAULSATS	Page 199	TELESCOPIC FEED/BOOM 2


Fig. 1 of 2

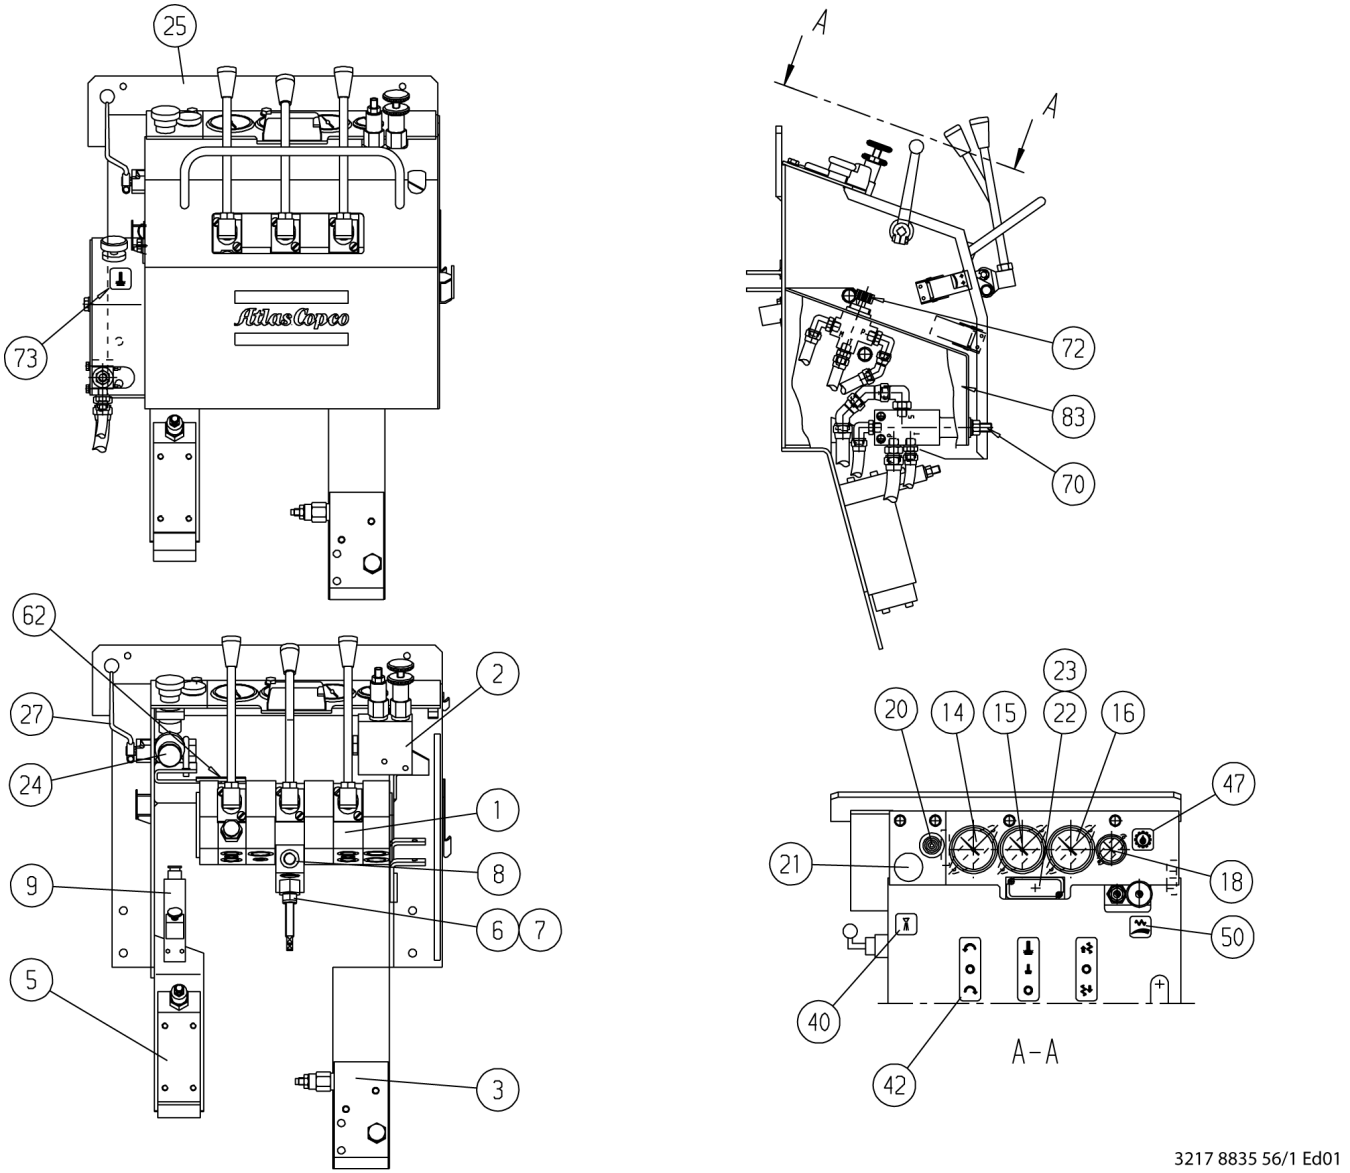

3217 8835 56/1 Ed01

B0026798

Fig. 2 of 2

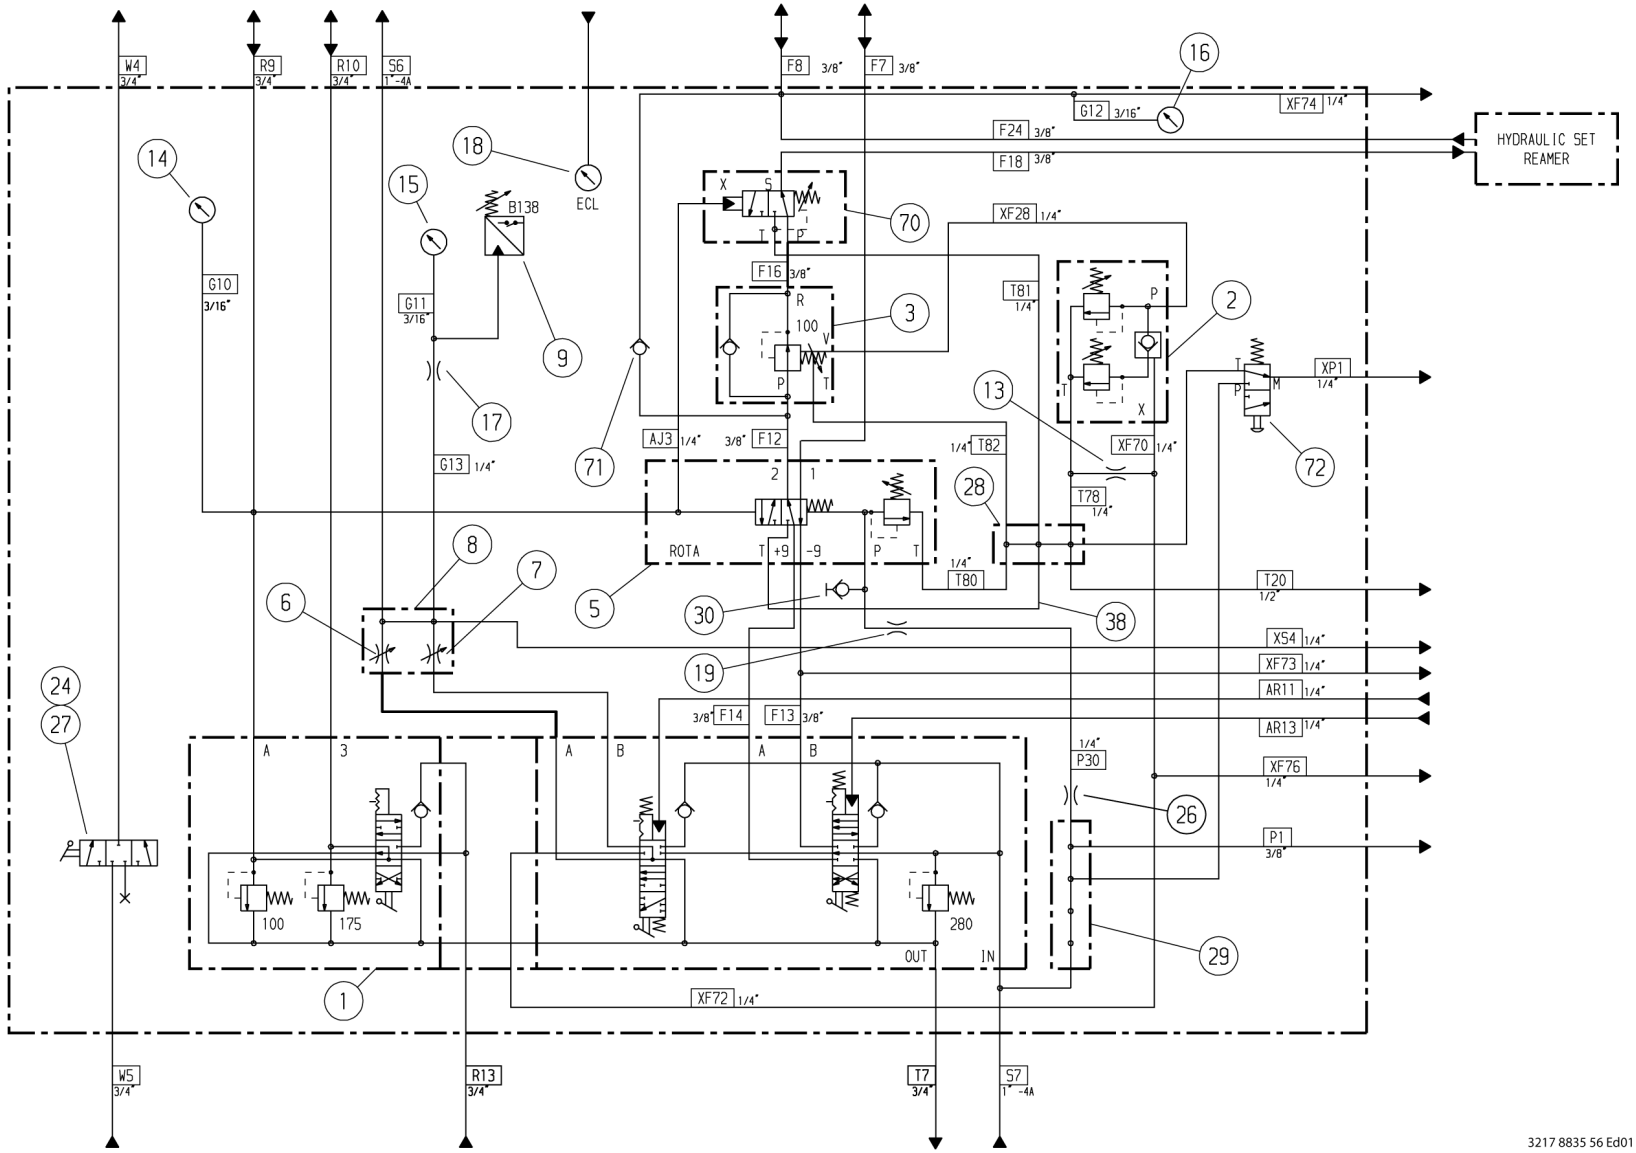

3217 8835 56 Ed01

CONTROL PANEL / MANÖVERPANEL 3217 8835 56

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9834 00	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 17	DRILLING
2	3217 8968 00	1	VALVE BLOCK	VENTILBLOCK	Page 33	
3	3217 8937 01	1	VALVE BLOCK	VENTILBLOCK	Page 35	
5	3125 0906 91	1	VALVE UNIT	VENTILENHET	Page 37	
6	3217 8840 05	1	THROTTLE VALVE	STRYPVENTIL	Page 39	
7	3217 8840 05	1	THROTTLE VALVE	STRYPVENTIL	Page 39	
8	3217 8840 51	1	DISTRIBUT. PIPE	FÖRDELNINGSRÖR		
9	3176 4589 05	1	PRESSURE SWITCH	TRYCKVAKT		9056 40-400 BAR
13	3217 6513 02	1	RESTRICTION	STRYPNING		D=0,8; 9/16-18 UN
14	3177 3032 00	1	PRESSURE GAUGE	TRYCKMÄTARE		WIKA 2748/63 0-250 BAR
15	3177 3147 00	1	PRESSURE GAUGE	TRYCKMÄTARE		WIKA 2748/63 0-400 BAR
16	3177 3032 00	1	PRESSURE GAUGE	TRYCKMÄTARE		WIKA 2748/63 0-250 BAR
17	3217 6513 01	1	RESTRICTION	STRYPNING		D=0,6; 9/16-18 UN
18	3176 8695 00	1	PRESSURE GAUGE	TRYCKMÄTARE		G 1/8'
19	3217 6513 01	1	RESTRICTION	STRYPNING		D=0,6; 9/16-18 UN
20	3217 0010 02	1	TRIGGER	TRYCKE		ZB5-AA2
20	3217 0010 72	1	INTERMED. PART	MELLANDEL		
20	3217 0010 73	1	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY OPEN
20	3217 0010 75	1	SEALING COVER	TÄTNINGSKÅPA		
21	3217 0010 72	1	INTERMED. PART	MELLANDEL		
21	3217 0010 74	1	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY CLOSED
21	3217 0010 87	1	MUSHROOM PUSHB.	SVAMPTRYCKE		
22	3217 9196 00	1	LIGHTNING	BELYSNING		2KA 003 168-021
23	1089 0289 01	1	INDICATION LAMP	SIGNALLAMPA		C11
24	3177 5048 00	1	BALL COCK	KULKIKKRAN		
25	3217 8870 40	1	PANEL FRAME	PANELSTOMME	Page 41	
26	3217 6513 01	1	RESTRICTION	STRYPNING		D=0,6; 9/16-18 UN
27	3217 8946 10	1	LEVER	SPAK		
28	3217 9881 00	1	DRAINAGE BLOCK	DRÄNERINGSBLOCK		
29	3217 9881 10	1	BRANCH BLOCK	FÖRGREN.BLOCK		
30	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00

B0039112

CONTROL PANEL / MANÖVERPANEL 3217 8835 56

(Sheet 2 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
38	3217 8966 20	1	PIPE	RÖR		
40	3217 8951 00	1	PLATE	SKYLT		
42	3217 8951 20	1	PLATE	SKYLT		
47	3217 8951 13	1	PLATE	SKYLT		
50	3217 8951 10	1	PLATE	SKYLT		
60	–	1	HOSE SET	SLANGSATS	Page 43	
62	–	1	ATTACHM. PLATE	FÄSTPLÅT		
70	3217 8014 01	1	SEQUENCE VALVE	SEKVENSVENTIL	Page 45	
71	0823 0050 17	1	CHECK VALVE	BACKVENTIL		A G 3/8 0,5 12 58 24 -
72	3125 9005 02	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 47	
73	3217 8951 05	1	PLATE	SKYLT		
74	0686 9250 60	4	CAP	HUV		UNF 9/16-18 PEHD
75	0686 9250 61	4	CAP	HUV		UNF 3/4-16 PEHD
76	0686 9250 62	3	CAP	HUV		UNF 7/8-14 PEHD
77	0686 9250 63	1	CAP	HUV		UN 1 1/6-12 PEHD
83	3217 8870 41	1	ATTACHMENT	FÄSTE	Page 49	
84	3217 8969 40	1	REAMER SET	GROVHÅLSATS	Page 51	

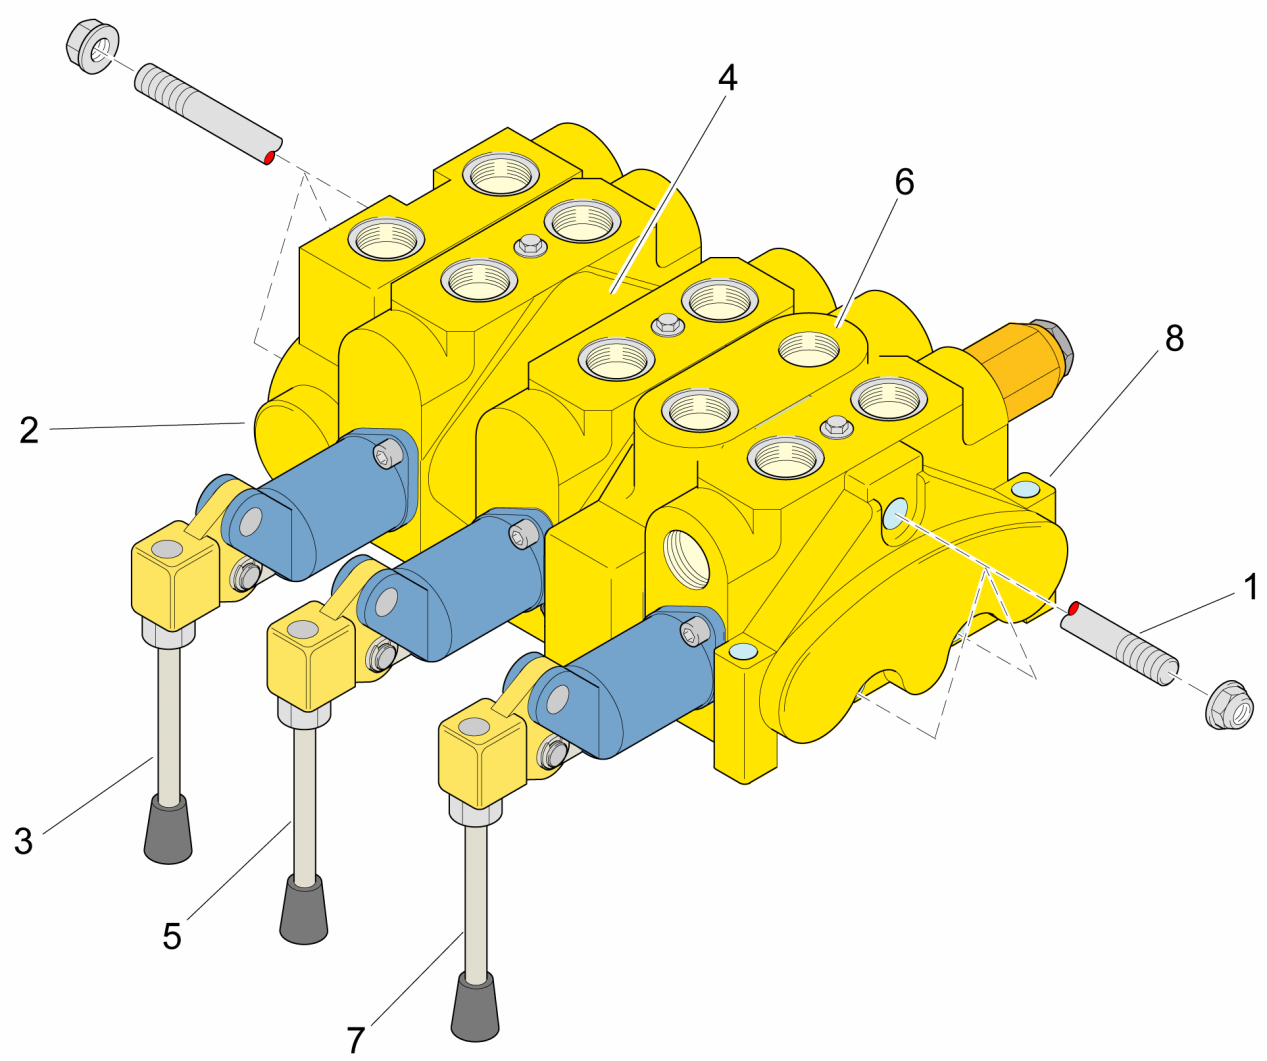

1250 0051 95

B0004663

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 9834 09	7	SEAL KIT	TÄTNINGSSATS		INTERSECTION SEAL KIT
1	3217 9834 01	1	PULL ROD SET	DRAGSTÅNGSSATS		
2	3217 9834 05	1	INLET SECTION	INLOPPSSEKTION	Page 19	
3	3217 9834 10	1	CONTROL SET	MANÖVERSATS	Page 21	FEED
4	3217 9834 30	1	INTERMED. PART	MELLANDEL	Page 25	
5	3217 9834 35	1	CONTROL SET	MANÖVERSATS	Page 27	DRILLING
6	3217 9834 40	1	INTERMED. PART	MELLANDEL		
7	3217 9834 45	1	CONTROL SET	MANÖVERSATS	Page 29	ROTATION
8	3217 9834 51	1	COVER	LOCK	Page 31	

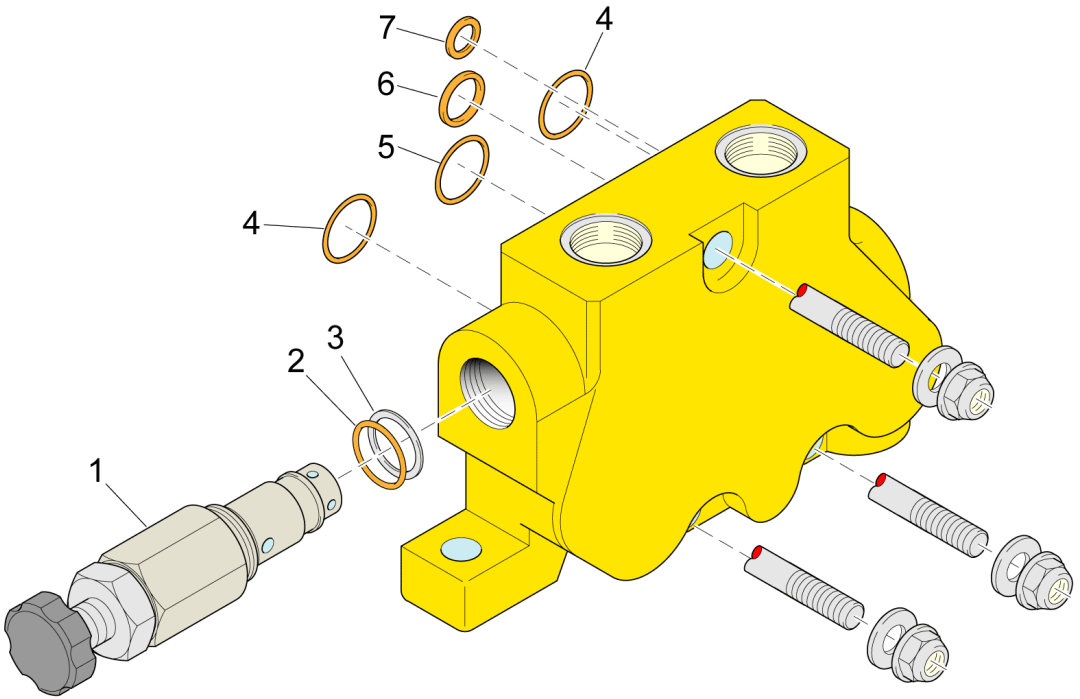


1250 0051 97

B0004664

INLET SECTION / INLOPPSSEKTION 3217 9834 05


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 9834 07	1	SEAL KIT	TÄTNINGSSATS		INCL. 4-7
-	3217 9834 09	1	SEAL KIT	TÄTNINGSSATS		INCL. 2,3
1	3217 9834 06	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
2	0663 9076 01	1	O-RING	O-RING		19,18X 2,46 90 SHORE
3	0663 9032 01	1	O-RING	O-RING		15,6 X 1,78 90 SHORE
4	9125 6889 00	2	O-RING	O-RING		21,95X 1,78 90 SHORE
5	3217 9038 09	1	O-RING	O-RING		25,12X 1,78 90 SHORE
6	0663 2104 64	1	O-RING	O-RING		16,1 X 1,6 90 SHORE
7	–	1	SHIM	SHIMS		NOT SOLD SEPARATLY

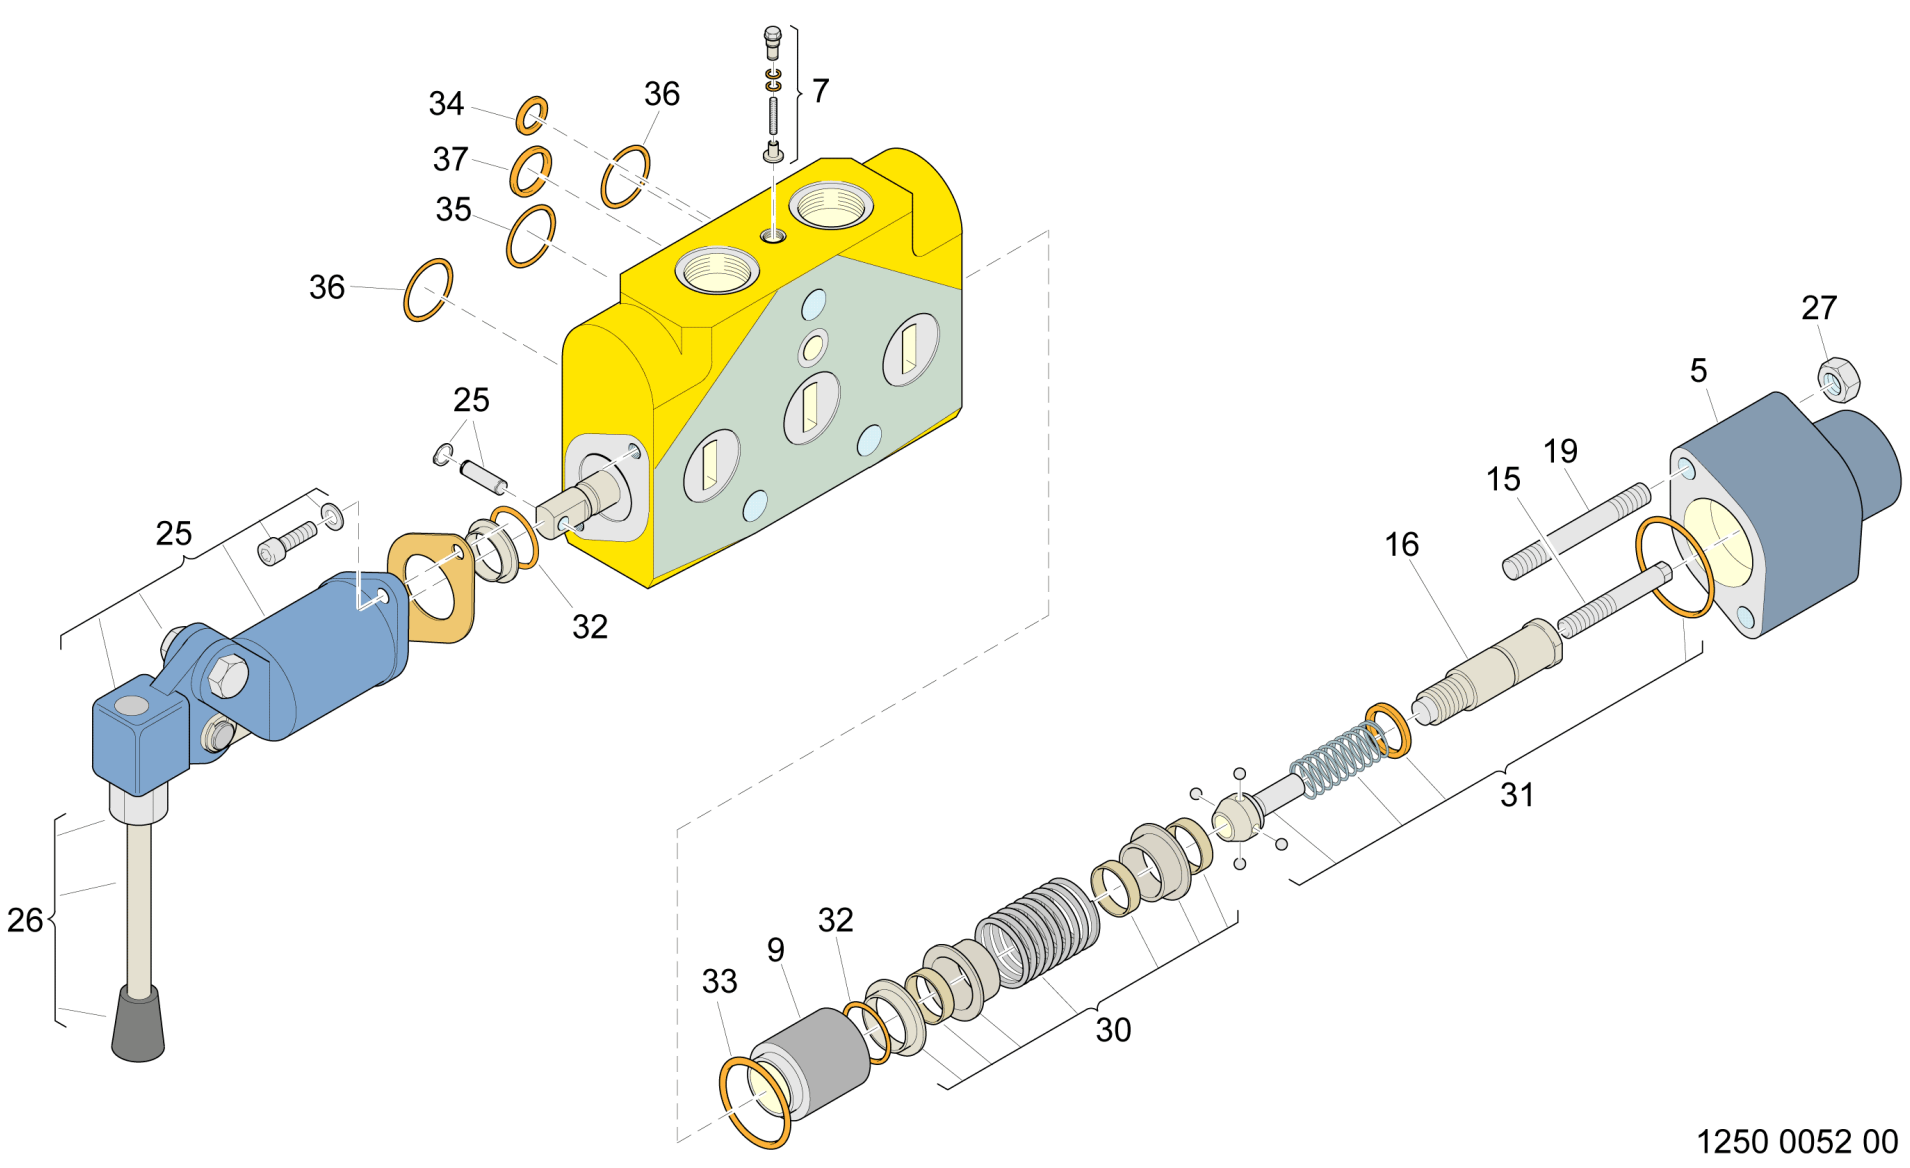

B0004667

CONTROL SET / MANÖVERSATS 3217 9834 10

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 9834 12	1	SEAL KIT	TÄTNINGSSATS		INCL. 32,33
-	3217 9834 09	2	SEAL KIT	TÄTNINGSSATS		INCL. 34-37
3	3217 9834 11	1	SEAL HOLDER	TÄTNINGSHÅLLARE		
5	3217 9834 13	1	COVER	LOCK		
7	3217 9834 14	1	CHECK VALVE	BACKVENTIL		
9	3217 9834 15	1	HOLDER	HÅLLARE		
15	3217 9834 16	1	SCREW	SKRUV		
16	3217 9834 17	1	SCREW	SKRUV		
19	3217 9834 18	1	STUD	PINNBULT		
25	3217 9834 23	1	LEVER HOLDER	SPAKLOCK	Page 23	
26	3217 9834 22	1	LEVER SET	SPAKSATS		
27	3217 9834 19	1	NUT	MUTTER		
30	3217 9834 20	1	CENTERING SET	CENTRERINGSSATS		
31	3217 9834 21	1	CATCH	SPÄRR		
32	0663 9096 00	2	O-RING	O-RING		15,54X 2,62 70 SHORE
33	0663 9112 00	1	O-RING	O-RING		26,64X 2,62 70 SHORE
34	–	1	SHIM	SHIMS		
35	3217 9038 09	1	O-RING	O-RING		25,12X 1,78 90 SHORE
36	9125 6889 00	2	O-RING	O-RING		21,95X 1,78 90 SHORE
37	0663 2104 64	1	O-RING	O-RING		16,1 X 1,6 90 SHORE

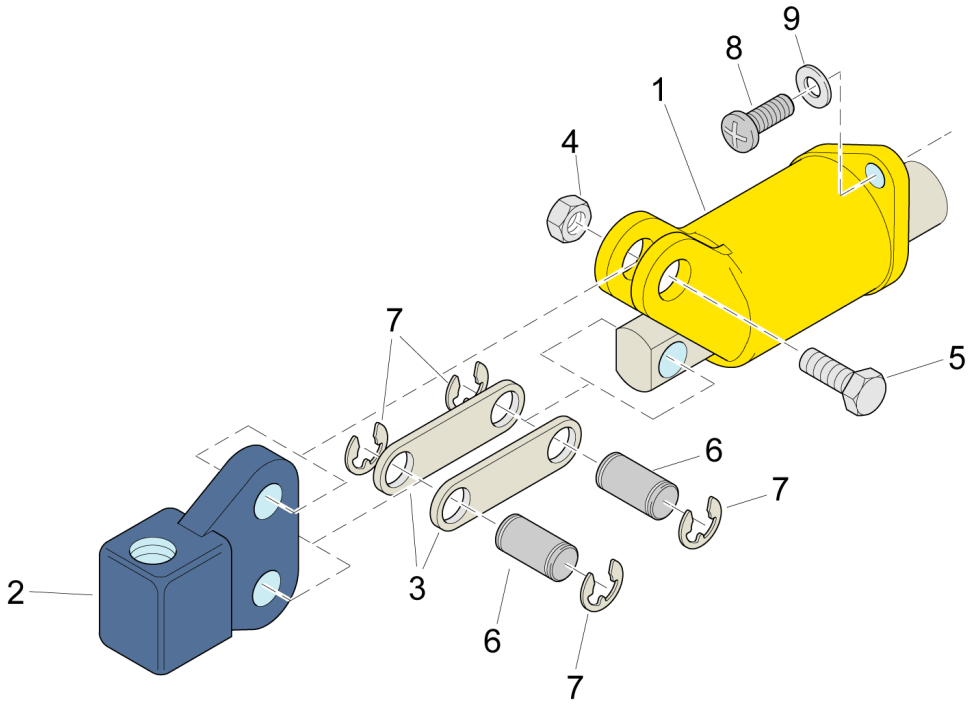


1250 0177 21

LEVER HOLDER / SPAKLOCK

3217 9834 23

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	COVER	KÅPA		
2	–	1	HOLDER	HÅLLARE		
3	3217 9834 83	2	LINK	LÄNK		
4	3217 9834 84	1	LOCK NUT	LÅSMUTTER		
5	3217 9834 85	1	SCREW	SKRUV		
6	3217 9834 24	2	PIN	PINNE		
7	3217 9834 25	4	CIRCLIP	SPÅRRING		
8	3217 9834 86	2	SCREW	SKRUV		
9	3217 9834 77	2	LOCK WASHER	LÅSBRICKA		

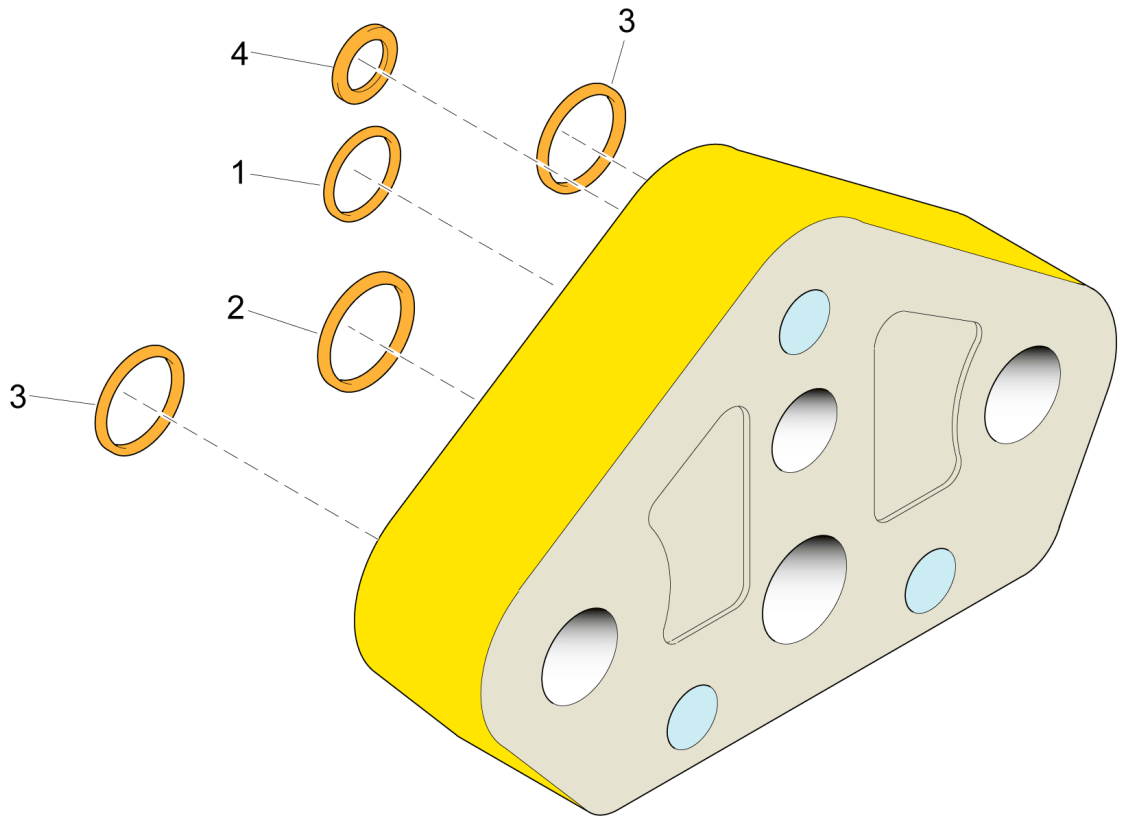


1250 0051 99

B0004666


INTERMED. PART / MELLANDEL 3217 9834 30

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 9834 09	2	SEAL KIT	TÄTNINGSSATS		
1	0663 2104 64	1	O-RING	O-RING		16,1 X 1,6 90 SHORE
2	3217 9038 09	1	O-RING	O-RING		25,12X 1,78 90 SHORE
3	9125 6889 00	2	O-RING	O-RING		21,95X 1,78 90 SHORE
4	–	1	SHIM	SHIMS		

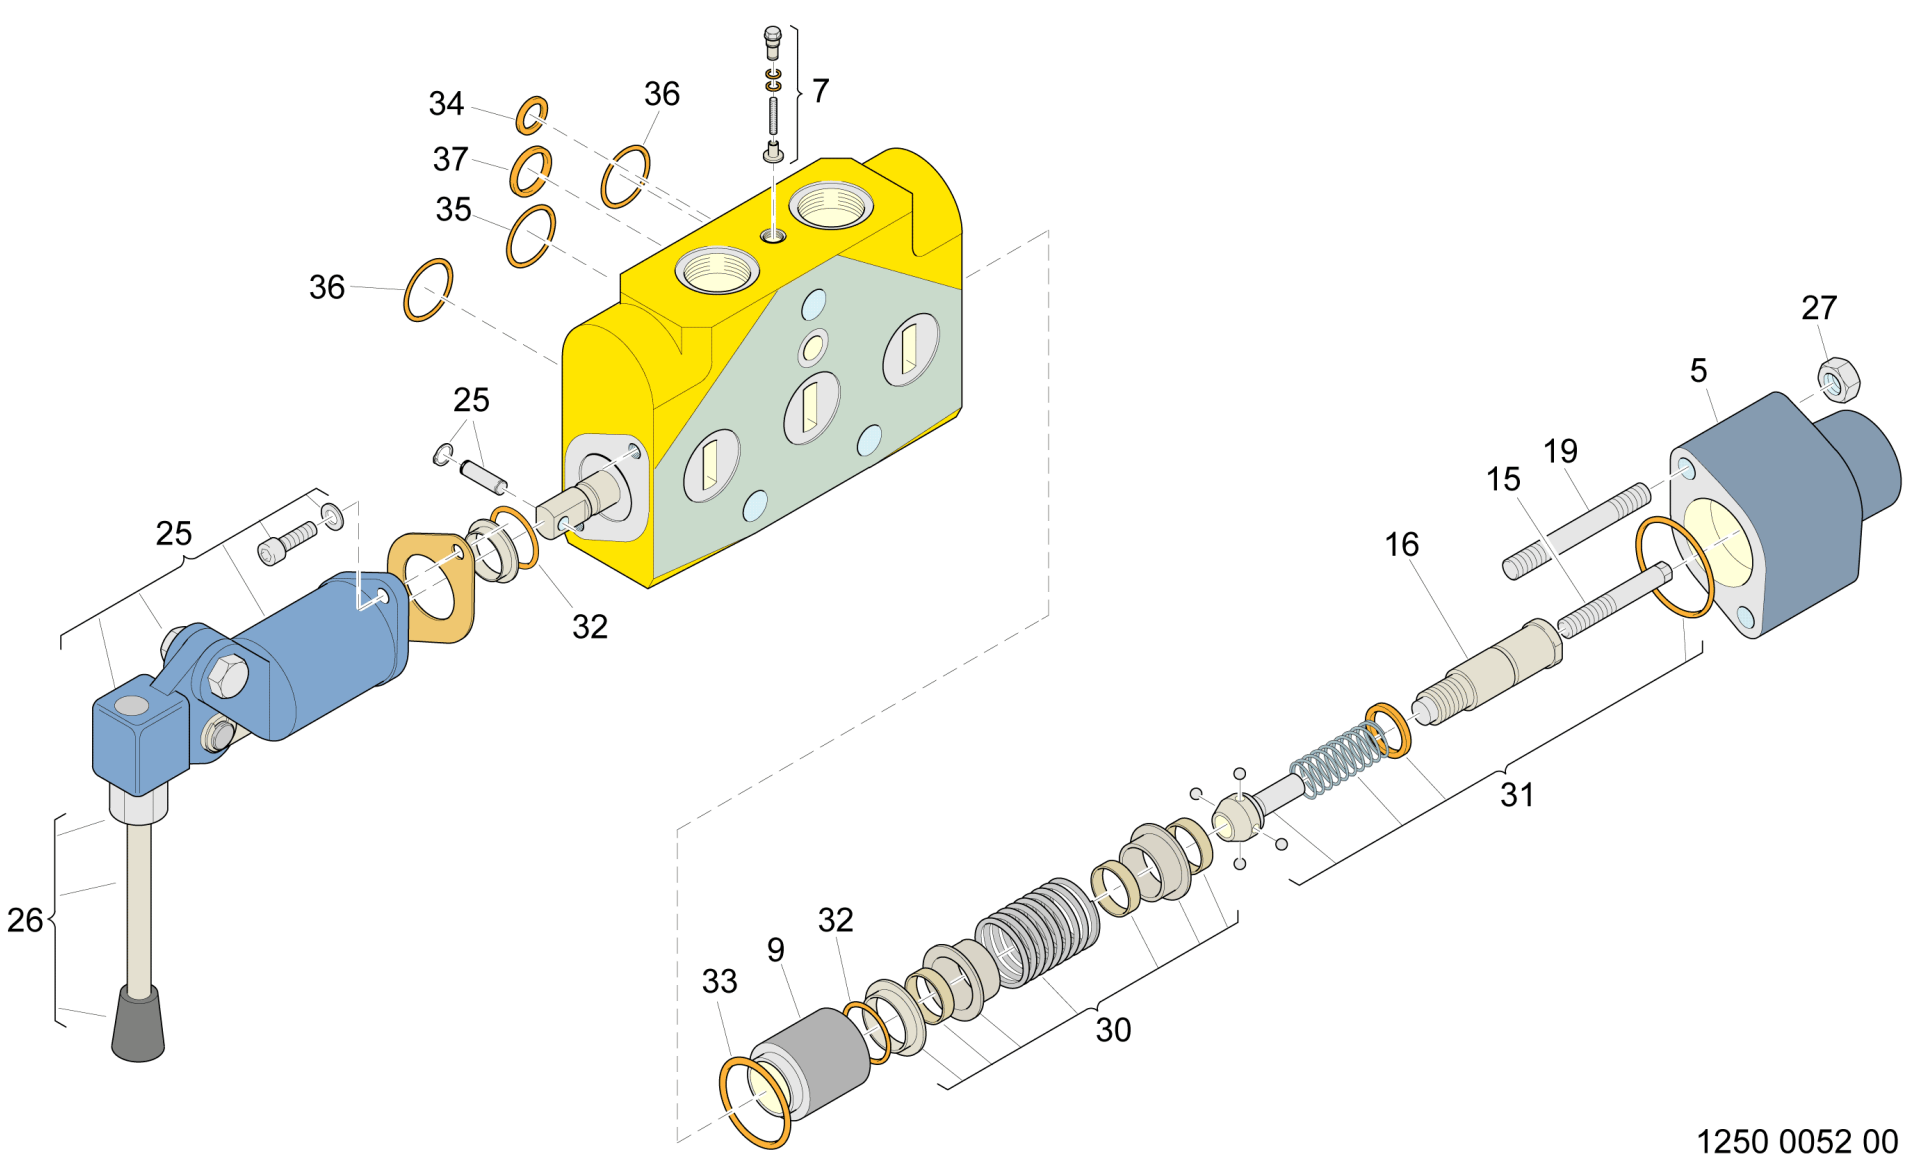

B0004667


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 9834 09	2	SEAL KIT	TÄTNINGSSATS		INCL. 34-37
-	3217 9834 12	1	SEAL KIT	TÄTNINGSSATS		INCL. 32,33
3	3217 9834 11	1	SEAL HOLDER	TÄTNINGSHÅLLARE		
5	3217 9834 13	1	COVER	LOCK		
7	3217 9834 14	1	CHECK VALVE	BACKVENTIL		
9	3217 9834 15	1	HOLDER	HÅLLARE		
15	3217 9834 16	1	SCREW	SKRUV		
16	3217 9834 17	1	SCREW	SKRUV		
19	3217 9834 18	1	STUD	PINNBULT		
25	3217 9834 23	1	LEVER HOLDER	SPAKLOCK	Page 23	
26	3217 9834 36	1	LEVER SET	SPAKSATS		
27	3217 9834 19	1	NUT	MUTTER		
30	3217 9834 20	1	CENTERING SET	CENTRERINGSSATS		
31	3217 9834 21	1	CATCH	SPÄRR		
32	0663 9096 00	2	O-RING	O-RING		15,54X 2,62 70 SHORE
33	0663 9112 00	1	O-RING	O-RING		26,64X 2,62 70 SHORE
34	–	1	SHIM	SHIMS		
35	3217 9038 09	1	O-RING	O-RING		25,12X 1,78 90 SHORE
36	9125 6889 00	2	O-RING	O-RING		21,95X 1,78 90 SHORE
37	0663 2104 64	1	O-RING	O-RING		16,1 X 1,6 90 SHORE

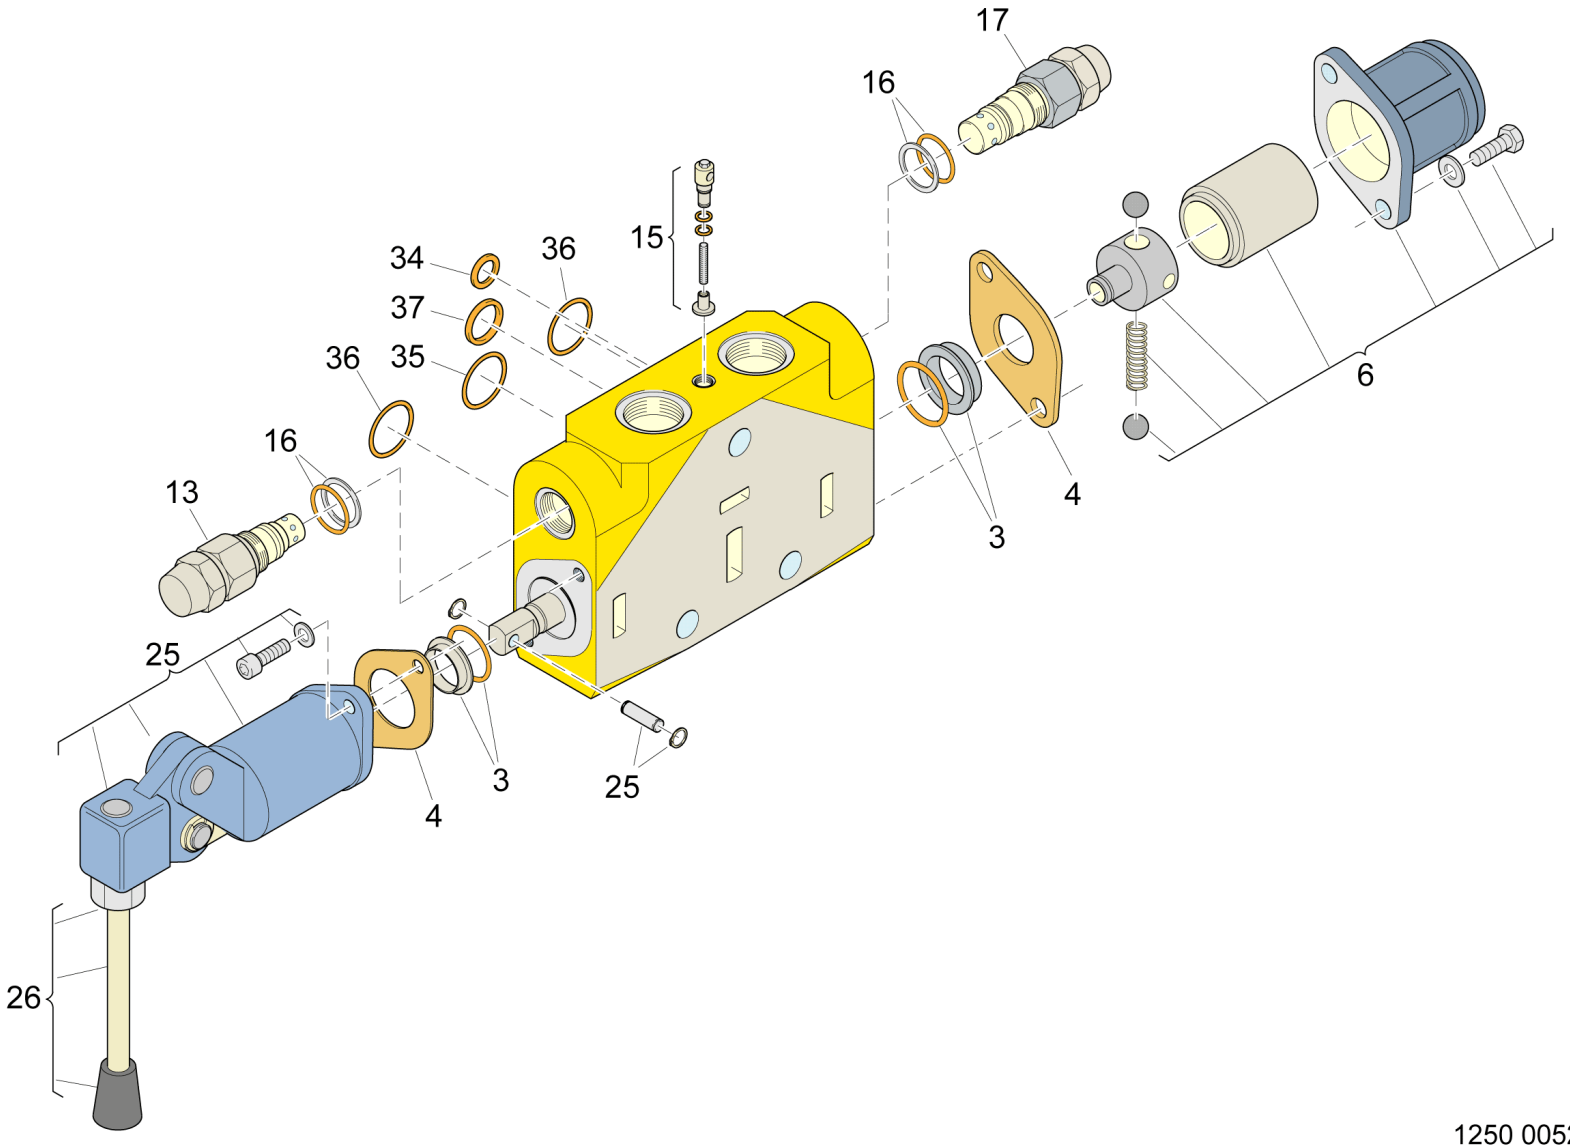

1250 0052 02

B0004669


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3217 9834 09	2	SEAL KIT	TÄTNINGSSATS		INCL. 34-37
3	3217 9834 46	1	SEAL KIT	TÄTNINGSSATS		
4	3217 9834 11	1	SEAL HOLDER	TÄTNINGSHÅLLARE		
6	3217 9834 47	1	CATCH	SPÄRR		
13	3217 9834 48	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
15	3217 9834 14	1	CHECK VALVE	BACKVENTIL		
16	3217 9834 07	2	SEAL KIT	TÄTNINGSSATS		
17	3217 9834 49	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
25	3217 9834 23	1	LEVER HOLDER	SPAKLOCK	Page 23	
26	3217 9834 22	1	LEVER SET	SPAKSATS		
34	–	1	SHIM	SHIMS		
35	3217 9038 09	1	O-RING	O-RING		25,12X 1,78 90 SHORE
36	9125 6889 00	2	O-RING	O-RING		21,95X 1,78 90 SHORE
37	0663 2104 64	1	O-RING	O-RING		16,1 X 1,6 90 SHORE

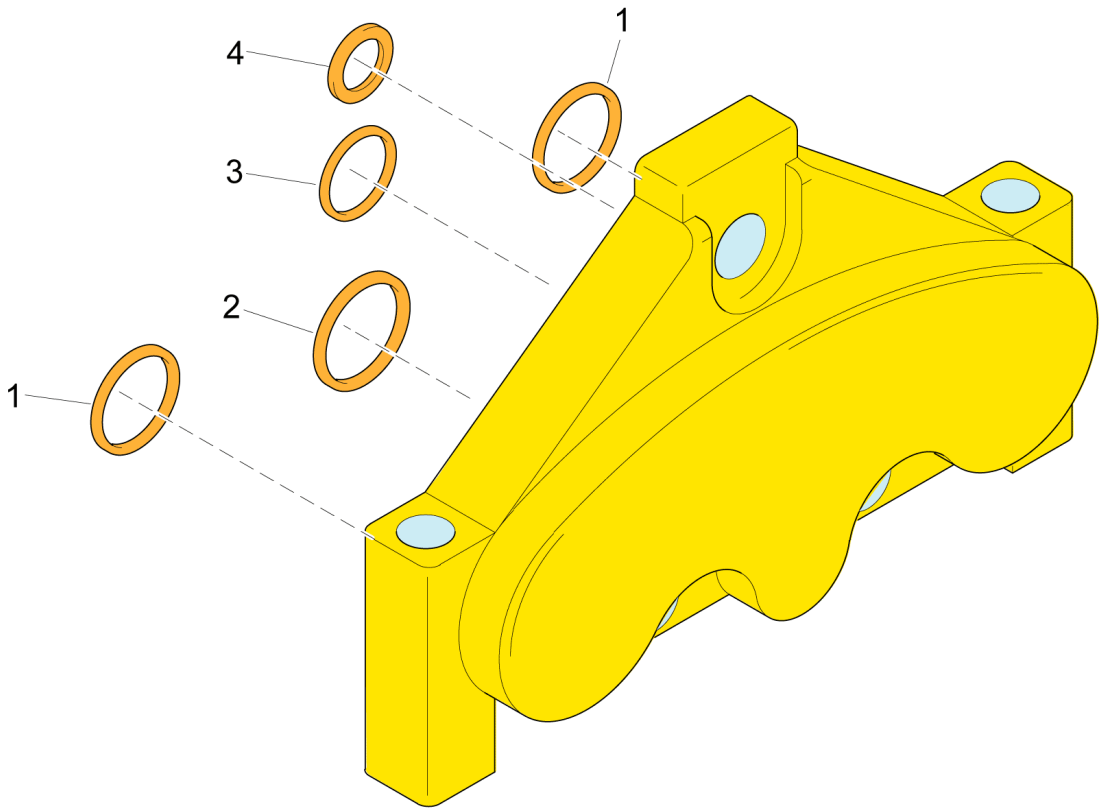

1250 0052 04

B0004670


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 9834 09	1	SEAL KIT	TÄTNINGSSATS		INCL. 1-4
1	9125 6889 00	2	O-RING	O-RING		21,95X 1,78 90 SHORE
2	3217 9038 09	1	O-RING	O-RING		25,12X 1,78 90 SHORE
3	0663 2104 64	1	O-RING	O-RING		16,1 X 1,6 90 SHORE
4	–	1	SHIM	SHIMS		

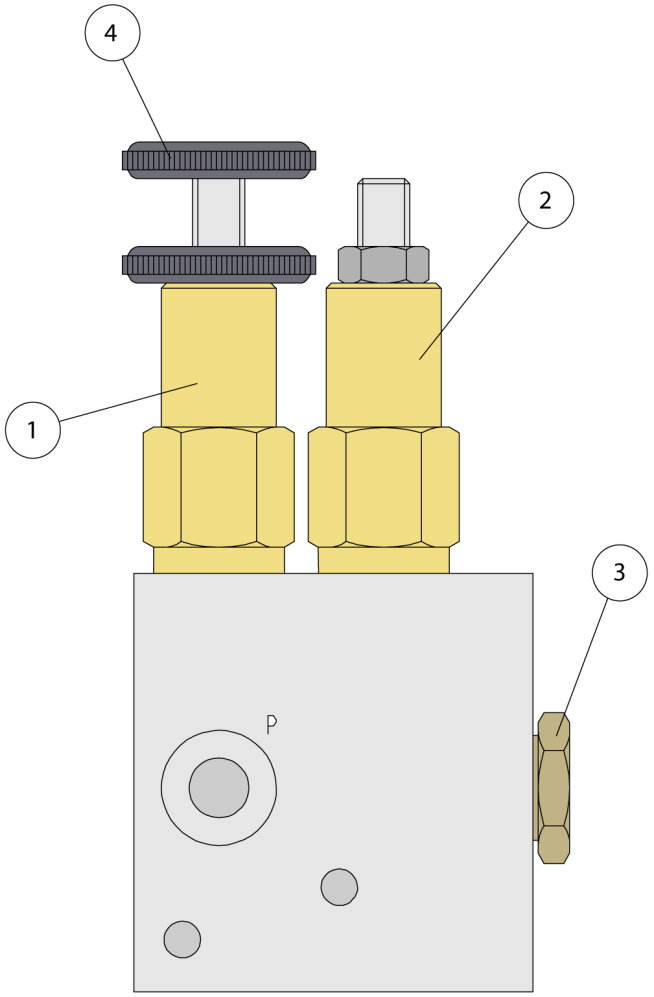

3217 8968 00 Ed 01

B0039960

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 8945 12	2	SEAL KIT	TÄTNINGSSATS		FOR REF NO. 1 AND 2
-	3217 8945 13	1	SEAL KIT	TÄTNINGSSATS		FOR REF NO. 3
1	3217 8945 10	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
2	3217 8945 00	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
3	3217 8945 15	1	PILOT OP.CHECKV	PILOTST.BACKVEN		
4	3217 8945 14	1	VALVE	VENTIL		

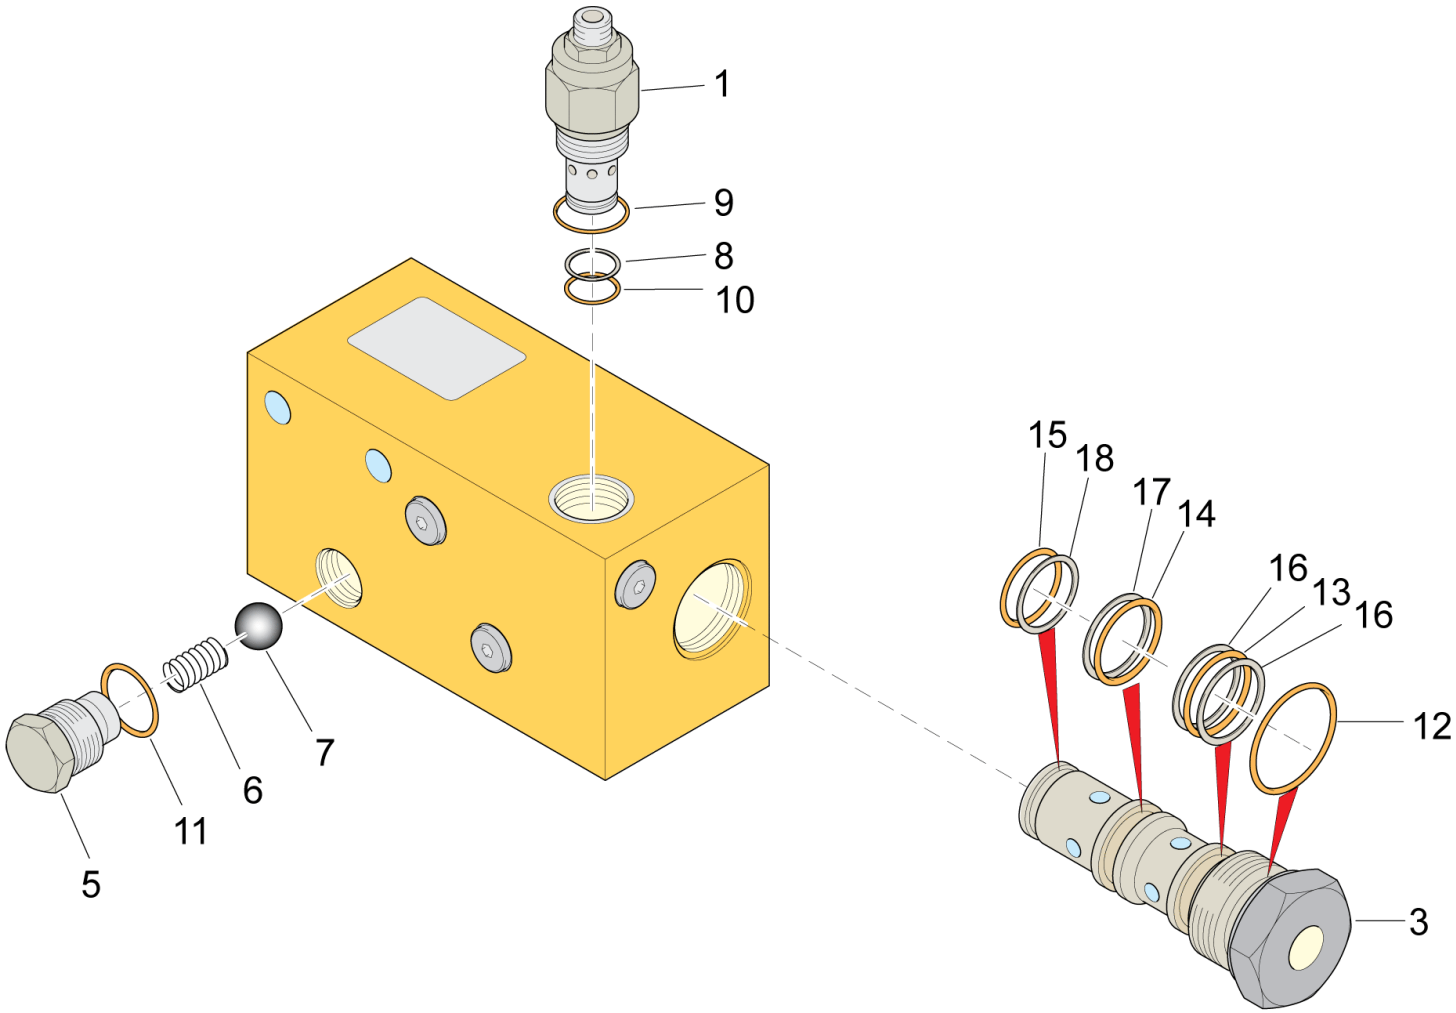


1250 0247 47

B0050302

VALVE BLOCK / VENTILBLOCK 3217 8937 01

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 3024 28	1	CHECK VALVE	BACKVENTIL		
	3217 8937 11	1	SEAL KIT	TÄTNINGSSATS		
	9106 1492 04	1	SEAL KIT	TÄTNINGSSATS		FOR 9106 1492 01
1	3217 8937 13	1	PRESS.REL.CART.	TRYCKBEG.PATRON		
3	9111 3770 04	1	PRESS.REGULATOR	TRYCKREGULATOR		
11	3128 3043 11	1	O-RING	O-RING		11/16'X7/8'X3/32'

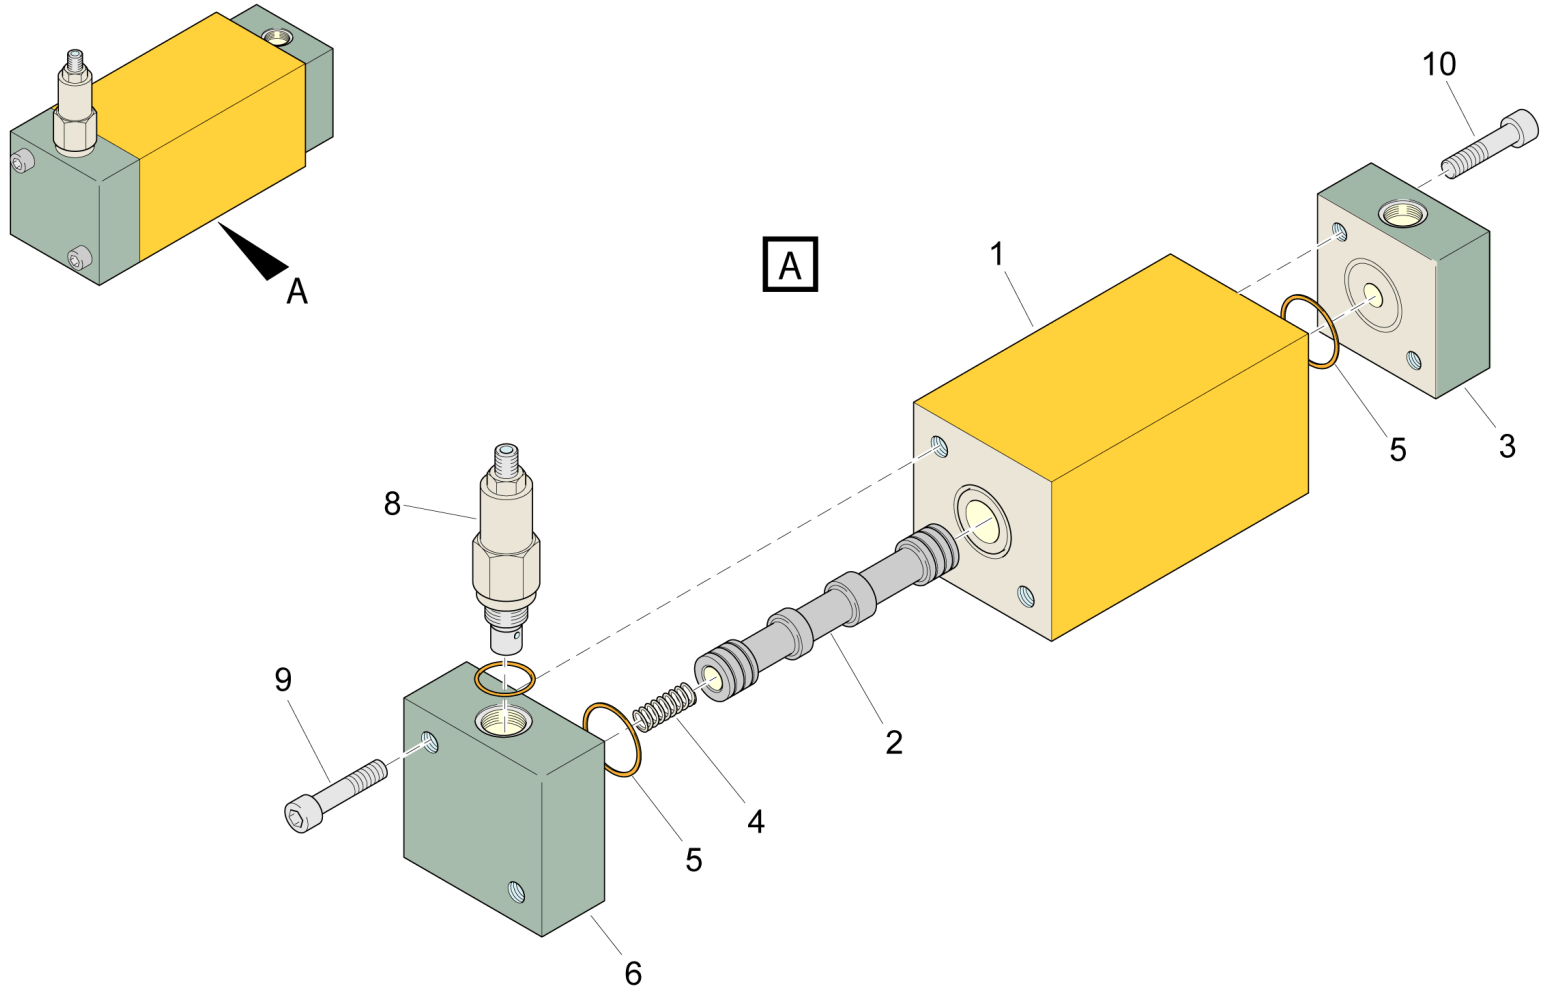


1250 0177 13

B0038072

VALVE UNIT / VENTILENHET 3125 0906 91

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	VALVE HOUSING	VENTILHUS		
2	3125 0906 00	1	VALVE COIL	VENTILSPOLE		
3	3176 8060 00	1	END PIECE	GAVEL		
4	3125 0907 00	1	COMPRESS.SPRING	TRYCKFJÄDER		
5	0663 2128 00	2	O-RING	O-RING		26,2 X 3 70 SHORE
6	3125 5623 10	1	VALVE COVER	VENTILGAVEL		
8	3217 8945 00	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
9	0211 1252 03	2	SCREW	SKRUV		MC6S M 6 X 40 - 8.8 FZB
10	0211 1251 03	2	SCREW	SKRUV		MC6S M 6 X 35 - 8.8 FZB

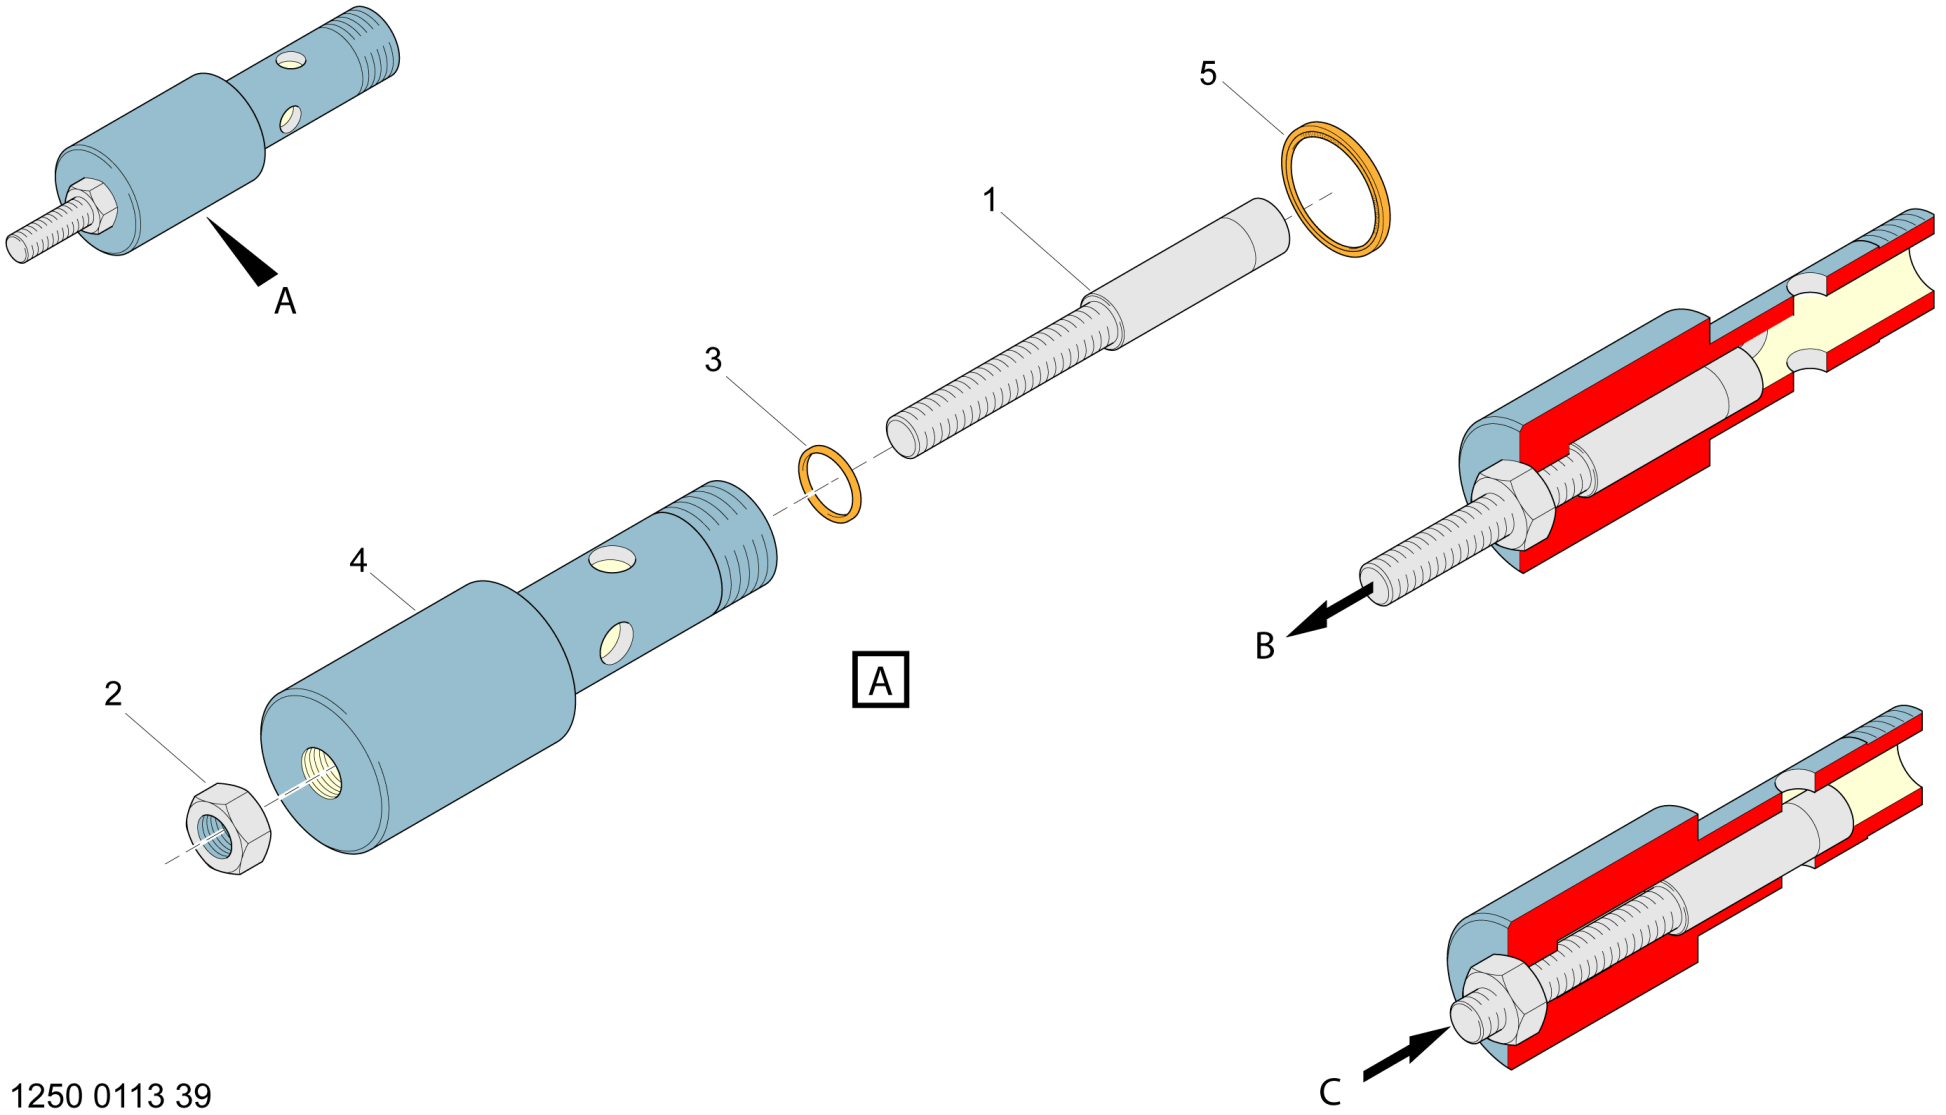


1250 0113 39

B0012647

THROTTLE VALVE / STRYPVENTIL 3217 8840 05

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 8840 08	1	RESTRICT. SCREW	STRYPSKRUV		
2	0266 2110 00	1	NUT	MUTTER		M 8 - 8 FZB
3	0663 2118 01	1	O-RING	O-RING		11,3 X 2,4 90 SHORE
4	3217 8840 06	1	SCREW	HÅLSKRUV		
5	0653 1124 00	2	GASKET	PACKNING		21 / 26 X 1,5 -11 5013 12

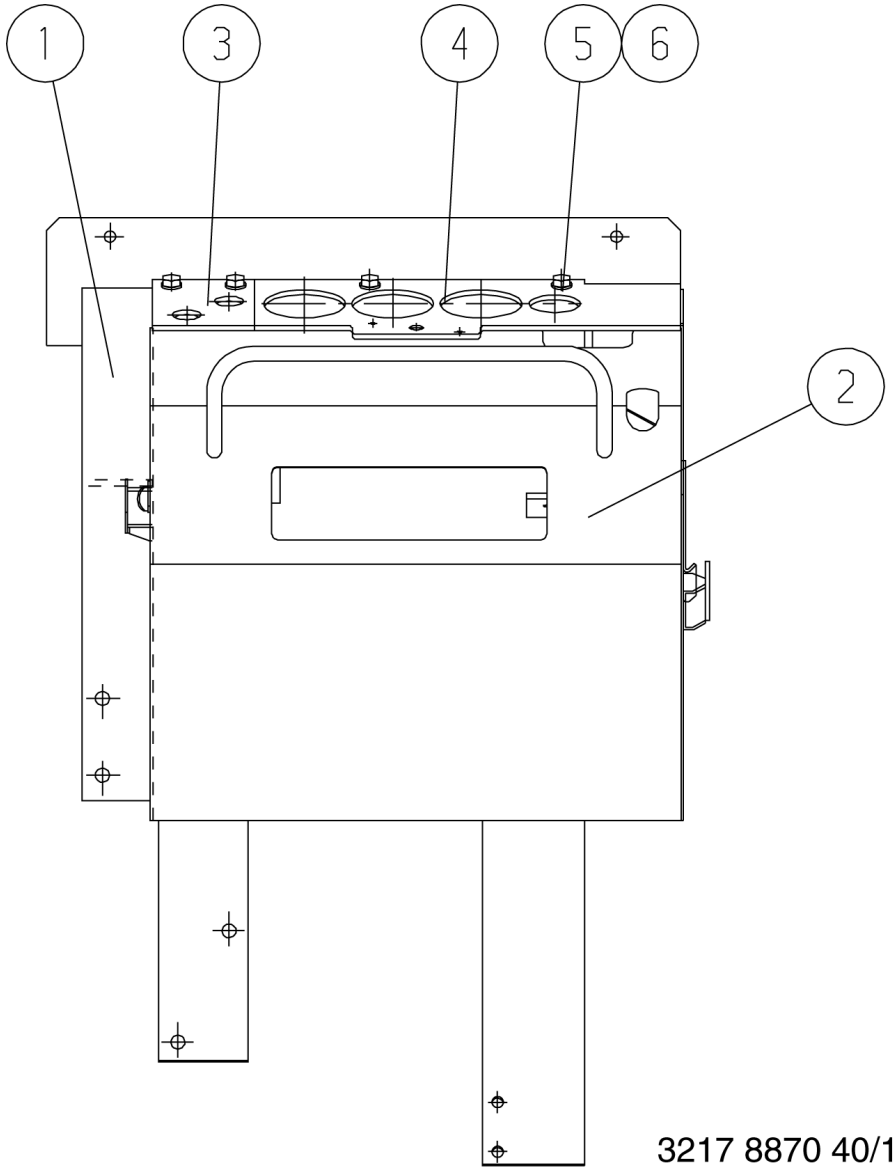


3217 8870 40/1 Ed04

B0011166

PANEL FRAME / PANELSTOMME 3217 8870 40

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	FRAME WORK	STOMME		
2	3217 8870 37	1	HATCH	LUCKA		
3	–	1	PANEL PLATE	PANELPLÅT		
4	–	1	GAUGE BOARD	MANOMETERTAVLA		
5	0147 1321 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 14 - 8.8 FZB
6	0301 2335 00	4	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB


HOSE SET / SLANGSATS

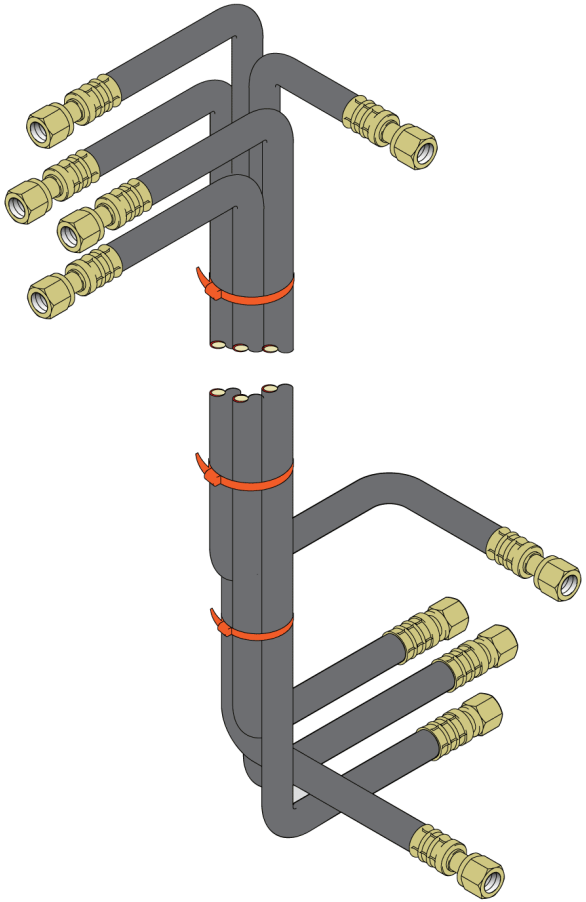

B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
AJ1	0574 0252 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 250 R2AT
AJ3	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
F12	0574 1260 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 650 R2AT
F13	0574 1254 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 350 R2AT
F14	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
F16	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
G10	3217 9578 10	1	HOSE ASSEMBLY	SLANGLEDNING		BTR 105 ST, L= 600, 3/16'
G11	3217 9578 10	1	HOSE ASSEMBLY	SLANGLEDNING		BTR 105 ST, L= 600, 3/16'
G12	3217 9578 07	1	HOSE ASSEMBLY	SLANGLEDNING		BTR 105 ST, L= 400, 3/16'
G13	0574 0065 96	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 275 R2AT
P30	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
P31	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
T78	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
T80	3176 7457 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 350 R2AT
T81	3176 7457 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 350 R2AT
T82	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
T83	0574 0064 54	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 550 R2AT
XP1	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
AR11	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
AR13	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
XF28	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT
XF70	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
XF72	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT

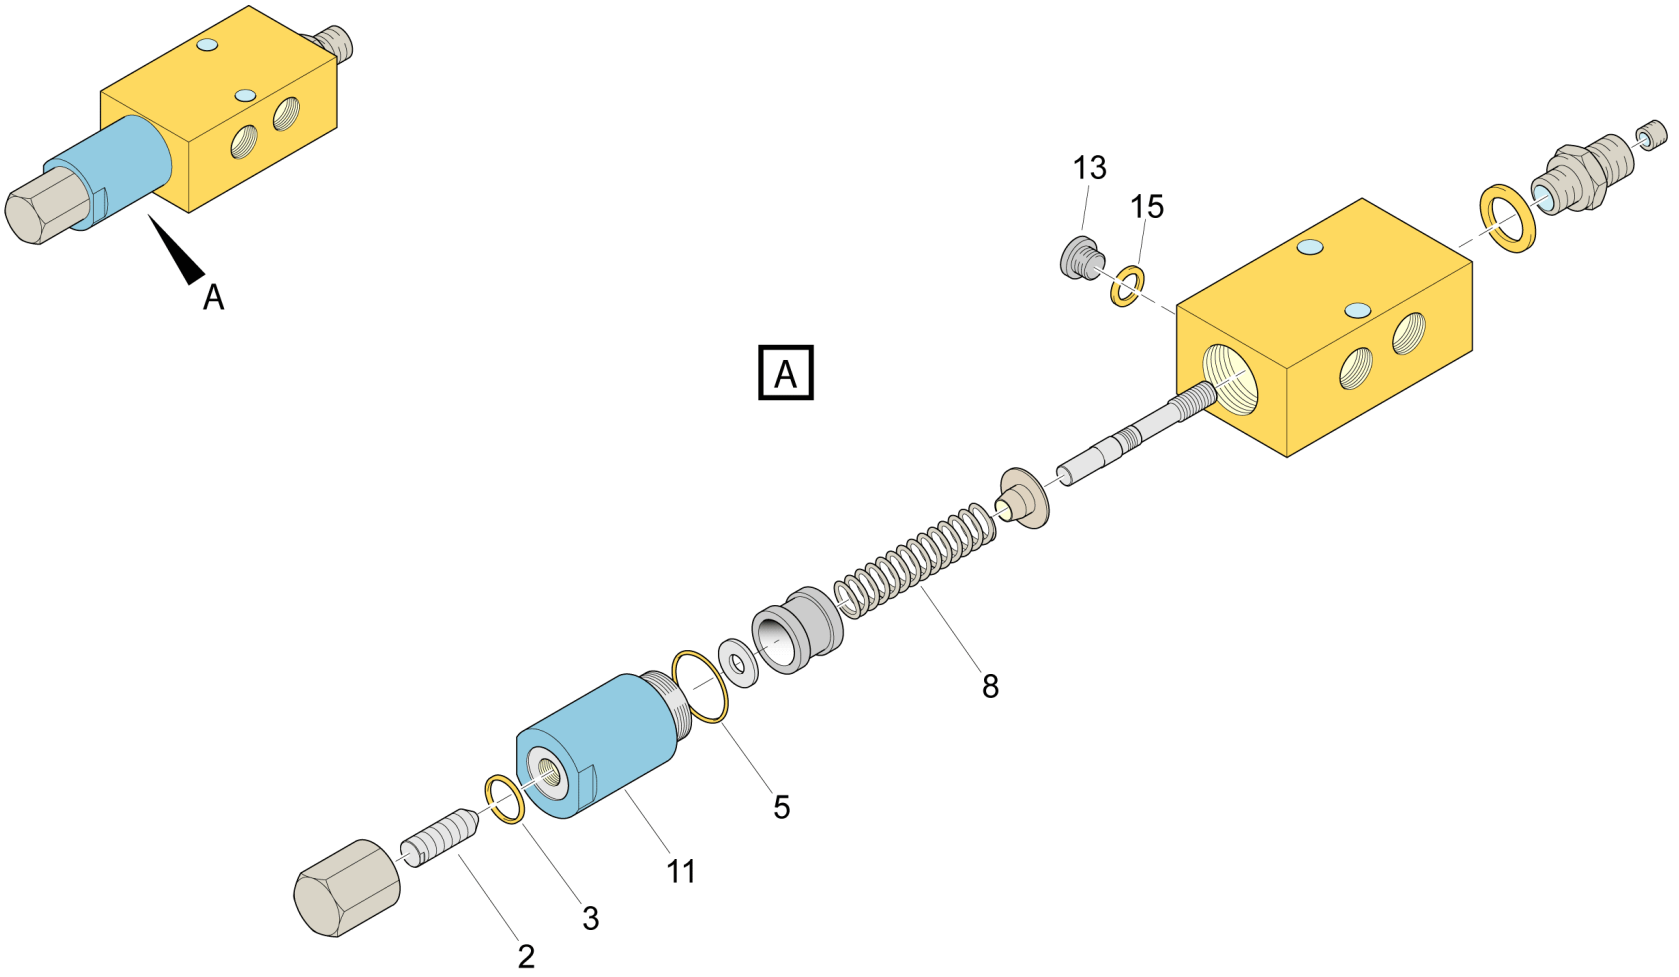


1250 0177 23

B0000126


SEQUENCE VALVE / SEKVENSVENTIL 3217 8014 01


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2	0194 1326 00	1	SET SCREW	STOPPSKRUV		M 8 X 30 S6SS DIN 914
3	0663 3117 00	1	O-RING	O-RING		10,3 X 2,4 70 SHORE
5	0663 9822 00	1	O-RING	O-RING		18,72X 2,62 70 SHORE
8	9128 9452 00	1	SPRING	FJÄDER		46-150 BAR
11	9120 0690 51	1	SETTING SCREW	STÄLLSKRUV		
13	0686 6442 03	1	PLUG	PROPP		G 1/4 A B
15	0661 1020 00	1	SEAL WASHER	TÄTNINGSBRICKA		13,7 / 20,6 X 2,1 - FZ ST TREDO 1/4

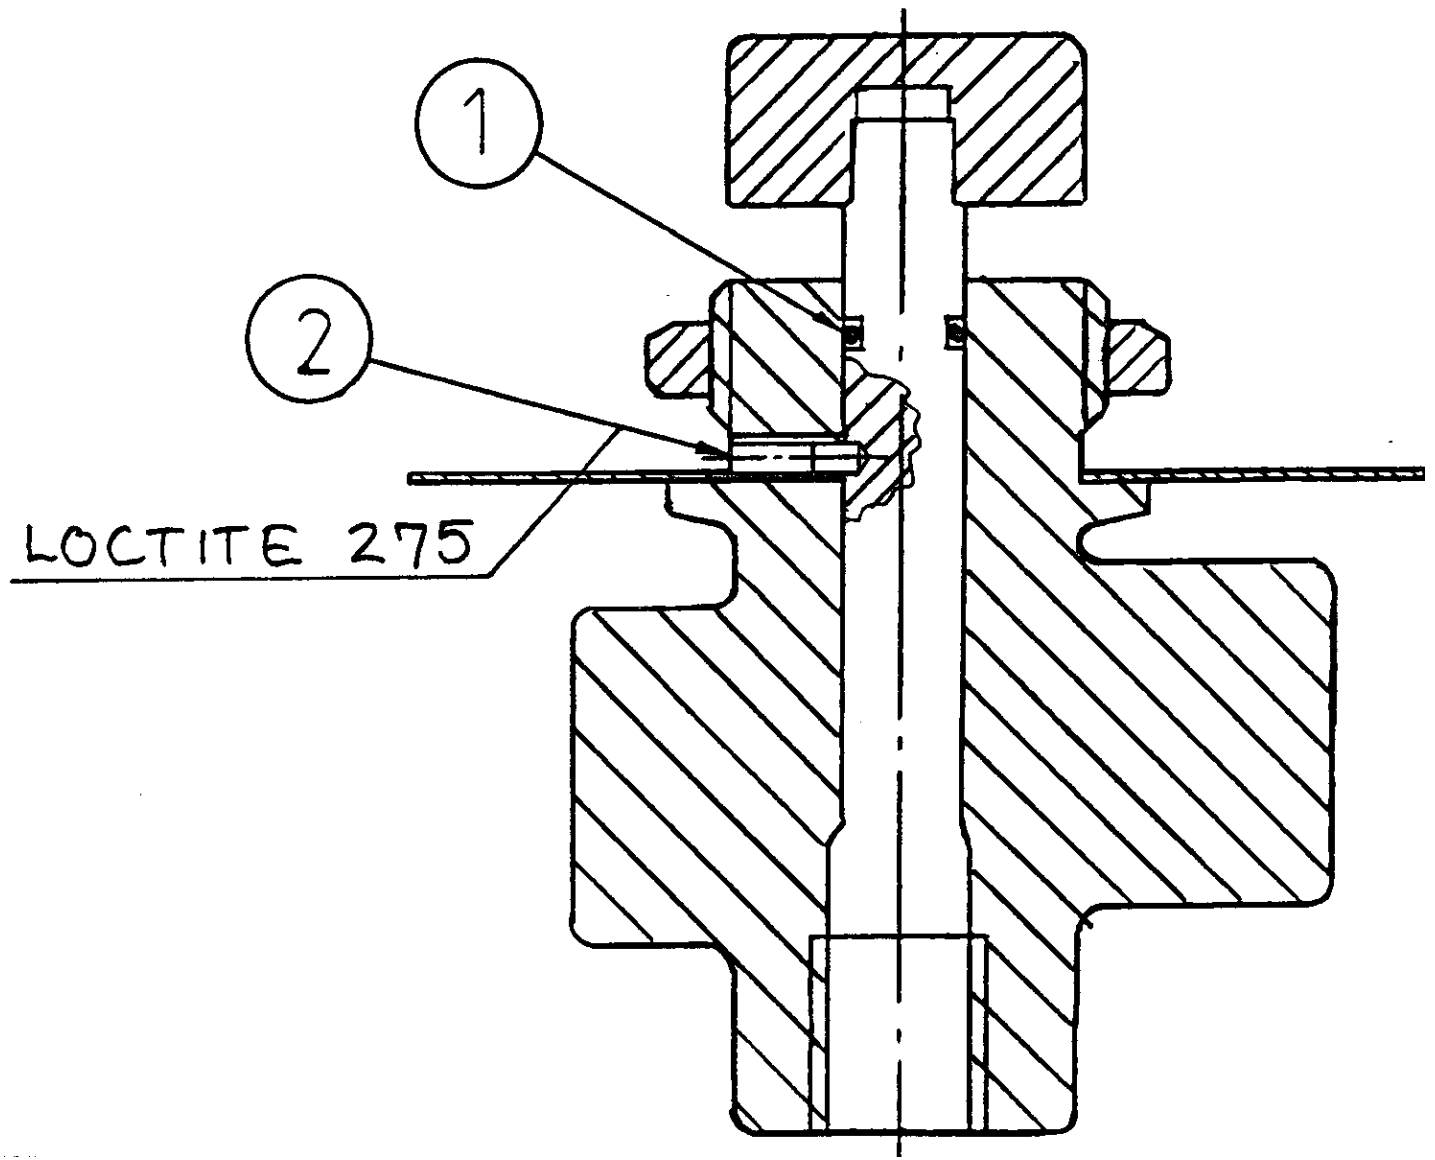

B0002100

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0663 2108 46	1	O-RING	O-RING		6 X 1,5
2	0192 1170 00	1	SET SCREW	STOPPSKRUV		M 4 X 10 T6SS DIN 915

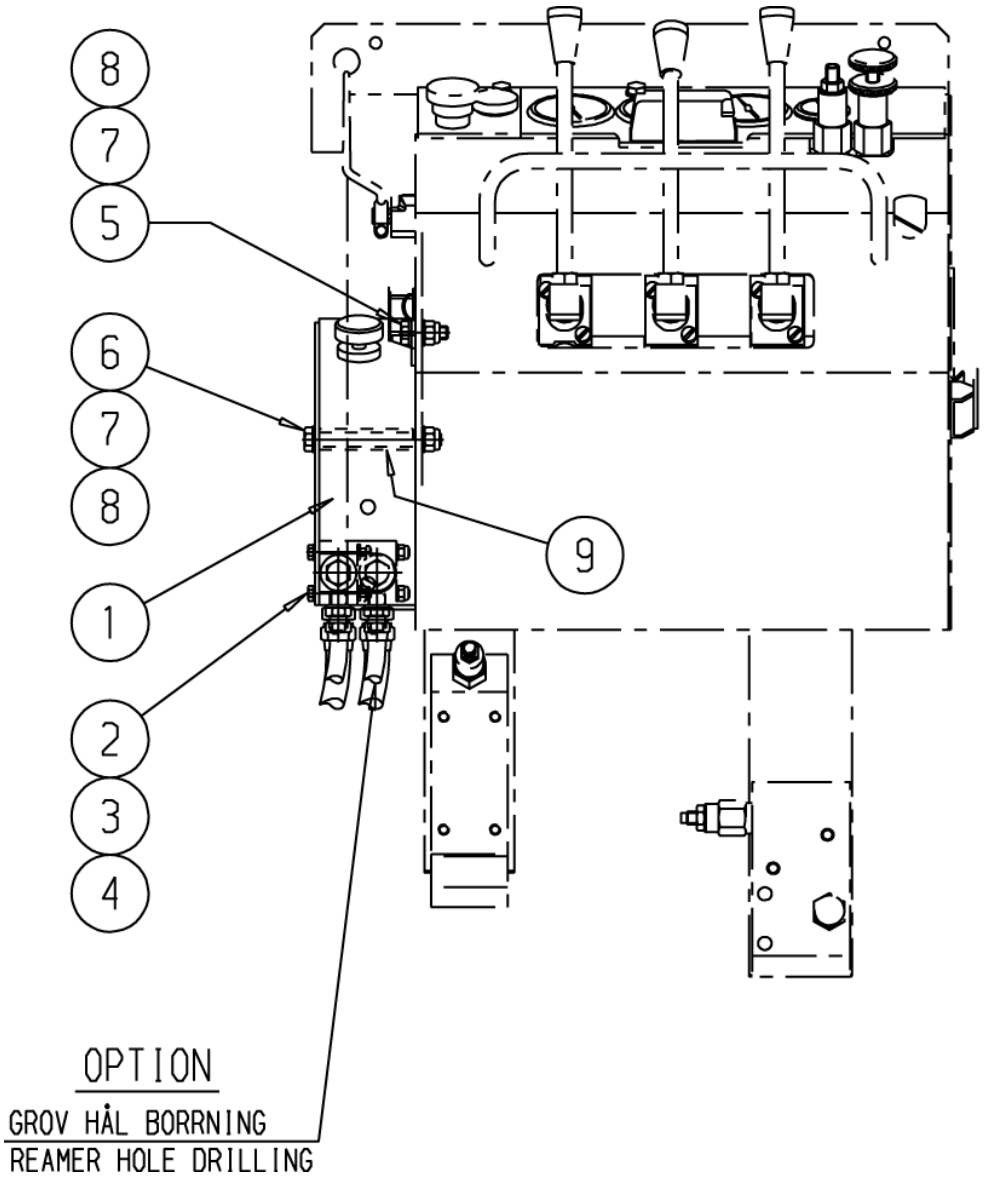

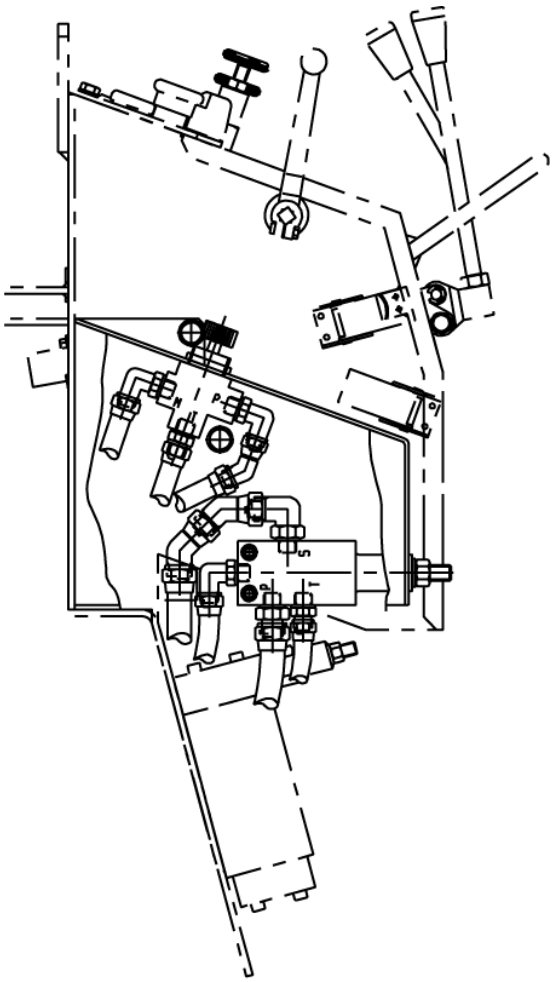

3217 8870 41 Ed03

B0013697

ATTACHMENT / FÄSTE

3217 8870 41

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 8870 42	1	ATTACHMENT	FÄSTE		
2	0147 1253 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 45 - 8.8 FZB
3	0291 1128 15	2	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
4	0301 2321 00	4	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
5	0147 1363 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 30 - 8.8 FZB
6	0147 1356 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 10 - 8.8 FZB
7	0291 1128 20	2	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
8	0301 2344 00	4	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
9	9106 8870 45	1	SPACER	DISTANS		

REAMER SET / GROVHÅLSATS


3217 8969 40

X0000000

REAMER SET / GROVHÅLSATS

3217 8969 40


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 8969 21	1	HYDRAULIC SET	HYDRAULSATS	Page 53	CUT HOLE
3	–	1	HOSE SET	SLANGSATS	Page 61	CUT HOLE

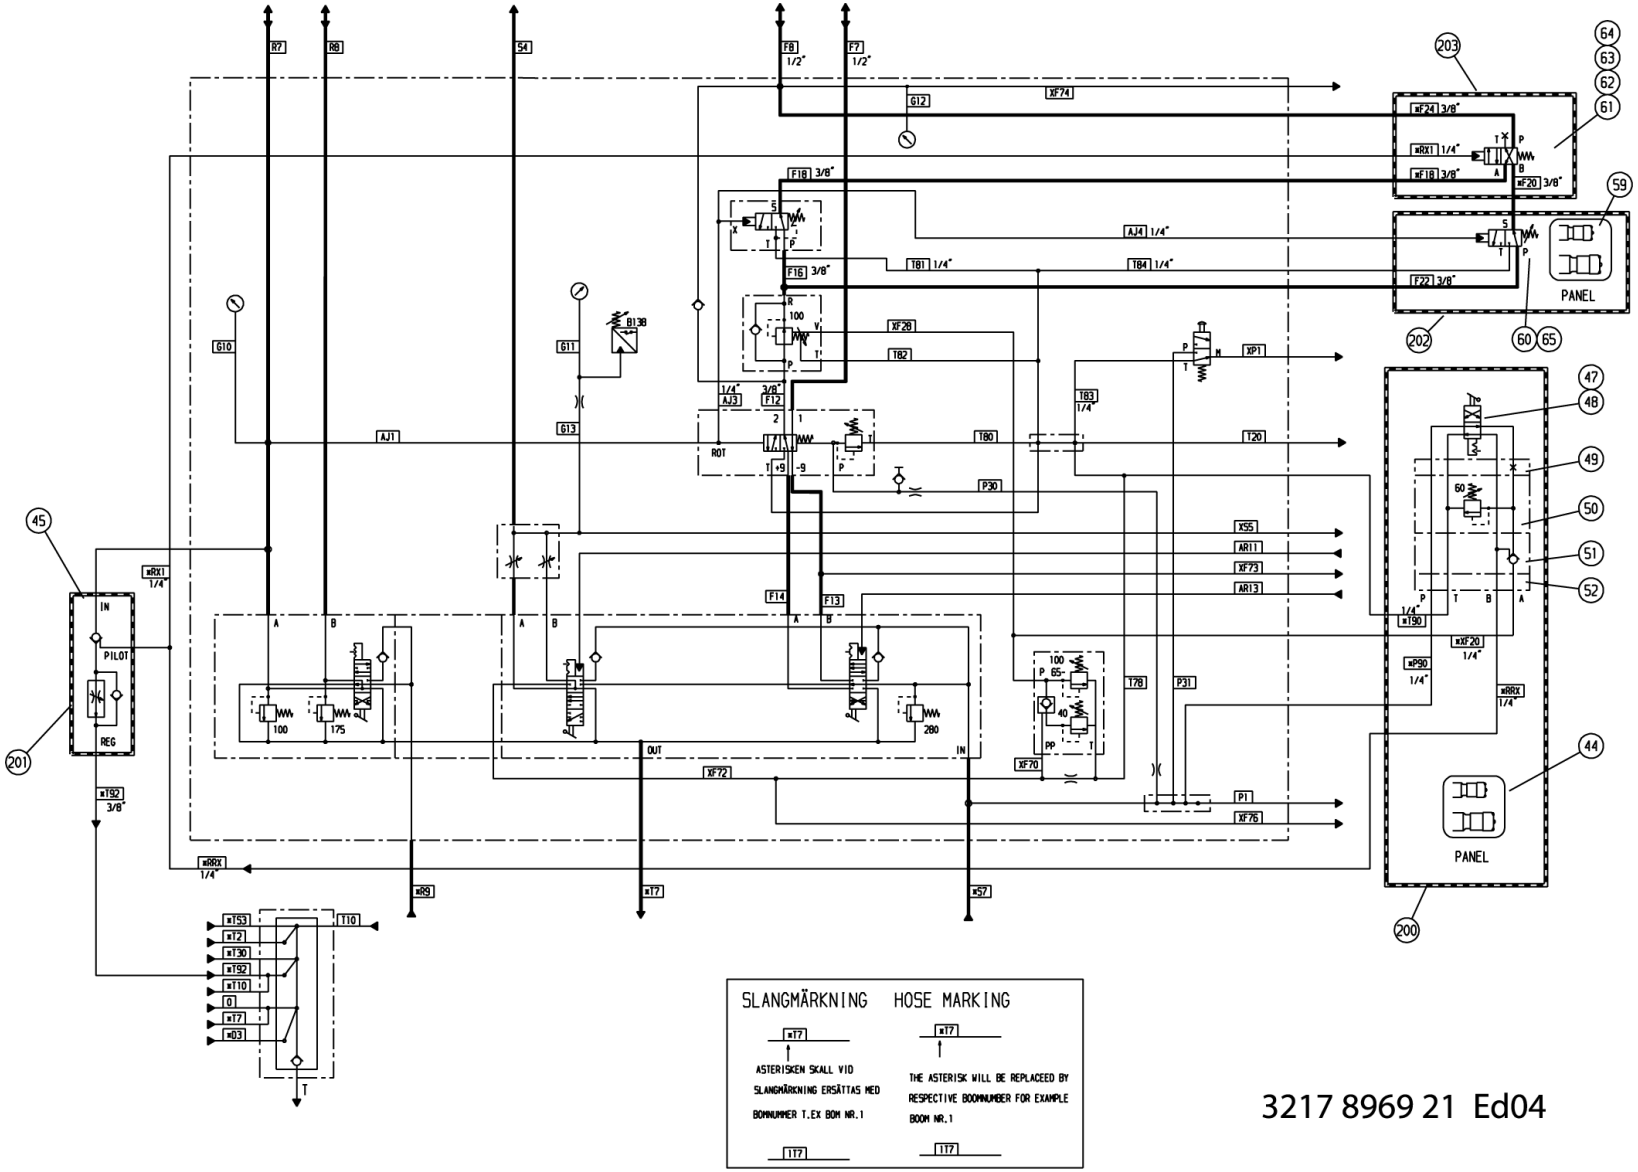

3217 8969 21 Ed04


B0013253

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
44	3217 8951 11	1	PLATE	SKYLT		
45	3128 2099 33	1	FLOW REGULATOR	FLÖDESREGULATOR		
47	0211 1102 72	4	HEX SOCK. SCREW	SEXKANTHÅLSKRUV		M 5 140 8,5 22 5 2,5 4 12
48	3177 3023 00	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 55	TUBE,WANDFLUH AH4Z-A/R
49	3217 8661 00	1	VALVE PLATE	VENTILPLATTA		
50	3217 9082 05	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL	Page 57	
51	3214 7391 00	1	DOUBLE CH.VALVE	HYDRAULLÅS		Z2S6A40
52	3176 2053 00	1	CONNECT. PLATE	ANSLUTN.PLATTA		
59	3217 8951 11	1	PLATE	SKYLT		
60	3217 8014 01	1	SEQUENCE VALVE	SEKVENSVENTIL	Page 45	
61	3177 3156 07	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 59	4 WH 6 D 5X
62	3177 3077 00	1	ASSEMBLY PLATE	MONT.PLATTA		
63	0211 1215 03	4	SCREW	SKRUV		MC6S M 5 X 50 - 8.8 FZB
64	3217 5977 00	1	ATTACHMENT	FÄSTE		
65	0147 1259 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 75 - 8.8 FZB

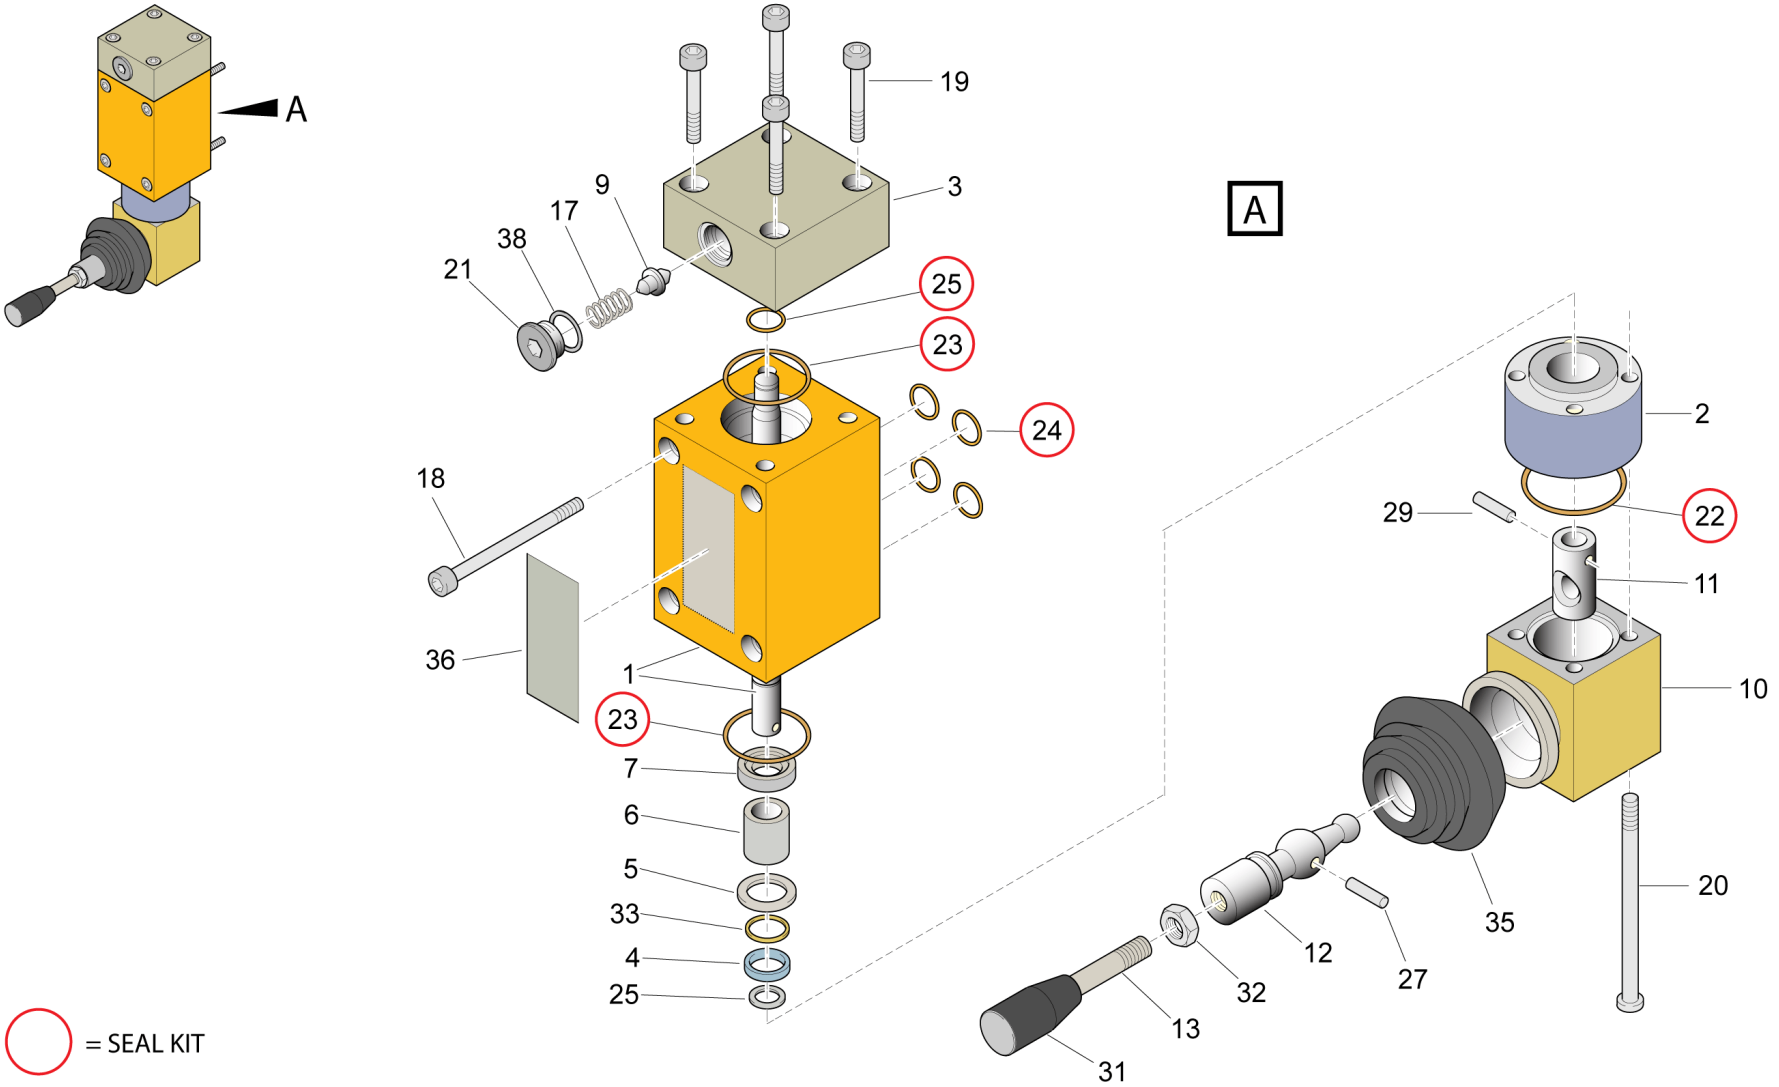
A
19
3
9
17
38
21
25
23
24
18
36
1
23
7
6
5
33
4
25
A
2
29
22
11
10
20
35
12
27
32
13
31
= SEAL KIT
1250 0280 33

B0048852


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3177 3023 90	1	SEALING SET	PACKNINGSSATS		REF.POS 22 - 25
18	0211 1214 00	4	SCREW	SKRUV		MC6S M 5 X 45 - 12.9
19	0211 1174 00	4	SCREW	SKRUV		MC6S M 4 X 20 - 12.9
20	0160 6054 00	4	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 60 - 4.8
21	0686 6457 04	1	PLUG	PROPP		M 8X1 - STEEL 5.8
22	9125 6871 00	1	O-RING	O-RING		29,87X 1,78 90 SH
23	9125 6889 00	2	O-RING	O-RING		21,95X 1,78 90 SHORE
24	0663 9050 01	4	O-RING	O-RING		9,25X 1,78 90 SHORE
25	0663 9051 01	2	O-RING	O-RING		7,65X 1,78 90 SHORE
27	0102 0320 00	1	PIN	PINNE		CP 6M6 X 25 - 11 1922 04
29	0108 1193 00	1	SPRING PIN	RÖRPINNE		3 X 14 DIN 1481
32	0261 2110 00	1	NUT	MUTTER		M 8 - 4 FZB
33	0335 3108 00	1	RETAINING RING	STOPPRING		RS 6 X 12 X 0,7
35	3177 3023 35	1	BELLOW	BÄLG		
38	0653 1026 00	1	GASKET	PACKNING		8 / 11,5 X 1 - 11 5013 12

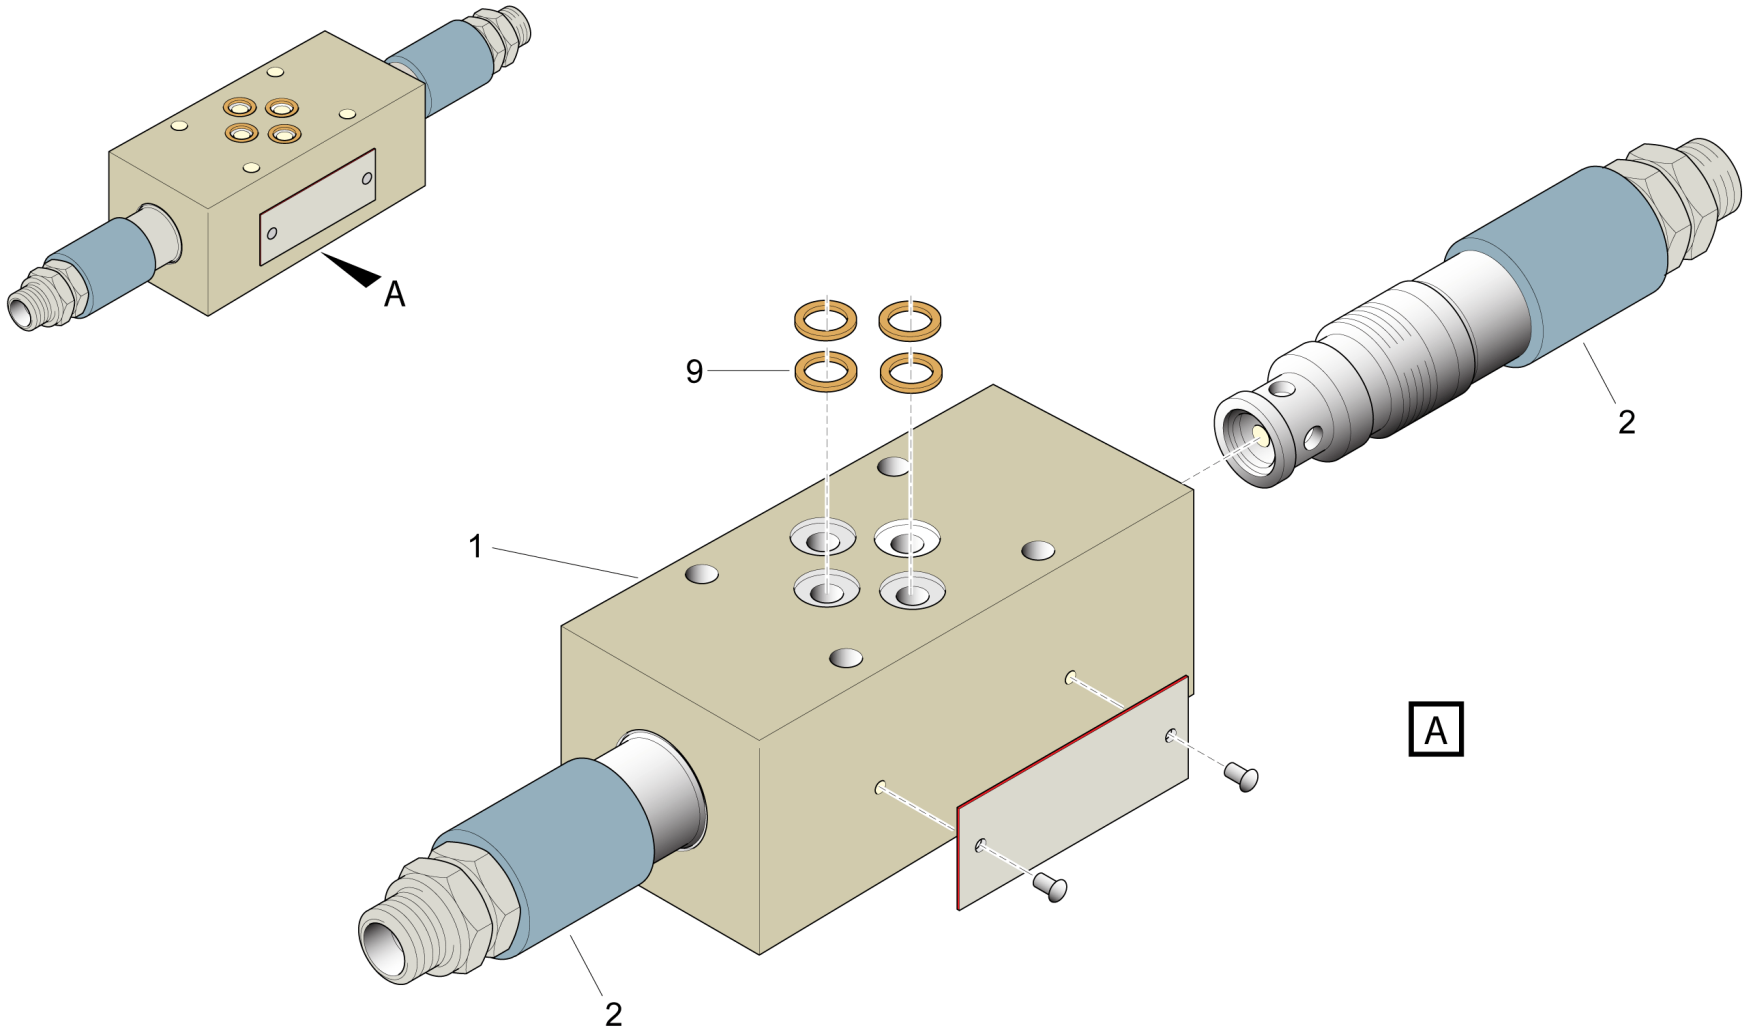

1250 0280 32


B0048853

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	HOUSE	HUS		
2	3217 9082 17	2	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
9	0663 9050 01	4	O-RING	O-RING		9,25X 1,78 90 SHORE

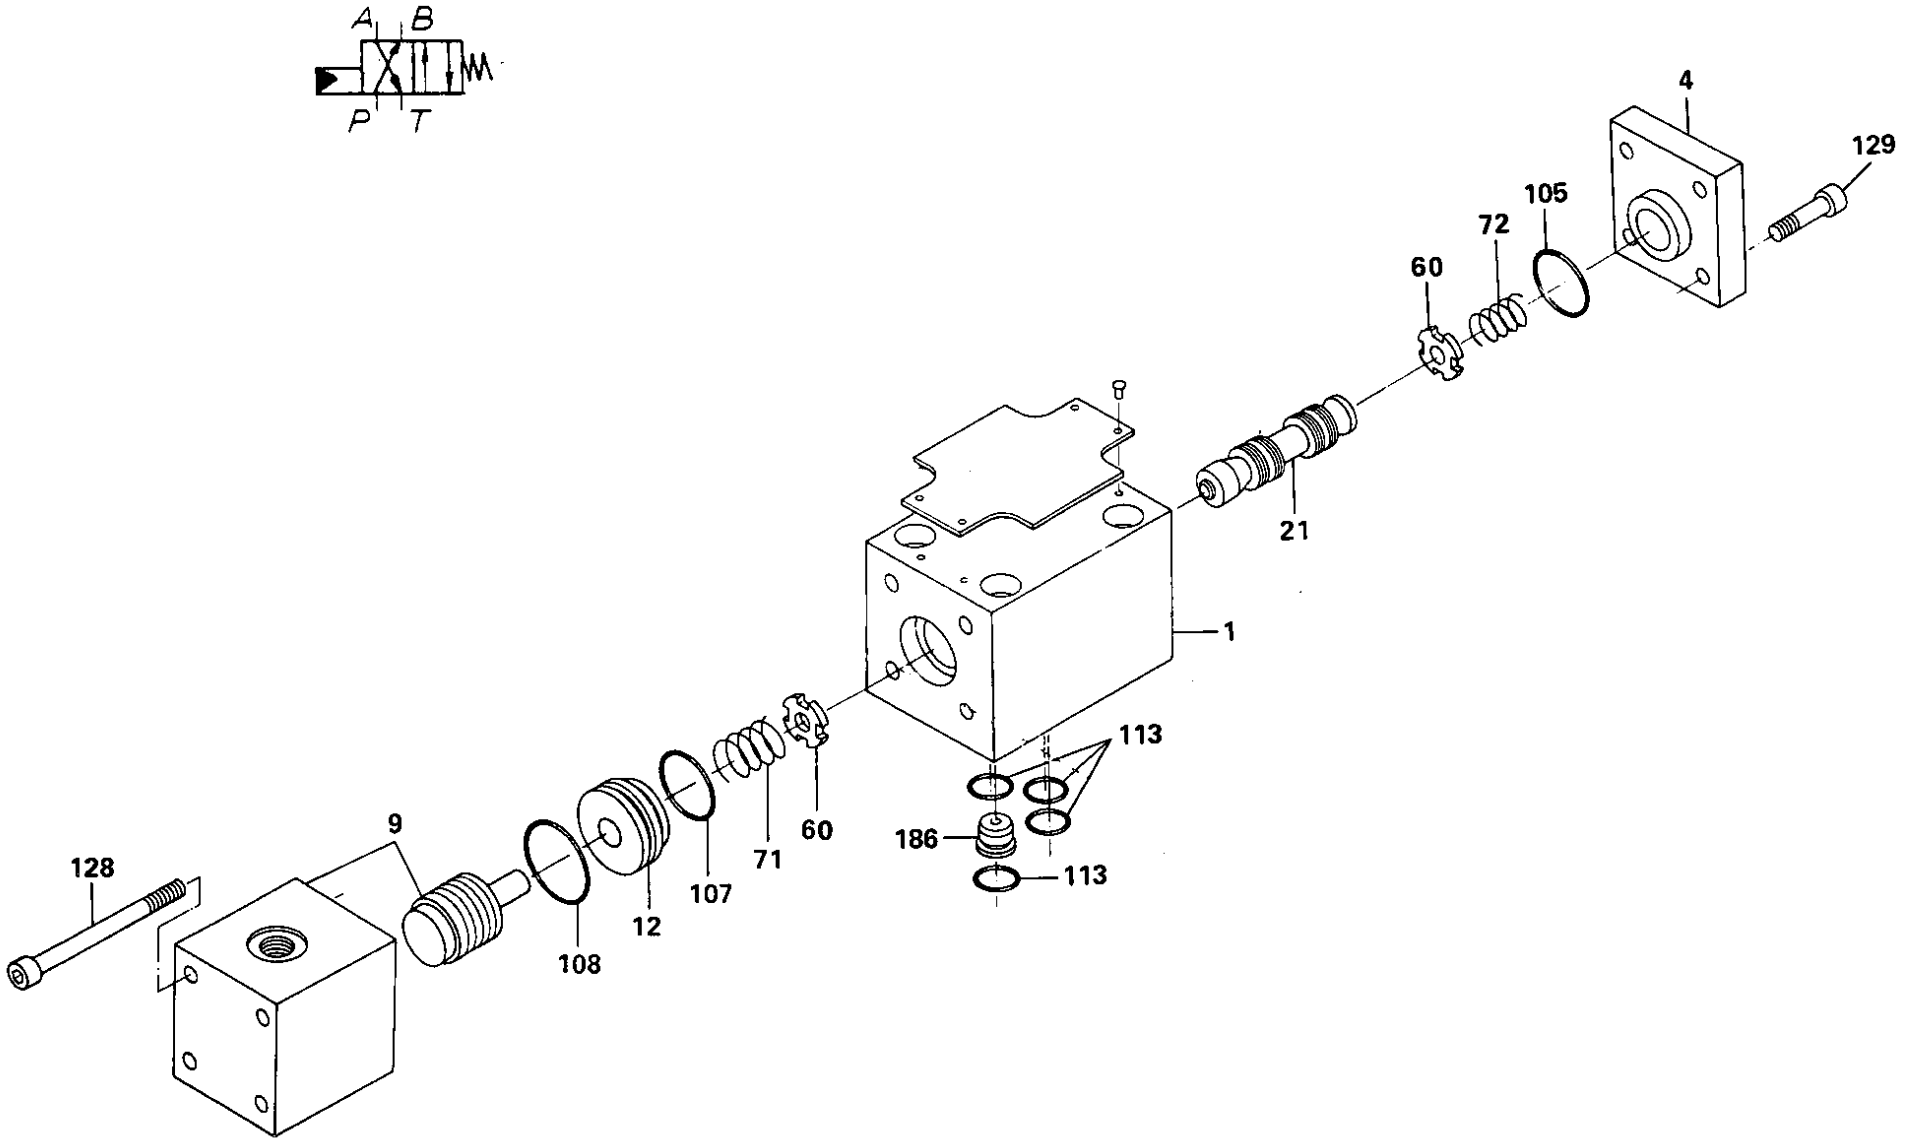

B0000394


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3177 3157 90	1	O-RING SET	O-RINGSSATS		
1	–	1	HOUSE	HUS		RX 153194
4	3177 3157 04	1	COVER	LOCK		
9	3177 3157 09	1	COVER	LOCK		
12	3177 3157 12	1	BUSHING	BUSSNING		
21	–	1	SLIDE	SLID		
60	3177 3157 40	2	WASHER	BRICKA		
71	3177 3157 41	1	SPRING	FJÄDER		
72	3177 3157 42	1	SPRING	FJÄDER		
105	0663 9032 01	1	O-RING	O-RING		15,6 X 1,78 90 SHORE
107	0663 9032 01	1	O-RING	O-RING		15,6 X 1,78 90 SHORE
108	9125 6283 00	1	O-RING	O-RING		18,0 X 2,5 90 SHORE
113	0663 9050 01	4	O-RING	O-RING		9,25X 1,78 90 SHORE
128	0211 1179 00	4	SCREW	SKRUV		MC6S M 4 X 40 - 12.9
129	0211 1173 00	4	SCREW	SKRUV		MC6S M 4 X 16 - 12.9
186	3177 3157 47	1	RESTRICTION	STRYPNING		

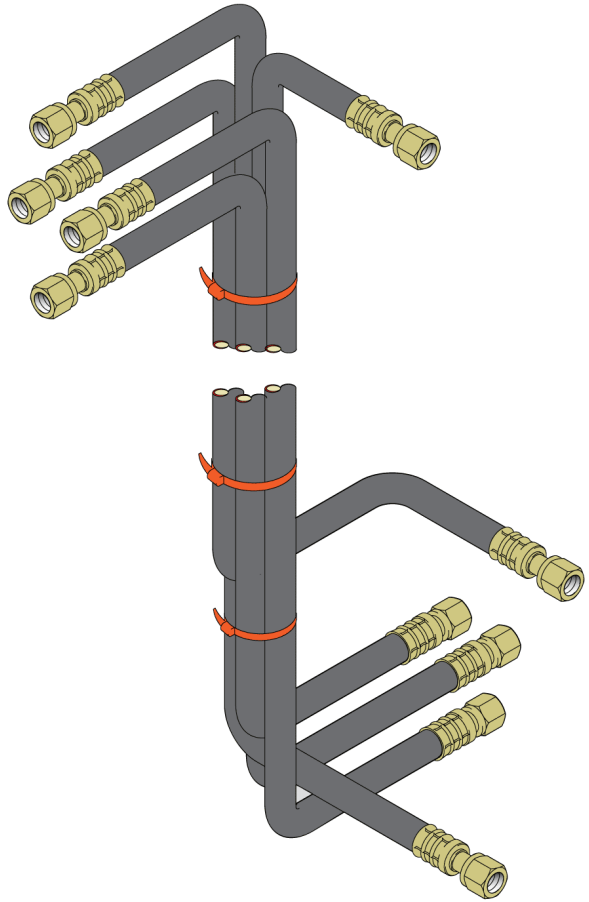

HOSE SET / SLANGSATS

CUT HOLE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
AJ4	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
F18	3176 5676 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 900 R2AT
F20	3176 5676 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 900 R2AT
F22	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
F24	0574 1274 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1700 R2AT
P90	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
RRX	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
RX1	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
T84	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
T90	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
T92	3176 6337 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2200 R2AT
XF20	0574 0252 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 250 R2AT

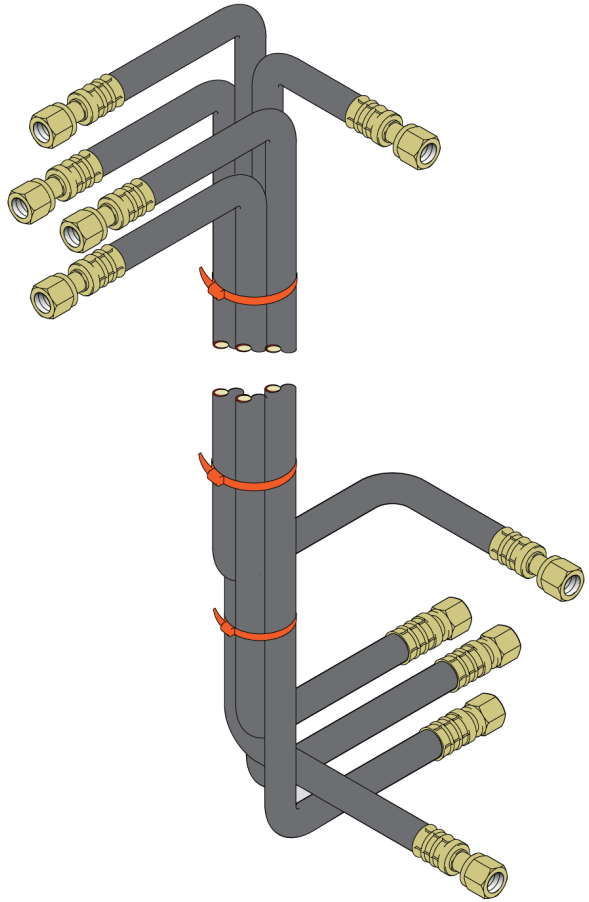


HOSE SET / SLANGSATS

BIG HOLE


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1F24	0574 1273 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1600 R2AT
1RX1	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
1T92	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2F18	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2F20	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2F24	3176 5676 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 900 R2AT
2RX1	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
2T92	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT

Fig. 1 of 2

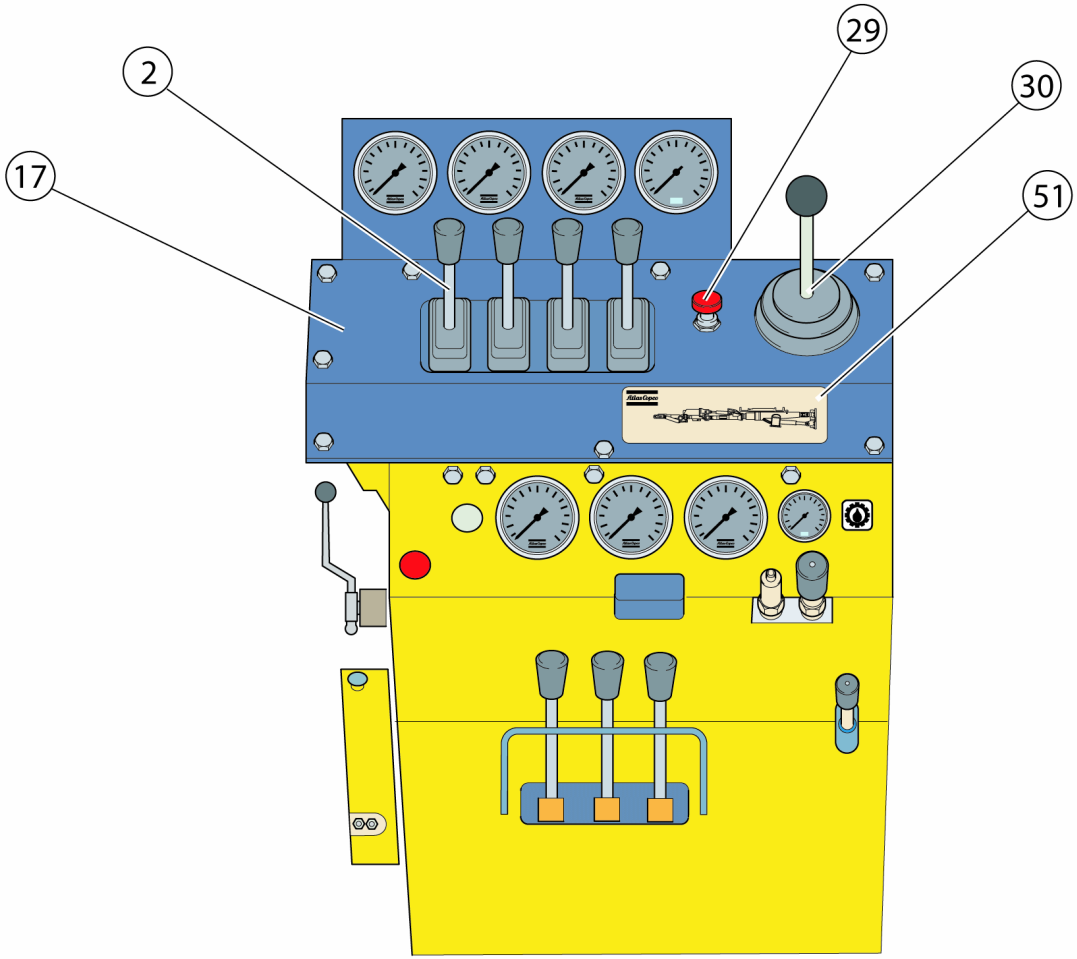


1250 0156 60

B0030313

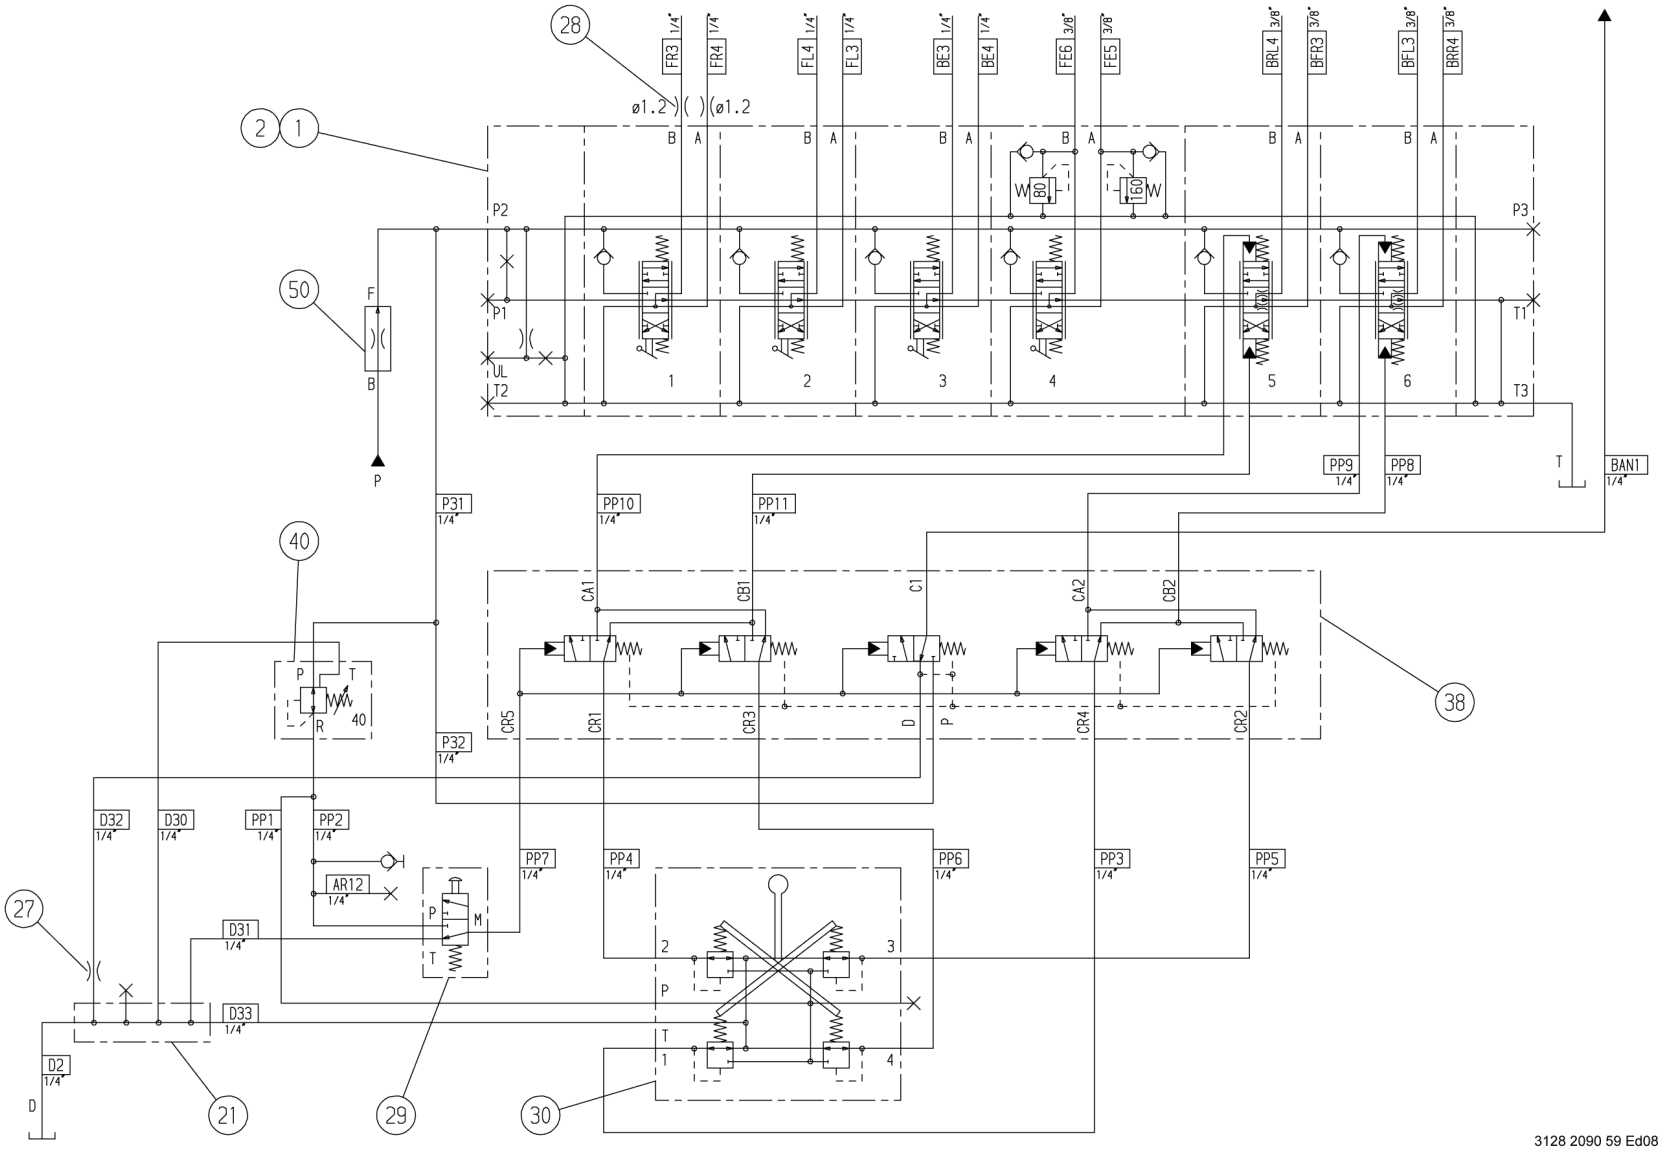

3128 2090 59 Ed08

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 2090 57	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 69	
2	3128 2091 69	4	LEVER SET	SPAKSATS		
17	3128 2019 49	1	GUIDE PLATE	STYRPLÅT		
18	–	1	ATTACHM. PLATE	FÄSTPLÅT		
21	3125 2525 00	1	COLLECT. BLOCK	SAMLINGSBLOCK		
27	3176 8505 00	1	RESTRICTION	STRYPNING		D=1,2 ; 9/16-18 UN
28	3176 8505 00	2	RESTRICTION	STRYPNING		D=1,2 ; 9/16-18 UN
29	3125 9005 02	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 47	
30	8234 0200 37	1	PR.CONTR.VALVE	STYRTR.VENTIL	Page 83	
38	9122 4352 00	1	VALVE	VENTIL	Page 89	
40	3128 2020 15	1	PRESS.RED.VALVE	TRYCKRED.VENTIL	Page 91	R 1/4
42	–	1	ATTACHMENT	FÄSTE		
50	3128 2281 01	1	FLOW REGULATOR	FLÖDESREGULATOR		
51	3125 3188 90	1	SIGN SET	SKYLTSATS		CONTROL PANEL
101	–	1	HOSE SET	SLANGSATS	Page 93	

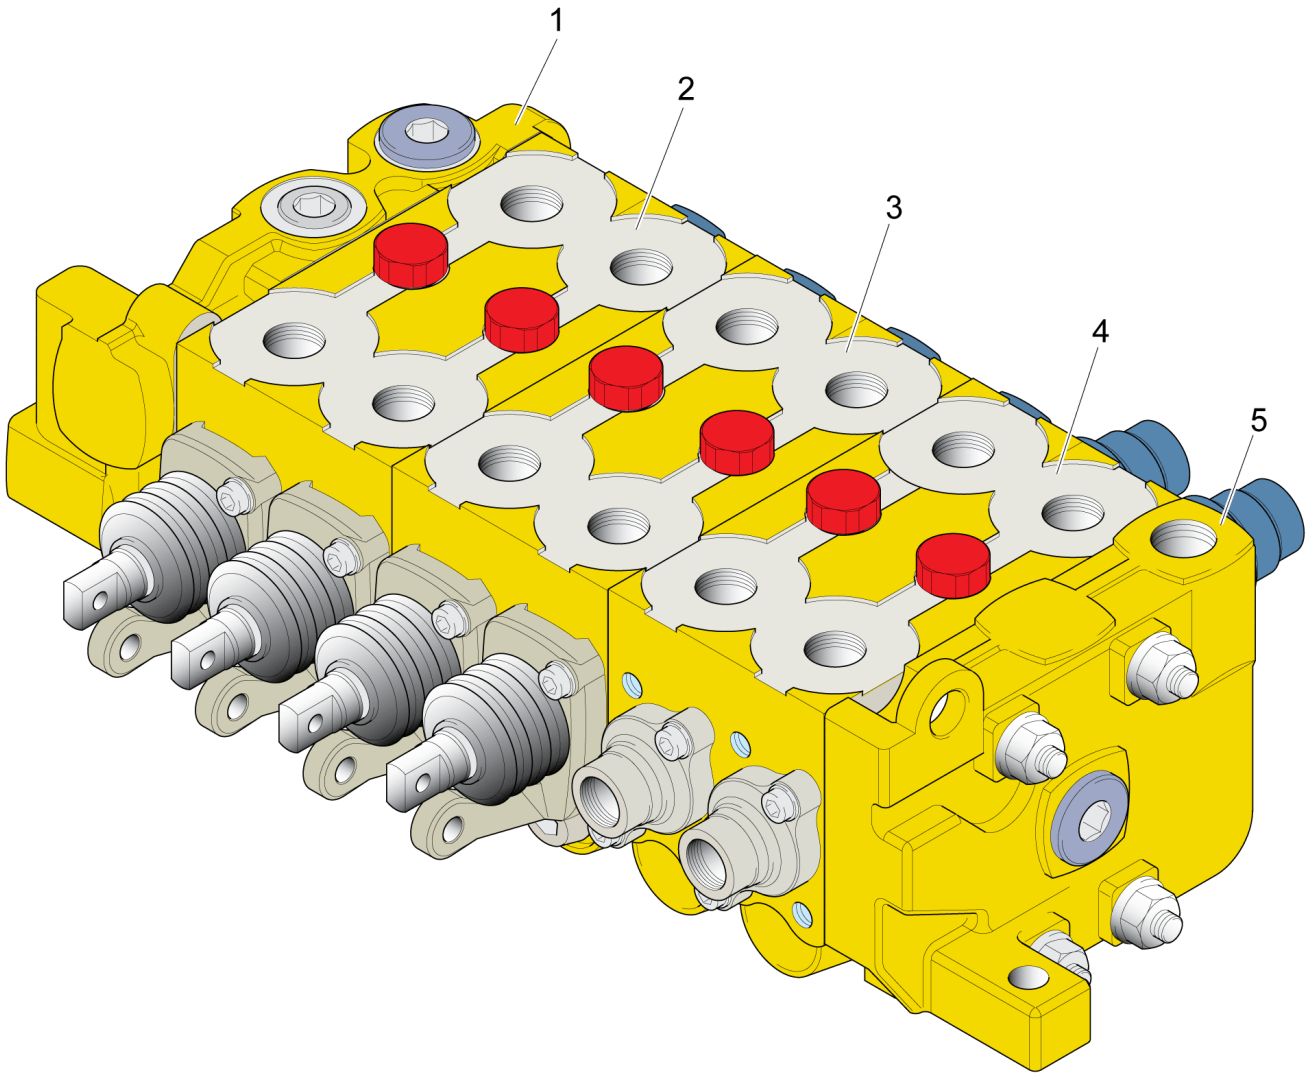


1250 0263 47

B0052634

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	–	1	ASSEMBLY SET	MONTERINGSSATS	Page 71	
1	–	1	INLET SECTION	INLOPPSSEKTION	Page 73	
2	–	1	VALVE SECTION	VENTILSEKTION	Page 75	
3	–	1	VALVE SECTION	VENTILSEKTION	Page 77	
4	–	1	VALVE SECTION	VENTILSEKTION	Page 79	
5	–	1	OUTLET SECTION	UTLOPPSSEKTION	Page 81	

ASSEMBLY SET / MONTERINGSSATS

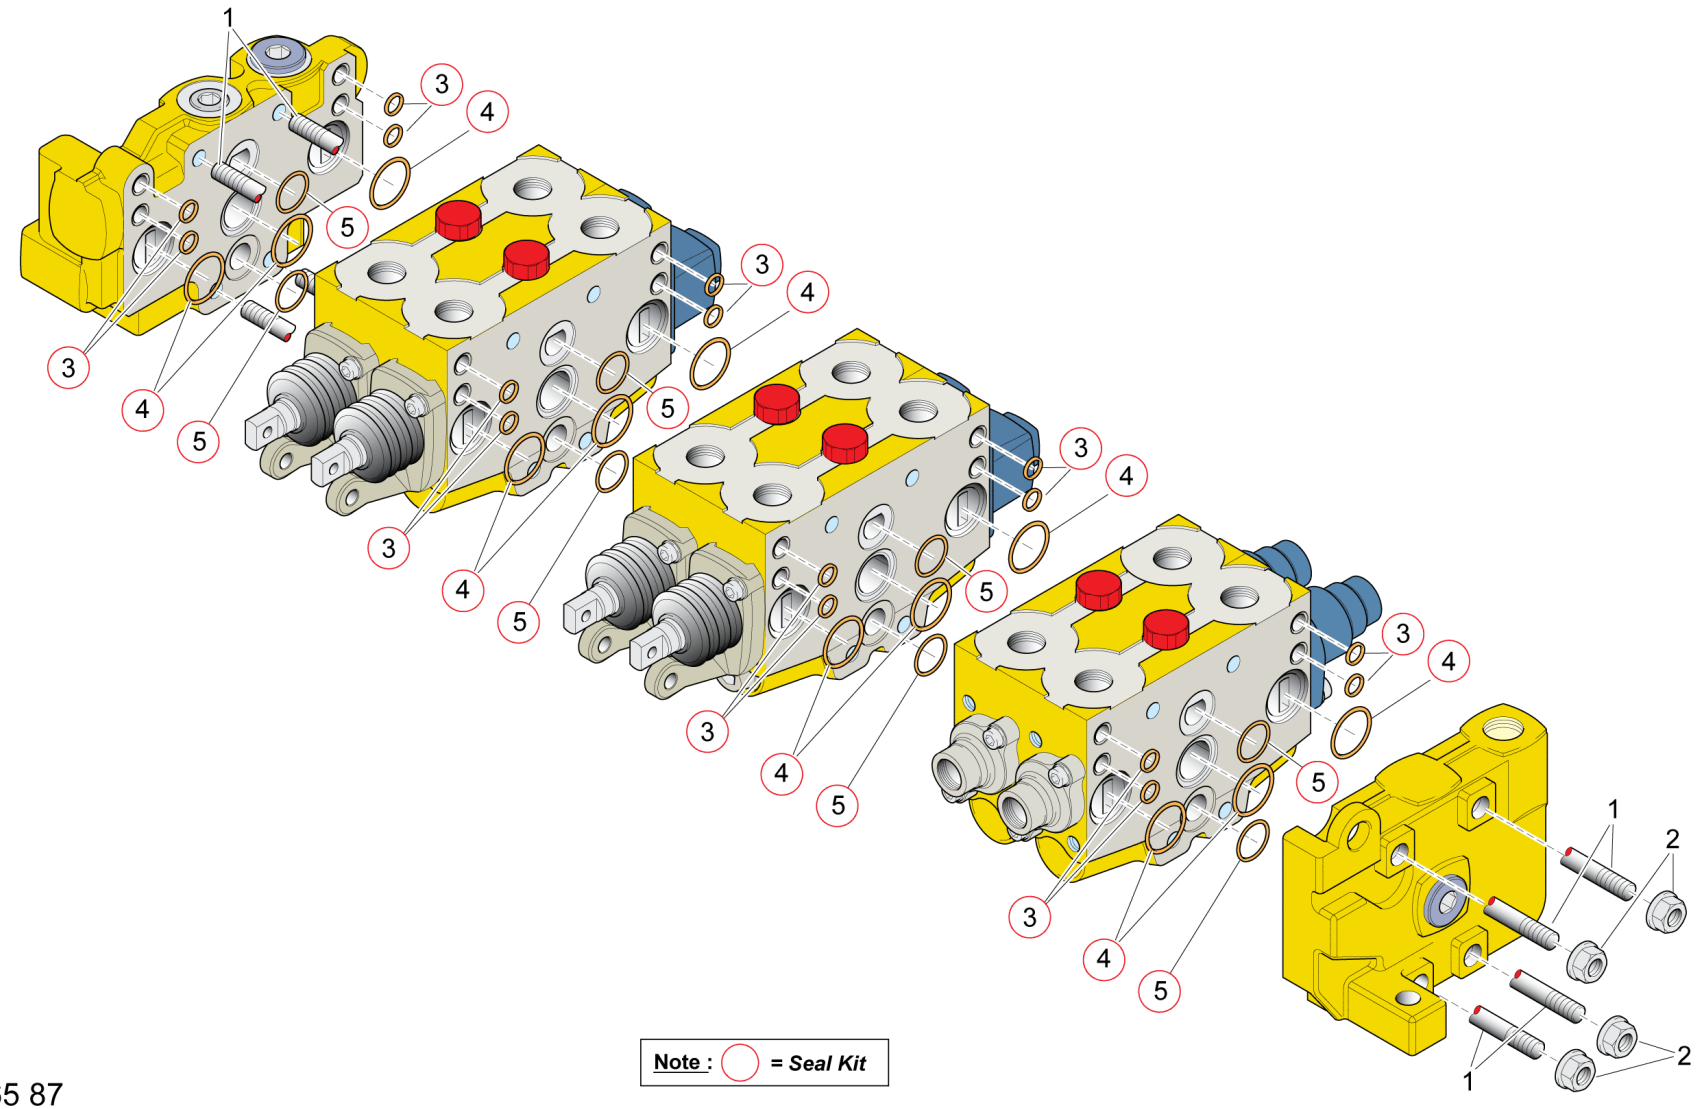


1250 0265 87

B0052638

ASSEMBLY SET / MONTERINGSSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 09	1	PULL ROD SET	DRAGSTÅNGSSATS		INCL.POS.1(4X)
	3222 3264 95	4	SEAL KIT	TÄTNINGSSATS		INCL.POS.3(4X),4(3X),5(2X)
	3222 3264 97	1	NUT SET	MUTTERSATS		INCL.POS.2(4X)
1	–	4	STUD	PINNBULT		NOT SOLD SEPARATELY
2	–	4	NUT	MUTTER		NOT SOLD SEPARATELY
3	–	16	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	12	O-RING	O-RING		NOT SOLD SEPARATELY
5	–	8	O-RING	O-RING		NOT SOLD SEPARATELY

INLET SECTION / INLOPPSSEKTION

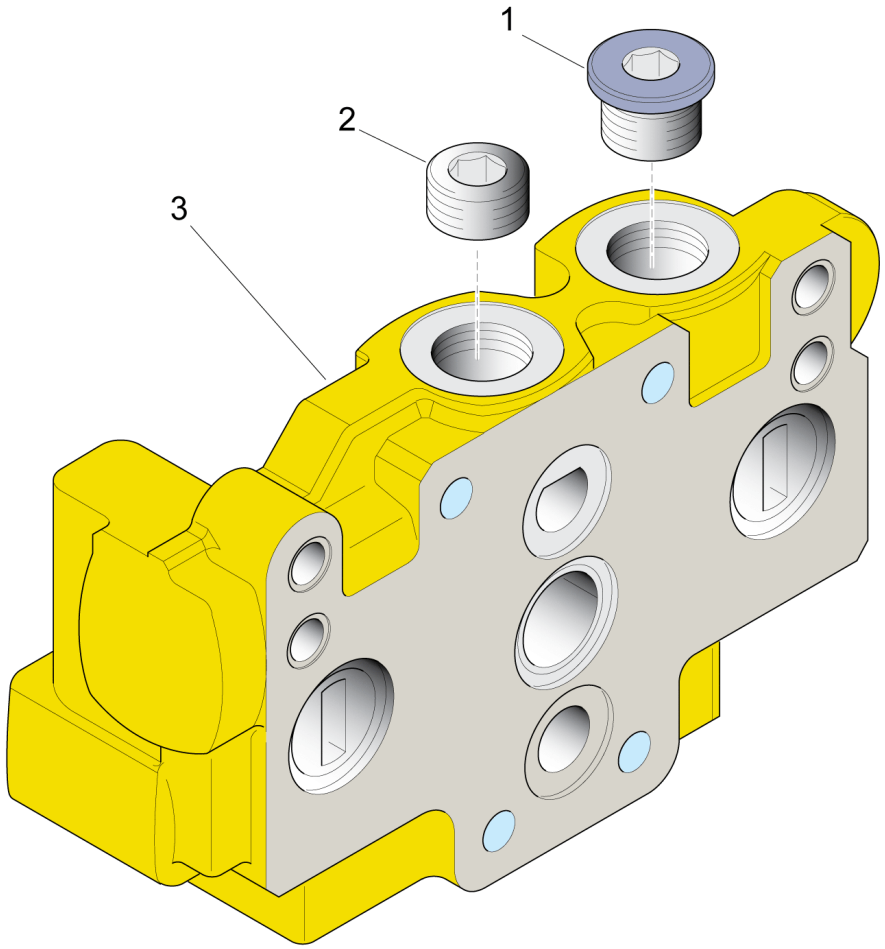


1250 0263 46

B0052635

INLET SECTION / INLOPPSSEKTION

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0686 6442 07	1	PLUG	PROPP		VSTI G 1/4-ED
2	3128 2090 76	1	PLUG	PLUGG		
3	–	1	HOUSE	HUS		NOT SOLD SEPARATELY

VALVE SECTION / VENTILSEKTION

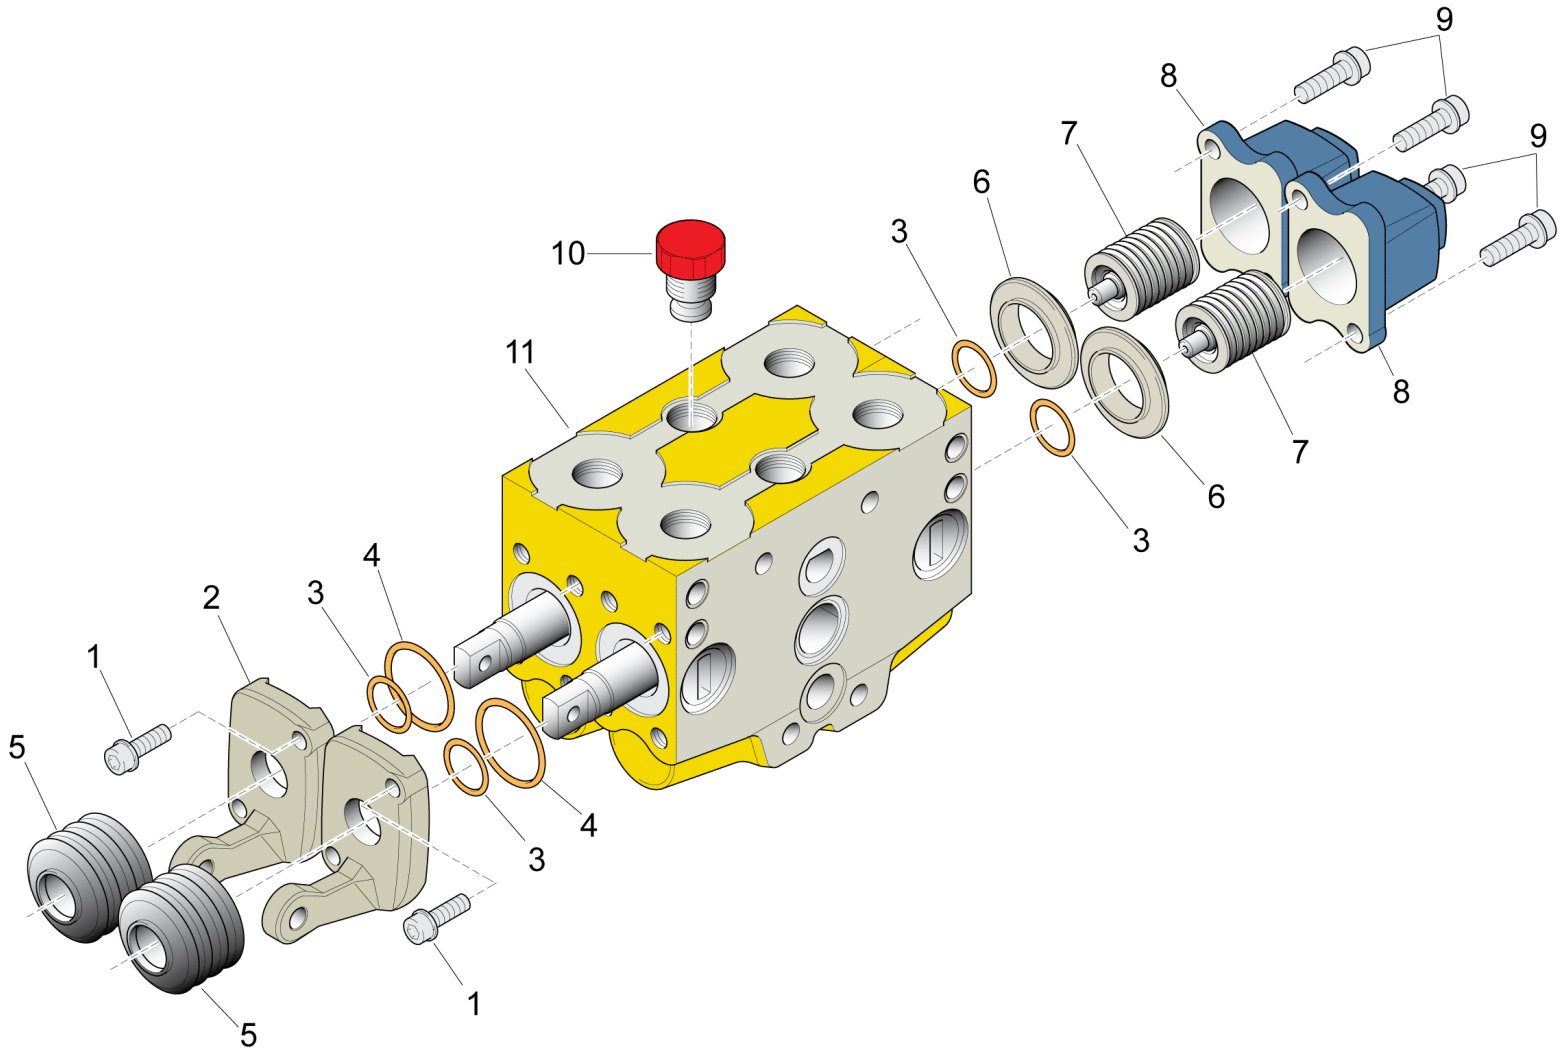


1250 0267 69

B0052649

VALVE SECTION / VENTILSEKTION

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 98	2	LEVER HOLDER	SPAKHÅLLARE		INCL.POS.1(2X),2,3,4,5
	3222 3264 99	2	ACTUATOR	STÄLLDON		INCL.POS.3,6,8,9(2X)
	9106 1611 59	2	SEAL KIT	TÄTNINGSSATS		INCL.POS.3(2X),4,5
1	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
2	–	2	COVER	LOCK		NOT SOLD SEPARATELY
3	–	4	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
5	3128 2091 49	2	PROTECT.BELLOWS	SKYDDSBÄLG		6 PCS IN KIT.
6	–	2	SLIDE WASHER	TRYCKBRICKA		NOT SOLD SEPARATELY
7	3128 2091 84	2	SPRING	FJÄDER		
8	–	2	END PIECE	GAVEL		NOT SOLD SEPARATELY
9	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
10	3128 2091 05	2	CHECK VALVE	BACKVENTIL		
11	–	1	HOUSE	HUS		NOT SOLD SEPARATELY

VALVE SECTION / VENTILSEKTION

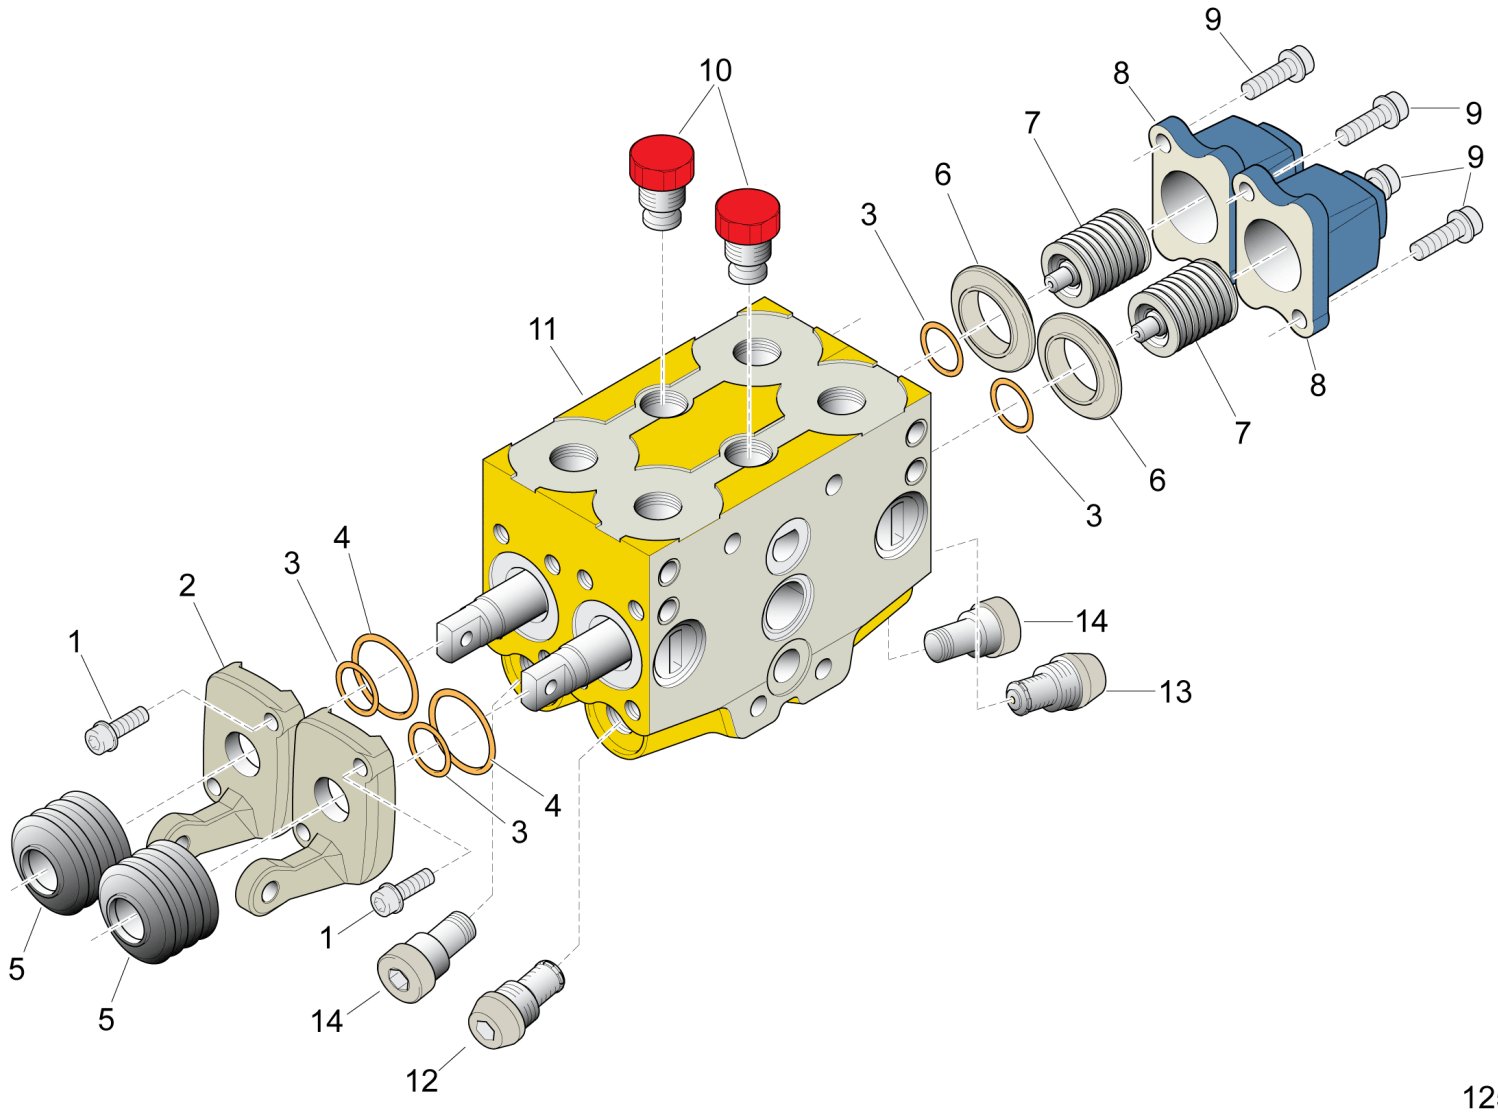


1250 0263 44

B0052637

VALVE SECTION / VENTILSEKTION

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 98	2	LEVER HOLDER	SPAKHÅLLARE		INCL.POS.1(2X),2,3,4,5
	3222 3264 99	2	ACTUATOR	STÄLLDON		INCL.POS.3,6,8,9(2X)
	9106 1611 59	2	SEAL KIT	TÄTNINGSSATS		INCL.POS.3(2X),4,5
1	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
2	–	2	END PIECE	GAVEL		NOT SOLD SEPARATELY
3	–	4	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
5	3128 2091 49	2	PROTECT.BELLOWS	SKYDDSBÄLG		6 PCS IN KIT
6	–	2	SLIDE WASHER	TRYCKBRICKA		NOT SOLD SEPARATELY
7	3128 2091 84	2	SPRING	FJÄDER		
8	–	2	END PIECE	GAVEL		NOT SOLD SEPARATELY
9	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
10	3128 2091 05	2	CHECK VALVE	BACKVENTIL		
11	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
12	9120 0292 06	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
13	9120 0292 02	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
14	1261 1000 05	2	PLUG	PLUGG		

VALVE SECTION / VENTILSEKTION

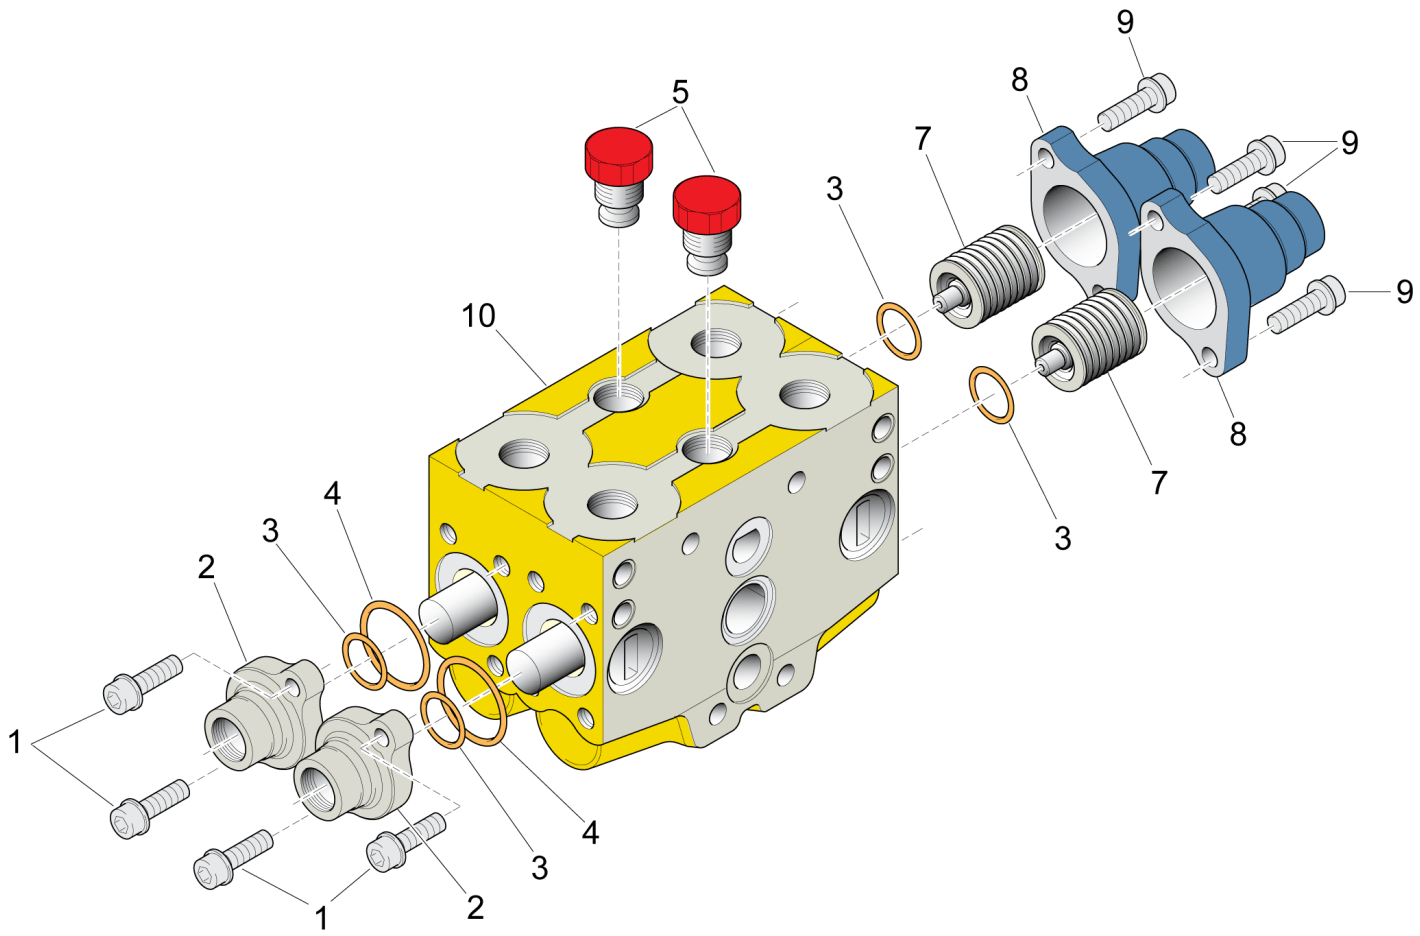


1250 0263 45

B0052636

VALVE SECTION / VENTILSEKTION

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 06	2	KIT	SATS		INCL.POS.3,8,9(2X)
	3128 2091 07	2	KIT	SATS		INCL.POS.1(2X),2,3,4
1	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
2	–	2	END PIECE	GAVEL		NOT SOLD SEPARATELY
3	–	4	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
5	3128 2091 05	2	CHECK VALVE	BACKVENTIL		
7	3128 2091 08	2	SPRING SET	FJÄDERSATS		
8	–	2	END PIECE	GAVEL		NOT SOLD SEPARATELY
9	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
10	–	1	HOUSE	HUS		NOT SOLD SEPARATELY

OUTLET SECTION / UTLOPPSSEKTION

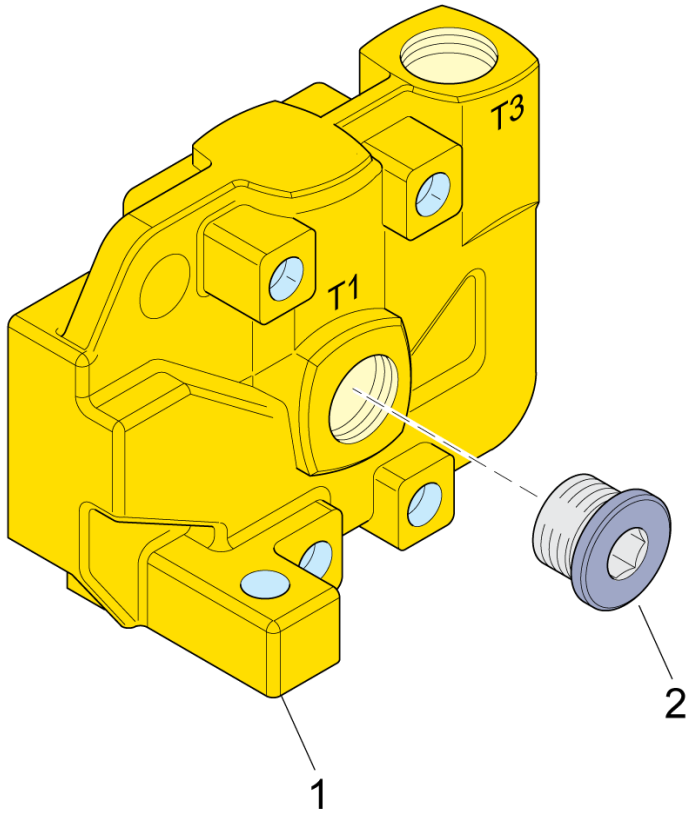



1250 0267 62

B0052648

OUTLET SECTION / UTLOPPSSEKTION

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
2	0686 6442 07	1	PLUG	PROPP		VSTI G 1/4-ED

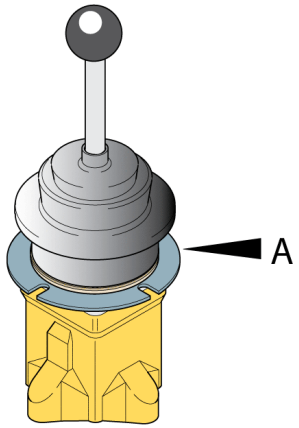


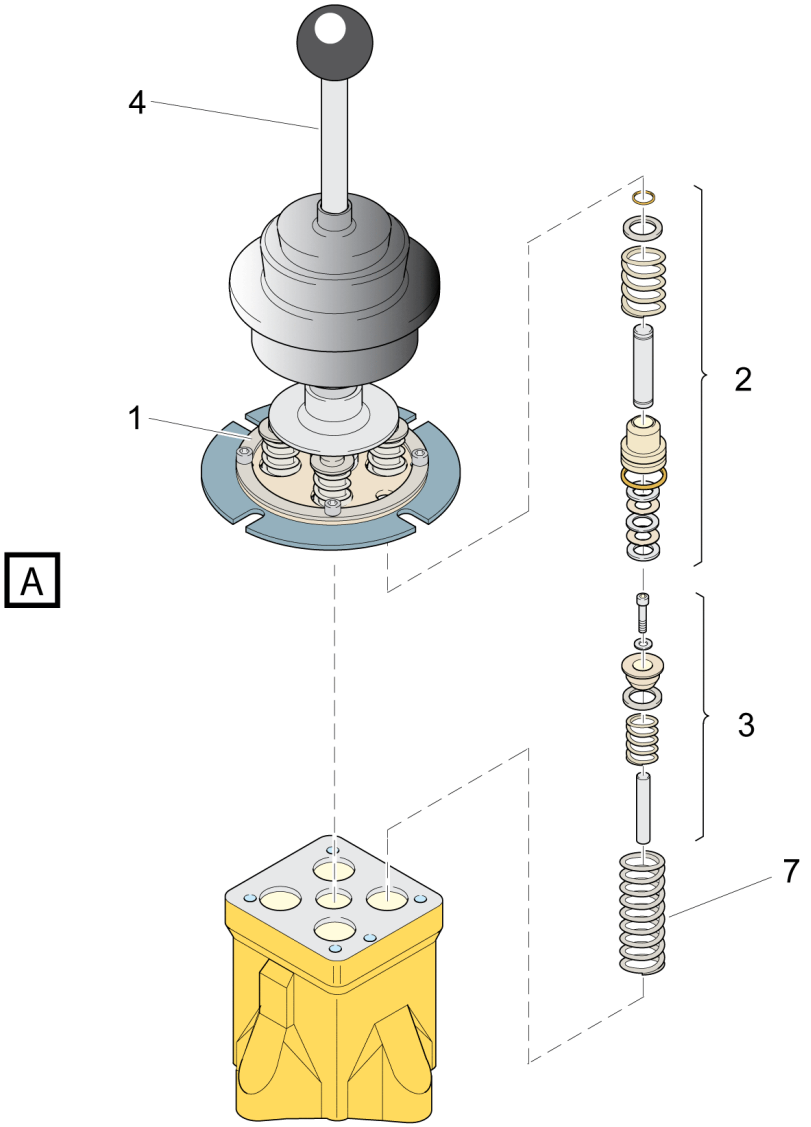


1250 0009 39

B0038356

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9120 0893 02	1	LEVER JOINT	SPAKFÄSTE	Page 85	
2	9120 0893 91	1	BOLT SET	PINNSATS		
3	9126 1816 19	1	SPRING SET	FJÄDERSATS		
4	9120 0590 52	1	LEVER SET	SPAKSATS	Page 87	
7	9128 3768 00	1	RETURN SPRING	RETURFJÄDER		

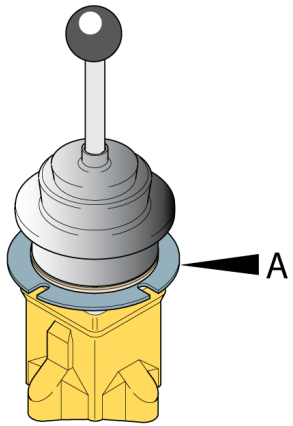

1250 0014 98

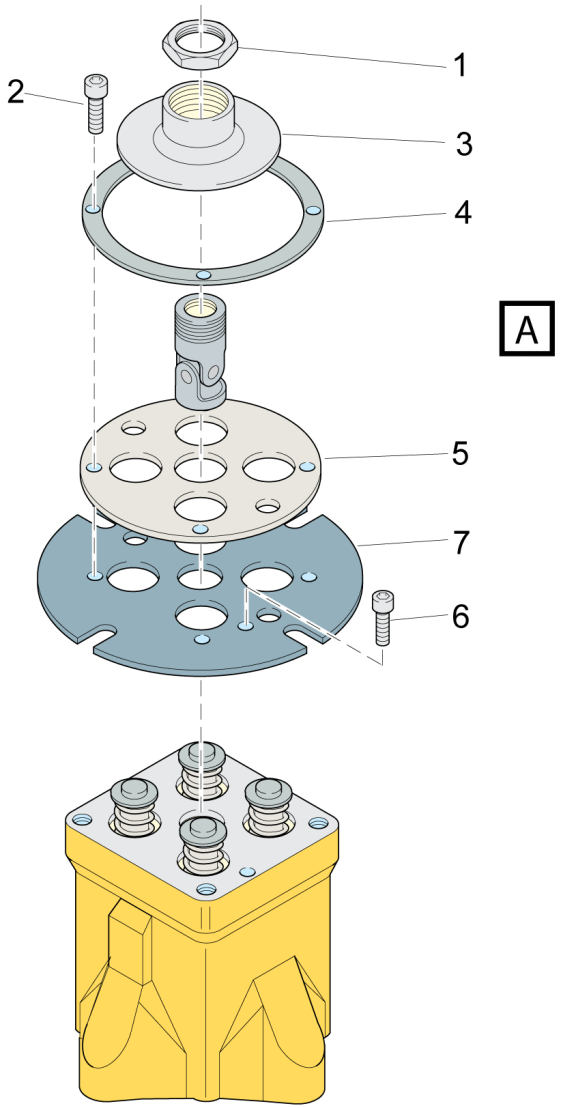


B0038357


LEVER JOINT / SPAKFÄSTE

9120 0893 02

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9124 7986 00	1	NUT	MUTTER		
2	0211 1208 03	4	SCREW	SKRUV		MC6S M 5 X 20 - 8.8 FZB
3	9128 6962 00	1	PRESS. PLATE	TRYCKPLATTA		
4	9128 2273 00	1	DISK	SKIVA		
5	9123 9854 00	1	PLATE	PLATTA		
6	0211 1962 11	2	SCREW	SKRUV		MC6S M 5 X 12 - 8.8 FZB
7	9123 9855 00	1	DISK	SKIVA		

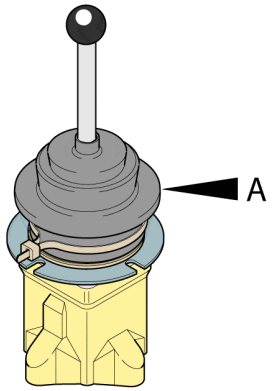


1250 0014 18

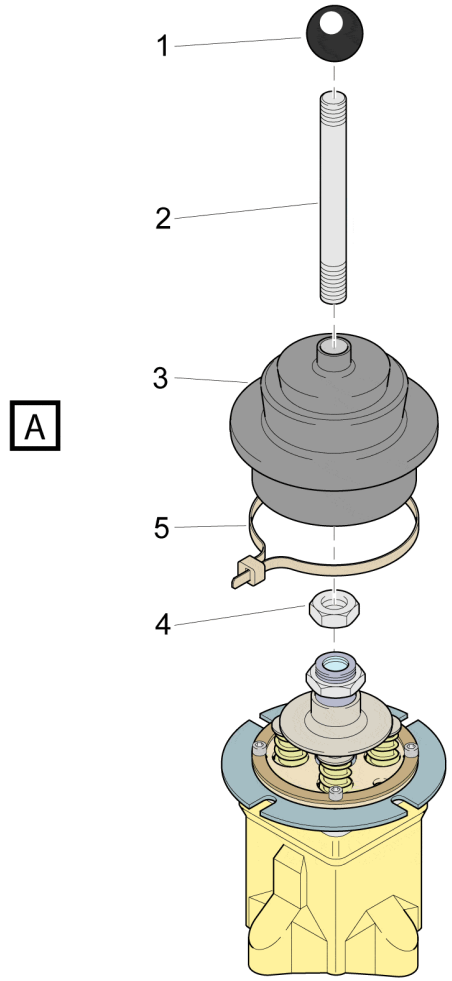

LEVER SET / SPAKSATS

9120 0590 52


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning	
1	0362 1109 00	1	BALL KNOB	HANDTAGSKULA		A1 40 M10	BLACK
2	9128 6954 00	1	LEVER	SPAK			
3	9124 9746 00	1	BELLOW	BÄLG			
4	9125 7729 00	1	NUT	MUTTER		M 14 - 8 FZB	
5	9125 9463 00	1	LOCKING	LÅSNING			

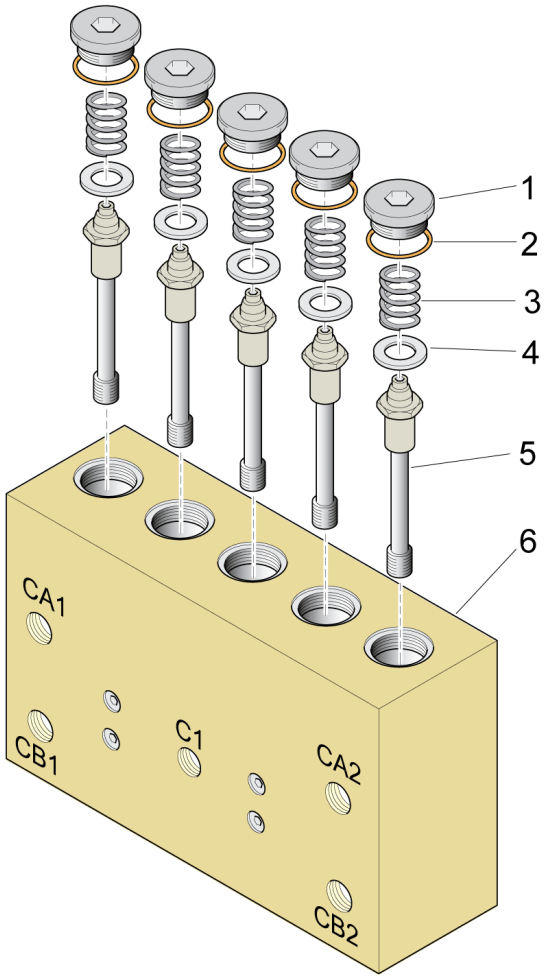

1250 0215 63

B0047004

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9127 3199 33	5	PLUG	PROPP		
2	0663 2100 26	5	O-RING	O-RING		13,3 X 1,8 70 SHORE
3	9128 7776 00	5	SPRING	FJÄDER		
4	–	5	WASHER	BRICKA		NOT SOLD SEPARATELY
5	–	5	VALVE	VENTIL		NOT SOLD SEPARATELY
6	–	1	HOUSE	HUS		NOT SOLD SEPARATELY

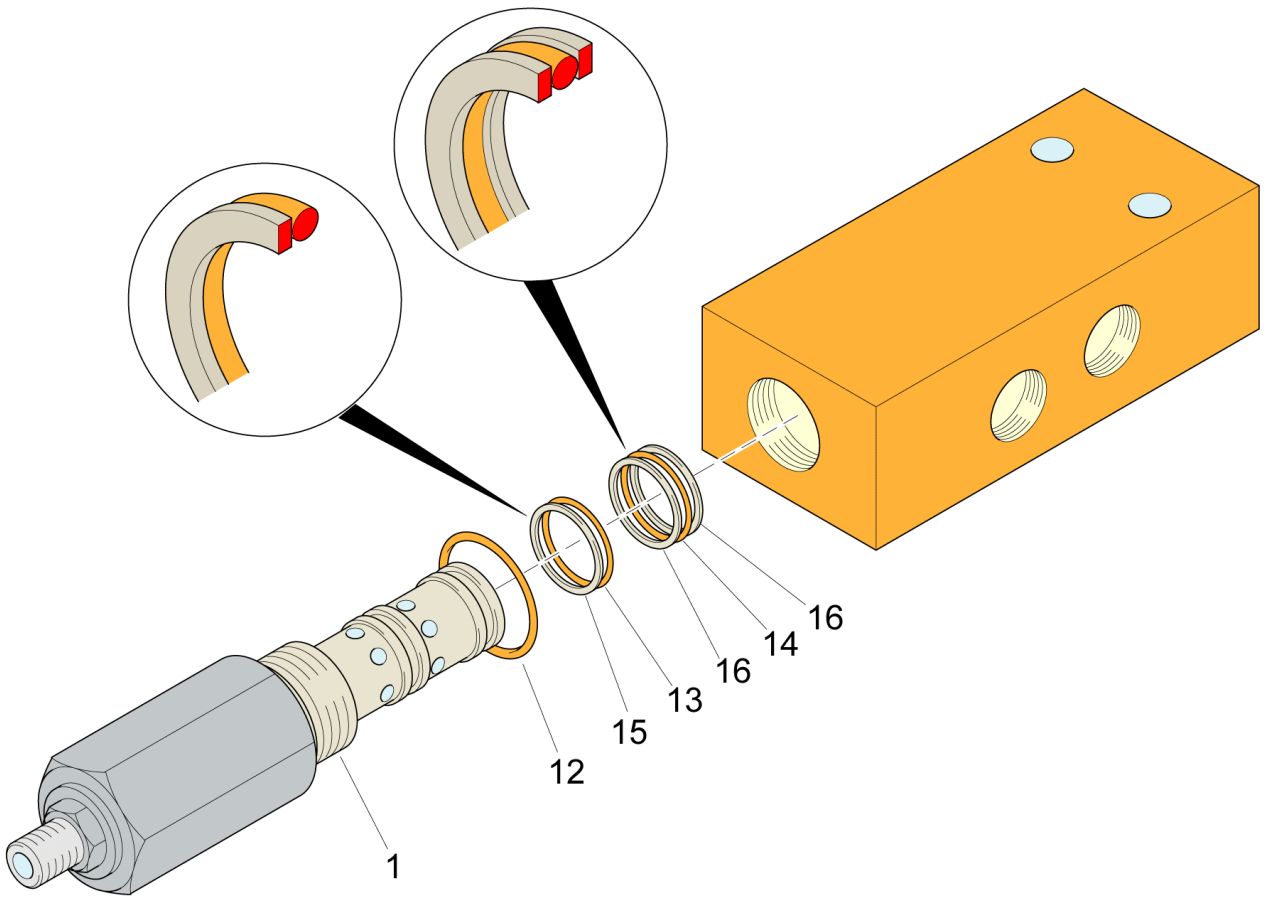


1250 0052 53

B0004672

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 3023 72	1	SEAL KIT	TÄTNINGSSATS		INCL.POS.12-16
1	3128 3023 71	1	INSERT	INSATS		INCL.SEALS

HOSE SET / SLANGSATS

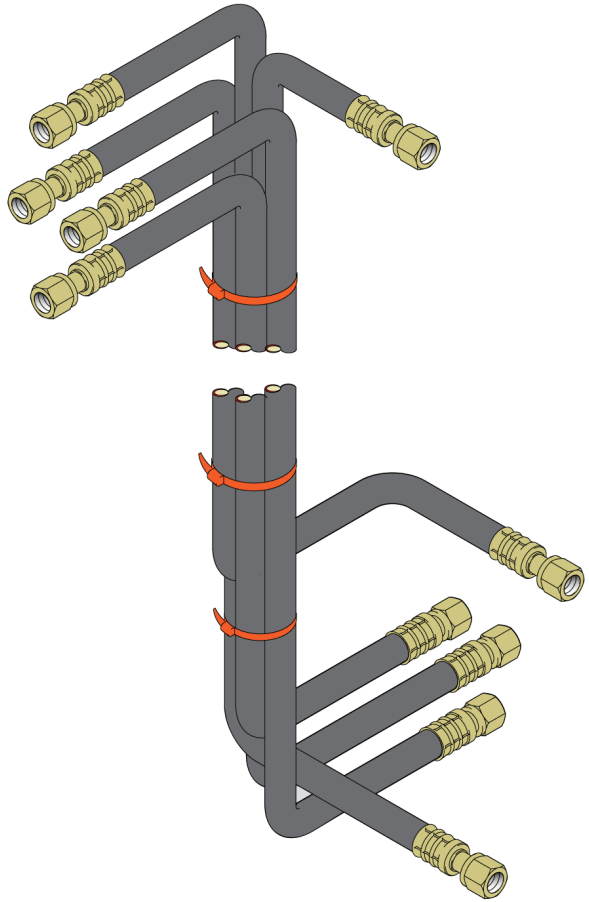


B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
PP10	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT
PP11	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
D30	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
D31	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
D32	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
D33	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
PP1	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
PP2	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
PP3	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP4	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP5	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP6	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP7	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
PP8	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
PP9	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT
P31	0574 0064 54	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 550 R2AT
P32	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT

COUPLING SET / KOPPLINGSSATS

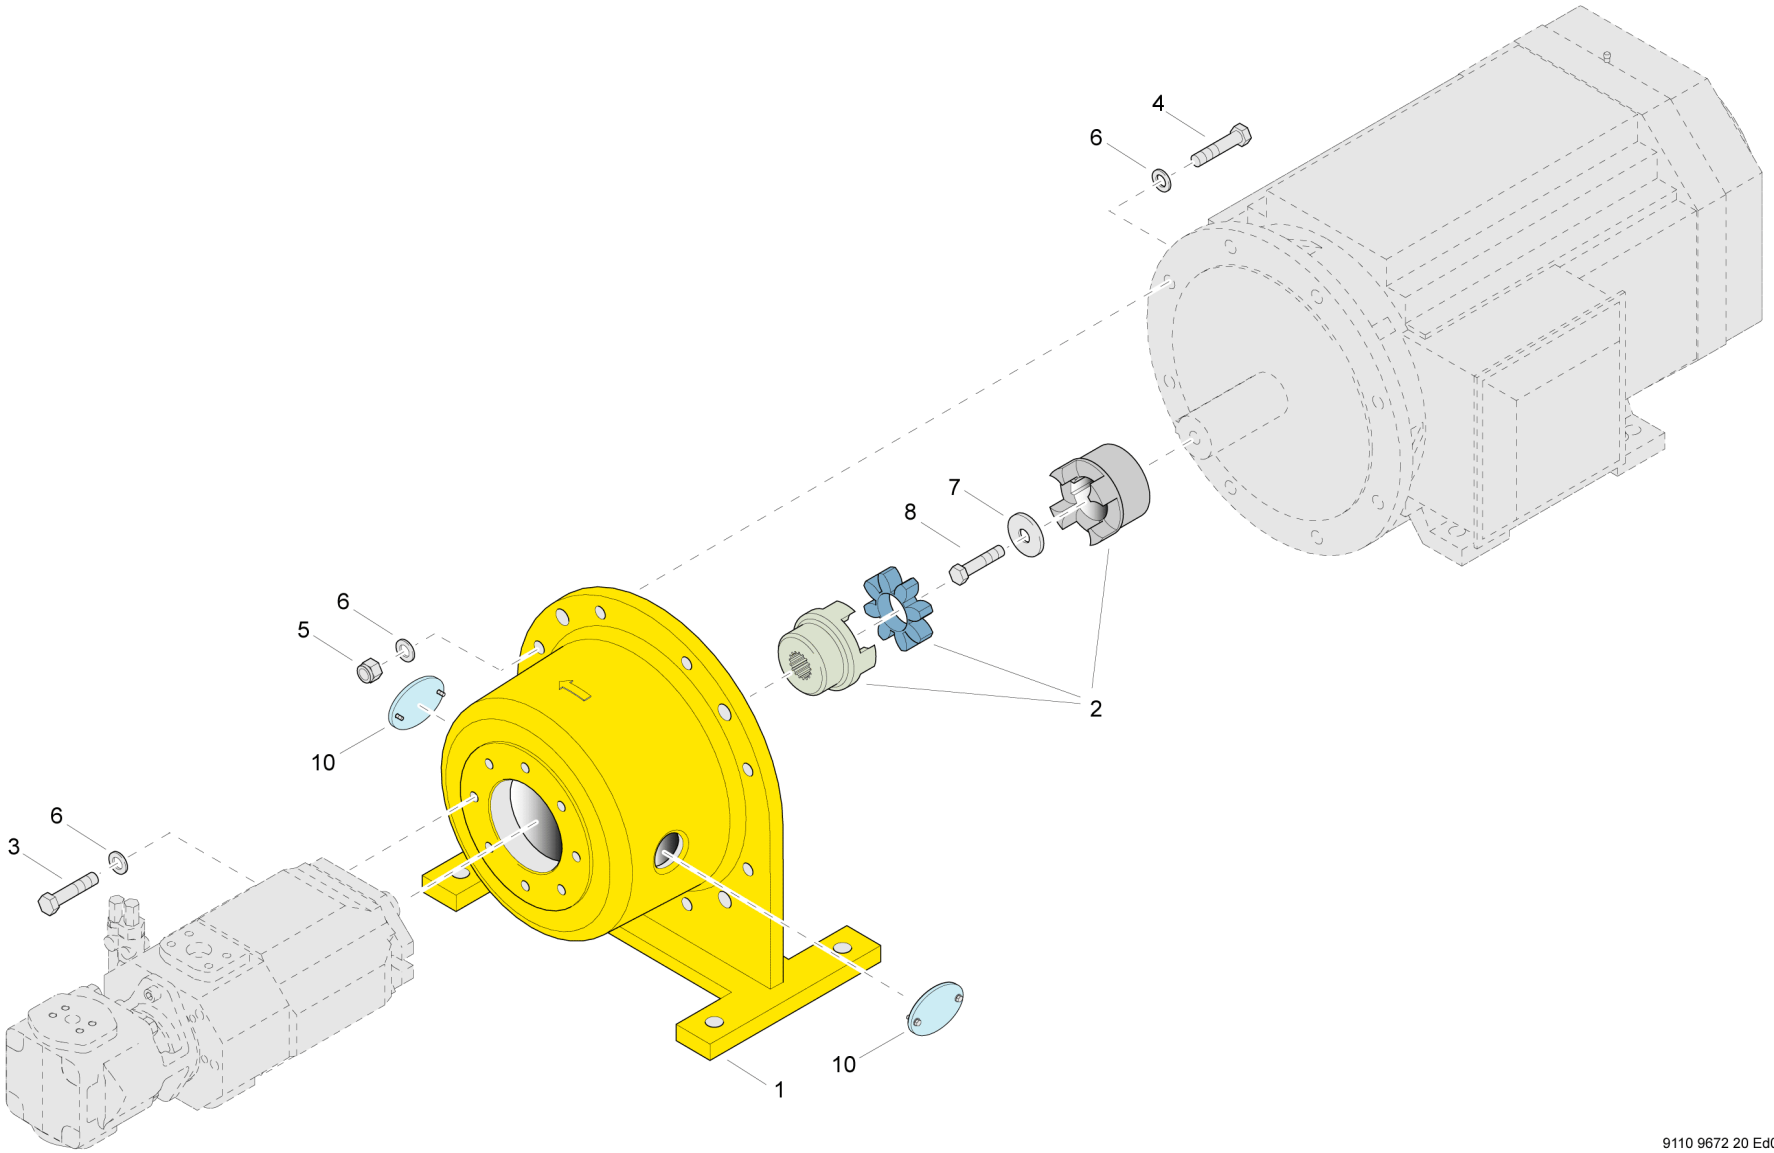


9110 9672 20 Ed00

B0049672

COUPLING SET / KOPPLINGSSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 9672 00	1	CLUTCH CASE	KOPPLINGSHUS		
2	9110 8940 02	1	SHAFT COUPLING	AXELKOPPLING	Page 97	
3	0147 1478 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 45 - 8.8 FZB
4	0147 1484 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 75 - 8.8 FZB
5	0291 1128 25	8	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
6	0301 2378 00	18	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
7	9110 8060 04	1	WASHER	BRICKA		DIA 50/12 X 6
8	0144 3326 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		UNC 7/16 X 32 - 8.8 FZB
9	–	1	COVER SET	TÄCKLOCKSATS	Page 99	

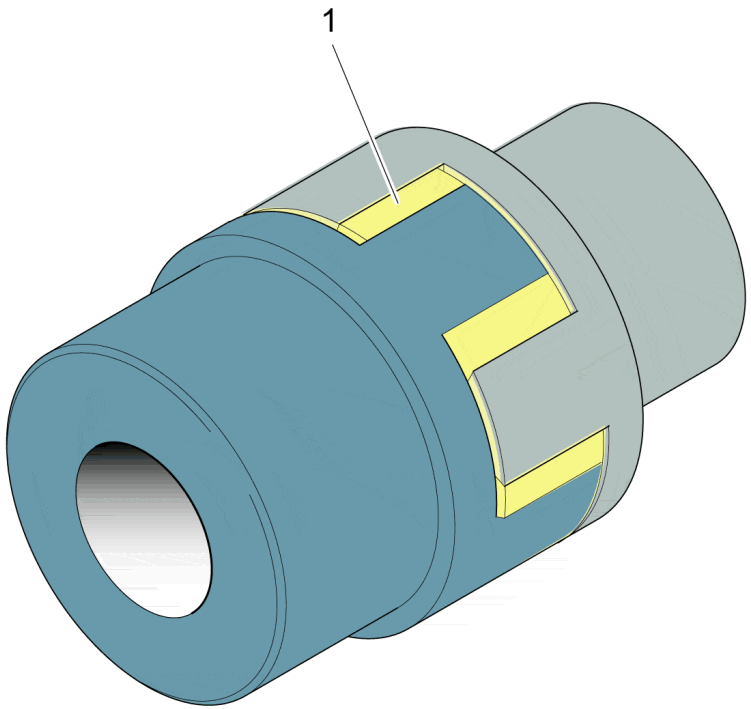


1250 0105 96

B0011855

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3177 0013 01	1	DISK	SKIVA		

COVER SET / TÄCKLOCKSATS

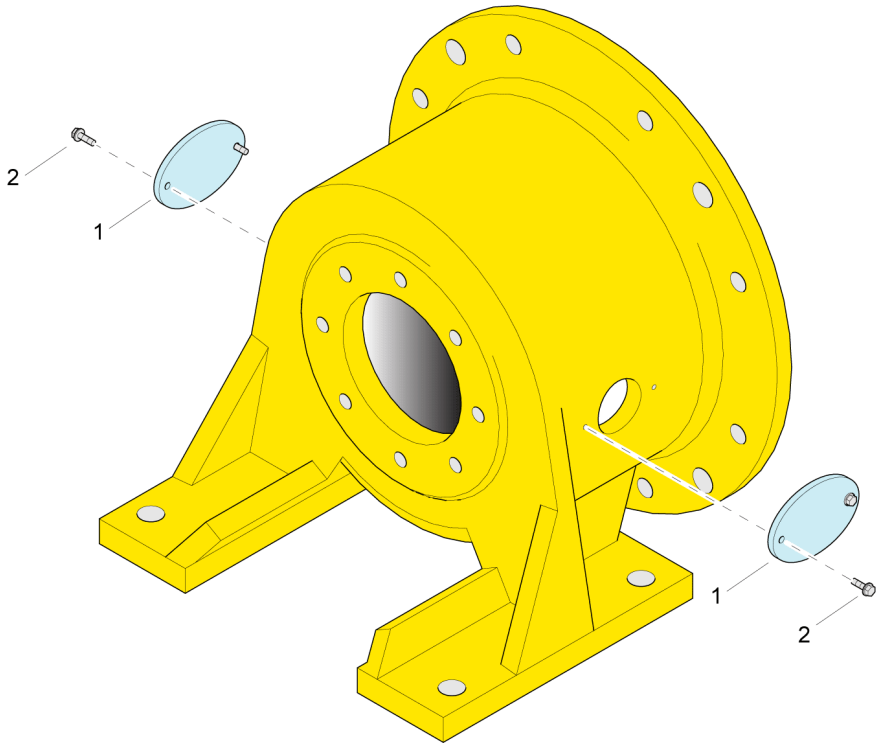

9111 4169 70 Ed01


B0049629

COVER SET / TÄCKLOCKSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9111 4169 71	2	PLASTIC SHEET	PLASTSKIVA		
2	0226 0306 00	4	TAPPING SCREW	GÄNGANDE SKRUV		M6SF M 5 X 16 - 8.8 FZB M6SF M 5 X 16 - 8.8 FZB

HYDR. SYSTEM / HYDRAULSYSTEM


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
300	9106 1609 64	1	HYDR. SYSTEM	HYDRAULSYSTEM	Page 103	RIG SYSTEM
301	9106 1509 11	2	HYDR. SYSTEM	HYDRAULSYSTEM	Page 126	DRILLING SYSTEM
302	9106 1490 30	1	MANOMETERHOLDER	MANOMETERHÅLL.		
310	–	1	HOSE SET	SLANGSATS	Page 149	
400	9106 1609 96	1	HYD.SET REEL	HYD.SATS VINDA	Page 157	DUAL COMMAND 2 REELS
440	9106 1609 60	1	HYDRAULIC SET	HYDRAULSATS	Page 173	PROTECTION ROOF
900	–	1	HOSE FRAME SET	SLANGHÅLLARSATS		

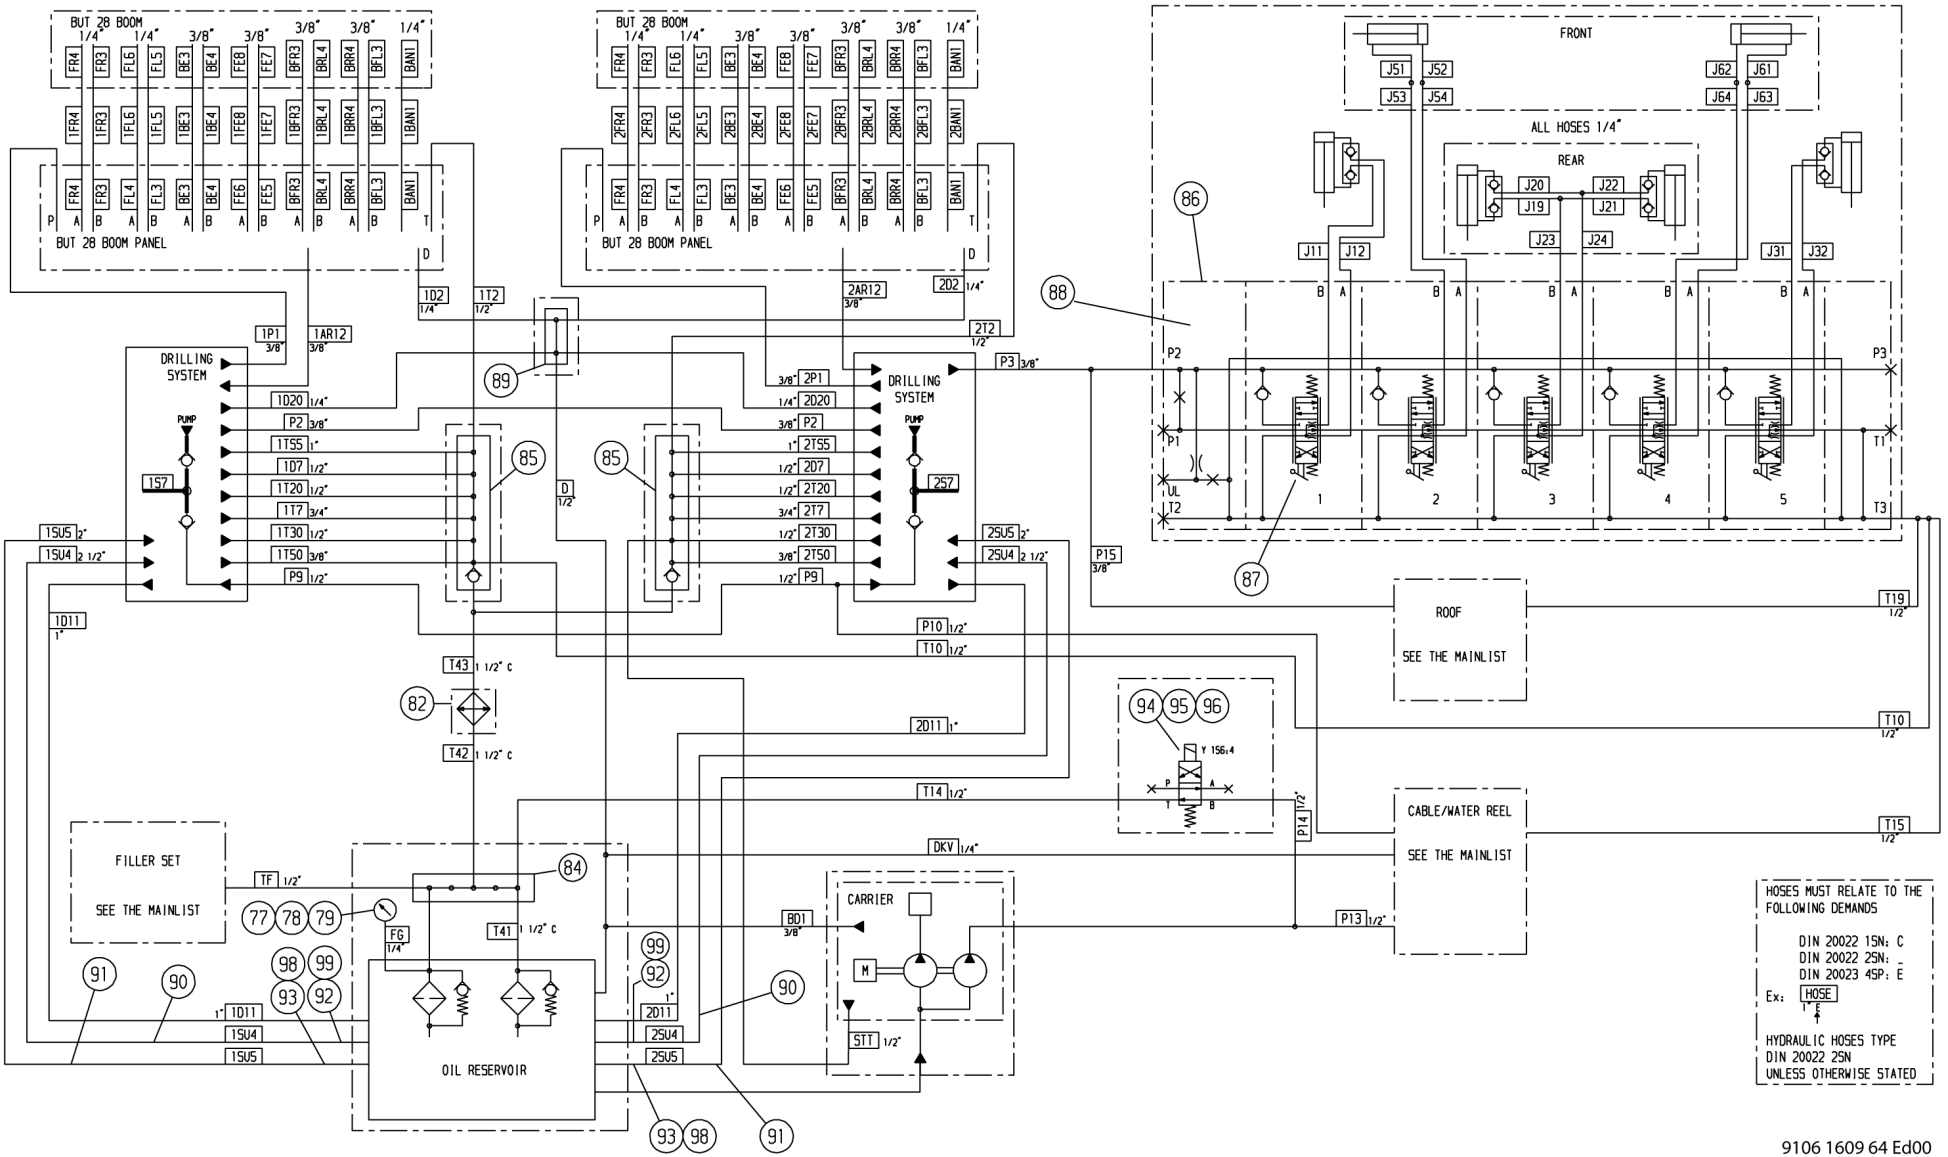

9106 1609 64 Ed00

B0027424


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
77	0872 1000 24	1	MANOMETER	MANOMETER		WIKA:9327939/6 BAR
78	3217 6218 00	1	NIPPLE	NIPPEL		UNF 7/16 - UNF 9/16
79	3216 7390 00	1	SYMBOL PLATE	SYMBOLSKYLT		
82	9106 1608 62	1	OIL COOLER	OLJEKYLARE		
84	9106 1264 09	1	CONNECTING PIPE	ANSLUTNINGSRÖR		
85	3176 2935 10	2	RETURN BLOCK	RETURBLOCK	Page 105	INCL. CHECK VALVE
86	3128 2090 74	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 107	
87	3128 2091 69	5	LEVER SET	SPAKSATS		
88	3176 7570 00	1	PLATE	SKYLT		
89	9106 1077 76	1	COLLECT. BLOCK	SAMLINGSBLOCK		
90	9106 0658 83	2	SUCT.CONNECTION	SUGANSLUTNING	Page 115	
91	9106 0658 52	2	SUCT.CONNECTION	SUGANSLUTNING	Page 117	
92	9106 0658 85	2	SUCT.CONNECTION	SUGANSLUTNING	Page 119	
93	9106 0658 73	2	SUCT.CONNECTION	SUGANSLUTNING	Page 121	
94	3177 3092 88	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 123	
95	3177 3077 00	1	ASSEMBLY PLATE	MONT.PLATTA		
96	0211 1215 03	4	SCREW	SKRUV		MC6S M 5 X 50 - 8.8 FZB
98	3217 9504 01	1.80M	HOSE	SLANG		2 INCH HOSE
99	3217 9504 00	1.20M	HOSE	SLANG		

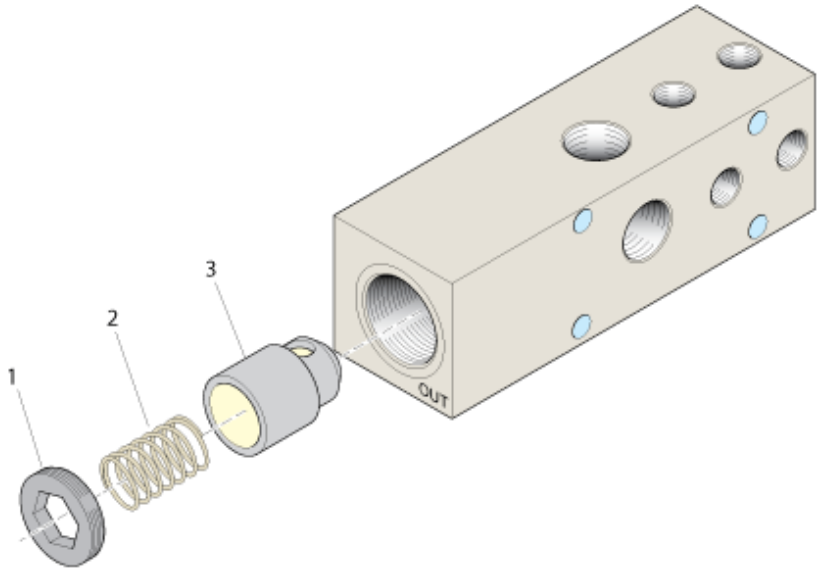

1250 0051 94

RETURN BLOCK / RETURBLOCK 3176 2935 10 INCL. CHECK VALVE


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9106 1312 00	1	SPARE PARTS SET	RESERVDELSSATS		
1	–	1	RETAINER	FASTHÅLLARE		PART OF SPARE PARTS SET
2	–	1	SPRING	FJÄDER		PART OF SPARE PARTS SET
3	–	1	POPPET VALVE	SÄTESVENTIL		

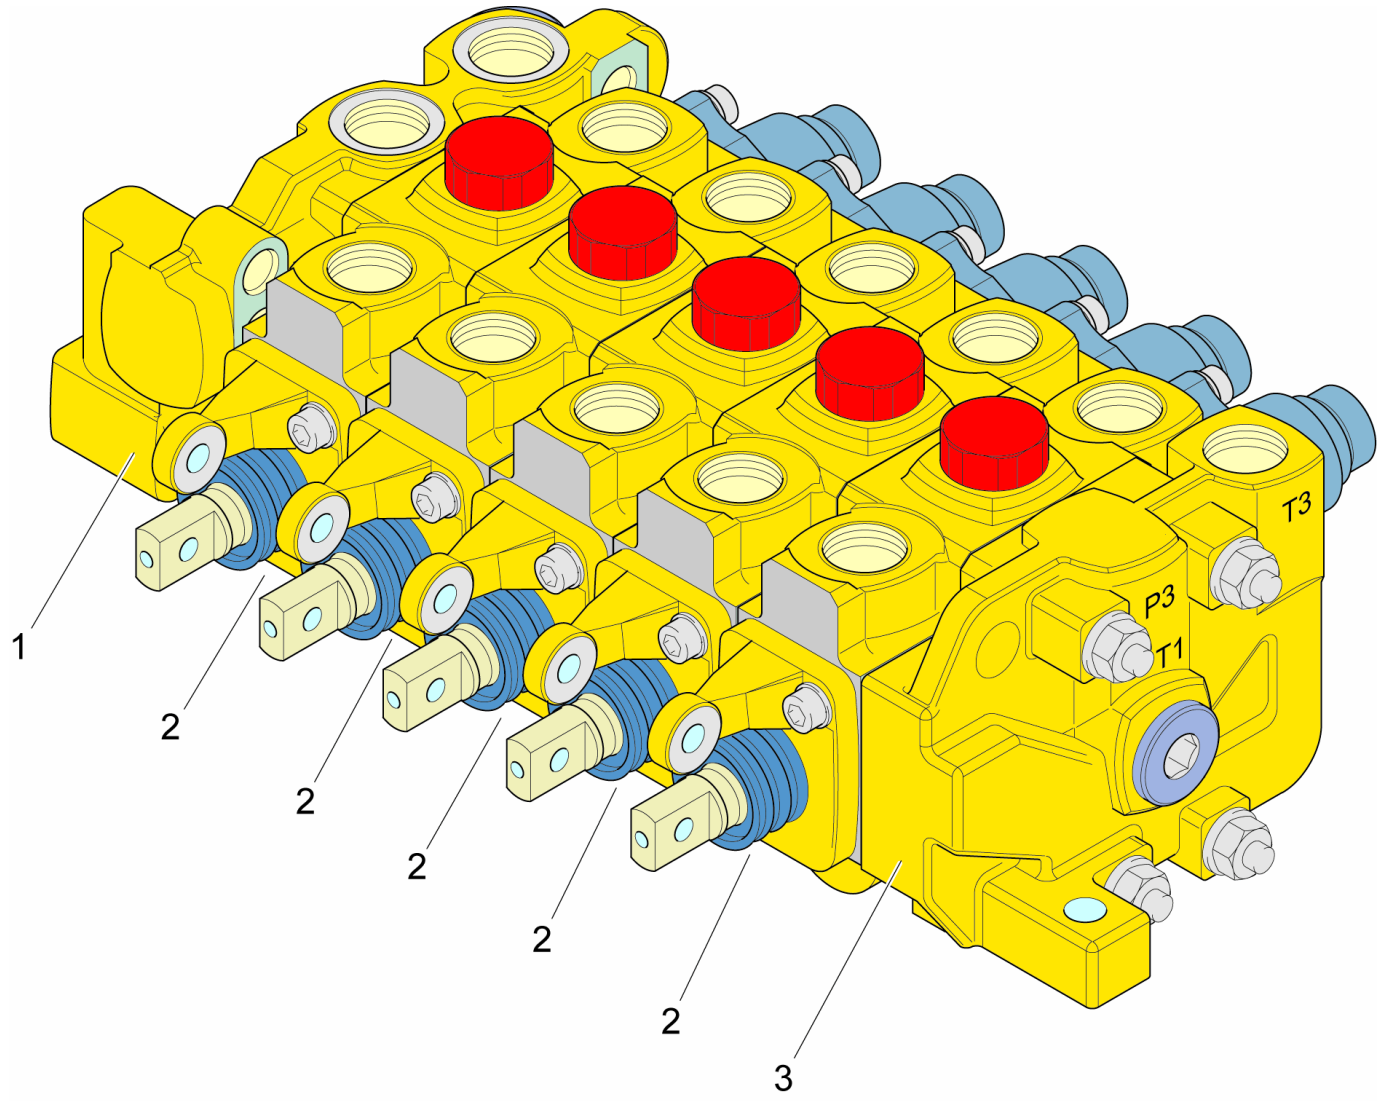

1250 0164 60

B0032277


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 2091 01	1	INLET SECTION	INLOPPSSEKTION	Page 109	
2	3128 2091 38	5	SPOOL VALVE	SPOLVENTIL	Page 111	
3	3128 2091 39	1	OUTLET SECTION	UTLOPPSSEKTION	Page 113	

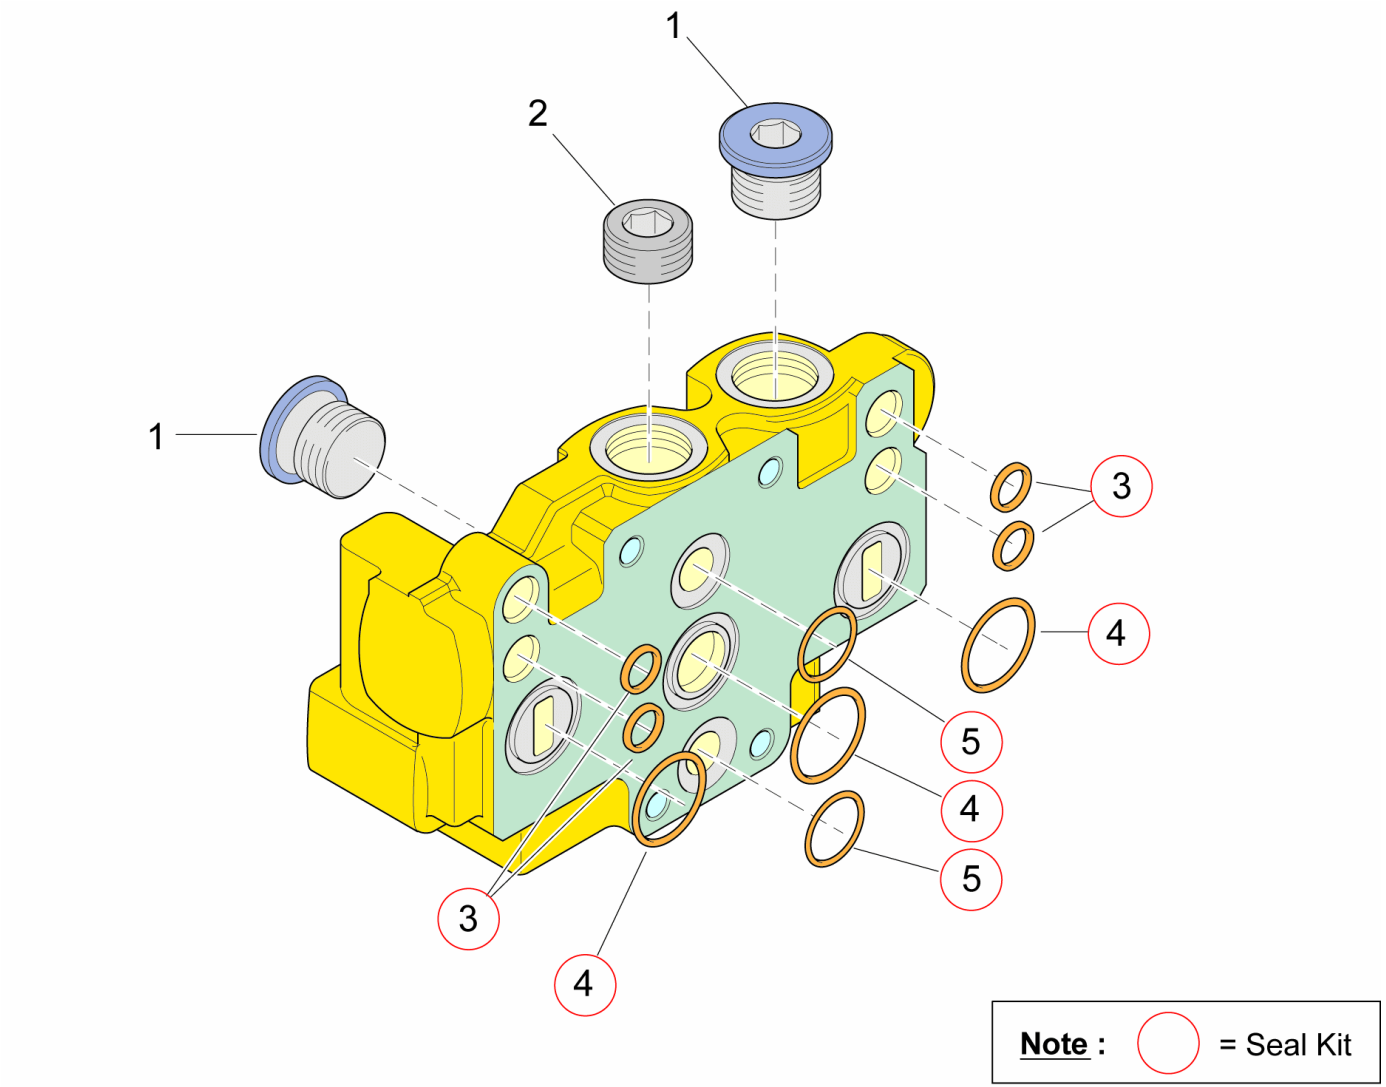

1250 0162 27

B0032231


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 95	1	SEAL KIT	TÄTNINGSSATS		POS. 3,4,5
1	0686 6442 07	2	PLUG	PROPP		VSTI G 1/4-ED
2	3128 2090 76	1	PLUG	PLUGG		

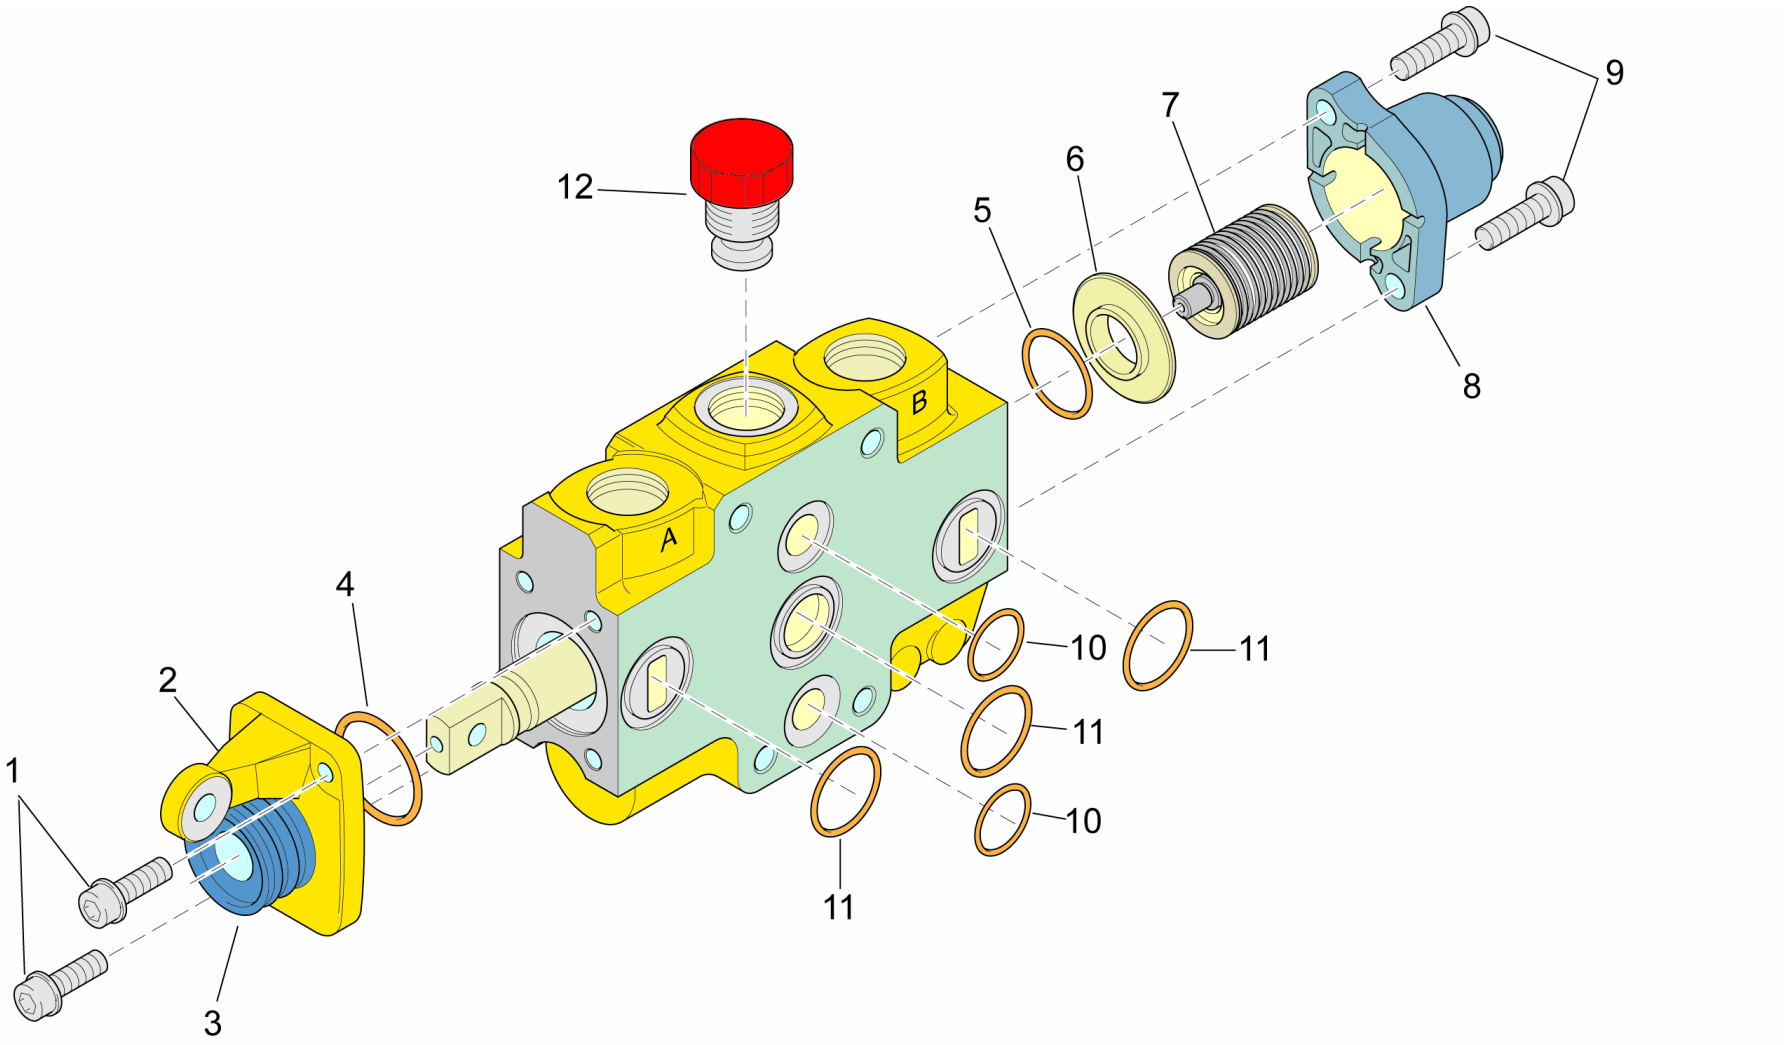

1250 0164 59

B0032275


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 95	1	SEAL KIT	TÄTNINGSSATS		POS. 10,11
	3222 3264 98	1	LEVER HOLDER	SPAKHÅLLARE		POS. 1,2,3
	3222 3264 99	1	ACTUATOR	STÄLLDON		POS. 5,6,8,9
7	3222 3265 01	1	SPRING	FJÄDER		
12	3128 2091 40	1	PLUG	PLUGG		

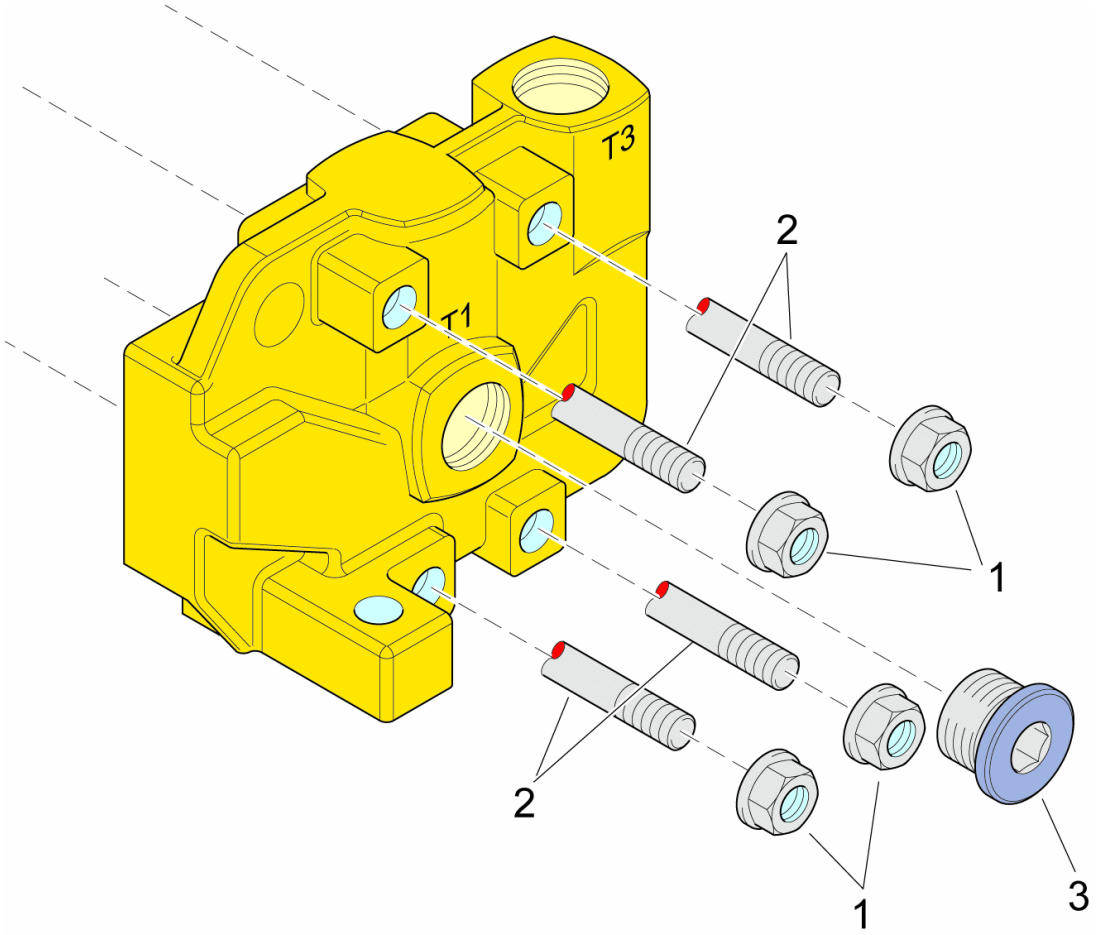

1250 0162 30

B0032233

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 41	1	TIE ROD KIT	STYRSTAGSSATS		POS.1,2
3	0686 6442 07	1	PLUG	PROPP		VSTI G 1/4-ED

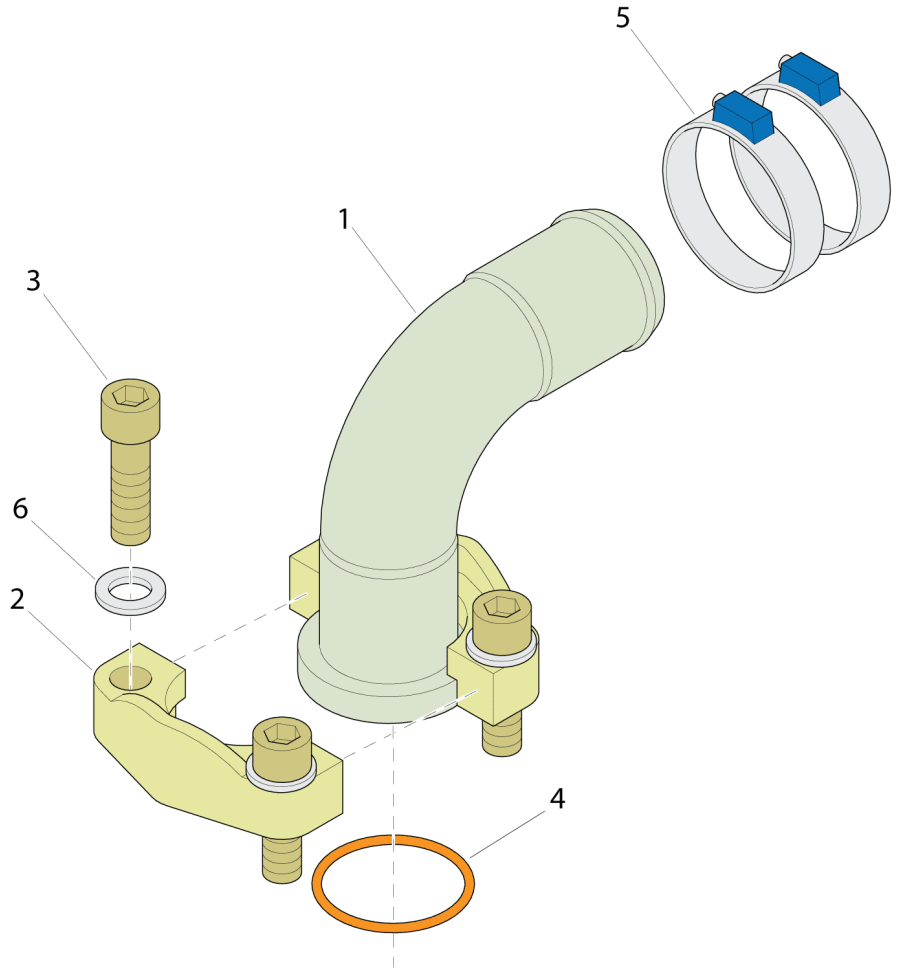


9106 0658 83 Ed01

B0048198

SUCT.CONNECTION / SUGANSLUTNING 9106 0658 83

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 8924 00	1	HOSE NIPPLE	SLANGNIPPEL		
2	0638 0547 00	2	FLANGE HALF	FLÄNSHALVA		63 X 84,94 SAE 2 1/2 P172 ZINC PLATED
3	0211 5365 00	4	SCREW	SKRUV		UNC 1/2 X 38 - 12.9
4	0663 9203 00	1	O-RING	O-RING		69,44X 3,53 70 SHORE
5	0347 6100 04	2	HOSE CLIP	SLANGKLÄMMA		70 - 89
6	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB

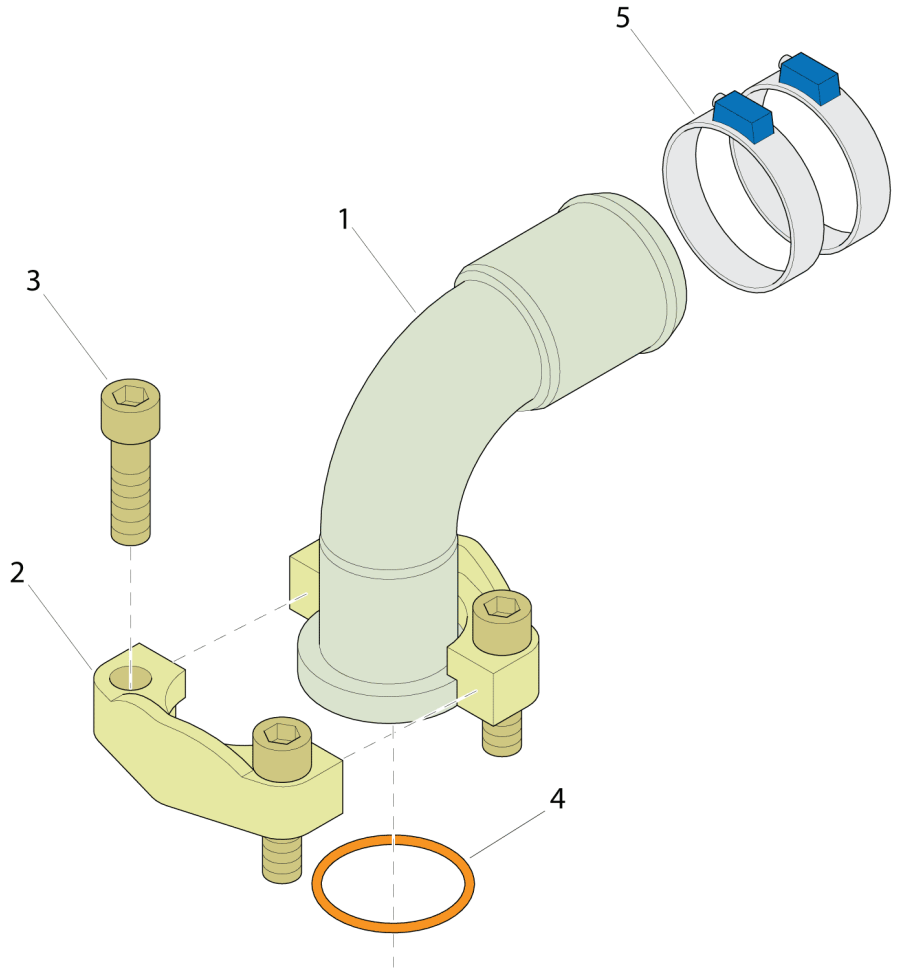


9106 0658 52 Ed00

B0048175

SUCT.CONNECTION / SUGANSLUTNING 9106 0658 52


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 7592 10	1	HOSE NIPPLE	SLANGNIPPEL		90 DEGREE BEND
2	3176 7922 00	2	FLANGE HALF	FLÄNSHALVA		38 61,09
3	0144 3363 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		UNC 1/2 X 32 - 8.8 FZB
4	0663 9197 01	1	O-RING	O-RING		47,22X 3,53 90 SHORE
5	0347 6113 00	2	HOSE CLIP	SLANGKLÄMMA		51 - 65 FZB
6	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB

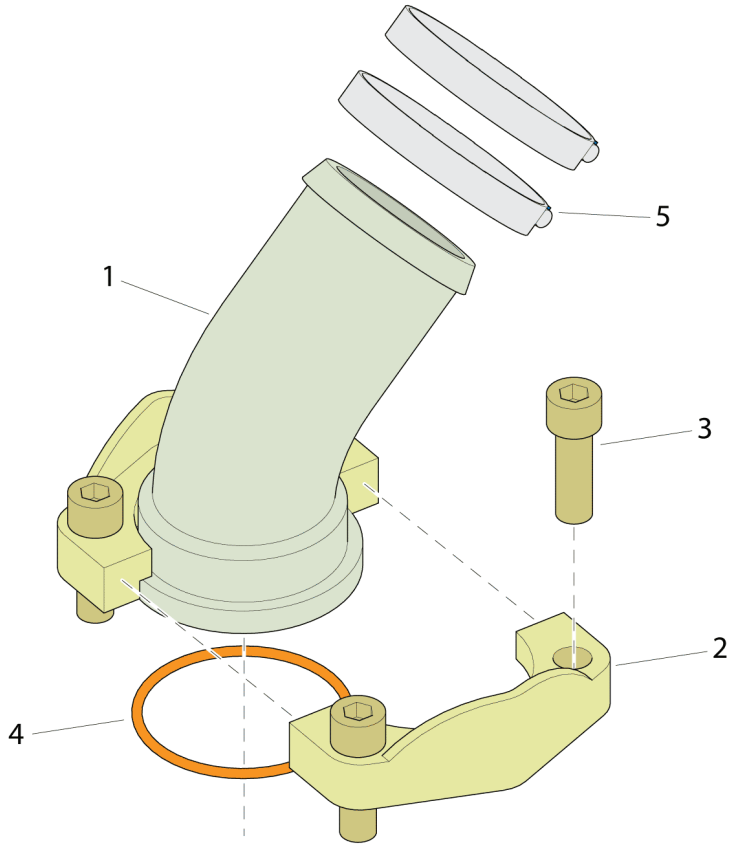

9106 0658 85 Ed00

SUCT.CONNECTION / SUGANSLUTNING 9106 0658 85

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 8180 00	1	HOSE NIPPLE	SLANGNIPPEL		
2	0638 0547 00	2	FLANGE HALF	FLÄNSHALVA		63 X 84,94 SAE 2 1/2 P172 ZINC PLATED
3	0211 5365 00	4	SCREW	SKRUV		UNC 1/2 X 38 - 12.9
4	0663 9203 00	1	O-RING	O-RING		69,44X 3,53 70 SHORE
5	0347 6100 04	2	HOSE CLIP	SLANGKLÄMMA		70 - 89

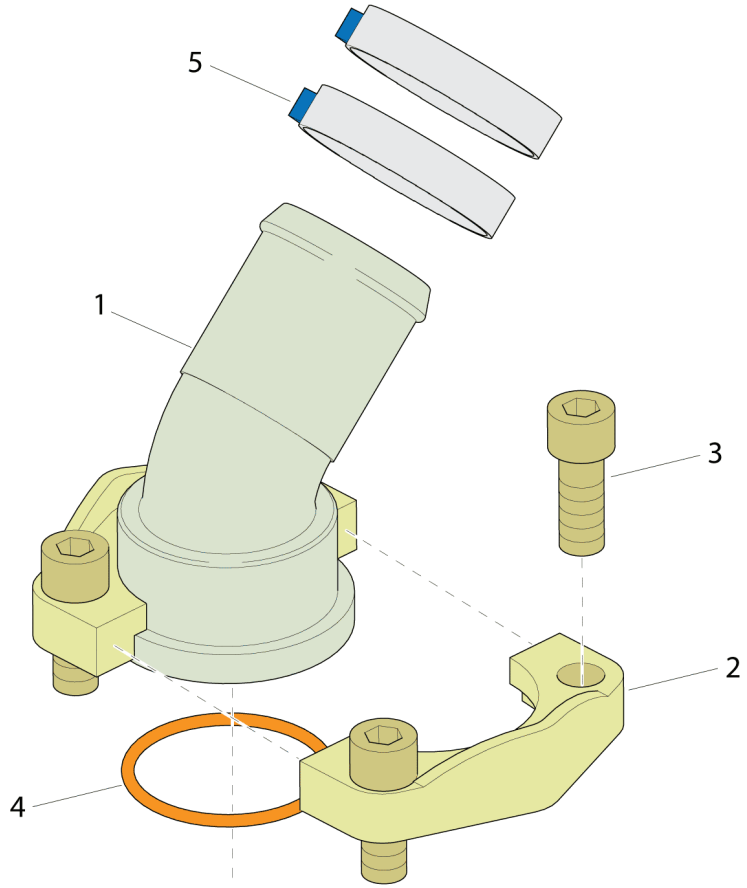


9106 0658 73 Ed00

B0048185

SUCT.CONNECTION / SUGANSLUTNING 9106 0658 73

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 7471 10	1	HOSE NIPPLE	SLANGNIPPEL		
2	0638 0545 00	2	FLANGE HALF	FLÄNSHALVA		51 72,24
3	0211 1962 94	4	SCREW	SKRUV		MC6S M 12 X 40 - 12.9
4	0663 9205 00	1	O-RING	O-RING		56,74X 3,53 70 SHORE
5	0347 6113 00	2	HOSE CLIP	SLANGKLÄMMA		51 - 65 FZB

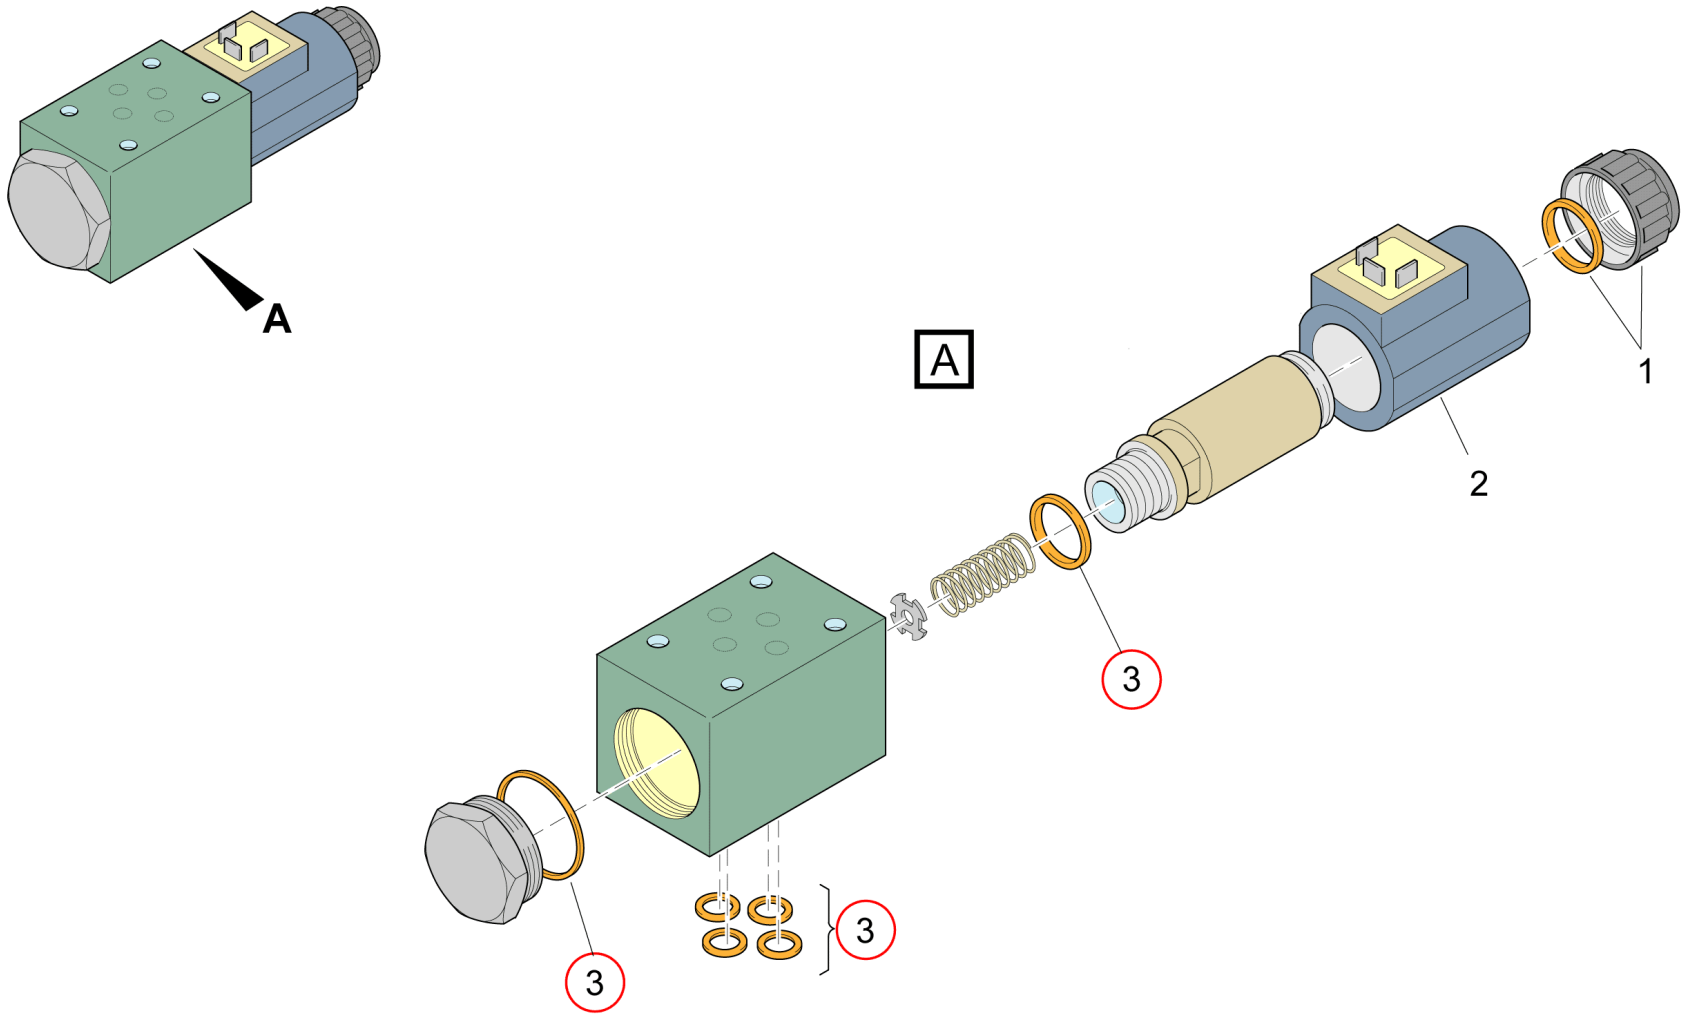


Note : ◯ = Seal Kit


1250 0162 84

B0042529

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3177 3092 57	1	NUT	MUTTER		
2	3177 3092 55	1	COIL	SPOLE		
3	3177 3092 56	1	SEAL KIT	TÄTNINGSSATS		


Fig. 1 of 2

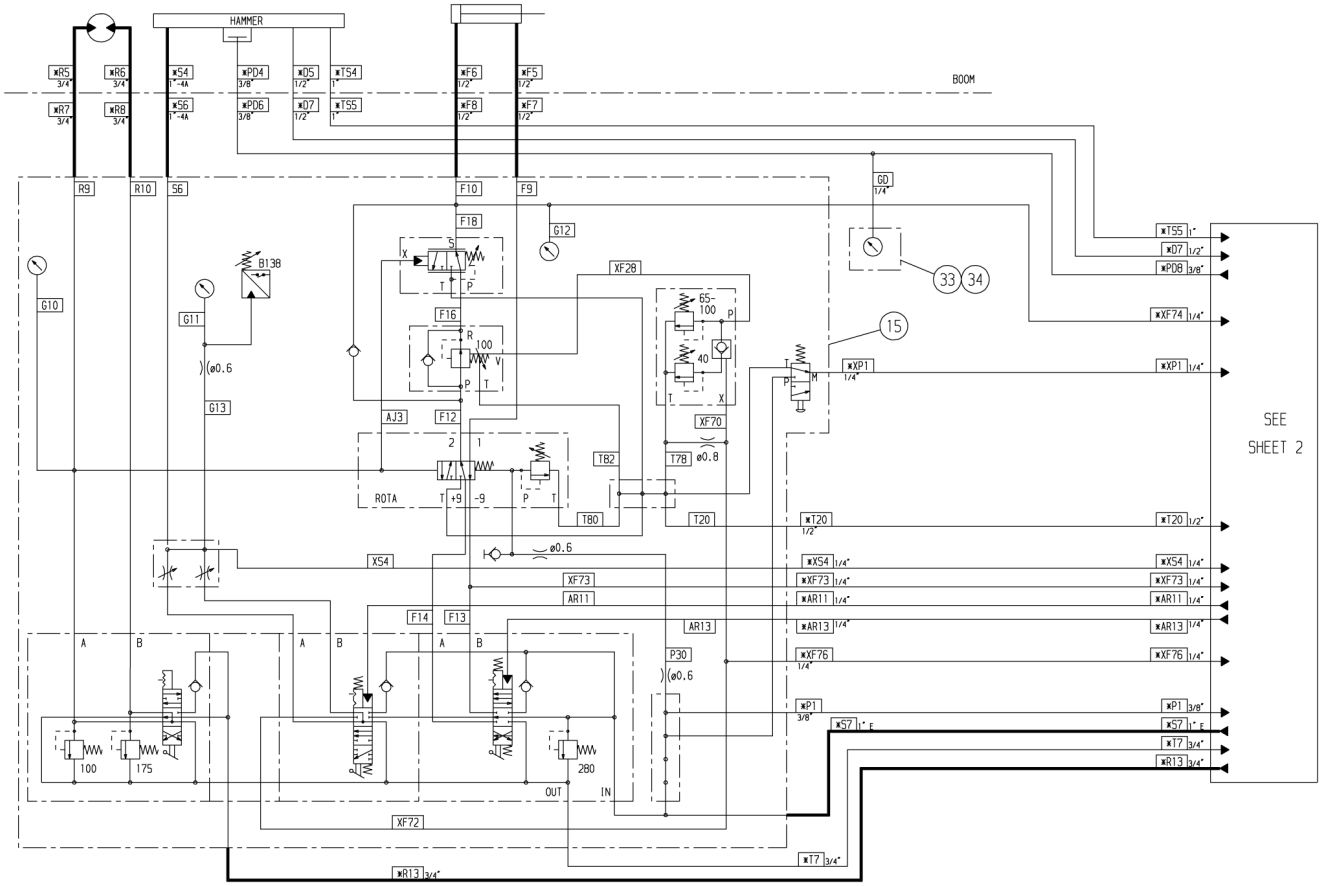
HAMMER
BOOM
R9
R10
S6
F10
F9
F18
G12
G10
G11
G13
B138
ø0.6
F16
100
XF28
65-100
40
15
33
34
AJ3
F12
ROTA
T80
T82
T78
ø0.8
XF70
T20
XS4
XF73
AR11
AR13
F14
F13
P30
100
175
280
OUT
IN
XF72
SEE SHEET 2
9106150911/1 08

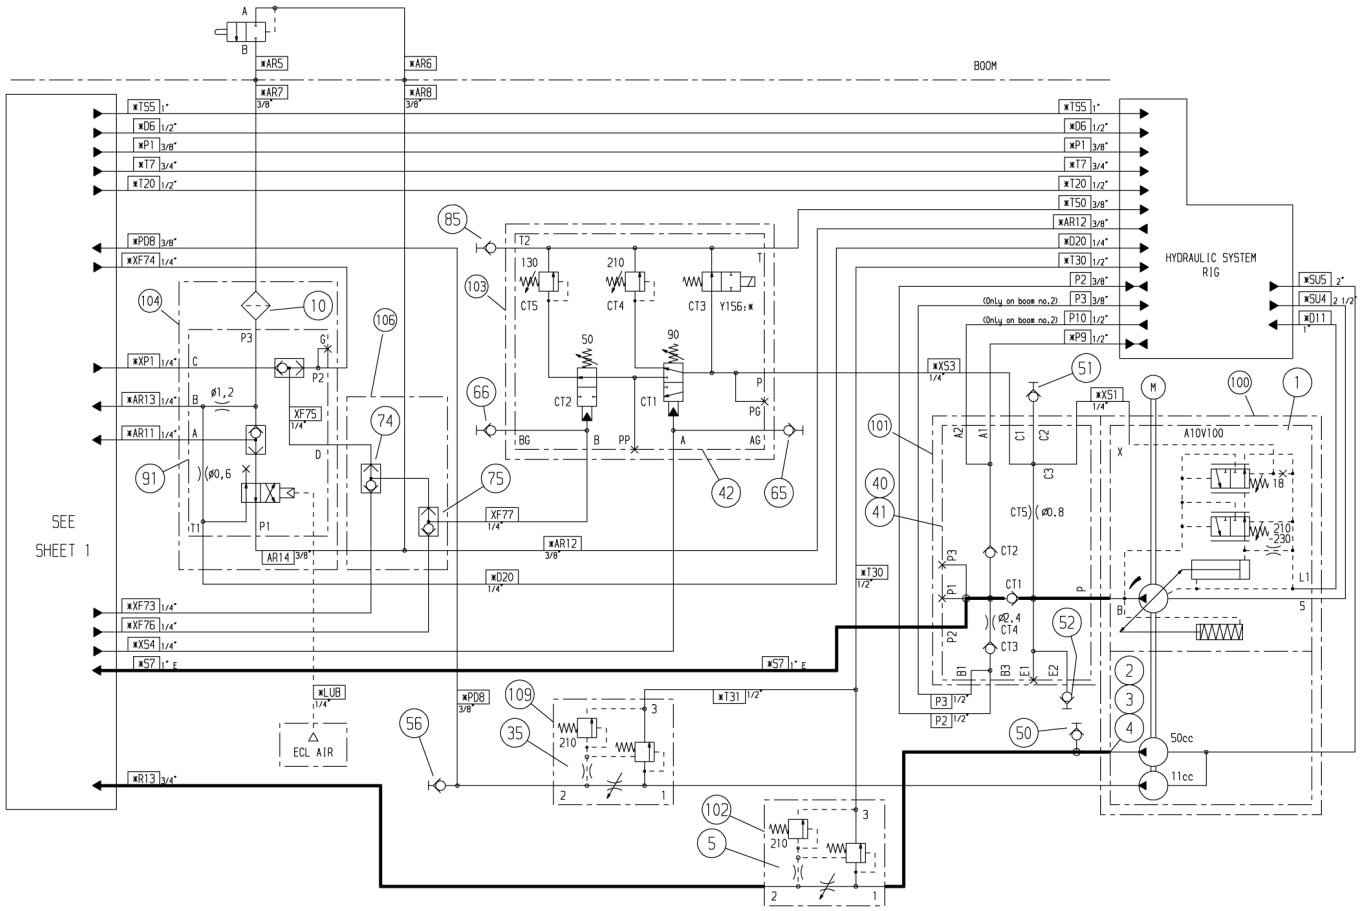

9106150911/2 12


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9553 66	1	HYDRAULIC PUMP	HYDRAULPUMP	Page 129	DEPL.100+50+11 CM3/R
2	3177 3073 06	1	SAE-FLANGE	SAE-FLÄNS		SAE 11/4' - R 1' INV.
3	0663 9191 01	1	O-RING	O-RING		37,69X 3,53 90 SHORE
4	0211 5328 00	4	SCREW	SKRUV		UNC 7/16 X 38 - 12.9
5	3214 7669 81	1	FLOW REGULATOR	FLÖDESREGULATOR	Page 139	
10	3217 8674 00	1	STRAINER	SIL		
33	3177 3032 00	1	PRESSURE GAUGE	TRYCKMÄTARE		WIKA 2748/63 0-250 BAR
34	3176 6126 00	1	PLATE	SKYLT		
35	3214 7669 81	1	FLOW REGULATOR	FLÖDESREGULATOR	Page 139	
40	0211 5379 00	4	HEX SOCK. SCREW	SEXKANTHÅLSKRUV		UNC 1/2 X 114
41	3217 8937 20	1	VALVE BLOCK	VENTILBLOCK	Page 141	
42	3217 8937 40	1	VALVE BLOCK	VENTILBLOCK	Page 143	
50	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
51	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
52	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
56	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
65	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
66	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
74	3176 8377 00	1	SHUTTLE VALVE	VÄXELVENTIL		RS 417-00-04 / R 1/4
75	3176 8377 00	1	SHUTTLE VALVE	VÄXELVENTIL		RS 417-00-04 / R 1/4
85	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
91	3217 9584 40	1	VALVE BLOCK	VENTILBLOCK	Page 145	DCS1800 PANEL

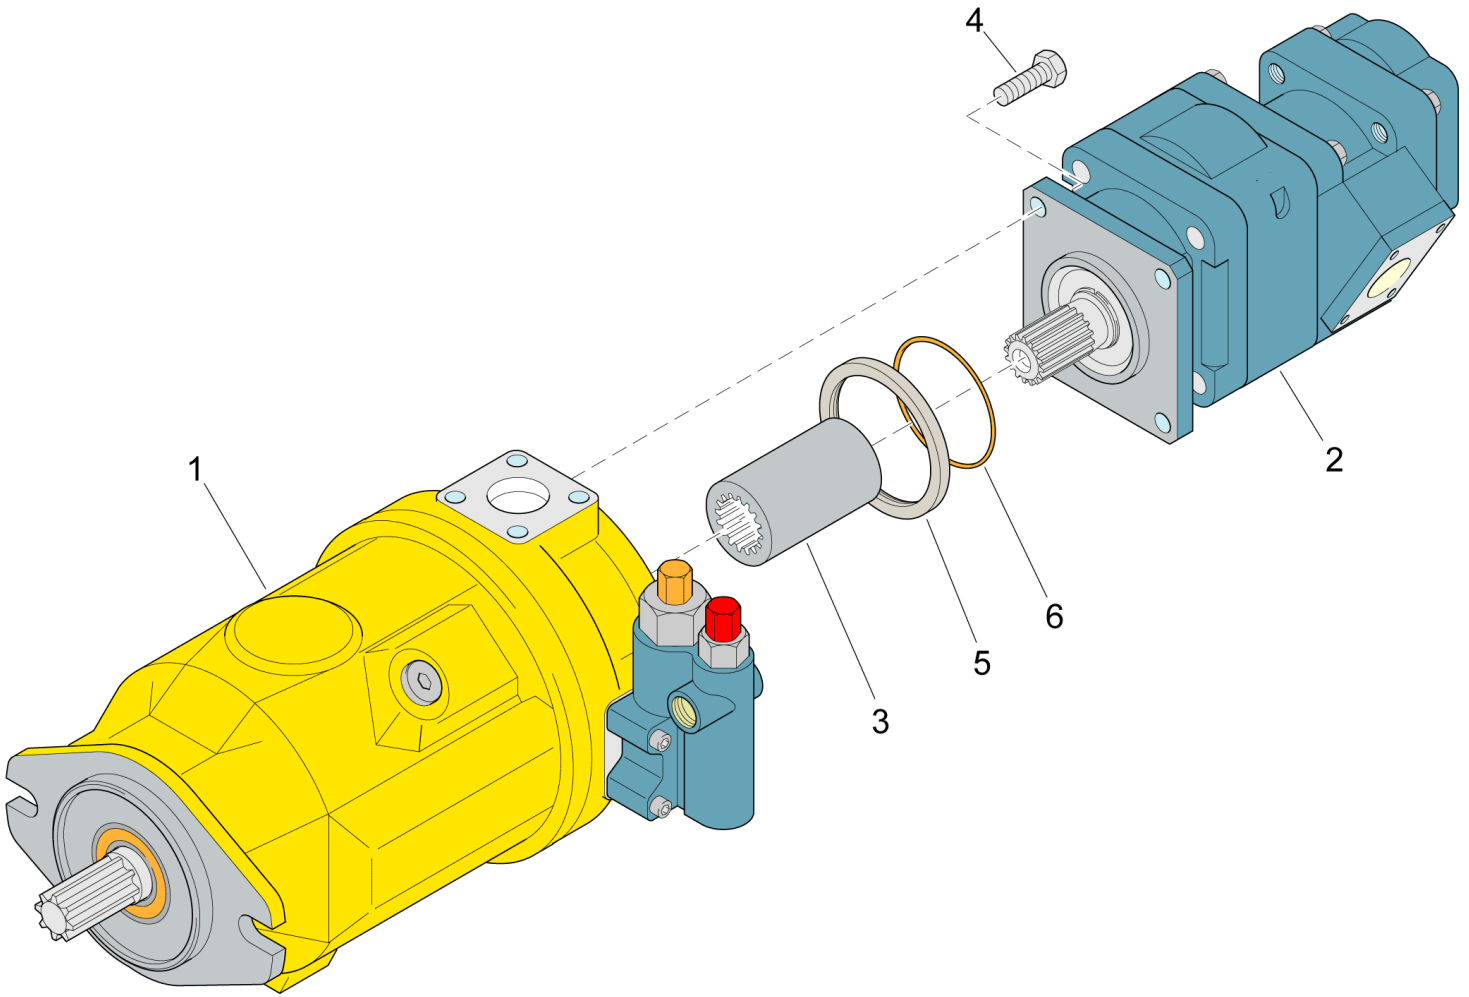


1250 0177 22

B0038075

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 8762 00	1	HYDRAULIC PUMP	HYDRAULPUMP	Page 131	A10VO 100 CC
2	3217 9554 10	1	HYDRAULIC PUMP	HYDRAULPUMP	Page 137	
3	3217 8762 03	1	SHAFT COUPLING	AXELKOPPLING		
4	0211 1960 84	2	SCREW	SKRUV		MC6S M 12 X 35 -12.9
5	3217 8525 02	1	INTERM. RING	MELLANRING		
6	0663 2103 56	1	O-RING	O-RING		102 X 2 70 SHORE 102 X2 70 SHORE

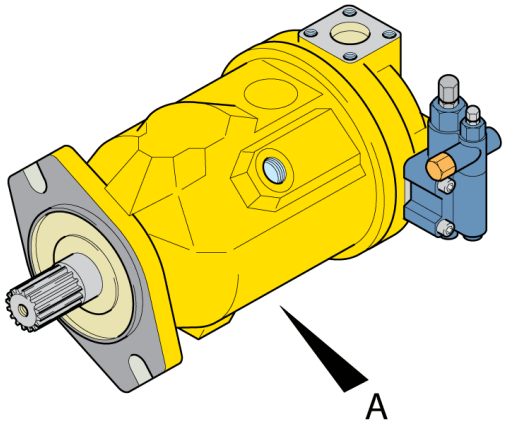


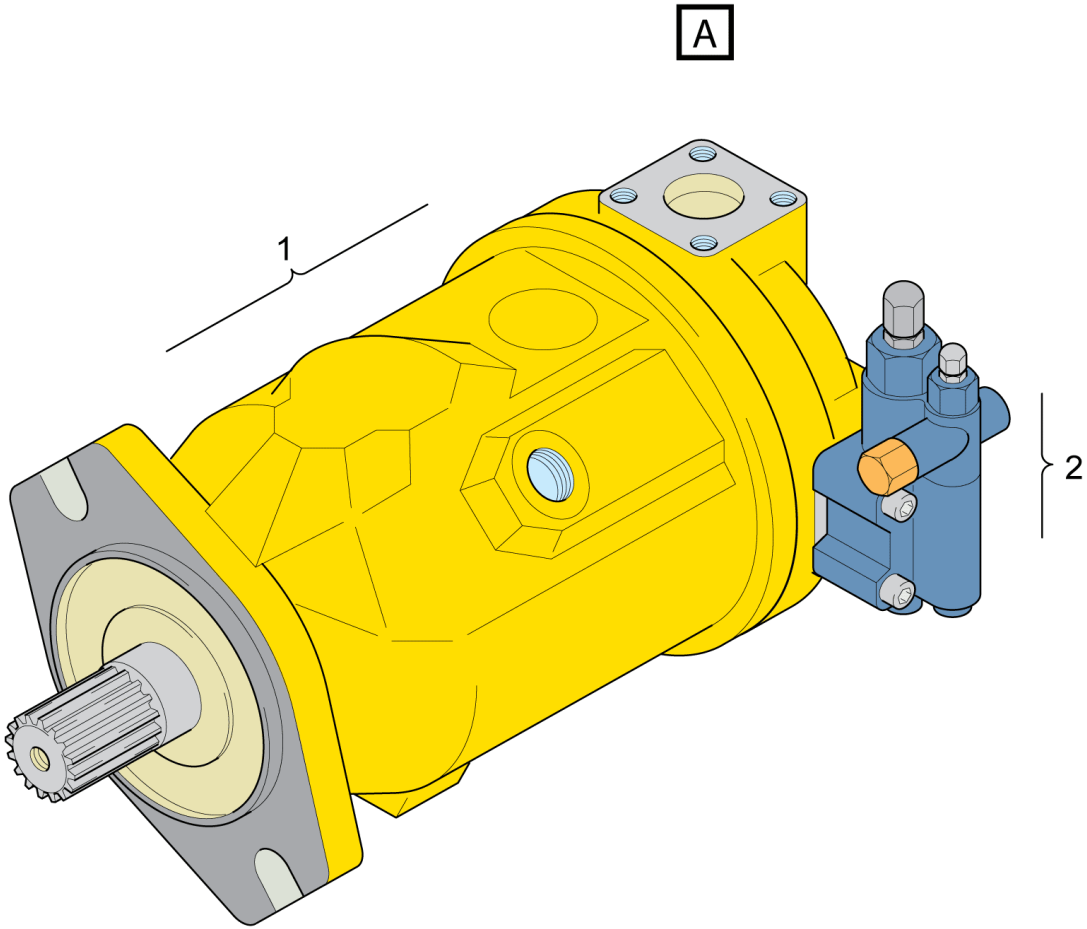

1250 0038 65

B0000141


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	PUMP	PUMP	Page 133	
2	3217 9203 02	1	PILOT VALVE	STYRVENTIL	Page 135	

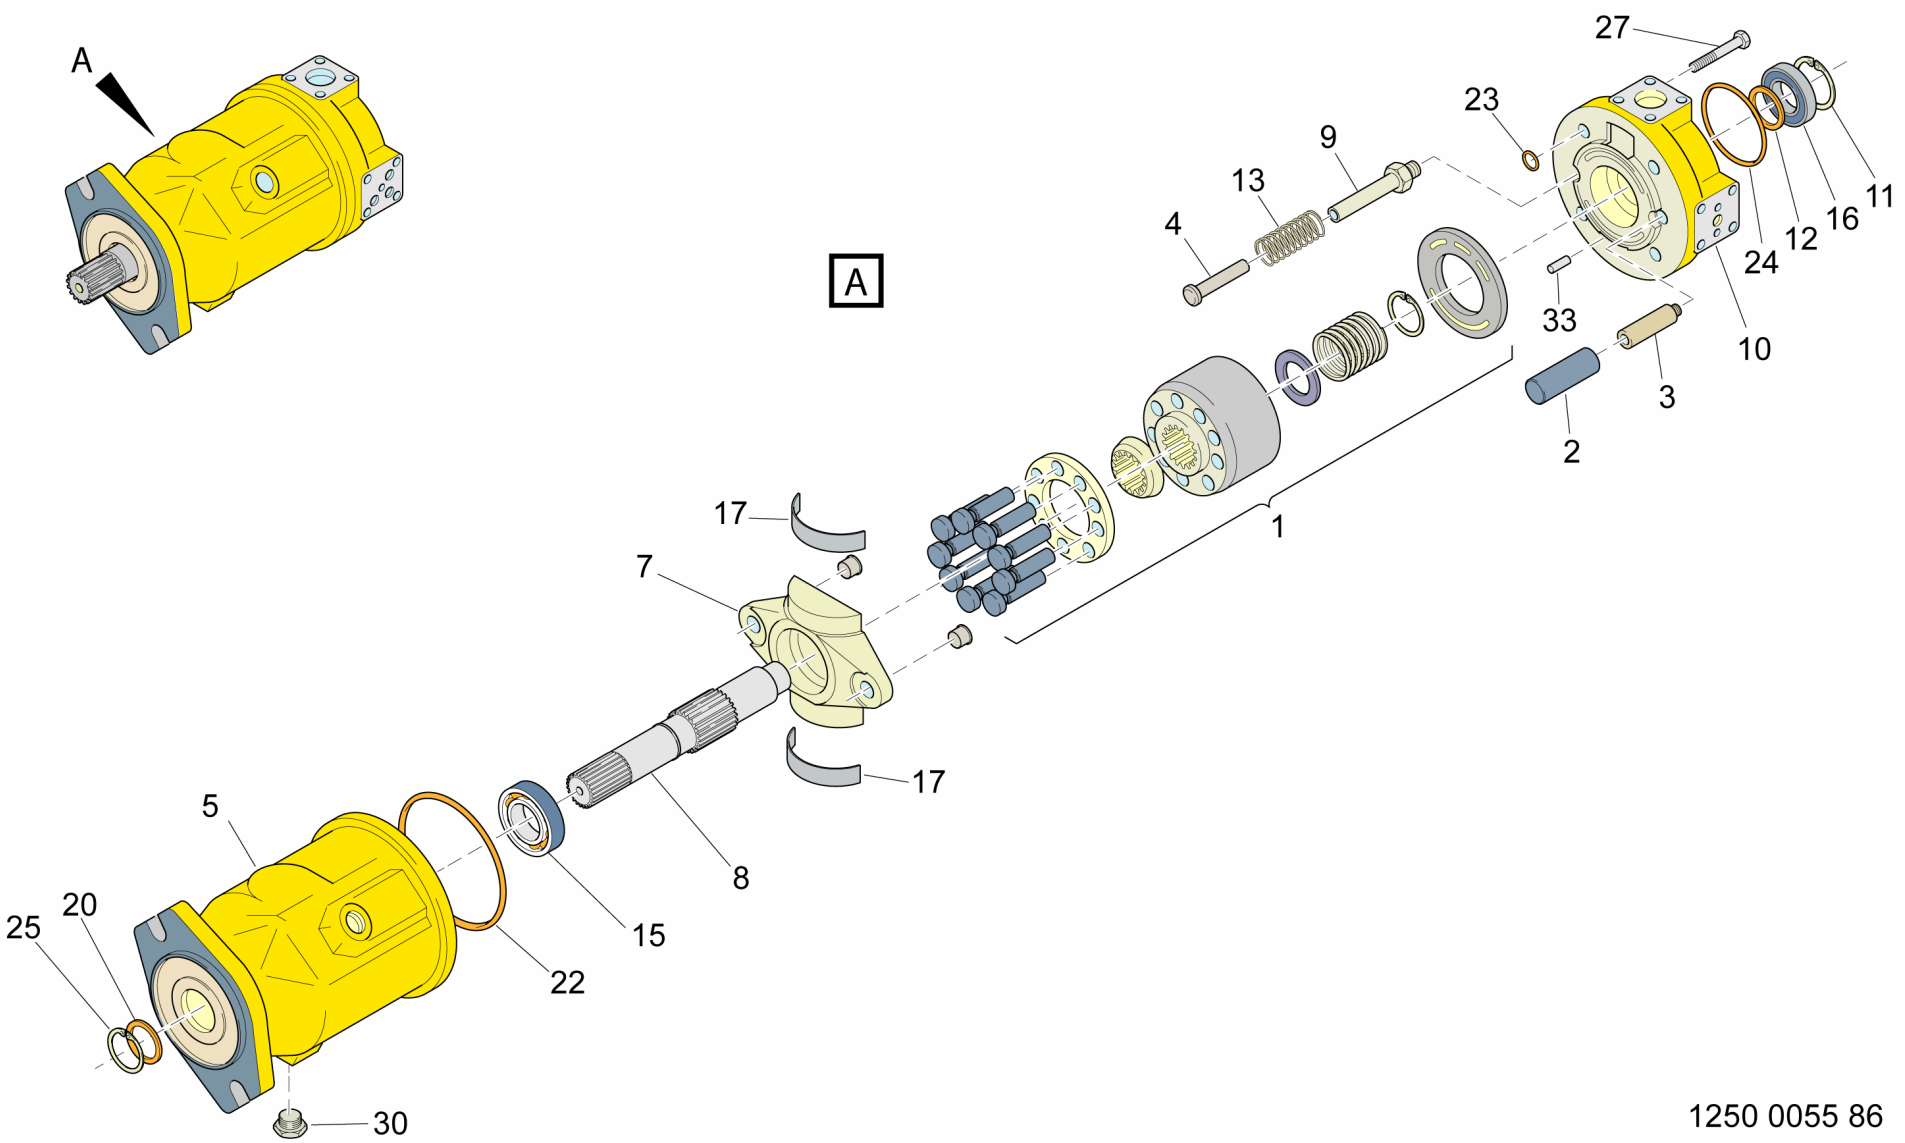

A
A
27
23
9
13
4
24
12
16
11
33
10
3
2
1
17
7
17
5
8
15
22
25
20
30
1250 0055 86

B0007788

PUMP / PUMP

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	3217 9206 82	1	SEAL KIT	TÄTNINGSSATS		INCL. REF 20, 22-24 + SEALING SET FOR PILOT VALVE
1	3217 9206 11	1	PUMP UNIT	PUMPENHET		
2	3217 9206 12	1	REG PISTON	REGLERKOLV		
3	–	1	PISTON GUIDE	KOLVSTYRNING		
4	3217 9206 14	1	PISTON	KOLV		
5	3217 9206 15	1	PUMP HOUSING	PUMPHUS		
6	–	1	CONNECT. PLATE	ANSLUTN.PLATTA		
7	3217 9206 48	1	CRADLE	VAGGA		
8	3217 9206 18	1	SHAFT	AXEL		
9	3217 9206 19	1	PISTON GUIDE	KOLVSTYRNING		
12	3217 9206 22	1	WASHER	BRICKA		
13	3217 9206 23	1	SPRING	FJÄDER		
15	3217 9206 25	1	ROLLER BEARING	RULLAGER		
16	3217 9206 26	1	ROLLER BEARING	RULLAGER		
17	3217 9206 27	2	BEARING PLATE	LAGERPLATTA		
20	3217 9206 49	1	SEAL	TÄTNING		
22	3217 9206 30	1	O-RING	O-RING		
23	0663 2105 31	4	O-RING	O-RING		19 X 2 70 SHORE
24	0663 2103 64	1	O-RING	O-RING		128 X 2 90 SHORE
25	3217 9206 50	1	LOCK RING	LÅSRING		
27	0211 1960 86	4	SCREW	SKRUV		MC6S M 16 X 45 - 10.9
28	0211 1477 03	2	SCREW	SKRUV		MC6S M 16 X 40 - 8.8 FZB
30	0686 9250 63	1	CAP	HUV		UN 1 1/6-12 PEHD
33	0101 2316 00	1	PIN	PINNE		CP 6M6 X 18 - 11 1650 06

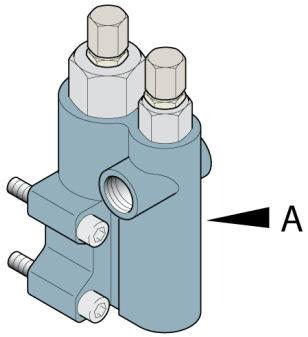


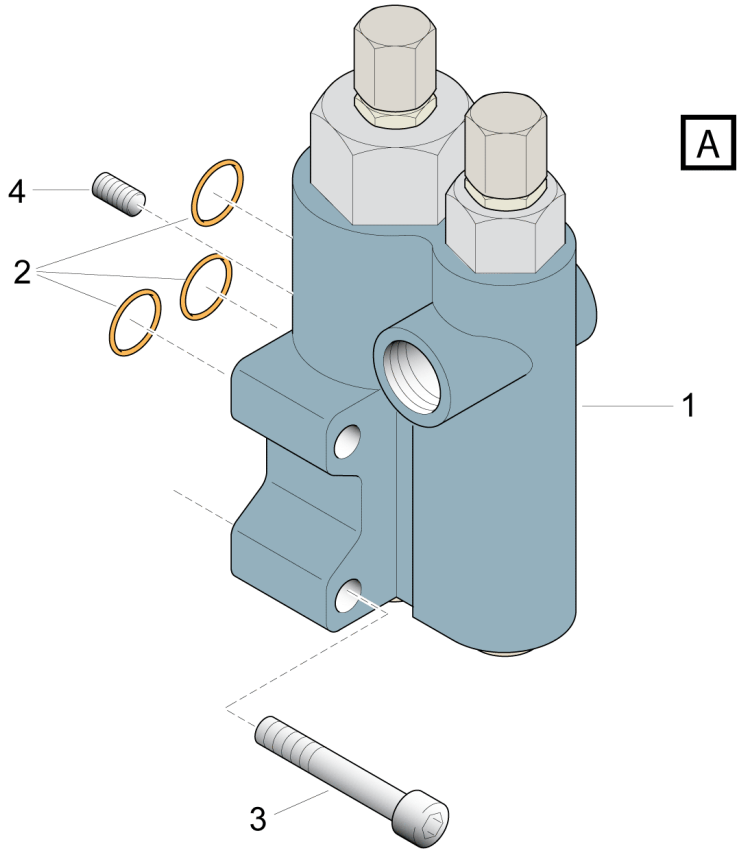

1250 0156 79


B0030981

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3218 2007 58	1	CONTROL VALVE	MANÖVERVENTIL		
2	3217 9203 59	3	O-RING	O-RING		
3	3218 2007 60	4	SCREW	SKRUV		
4	3217 9203 58	1	PLUG	PROPP		RX 705454-90542000716

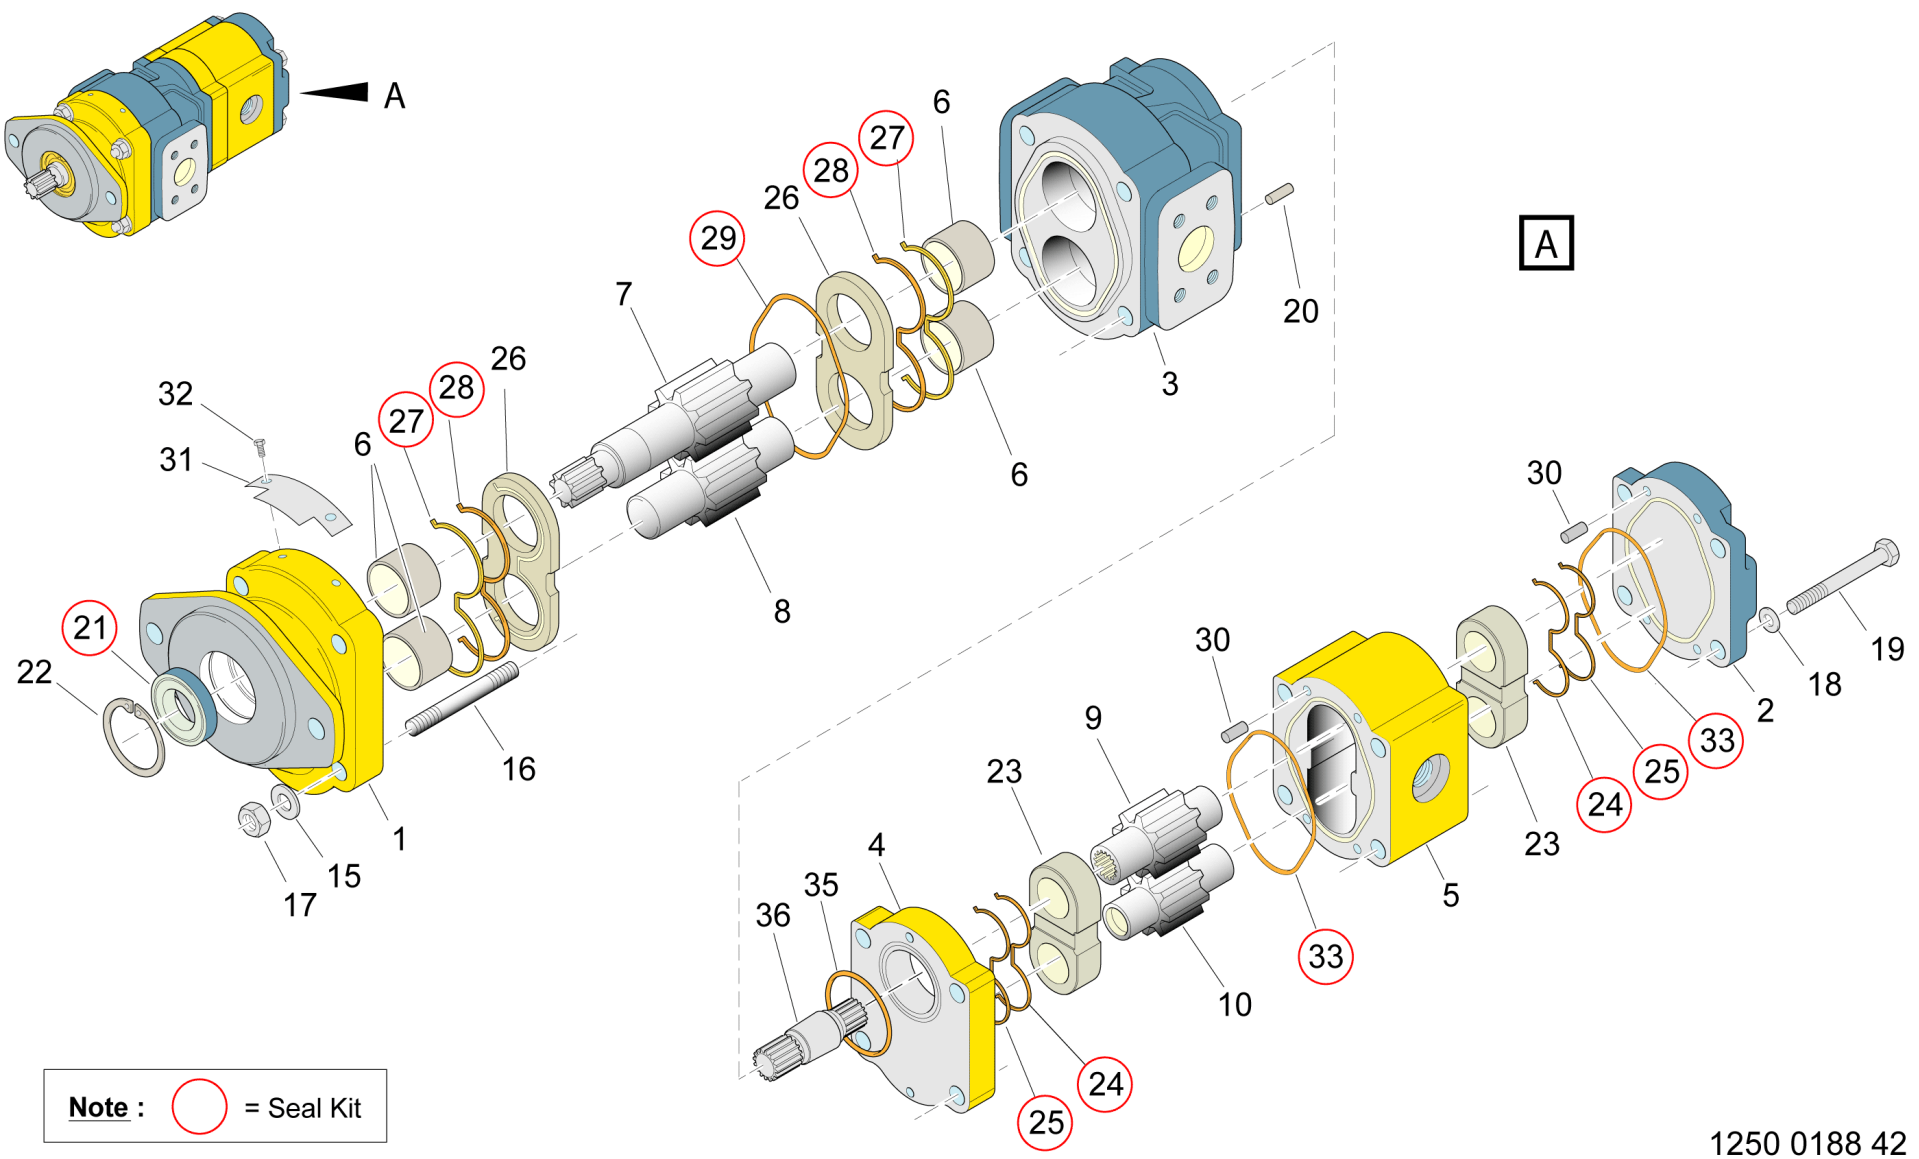
A
A
32
31
21
22
6
27
28
26
7
29
26
28
27
6
20
3
6
8
16
1
15
17
30
9
23
4
35
36
10
33
5
23
24
25
30
2
18
19
33
25
24
Note : = Seal Kit
1250 0188 42

B0039753


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 2878 84	1	SEAL KIT	TÄTNINGSSATS		POS.21, 24,25, 27-29, 33,35
1	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
2	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
3	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
4	–	1	SPACER	DISTANS		NOT SOLD SEPARATELY
5	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
6	–	4	GUIDE PIN	STYRSTIFT		NOT SOLD SEPARATELY
7	–	1	GEAR WHEEL	KUGGHJUL		NOT SOLD SEPARATELY
8	–	1	GEAR WHEEL	KUGGHJUL		NOT SOLD SEPARATELY
9	–	1	GEAR WHEEL	KUGGHJUL		NOT SOLD SEPARATELY
10	–	1	GEAR WHEEL	KUGGHJUL		NOT SOLD SEPARATELY
15	–	4	WASHER	BRICKA		NOT SOLD SEPARATELY
16	–	4	STUD	PINNBULT		NOT SOLD SEPARATELY
17	–	4	NUT	MUTTER		NOT SOLD SEPARATELY
18	–	4	WASHER	BRICKA		NOT SOLD SEPARATELY
19	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
20	–	1	GUIDE PIN	STYRSTIFT		NOT SOLD SEPARATELY
21	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
22	–	1	LOCK RING	LÅSRING		NOT SOLD SEPARATELY
23	–	2	HOLDER	HÅLLARE		NOT SOLD SEPARATELY
24	–	2	BACK-UP RING	STÖDRING		NOT SOLD SEPARATELY
25	–	2	SEAL	TÄTNING		NOT SOLD SEPARATELY
26	–	2	HOLDER	HÅLLARE		NOT SOLD SEPARATELY
27	–	2	SEAL	TÄTNING		NOT SOLD SEPARATELY
28	–	2	BACK-UP RING	STÖDRING		NOT SOLD SEPARATELY
29	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
30	–	4	GUIDE PIN	STYRSTIFT		NOT SOLD SEPARATELY
31	–	1	LABEL	DEKAL		NOT SOLD SEPARATELY
32	–	2	SCREW	SKRUV		NOT SOLD SEPARATELY
33	–	2	SEAL	TÄTNING		NOT SOLD SEPARATELY
35	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
36	–	1	COUPLING	KOPPLING		NOT SOLD SEPARATELY

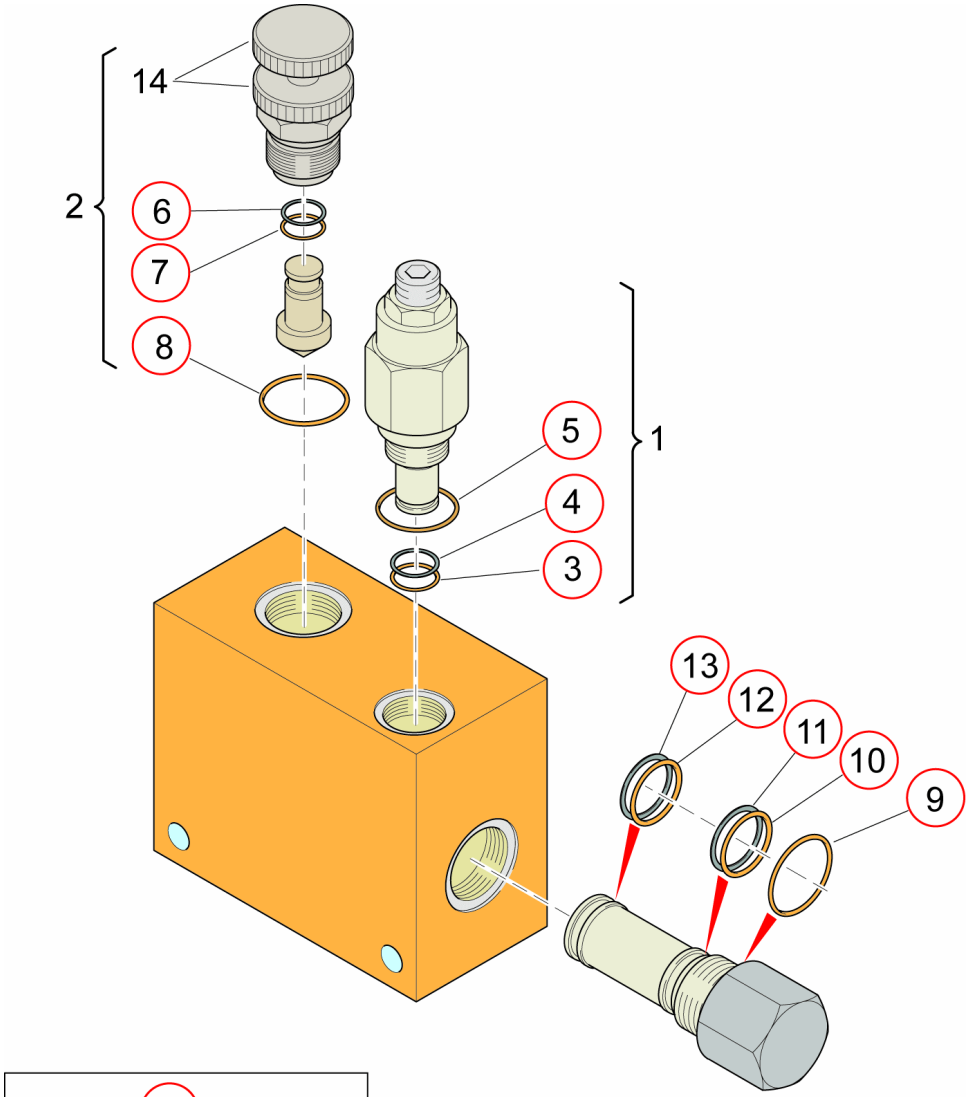

B0032206

FLOW REGULATOR / FLÖDESREGULATOR 3214 7669 81


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3026 48	1	SEAL KIT	TÄTNINGSSATS		INCL.POS. 6,7,8
	3222 3266 76	1	SEAL KIT	TÄTNINGSSATS		INCL.POS. 3-13
	9106 1492 04	1	SEAL KIT	TÄTNINGSSATS		INCL.POS. 3,4,5
1	3217 8937 13	1	PRESS.REL.CART.	TRYCKBEG.PATRON		
2	3222 3266 77	1	FLOW REGULATOR	FLÖDESREGULATOR		
14	3222 3266 78	1	STEERING WH.SET	RATTSATS		

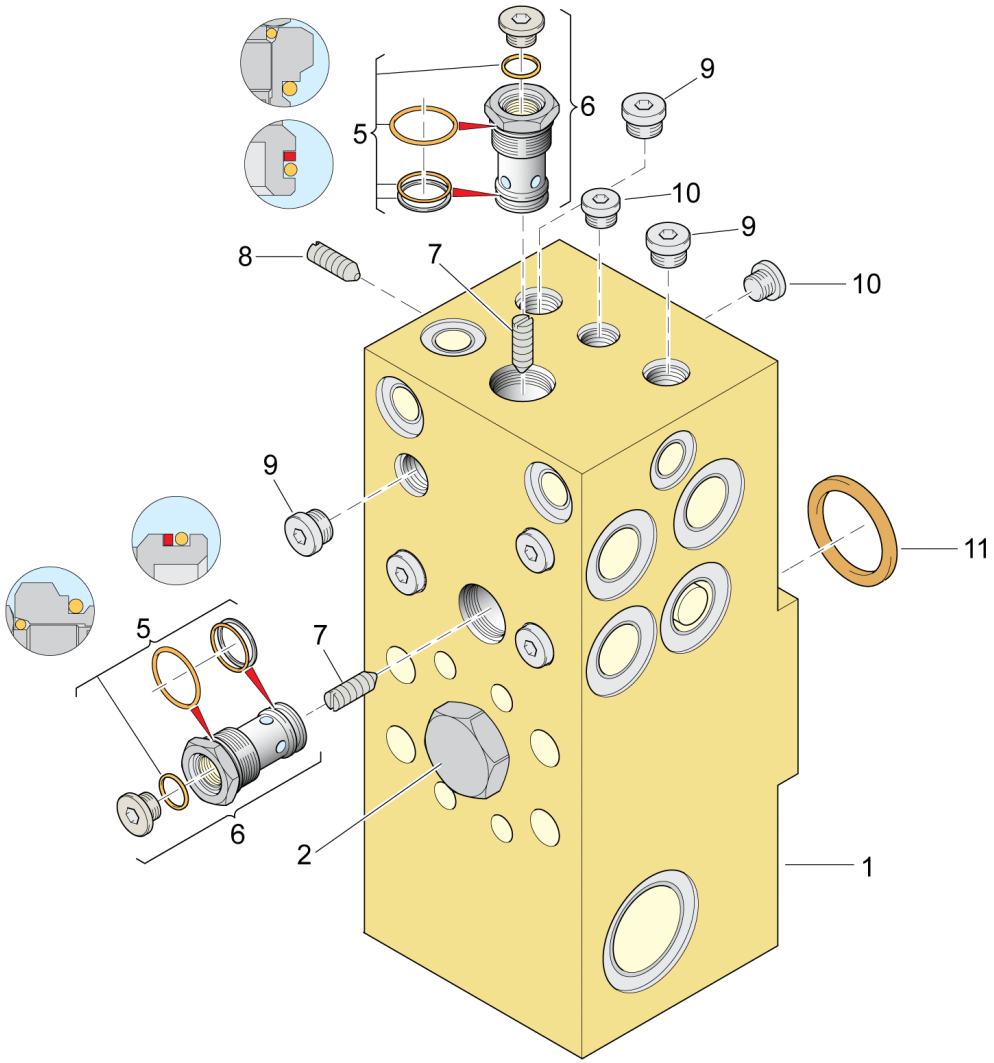


1250 0253 83

B0050372


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
2	3217 8937 22	1	CHECK VALVE	BACKVENTIL		
5	3214 7675 92	2	SEAL KIT	TÄTNINGSSATS		FOR POS.NR 1
6	9106 1607 27	2	CHECK VALVE	BACKVENTIL		
7	9106 1607 29	2	RESTRICTION	STRYPNING		
8	3217 8937 23	1	RESTRICTION	STRYPNING		
9	5580 0105 82	3	PLUG	PLUGG		SAE HOLLOW HEX PLUGS
10	5580 0105 81	2	PLUG	PLUGG		SAE HOLLOW HEX PLUGS
11	3217 8937 21	1	O-RING	O-RING		

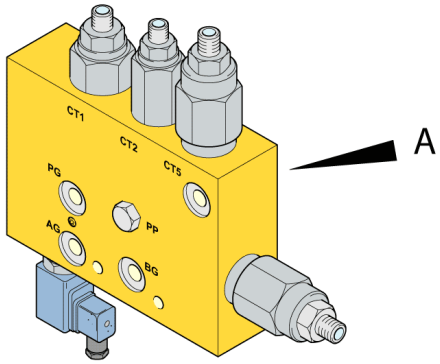


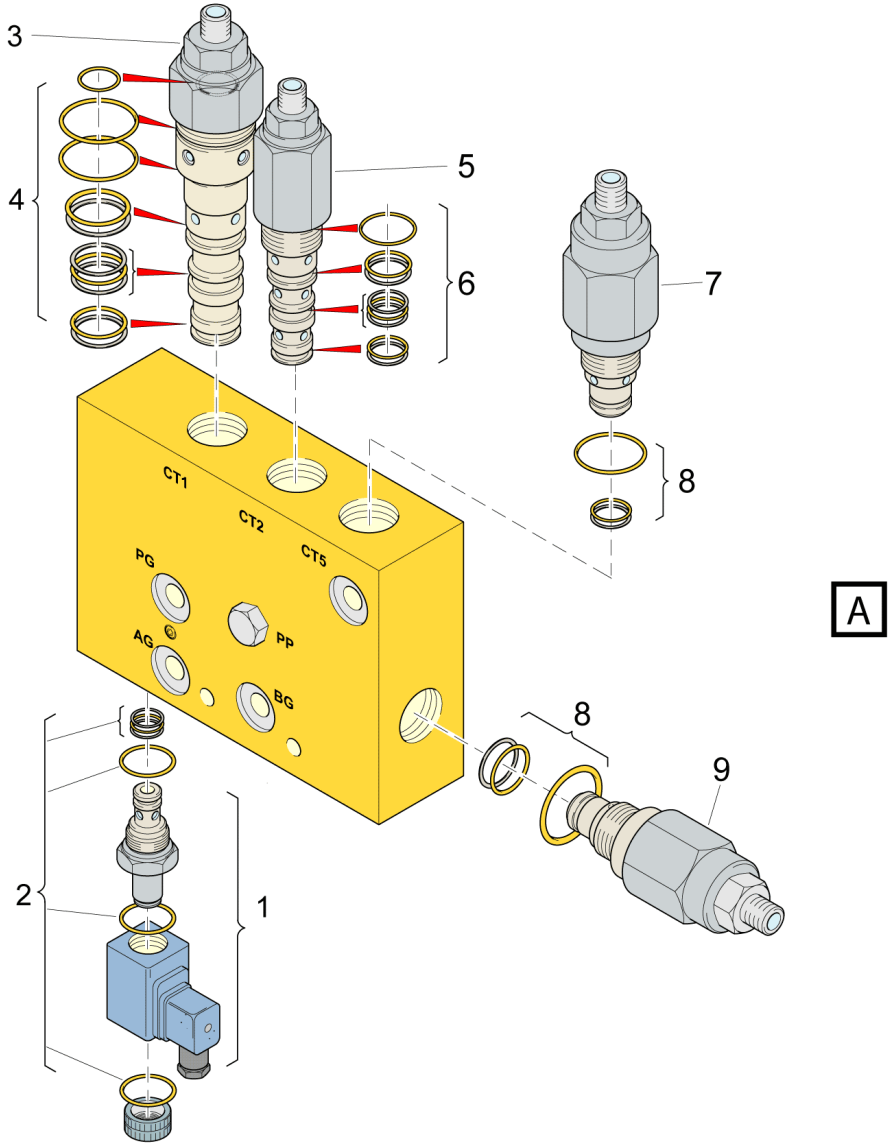

1250 0113 43

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3222 3143 65	1	SOLENOID CARTR.	SOLENOIDPATRON		
2	9106 1492 04	1	SEAL KIT	TÄTNINGSSATS		FOR 9106 1492 01
3	3128 3076 64	1	VALVE	VENTIL		CT1
4	3128 3097 56	1	SEAL KIT	TÄTNINGSSATS		
5	3128 3076 66	1	VALVE	VENTIL		CT2
6	3128 3076 67	1	SEAL KIT	TÄTNINGSSATS		
7	3128 3076 68	1	VALVE	VENTIL		CT5
8	3217 8945 12	2	SEAL KIT	TÄTNINGSSATS		
9	3128 3076 68	1	VALVE	VENTIL		CT5

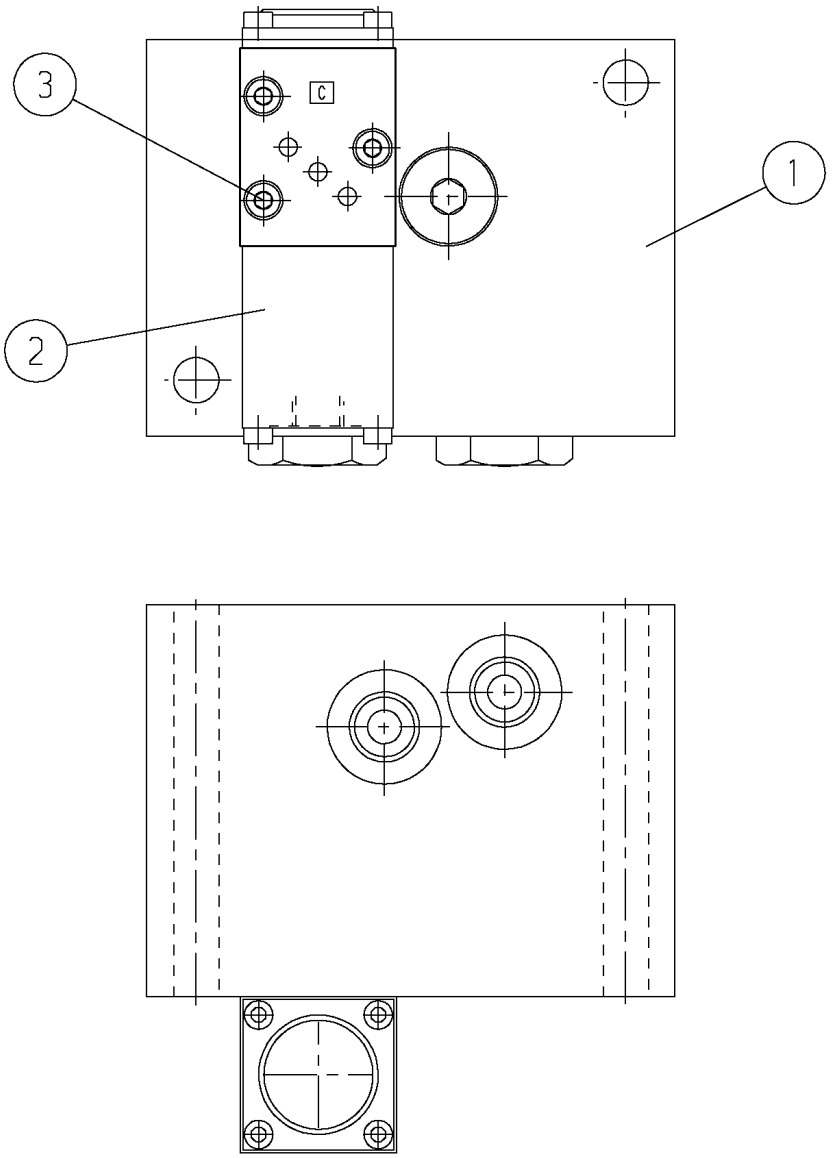


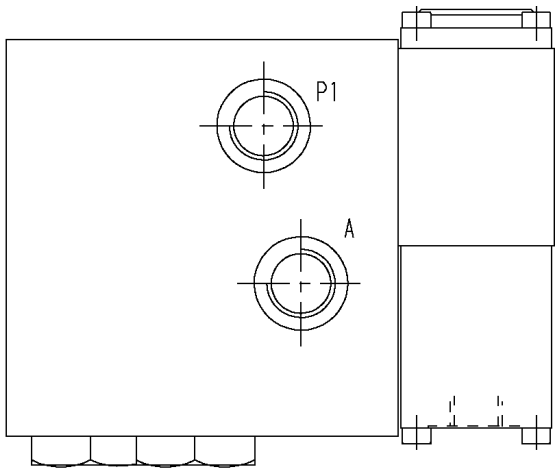

3217 9584 41/1 Ed00

B0008814


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9584 42	1	VALVE BLOCK	VENTILBLOCK	Page 147	
2	3217 9584 20	1	DIRECTION VALVE	RIKTNINGSVENTIL		
3	0211 1177 03	3	SCREW	SKRUV		MC6S M 4 X 30 - 8.8 FZB

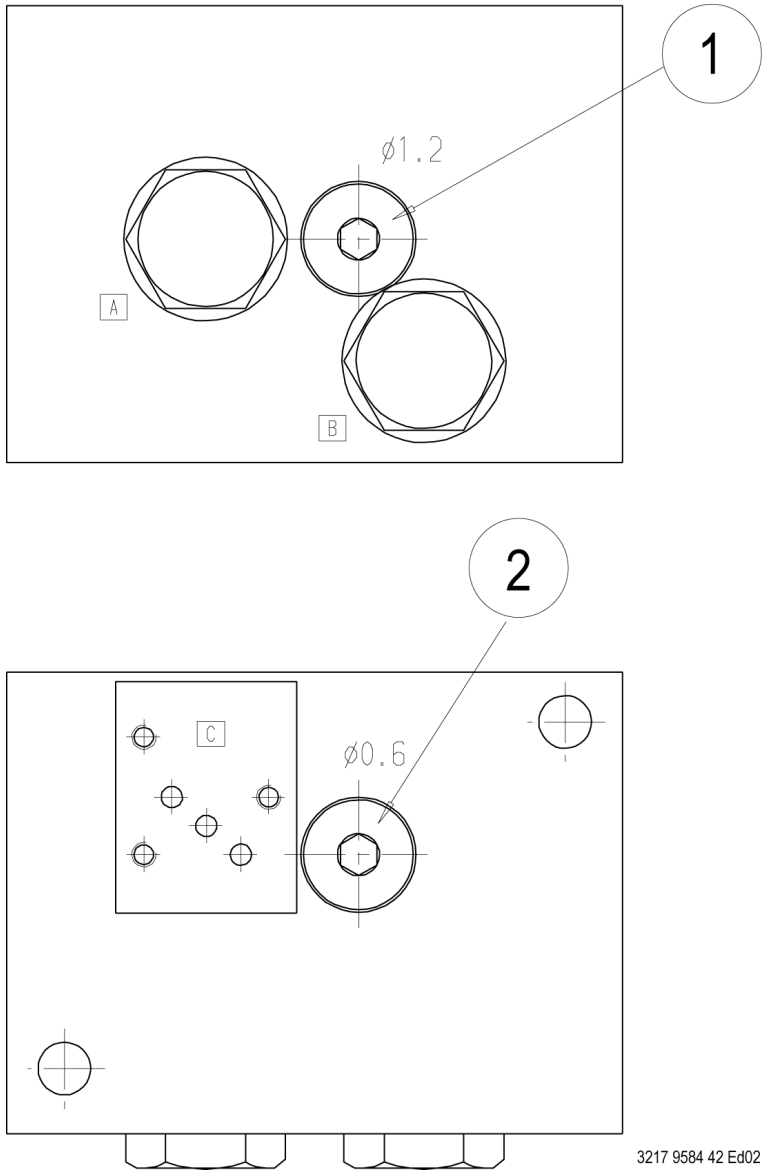

B0024371

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9584 43	1	RESTRICTION	STRYPNING		
2	3217 9584 44	1	RESTRICTION	STRYPNING		

HOSE SET / SLANGSATS

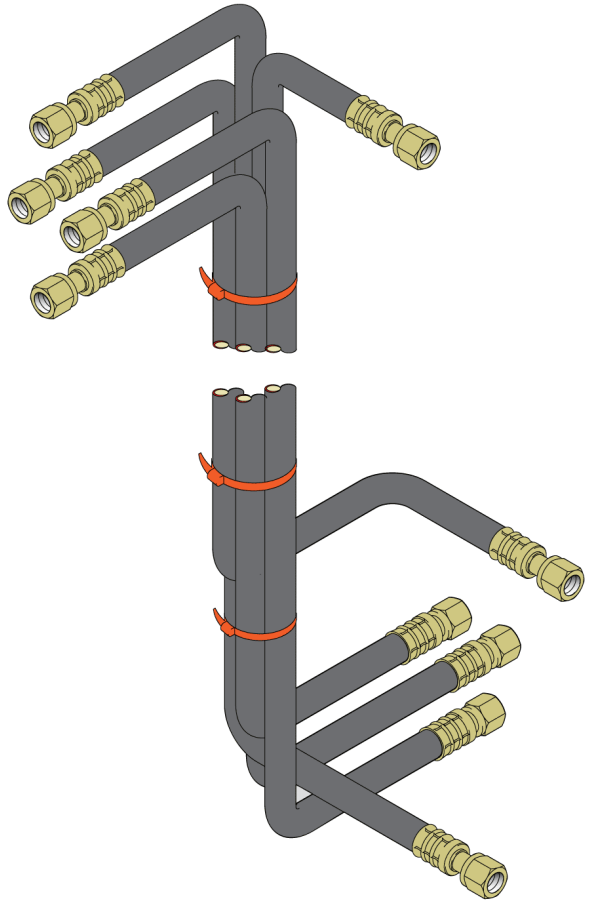


B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	HOSE SET	SLANGSATS	Page 151	
2	–	1	HOSE SET	SLANGSATS	Page 153	

HOSE SET / SLANGSATS

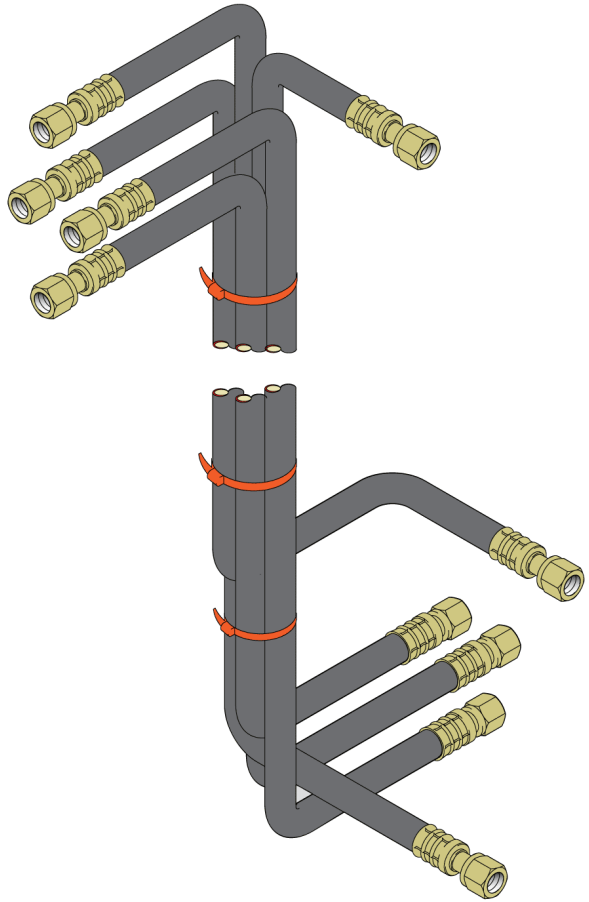


B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
HB11	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB12	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB13	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
HB14	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
HB21	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB22	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB23	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
HB24	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
J11	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J12	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J19	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J20	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J21	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J22	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J23	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J24	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J31	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J32	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J51	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT
J52	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT
J61	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT
J62	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT

HOSE SET / SLANGSATS

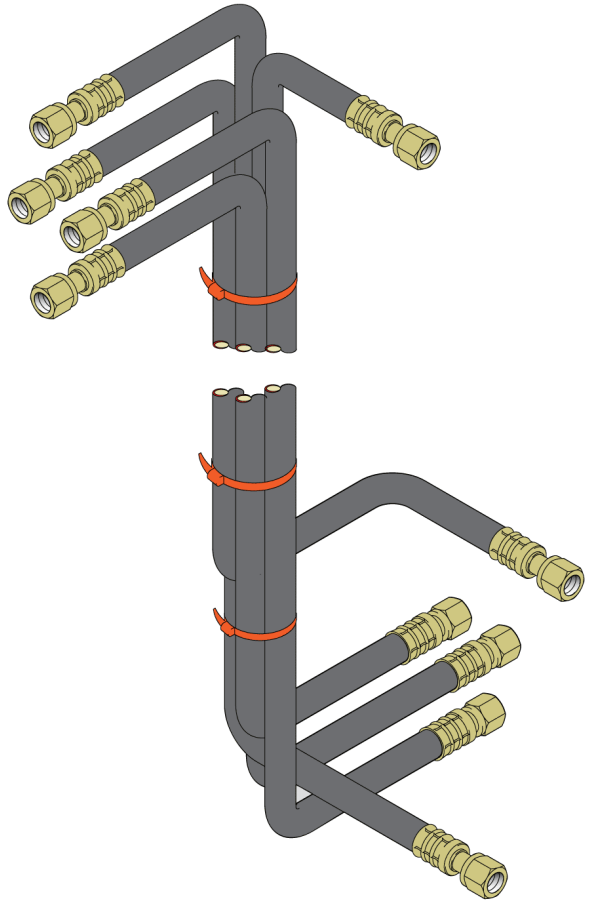

B0015365

HOSE SET / SLANGSATS

(Sheet 1 of 3)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
DKV	0574 0324 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5800 R2AT
DVV	0574 0320 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5700 R2AT
KV1	3176 6975 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2400 R2AT
KV2	3176 6337 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2200 R2AT
KV3	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
KV4	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
KV5	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
KV6	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
P10	0574 2286 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3800 R2AT
P12	0574 2318 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4500 R2AT
P14	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
P15	3176 5681 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 600 R2AT
T10	0574 2286 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3800 R2AT
T11	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
T14	0574 2276 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1900 R2AT
T15	3176 6861 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 500 R2AT
T17	0574 0067 91	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 5600 R2AT
T19	3176 6861 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 500 R2AT
T41	0574 6013 11	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 800 R1T
T42	0574 6019 11	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 1200 R1T
T43	0574 0000 97	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 4300 R1T
VV1	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT
VV2	0574 0000 23	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2100 R2AT
VV3	0574 1254 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 350 R2AT
VV4	0574 1254 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 350 R2AT
VV5	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
VV6	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
D7	3176 7131 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3000 R2AT
FG	0574 0324 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5800 R2AT
P2	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT
P3	0574 0065 88	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3700 R2AT
TF	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT

HOSE SET / SLANGSATS


(Sheet 2 of 3)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1D2	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
1GD	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1P1	0574 1272 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1500 R2AT
1P9	0574 2321 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2300 R2AT
1S7	0574 0064 84	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3900 R9R
1T2	0574 2269 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1200 R2AT
1T7	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
2D2	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
2GD	0574 0064 50	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1900 R2AT
2P1	0574 1272 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1500 R2AT
2S7	0574 4535 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3600 R9R
2T2	0574 2270 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1300 R2AT
2T7	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
1D11	0574 4265 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 900 R2AT
1D20	3176 5864 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1300 R2AT
1R13	0574 3287 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4000 R2AT
1T20	0574 2267 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1000 R2AT
1T30	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT
1T31	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
1T50	0574 1274 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1700 R2AT
1XS1	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
1XS3	3176 6860 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4600 R2AT
1XS4	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
2D11	0574 4263 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 800 R2AT
2D20	3176 5864 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1300 R2AT
2R13	0574 3285 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3600 R2AT
2T20	0574 2267 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1000 R2AT
2T30	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
2T31	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
2T50	0574 1273 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1600 R2AT
2XP1	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
2XS1	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT

HOSE SET / SLANGSATS

(Sheet 3 of 3)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2XS3	0574 0335 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3900 R2AT
2XS4	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
1AR14	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT 10 X 700 R2AT
1AR14	3176 5677 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1000 R2AT
1PD10	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT
1XF73	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
1XF74	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
1XF75	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
1XF76	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
1XF77	0574 0064 49	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 850 R2AT
2AR11	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
2AR13	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
2AR14	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2PD10	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT
2XF73	0574 0063 69	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1200 R2AT
2XF74	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
2XF75	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
2XF76	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
2XF77	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT

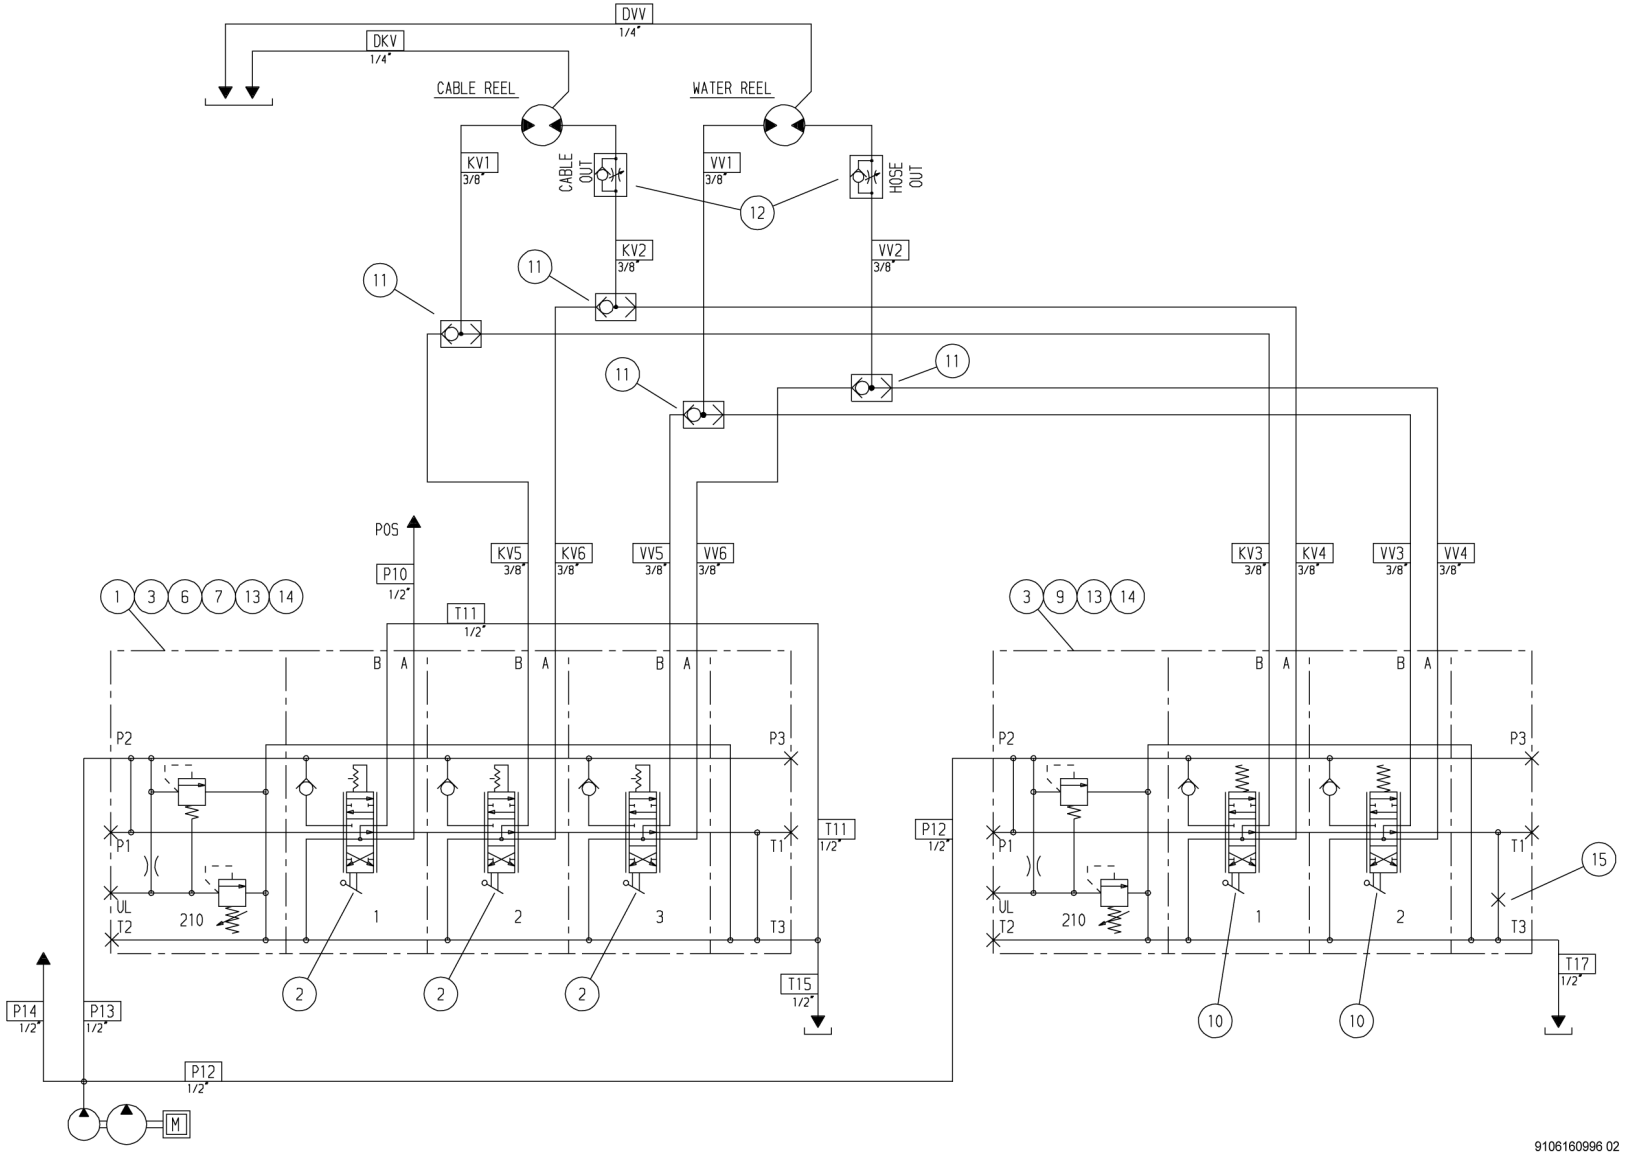
DVV
1/4
DKV
1/4
CABLE REEL
WATER REEL
KV1
3/8
CABLE OUT
VV1
3/8
HOSE OUT
12
KV2
3/8
VV2
3/8
11
11
11
11
POS
P10
1/2
KV5
3/8
KV6
3/8
VV5
3/8
VV6
3/8
KV3
3/8
KV4
3/8
VV3
3/8
VV4
3/8
1 3 6 7 13 14
3 9 13 14
T11
1/2
B A
P2
P3
P1
T1
T2
T3
UL
210
1
2
3
2
2
2
T15
1/2
P12
1/2
T11
1/2
15
T17
1/2
10
10
P14
1/2
P13
1/2
P12
1/2
M
9106160996 02

B0051589


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
A01	–	1	ATTACHMENT SET	FÄSTDETALJER	Page 159	
1	3128 2090 77	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 161	
2	3128 2091 69	3	LEVER SET	SPAKSATS		
3	3176 7572 00	4	PLATE	SKYLT		
4	3176 0012 58	2	PLATE	SKYLT		
6	3176 7573 01	1	PLATE	SKYLT		
7	3176 7573 02	1	PLATE	SKYLT		
9	3128 2092 06	1	DIRECTION VALVE	RIKTNINGSVENTIL		
10	3128 2091 69	2	LEVER SET	SPAKSATS		
11	3176 8377 00	4	SHUTTLE VALVE	VÄXELVENTIL		RS 417-00-04 / R 1/4
12	3177 3126 03	2	FLOW CONT.VALVE	STRYPBACKVENTIL		
13	3176 7575 00	2	PLATE	SKYLT		
14	3176 6101 00	2	PLATE	SKYLT		LITEN
15	9121 5500 08	1	CONNECT.ADAPTER	ANSLUTN.NIPPEL		

ATTACHMENT SET / FÄSTDETALJER

X0000000


ATTACHMENT SET / FÄSTDETALJER

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 0981 02	1	VALVE ATTM.	VENTILFÄSTE		
2	0147 1479 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
3	0291 1128 25	2	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
4	0301 2378 00	4	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB

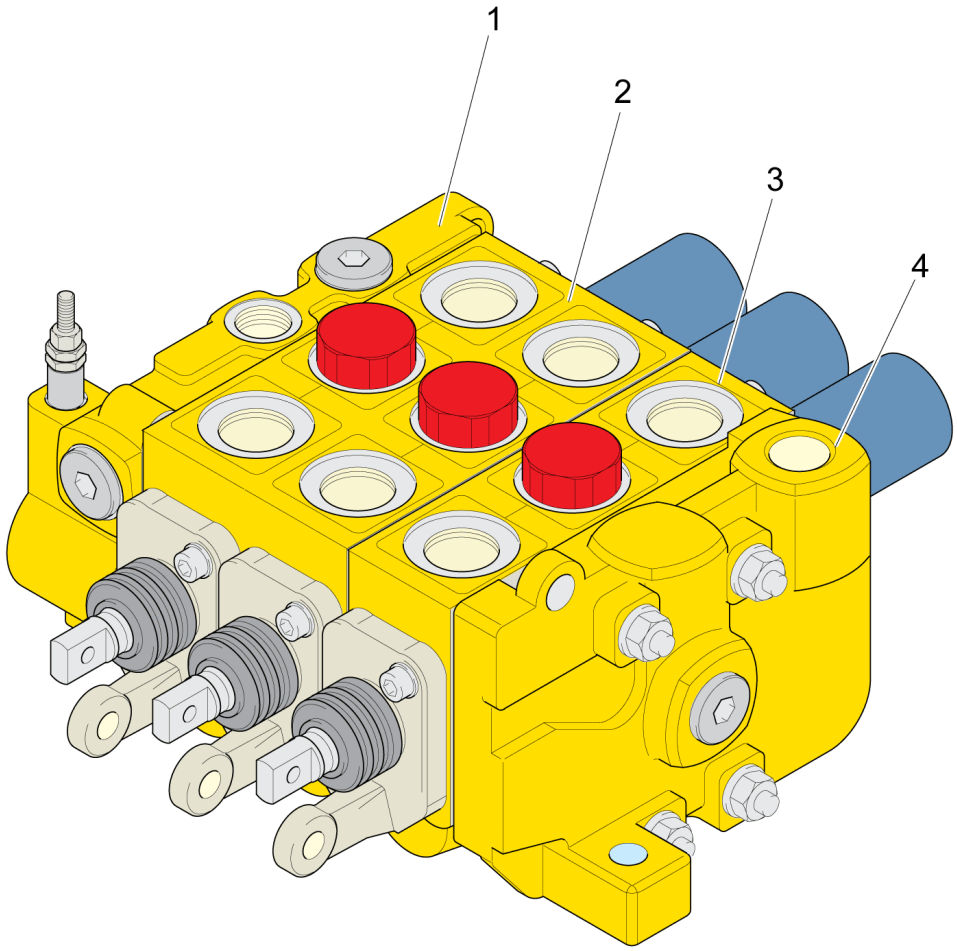

1250 0229 65

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 72	1	ASSEMBLY SET	MONTERINGSSATS	Page 163	
1	3128 2091 73	1	INLET SECTION	INLOPPSSEKTION	Page 165	
2	3128 2091 74	1	VALVE SECTION	VENTILSEKTION	Page 167	
3	3128 2091 75	1	VALVE SECTION	VENTILSEKTION	Page 169	
4	3128 2091 76	1	OUTLET SECTION	UTLOPPSSEKTION	Page 171	

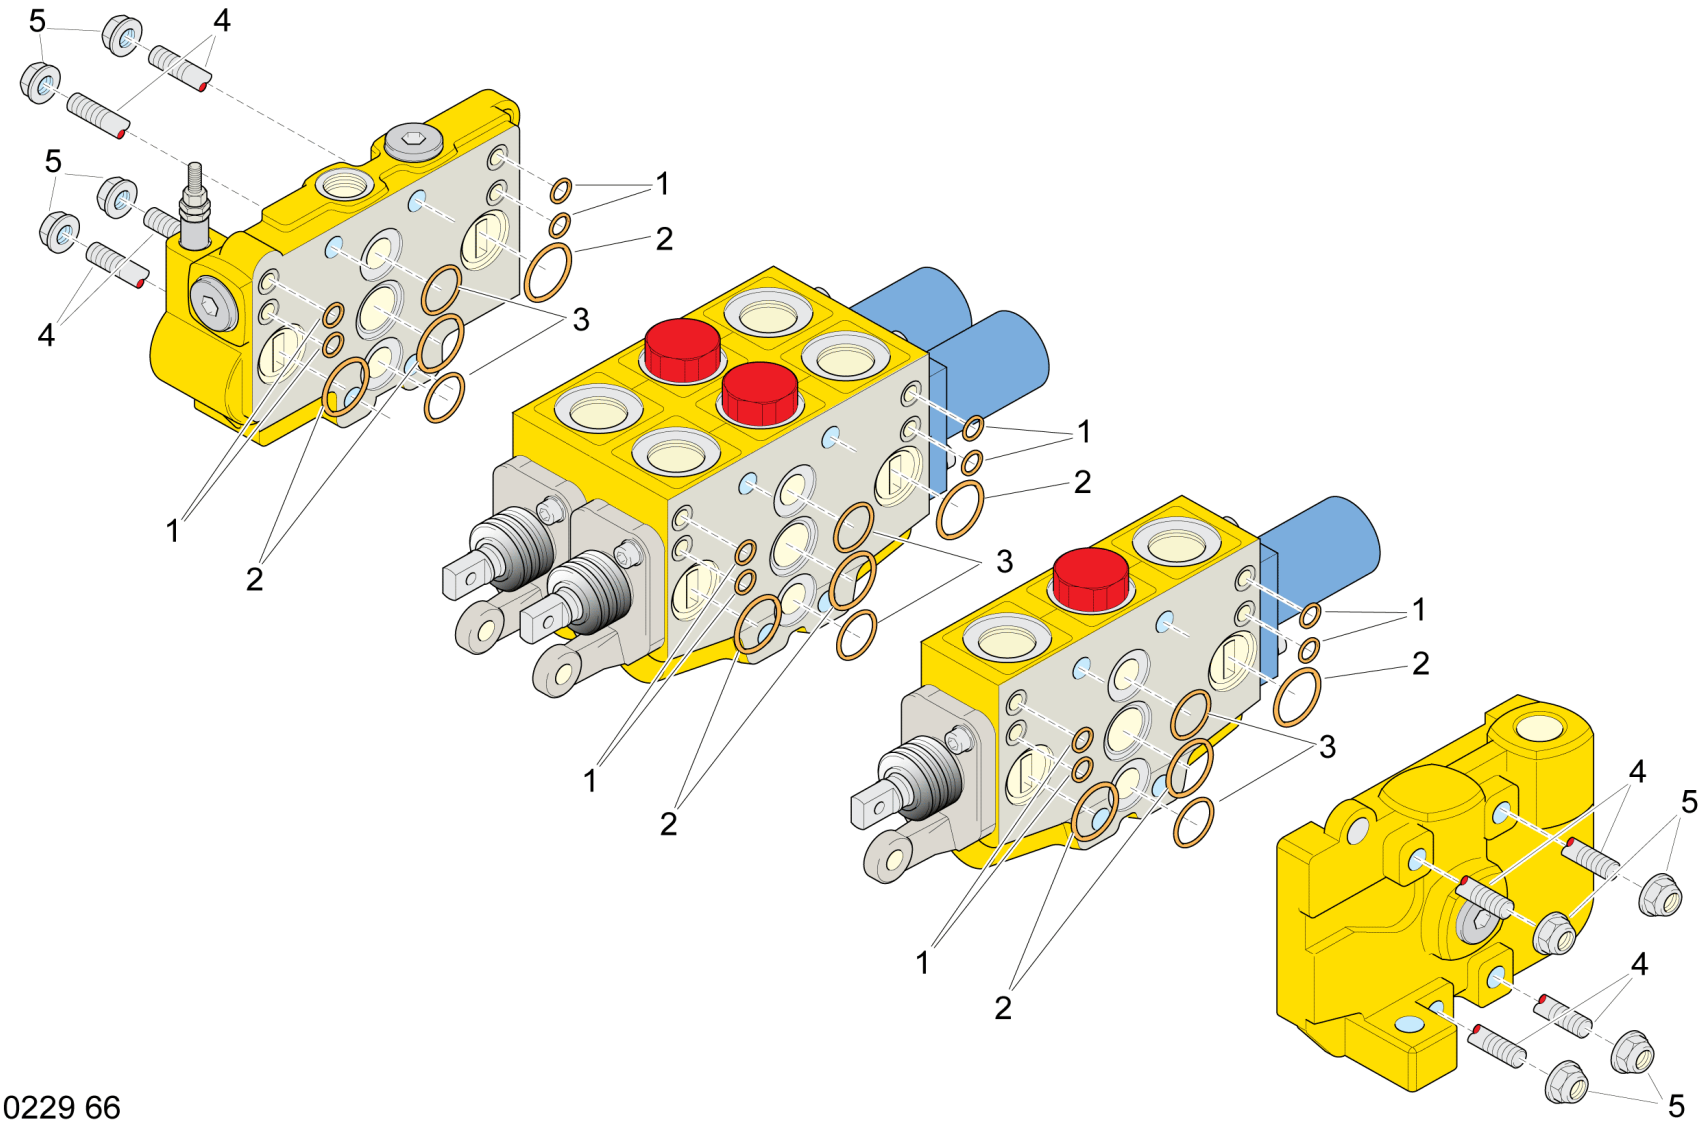


1250 0229 66

B0045166

ASSEMBLY SET / MONTERINGSSATS 3128 2091 72

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 95	3	SEAL KIT	TÄTNINGSSATS		INCL. POS. 1-3
	3222 3274 10	1	PULL ROD SET	DRAGSTÅNGSSATS		INCL. POS. 4-5
1	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
2	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
3	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	4	PULL ROD	DRAGSTÅNG		NOT SOLD SEPARATELY
5	3222 3264 97	1	NUT SET	MUTTERSATS		NUT KIT (4PCS.)

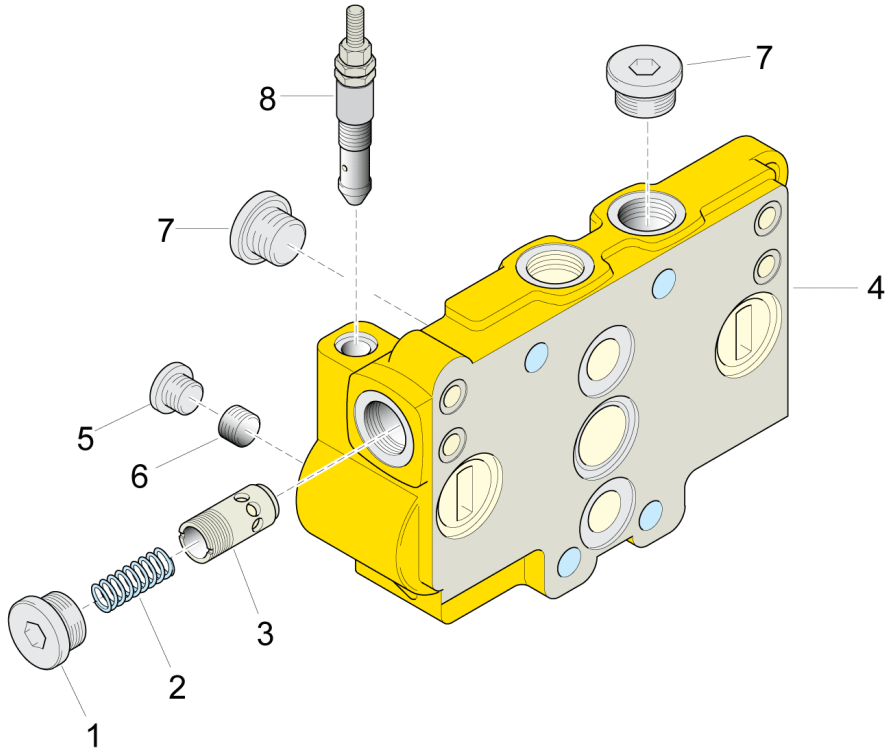


1250 0229 67

B0045160

INLET SECTION / INLOPPSSEKTION 3128 2091 73


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 90	1	VALVE	VENTIL		INCL. POS. 1-3
1	–	1	PLUG	PLUGG		NOT SOLD SEPARATELY
2	–	1	SPRING	FJÄDER		NOT SOLD SEPARATELY
3	–	1	VALVE	VENTIL		NOT SOLD SEPARATELY
4	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
5	0686 6442 07	1	PLUG	PROPP		VSTI G 1/4-ED
6	–	1	RESTRICTION	STRYPNING		NOT SOLD SEPARATELY
7	0686 3718 02	2	PLUG	PROPP		G 1/2' WITH SEALING
8	3128 2091 25	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		

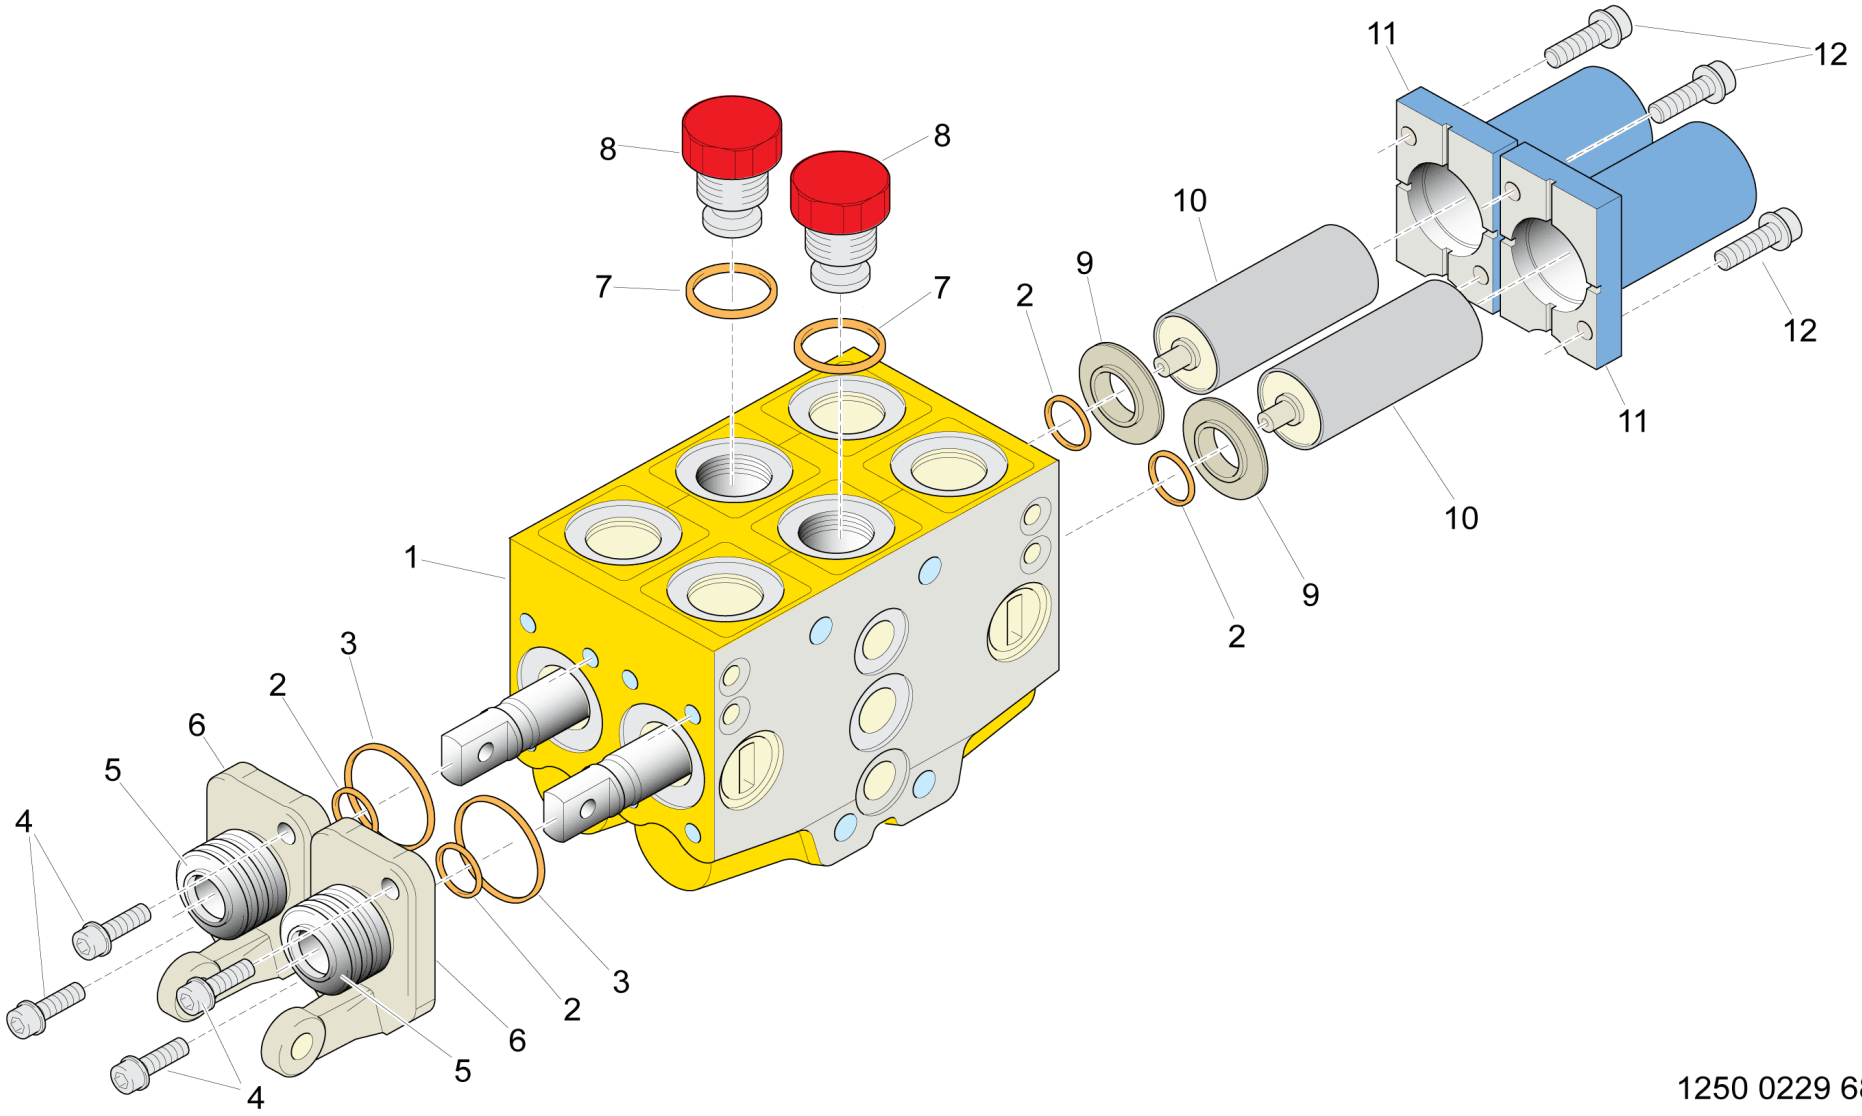

1250 0229 68

B0045161


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 28	2	END PIECE SET	GAVELSATS		INCL. POS. 2,9-11,12
	3222 3264 98	2	LEVER HOLDER	SPAKHÅLLARE		INCL. POS 2-6
	9106 1611 59	2	SEAL KIT	TÄTNINGSSATS		INCL. POS. 2,3,5
1	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
2	–	4	O-RING	O-RING		NOT SOLD SEPARATELY
3	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
5	3128 2091 49	2	PROTECT.BELLOWS	SKYDDSBÄLG		5 PCS. IN KIT.
6	–	2	HOLDER	HÅLLARE		NOT SOLD SEPARATELY
7	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
8	3128 2091 05	2	CHECK VALVE	BACKVENTIL		INCL. POS. 7
9	–	2	WASHER	BRICKA		NOT SOLD SEPARATELY
10	3222 3294 80	2	SPRING SET	FJÄDERSATS		
11	–	2	HOUSE	HUS		NOT SOLD SEPARATELY
12	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY

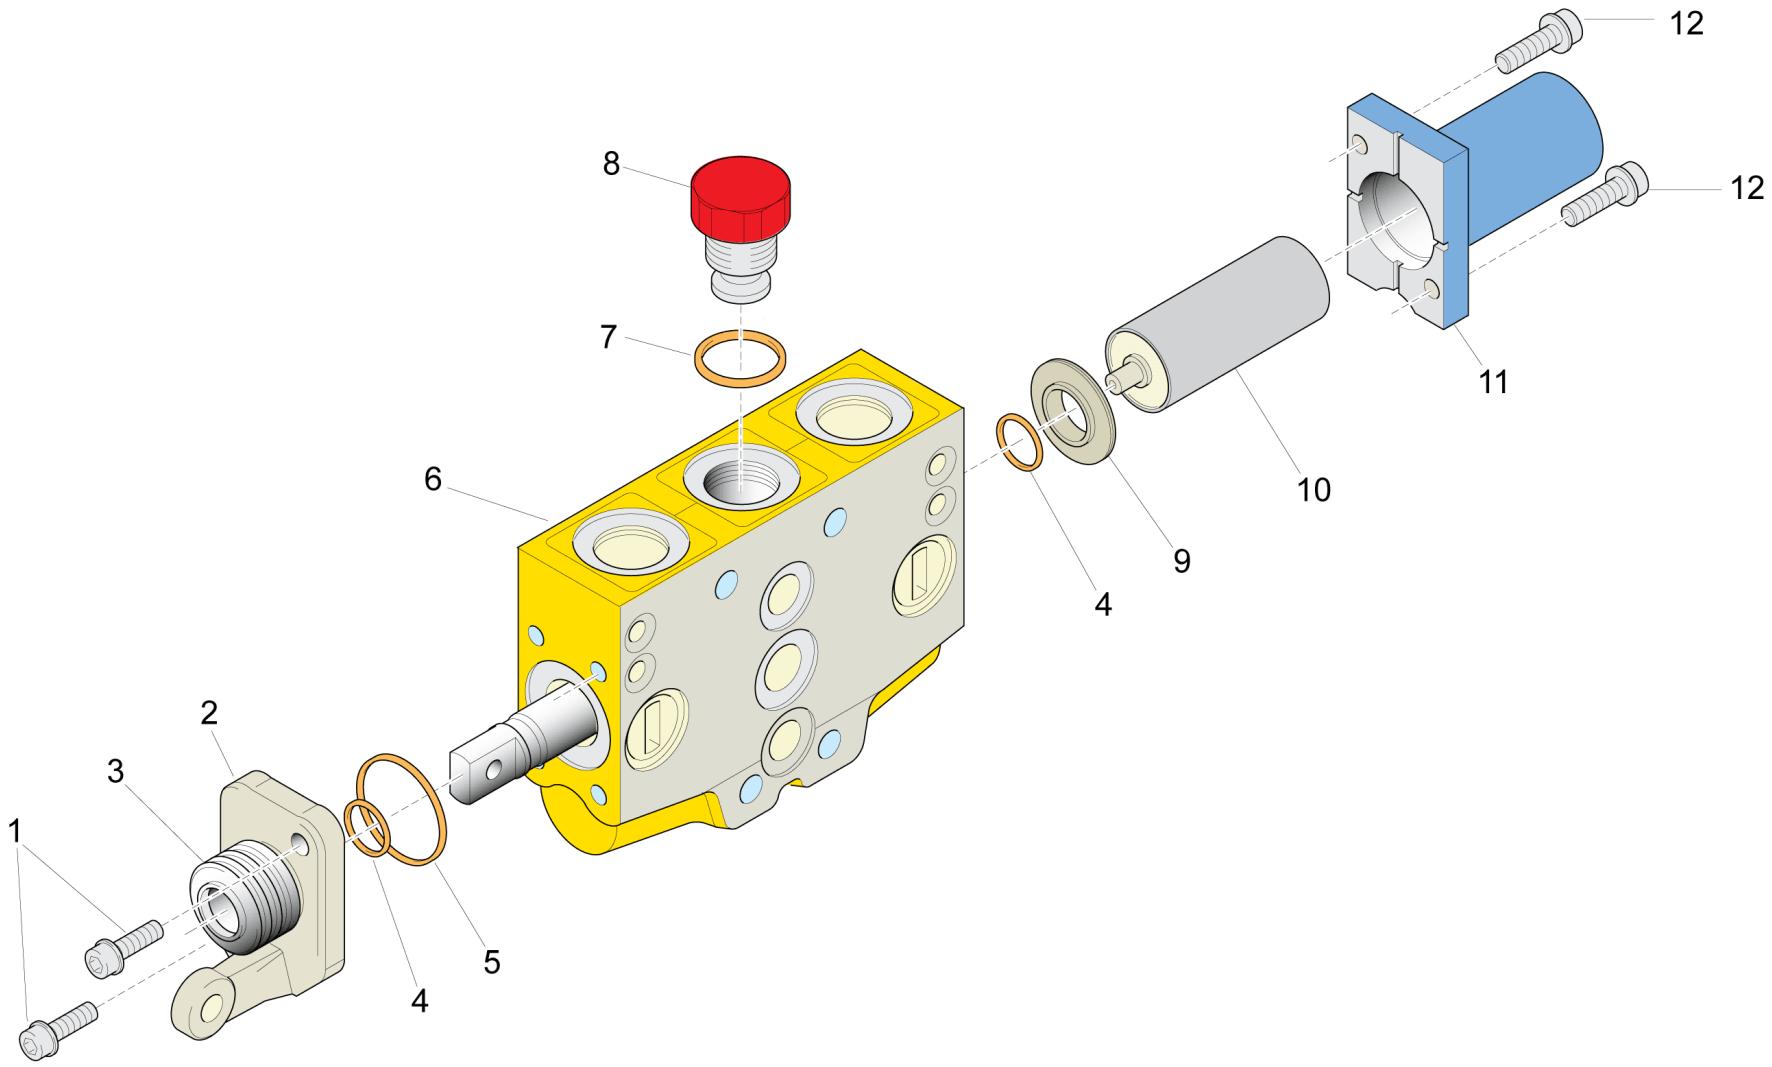

1250 0229 69

B0045159


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 28	1	END PIECE SET	GAVELSATS		INCL. POS. 4,9-12
	3222 3264 98	1	LEVER HOLDER	SPAKHÅLLARE		INCL. POS. 1-5
	9106 1611 59	1	SEAL KIT	TÄTNINGSSATS		INCL. POS. 3-5
1	–	2	SCREW	SKRUV		NOT SOLD SEPARATELY
2	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
3	3128 2091 49	1	PROTECT.BELLOWS	SKYDDSBÄLG		5 PCS. IN KIT.
4	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
5	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
6	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
7	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
8	3128 2091 05	1	CHECK VALVE	BACKVENTIL		INCL. POS. 7
9	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY
10	3222 3294 80	1	SPRING SET	FJÄDERSATS		
11	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
12	–	2	SCREW	SKRUV		NOT SOLD SEPARATELY

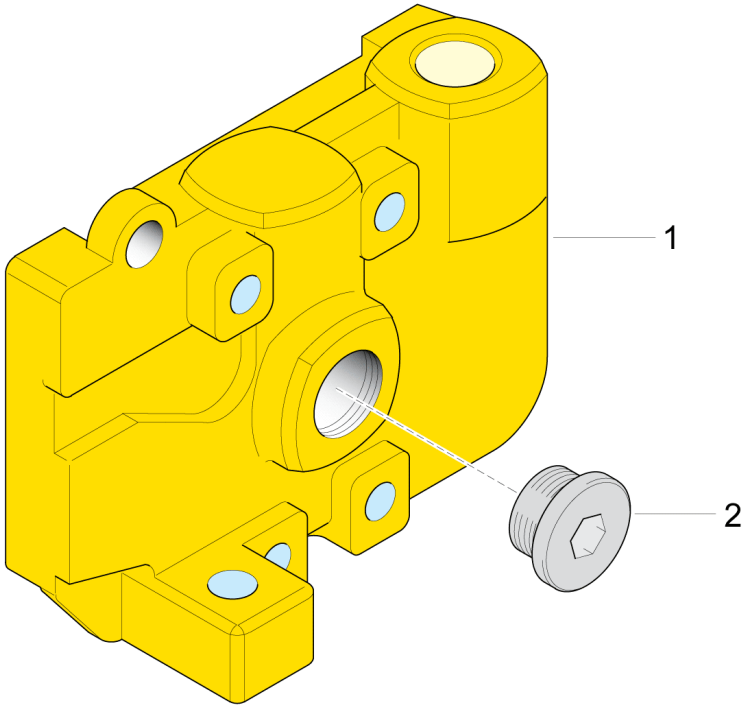

1250 0229 70


B0045158


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
2	0686 3718 02	1	PLUG	PROPP		G 1/2' WITH SEALING

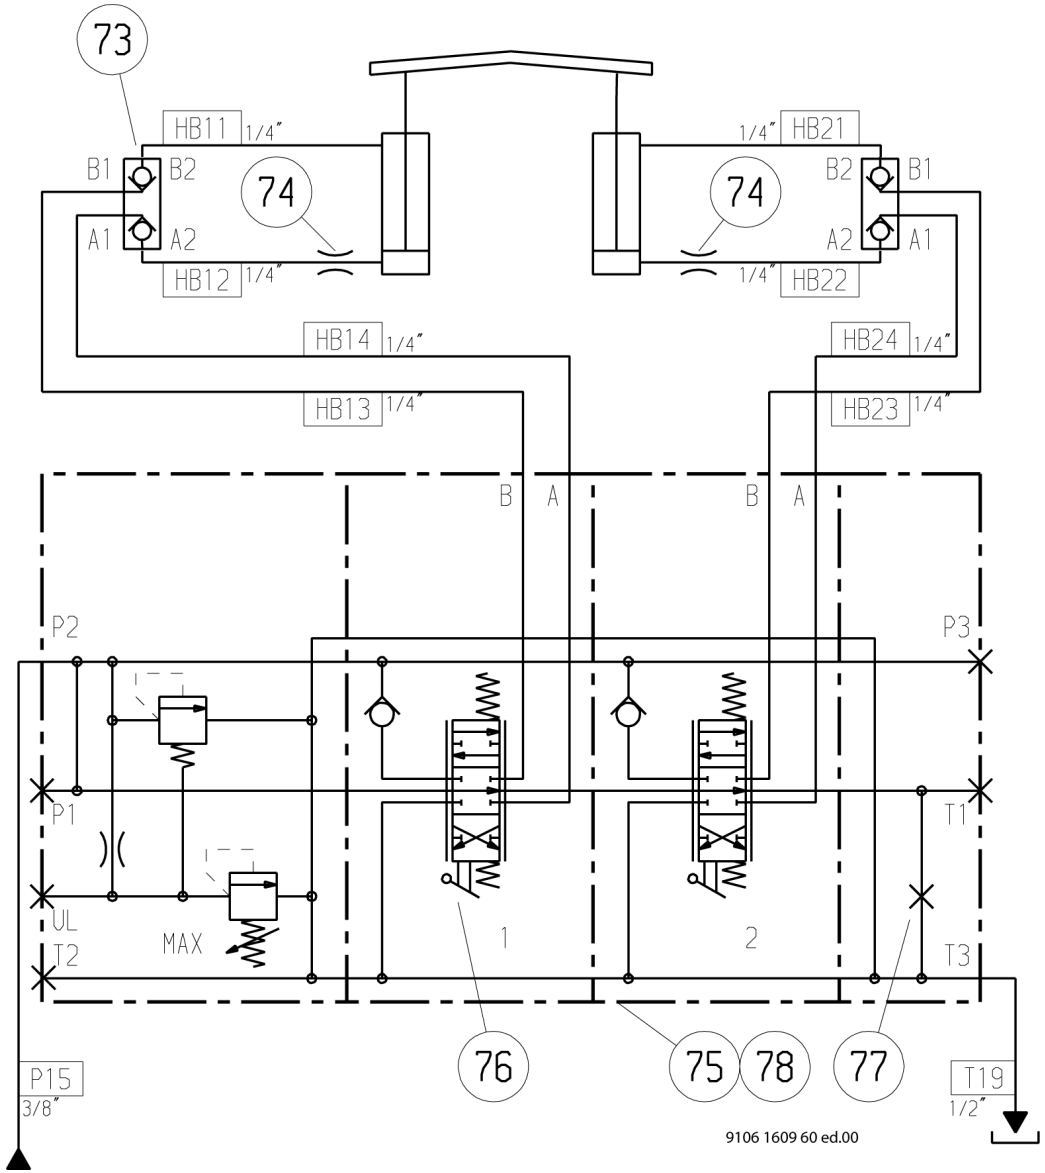
73
HB11 1/4"
B1
B2
74
A1
A2
HB12 1/4"
1/4" HB21
B2
B1
74
A2
A1
1/4" HB22
HB14 1/4"
HB24 1/4"
HB13 1/4"
HB23 1/4"
B
A
B
A
P2
P3
P1
T1
UL
T2
MAX
1
2
T3
76
75
78
77
P15
3/8"
T19
1/2"
9106 1609 60 ed.00

B0027631

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
73	9106 0630 10	2	DOUBLE CH.VALVE	HYDRAULLÅS	Page 175	
74	3176 8505 00	2	RESTRICTION	STRYPNING		D=1,2 ; 9/16-18 UN
75	3128 2090 72	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 177	
76	3128 2091 69	2	LEVER SET	SPAKSATS		
77	9121 5500 08	1	CONNECT.ADAPTER	ANSLUTN.NIPPEL		
78	3176 7574 00	1	PLATE	SKYLT		

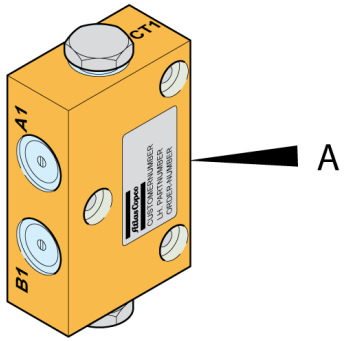

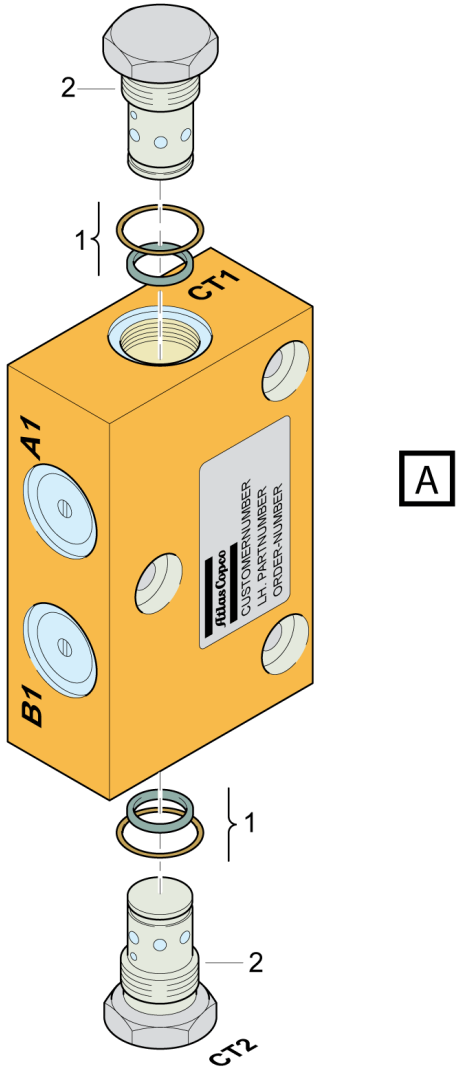


A

1250 0130 95

B0014698


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 0631 24	2	SEAL KIT	TÄTNINGSSATS		POS.1
2	9106 0631 23	2	CARTRIDGE	PATRON		

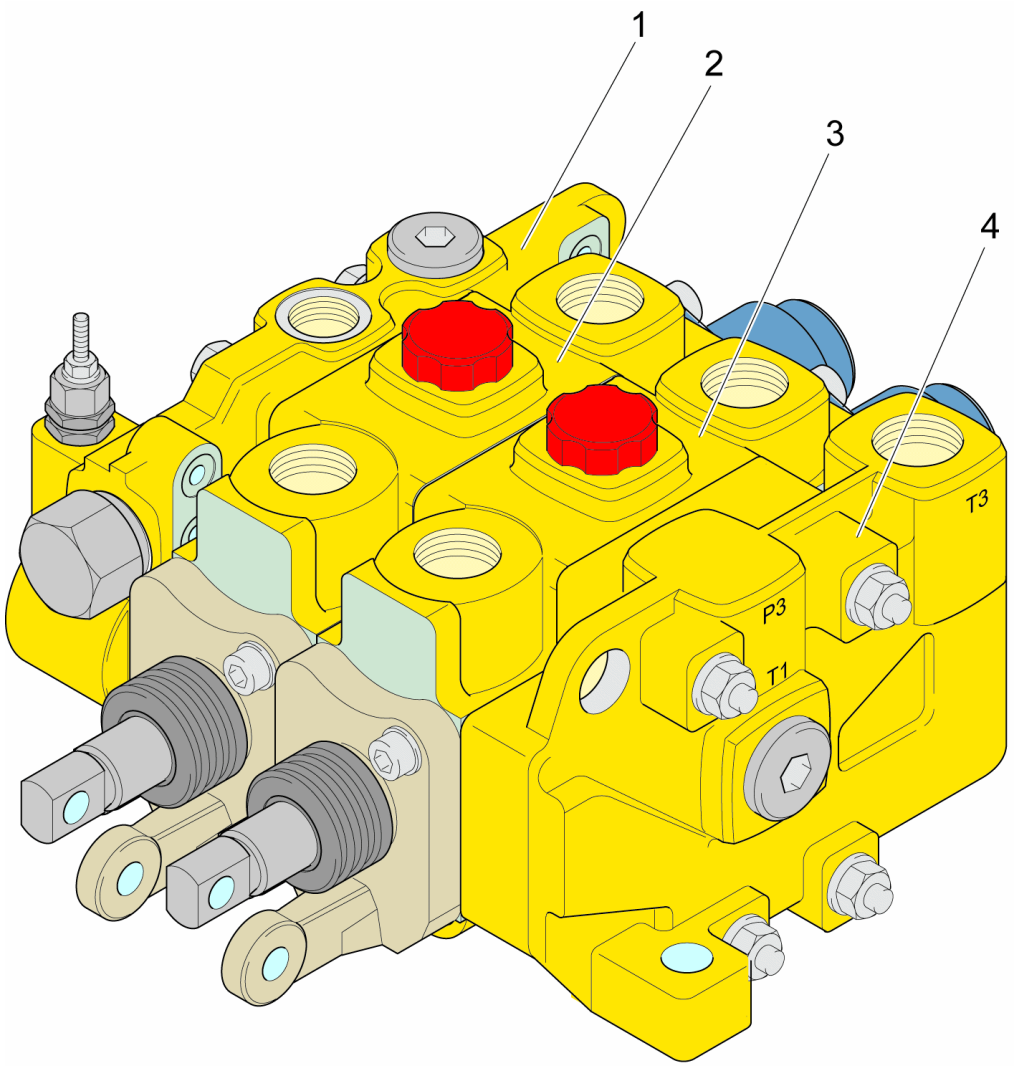

1250 0163 40

B0032256


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 2091 22	1	INLET SECTION	INLOPPSSEKTION	Page 179	
2	3128 2091 02	2	VALVE SECTION	VENTILSEKTION	Page 181	
3	3128 2091 24	1	OUTLET SECTION	UTLOPPSSEKTION	Page 183	

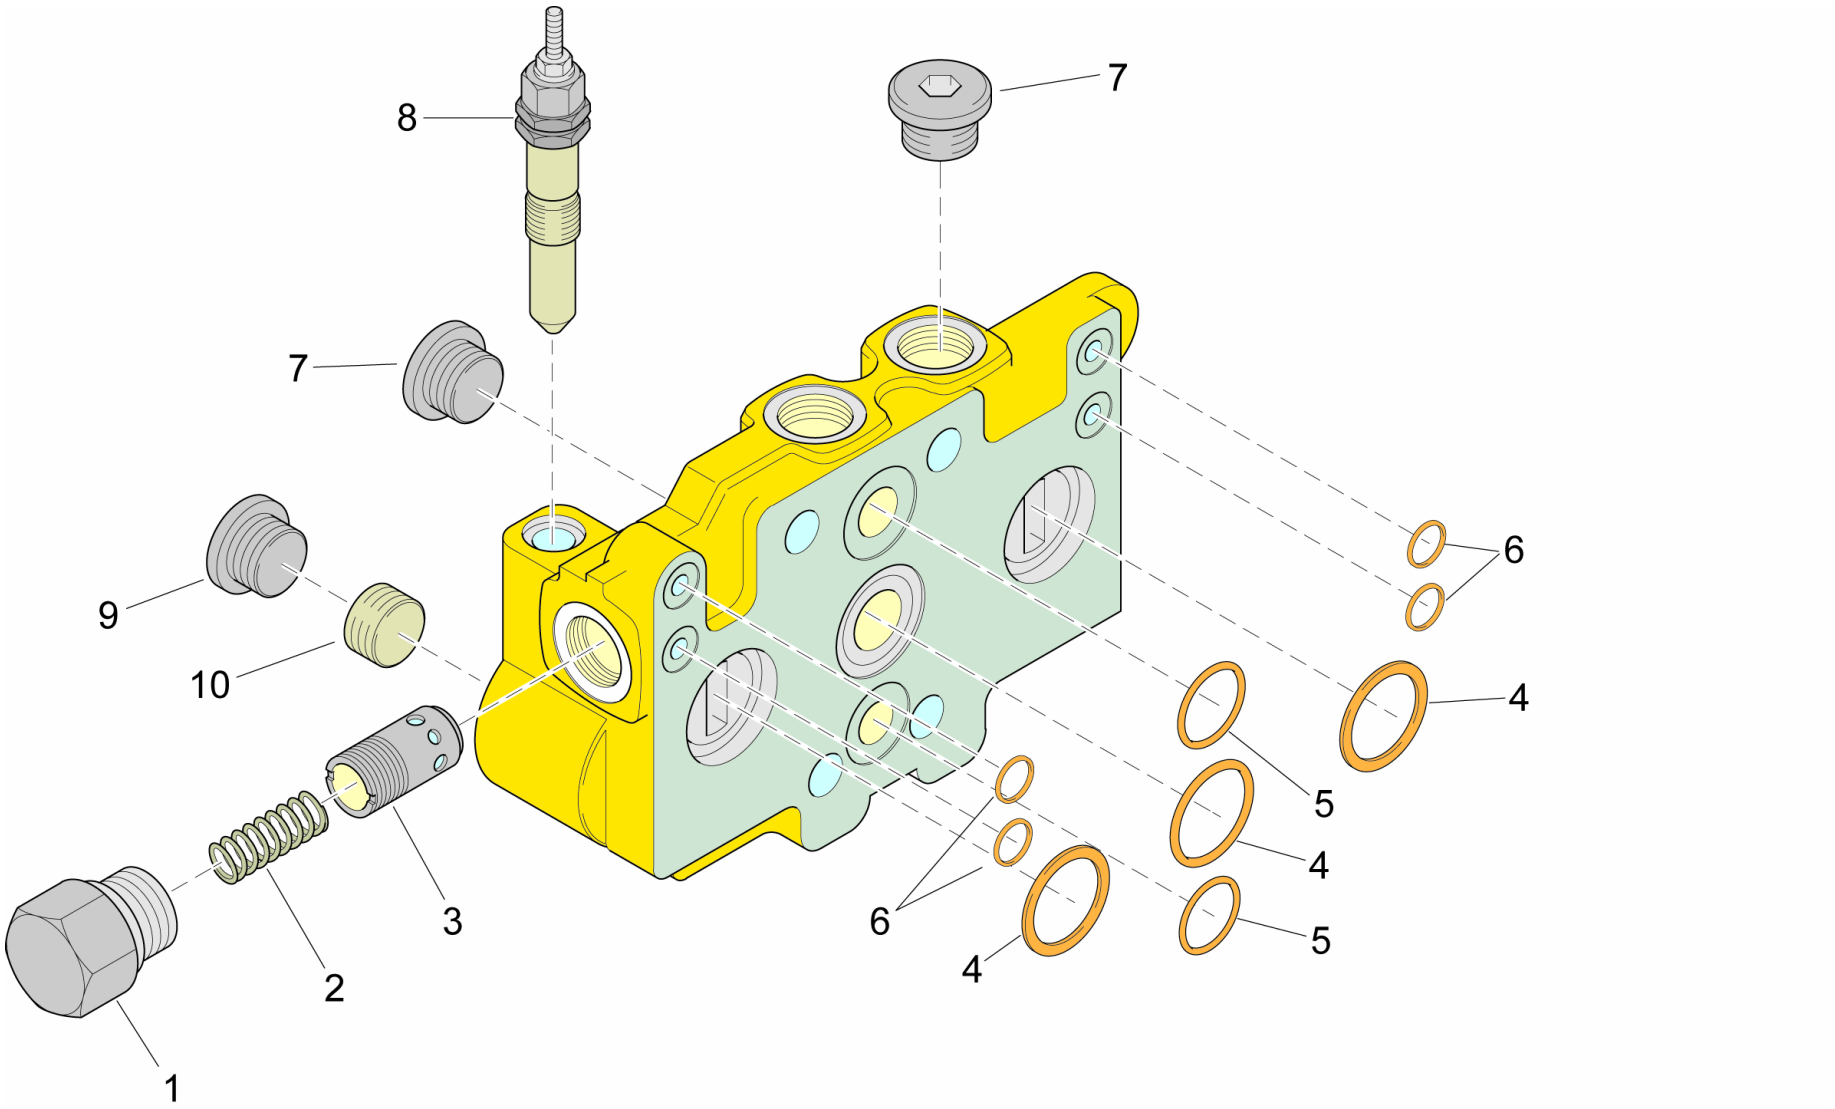

1250 0163 36

B0032252


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 90	1	VALVE	VENTIL		
	3222 3264 95	1	SEAL KIT	TÄTNINGSSATS		
7	0686 6442 07	2	PLUG	PROPP		VSTI G 1/4-ED
8	3128 2091 25	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		
9	0686 6442 07	1	PLUG	PROPP		VSTI G 1/4-ED
10	3222 3264 94	1	RESTRICTION	STRYPNING		

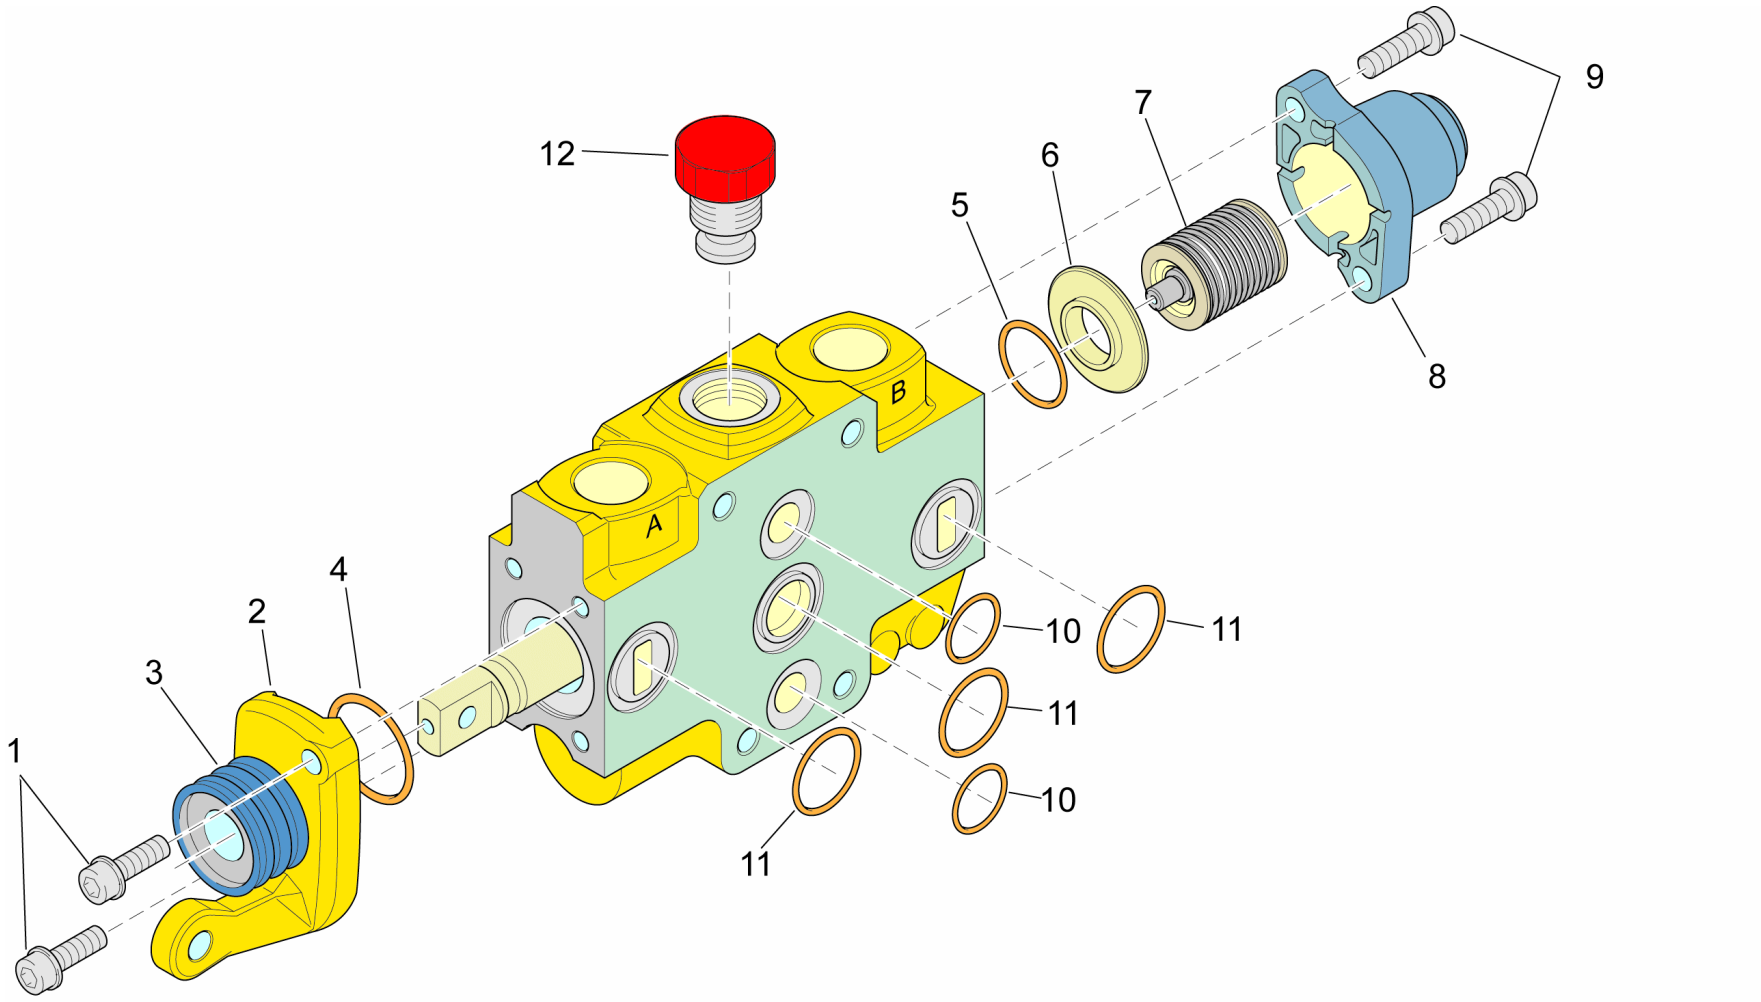

1250 0162 28

B0032230


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3222 3264 95	1	SEAL KIT	TÄTNINGSSATS		POS. 10,11
	3222 3264 98	1	LEVER HOLDER	SPAKHÅLLARE		POS. 1,2,3,4
	3222 3264 99	1	ACTUATOR	STÄLLDON		POS. 5,6,8,9
7	3222 3265 01	1	SPRING	FJÄDER		
12	3128 2091 05	1	CHECK VALVE	BACKVENTIL		

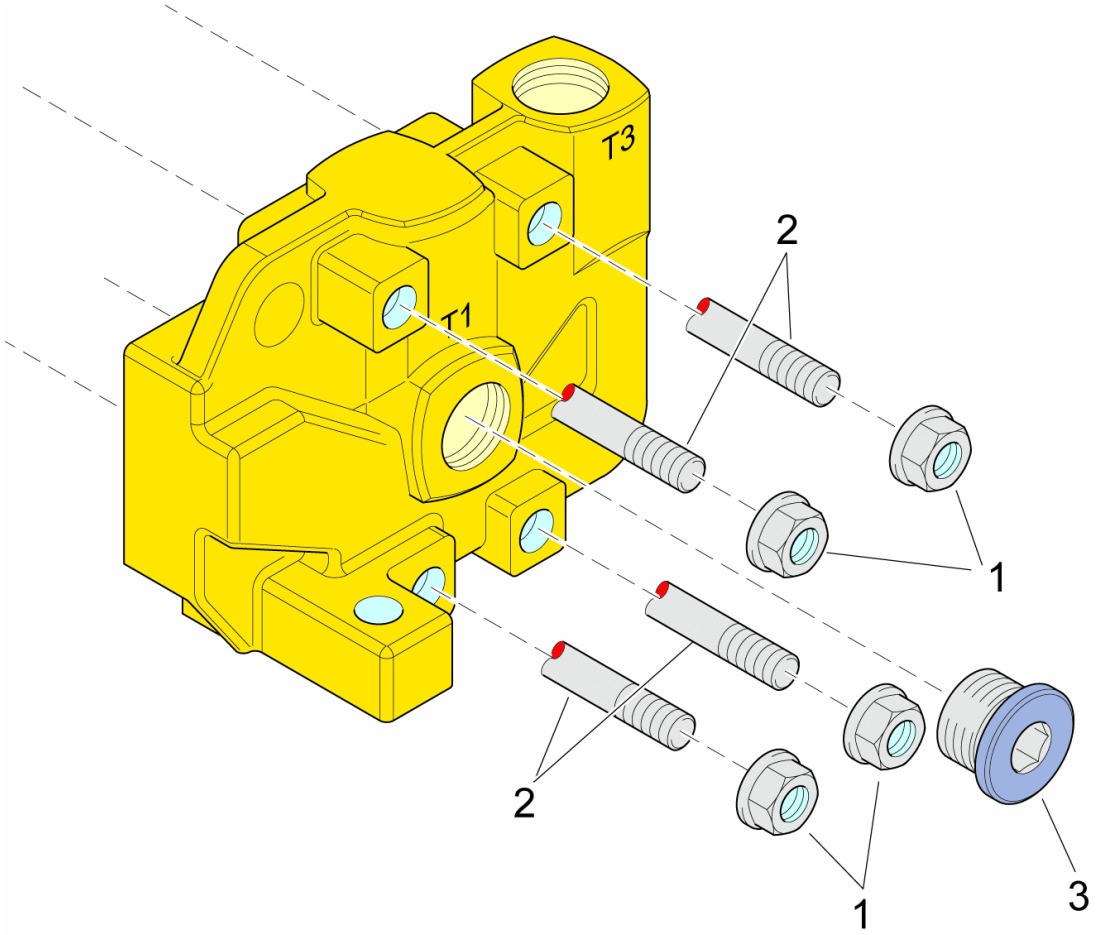

1250 0162 30


B0032233

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 26	1	PULL ROD SET	DRAGSTÅNGSSATS		POS.1,2
3	0686 6442 07	1	PLUG	PROPP		VSTI G 1/4-ED

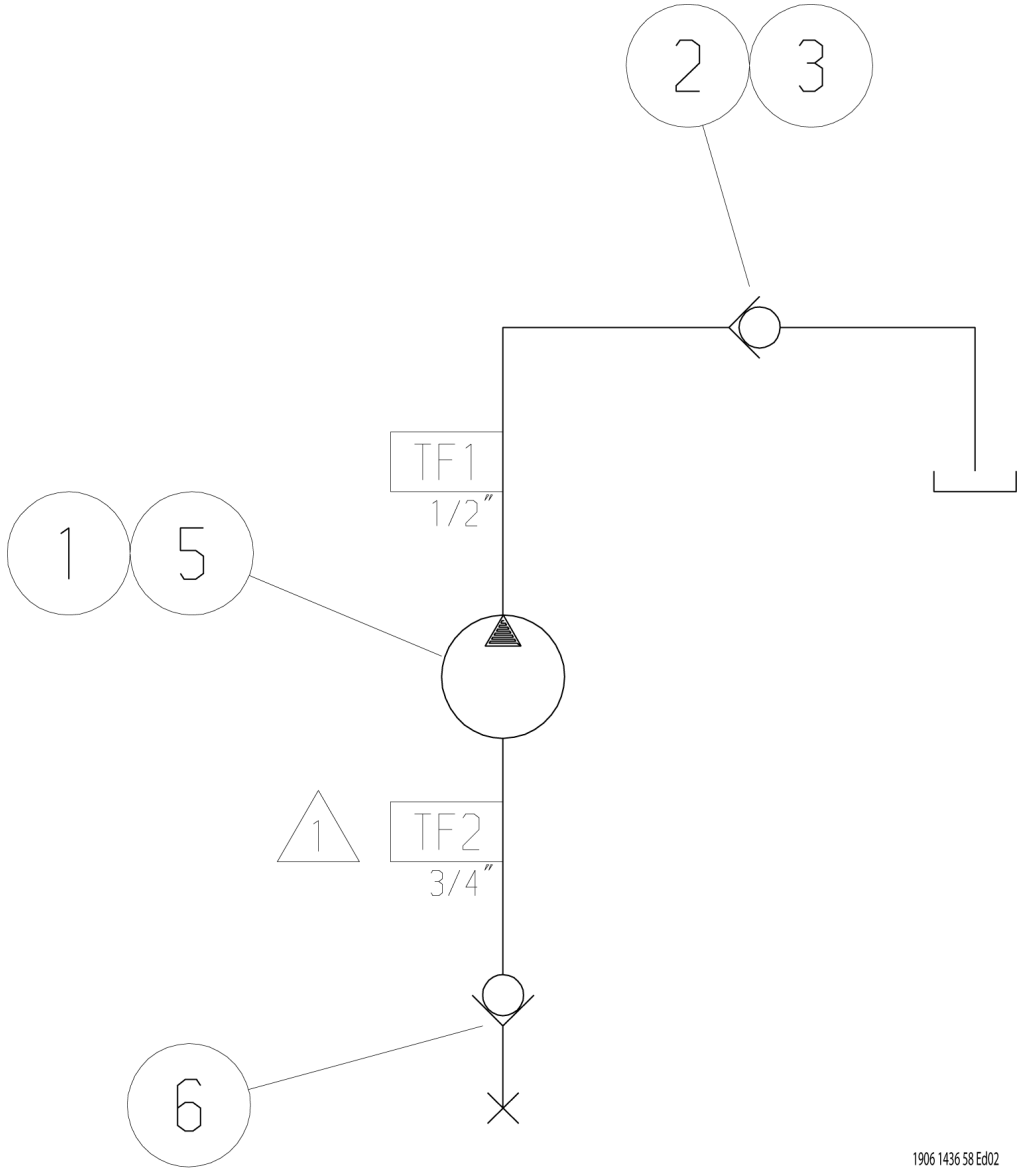

B0023121


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 0796 62	1	HYDRAULIC PUMP	HYDRAULPUMP	Page 187	WITH EL.MOTOR 0,2KW/24VOLT
2	9106 0833 01	1	CHECK VALVE	BACKVENTIL		IA 2290-15
3	0823 0090 06	1	CHECK VALVE	BACKVENTIL		25 G 1
5	9106 1434 46	1	HOSE SET	SLANGSATS	Page 189	ELECTR.OIL FILLER
6	5112 3162 07	1	ELECTRIC SET	ELSATS	Page 191	EL. OILREFILL

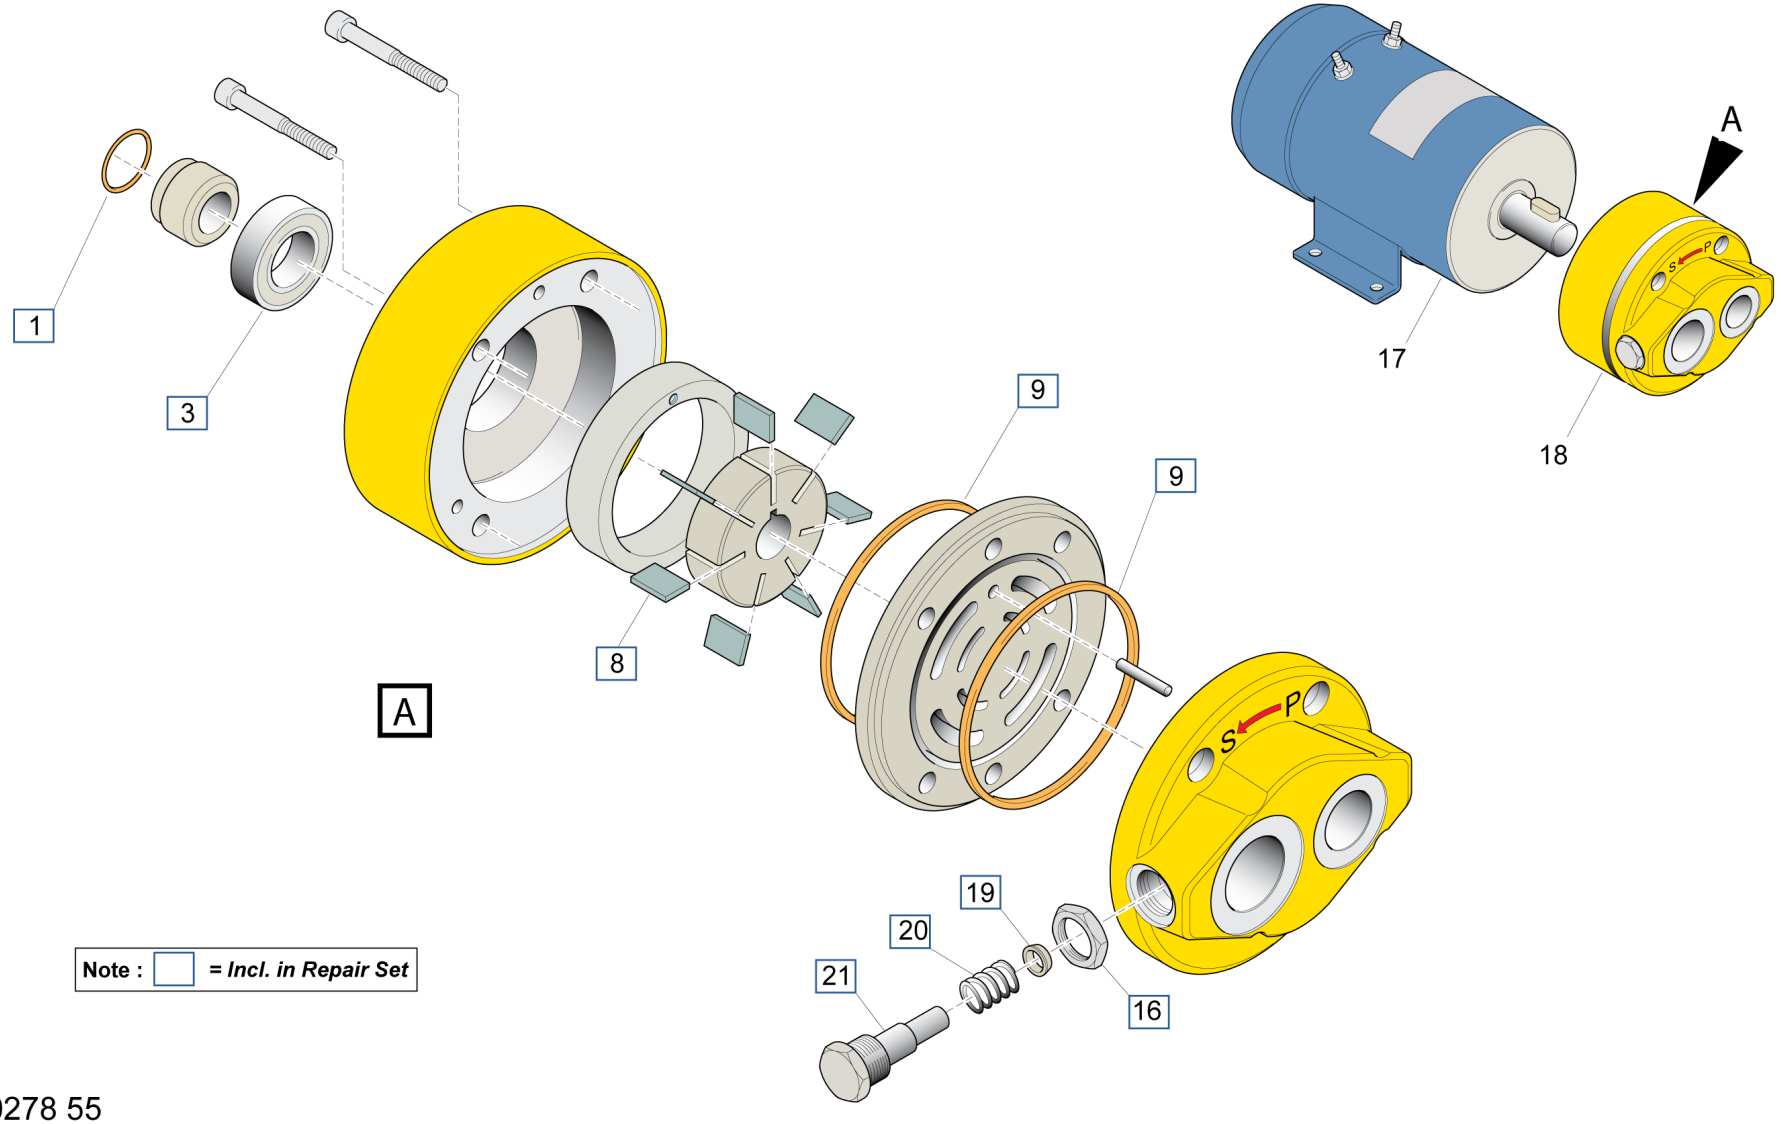

1250 0278 55


B0055959

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9106 1080 07	1	REPAIR SET	REPARATIONSSATS		INCL.POS 1,3,8,9,16
	9106 1080 12	1	REPAIR SET	REPARATIONSSATS		INCL.POS.19,20,21
1	–	1	LOCK RING	LÅSRING		NOT SOLD SEPARATELY
3	–	1	BEARING	LAGER		NOT SOLD SEPARATELY
8	–	7	PLATE	PLATTA		NOT SOLD SEPARATELY
9	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
16	–	1	NUT	MUTTER		NOT SOLD SEPARATELY
17	9106 1080 05	1	MOTOR	MOTOR		
18	9106 1080 06	1	PUMP	PUMP		
19	9106 1080 09	1	CONE	KÄGLA		
20	9106 1080 10	1	SPRING	FJÄDER		
21	9106 1080 11	1	SCREW	SKRUV		

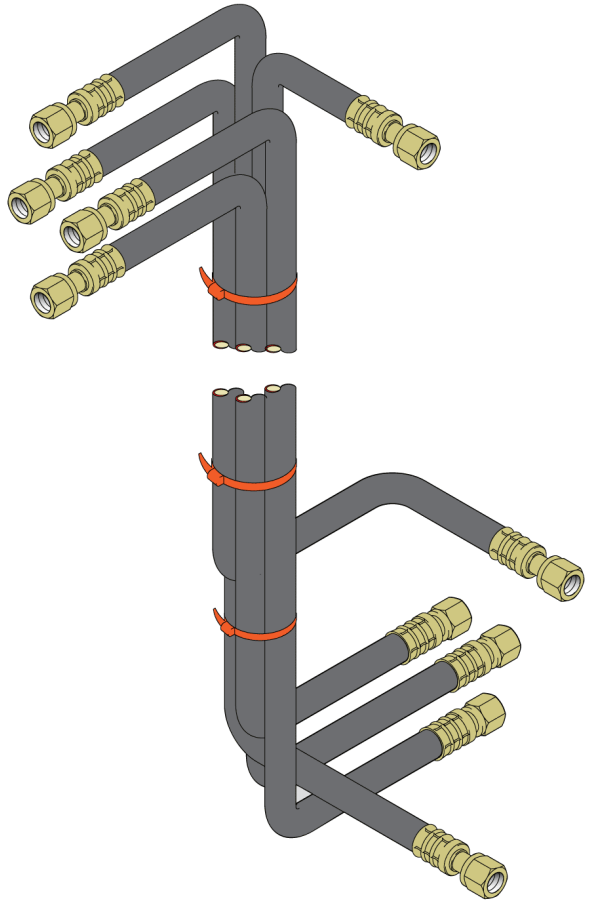

B0015365

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
TF1	3176 6862 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 700 R2AT
TF2	0574 3277 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2000 R2AT

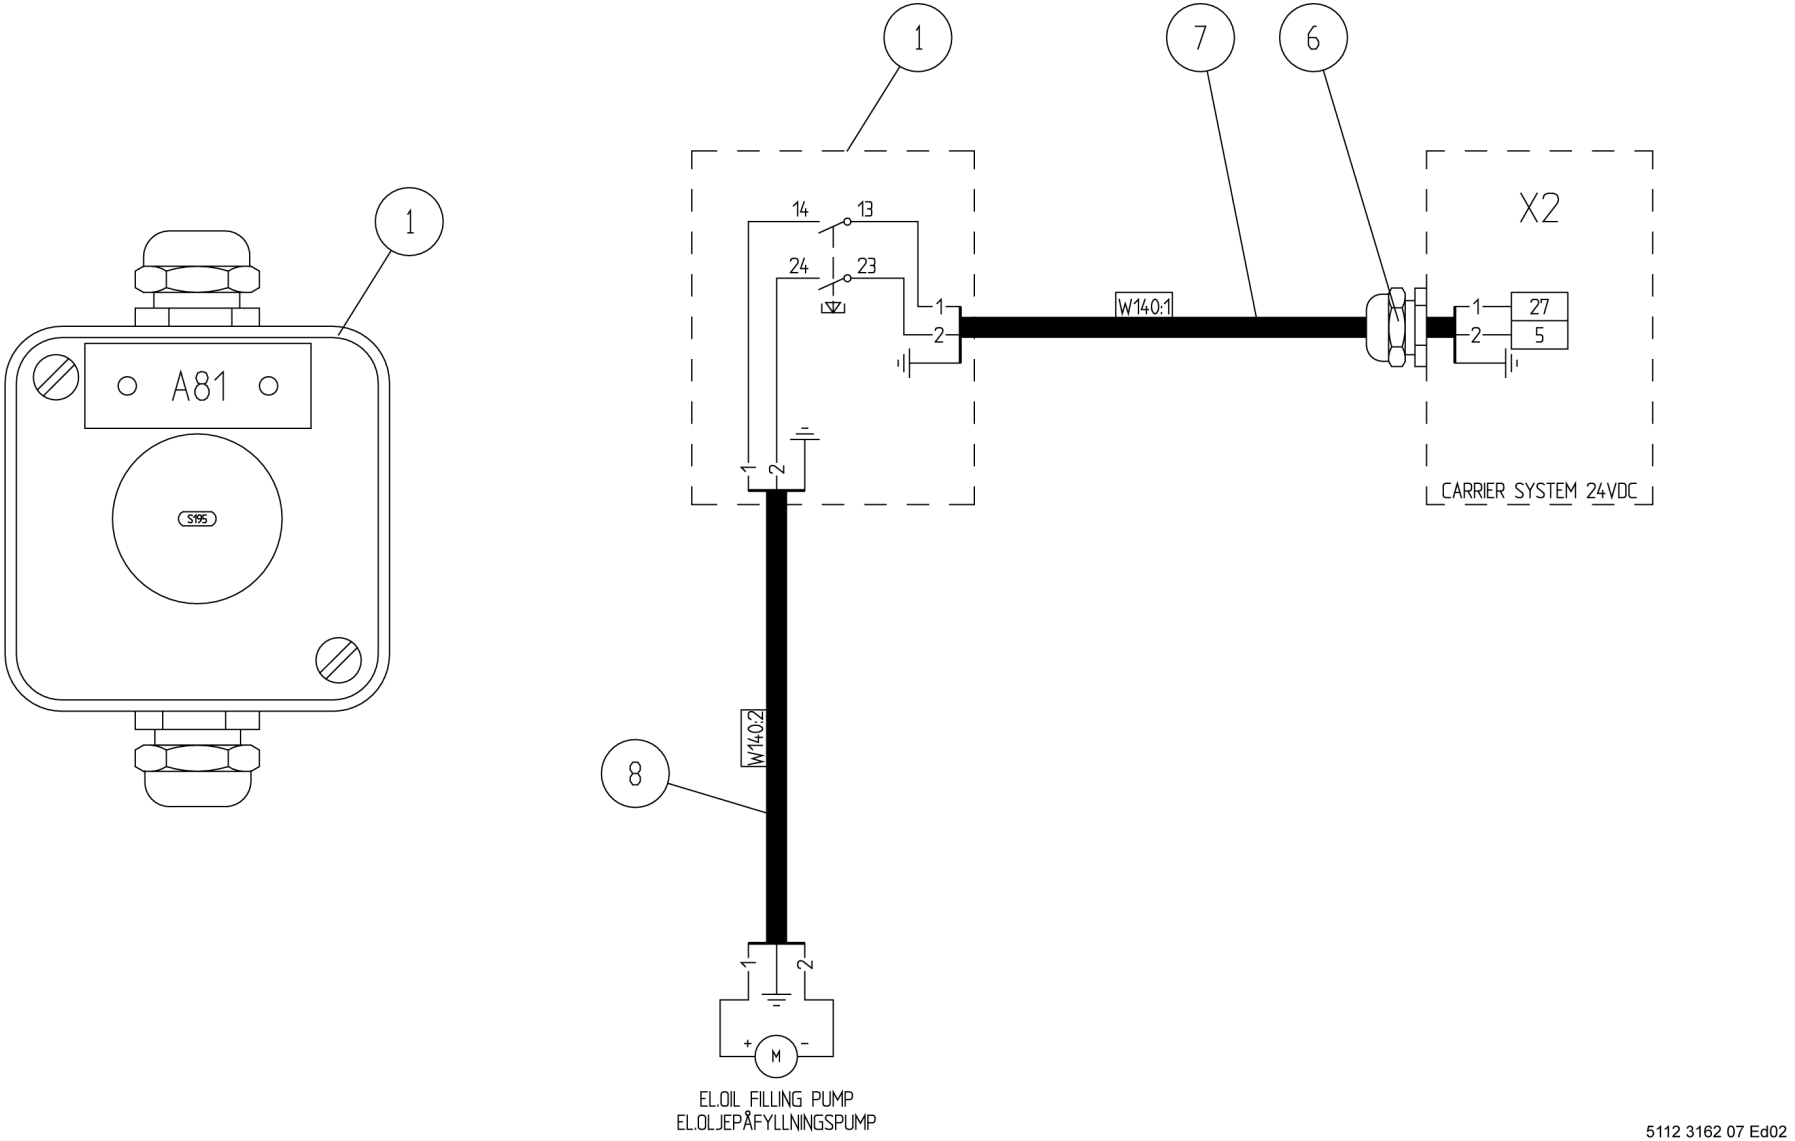



5112 3162 07 Ed02

B0034609

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0006 14	1	PUSH-BUTTON-BOX	TRYCKKNAPPSLÅDA		A81
6	0698 5140 61	1	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
7	9111 3891 59	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		
8	9111 3891 59	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
360	3217 8964 07	1	HYDRAULIC SET	HYDRAULSATS	Page 195	TELESCOPIC FEED
362	–	1	HOSE SET	SLANGSATS	Page 197	

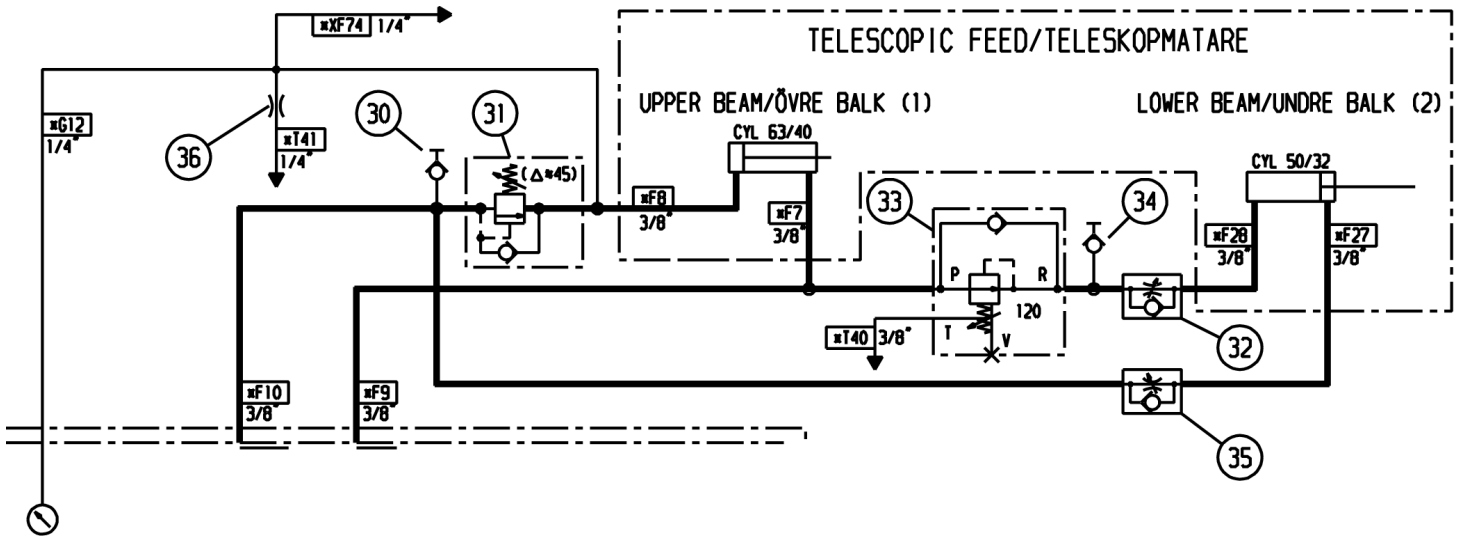


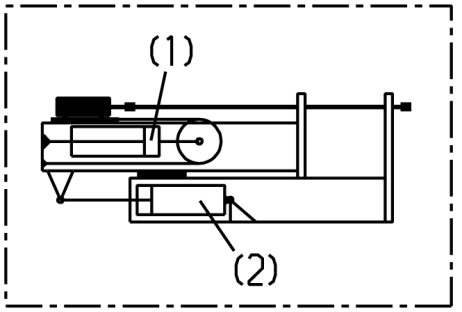


3217 8964 07/1 Ed01

B0010654

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
30	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
31	3177 3173 01	1	PRESS.REL.VALVE	TRYCKBEG.VENTIL		HAWE MVCS 42 FR COMPLETE
32	3176 8264 00	1	FLOW CONT.VALVE	STRYPBACKVENTIL		PH 9F-600-S
33	3217 8937 01	1	VALVE BLOCK	VENTILBLOCK	Page 35	
34	3177 3016 00	1	COUPLING	KOPPLING		2101-01-18.00
35	3176 8264 00	1	FLOW CONT.VALVE	STRYPBACKVENTIL		PH 9F-600-S
36	3217 6513 02	1	RESTRICTION	STRYPNING		D=0,8; 9/16-18 UN

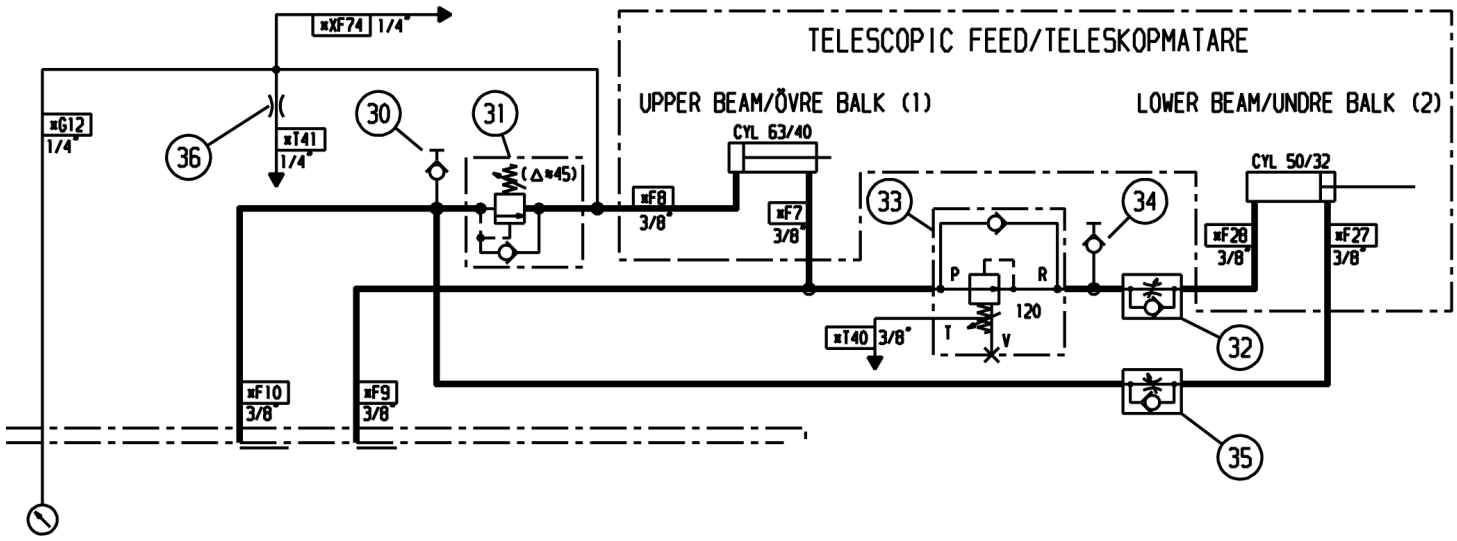

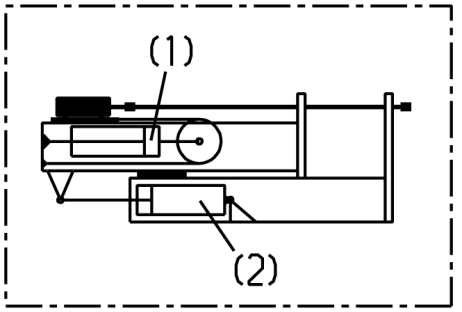

3217 8964 07/1 Ed01

B0010654

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
F10	3176 5677 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1000 R2AT
F12	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT 10 X 700 R2AT
F27	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
F28	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
F9	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
G12	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
G13	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
T40	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
T41	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT

X0000000

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
360	3217 8964 07	1	HYDRAULIC SET	HYDRAULSATS	Page 195	TELESCOPIC FEED
362	–	1	HOSE SET	SLANGSATS	Page 197	

CARRIER / UNDERREDE
LIST OF CONTENTS


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	CARRIER	UNDERREDE	207	
–	– CARRIER	– UNDERREDE	209	
5112 2877 37	– – HYDR. SYSTEM	– – HYDRAULSYSTEM	211	CARRIER
–	– – – HOSE SET	– – – SLANGSATS	215	DC 15 C
5112 3021 12	– – – HYDRAULIC PUMP	– – – HYDRAULPUMP	217	
9106 0630 14	– – – DIRECTION VALVE	– – – RIKTNINGSVENTIL	219	
3128 2020 15	– – – PRESS.RED.VALVE	– – – TRYCKRED.VENTIL	221	R 1/4
5112 1933 80	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	223	STEERING CYL. 125/63/385
5112 2347 80	– – – PILOT VALVE	– – – STYRVENTIL	225	
5112 2348 80	– – – VALVE BLOCK	– – – VENTILBLOCK	227	
–	– – FRAME MOTOR P.	– – RAM MOTORDEL	229	
5112 2331 80	– – – FUEL TANK	– – – BRÄNSLETANK	231	
5112 2331 81	– – – – FUEL TANK	– – – – BRÄNSLETANK	233	
5112 3021 15	– – – DRIVE SHAFT	– – – DRIVAXEL	235	
5112 3024 66	– – – – BRAKE DISC KIT	– – – – BROMSLAMELLSATS	237	COMPLETE KIT ONLY
5112 3024 68	– – – – CROWN WHEEL KIT	– – – – KRONHJULSATS	239	COMPLETE KIT ONLY
5112 3024 71	– – – – PLANET GEAR KIT	– – – – PLANETHJULSSATS	241	COMPLETE KIT ONLY
5112 3197 44	– – – – DIFF.KIT	– – – – DIFF.SATS	243	COMPLETE KIT ONLY
–	– – FRAME MOTOR P.	– – RAM MOTORDEL	245	
5112 3133 74	– – – HYDR. RESERVOIR	– – – HYDRAULTANK	249	
5112 2931 00	– – – – LEVEL-TEMP.IND.	– – – – NIVÅ-TEMP.MÄT.	251	
8234 0200 36	– – – – FILTER, COMPL.	– – – – FILTER, KOMPL.	253	
–	– – – BATTERY BOX	– – – BATTERILÅDA	255	
–	– – EL.EQUIPMENT	– – ELUTRUSTNING	257	CARRIER
5112 0104 01	– – – JUNCTION BOX	– – – KOPPLINGSLÅDA	259	X2
5112 0020 41	– – – – JUNCTION BOX	– – – – KOPPLINGSLÅDA	263	X2


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
5112 0104 04	– – – SWITCH PANEL	– – – INSTRUMENTPANEL	265	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
3217 0012 05	– – – – INDICATION LAMP	– – – – SIGNALLAMPA	269	
–	– – – – HOUR METER	– – – – TIMRÄKNARE	271	COMPLETE
3217 0012 35	– – – – MUSHROOM PUSHB.	– – – – SVAMPTRYCKKNAPP	273	
5112 3046 92	– – – – IGNITION LOCK	– – – – TÄNDNINGSLÅS	275	
3217 0012 58	– – – – PUSH BUTTON	– – – – TRYCKKNAPP	277	
3217 0012 00	– – – – PUSH BUTTON	– – – – TRYCKKNAPP	279	
3217 0012 58	– – – – PUSH BUTTON	– – – – TRYCKKNAPP	277	
5112 0105 48	– – – JUNCTION BOX	– – – KOPPLINGSLÅDA	281	X8
5112 0105 50	– – – JUNCTION BOX	– – – KOPPLINGSLÅDA	283	X9
5112 0104 17	– – – EL EQUIPM.MOTOR	– – – ELUTRUSTN.MOTOR	285	
5112 0104 09	– – – DRIVING LIGHT.	– – – ÅKBELYSNING	289	8 X 70W
5112 3043 40	– – – – HEADLIGHT	– – – – STRÅLKASTARE	291	
5112 3043 40	– – – – HEADLIGHT	– – – – STRÅLKASTARE	291	
5112 3134 81	– – – – HEADLIGHT	– – – – STRÅLKASTARE	293	NORDIC 100 24V
5112 3134 81	– – – – HEADLIGHT	– – – – STRÅLKASTARE	293	NORDIC 100 24V
5112 3217 81	– – – – JUNCTION BOX	– – – – KOPPLINGSLÅDA	295	
–	– – – REVERSE ALARM	– – – BACKALARM	297	
5112 3126 05	– – – BRAKE LIGHT	– – – BROMSLJUS	299	
–	– – DIESEL ENG.UNIT	– – DIESELMOT.ENHET	301	DEUTZ D914L04, T12000
5112 3230 54	– – – DIESEL ENG.UNIT	– – – DIESELMOT.ENHET	303	DEUTZ D914 L04 2V
5112 3230 50	– – – – DIESEL ENGINE	– – – – DIESELMOTOR	305	DEUTZ D914 L04 2V

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	– – – – AIR FILTER SET	– – – – LUFTFILTERSATS	307	
5112 3052 41	– – – – – AIR FILTER	– – – – – LUFTFILTER	309	
5112 3231 60	– – – – AIR INLET	– – – – LUFTINTAG	311	
–	– – – – THROTTLE CONTR.	– – – – GASREGLAGE	313	
5112 3231 88	– – – – – THROTTLE CONTR.	– – – – – GASREGLAGE	315	
5112 3228 68	– – – – CABLE HOLDER	– – – – KABELHÅLLARE	317	
–	– – – – DRAINAGE	– – – – AVTAPPNING	319	
5112 3020 94	– – – CARDAN SHAFT	– – – KARDANAXEL	321	
5112 3216 64	– – – HYDR.TRANSMISS.	– – – HYDR.TRANSMISS	323	
5112 3020 93	– – – CARDAN SHAFT	– – – KARDANAXEL	325	
5112 3041 80	– – – FILLER SET	– – – PÅFYLLNINGSSATS	327	CLARK 12000
5112 3102 99	– – – LEVEL GLASS	– – – NIVÅGLAS	329	
–	– – FUEL SYSTEM	– – BRÄNSLESYSTEM	331	
–	– – PLATFORM COMPL.	– – PLATTFORM KOMPL	333	
–	– – LUBR. SYSTEM	– – SMÖRJSYSTEM	335	
5112 2163 80	– – – LUBR. VALVE	– – – SMÖRJVENTIL	337	
–	– – FRAME BOOM PART	– – RAM BOMDEL	339	
5112 3020 95	– – – CARDAN SHAFT	– – – KARDANAXEL	343	
5112 3021 84	– – – DRIVE SHAFT	– – – DRIVAXEL	345	
5112 3024 66	– – – – BRAKE DISC KIT	– – – – BROMSLAMELLSATS	237	COMPLETE KIT ONLY
5112 3024 68	– – – – CROWN WHEEL KIT	– – – – KRONHJULSATS	239	COMPLETE KIT ONLY
5112 3024 71	– – – – PLANET GEAR KIT	– – – – PLANETHJULSSATS	241	COMPLETE KIT ONLY
5112 3190 18	– – – – DIFF.KIT	– – – – DIFF.SATS	347	COMPLETE KIT ONLY
5112 2360 80	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	349	HC09-K63-32K-400-A37
3128 2099 55	– – – – CHECK VALVE	– – – – BACKVENTIL	351	
5112 3134 38	– – DRIVERS PLATF.	– – FÖRARPLATTFORM	353	
–	– – CHAIR COMPL.	– – STOL KOMPL.	355	
5112 0007 80	– – – CHAIR COMPL.	– – – STOL KOMPL.	357	
5112 2877 19	– – HYDR. SYSTEM	– – HYDRAULSYSTEM	359	OIL COOLER

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	– – HOSE SET	– – SLANGSATS	215	DC 15 C
5112 3231 28	– – EXHAUST SYSTEM	– – AVGASSYSTEM	361	
5112 3232 52	– – – CATALYSER	– – – KATALYSATOR	363	
–	– – – SILENCER	– – – LJUDDÄMPARE	365	
5112 3235 27	– – SET OF WHEELS	– – HJULSATS	367	
5112 3223 56	– – – WHEEL COMPL.	– – – HJUL KOMPL.	369	SOLIDEAL 12.0X20/20 LAGER
5112 2335 80	– – – – RIM COMPL.	– – – – FÄLG KOMPL.	371	
5112 3302 52	– – – ASSEMBLY SET	– – – MONTERINGSSATS	373	WHEEL NUT AND WASHER
–	– – GUIDE UNIT	– – STYRENHET	375	
5112 3025 20	– – – CONTROL PANEL	– – – MANÖVERPULPET	377	
5112 3025 14	– – – STEERING SYSTEM	– – – STYRSYSTEM	379	
5112 3024 99	– – – ANGLE POINTER	– – – VINKELVISARE	381	
–	– MOTOR CAP CATCH	– MOTORHUVSPÄRR	383	
5112 3125 51	– – PAWL PIN	– – SPÄRRPINNE	385	
–	– BOOMBRACKET CPL	– BOMKONSOL KOMPL	387	
9110 8551 00	– SUPPORT LEG	– STÖDBEN	389	
9121 5913 01	– – HYDR. CYLINDER	– – HYDRAULCYLINDER	391	SUPPORT LEG BSJ 10-40
3128 2099 55	– – – CHECK VALVE	– – – BACKVENTIL	351	
9110 7438 80	– PROTECTION ROOF	– SKYDDSTAK	393	
9126 1580 00	– – HYDR. CYLINDER	– – HYDRAULCYLINDER	395	
–	– WARNING SIGNS	– VARNINGSSKYLTAR	398	
9106 1682 10	– LABEL LIST	– DEKALLISTA	401	B 282
–	– FIRE SUPPR.SYST	– ELDBEKÄMPN.SYST	403	ANSUL
5112 3049 30	– – FIRE EXTING.SET	– – ELDSLÄCKN.SATS	405	ANSUL SYSTEM
3217 9316 11	– – – NOZZLE	– – – MUNSTYCKE	407	
–	– – – SEAL	– – – PLOMB	409	
–	– – CONNECTION SET	– – ANSLUTNINGSSATS	411	ANSUL
–	– – HOSE SET	– – SLANGSATS	413	ANSUL


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	– ASSEMBLY SET	– MONTERINGSSATS	415	ANSUL
–	– MAN.GREASE SYST	– MAN.FETTSMÖRJN.	417	
–	– – MAN.GREASE SYST	– – MAN.FETTSMÖRJN.	419	
3217 9766 01	– – – DRUM PUMP	– – – FATPUMP	421	
–	– – HOSE SET	– – SLANGSATS	425	

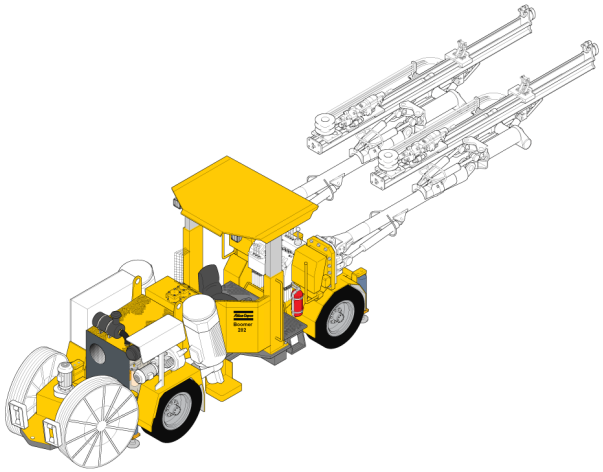

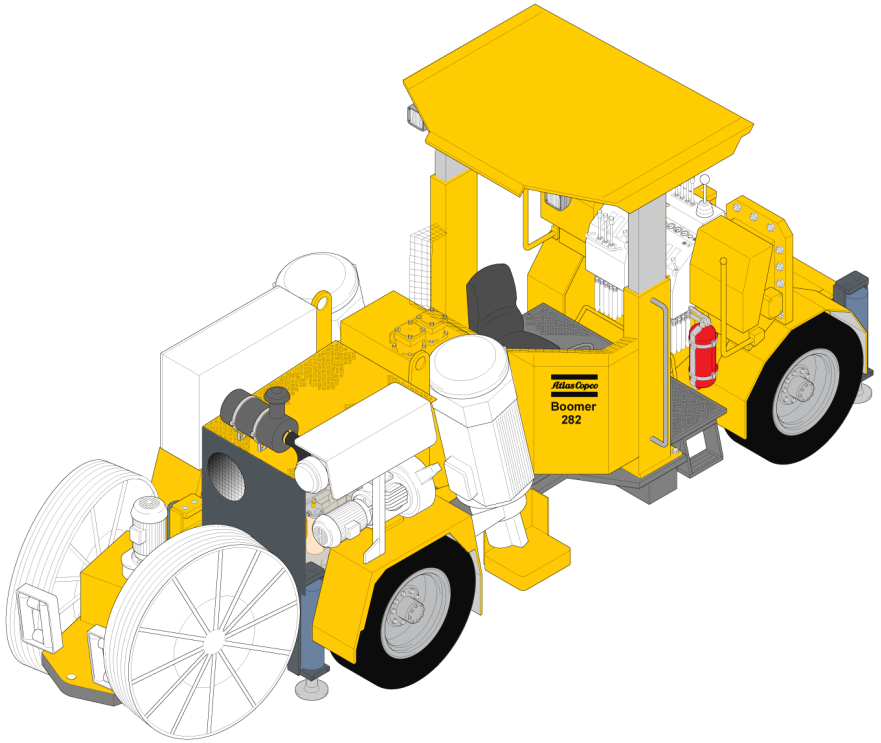
Atlas Copco
Boomer
282

CARRIER / UNDERREDE


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
200	–	1	CARRIER	UNDERREDE	Page 209	
215	–	1	REAR FRAME	EFTERRAM		
217	–	1	MOTOR CAP CATCH	MOTORHUVSPÄRR	Page 383	
220	–	1	BOOMBRACKET CPL	BOMKONSOL KOMPL	Page 387	
230	9110 8551 00	4	SUPPORT LEG	STÖDBEN	Page 389	
235	9110 7438 80	1	PROTECTION ROOF	SKYDDSTAK	Page 393	
237	–	1	ROOF EXTENSION	TAKFÖRLÄNGNING		
266	–	1	WARNING SIGNS	VARNINGSSKYLTAR	Page 398	
267	9106 1682 10	1	LABEL LIST	DEKALLISTA	Page 401	B 282
940	–	1	FIRE SUPPR.SYST	ELDBEKÄMPN.SYST	Page 403	ANSUL
942	–	1	ASSEMBLY SET	MONTERINGSSATS	Page 415	ANSUL
955	–	1	MAN.GREASE SYST	MAN.FETTSMÖRJN.	Page 417	
970	9110 9760 23	1	BINDER BOX	PÄRMFACK		BINDERS CASE

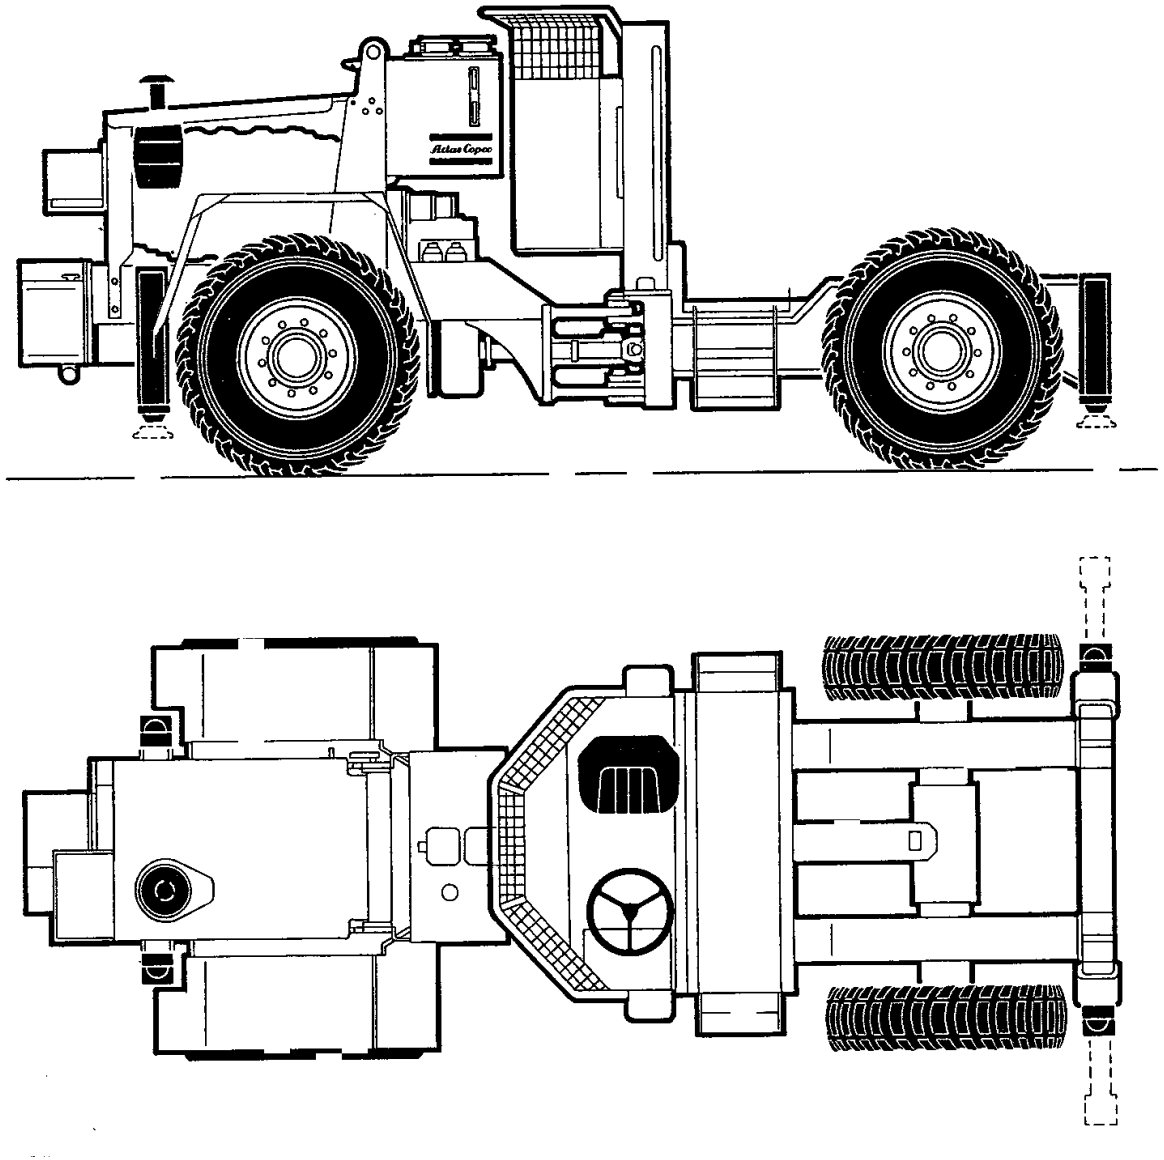

B0000845

CARRIER / UNDERREDE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2877 37	1	HYDR. SYSTEM	HYDRAULSYSTEM	Page 211	CARRIER
2	–	1	FRAME MOTOR P.	RAM MOTORDEL	Page 229	
3	–	1	FRAME MOTOR P.	RAM MOTORDEL	Page 245	
4	–	1	EL.EQUIPMENT	ELUTRUSTNING	Page 257	CARRIER
5	–	1	DIESEL ENG.UNIT	DIESELMOT.ENHET	Page 301	DEUTZ D914L04, T12000
7	–	1	FUEL SYSTEM	BRÄNSLESYSTEM	Page 331	
8	–	1	PLATFORM COMPL.	PLATTFORM KOMPL	Page 333	
9	–	1	LUBR. SYSTEM	SMÖRJSYSTEM	Page 335	
10	–	1	FRAME BOOM PART	RAM BOMDEL	Page 339	
11	5112 3134 38	1	DRIVERS PLATF.	FÖRARPLATTFORM	Page 353	
12	–	1	CHAIR COMPL.	STOL KOMPL.	Page 355	
13	5112 2877 19	1	HYDR. SYSTEM	HYDRAULSYSTEM	Page 359	OIL COOLER
14	–	1	HOSE SET	SLANGSATS	Page 215	DC 15 C
15	5112 3231 28	1	EXHAUST SYSTEM	AVGASSYSTEM	Page 361	
16	5112 3235 27	2	SET OF WHEELS	HJULSATS	Page 367	
17	–	1	GUIDE UNIT	STYRENHET	Page 375	
32	9721 0800 00	30L	FUEL	BRÄNSLE		DF DIESEL

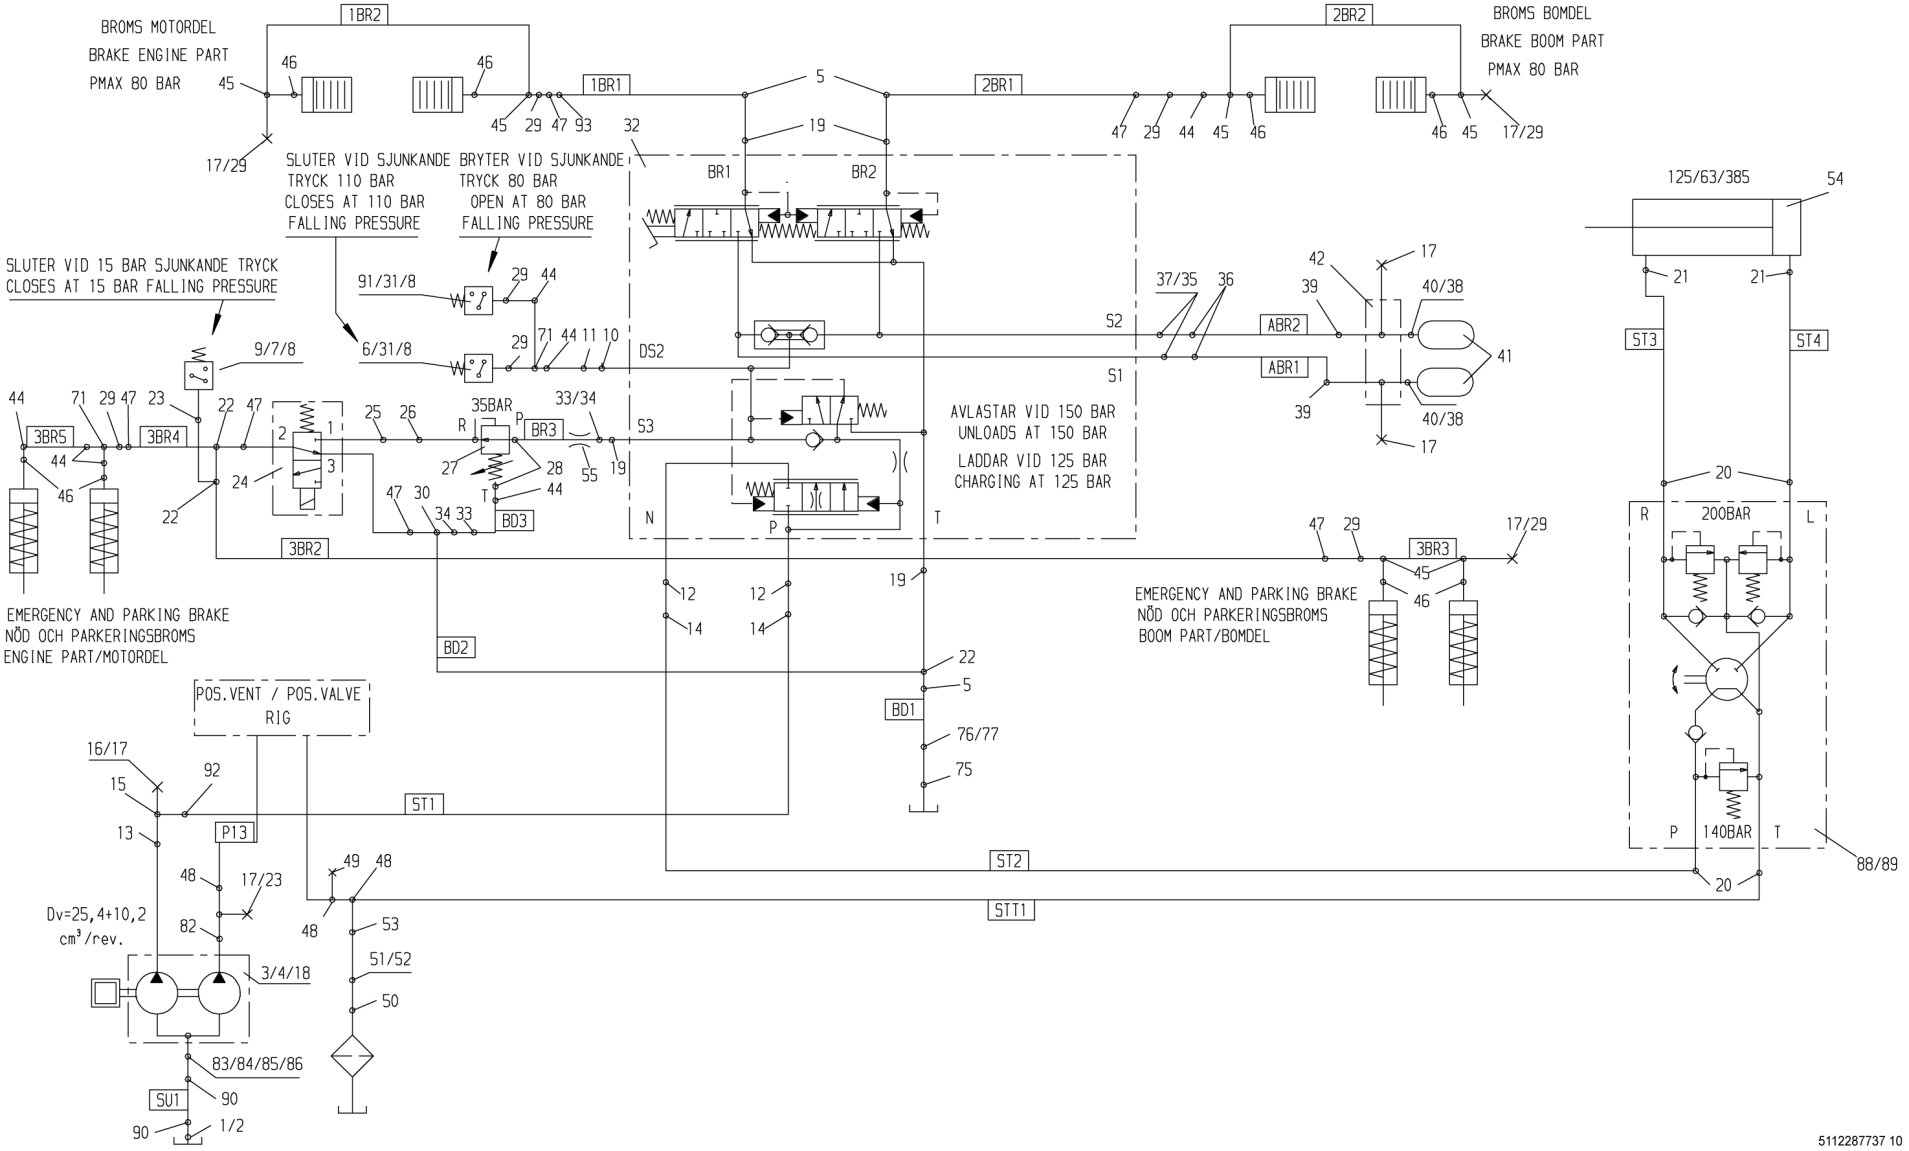
BROMS MOTORDEL
BRAKE ENGINE PART
PMAX 80 BAR
1BR2
1BR1
2BR1
2BR2
BROMS BOMDEL
BRAKE BOOM PART
PMAX 80 BAR
SLUTER VID SJUNKANDE TRYCK 110 BAR CLOSES AT 110 BAR FALLING PRESSURE
BRYTER VID SJUNKANDE TRYCK 80 BAR OPEN AT 80 BAR FALLING PRESSURE
SLUTER VID 15 BAR SJUNKANDE TRYCK CLOSES AT 15 BAR FALLING PRESSURE
BR1
BR2
DS2
S1
S2
S3
AVLASTAR VID 150 BAR UNLOADS AT 150 BAR
LADDAR VID 125 BAR CHARGING AT 125 BAR
ABR1
ABR2
3BR2
3BR3
3BR4
3BR5
BR3
BD1
BD2
BD3
35BAR
200BAR
140BAR
125/63/385
ST1
ST2
STT1
ST3
ST4
P13
SU1
EMERGENCY AND PARKING BRAKE
NÖD OCH PARKERINGSBROMS
ENGINE PART/MOTORDEL
EMERGENCY AND PARKING BRAKE
NÖD OCH PARKERINGSBROMS
BOOM PART/BOMDEL
POS.VENT / POS.VALVE
RIG
Dv=25,4+10,2
cm³/rev.
3/4/18
83/84/85/86
88/89
9/7/8
6/31/8
91/31/8
16/17
17/23
51/52
76/77
1/2
5112287737 10


B0056342

(Sheet 1 of 3)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
A	–	1	HOSE SET	SLANGSATS	Page 215	DC 15 C
1	5107 1534 00	1	NIPPLE	NIPPEL		
2	0661 1056 00	1	SEAL WASHER	TÄTNINGSBRICKA		42,9 / 52,4 X 3,4 FZ ST.
3	0301 2358 00	2	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
4	0144 3363 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		UNC 1/2 X 32 - 8.8 FZB
5	3176 3060 00	3	NIPPLE	NIPPEL		UNF 3/4
6	5112 2921 01	1	PRESSURE SWITCH	TRYCKVAKT		
7	5112 2949 00	1	PROTECT. COVER	SKYDDSHUV		
8	0661 1020 00	3	SEAL WASHER	TÄTNINGSBRICKA		13,7 / 20,6 X 2,1 - FZ ST TREDO 1/4
9	5112 2595 00	1	PRESSURE SWITCH	TRYCKVAKT		SUCO 0166412031047
10	0653 1055 00	1	GASKET	PACKNING		12 / 15,5 X 1,5-11 501312
11	3176 7707 00	1	NIPPLE	NIPPEL		UNF 9/16 - M12 X 1,5
12	0570 5010 31	2	NIPPLE	NIPPEL		UNF 7/8 - M18 X 1,5
13	3176 2131 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 3/4 UNF 7/8-G 3/4 STRAIGHT
14	3176 6549 00	2	NIPPLE	NIPPEL		UNF 7/8
15	3176 6590 00	1	NIPPLE	NIPPEL		UNF 7/8 T- /SVIVELNUT
16	0570 5191 06	1	TEST CONNECTION	TESTANSLUTNING		UNF 7/8 - GR 1/4
17	3177 3016 00	7	COUPLING	KOPPLING		2101-01-18.00
18	5112 3021 12	1	HYDRAULIC PUMP	HYDRAULPUMP	Page 217	
19	0570 5010 30	4	NIPPLE	NIPPEL		UNF 3/4 - M16 X 1,5
20	3177 3068 00	4	NIPPLE	NIPPEL		UNF 7/8 - M18 X 1,5
21	3177 3046 00	2	NIPPLE	NIPPEL		UNF 7/8 - G 3/4
22	3176 5535 00	3	NIPPLE	NIPPEL		UNF 3/4
23	0570 5191 05	2	TEST CONNECTION	TESTANSLUTNING		UNF 3/4 - G 1/4
24	9106 0630 14	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 219	
25	3176 6348 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
26	3176 8489 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
27	3128 2020 15	1	PRESS.RED.VALVE	TRYCKRED.VENTIL	Page 221	R 1/4
28	3176 6351 00	2	NIPPLE	NIPPEL		UNF 9/16 - G 1/4


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
29	0570 5191 07	9	TEST CONNECTION	TESTANSLUTNING		UNF 9/16 - G 1/4
30	3176 6576 00	1	NIPPLE	NIPPEL		UNF 3/4
31	5112 2949 01	2	PROTECT. COVER	SKYDDSHUV		
32	5112 2878 05	1	BRAKE VALVE	BROMSVENTIL		
33	3176 6615 00	2	CAP NUT	ÖVERFALLSMUTTER		UNF 3/4
34	3176 6501 00	3	NIPPLE	NIPPEL		UNF 3/4 - UNF 9/16
35	0663 2127 00	2	O-RING	O-RING		24,2 X 3 70 SHORE
36	3176 6344 00	2	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
37	5112 3012 00	2	BUSHING	BUSSNING		
38	0661 1033 00	4	SEAL WASHER	TÄTNINGSBRICKA		21,5 / 28,6 X 2,5 FZ ST.
39	3176 6564 00	2	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
40	0603 4225 00	2	HEXAGON NIPPLE	SEXKANTNIPPEL		R 1/2 - R 1/2 - 11 1914
41	5112 2915 00	2	ACCUMULATOR	ACKUMULATOR		65 BAR
42	5112 3024 50	1	ACCUMULAT.BLOCK	ACKUMULAT.BLOCK		
44	3715 0584 00	7	ELBOW NIPPLE	VINKELNIPPEL		UNF 9/16 - UNF 9/16
45	3176 5428 00	6	NIPPLE	NIPPEL		UNF 9/16
46	0570 5010 34	8	NIPPLE	NIPPEL		UNF 9/16 - M14 X 1,5 UNF 9/16-M14X1,5 STRAIGHT
47	3176 6511 00	6	NIPPLE	NIPPEL		UNF 3/4 - G 1/4
48	3176 6590 00	3	NIPPLE	NIPPEL		UNF 7/8 T- /SVIVELNUT
49	3715 0597 00	1	CAP	HUV		UNF 7/8
50	3176 6646 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
51	3176 6788 00	1	CAP NUT	ÖVERFALLSMUTTER		UN 1 7/8
52	3176 7337 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 1/16
53	3176 6505 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 7/8
54	5112 1933 80	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 223	STEERING CYL. 125/63/385
55	3217 6512 01	1	RESTRICTION	STRYPNING		D=3,4
71	3176 5427 00	2	NIPPLE	NIPPEL		UNF 9/16
SU1	5107 1536 00	1	HOSE ASSEMBLY	SLANGLEDNING		
75	3176 6517 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4
76	3176 6504 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 3/4

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
77	3176 2930 00	1	CAP NUT	ÖVERFALLSMUTTER		UN 1 1/16
82	3176 6515 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
83	3128 2019 54	1	HOSE NIPPLE	SLANGNIPPEL		
84	0638 0527 00	2	FLANGE HALF	FLÄNSHALVA		32 X 51,59 SAE 1 1/4 P276 ZINC PLATED
85	0211 1960 82	4	SCREW	SKRUV		MC6S M 10 X 35 - 12.9
86	0663 9191 01	1	O-RING	O-RING		37,69X 3,53 90 SHORE
88	5112 2347 80	1	PILOT VALVE	STYRVENTIL	Page 225	
89	5112 2348 80	1	VALVE BLOCK	VENTILBLOCK	Page 227	
90	0347 4344 00	2	HOSE CLIP	SLANGKLÄMMA		D=47 NORMA TYP SKZ
91	5112 3023 43	1	PRESSURE SWITCH	TRYCKVAKT		
92	3715 0585 00	1	NIPPLE	NIPPEL		UNF 7/8
93	3176 3060 00	1	NIPPLE	NIPPEL		UNF 3/4

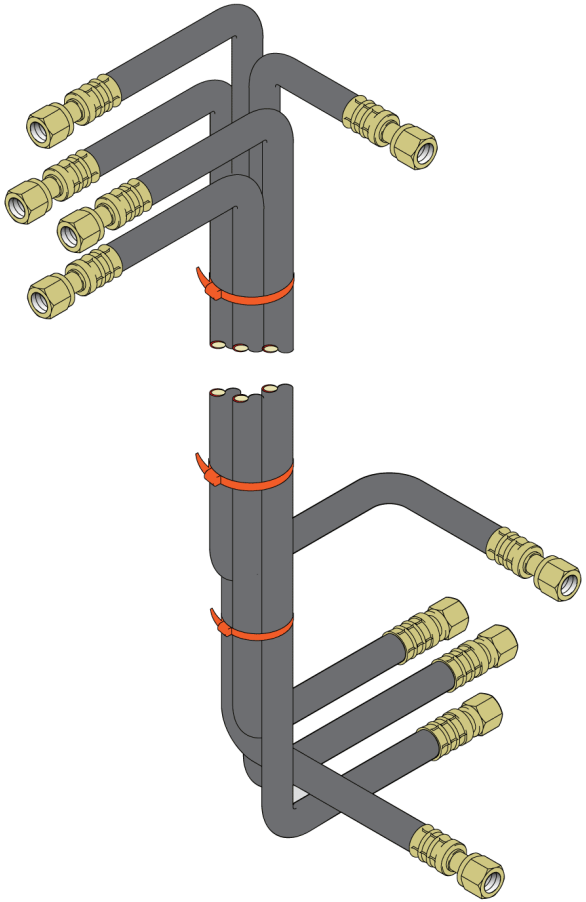


B0015365

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
ABR1	0574 1316 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2700 R2AT
ABR2	0574 1281 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2800 R2AT
STT1	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
BD1	3176 6975 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2400 R2AT
BD2	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
BD3	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
BR3	0574 0260 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 650 R2AT
CV1	0574 3261 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 700 R2AT
CV2	0574 3264 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 850 R2AT
P13	0574 2280 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2600 R2AT
ST1	0574 2273 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1600 R2AT
ST2	0574 0000 39	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 850 R2AT
ST3	0574 2280 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2600 R2AT
ST4	0574 2280 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2600 R2AT
TRF	0574 3261 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 700 R2AT
1BR1	0574 0064 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2900 R2AT
1BR2	0574 0328 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 220 R2AT
2BR1	0574 0065 91	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3100 R2AT
2BR2	3176 7457 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 350 R2AT
3BR2	0574 0064 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2900 R2AT
3BR3	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
3BR4	0574 1321 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2500 R2AT
3BR5	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT

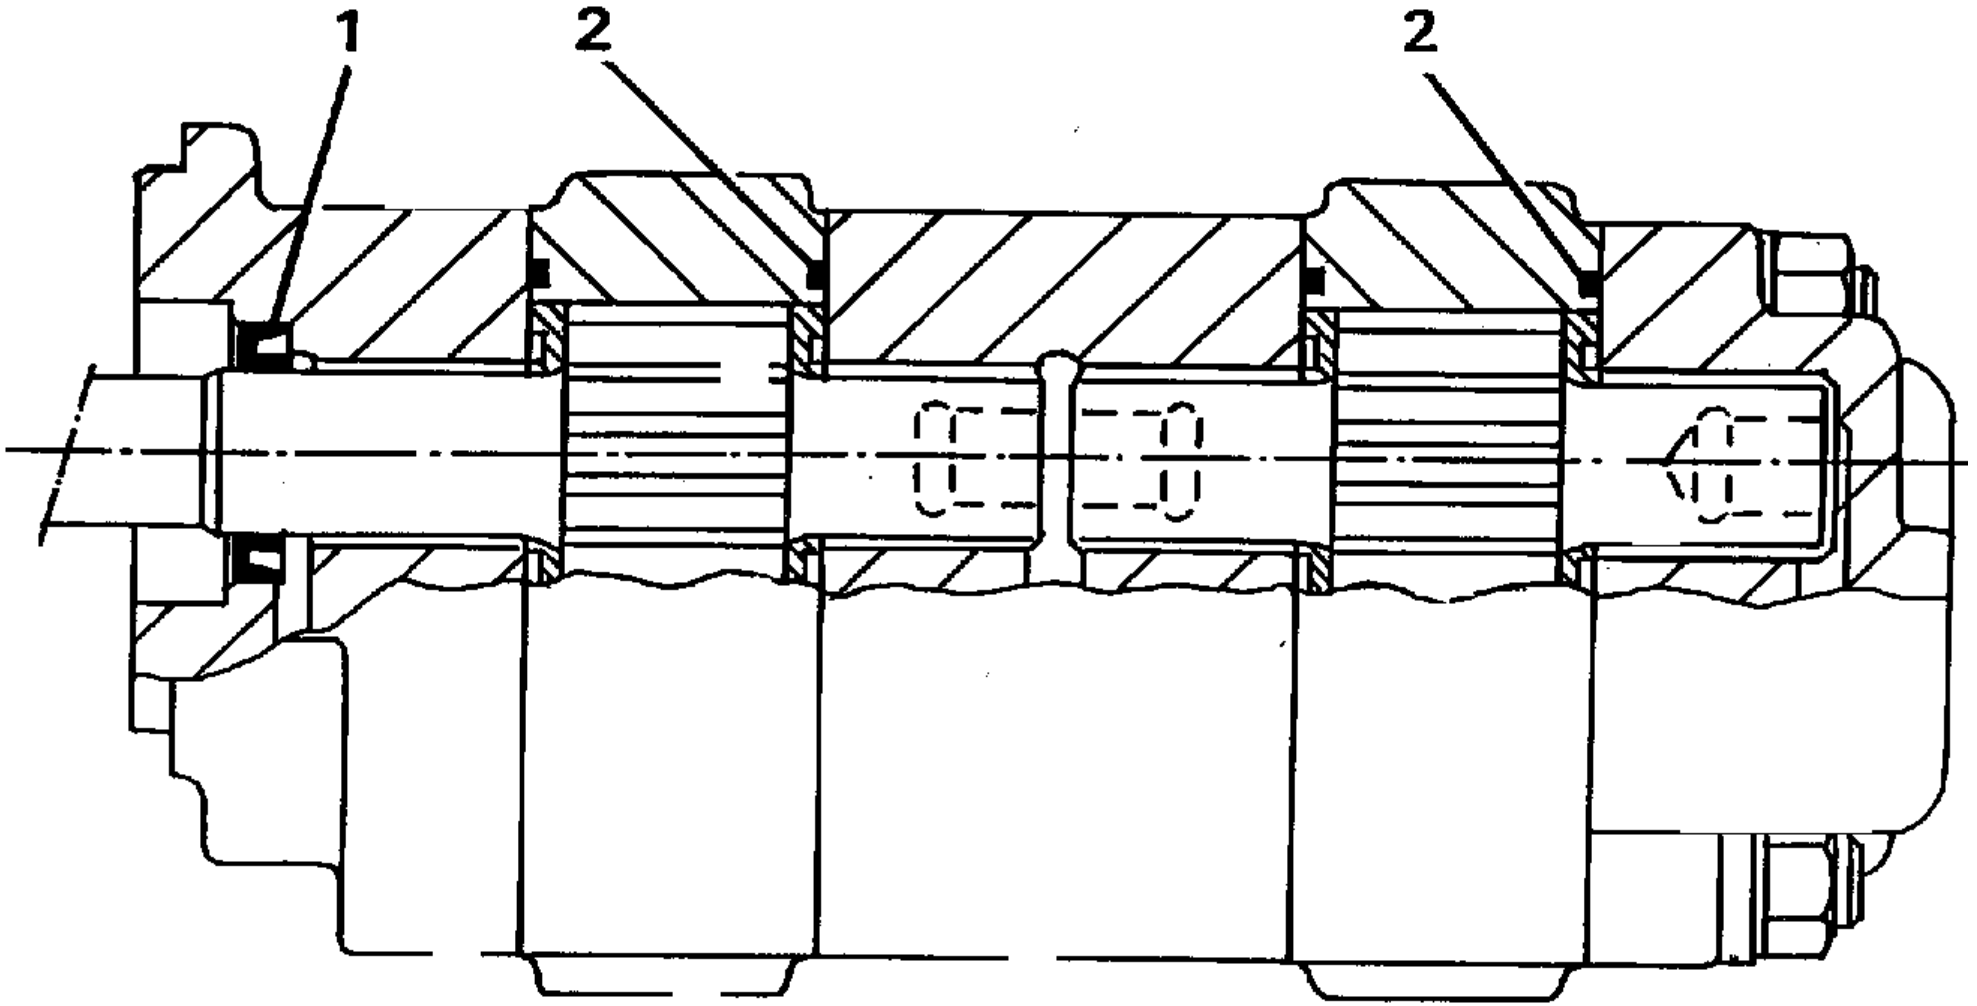

B0000169


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 3100 56	1	SEAL KIT	TÄTNINGSSATS		REF 1-2

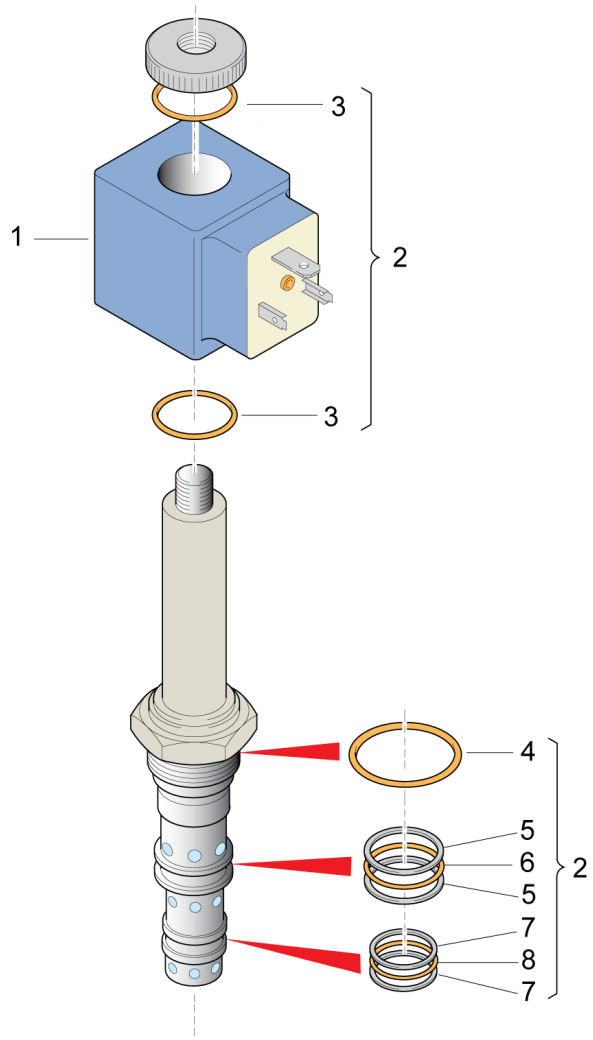

1250 0234 73

B0047201


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3222 3106 10	1	SOLENOID	MAGNETSPOLE		
2	3128 3087 31	1	SEAL KIT	TÄTNINGSSATS		INCL.POS.3-8
3	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
5	–	2	BACK-UP RING	STÖDRING		NOT SOLD SEPARATELY
6	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
7	–	2	BACK-UP RING	STÖDRING		NOT SOLD SEPARATELY
8	–	1	O-RING	O-RING		NOT SOLD SEPARATELY

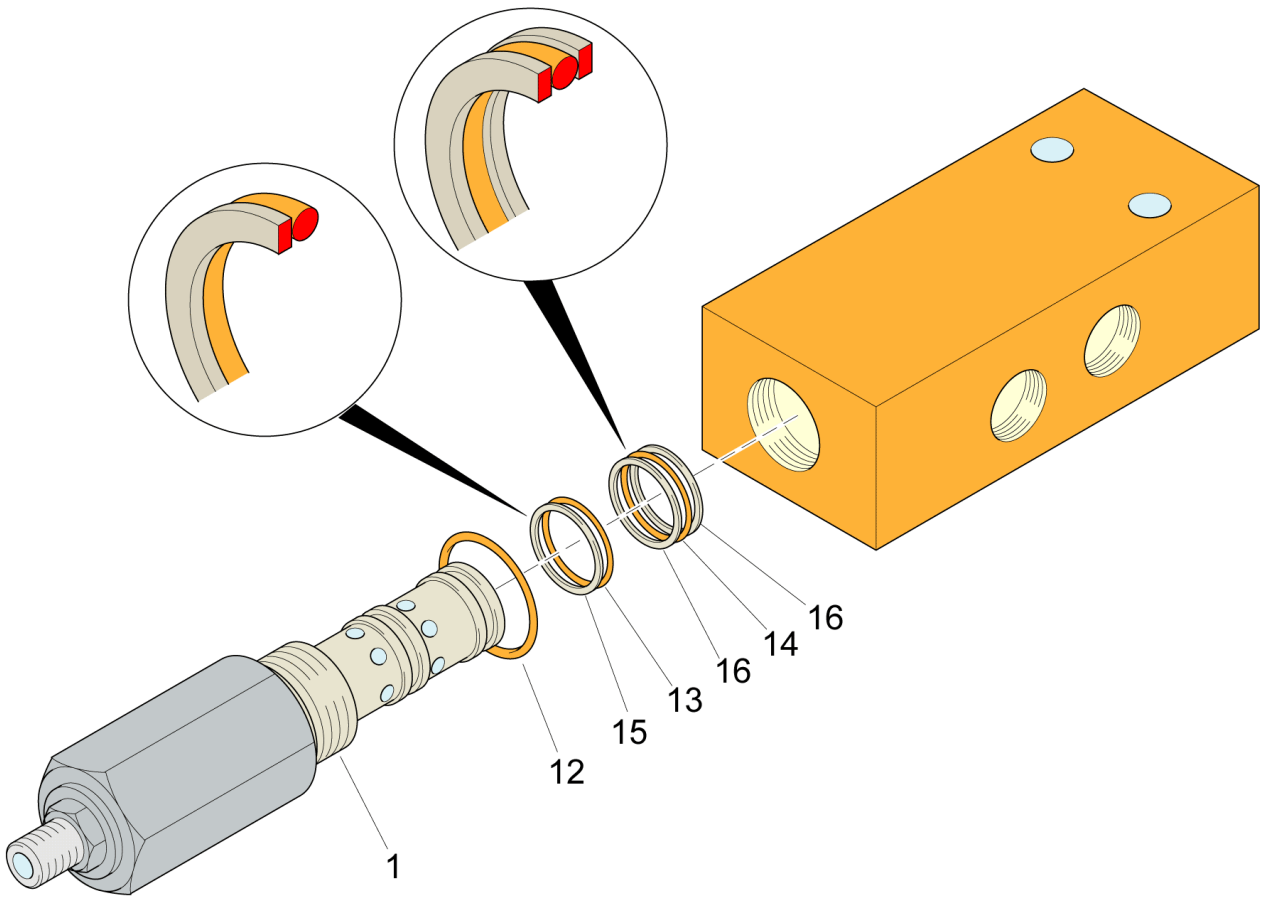

1250 0052 53


B0004672

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 3023 72	1	SEAL KIT	TÄTNINGSSATS		INCL.POS.12-16
1	3128 3023 71	1	INSERT	INSATS		INCL.SEALS

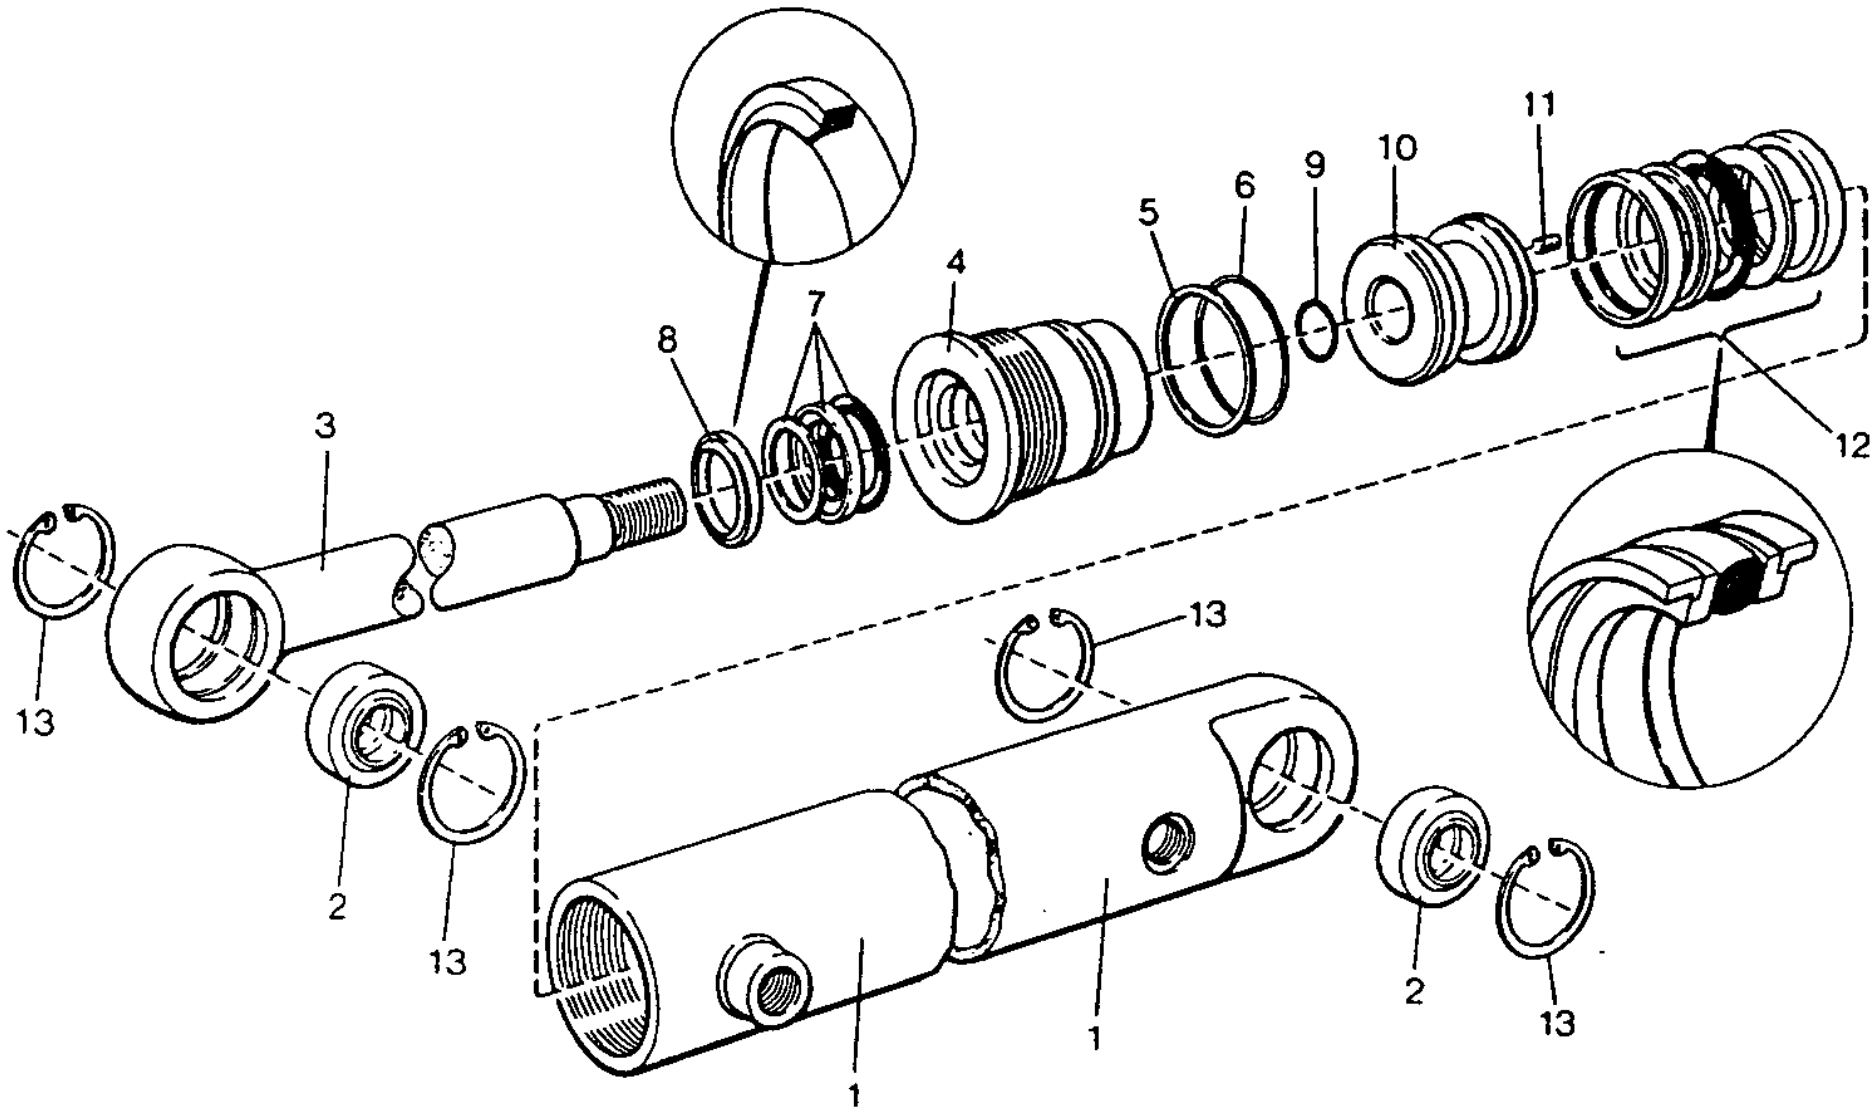

B0000876


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9120 0990 14	1	SEALING SET	PACKNINGSSATS		REF. NO. 5-9,11,12.
1	–	1	MANTLE	MANTEL		
2	0501 0019 01	2	BEARING,SP.PL.	LEDLAGER		60 / 90 X 44
3	9123 6624 00	1	PISTON ROD	KOLVSTÅNG		
4	9123 6507 13	1	CYLINDER COVER	CYLINDERLOCK		INCLUDES REF. NO. 5-8.
5	0661 1568 00	1	BACK-UP RING	STÖDRING		115 / 125 X 1,7
6	0663 2150 00	1	O-RING	O-RING		114,3 X 5,7 70 SHORE
7	0665 0010 18	1	PISTON ROD SEAL	KOLVSTÅNGSTÄTN.		A1 63 83
8	0665 9100 16	1	WIPER	AVSTRYKARE		63 / 75 X 10 AU 94
9	0663 2135 00	1	O-RING	O-RING		44,2 X 3 70 SHORE
10	9124 9568 00	1	PISTON	KOLV		
11	0196 1552 10	1	SET SCREW	STOPPSKRUV		M 8 X 12 SK6SS DIN 916
12	0665 0800 35	1	PISTON SEAL	KOLVTÄTNING		E1X 100 125
13	0335 2165 00	4	CIRCLIP	SPÅRRING		SGH 90 X 3 DIN 472

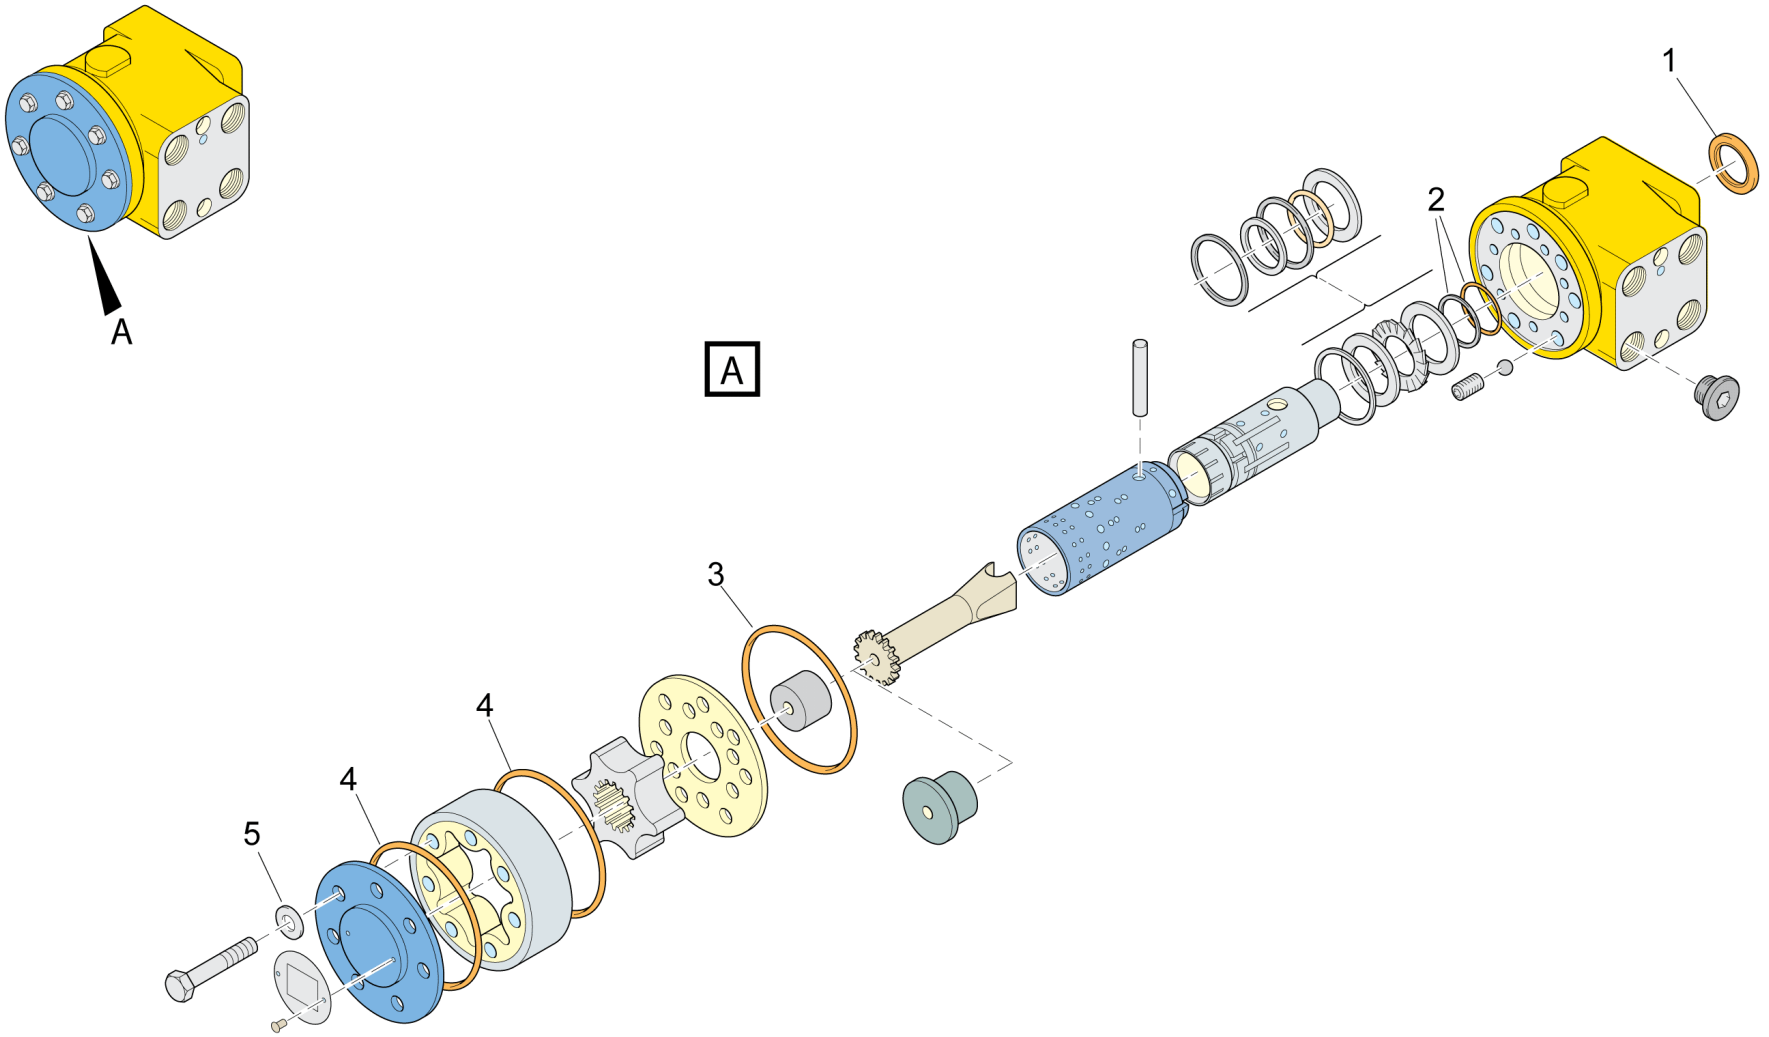

1250 0037 96

B0038350

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 2347 92	1	SEALING SET	PACKNINGSSATS		INCL.POS.1-5

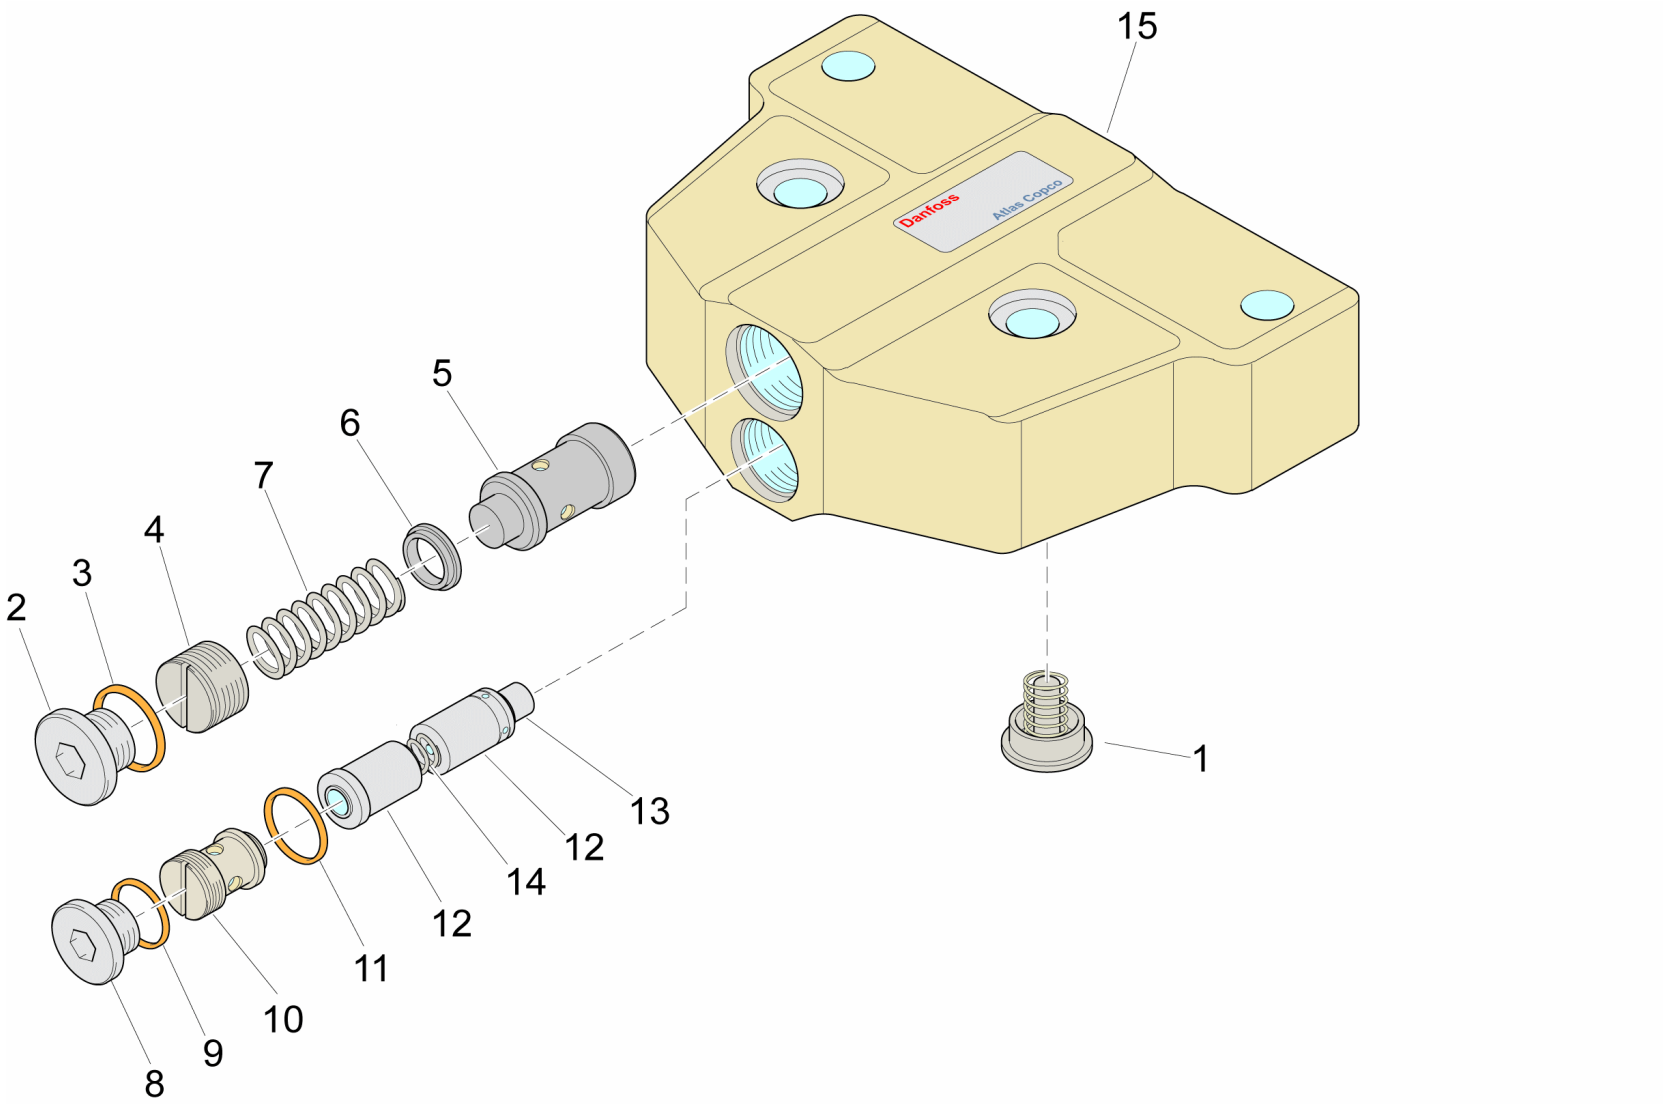


1250 0148 93

B0024629

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 2348 91	1	SEAL KIT	TÄTNINGSSATS		INCL.POS: 3,9,11
	5112 3120 19	1	SHOCK VALVE	CHOCKVENTIL		INCL.POS: 8-14
	5112 3217 56	1	RELIEF VALVE	AVLASTN.VENTIL		INCL.POS: 2-7

FRAME MOTOR P. / RAM MOTORDEL

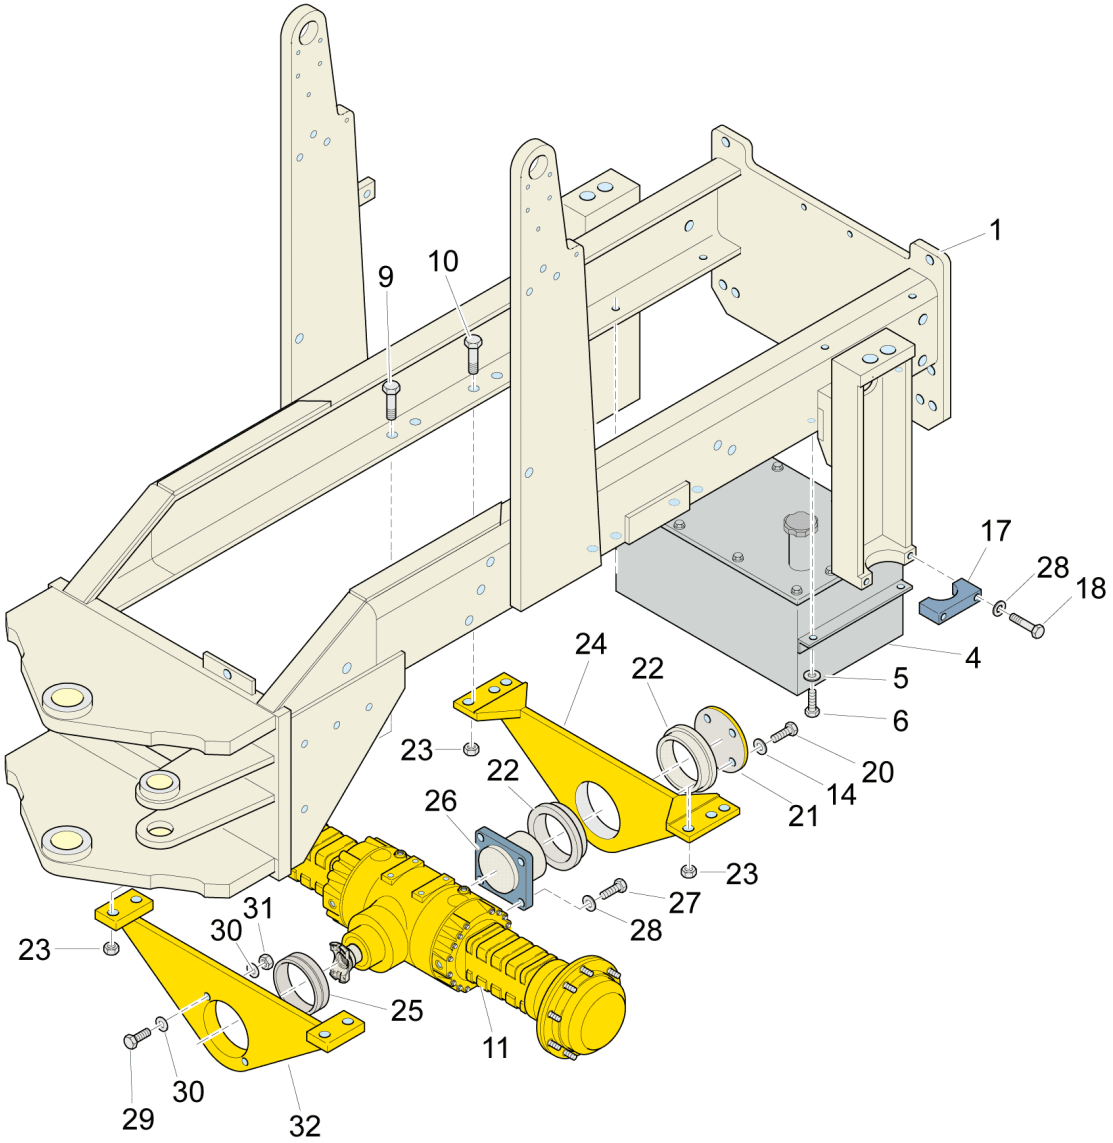


1250 0208 91

B0044363

FRAME MOTOR P. / RAM MOTORDEL


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3020 70	1	MOTOR FRAME	MOTORRAM		
4	5112 2331 80	1	FUEL TANK	BRÄNSLETANK	Page 231	
5	0301 2344 00	4	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
6	0147 1362 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
9	0147 1555 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 20 X 70 - 8.8 FZB
10	0147 1553 03	9	SCREW, HEX HEAD	SKRUV, SEXKANT		M 20 X 60 - 8.8 FZB
11	5112 3021 15	1	DRIVE SHAFT	DRIVAXEL	Page 235	
14	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
17	5112 2710 00	2	ATTACHM. PLATE	FÄSTPLÅT		
18	0147 1491 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 110 - 8.8 FZB
20	0147 1403 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 40 - 8.8 FZB
21	5112 2524 00	1	COVER	LOCK		
22	5112 2525 00	2	BUSHING	BUSSNING		
23	0291 1128 28	10	LOCK NUT	LÅSMUTTER		M 20 - 8 FZB / ISO 7040
24	5112 3000 86	1	BRACKET	KONSOL		
25	5112 3000 90	1	BUSHING	BUSSNING		
26	5112 2523 00	1	CUSHION	KUTS		
27	0211 1962 92	4	SCREW	SKRUV		MC6S M 16 X 35 - 12.9
28	0301 2378 00	8	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
29	0147 1332 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 60 - 8.8 FZB
30	0303 1274 01	4	PLAIN WASHER	RUNDBRICKA		8,4 / 26 X 5 - 5.8 FZB
31	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
32	5112 3000 85	1	BRACKET	KONSOL		

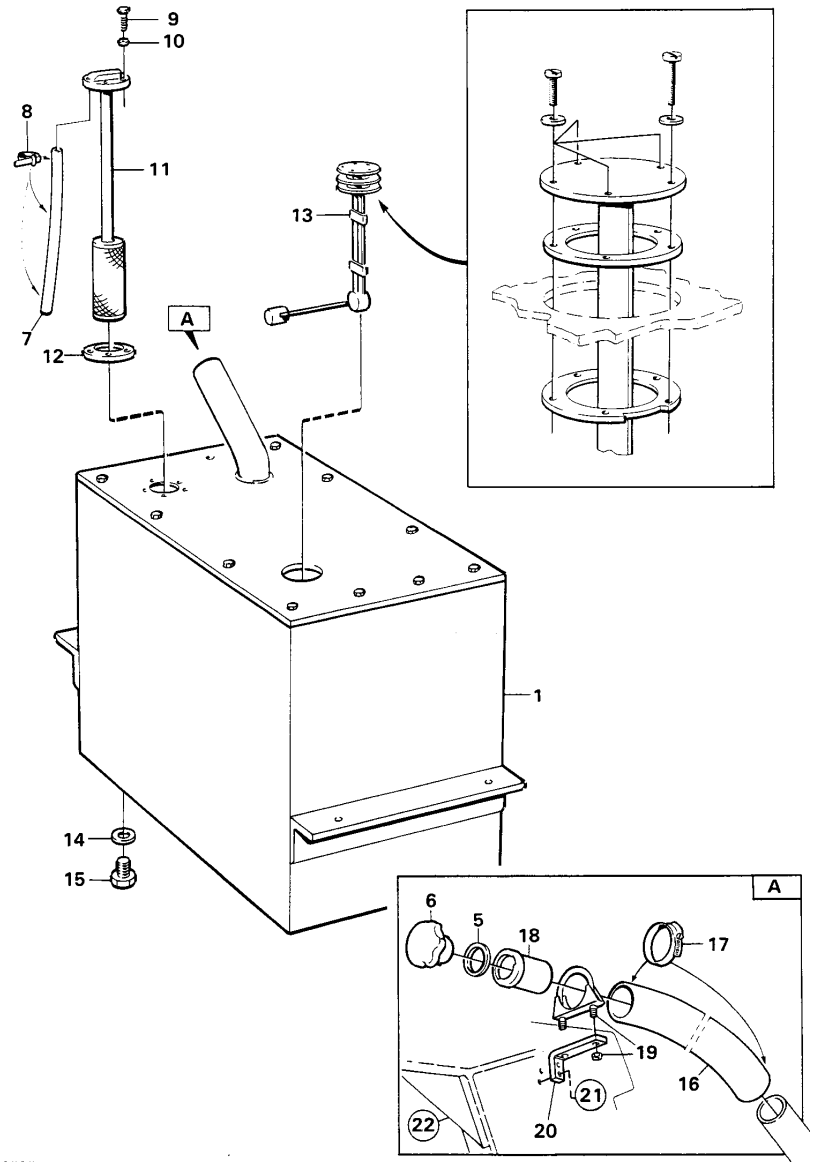

B0001273


FUEL TANK / BRÄNSLETANK 5112 2331 80

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2331 81	1	FUEL TANK	BRÄNSLETANK	Page 233	
5	5112 2341 00	1	GASKET	PACKNING		
6	5112 2340 00	1	COVER	LOCK		
7	5054 0140 00	0.33M	PLASTIC TUBING	PLASTSLANG		
8	1088 1301 01	3	ASSEMBLY STRIP	MONTERINGSBAND		2,4 X 92 1,6-15,8 T.-23M
9	0211 1207 00	5	SCREW	SKRUV		MC6S M 5 X 16 - 12.9
10	0301 2318 00	5	PLAIN WASHER	RUNDBRICKA		5,3 / 10 X 1 - HB 200 FZB
11	5112 1423 00	1	SUCT.-RETURN P.	SUG-RETURLEDN.		
12	5118 0188 00	1	GASKET	PACKNING		
13	5112 2083 81	1	LEVEL SENSOR	NIVÅGIVARE		
14	0661 1038 00	1	SEAL WASHER	TÄTNINGSBRICKA		27 / 35 X 2,5 FZ ST.
15	5118 1159 00	1	PLUG	PROPP		
16	5112 3022 18	0.70M	HOSE	SLANG		
17	0347 6114 00	2	HOSE CLIP	SLANGKLÄMMA		60 - 75 FZB
18	5112 2338 07	1	FILLER PIPE	PÅFYLLNINGSRÖR		
19	5112 2646 00	1	U-BOLT	U-BULT		P 69,9 M 8 77
20	5112 3024 73	1	ATTACHMENT	FÄSTE		
21	0147 1325 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 25 - 8.8 FZB
22	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

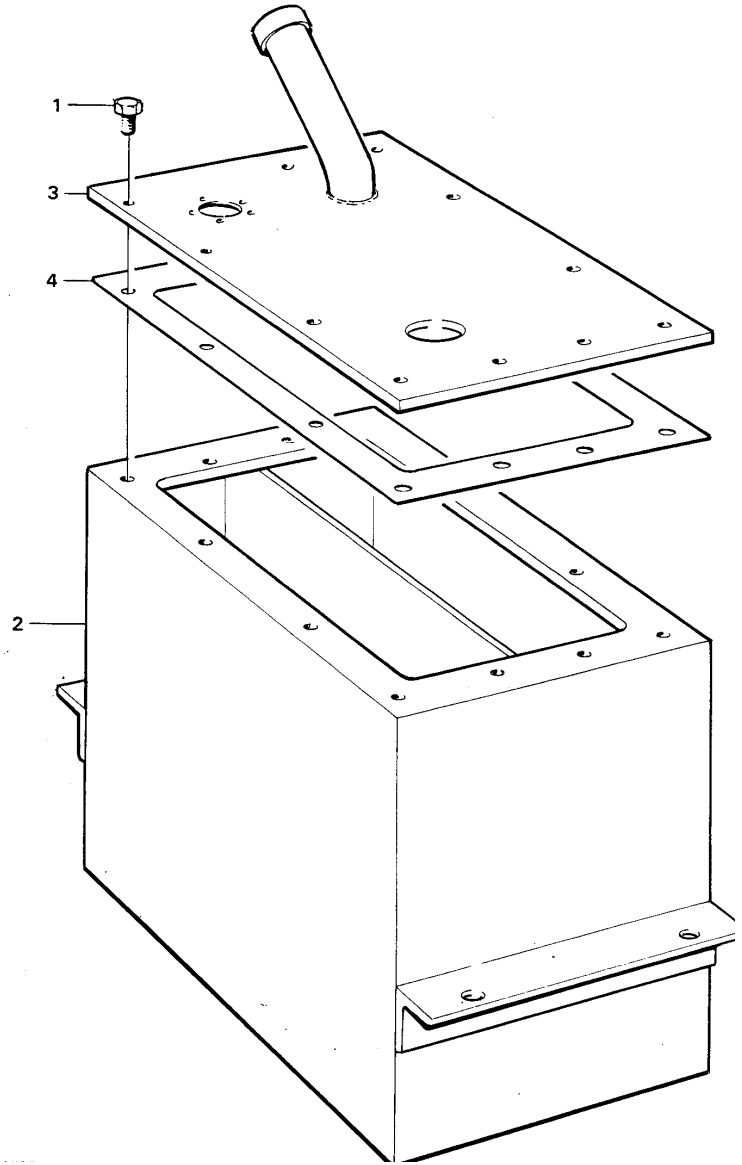


B0001274

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0147 1360 03	12	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
2	–	1	FUEL TANK	BRÄNSLETANK		
3	5112 2338 00	1	TANK COVER	TANKLOCK		
4	5112 2339 00	1	GASKET	PACKNING		

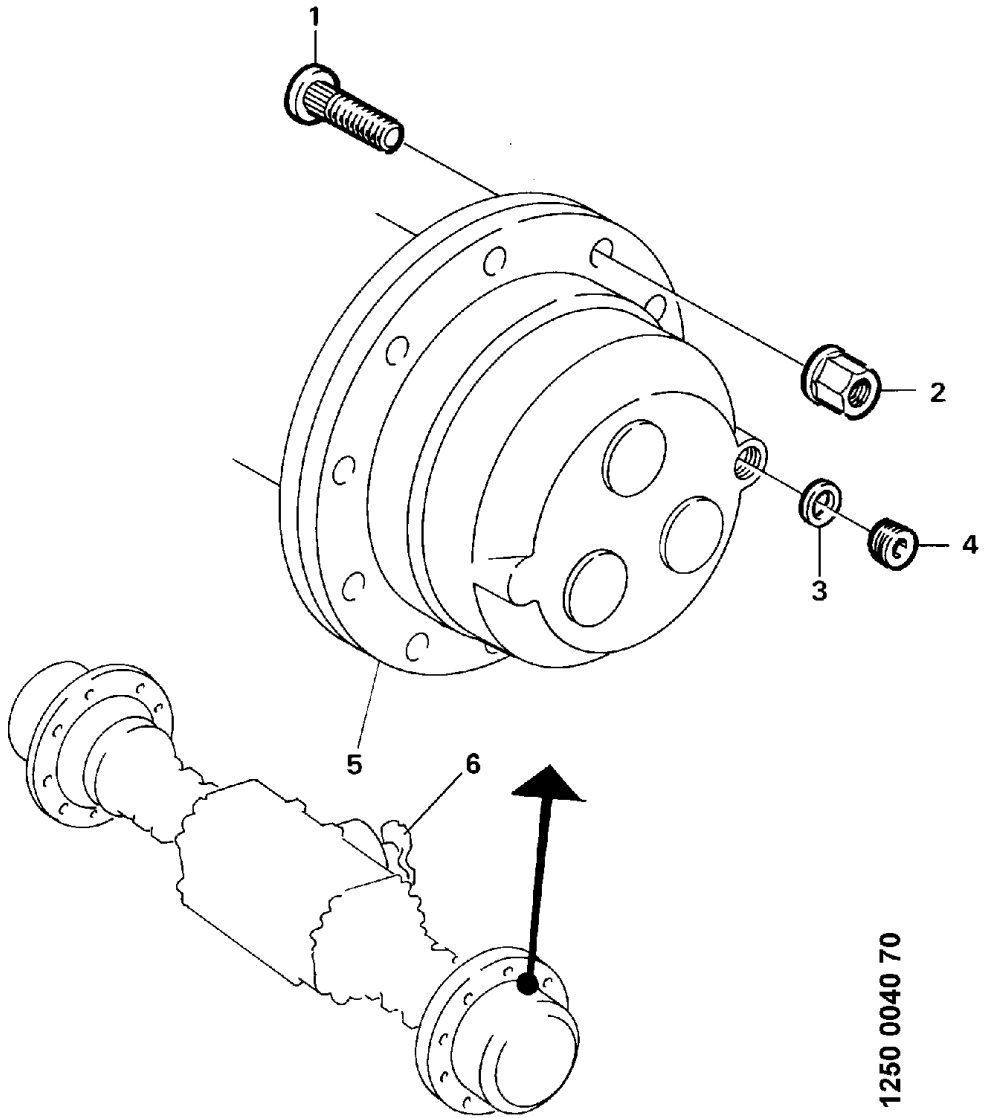

B0004959

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 3024 66	1	BRAKE DISC KIT	BROMSLAMELLSATS	Page 237	COMPLETE KIT ONLY
	5112 3024 68	1	CROWN WHEEL KIT	KRONHJULSATS	Page 239	COMPLETE KIT ONLY
	5112 3024 71	2	PLANET GEAR KIT	PLANETHJULSSATS	Page 241	COMPLETE KIT ONLY
	5112 3197 44	1	DIFF.KIT	DIFF.SATS	Page 243	COMPLETE KIT ONLY
1	5112 3003 35	20	WHEEL BOLT	HJULBULT		
2	0299 1000 06	20	WHEEL NUT	HJULMUTTER		M 22X1,5 - 10 FOSF. TYP A
3	0653 1128 00	2	GASKET	PACKNING		22 / 27 X 1,5 -11 5013 12
4	5112 3003 37	2	PLUG	PLUGG		
5	5112 3104 74	2	PLANET GEAR HO.	PLANETVÄXELHUS		
6	5112 3120 40	1	FLANGE	FLÄNS		

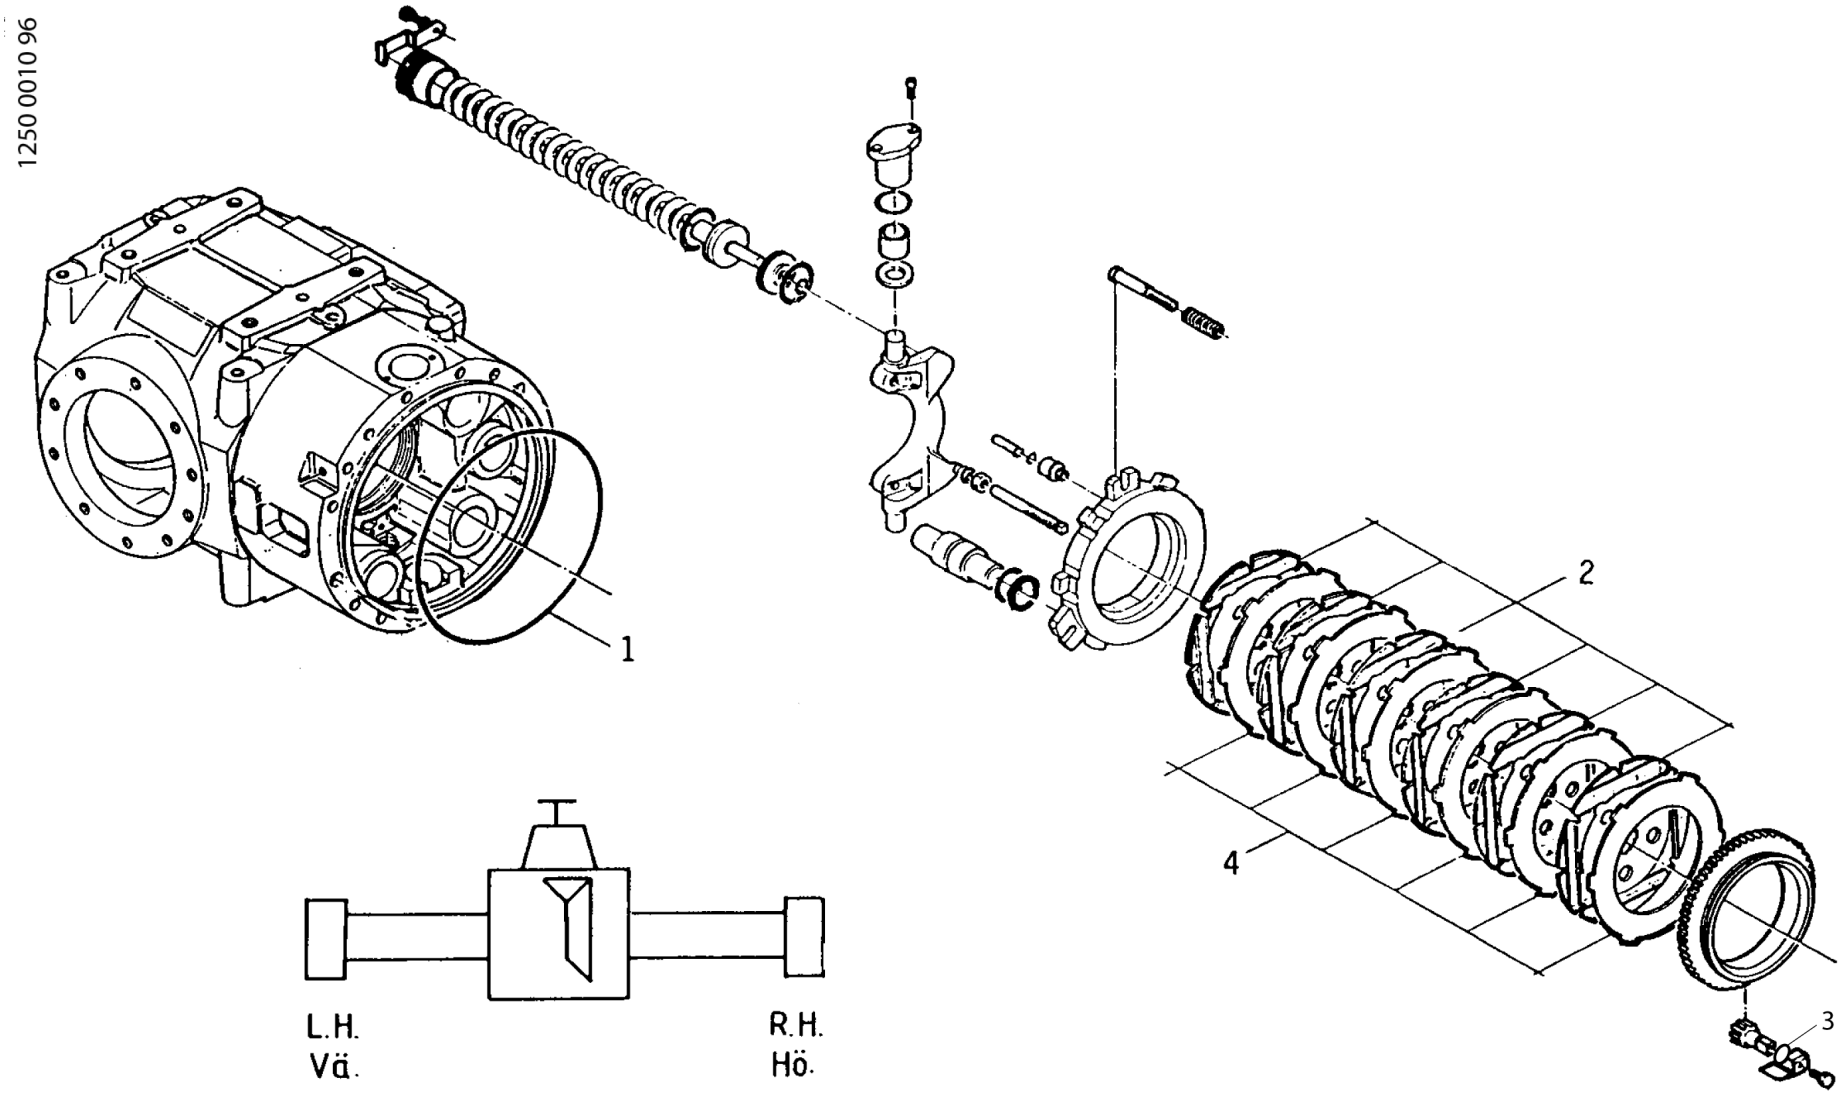


B0000501

BRAKE DISC KIT / BROMSLAMELLSATS 5112 3024 66 COMPLETE KIT ONLY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3032 14	2	O-RING	O-RING		
2	5112 3003 59	12	DISK	LAMELL		
3	5112 3005 03	2	O-RING	O-RING		
4	5112 3003 60	12	DISK	LAMELL		

CROWN WHEEL KIT / KRONHJULSATS **5112 3024 68** COMPLETE KIT ONLY

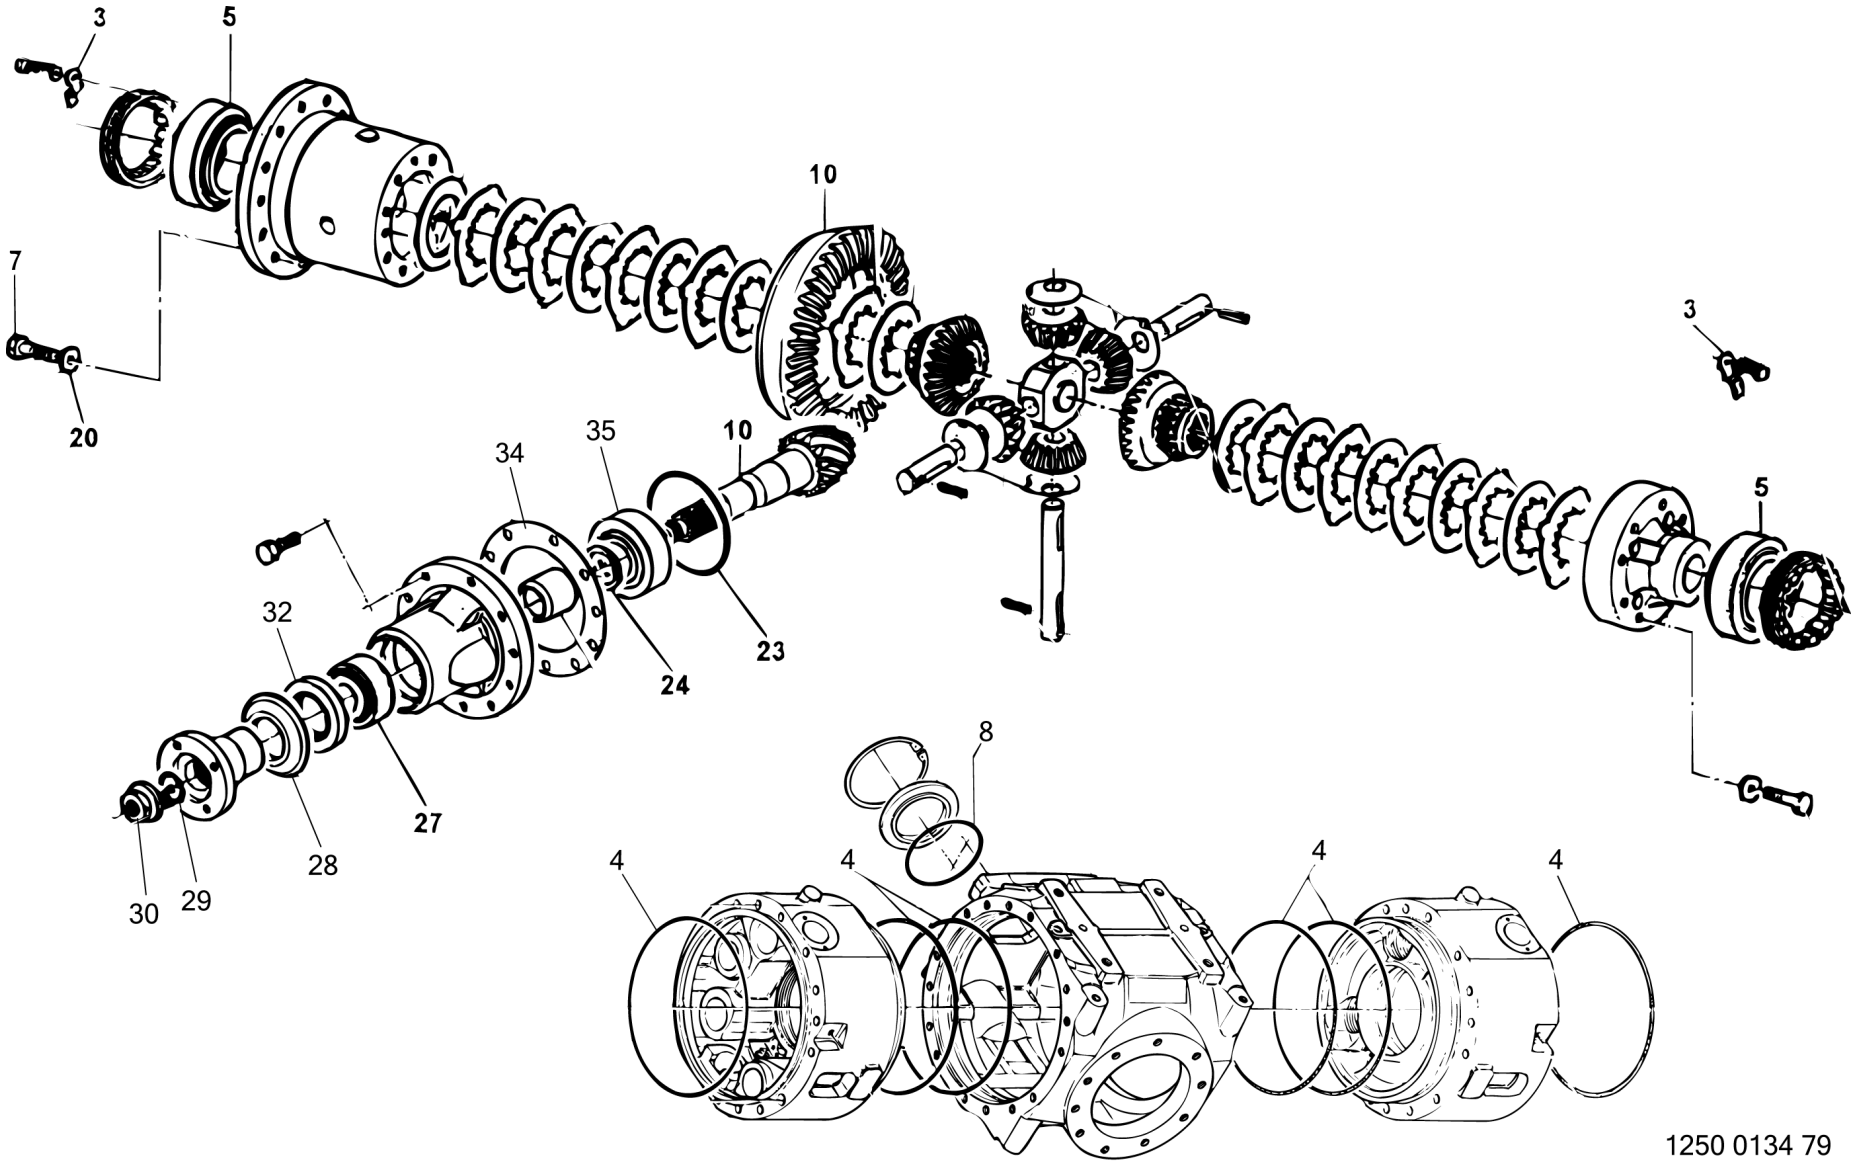


1250 0134 79

B0024394

CROWN WHEEL KIT / KRONHJULSATS **5112 3024 68** COMPLETE KIT ONLY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
3	5112 3003 07	2	LOCK SHEET	LÅSBLECK		
4	5112 3032 14	6	O-RING	O-RING		
5	5112 3003 75	1	BEARING	LAGER		
5	5112 3003 78	2	BEARING	LAGER		
5	5112 3010 18	1	SPACER	DISTANS		
7	5112 3187 75	16	BOLT	BULT		
8	5112 3133 08	1	O-RING	O-RING		
10	–	1	GEAR SET	DREVSATS		
20	5112 3187 77	16	SPRING WASHER	FJÄDERBRICKA		
23	5112 3133 17	1	O-RING	O-RING		
24	5112 3187 85	1	SHIM	SHIMS		0,40 MM
24	–	4	SHIM	SHIMS		
27	5112 3003 79	1	BEARING	LAGER		
28	5112 3193 84	1	COVER PLATE	TÄCKPLATTA		
29	5112 3187 87	1	O-RING	O-RING		
30	5112 3003 23	1	NUT	MUTTER		
32	5112 3133 49	1	SEAL	TÄTNING		
34	–	1	SHIM	SHIMS		
34	–	1	SHIM	SHIMS		
34	–	1	SHIM	SHIMS		
34	–	1	SHIM	SHIMS		
35	5112 3003 80	1	BEARING	LAGER		

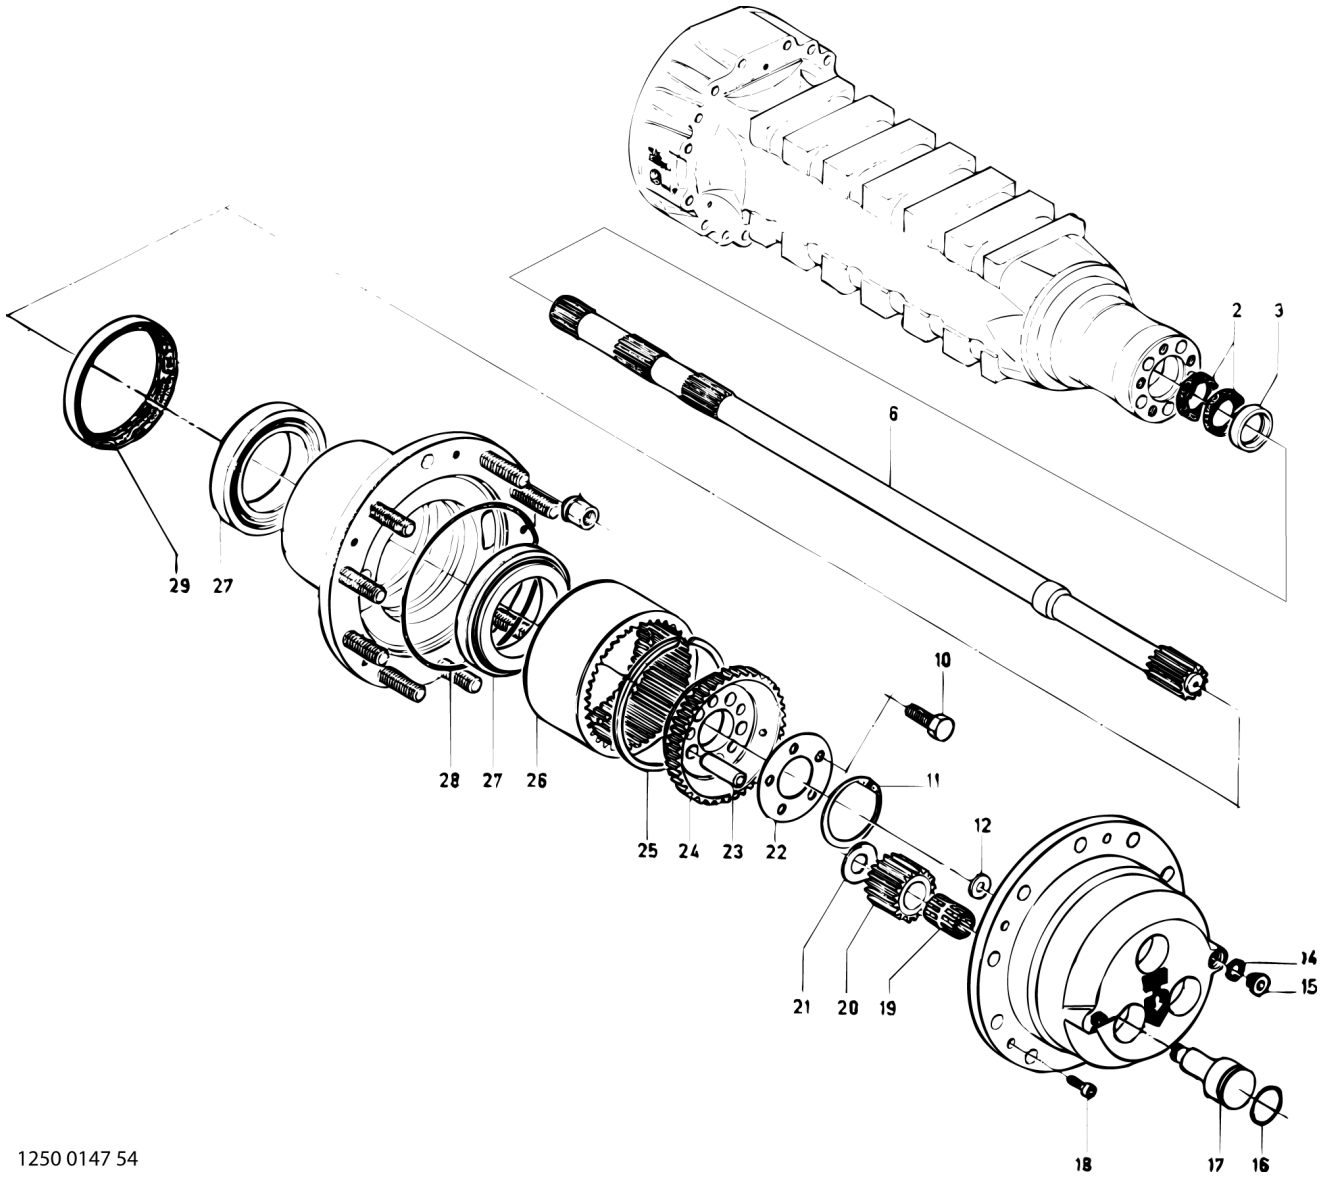


1250 0147 54

B0000044

PLANET GEAR KIT / PLANETHJULSSATS 5112 3024 71 COMPLETE KIT ONLY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	2	SEAL	TÄTNING		
2	–	1	RING	RING		
3	–	1	SHAFT	AXEL		
4	–	5	SCREW	SKRUV		
5	–	1	RING	RING		
6	–	1	WASHER	BRICKA		
7	–	1	SEAL WASHER	TÄTNINGSBRICKA		
8	–	1	PLUG	PLUGG		
9	–	3	O-RING	O-RING		
10	–	3	PIN	PINNE		
11	–	5	BOLT	BULT		
12	–	3	BEARING	LAGER		
13	–	3	GEAR WHEEL	KUGGHJUL		
14	–	3	BOLT	BULT		
15	–	1	PLATE	PLATTA		
16	–	5	PIN	STIFT		
17	–	1	HOLDER	HÅLLARE		
18	–	1	RING	RING		
19	–	1	WHEEL	HJUL		
20	–	2	BEARING	LAGER		
21	–	2	O-RING	O-RING		
22	–	1	RING	RING		


1250 0142 20

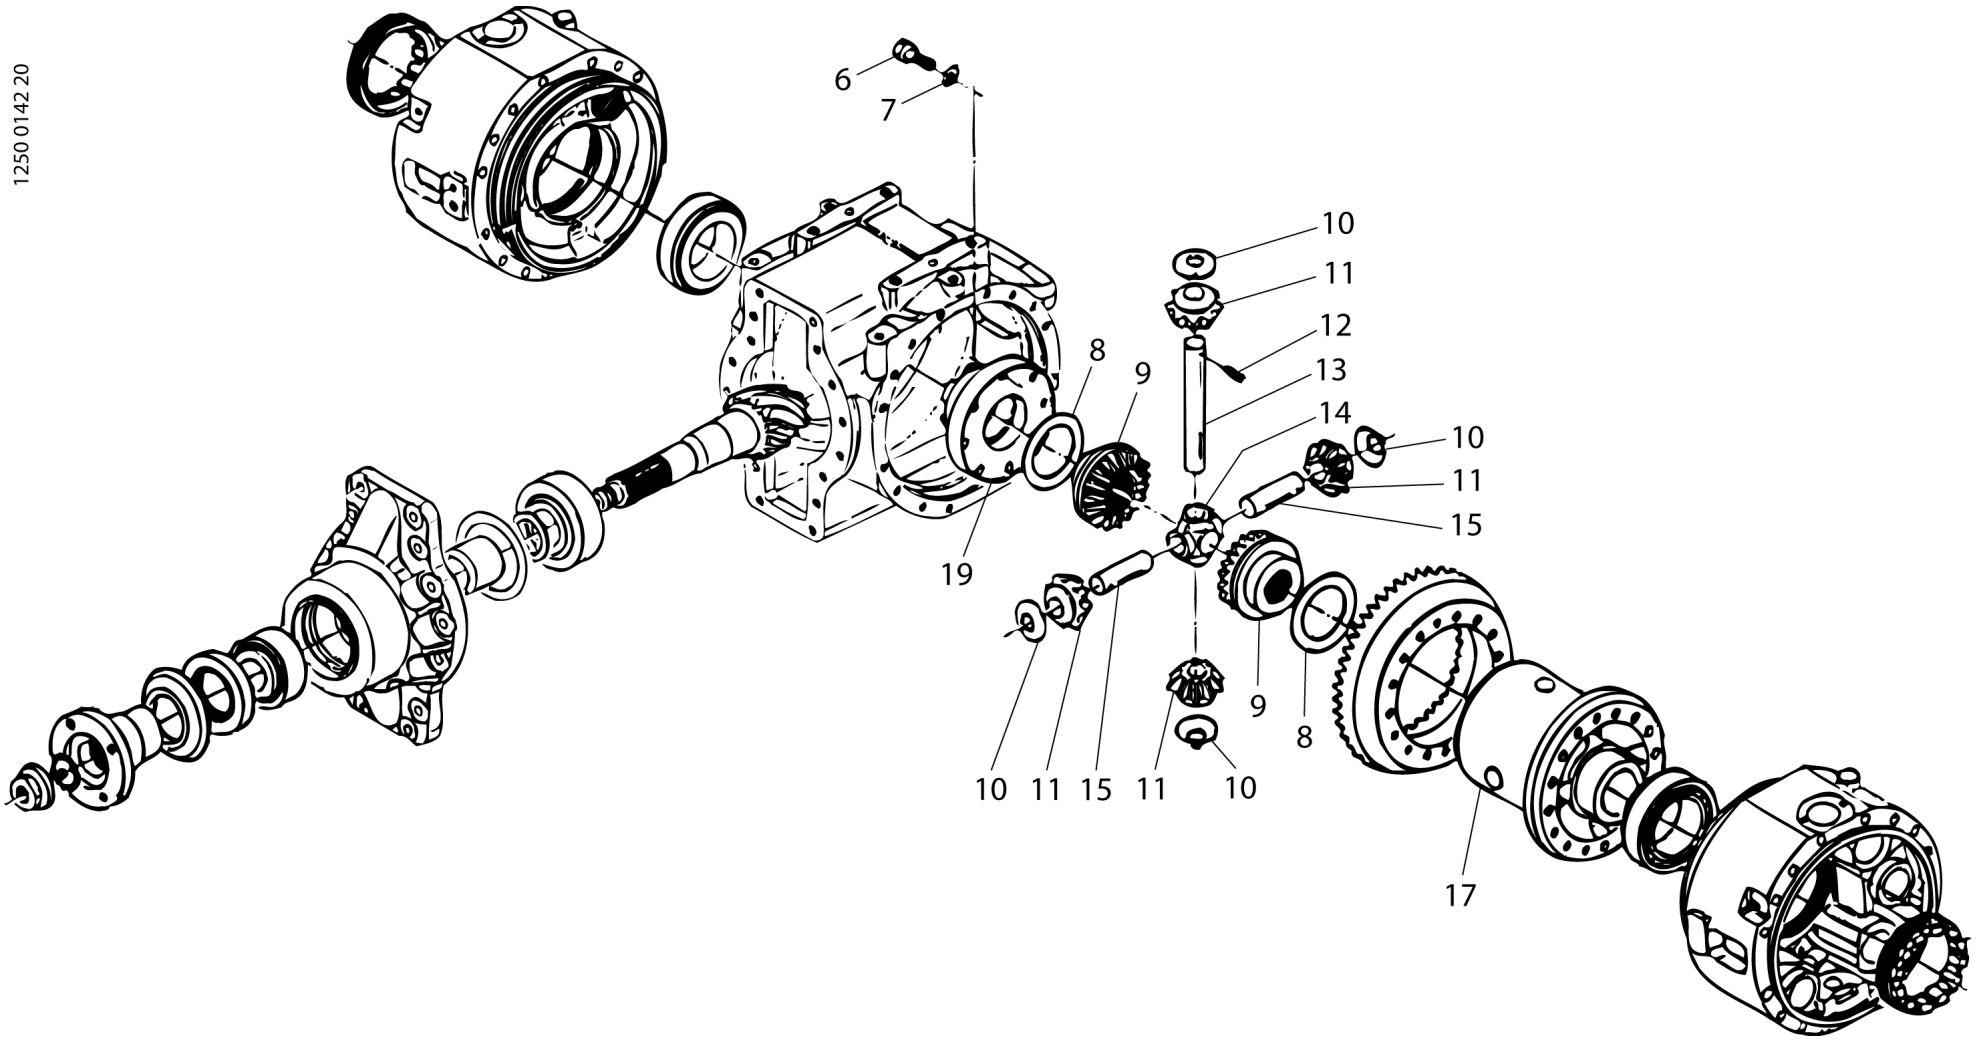

B0025874

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
6	5112 3190 15	8	BOLT	BULT		
7	5112 3187 77	8	SPRING WASHER	FJÄDERBRICKA		
8	5112 3003 10	2	FRICTION RING	FRIKTIONSRING		
9	5112 3190 14	2	SIDE WHEEL	SIDOHJUL		
10	5580 0110 80	4	WASHER	BRICKA		
11	5112 3188 03	4	DIFFERENT.WHEEL	DIFFERENT. HJUL		
12	5112 3188 09	1	SHAFT	AXEL		
13	5112 3003 77	3	PIN	PINNE		
14	5112 3188 08	1	DIFF.SPIDER	DIFF.KORS		
15	5112 3188 04	2	SHAFT	AXEL		
17	5112 3190 17	1	DIFF.CASE	DIFF.HUS		
19	5112 3190 16	1	COVER	LOCK		

FRAME MOTOR P. / RAM MOTORDEL

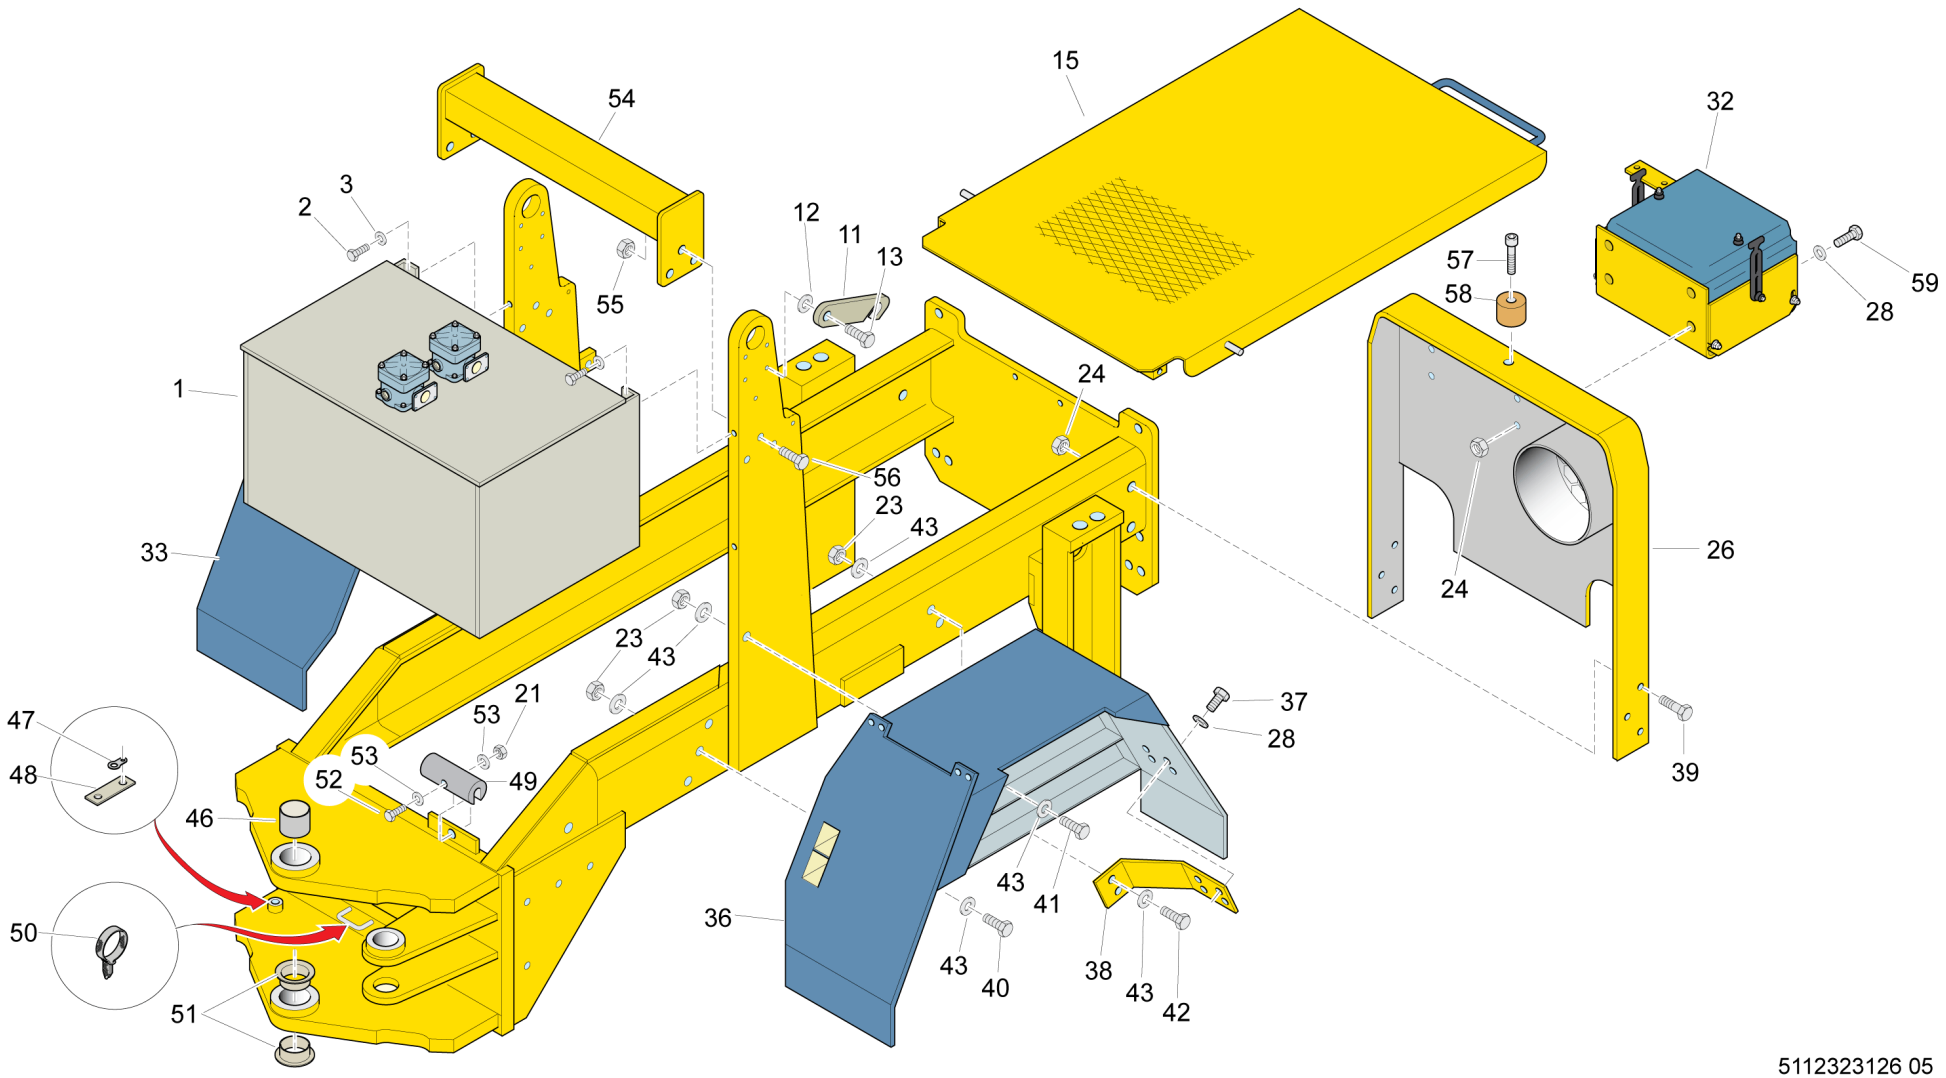

B0056755

FRAME MOTOR P. / RAM MOTORDEL

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3133 74	1	HYDR. RESERVOIR	HYDRAULTANK	Page 249	
2	0147 1475 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 30 - 8.8 FZB
3	0301 2378 00	16	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
9	0147 1407 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 60 - 8.8 FZB
11	5112 3020 91	1	HOOK	HAKE		
12	5112 3020 92	1	SPACER	DISTANS		
13	0147 1367 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 50 - 8.8 FZB
14	0211 1962 80	1	SCREW	SKRUV		MC6S M 10 X 16 - 12.9
15	5112 3231 82	1	CAP	HUV		
21	0291 1128 20	1	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
22	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
23	0291 1128 28	12	LOCK NUT	LÅSMUTTER		M 20 - 8 FZB / ISO 7040
24	0291 1128 22	8	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
26	5112 3231 74	1	BACK HEAD	BAKSTYCKE		
28	0301 2358 00	30	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
32	–	1	BATTERY BOX	BATTERILÅDA	Page 255	
33	5112 3064 25	1	MUDGUARD	STÄNKSKÄRM		
36	5112 3064 24	1	MUDGUARD	STÄNKSKÄRM		
37	0147 1400 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
38	5112 3064 41	2	BRACKET	KONSOL		
39	0147 1404 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 45 - 8.8 FZB
40	0147 1559 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 20 X 90 - 8.8 FZB
41	0147 1958 65	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 20 X 75 - 8.8 FZB
42	0147 1553 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 20 X 60 - 8.8 FZB
43	0301 2394 00	24	PLAIN WASHER	RUNDBRICKA		21 / 37 X 3 - HB 200 FZB
46	0500 0324 00	1	PLAIN BEARING	GLIDLAGER		60 F7 X 75 P6 X 60 TYPE A
47	5112 2093 00	2	RING PIN	RINGSPRINT		DANOPRODUKTER NR 11060
48	5112 2387 00	1	STAY	STAG		
49	5112 2405 06	1	RUBBER PROTEC	GUMMISKYDD		
50	3176 3681 00	15	STRAP	BAGAGEBAND		L=500,B=25 TYG BLACK YELLOW TEXT
51	0500 1296 00	2	PLAIN BEARING	GLIDLAGER		60 F7 X 75 P6 X 35

FRAME MOTOR P. / RAM MOTORDEL

(Sheet 2 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
52	0147 1326 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 30 - 8.8 FZB
53	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
54	5112 3021 08	1	SUPPORT BEAM	STÖDBALK		
55	0291 1128 25	6	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
56	0147 1482 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 65 - 8.8 FZB
57	0226 0351 01	3	TAPPING SCREW	GÄNGANDE SKRUV		MC6S M 5 X 20 - 5.8 FZB MC6S M5X20-5.8 FZB
58	5112 2946 01	3	RUBBER BUFFER	GUMMIBUFFERT		
59	0147 1402 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
60	0147 1401 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 30 - 8.8 FZB
61	0301 2344 00	1	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
62	0301 2335 00	4	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB


FRAME MOTOR P. / RAM MOTORDEL

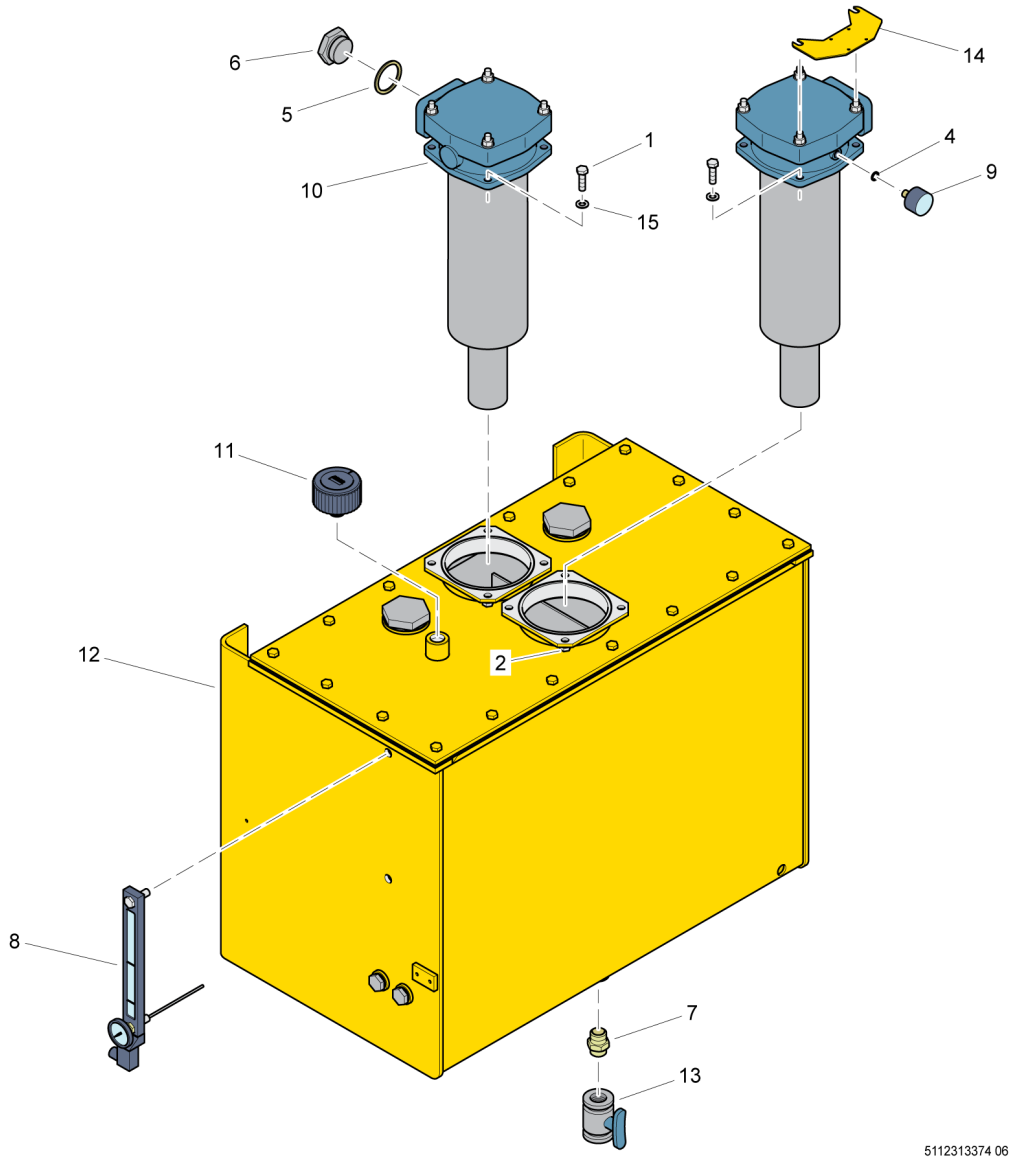

B0056761

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0147 1363 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 30 - 8.8 FZB
2	0266 2111 00	8	NUT	MUTTER		M 10 - 8 FZB
4	0653 1055 00	1	GASKET	PACKNING		12 / 15,5 X 1,5-11 501312
5	0661 1062 00	1	SEAL WASHER	TÄTNINGSBRICKA		48,4 / 58,7 X 3,4 FZ ST.
6	0686 3710 00	1	PLUG	PROPP		R 1 1/2 - 11 1550
7	5112 2479 00	1	NIPPLE	NIPPEL		
8	5112 2931 00	1	LEVEL-TEMP.IND.	NIVÅ-TEMP.MÄT.	Page 251	
9	8231 0854 84	1	MANOMETER	MANOMETER		
10	8234 0200 36	2	FILTER, COMPL.	FILTER, KOMPL.	Page 253	
11	8231 0854 19	1	BREATHER FILTER	ANDNINGSFILTER		CONNECTION. G3/4'
12	5112 3133 75	1	HYDR.OIL TANK	HYDRAULOLJETANK		
13	8202 0304 02	1	BALL VALVE	KULVENTIL		BAL 20 - G 3/4 - TYP A AIR SPARE PARTS SET 9090 1154 00
14	5112 2531 04	1	PROTECTION	SKYDD		
15	0301 2335 00	16	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB

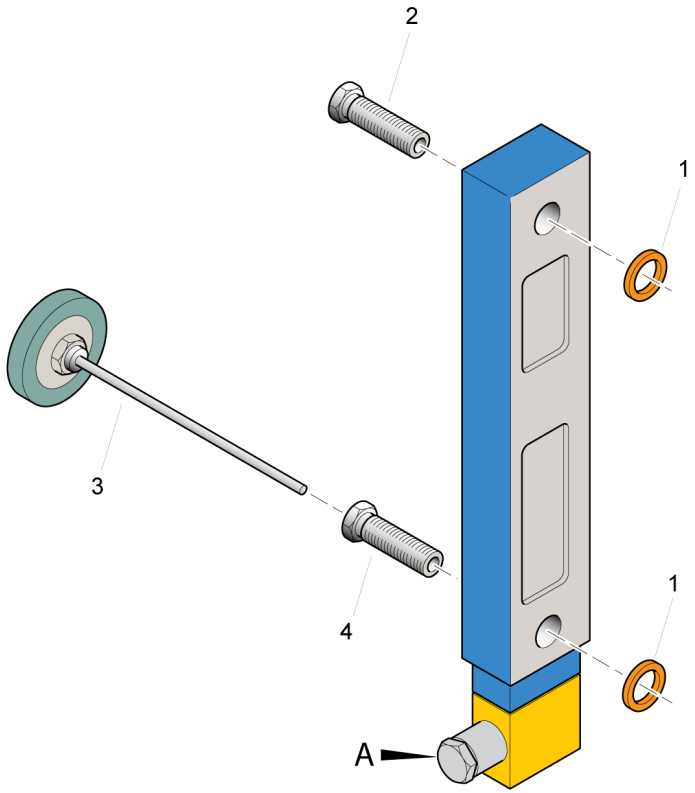


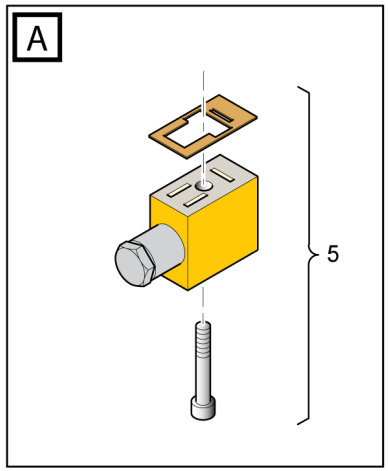


1250 0010 15

B0058817

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0663 2119 00	2	O-RING	O-RING		12,3 X 2,4 70 SHORE
2	5112 2931 01	1	PRESSURE SCREW	TRYCKSKRUV		
3	5112 2931 02	1	THERMOMETER	TERMOMETER		
4	5112 2931 03	1	PRESSURE SCREW	TRYCKSKRUV		
5	5112 2931 90	1	SPARE PARTS SET	RESERVDELSSATS		

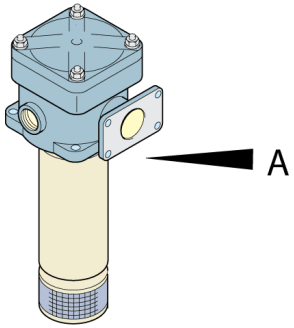

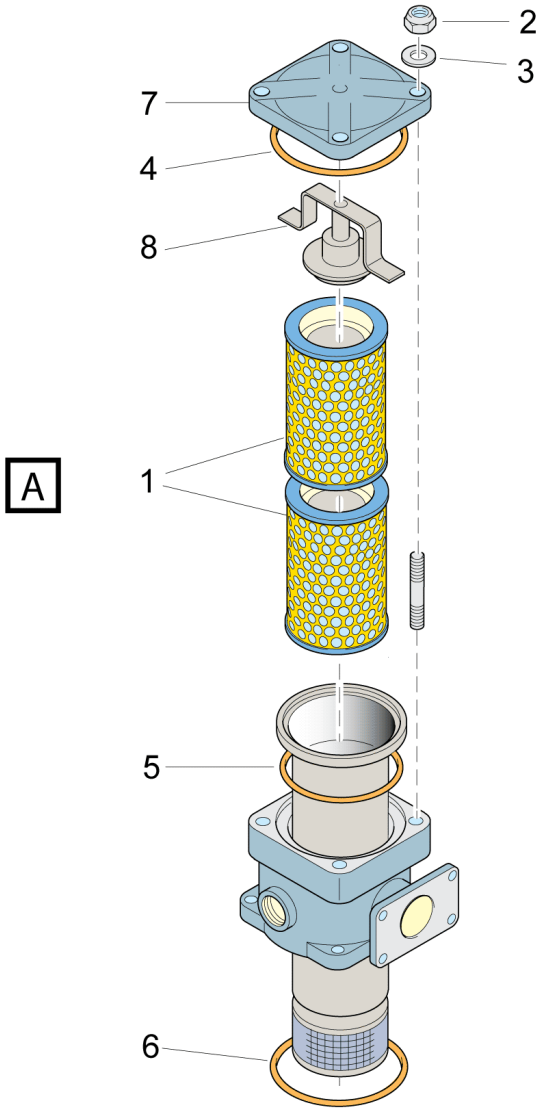


1250 0009 35

B0038355

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	8231 1018 04	2	FILTER INSERT	FILTERINSATS		
2	0266 2111 00	4	NUT	MUTTER		M 10 - 8 FZB
3	0301 2344 00	4	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
4	8231 0853 45	1	O-RING	O-RING		
5	8231 0853 46	1	O-RING	O-RING		
6	3216 5295 00	1	GASKET	PACKNING		
7	8231 0858 23	1	COVER COMPL.	LOCK KOMPL.		
8	5112 3102 60	1	BY PASS VALVE	ÖVERSTR.VENTIL		

BATTERY BOX / BATTERILÅDA

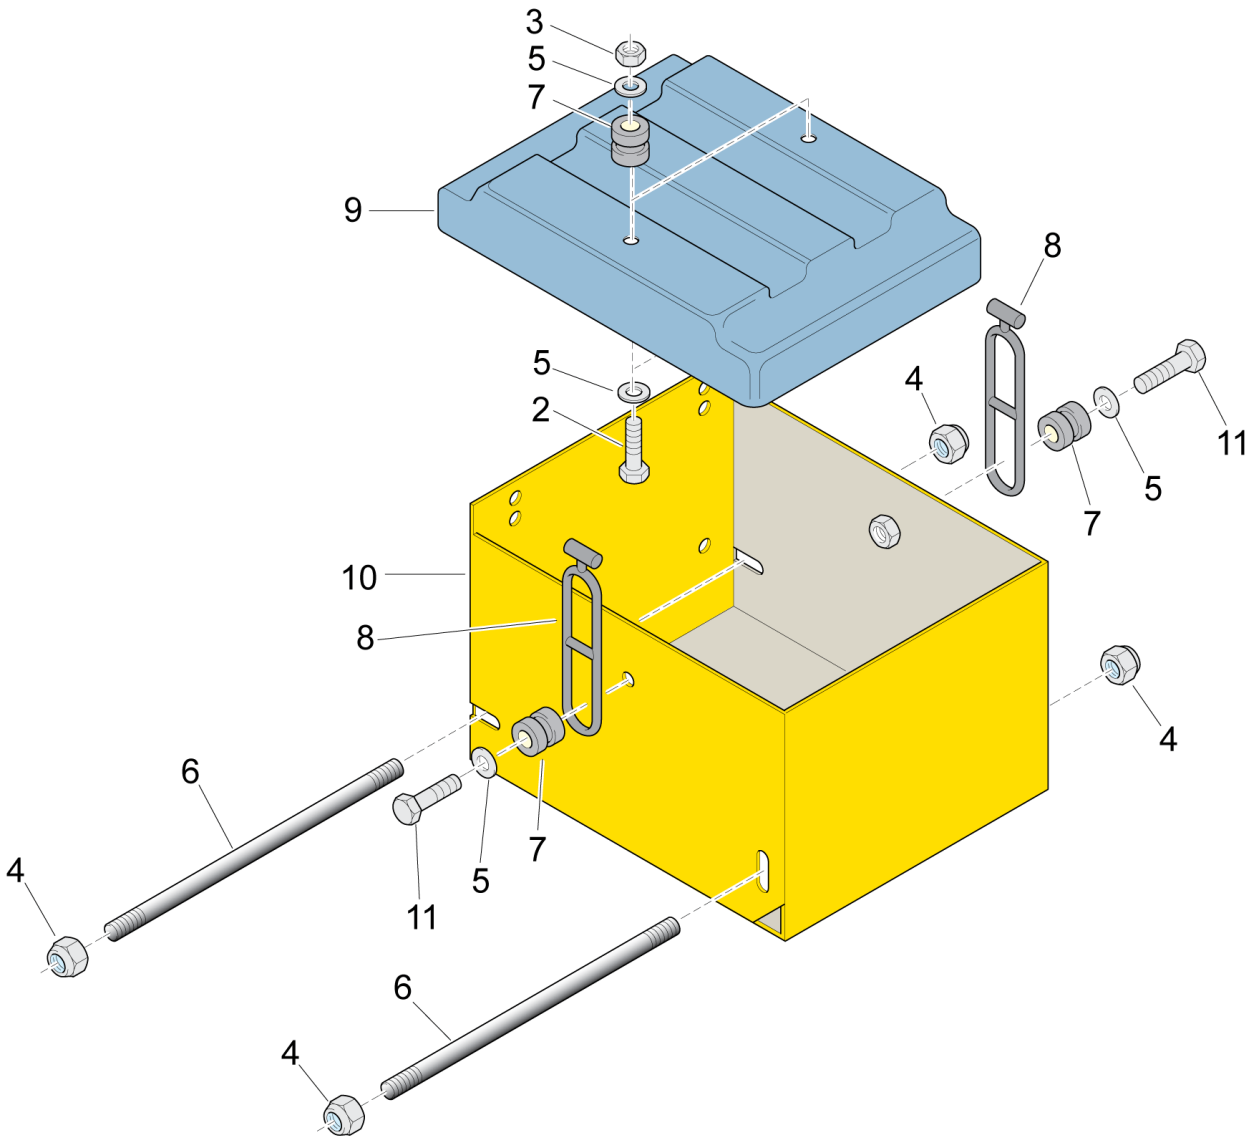


1250 0010 11

B0000839

BATTERY BOX / BATTERILÅDA

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2	0147 1249 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 25 - 8.8 FZB
3	0291 1128 15	2	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
4	0291 1128 21	4	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB /7 ISO 7043
5	0301 2321 00	6	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
6	5112 3020 43	2	STUD	PINNSKRUV		
7	5112 2607 00	4	KNOB	KNOPP		
8	5112 2608 00	2	RUBBER STROP	GUMMISTROPP		
9	5112 2610 00	1	BATTERY COVER	BATTERILOCK		
10	5112 2731 24	1	BATTERY SHELF	BATTERIHYLLA		
11	0147 1247 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 20 - 8.8 FZB

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
B350	9111 3891 44	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
B351	9111 3891 44	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
B352	9111 3891 44	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
B359	9111 3891 44	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
H121	3176 0001 56	1	REVERSE ALARM	BACKALARM		97DB
H121	5112 0115 67	1	CABLE COMPLETE	KABEL KOMPLETT		
H186	3176 0000 90	1	LOUDWHISTLEHORN	STARKTONHORN		
H186	9111 3891 44	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
H215	9111 3891 44	3M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
Y216	3217 9882 04	1	VALVE PLUG	VENTILKONTAKT		3M 5MM 2X0,5 IP67 LED+Z-DIOD
W51	9111 3891 13	3M	CABLE, 7-CORE	KABEL, 7-LEDARE		7X1,5MM2
W52	9111 3891 10	3M	CABLE, 5-CORE	KABEL, 5-LEDARE		150 5G1.5 D2=9.8
X2	5112 0104 01	1	JUNCTION BOX	KOPPLINGSLÅDA	Page 259	X2
X5	5112 0104 04	1	SWITCH PANEL	INSTRUMENTPANEL	Page 265	
X8	5112 0105 48	1	JUNCTION BOX	KOPPLINGSLÅDA	Page 281	X8
X9	5112 0105 50	1	JUNCTION BOX	KOPPLINGSLÅDA	Page 283	X9
1	5112 0104 17	1	EL EQUIPM.MOTOR	ELUTRUSTN.MOTOR	Page 285	
2	5112 0104 09	1	DRIVING LIGHT.	ÅKBELYSNING	Page 289	8 X 70W
3	0147 1360 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
4	0226 0351 01	4	TAPPING SCREW	GÄNGANDE SKRUV		MC6S M 5 X 20 - 5.8 FZB MC6S M5X20-5.8 FZB
10	–	1	REVERSE ALARM	BACKALARM	Page 297	
11	5112 3126 05	1	BRAKE LIGHT	BROMSLJUS	Page 299	

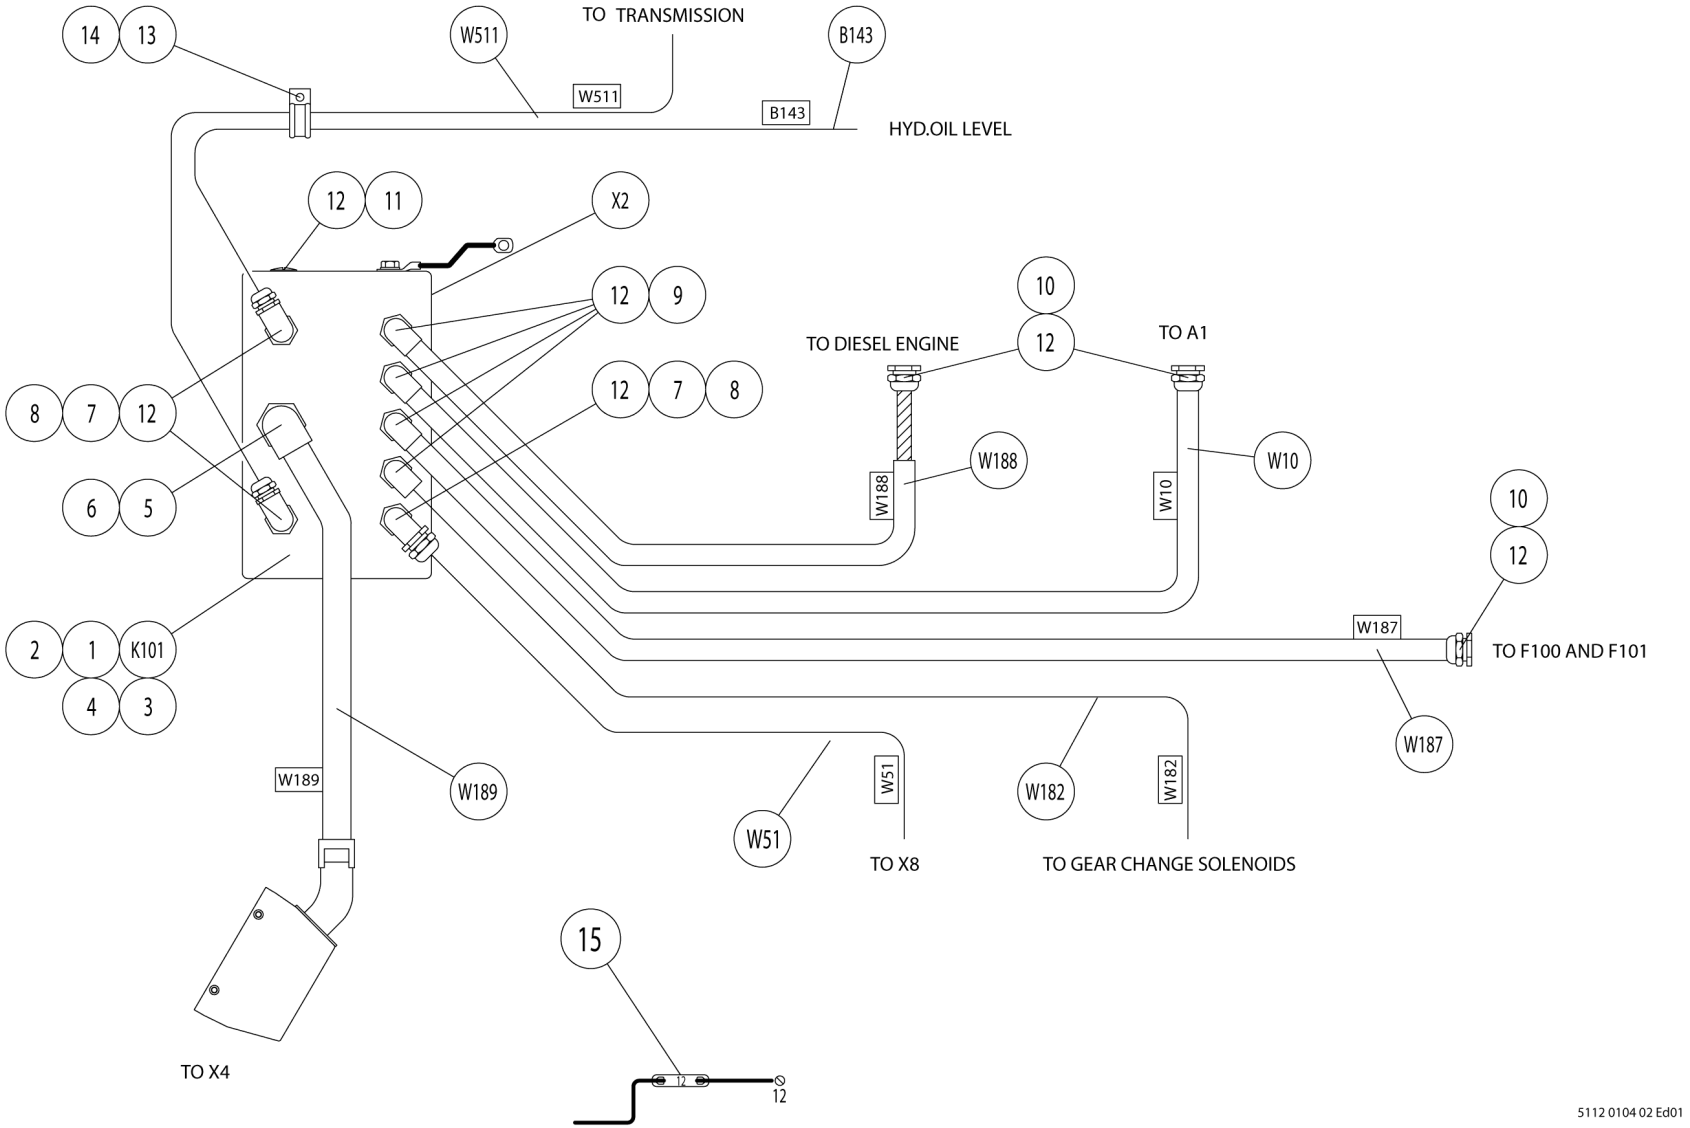


5112 0104 02 Ed01

B0044364

(Sheet 1 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
B143	9111 3891 44	4M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
K101	5118 0899 00	1	RELAY	RELÄ		BOSCH 0 332 204 203
W182	5112 3217 13	1	WIRING	KABLAGE		
W187	0017 2060 70	6M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 6MM2 BLACK D2=4.8 6MM BLACK
W187	3176 0029 60	2M	PROTECTION HOSE	SKYDDSSLANG		
W188	0017 2060 40	20M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 1,5MM2 BLACK D1=3.5
W188	0017 2060 50	6M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 2,5 MM2 BLACK D1=4.2 2,5MM BLACK
W188	0017 2060 70	6M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 6MM2 BLACK D2=4.8 6MM BLACK
W188	3176 0029 60	2M	PROTECTION HOSE	SKYDDSSLANG		
W188	5112 1579 00	5M	PROTECTION COIL	SKYDDSSPIRAL		
W189	0017 2060 40	20M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 1,5MM2 BLACK D1=3.5
W189	0017 2060 50	15M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 2,5 MM2 BLACK D1=4.2 2,5MM BLACK
W189	3176 0029 62	3.50M	PROTECTION HOSE	SKYDDSSLANG		
W189	3176 0029 71	1	HOSE COUPLING	SLANGKOPPLING		
W189	5112 1758 00	1	SLEEVE INSERT	HYLSINSATS		
W189	9111 0020 30	1	CABLE GEAR	KABELDON		SIDE-ENTRY,M32,WITHOUT STEM
W511	9111 3891 10	4M	CABLE, 5-CORE	KABEL, 5-LEDARE		150 5G1.5 D2=9.8
W10	0017 2060 40	9M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 1,5MM2 BLACK D1=3.5
W10	0017 2060 50	12M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 2,5 MM2 BLACK D1=4.2 2,5MM BLACK
W10	0017 2060 70	6M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 6MM2 BLACK D2=4.8 6MM BLACK
W10	3176 0029 60	2M	PROTECTION HOSE	SKYDDSSLANG		
W51	9111 3891 13	5M	CABLE, 7-CORE	KABEL, 7-LEDARE		7X1,5MM2
X2	5112 0020 41	1	JUNCTION BOX	KOPPLINGSLÅDA	Page 263	X2
1	0160 6061 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 5 X 14 - 4.8 FZB
2	0291 1128 14	2	LOCK NUT	LÅSMUTTER		M 5 - 8 FZB / ISO 7040
3	9139 6004 56	4	FLAT PIN SLEEVE	FLATSTIFTSHYLSA		D 6,3- 0,5-1,5 MM2
4	1088 0004 09	1	FLAT PIN SLEEVE	FLATSTIFTSHYLSA		C 6,3- 1 T 70


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
5	–	1	ADAPTER	FÖRSKRUVNING		BVWD-M329GT
6	0697 9809 16	1	LOCK NUT	LÅSMUTTER		M32X1,5 A3 M32X1,5 A3
7	–	3	ELBOW LEADING	VINKELINFÖRING		
8	0698 5140 61	3	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
9	3176 0029 70	4	HOSE COUPLING	SLANGKOPPLING		
10	3176 0029 69	3	HOSE COUPLING	SLANGKOPPLING		
11	0697 9810 19	1	END PLUG	AVSLUTN.PROPP		M20X1,5 A3
12	0697 9809 14	11	LOCK NUT	LÅSMUTTER		M20X1,5 A3
13	0226 0326 00	4	TAPPING SCREW	GÄNGANDE SKRUV		M6SF M 5 X 10 - 8.8 FZB M6SF M 5 X 10 - 8.8 FZB
14	0346 1002 03	4	PIPE CLAMP	RÖRKLAMMA		D=12 NORMA TYP RSGU D=12 NORMA TYP RSGU

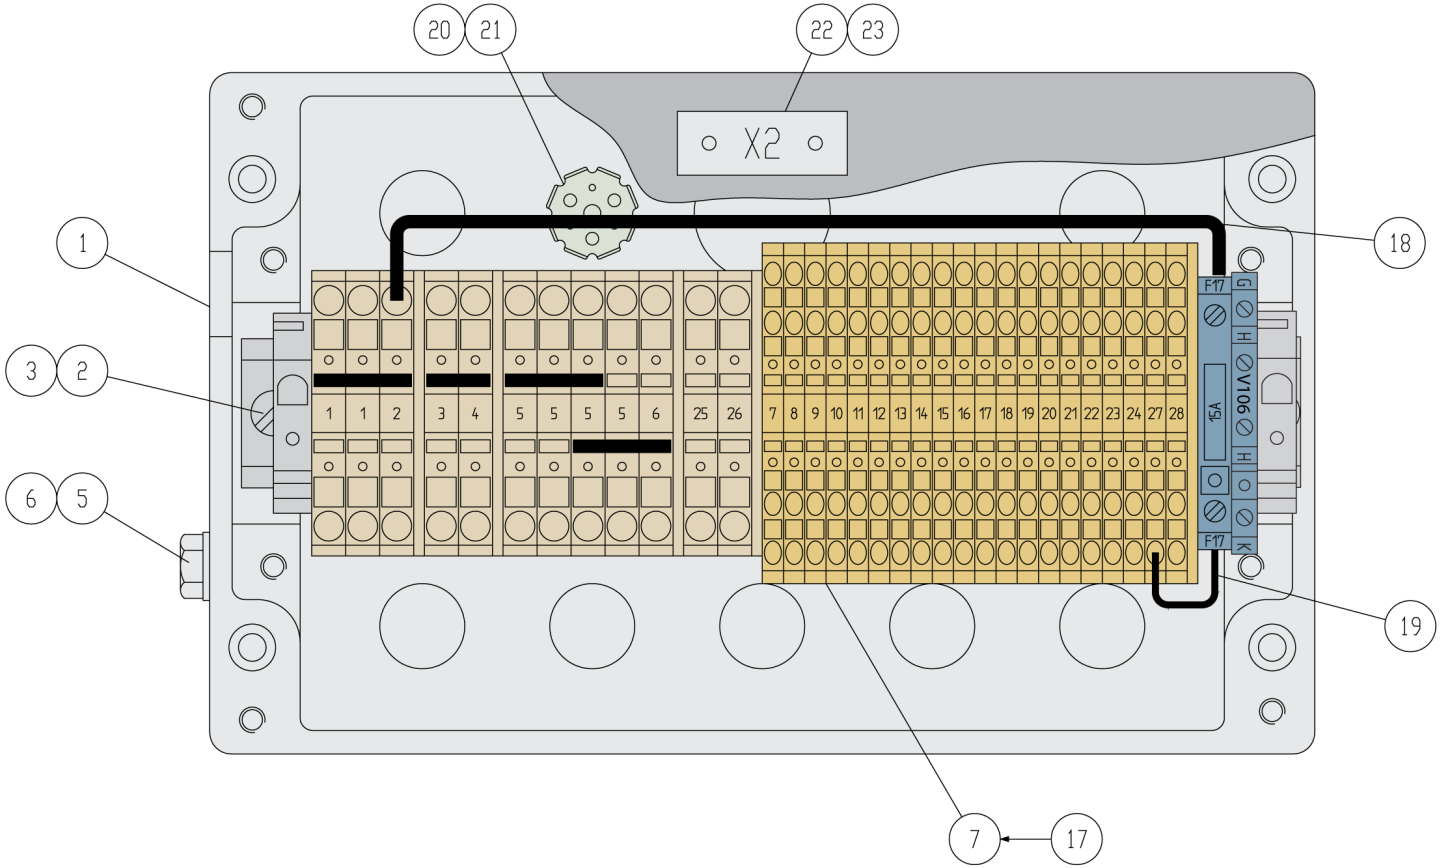

5112 3169 15 Ed06

B0037051

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 0020 42	1	DRILLED BOX	HÅLAD LÅDA		
2	3176 4363 08	0.26M	MOUNTING RAIL	MONTERINGSSKENA		TS35 X 7.5 E29 208 07
3	0160 1244 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 6 X 12 - 4.8
5	0147 1322 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
6	0301 2335 00	1	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
7	3176 4049 51	2	END SUPPORT	ÄNDSTÖD		TERMINAL MODULE
8	3176 4049 00	20	TERMINAL BLOCK	KOPPLINGSPLINT		ZDU 2.5/4AN
9	3176 4049 01	1	END PLATE	ÄNDPLATTA		FOR ZDU 2,5/4A
10	3176 4049 11	12	TERMINAL BLOCK	KOPPLINGSPLINT		
11	3176 4049 12	4	END PLATE	ÄNDPLATTA		
12	3176 4049 13	4	BRIDGE CONN.	ÖVERKOPPL.BLECK		
13	3176 4491 01	1	MARKING PLATE	MÄRKSKYLT		5FW 1-50 1-50
13	3176 4491 02	1	MARKING PLATE	MÄRKSKYLT		5FW 51-100 TERMINAL MARKERS
14	3176 4049 61	1	MARKING PLATE	MÄRKSKYLT		HORIZSONTAL PLINTH 5X5MM
15	5112 3043 10	1	FUSE CON. TERM.	SÄKRINGSPLINT		
16	5112 3043 12	2	MARKING PLATE	MÄRKSKYLT		
17	5112 3043 16	1	FUSE	SÄKRING		15A FLAT PIN
18	0017 2060 70	0.25M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 6MM2 BLACK D2=4.8 6MM BLACK
19	0017 2060 40	0.25M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 1,5MM2 BLACK D1=3.5
20	5112 2216 04	1	EARTH TERMINAL	JORDPLINT		
21	0226 0351 07	1	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
22	–	1	PLATE	SKYLT		
23	0129 3207 00	2	BLIND RIVET	BLINDNIT		3,2 X 9 TAP / D 48 BS
24	3217 9897 01	1	DIODE UNIT	DIODENHET		3A

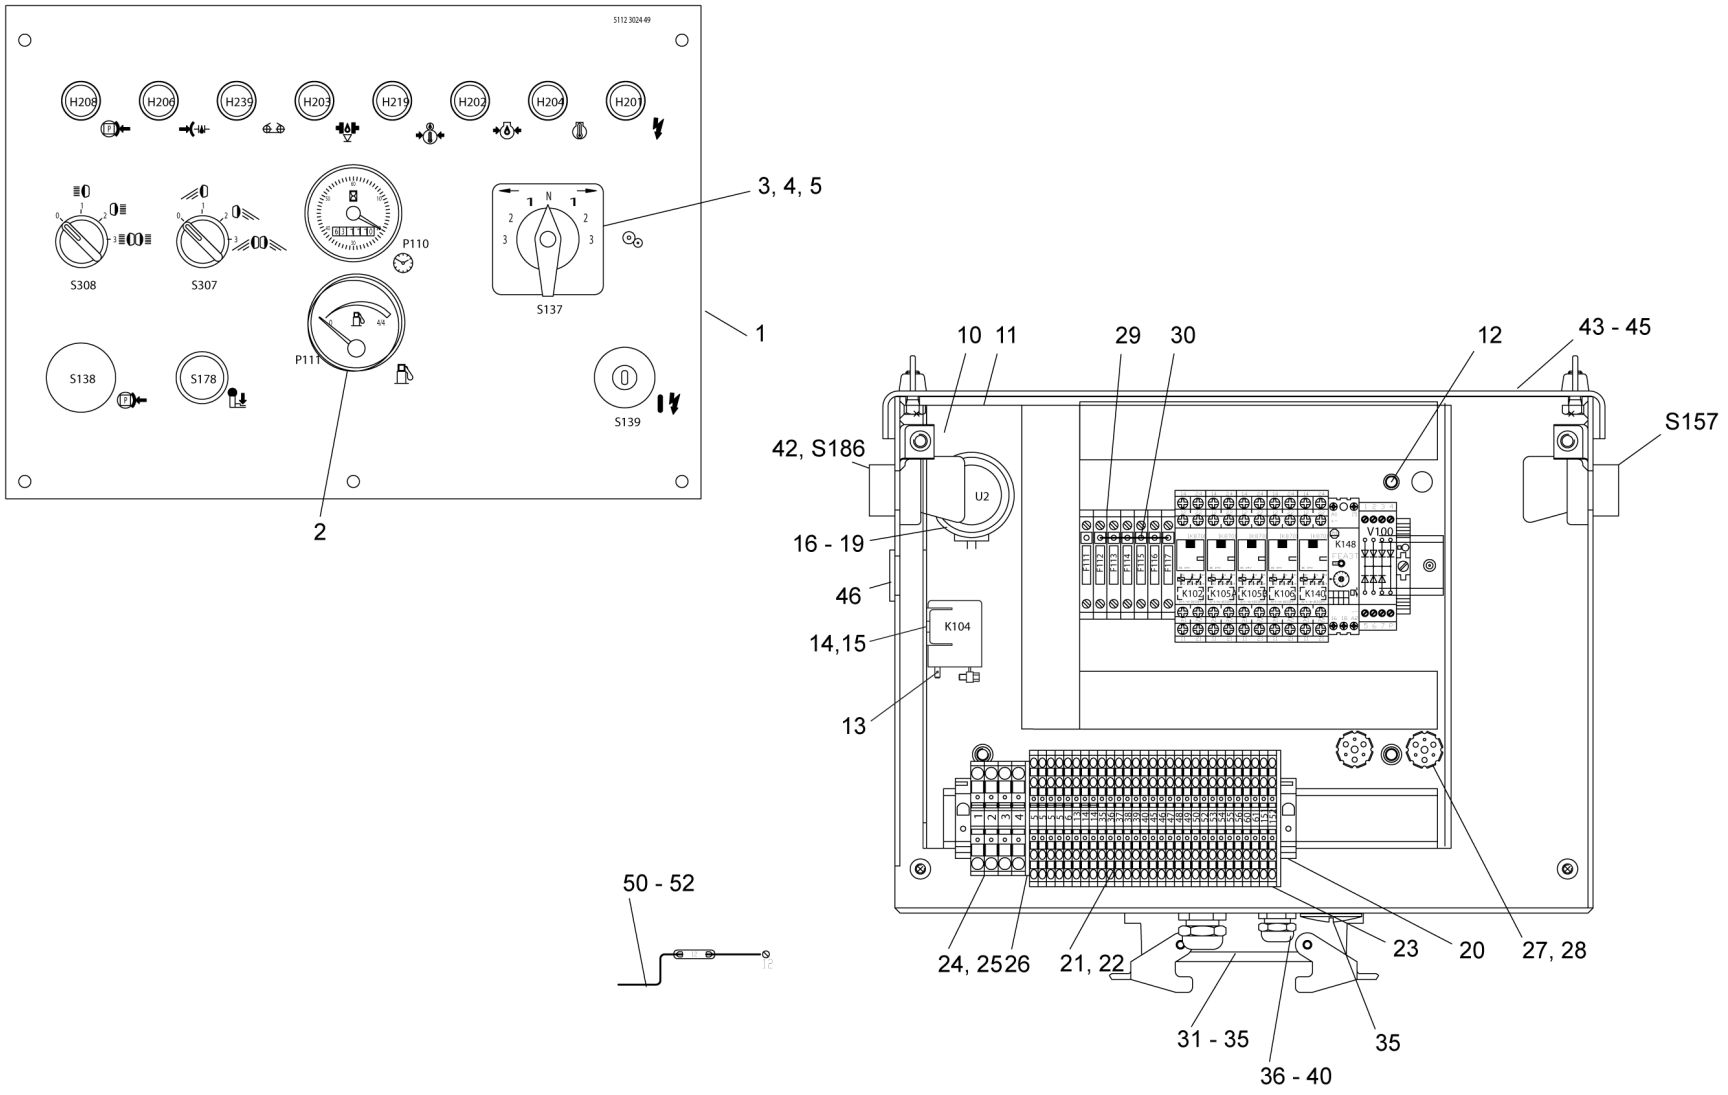
5112 3024 49
H208
H206
H239
H203
H219
H202
H204
H201
S308
S307
P110
S137
P111
S138
S178
S139
3, 4, 5
1
2
10 11
29 30
12
43 - 45
S157
42, S186
U2
16 - 19
46
14,15
13
K104
V100
K148
50 - 52
24, 2526
21, 22
23
20
27, 28
31 - 35
35
36 - 40
5112010405 1-2 04

(Sheet 1 of 3)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
F111	5112 3043 15	1	FUSE	SÄKRING		10A
F112	5112 3043 15	1	FUSE	SÄKRING		10A
F113	5112 3043 15	1	FUSE	SÄKRING		10A
F114	5112 3043 15	1	FUSE	SÄKRING		10A
F115	5112 3043 15	1	FUSE	SÄKRING		10A
F116	5112 3043 16	1	FUSE	SÄKRING		15A FLAT PIN
F117	5112 3043 15	1	FUSE	SÄKRING		10A
H201	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
H202	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
H203	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
H204	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
H206	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
H208	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
H219	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
H239	3217 0012 05	1	INDICATION LAMP	SIGNALLAMPA	Page 269	
K102	3217 9583 01	1	RELAY	RELÄ		IK 8701.12 24V DC D & S 24 VOLT 16A
K104	3176 0007 55	1	RELAY	RELÄ		RELAY 50A CONT 200A INRUSH
K105	3217 9583 01	2	RELAY	RELÄ		IK 8701.12 24V DC D & S 24 VOLT 16A
K106	3217 9583 01	1	RELAY	RELÄ		IK 8701.12 24V DC D & S 24 VOLT 16A
K140	3217 9583 01	1	RELAY	RELÄ		IK 8701.12 24V DC D & S 24 VOLT 16A
K148	3176 0029 08	1	TIMING RELAY	TIDRELÄ		
P110	–	1	HOUR METER	TIMRÄKNARE	Page 271	COMPLETE
P111	5112 3137 68	1	FUEL GAUGE	BRÄNSLEMÄTARE		COMPLETE
S137	5112 2865 00	1	GEAR CONTROL	VÄXELREGLAGE		
S138	3217 0012 35	1	MUSHROOM PUSHB.	SVAMPTRYCKKNAPP	Page 273	
S139	5112 3046 92	1	IGNITION LOCK	TÄNDNINGSLÅS	Page 275	
S157	3217 0012 58	1	PUSH BUTTON	TRYCKKNAPP	Page 277	
S178	3217 0012 00	1	PUSH BUTTON	TRYCKKNAPP	Page 279	
S186	3217 0012 58	1	PUSH BUTTON	TRYCKKNAPP	Page 277	

SWITCH PANEL / INSTRUMENTPANEL 5112 0104 04

(Sheet 2 of 3)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
S307	5112 3138 08	1	SWITCH	STRÖMSTÄLLARE		
S308	5112 3138 08	1	SWITCH	STRÖMSTÄLLARE		
V100	5112 3043 33	1	DIODE UNIT	DIODENHET		LAMPTEST MAX 7 LAMPS
U2	3176 0001 45	1	WARNING BUZZER	VARNINGSSUMMER		
1	–	1	PANEL PLATE	PANELPLÅT		
2	3176 4158 00	1	BULB	GLÖDLAMPA		TYP.13913.ART.1378.
3	0162 4174 00	4	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 20 - 4.8 FZB
4	0301 2315 00	4	PLAIN WASHER	RUNDBRICKA		4,3 / 9 X 0,8 -HB 200 FZB
5	0291 1128 13	4	LOCK NUT	LÅSMUTTER		M 4 - 8 FZB / ISO 7040
10	5112 2863 00	1	RELAY SHELF	RELÄHYLLA		
11	5112 2879 00	2	CUSHION	UNDERLÄGG		
12	0147 1246 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 16 - 8.8 FZB
13	1088 0003 01	2	FLAT PIN SLEEVE	FLATSTIFTSHYLSA		A 6,3-1 T 70
14	0147 1244 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 12 - 8.8 FZB
15	0291 1128 16	2	LOCK NUT	LÅSMUTTER		M 6 - 8 FZB / ISO 7043
16	0346 1000 07	1	PIPE CLAMP	RÖRKLAMMA		D=44 NORMA TYP RSGU
17	0147 1325 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 25 - 8.8 FZB
18	0266 2111 00	1	NUT	MUTTER		M 10 - 8 FZB
19	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
20	3176 4049 51	2	END SUPPORT	ÄNDSTÖD		TERMINAL MODULE
21	3176 4049 00	32	TERMINAL BLOCK	KOPPLINGSPLINT		ZDU 2.5/4AN
22	3176 4049 02	1	BRIDGE CONN.	ÖVERKOPPL.BLECK		10-POL
23	3176 4049 01	2	END PLATE	ÄNDPLATTA		FOR ZDU 2,5/4A
24	3176 4049 11	4	TERMINAL BLOCK	KOPPLINGSPLINT		
25	3176 4049 13	1	BRIDGE CONN.	ÖVERKOPPL.BLECK		
26	3176 4049 12	1	END PLATE	ÄNDPLATTA		
27	5112 2216 04	2	EARTH TERMINAL	JORDPLINT		
28	0226 0351 07	2	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
29	5112 3043 10	7	FUSE CON. TERM.	SÄKRINGSPLINT		
30	5112 3043 13	1	BRIDGE CONN.	ÖVERKOPPL.BLECK		FUSE CON. TERM.
31	3176 4344 02	1	PIN INSERT	STIFTINSATS		24-TERMINALS (1-24)
32	5112 2215 00	1	SEAL	TÄTNING		

B0053354

SWITCH PANEL / INSTRUMENTPANEL 5112 0104 04

(Sheet 3 of 3)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
33	0291 1128 13	8	LOCK NUT	LÅSMUTTER		M 4 - 8 FZB / ISO 7040
34	3176 4343 01	1	HOUSING	PANELBRUNN		
35	0160 6042 00	4	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 16 - 4.8 FZB
36	0697 9810 19	2	END PLUG	AVSLUTN.PROPP		M20X1,5 A3
37	0698 5140 60	5	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
38	0697 9745 71	2	REDUCER	REDUCERING		A3 M 20X1,5 M 16X1,5 6 15
39	0698 5140 61	2	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
40	0697 9809 13	3	LOCK NUT	LÅSMUTTER		M16X1,5 A3
41	0697 9809 14	6	LOCK NUT	LÅSMUTTER		M20X1,5 A3
42	5112 2493 00	1	PLATE	SKYLT		
43	5112 3045 99	1	PLATE	SKYLT		
44	–	1	READ INSTR.BOOK	LÄS INSTR.BOK		SYMBOL
45	0129 3104 00	8	BLIND RIVET	BLINDNIT		2,4 X 7,4 TAP / D 48 BS
46	5112 2909 00	1	COVER	TÄCKLOCK		
50	0017 2060 70	4M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 6MM2 BLACK D2=4.8 6MM BLACK
51	0017 2060 50	4M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 2,5 MM2 BLACK D1=4.2 2,5MM BLACK
52	0017 2060 40	40M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 1,5MM2 BLACK D1=3.5

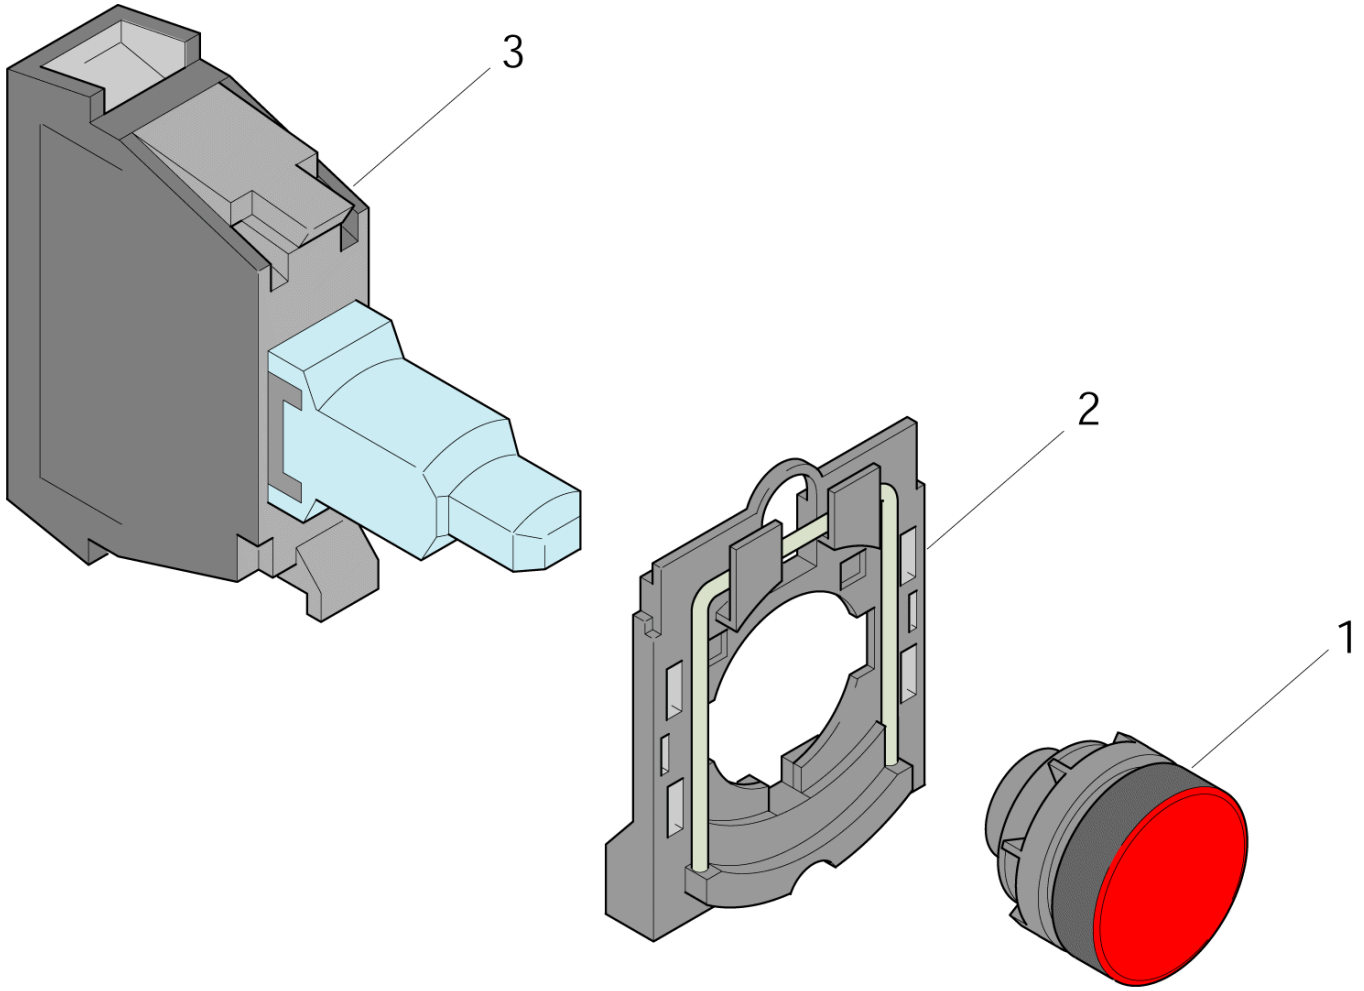

1250 0139 40


B0025322

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 0010 47	1	LAMP CALOTTE	LAMPKALOTT		
2	3217 0010 72	1	INTERMED. PART	MELLANDEL		
3	3217 0010 59	1	LAMP INSERT	LAMPINSATS		

HOUR METER / TIMRÄKNARE

COMPLETE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0026 14	1	HOUR METER	TIMRÄKNARE		
3	1088 0003 01	5	FLAT PIN SLEEVE	FLATSTIFTSHYLSA		A 6,3-1 T 70

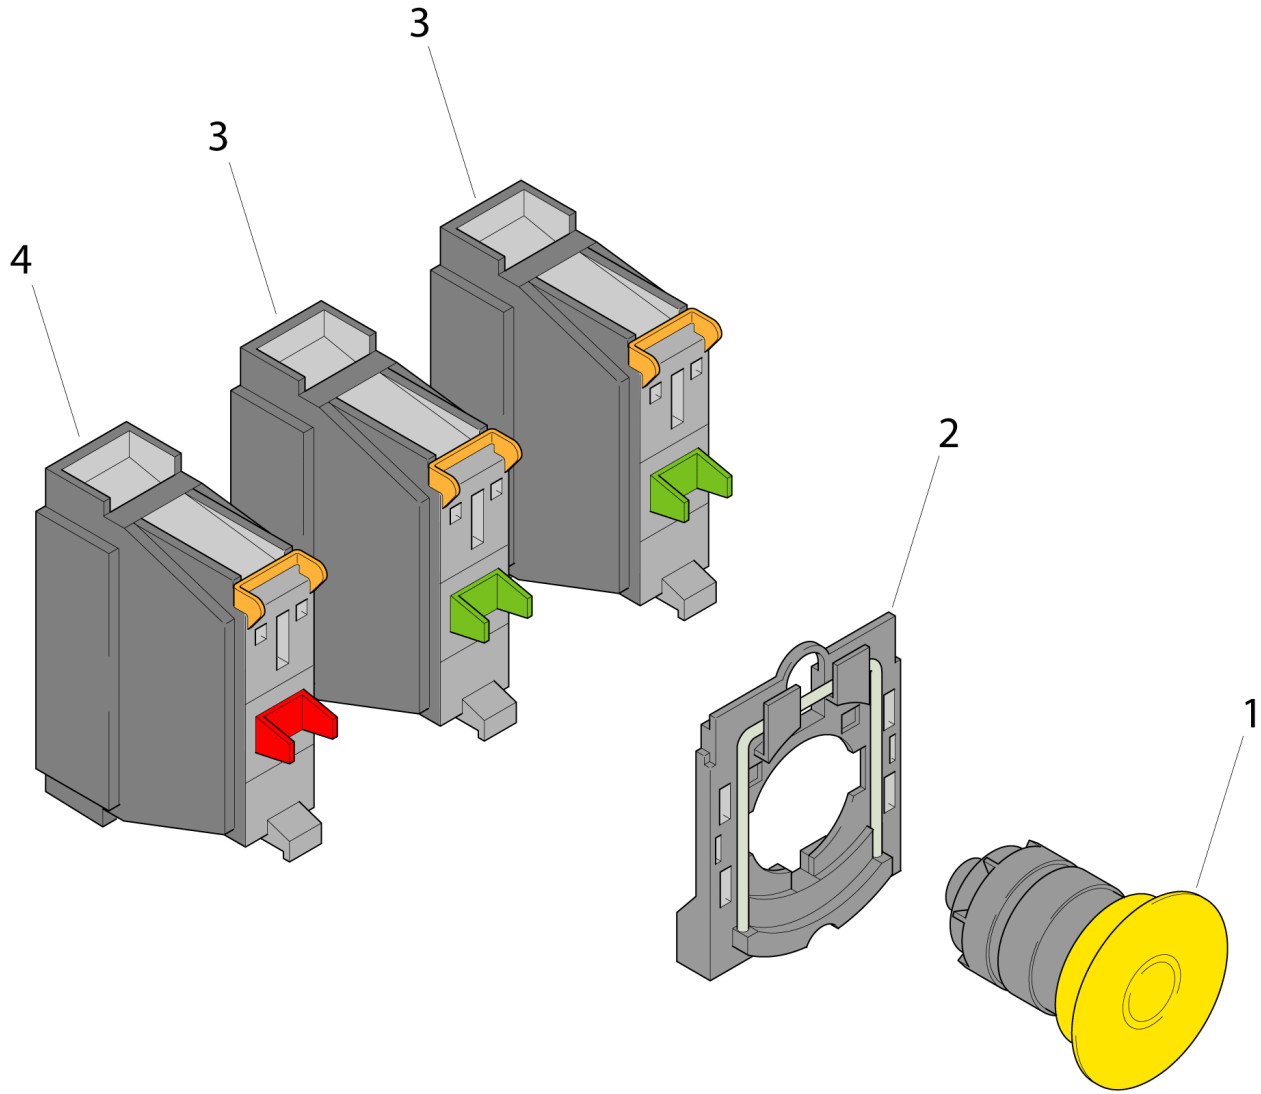


1250 0139 75

B0025617

MUSHROOM PUSHB. / SVAMPTRYCKKNAPP 3217 0012 35

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 0011 07	1	MUSHROOM PUSHB.	SVAMPTRYCKE		PULL-REL.MUSHROOM BUTTON
2	3217 0010 72	1	INTERMED. PART	MELLANDEL		
3	3217 0010 73	2	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY OPEN
4	3217 0010 74	1	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY CLOSED

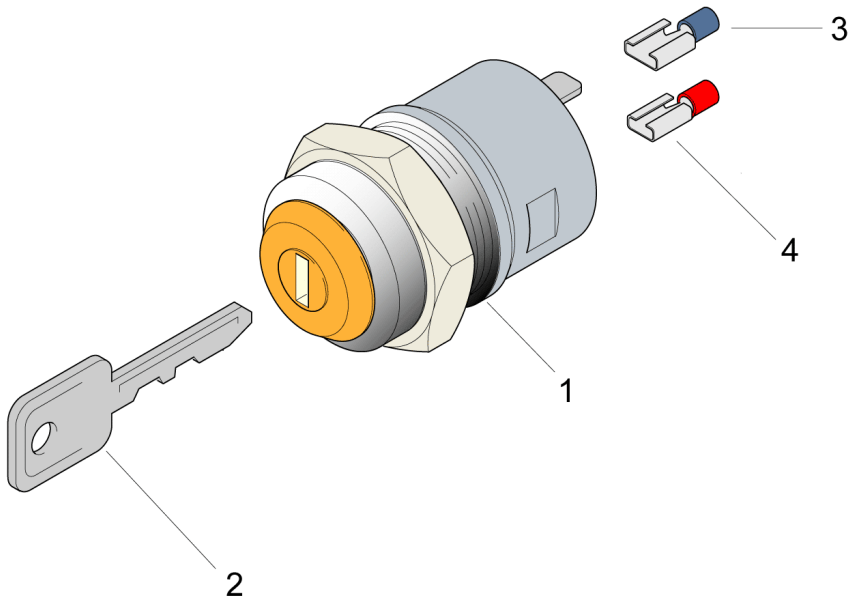


1250 0148 03

B0028131

IGNITION LOCK / TÄNDNINGSLÅS

5112 3046 92


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3046 72	1	IGNITION LOCK	TÄNDNINGSLÅS		INCL.2 KEYS
2	5112 3046 73	2	IGNITON KEY	STARTNYCKEL		
3	5112 3046 91	4	FLAT PIN SLEEVE	FLATSTIFTSHYLSA		
4	1088 0003 01	3	FLAT PIN SLEEVE	FLATSTIFTSHYLSA		A 6,3-1 T 70

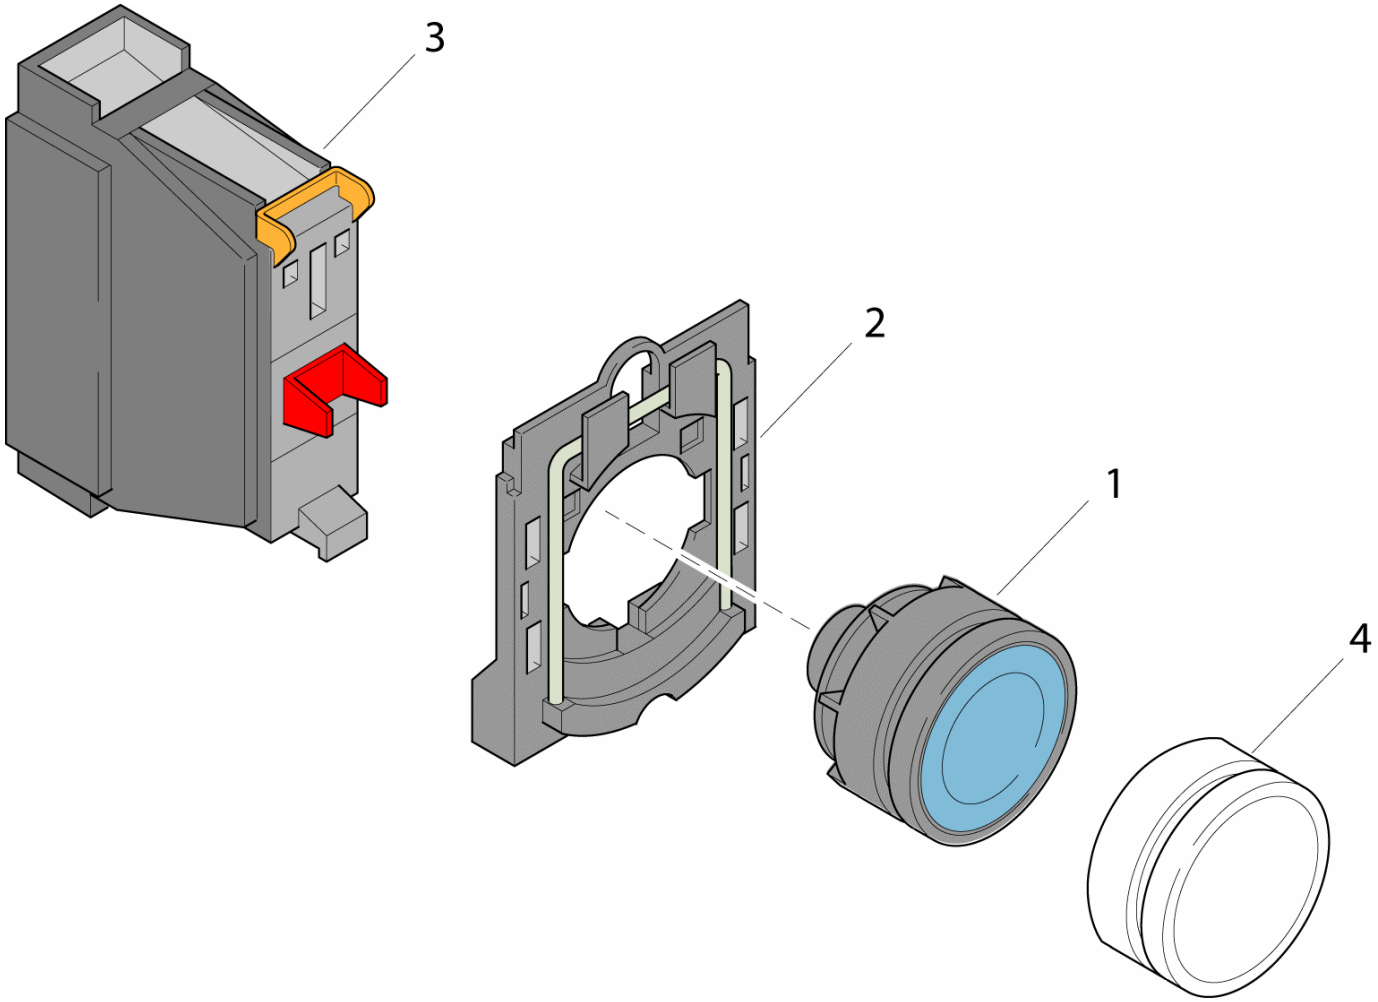

1250 0140 98

B0025809


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 0010 06	1	TRIGGER	TRYCKE		
2	3217 0010 72	1	INTERMED. PART	MELLANDEL		
3	3217 0010 74	1	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY CLOSED
4	3217 0010 75	1	SEALING COVER	TÄTNINGSKÅPA		

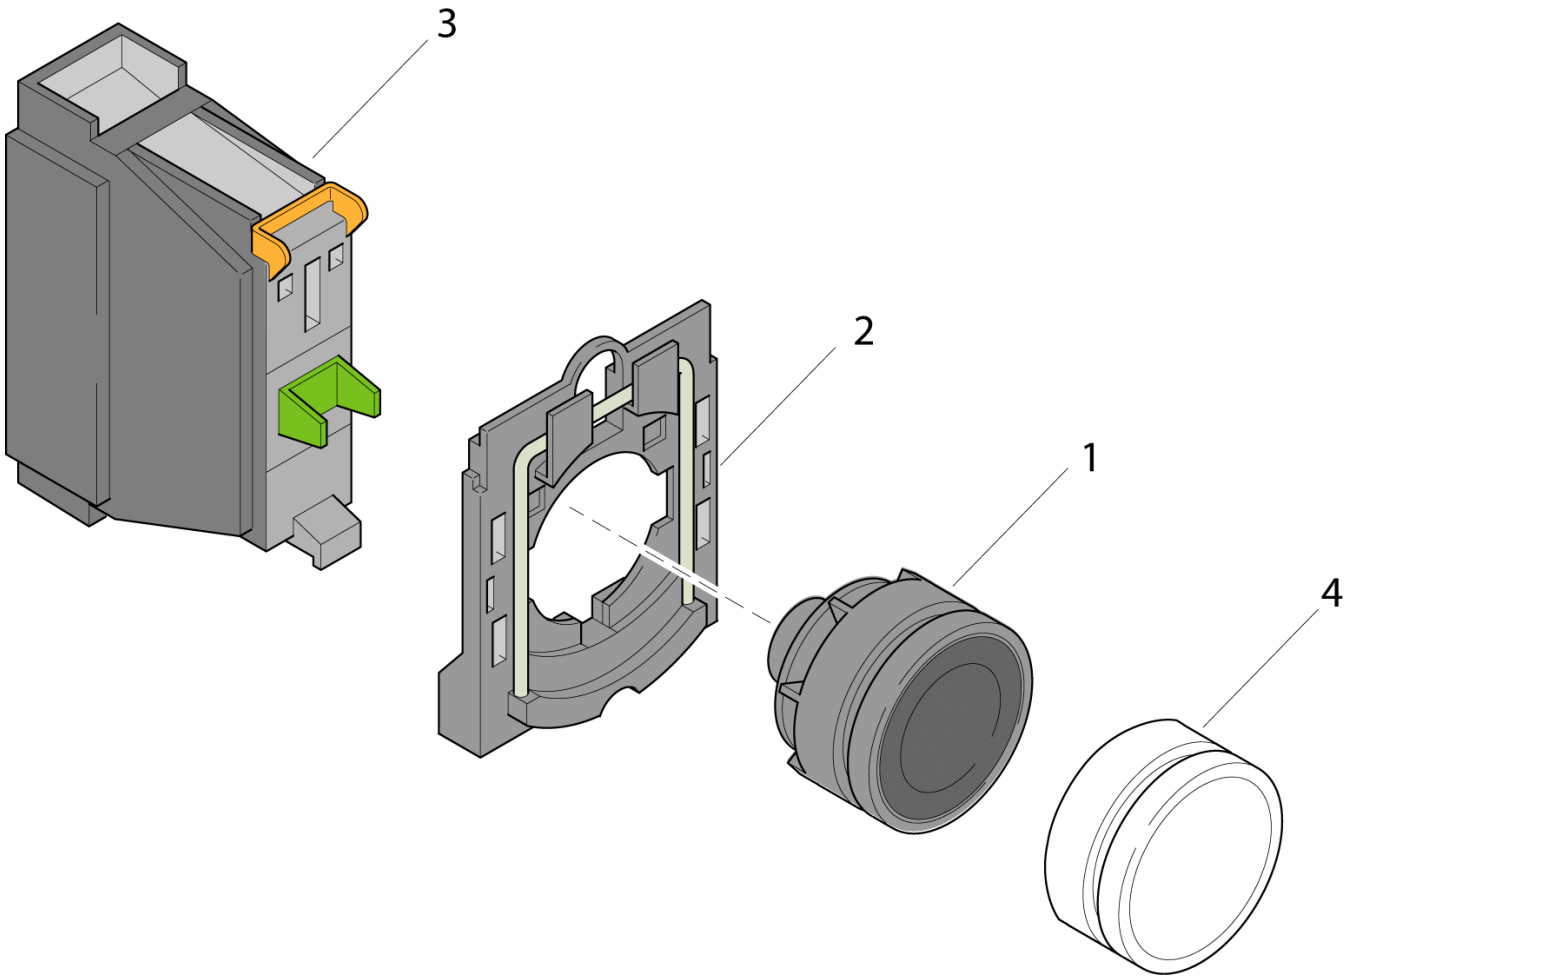

1250 0140 97


B0025807

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 0010 02	1	TRIGGER	TRYCKE		ZB5-AA2
2	3217 0010 72	1	INTERMED. PART	MELLANDEL		
3	3217 0010 73	1	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY OPEN
4	3217 0010 75	1	SEALING COVER	TÄTNINGSKÅPA		

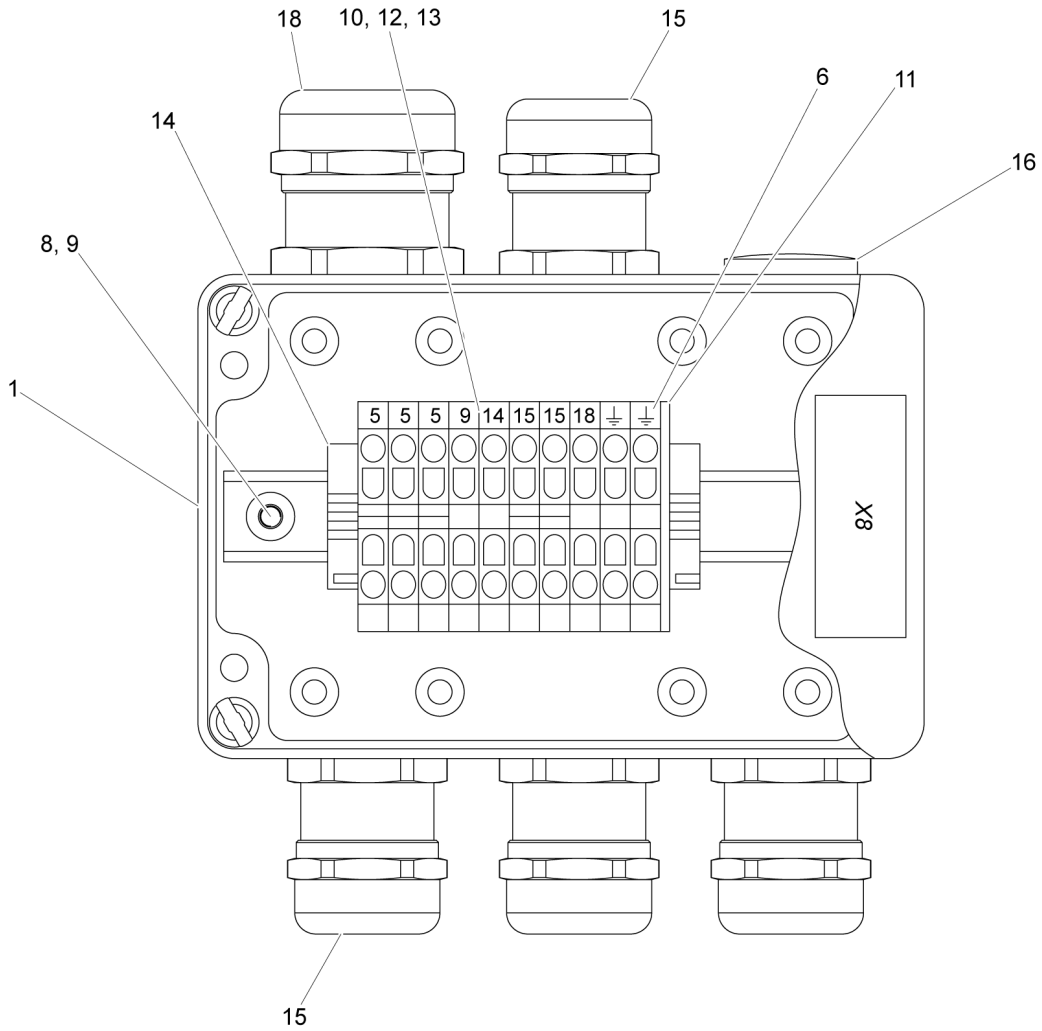

5112010549 02


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0027 02	1	DRILLED BOX	HÅLAD LÅDA		
6	3176 4049 26	2	TERMINAL BLOCK	KOPPLINGSPLINT		
8	3214 0181 00	0.15M	MOUNTING RAIL	MONTERINGSSKENA		
9	0160 6036 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 5 - 5.8 FZB
10	3176 4049 20	8	TERMINAL BLOCK	KOPPLINGSPLINT		
11	3176 4049 21	1	END PLATE	ÄNDPLATTA		
12	3176 4049 25	1	BRIDGE CONN.	ÖVERKOPPL.BLECK		
13	3176 4049 61	1	MARKING PLATE	MÄRKSKYLT		HORIZSONTAL PLINTH 5X5MM
13	3176 4049 62	1	MARKING PLATE	MÄRKSKYLT		HORIZSONTAL PLINTH 5X5MM
14	3176 4049 52	2	END SUPPORT	ÄNDSTÖD		
15	0698 5141 70	4	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 5-10 B2
16	0697 9810 54	1	END PLUG	AVSLUTN.PROPP		M 20X1,5 BLACK A5
18	0698 5141 71	1	CABLE GLAND	KABELFÖRSKRUVN.		M25X1,5 6-13 B2

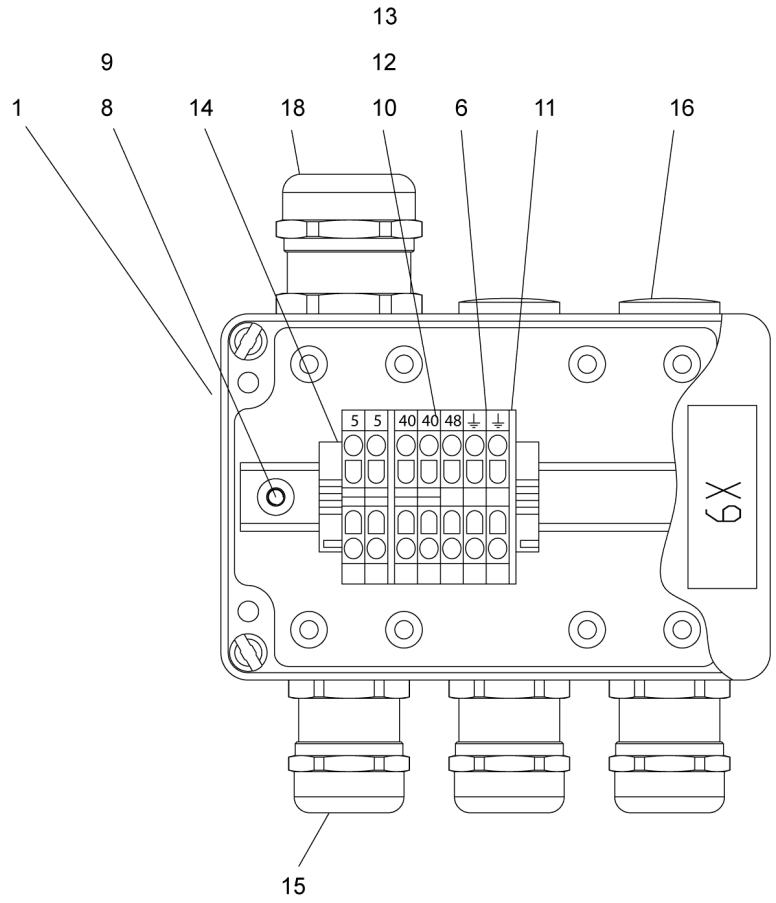



5112010551 01


B0052269


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0027 02	1	DRILLED BOX	HÅLAD LÅDA		
6	3176 4049 26	2	TERMINAL BLOCK	KOPPLINGSPLINT		
8	3214 0181 00	0.15M	MOUNTING RAIL	MONTERINGSSKENA		
9	0160 6036 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 5 - 5.8 FZB
10	3176 4049 20	5	TERMINAL BLOCK	KOPPLINGSPLINT		
11	3176 4049 21	2	END PLATE	ÄNDPLATTA		
12	3176 4049 25	1	BRIDGE CONN.	ÖVERKOPPL.BLECK		
13	3176 4049 61	1	MARKING PLATE	MÄRKSKYLT		HORIZSONTAL PLINTH 5X5MM
13	3176 4049 65	1	MARKING PLATE	MÄRKSKYLT		HORIZSONTAL PLINTH 5X5MM
14	3176 4049 52	2	END SUPPORT	ÄNDSTÖD		
15	0698 5141 70	3	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 5-10 B2
16	0697 9810 54	2	END PLUG	AVSLUTN.PROPP		M 20X1,5 BLACK A5
18	0698 5141 71	1	CABLE GLAND	KABELFÖRSKRUVN.		M25X1,5 6-13 B2

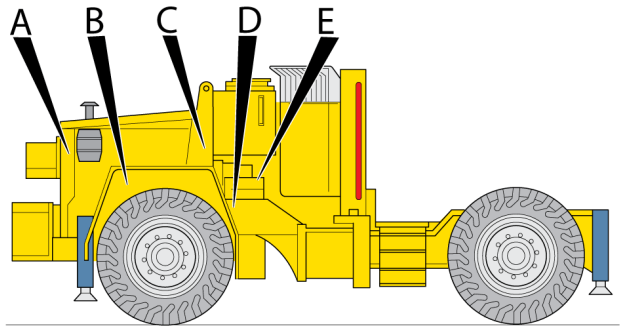

A
B
C
D
E

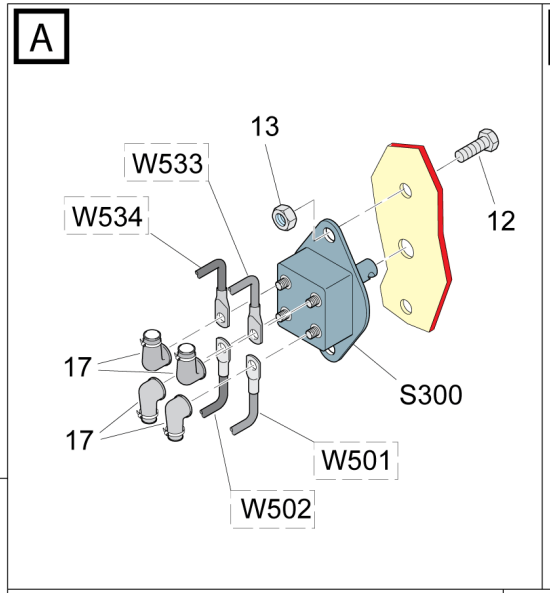

A
13
W533
W534
12
17
17
S300
W501
W502

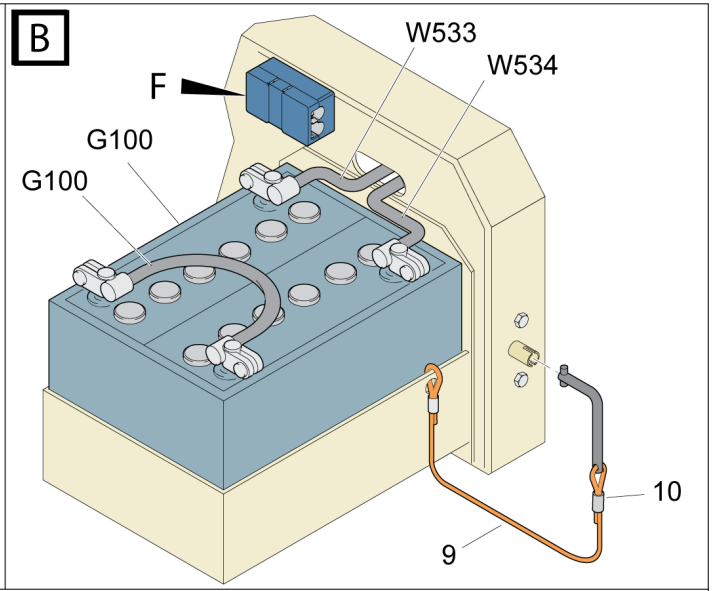
B
W533
W534
F
G100
G100
10
9

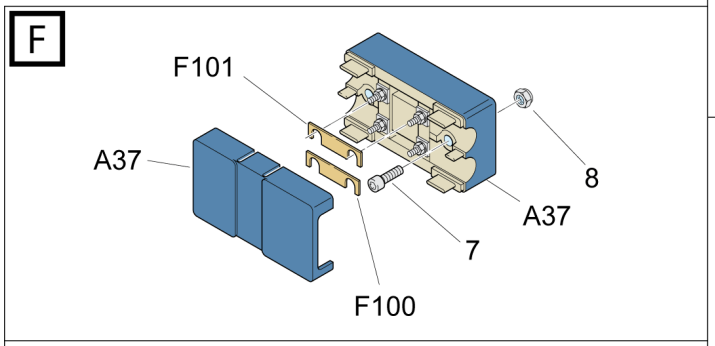
F
F101
A37
8
A37
7
F100

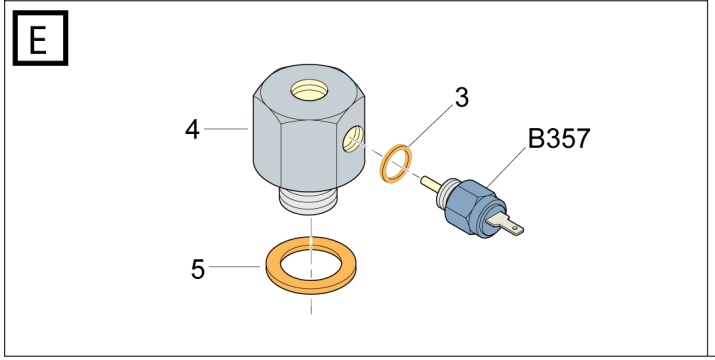
E
4
3
B357
5

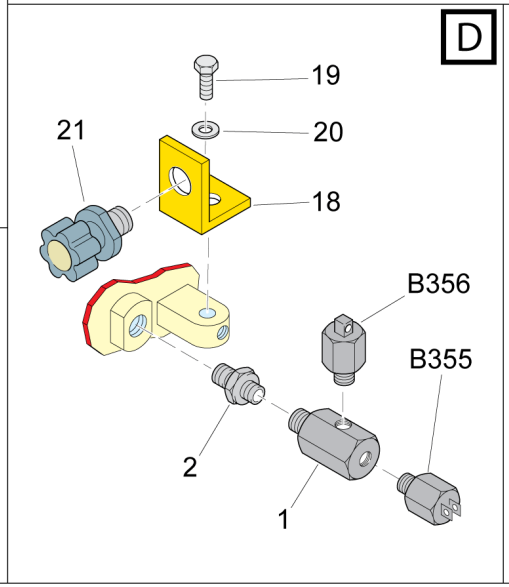
D
19
21
20
18
B356
B355
2
1

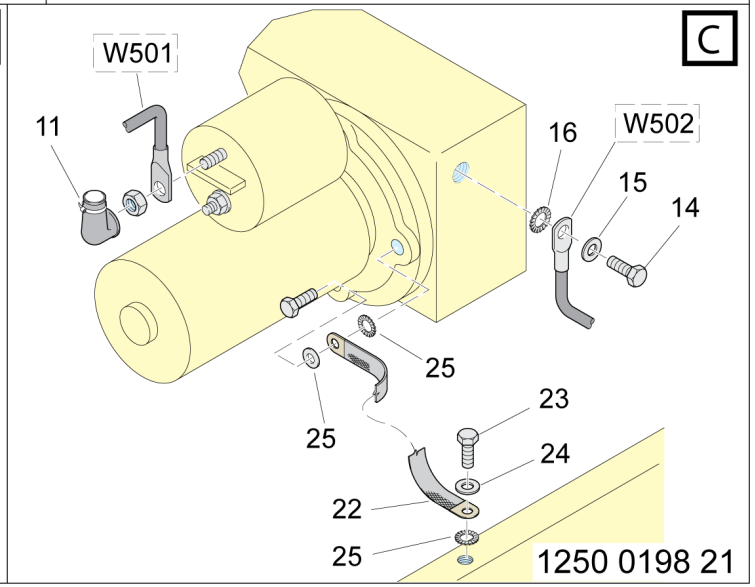

C
W501
11
16
W502
15
14
25
25
23
24
22
25
1250 0198 21

B0041735

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
B355	5112 3021 88	1	PRESSURE SWITCH	TRYCKVAKT		1/8'THREAD CLOSES AT 12BAR
B356	5112 3022 93	1	PRESSURE SWITCH	TRYCKVAKT		CUT-OFF AT 4.2 BAR 1/8'THREAD
B357	5112 3021 86	1	THERMOSTAT	TEMPERATURVAKT		
F100	3216 1531 00	1	FUSE	SÄKRING		25A
F101	3176 4394 00	2	FUSE	SÄKRING		50A
G100	0926 5051 00	2	BATTERY	BATTERI		12V 70AH TERMINAL 12V 70AH TERMINAL
G100	5112 2368 00	1	CABLE COMPLETE	KABEL KOMPLETT		G100
S300	3176 0026 97	1	BATTERY SWITCH	BATTERIFR.SKILJ		
W501	5112 0105 41	1	CABLE COMPLETE	KABEL KOMPLETT		
W502	5112 3030 99	1	CABLE COMPLETE	KABEL KOMPLETT		
W533	5112 2088 00	1	CABLE COMPLETE	KABEL KOMPLETT		W533
W534	5112 3021 78	1	CABLE COMPLETE	KABEL KOMPLETT		W534
A37	5112 3177 03	1	FUSE BOX	SÄKRINGSLÅDA		
1	5112 3044 36	1	NIPPLE	NIPPEL		
2	3176 1942 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/8 UNF 9/16-NPTF 1/8 STRAIGHT
3	0653 1070 00	1	GASKET	PACKNING		14 / 18 X 1,5 -11 5013 12
4	5112 3021 81	1	NIPPLE	NIPPEL		
5	0653 1174 00	1	GASKET	PACKNING		30 / 38 X 2 - 11 5013 12
7	0226 0351 01	2	TAPPING SCREW	GÄNGANDE SKRUV		MC6S M 5 X 20 - 5.8 FZB MC6S M5X20-5.8 FZB
8	0291 1128 15	2	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
9	4310 0464 00	1M	PLAST.,ST.CABLE	PLAST,STÅLLINA		
10	4330 1016 00	2	BULLDOG GRIP	LINLÅS		
11	5118 0904 00	1	RUBBER PROTEC	GUMMISKYDD		RUBBER PROTEC.4N
12	0147 1323 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 20 -8.8 FZB
13	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
14	0147 1402 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
15	0301 2358 00	1	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
16	0333 3137 00	2	LOCK WASHER	LÅSBRICKA		13 / 20,5 X 1 DIN 6798
17	5118 0905 00	4	RUBBER PROTEC	GUMMISKYDD		

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
18	5112 2086 00	2	HOLDER	HÅLLARE		
19	0147 1404 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 45 - 8.8 FZB
20	0301 2358 00	1	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
21	0697 9809 14	2	LOCK NUT	LÅSMUTTER		M20X1,5 A3
21	3176 0029 69	2	HOSE COUPLING	SLANGKOPPLING		
22	5112 2216 00	1	GROUND BRAID	JORDFLÄTA		
23	0147 1360 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
24	0301 2344 00	2	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
25	0333 3132 00	2	LOCK WASHER	LÅSBRICKA		10,5 / 18 X 0,9 DIN 6798

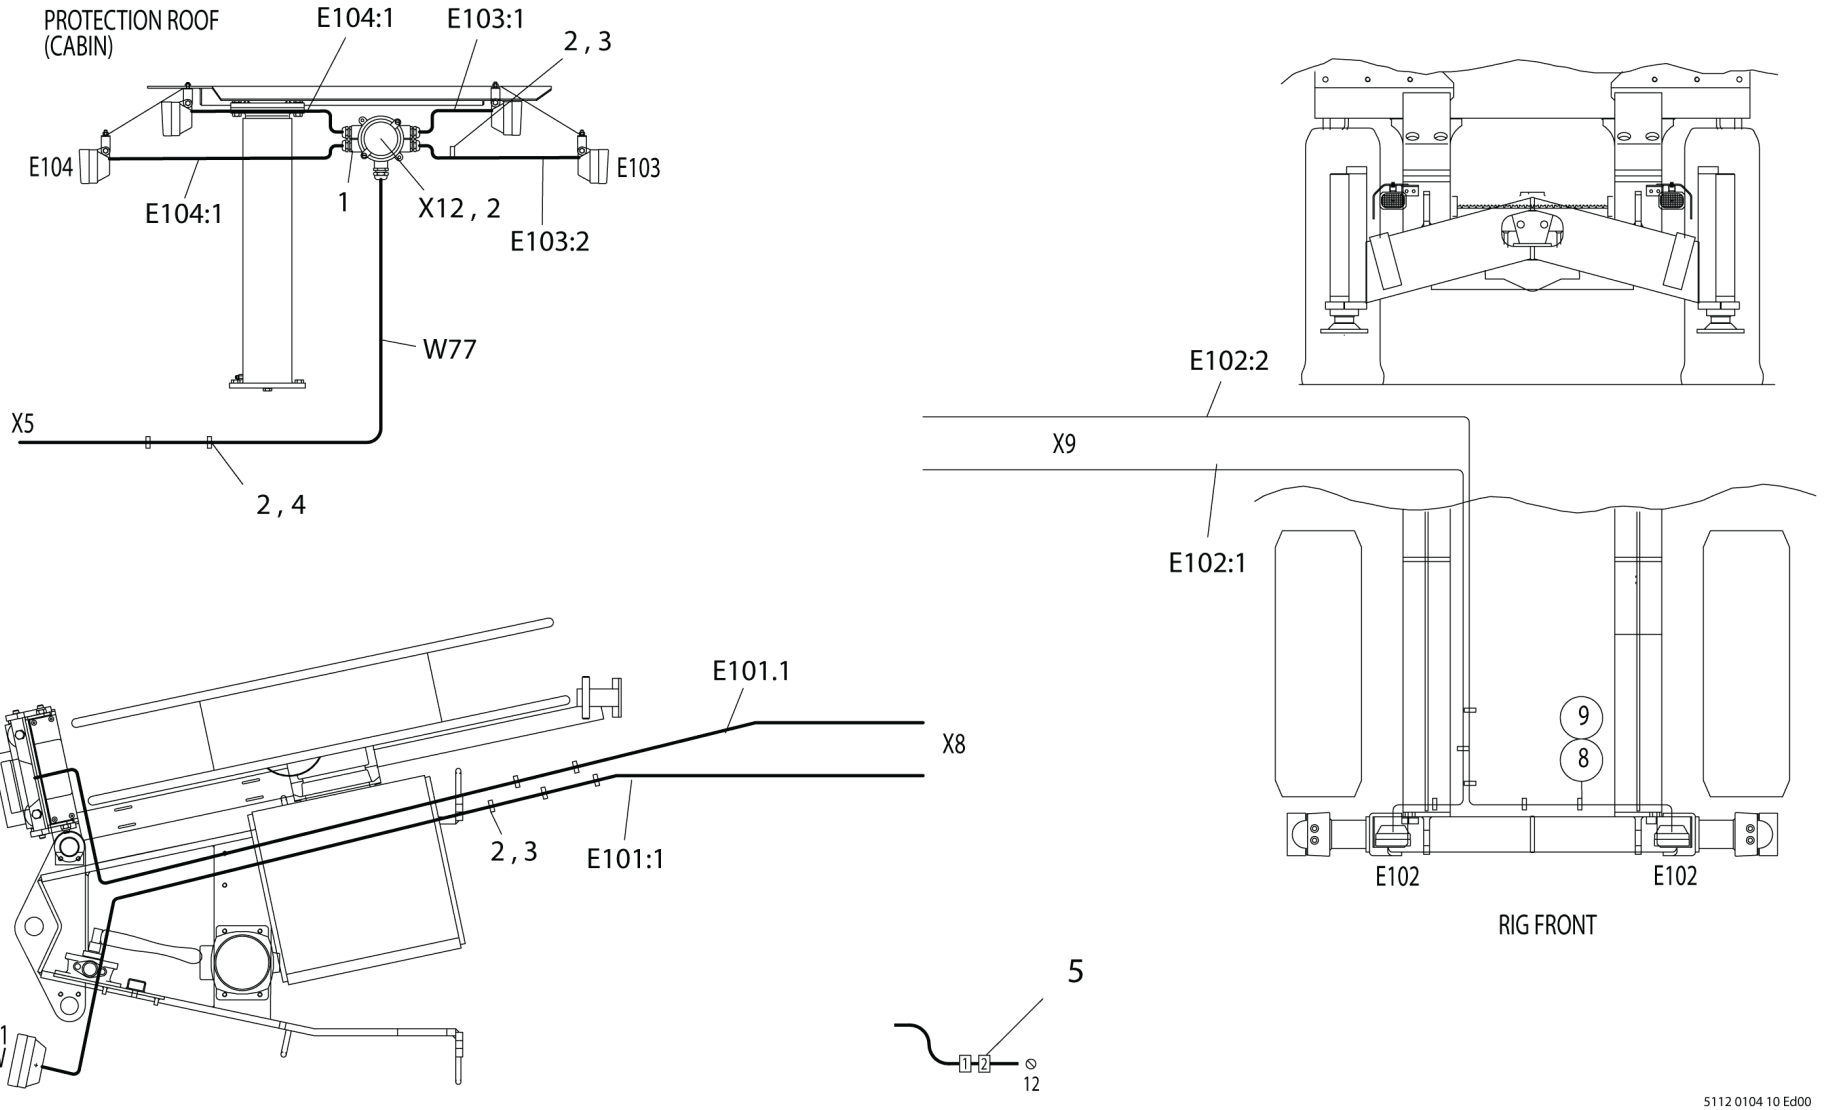
PROTECTION ROOF
(CABIN)
E104:1
E103:1
2 , 3
E104
E103
E104:1
1
X12 , 2
E103:2
W77
X5
2 , 4
E102:2
X9
E102:1
E101.1
X8
E101
70W
2 , 3
E101:1
REAR FRAME
E101
70W
9
8
E102
E102
RIG FRONT
5
1
2
12
5112 0104 10 Ed00

B0044370


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
E101	5112 3043 40	2	HEADLIGHT	STRÅLKASTARE	Page 291	
E101	9111 3891 44	10M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
E102	5112 3043 40	2	HEADLIGHT	STRÅLKASTARE	Page 291	
E102	9111 3891 44	10M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
E103	5112 3134 78	2	WIRING	KABLAGE		DT06-2S-E008+5M CABLE
E103	5112 3134 81	2	HEADLIGHT	STRÅLKASTARE	Page 293	NORDIC 100 24V
E104	5112 3134 78	2	WIRING	KABLAGE		DT06-2S-E008+5M CABLE
E104	5112 3134 81	2	HEADLIGHT	STRÅLKASTARE	Page 293	NORDIC 100 24V
W77	9111 3891 10	10M	CABLE, 5-CORE	KABEL, 5-LEDARE		150 5G1.5 D2=9.8
X12	5112 3217 81	1	JUNCTION BOX	KOPPLINGSLÅDA	Page 295	
1	0698 5140 60	2	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
2	0226 0351 07	98	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
3	0346 1002 01	76	PIPE CLAMP	RÖRKLAMMA		D=8 NORMA TYP RSGU RUBBER-COVERED
4	0346 1002 03	20	PIPE CLAMP	RÖRKLAMMA		D=12 NORMA TYP RSGU D=12 NORMA TYP RSGU

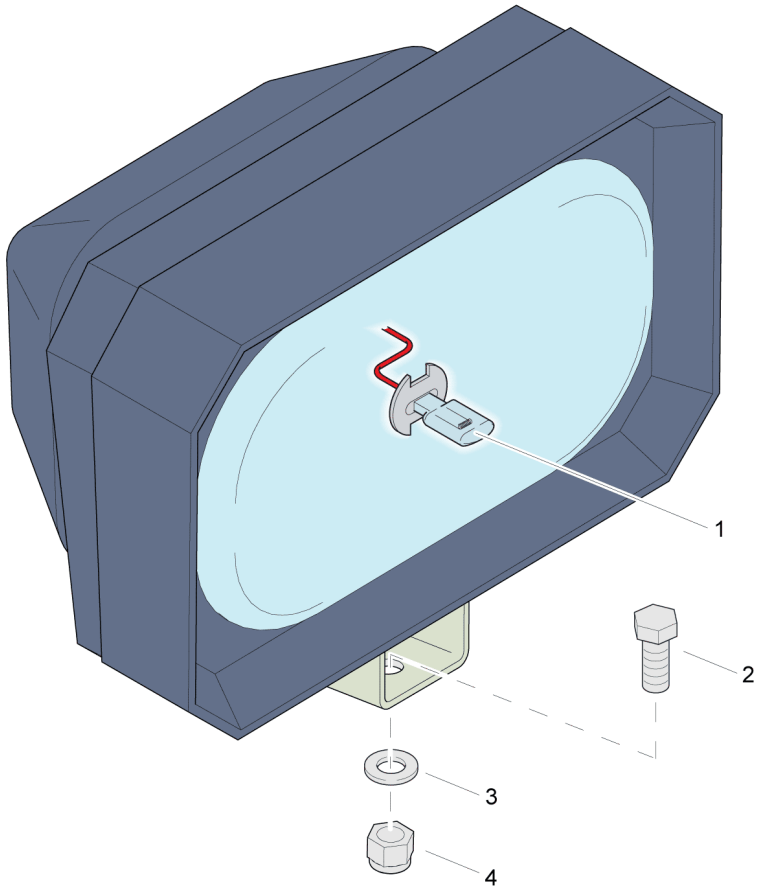

1250 0240 61

B0048346


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 4494 00	1	BULB	GLÖDLAMPA		H3 70W 24V
2	0147 1325 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 25 - 8.8 FZB
3	0300 8005 00	1	PLAIN WASHER	RUNDBRICKA		9 / 25 X 1,5 - FZB
4	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

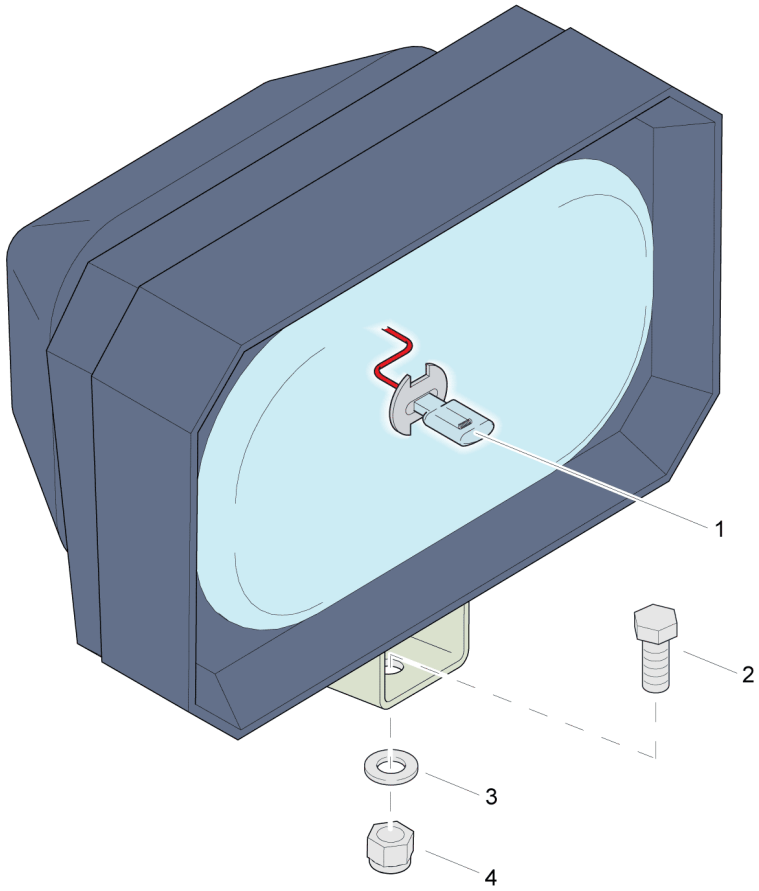

1250 0240 61

B0048346

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 4494 00	1	BULB	GLÖDLAMPA		H3 70W 24V
2	0147 1325 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 25 - 8.8 FZB
3	0300 8005 00	1	PLAIN WASHER	RUNDBRICKA		9 / 25 X 1,5 - FZB
4	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

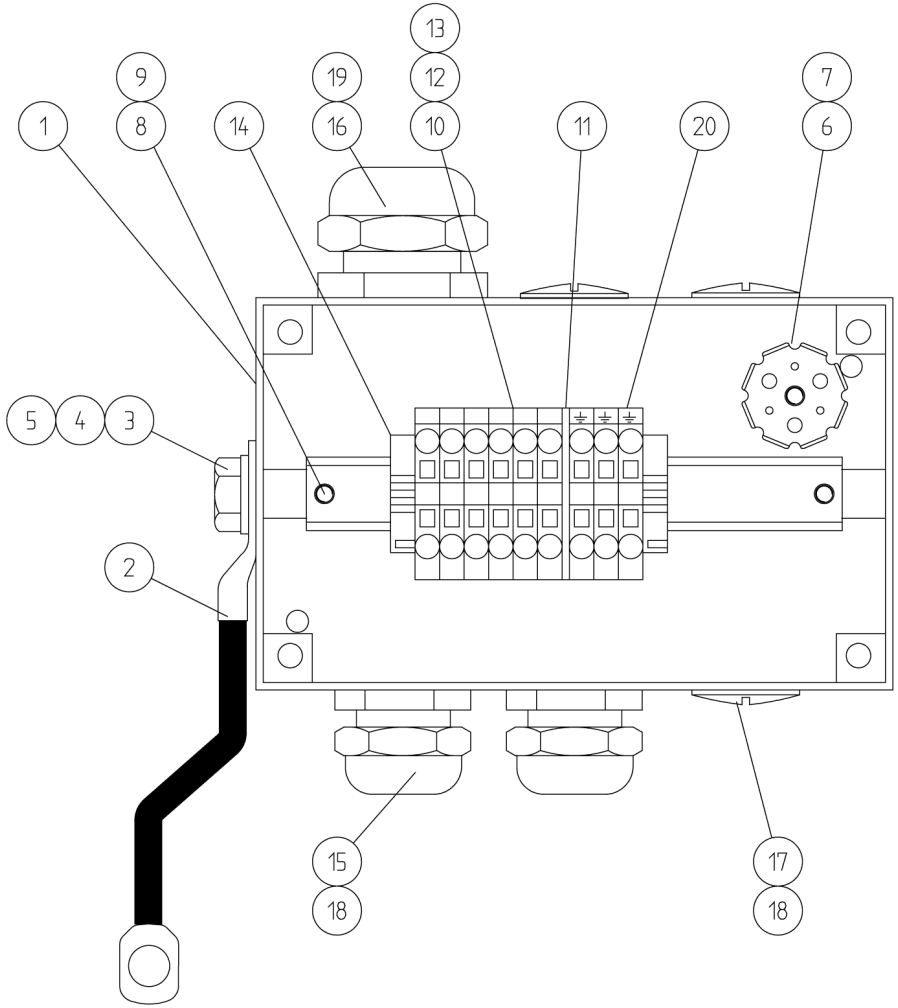


5112 3217 8401

B0040032

JUNCTION BOX / KOPPLINGSLÅDA 5112 3217 81

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0027 02	1	DRILLED BOX	HÅLAD LÅDA		
2	3222 3048 77	1	GROUND BRAID	JORDFLÄTA		
3	0147 1322 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
4	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
5	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
6	5112 2216 04	1	EARTH TERMINAL	JORDPLINT		
7	0226 0351 07	1	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
8	3214 0181 00	0.15M	MOUNTING RAIL	MONTERINGSSKENA		
9	0160 6036 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 5 - 5.8 FZB
10	3176 4049 20	6	TERMINAL BLOCK	KOPPLINGSPLINT		
11	3176 4049 21	1	END PLATE	ÄNDPLATTA		
12	3176 4049 25	1	BRIDGE CONN.	ÖVERKOPPL.BLECK		
13	3176 4491 01	1	MARKING PLATE	MÄRKSKYLT		5FW 1-50 1-50
13	3176 4491 02	1	MARKING PLATE	MÄRKSKYLT		5FW 51-100 TERMINAL MARKERS
14	3176 4049 52	2	END SUPPORT	ÄNDSTÖD		
15	0698 5141 41	2	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 5-10 B1
16	0698 5141 13	1	CABLE GLAND	KABELFÖRSKRUVN.		M25X1,5 6-13 B1
17	0697 9810 19	3	END PLUG	AVSLUTN.PROPP		M20X1,5 A3
18	0697 9809 14	5	LOCK NUT	LÅSMUTTER		M20X1,5 A3
19	0697 9809 15	1	LOCK NUT	LÅSMUTTER		M25X1,5 A3
20	3176 4049 26	3	TERMINAL BLOCK	KOPPLINGSPLINT		


REVERSE ALARM / BACKALARM

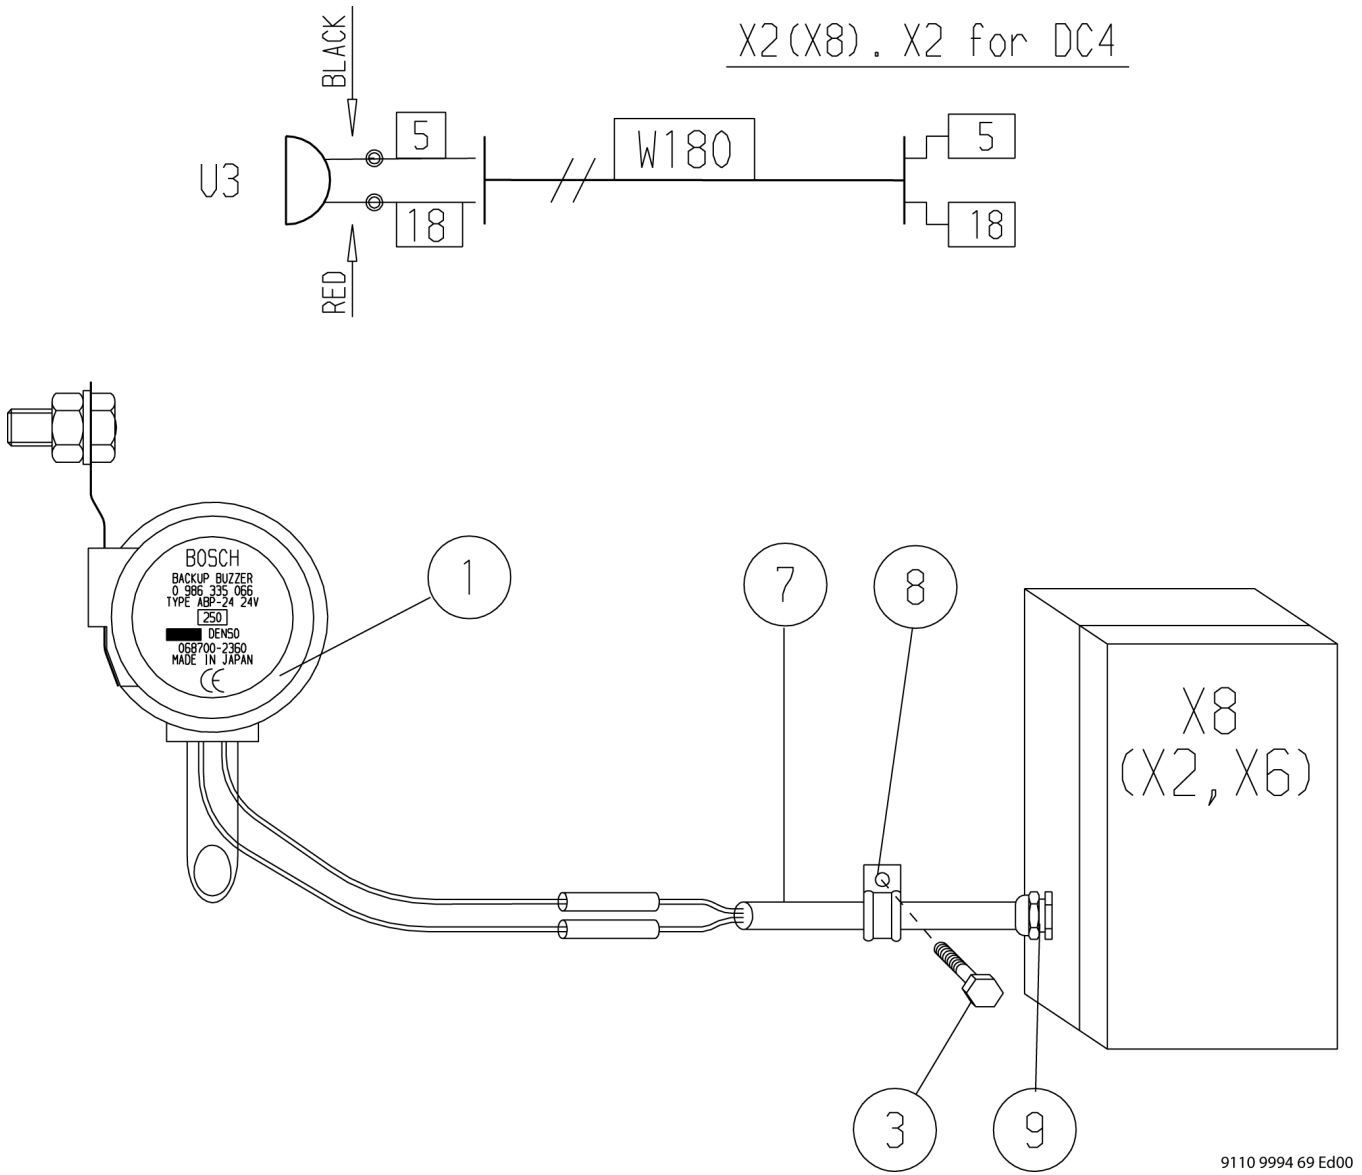

B0029729

REVERSE ALARM / BACKALARM

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0001 45	1	WARNING BUZZER	VARNINGSSUMMER		
3	0147 1325 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 25 - 8.8 FZB
7	5112 0115 67	1	CABLE COMPLETE	KABEL KOMPLETT		
8	0346 1002 43	6	PIPE CLAMP	RÖRKLAMMA		D=19 NORMA TYP RSGU
9	0698 5140 61	1	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1

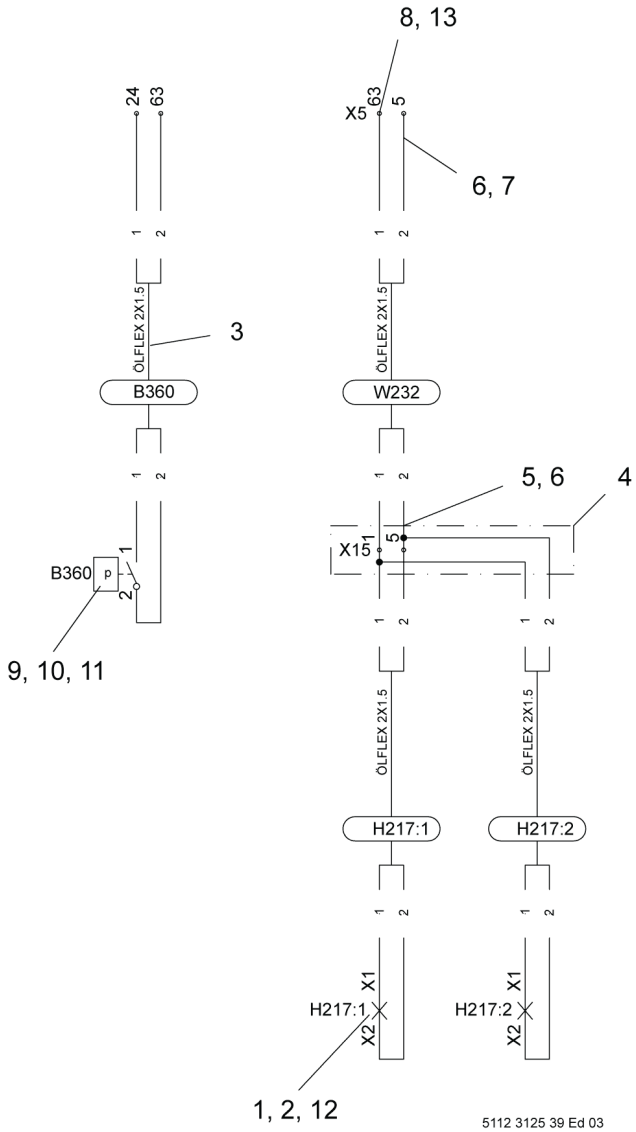

8, 13
24
63
X5
63
5
6, 7
1
2
ÖLFLEX 2X1.5
3
B360
W232
5, 6
4
X15
5
B360
p
1
2
9, 10, 11
ÖLFLEX 2X1.5
ÖLFLEX 2X1.5
H217:1
H217:2
X1
H217:1
X2
X1
H217:2
X2
1, 2, 12
5112 3125 39 Ed 03


B0043320

BRAKE LIGHT / BROMSLJUS

5112 3126 05

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3124 73	2	BRAKE LIGHT	BROMSLJUS		
2	5112 3125 40	2	BULB	GLÖDLAMPA		24V 21W BA15S
3	9111 3891 44	10M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
4	0698 5205 00	1	JUNCTION BOX	KOPPLINGSDOSA		3XPG11-PR18,6 77X90MM
5	0697 9745 66	3	ADAPTER	ADAPTER		PG 11 - M 16X1,5
6	0698 5140 60	5	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
7	0697 9809 13	2	LOCK NUT	LÅSMUTTER		M16X1,5 A3
8	3176 4049 30	1	TERMINAL BLOCK	KOPPLINGSPLINT		
9	5112 2877 71	1	PRESSURE SWITCH	TRYCKVAKT		5BAR M12X1,5/M16X1,5
10	1088 0003 01	2	FLAT PIN SLEEVE	FLATSTIFTSHYLSA		A 6,3-1 T 70
11	5112 2949 01	1	PROTECT. COVER	SKYDDSHUV		
12	9110 9986 50	2	ATTACHMENT	FÄSTE		
13	3176 4049 67	1	MARKING PLATE	MÄRKSKYLT		HORIZSONTAL PLINTH 5X5MM

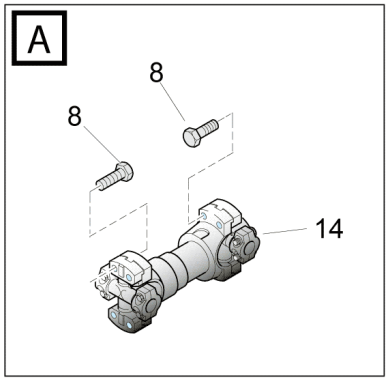


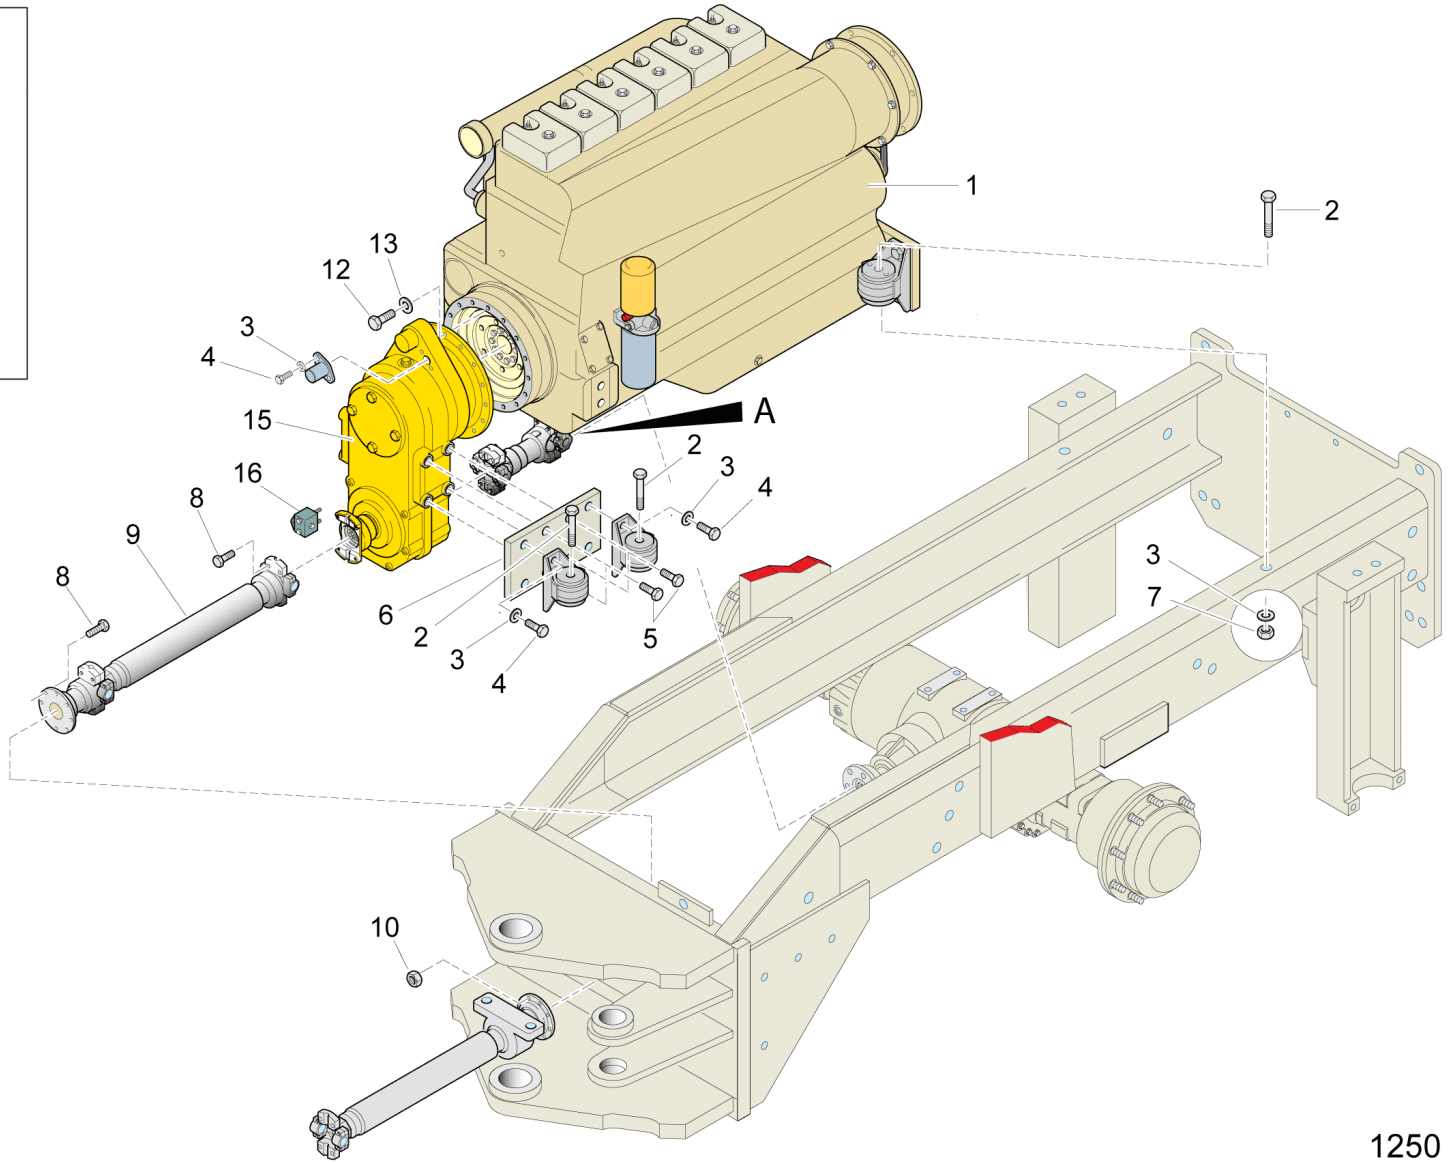

1250 0208 94

B0044371


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3230 54	1	DIESEL ENG.UNIT	DIESELMOT.ENHET	Page 303	DEUTZ D914 L04 2V
2	0147 1415 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 100 - 8.8 FZB
3	0301 2358 00	14	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
4	0147 1400 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
5	0147 1403 09	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 40 - 8.8 FZV
6	5112 3020 69	2	SPACER	DISTANS		
7	0291 1128 22	6	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
8	0144 4000 32	12	SCREW, HEX HEAD	SKRUV, SEXKANT		UNF 3/8 X 45 - 10.9
9	5112 3020 94	1	CARDAN SHAFT	KARDANAXEL	Page 321	
10	5112 3001 59	1	FLANGE SCR.SET	FLÄNS.SKRUVSATS		
11	5112 3216 64	1	HYDR.TRANSMISS.	HYDR.TRANSMISS	Page 323	
12	0147 1363 03	12	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 30 - 8.8 FZB
13	0301 2344 00	12	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
14	5112 3020 93	1	CARDAN SHAFT	KARDANAXEL	Page 325	
15	5112 3041 80	1	FILLER SET	PÅFYLLNINGSSATS	Page 327	CLARK 12000
16	5112 3102 99	1	LEVEL GLASS	NIVÅGLAS	Page 329	

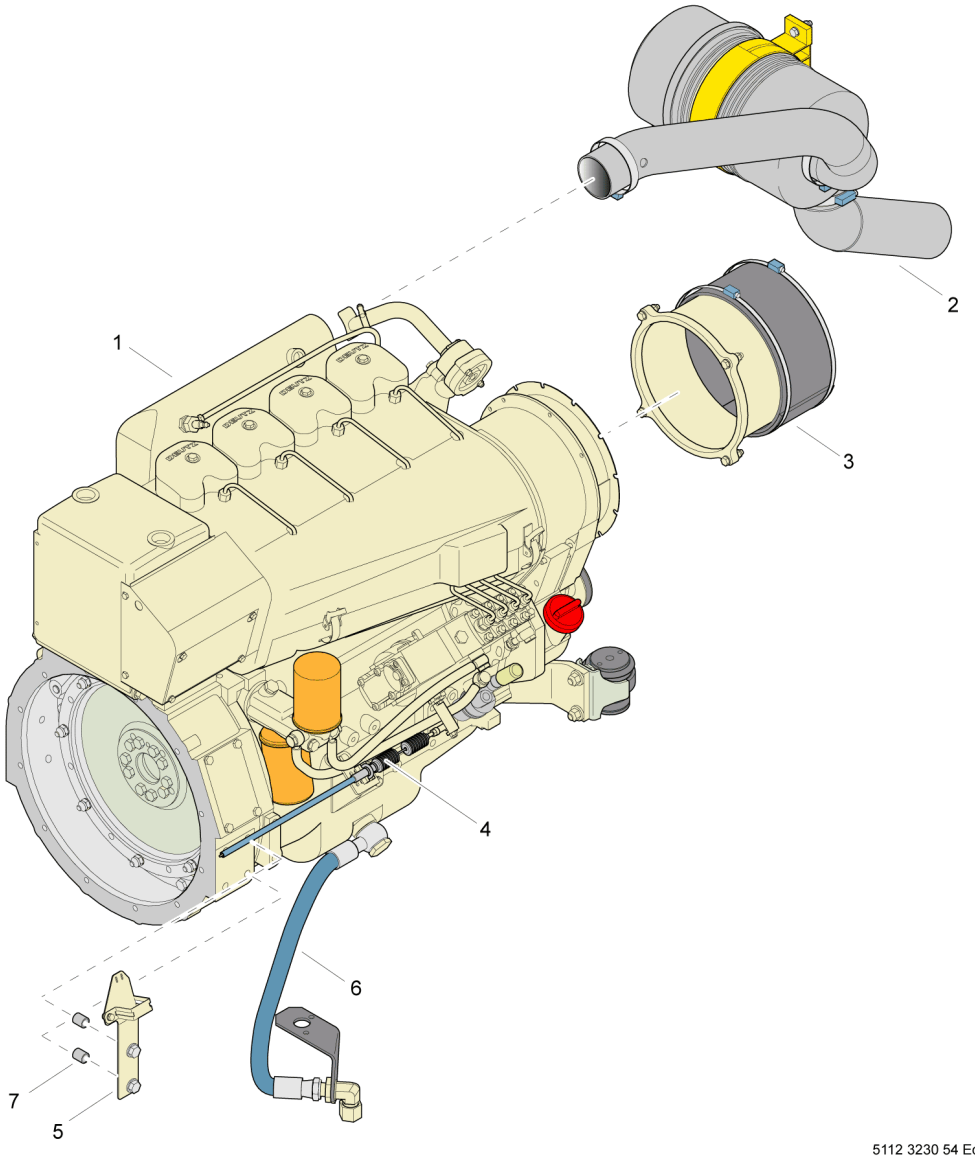

5112 3230 54 Ed04

B0050403

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3230 50	1	DIESEL ENGINE	DIESELMOTOR	Page 305	DEUTZ D914 L04 2V
2	–	1	AIR FILTER SET	LUFTFILTERSATS	Page 307	
3	5112 3231 60	1	AIR INLET	LUFTINTAG	Page 311	
4	–	1	THROTTLE CONTR.	GASREGLAGE	Page 313	
5	5112 3228 68	1	CABLE HOLDER	KABELHÅLLARE	Page 317	
6	–	1	DRAINAGE	AVTAPPNING	Page 319	
7	5112 3231 73	1	SPACER SLEEVE	DISTANSHYLSA		

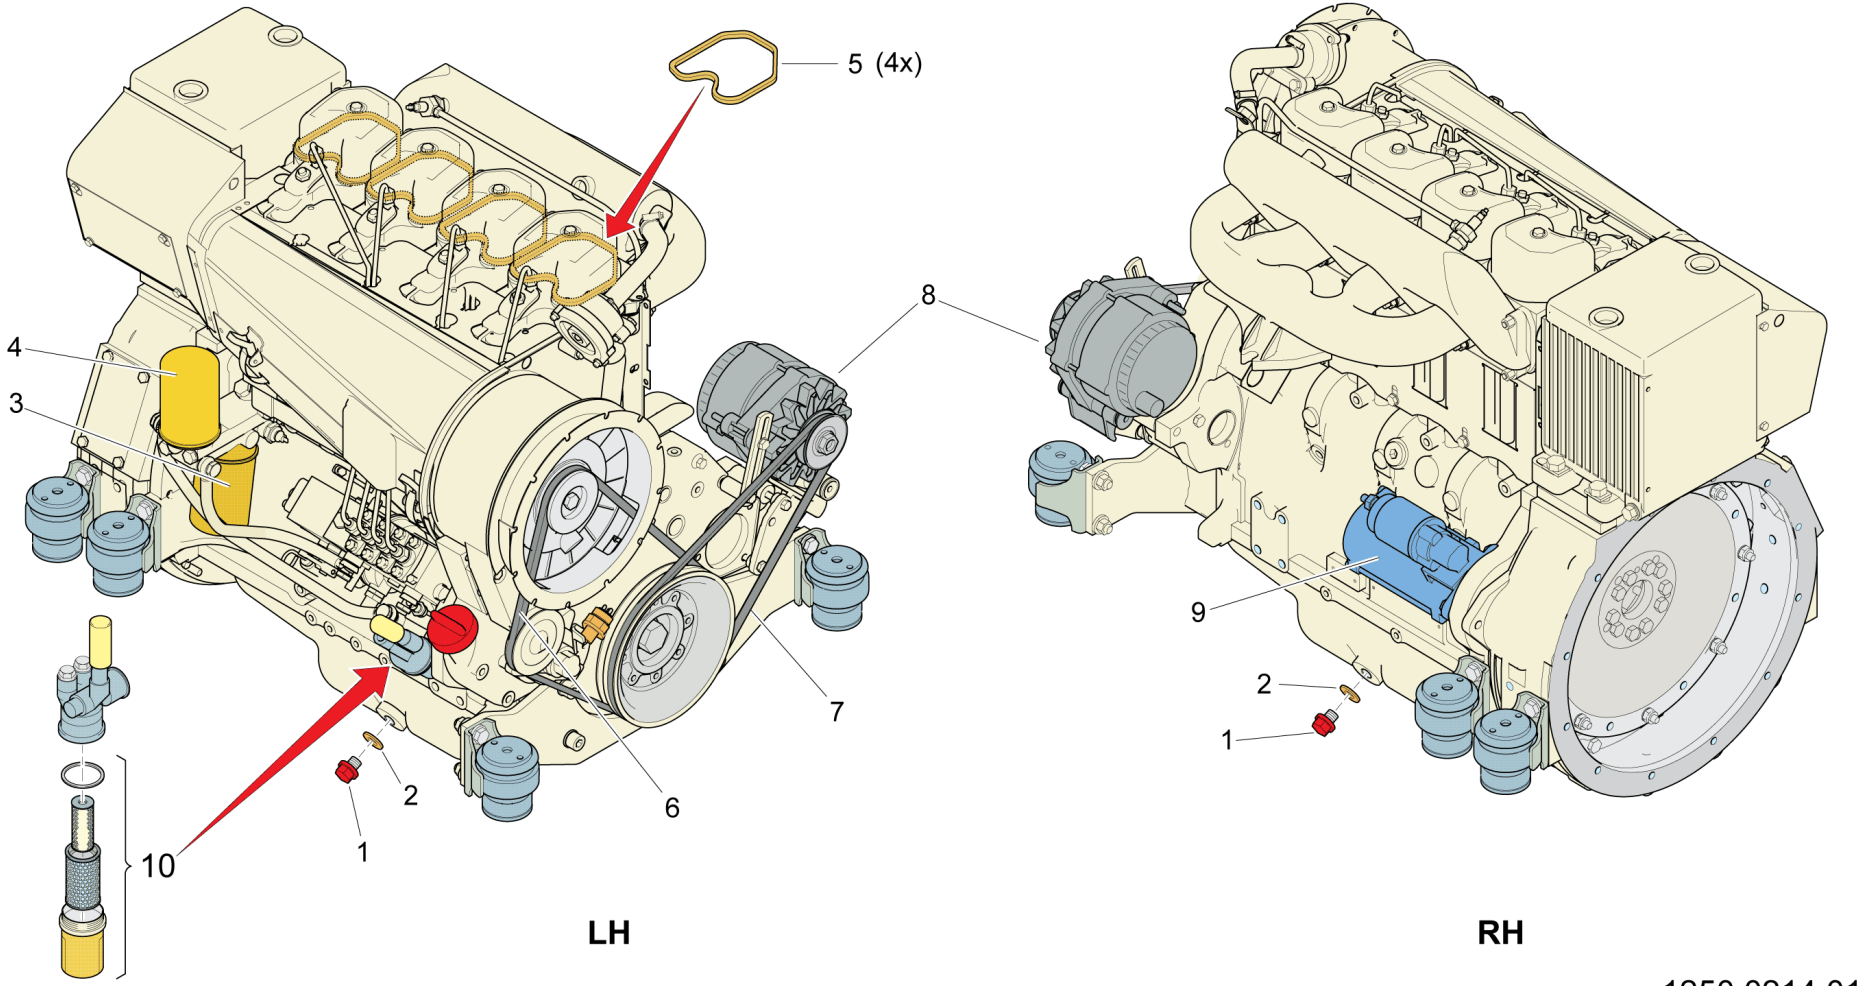


1250 0214 01

B0045110

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3177 0002 17	1	OIL PLUG	OLJEPLUGG		
2	5500 3057 00	1	SEAL WASHER	TÄTNINGSBRICKA		
3	5112 3007 59	1	OIL FILTER	OLJEFILTER		
4	5580 0041 28	1	FUEL FILTER	BRÄNSLEFILTER		
5	3177 0002 18	4	GASKET	PACKNING		
6	5112 3007 09	1	FAN BELT	FLÄKTREM		
7	5112 3226 17	1	V-BELT	KILREM		
8	3177 0002 19	1	GENERATOR	GENERATOR		
9	5112 3101 59	1	STARTER	STARTMOTOR		STARTER
10	5112 3226 16	1	FILTER	FILTER		SET OF PARTS
11	9106 3207 43	4	MOTOR BRACKET	MOTORFÄSTE		NOT SHOWN


AIR FILTER SET / LUFTFILTERSATS

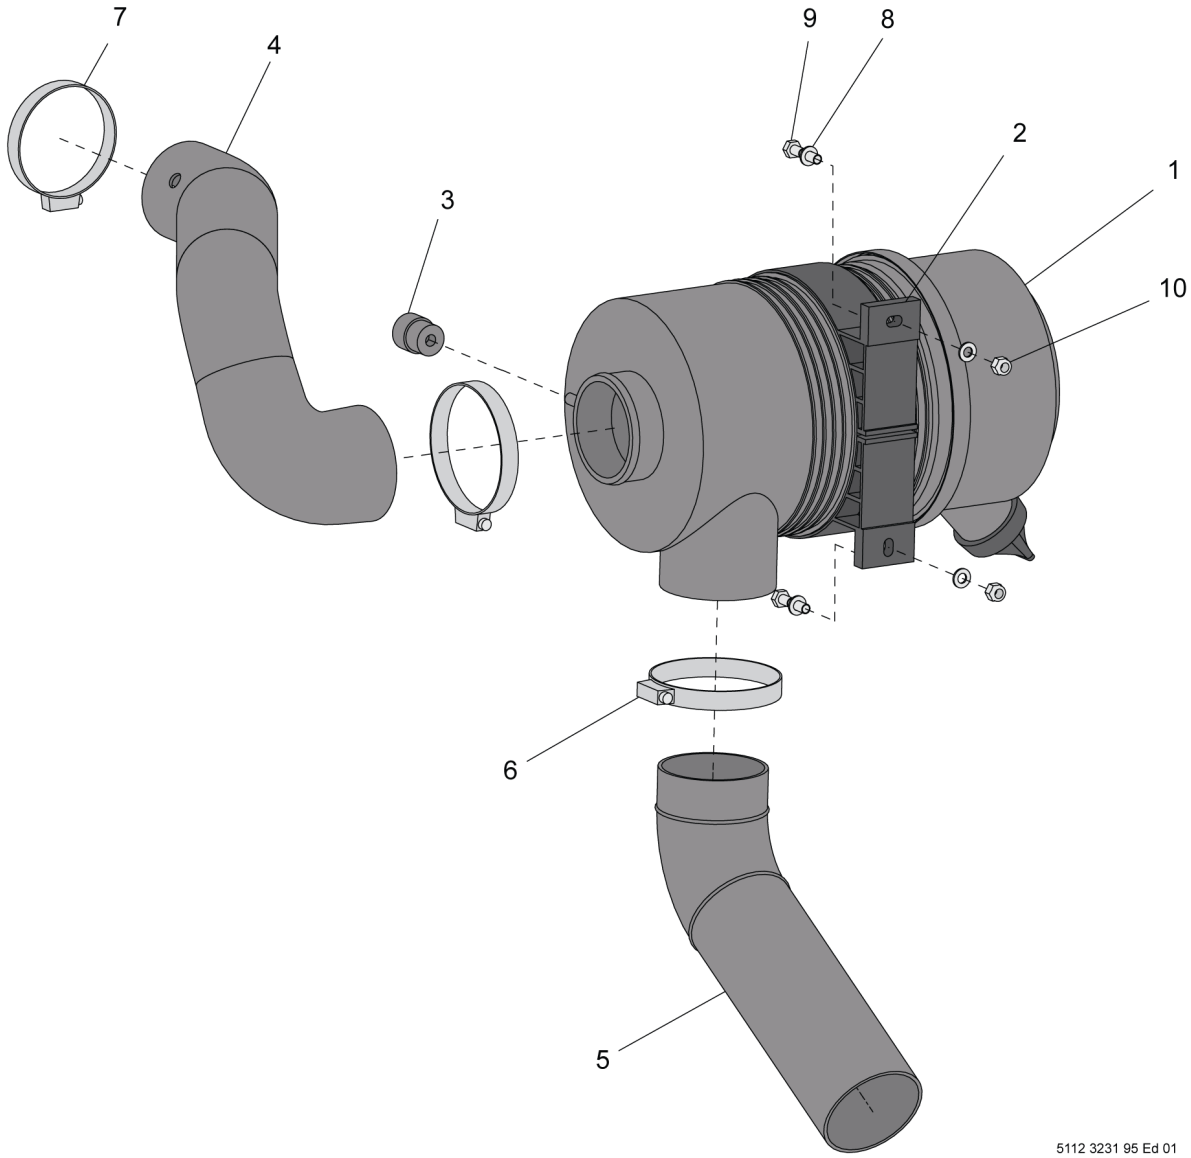

B0044538

AIR FILTER SET / LUFTFILTERSATS


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3052 41	1	AIR FILTER	LUFTFILTER	Page 309	
2	5112 3052 44	1	HOLDER	HÅLLARE		
3	5112 3052 46	1	FILT.INDICATOR	FILTERINDIKATOR		
4	5112 3231 96	1	INTAKE HOSE	INSUGNINGSSLANG		
5	5112 3231 93	1	INLET PORT	INSUGNINGSRÖR		
6	0347 6100 22	2	HOSE CLIP	SLANGKLÄMMA		B 82 105 15,8 - - - -
7	0347 6100 21	1	HOSE CLIP	SLANGKLÄMMA		B 70 92 15,8 - - - - B 70 92 15,8
8	0301 2335 00	4	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
9	0147 1327 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 35 - 8.8 FZB
10	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

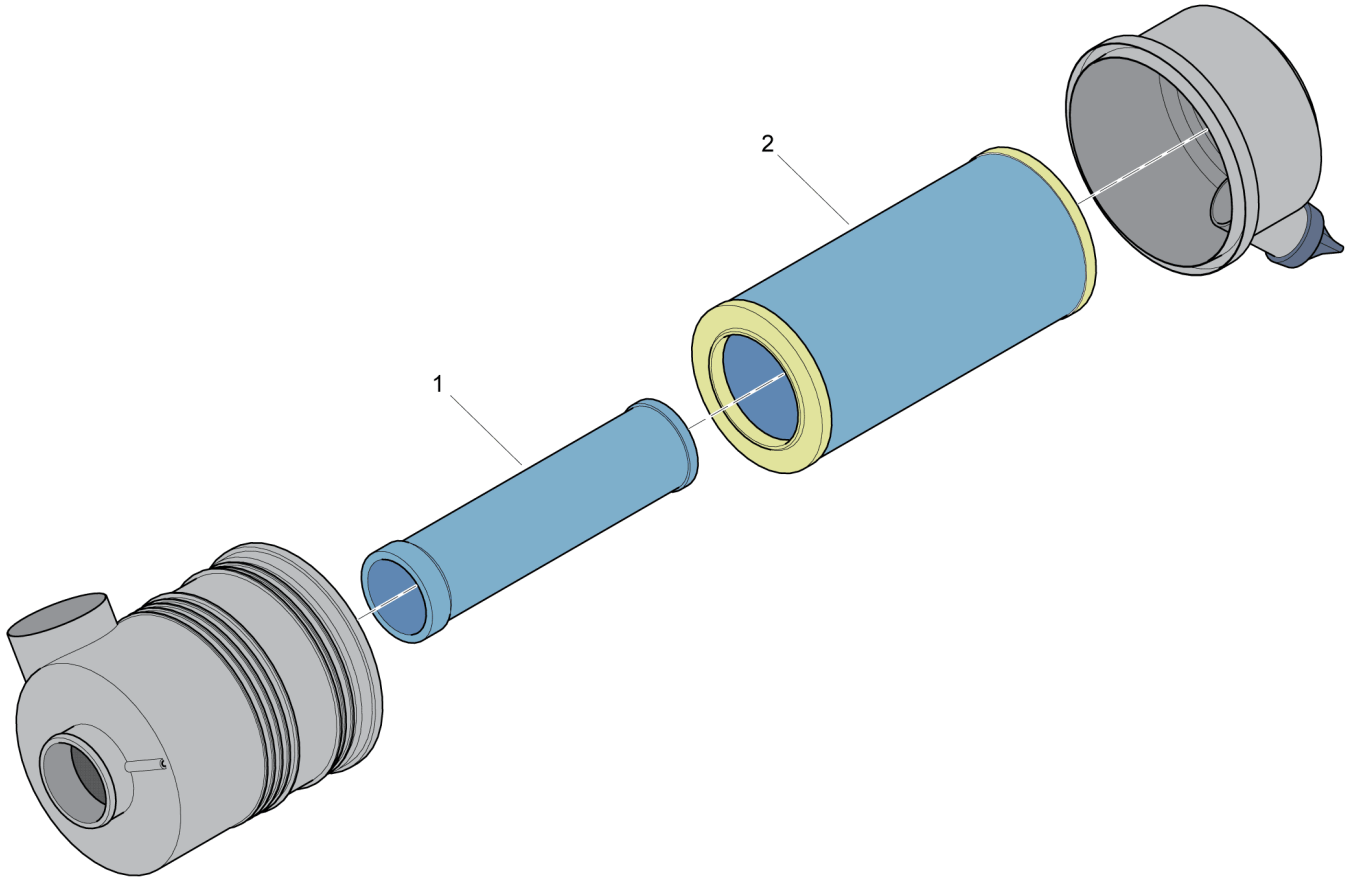

5112 3052 41 / 00

B0050454

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3052 43	1	SAFETY CARTR.	SÄKERHETSPATRON		
2	5112 3052 42	1	FILTER ELEMENT	FILTERELEMENT		

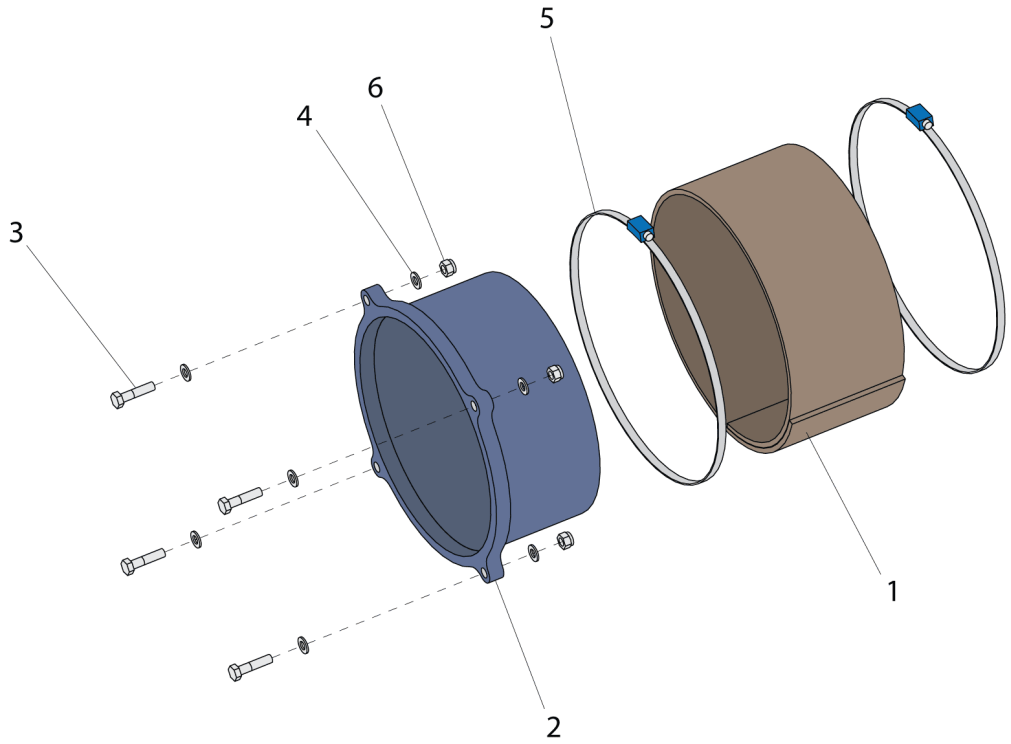

5112 3231 60 Ed02


B0044376

AIR INLET / LUFTINTAG

5112 3231 60

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3021 33	1	PROTECTION	SKYDD		
2	–	1	AIR INLET	LUFTINTAG		
3	0147 1327 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 35 - 8.8 FZB
4	0301 2335 00	8	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
5	1030 1005 03	4	HOSE CLIP	SLANGKLÄMMA		A 254 280 12,2 - STEEL FZ
6	0291 1128 18	4	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

THROTTLE CONTR. / GASREGLAGE

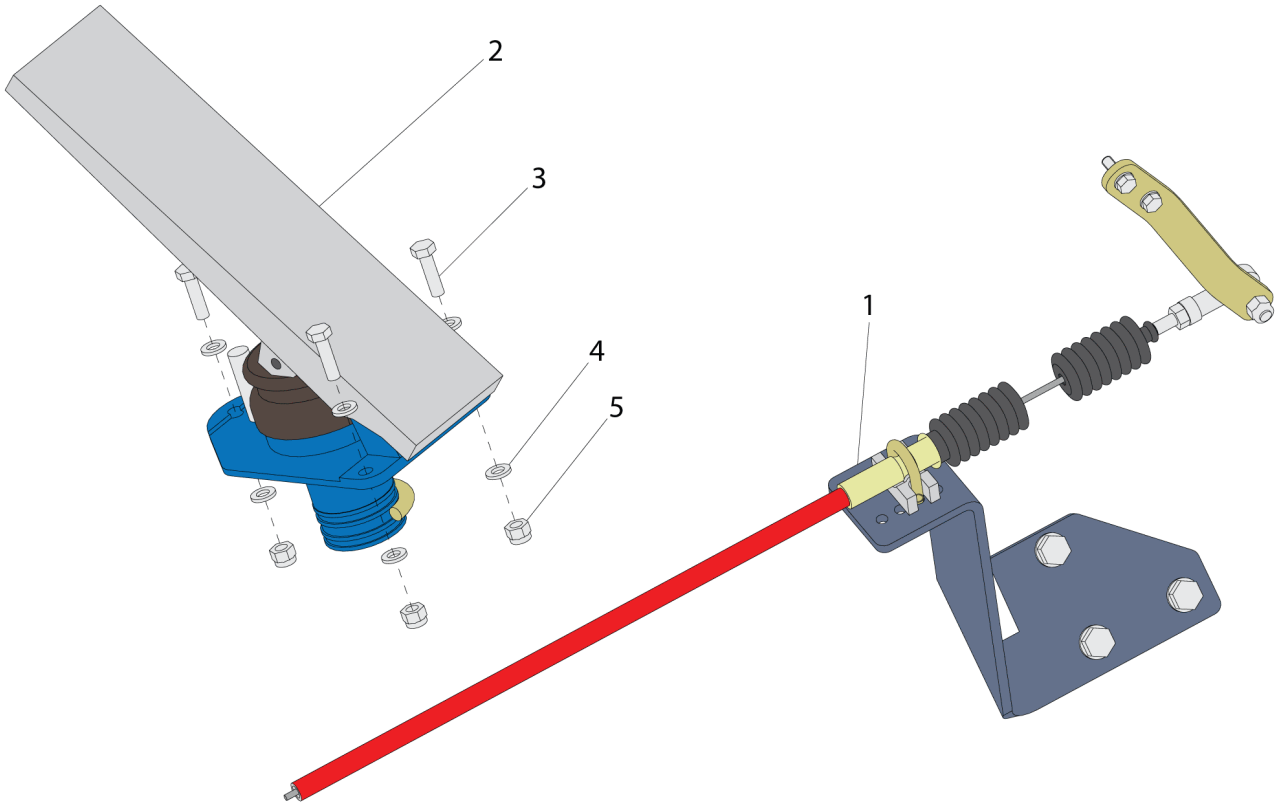


5112 3231 45 Ed

B0044377

THROTTLE CONTR. / GASREGLAGE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3231 88	1	THROTTLE CONTR.	GASREGLAGE	Page 315	
2	5112 2943 00	1	PEDAL	PEDAL		
3	0147 1248 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 22 - 8.8 FZB
4	0301 2321 00	6	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
5	0291 1128 15	3	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040

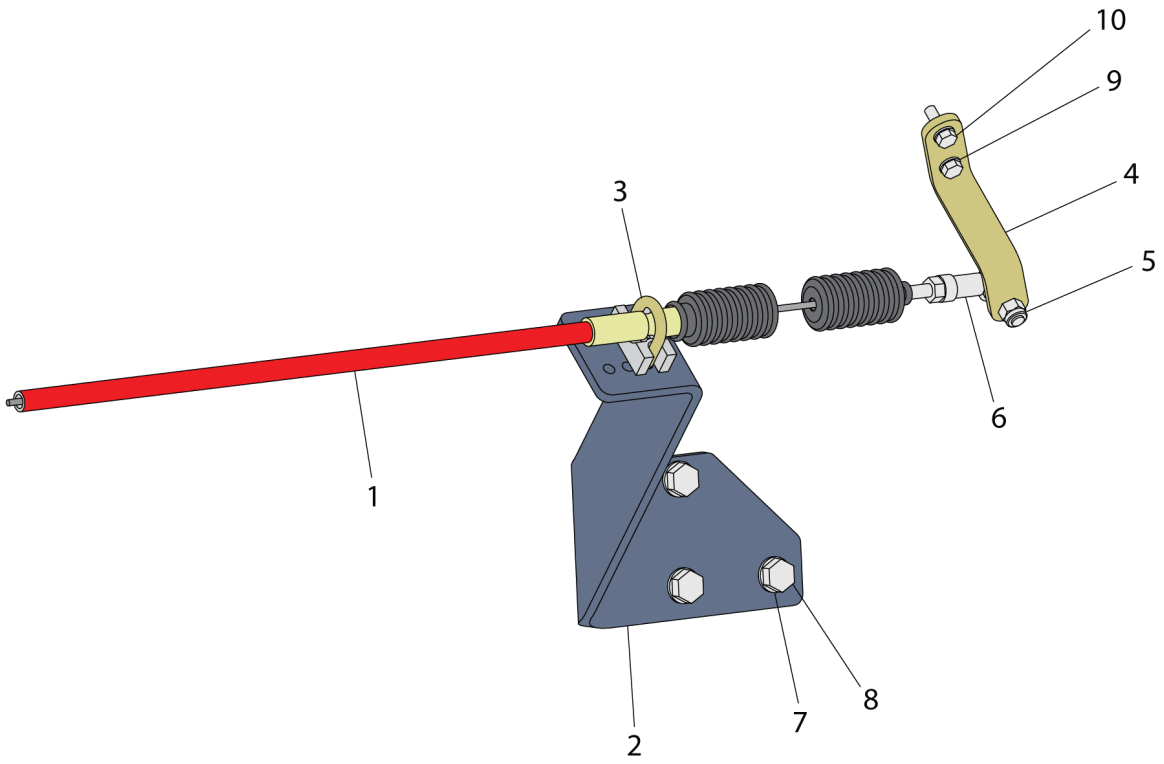


5112 3231 88 Ed02

B0044378

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3040 69	1	THROTTLE WIRE	GASWIRE		
2	5112 3217 46	1	CONTROL ATTM.	REGLAGEFÄSTE		
3	5112 1886 00	1	BOLT SET	BULTSATS		
4	5112 3217 49	1	ACCELERATOR	GASPÅDRAG		
5	0291 1128 15	1	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
6	5118 0910 00	1	LINK ROD HEAD	LÄNKSTÅNGSHUVUD		ROD TO HOOD RELEASE
7	0301 2335 00	3	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
8	0147 1323 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 20 -8.8 FZB
9	0301 2321 00	2	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
10	0147 1246 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 16 - 8.8 FZB

CABLE HOLDER / KABELHÅLLARE

5112 3228 68

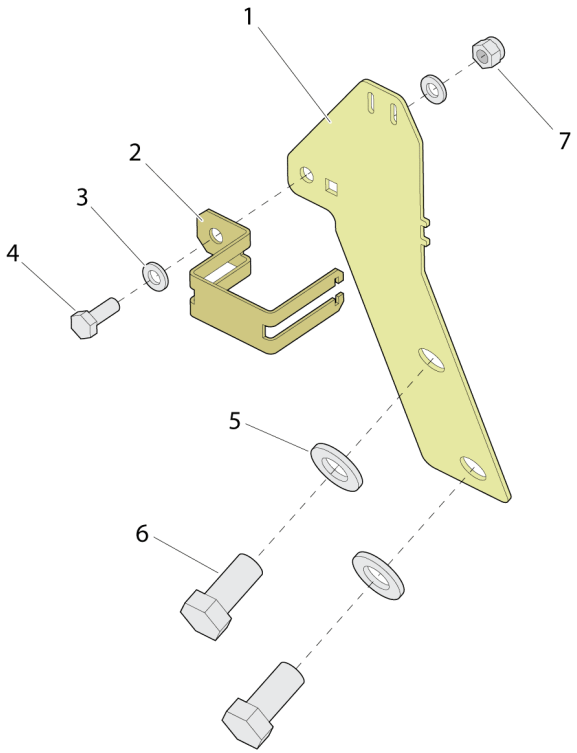


5112 3228 68 Ed01


B0047060

CABLE HOLDER / KABELHÅLLARE 5112 3228 68

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3228 66	1	HOLDER	HÅLLARE		
2	5112 3228 67	1	HOLDER	HÅLLARE		
3	0301 2321 00	2	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
4	0147 1246 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 16 - 8.8 FZB
5	0301 2358 00	2	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
6	0147 1400 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
7	0291 1128 15	1	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040

DRAINAGE / AVTAPPNING

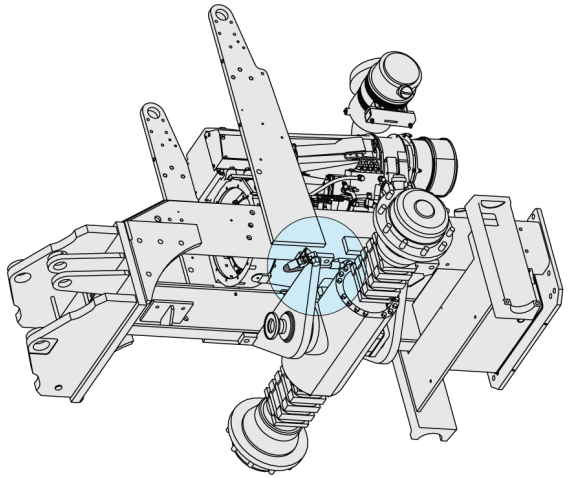

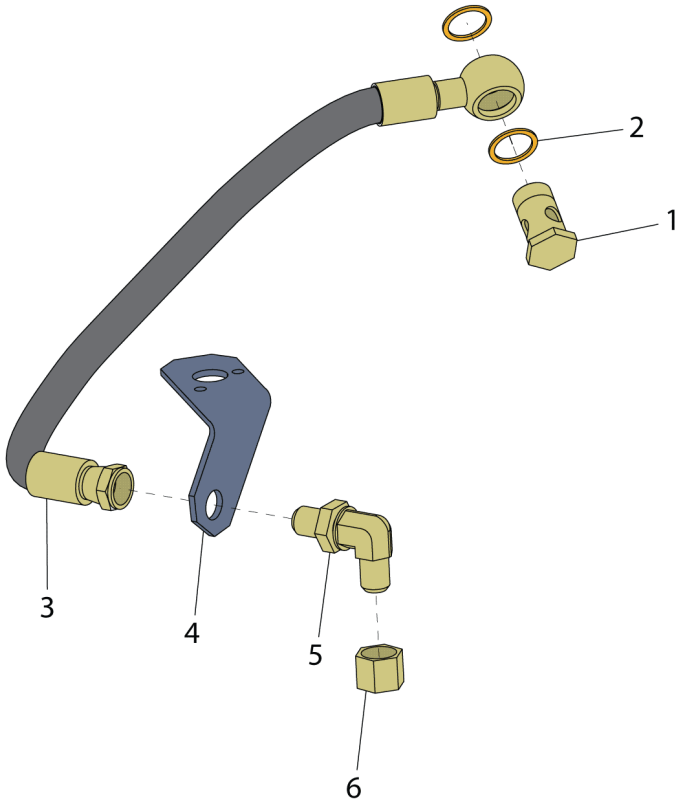


5112 3231 71/1-2 Ed01

B0044379

DRAINAGE / AVTAPPNING


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0627 4224 03	1	PRESSURE SCREW	TRYCKSKRUV		28 M 30 X 1,5 13 A 58 51
2	0653 1174 00	2	GASKET	PACKNING		30 / 38 X 2 - 11 5013 12
3	5112 3231 69	1	HOSE	SLANG		
4	5112 3032 73	1	HOLDER	HÅLLARE		
5	3455 0543 06	1	NIPPLE	NIPPEL		UN 1 1/16
6	3715 0820 00	1	CAP	HUV		UN 1 1/16

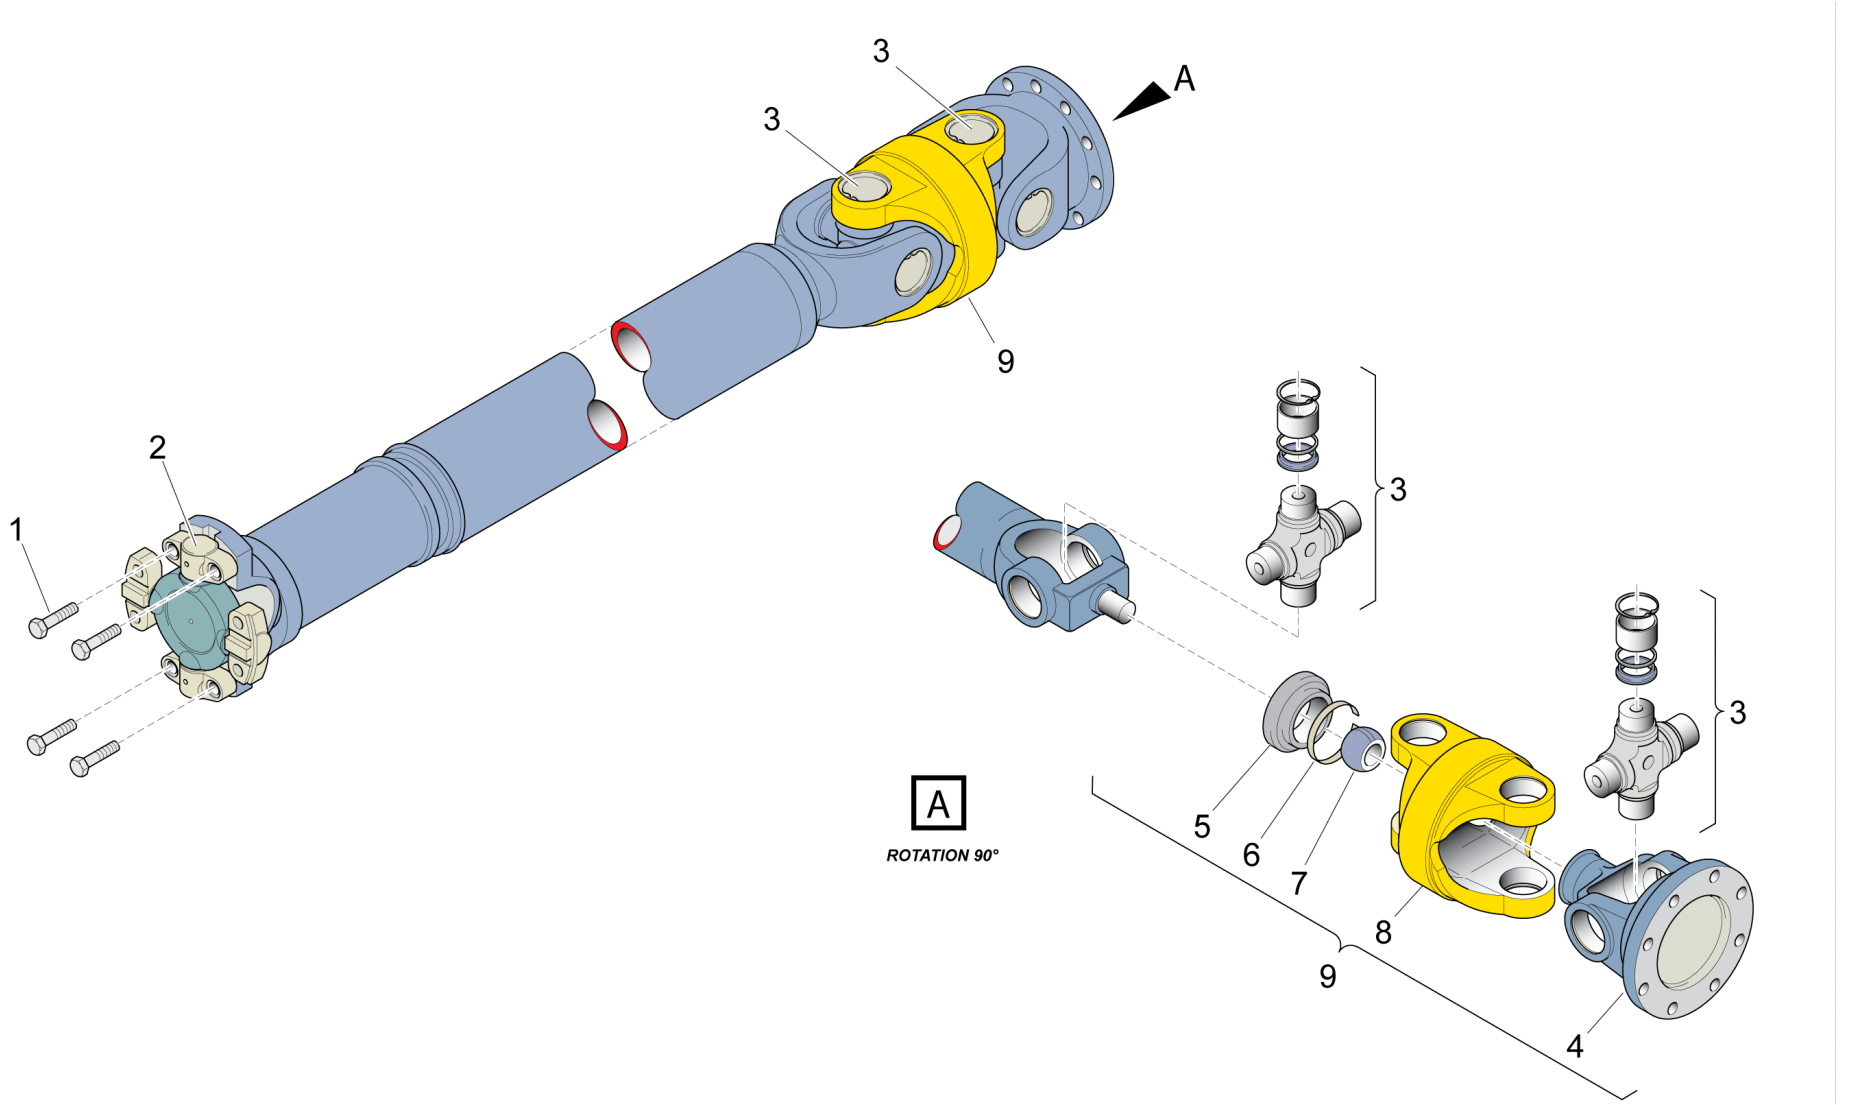

1250 0269 29

B0052675


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0144 4291 00	4	SCREW, HEX HEAD	SKRUV, SEXKANT		UNF 3/8 X 45 - 8.8
2	5112 3102 71	1	TRUNNION BLOCK	KNUTKORS		
3	5112 2396 84	2	TRUNNION BLOCK	KNUTKORS		
4	5112 3102 81	1	FLANGE FORK	FLÄNSGAFFEL		
5	5112 3102 86	1	SPAT	DAMASK		
6	5112 3102 85	1	CLAMP	KLAMMER		
7	5112 3102 84	1	BALL	KULA		
8	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
9	5112 3149 72	1	SET	SATS		

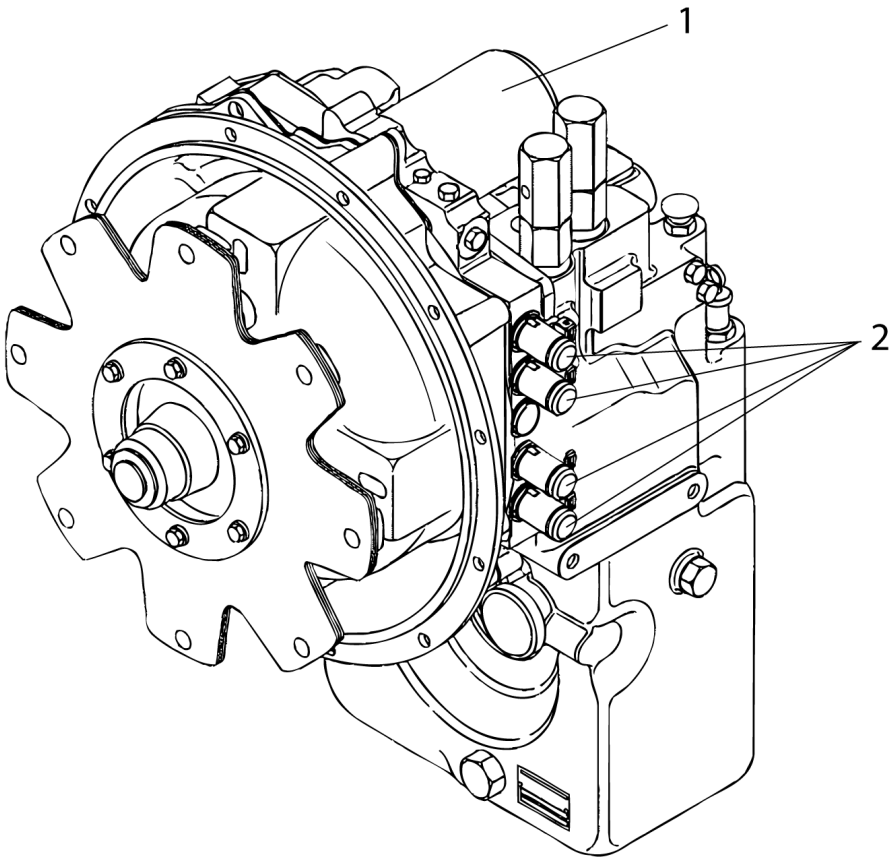

1250 0162 87


B0032653

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3024 98	1	FILTER	FILTER		
2	5112 3217 29	4	SOLENOID	MAGNETSPOLE		

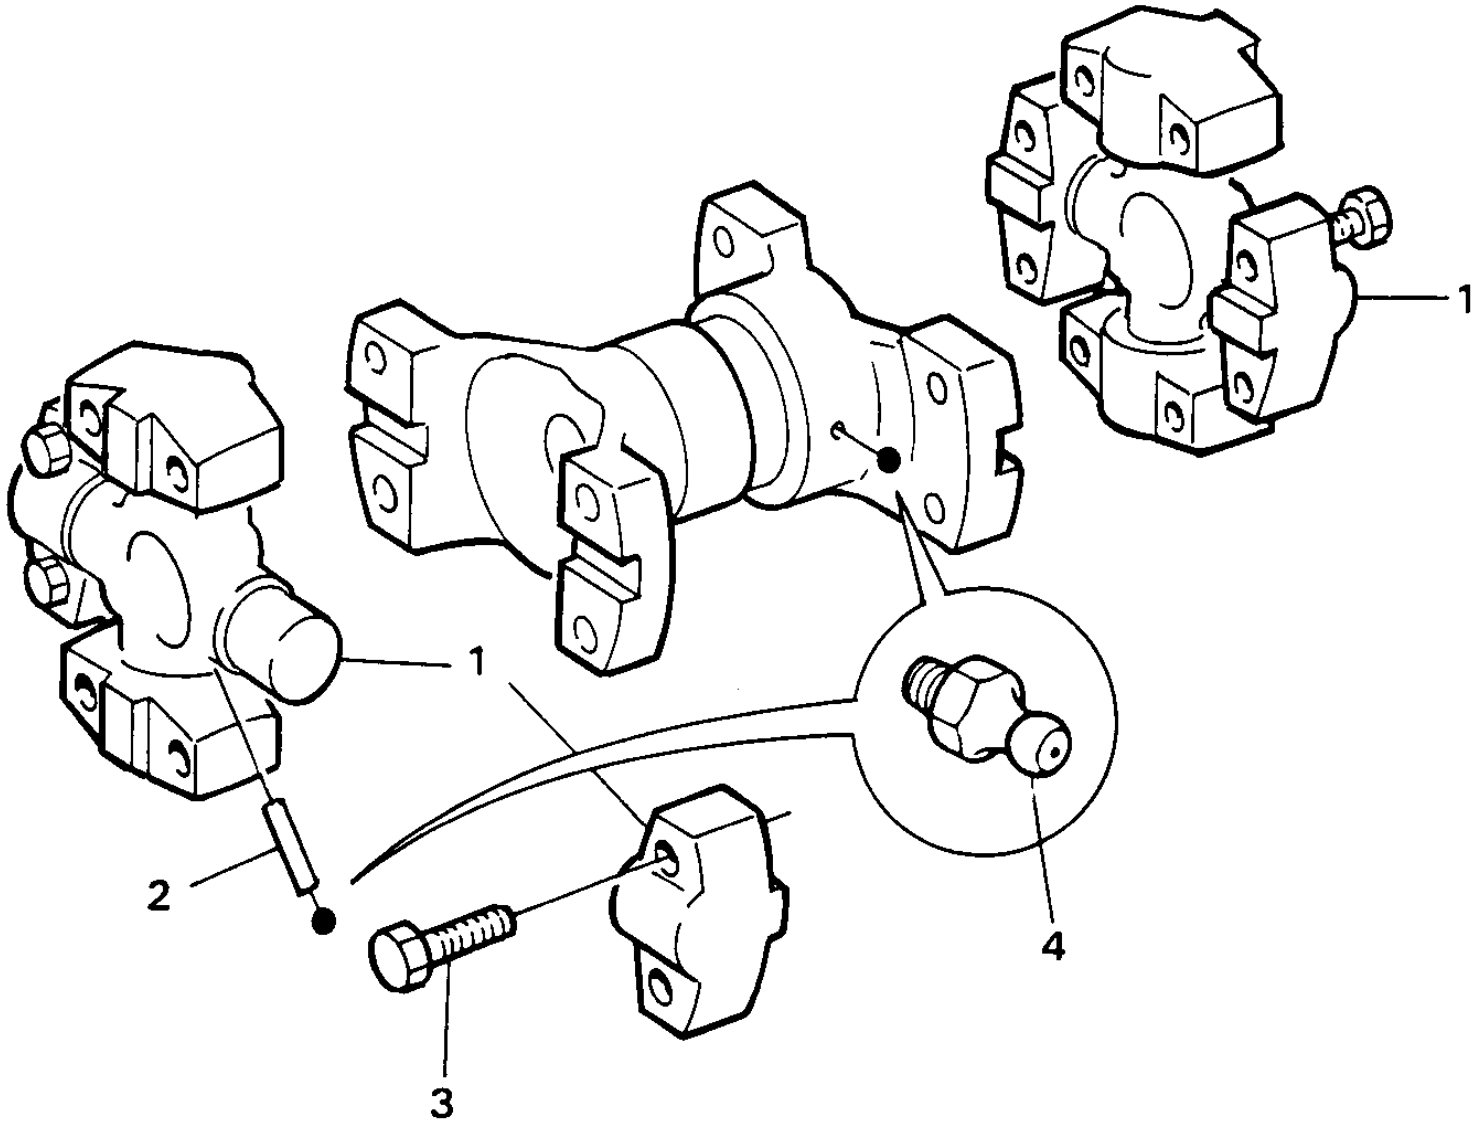


B0001671

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3102 71	2	TRUNNION BLOCK	KNUTKORS		
2	5112 3102 77	2	GREASE NIPPLE	SMÖRJNIPPEL		
3	0144 4291 00	8	SCREW, HEX HEAD	SKRUV, SEXKANT		UNF 3/8 X 45 - 8.8
4	5112 3102 78	1	GREASE NIPPLE	SMÖRJNIPPEL		

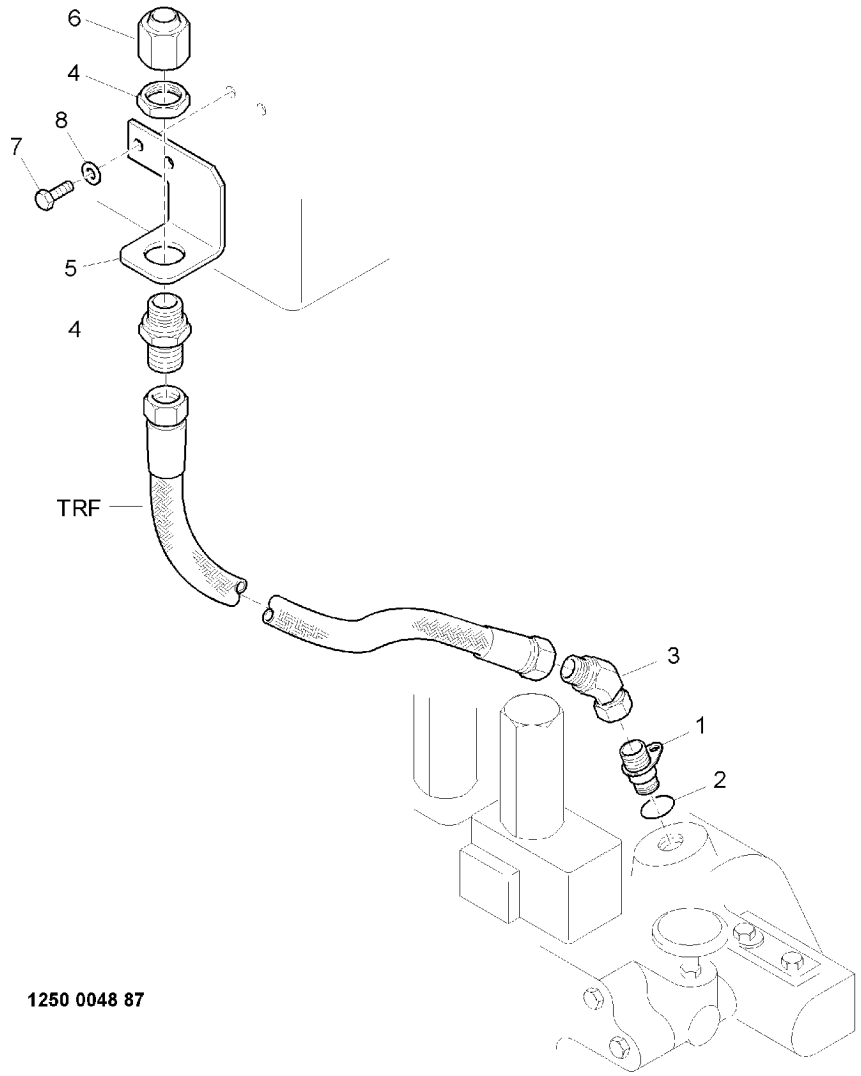

1250 0048 87


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3111 75	1	CONNECTION	ANSLUTNING		
2	0663 3120 00	1	O-RING	O-RING		13,3 X 2,4 70 SHORE
3	3176 6550 00	1	ELBOW	RÖRVINKEL		UN 1 1/16
4	3176 6499 00	1	NIPPLE	NIPPEL		UN 1 1/16
5	–	1	ATTACHMENT	FÄSTE		
6	3715 0820 00	1	CAP	HUV		UN 1 1/16
7	0147 1244 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 12 - 8.8 FZB
8	0301 2321 00	2	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB

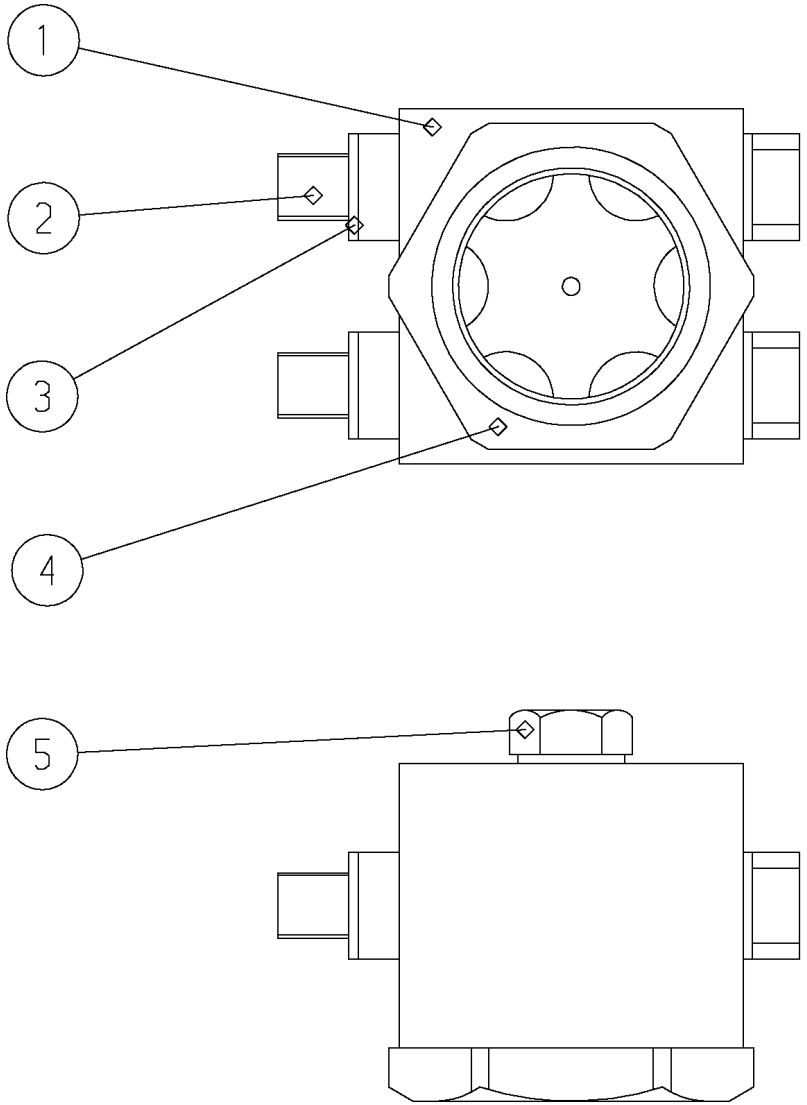


5112 3102 99/1 Ed01

B0003047

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3038 12	1	HOUSE	HUS		
2	5112 3038 13	2	SCREW	SKRUV		
3	0653 1057 00	5	GASKET	PACKNING		12 17 1,5 A
4	5112 3103 12	1	OIL LEVEL GLASS	OLJESTÅNDSGLAS		
5	0147 1397 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 16 - 8.8 FZB

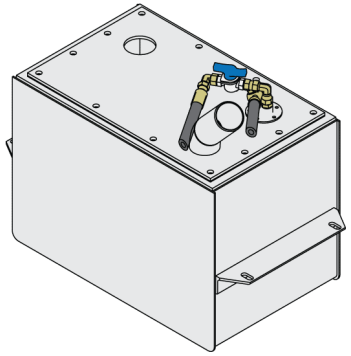

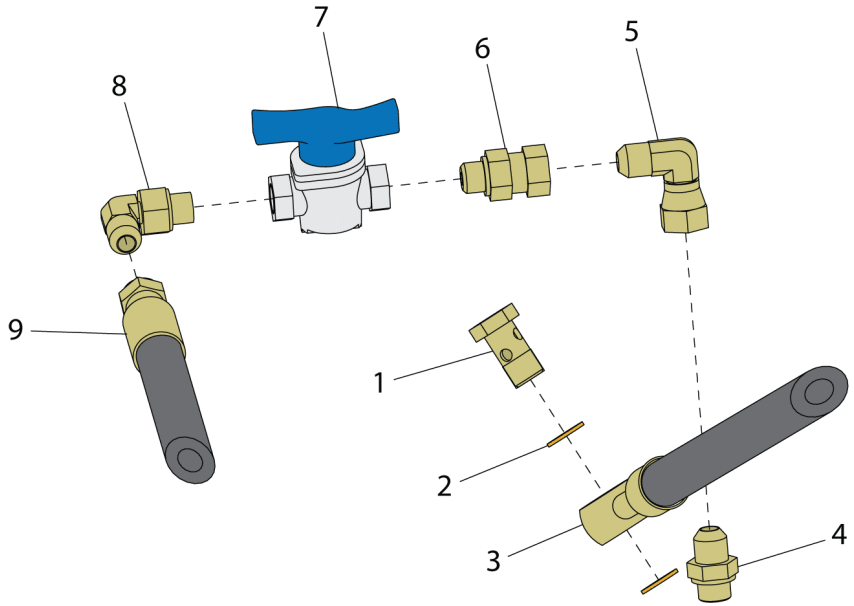


5112 3231 14 Ed01

B0044380

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0627 4209 00	1	PRESSURE SCREW	TRYCKSKRUV		M14 X 1,5 OXSV
2	0653 1070 00	2	GASKET	PACKNING		14 / 18 X 1,5 -11 5013 12
3	5112 3231 86	1	FUEL HOSE	BRÄNSLESLANG		
4	3176 7319 00	1	NIPPLE	NIPPEL		UNF 9/16 - M14 X 1,5
5	3715 0584 00	1	ELBOW NIPPLE	VINKELNIPPEL		UNF 9/16 - UNF 9/16
6	3176 8489 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
7	8202 0301 05	1	BALL VALVE	KULVENTIL		BAL 08
8	3176 6351 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
9	5112 3231 87	1	FUEL HOSE	BRÄNSLESLANG		

PLATFORM COMPL. / PLATTFORM KOMPL

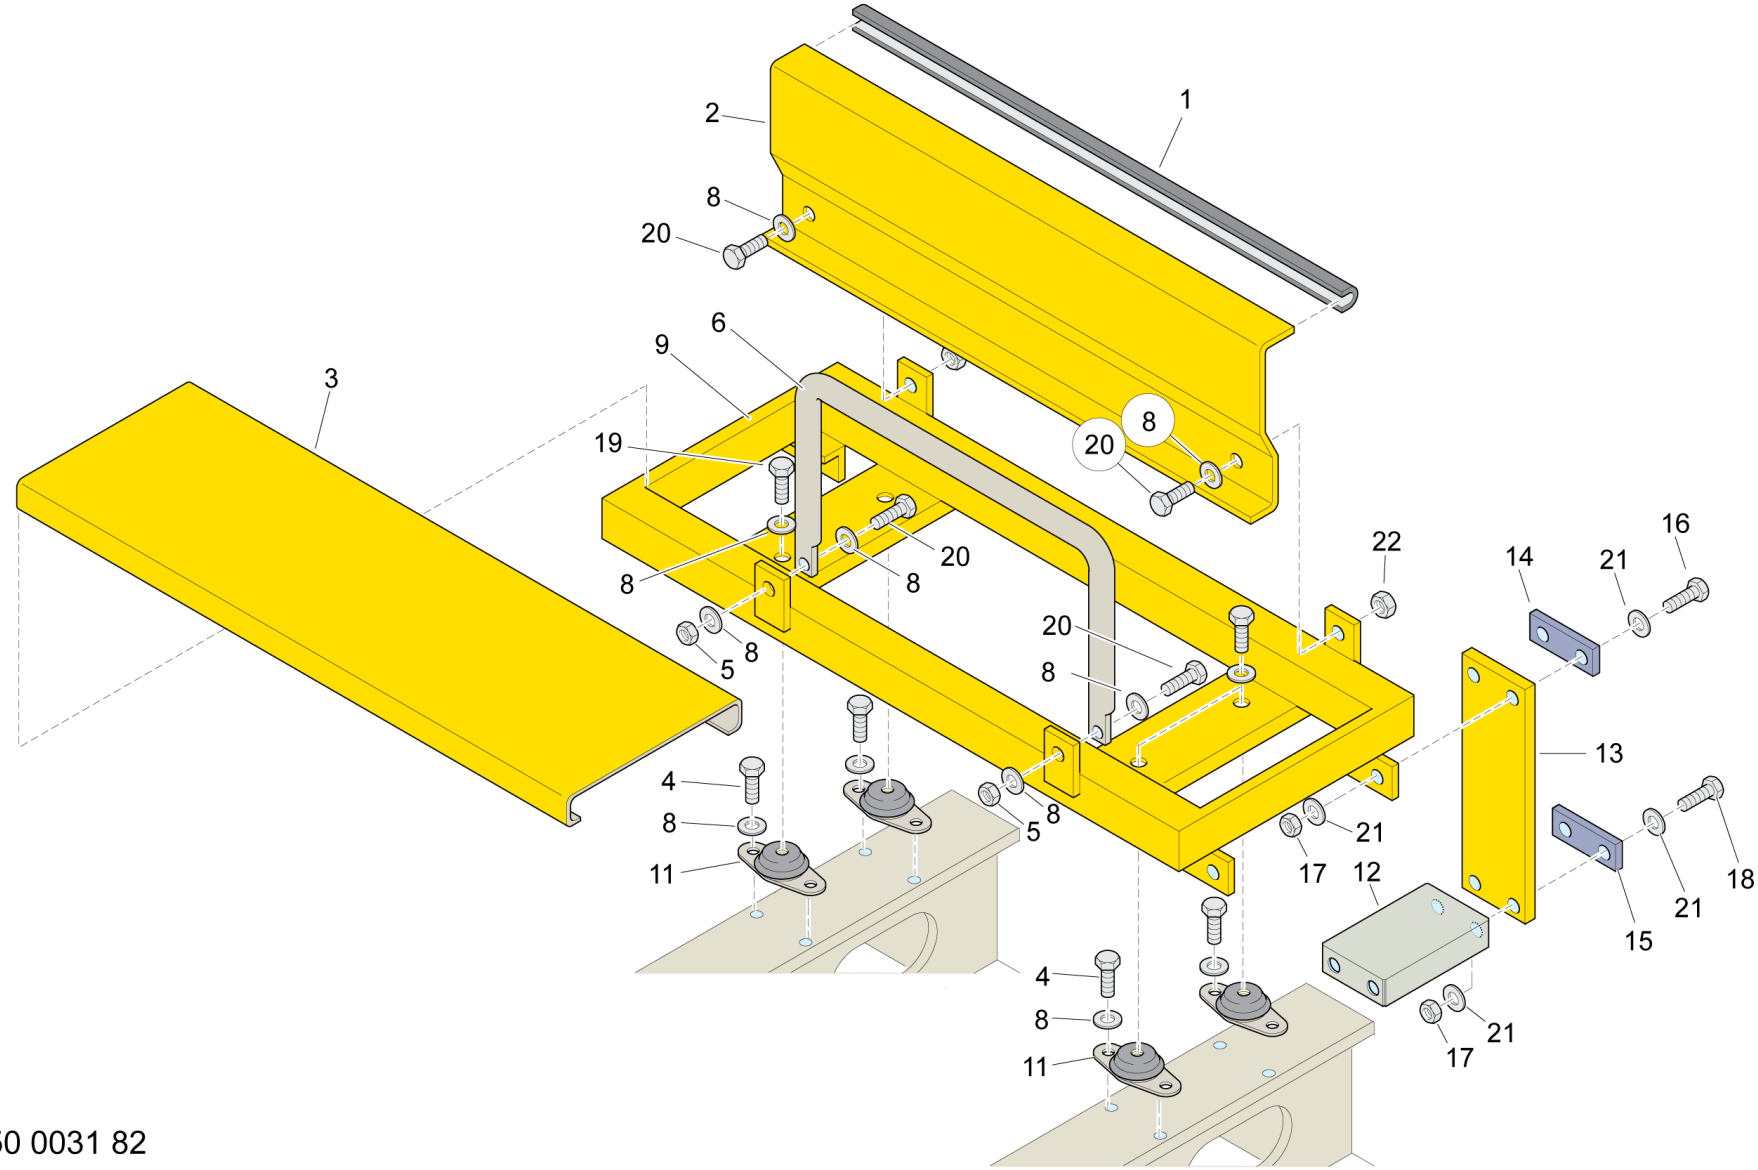


1250 0031 82

B0003448

PLATFORM COMPL. / PLATTFORM KOMPL

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2425 00	1M	EDGE LIST	KANTLIST		
2	–	1	PROTECT. SHIELD	SKYDDSPLÅT		
3	5112 2021 00	1	FLOOR RACK	GOLVTRALL		
4	0147 1362 03	16	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
5	0291 1128 20	4	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
6	5112 2447 00	1	YOKE	BYGEL		
8	0301 2344 00	12	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
9	5112 2320 00	1	PLATFORM	PLATTFORM		
11	5112 2322 00	4	DAMPER	DÄMPARE		NOVIBRA RA125EM-HARDN. A
12	9110 8336 00	2	STEP	TRAPPSTEG		
13	9110 8818 01	4	STRINGER	VANGSTYCKE		
14	9110 8351 00	4	WASHER	BRICKA		
15	9110 8352 00	4	WASHER	BRICKA		
16	0147 1405 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 50 - 8.8 FZB
17	0291 1128 22	16	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
18	0147 1407 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 60 - 8.8 FZB
19	0147 1360 03	0	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
20	0147 1363 03	0	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 30 - 8.8 FZB
21	0301 2358 00	0	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
22	0291 1128 21	0	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB /7 ISO 7043

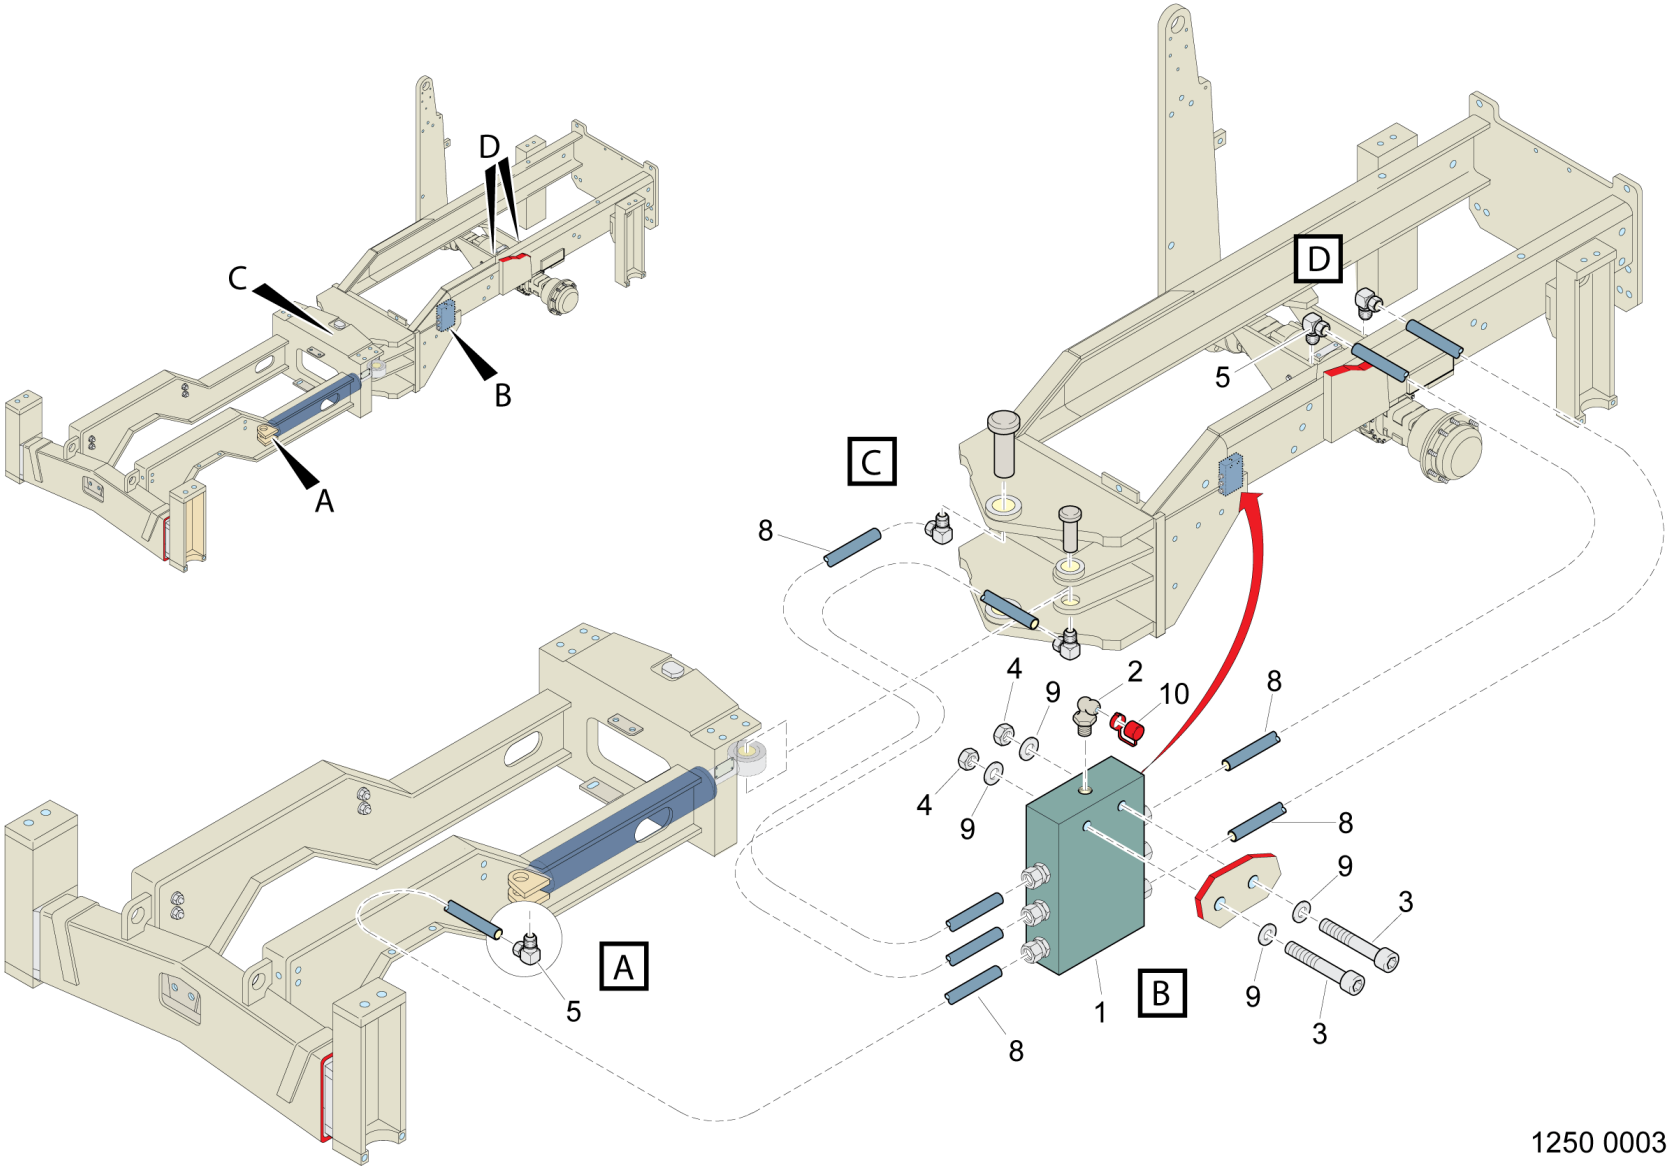


1250 0003 67

B0000847

LUBR. SYSTEM / SMÖRJSYSTEM

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2163 80	1	LUBR. VALVE	SMÖRJVENTIL	Page 337	
2	0544 2562 00	1	GREASE NIPPLE	SMÖRJNIPPEL		CH KR 1/8 SMS 1586
3	0211 1215 00	2	SCREW	SKRUV		MC6S M 5 X 50 - 12.9
4	0291 1128 14	2	LOCK NUT	LÅSMUTTER		M 5 - 8 FZB / ISO 7040
5	0580 2202 00	6	PIPE COUPLING	RÖRKOPPLING		D=6; ISO 7-R 1/8; 90 DEG. PR.WORK 250 BA
8	5112 2164 00	8M	HIGH POWER PIPE	HÖGTR.PLASTRÖR		D= 6/3 MM
9	0301 2318 00	4	PLAIN WASHER	RUNDBRICKA		5,3 / 10 X 1 - HB 200 FZB
10	0686 9252 27	1	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

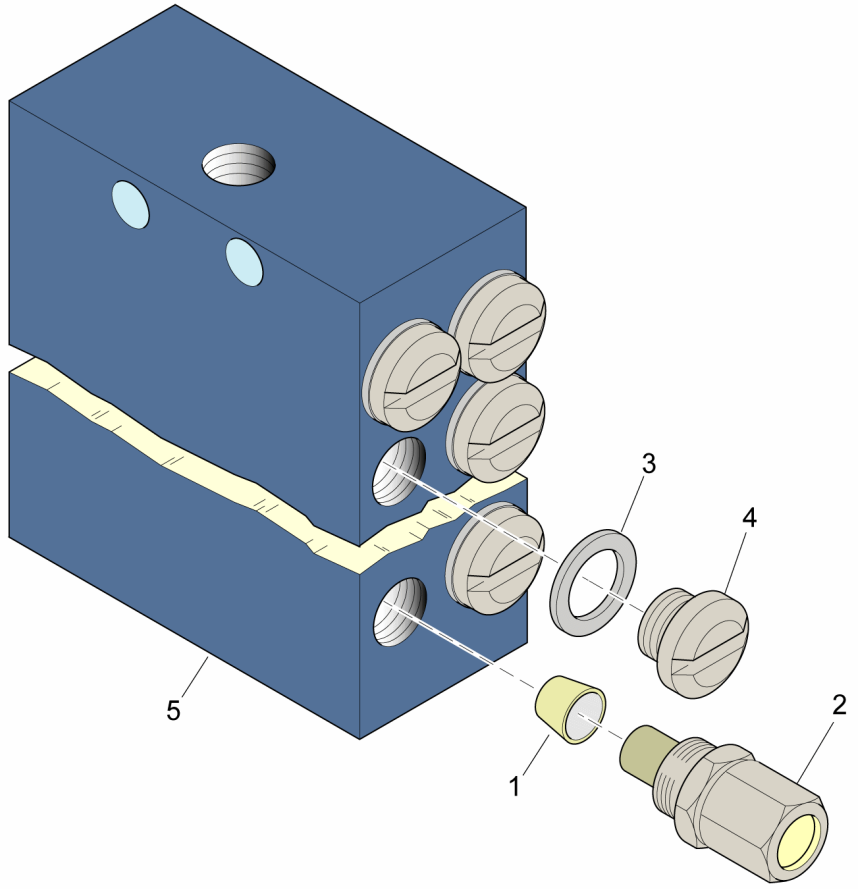


1250 0011 44

B0000157

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3005 38	6	CUTTING RING	SKÄRRING		
2	0580 0013 11	6	PIPE COUPLING	RÖRKOPPLING		6 - M 10X1 GE 6 - LLM
3	0653 1041 00	1	GASKET	PACKNING		10 / 14 X 1 - 11 5013 12
4	3128 3005 37	1	PLUG	PROPP		
5	5112 2163 00	1	VALVE HOUSING	VENTILHUS		

FRAME BOOM PART / RAM BOMDEL

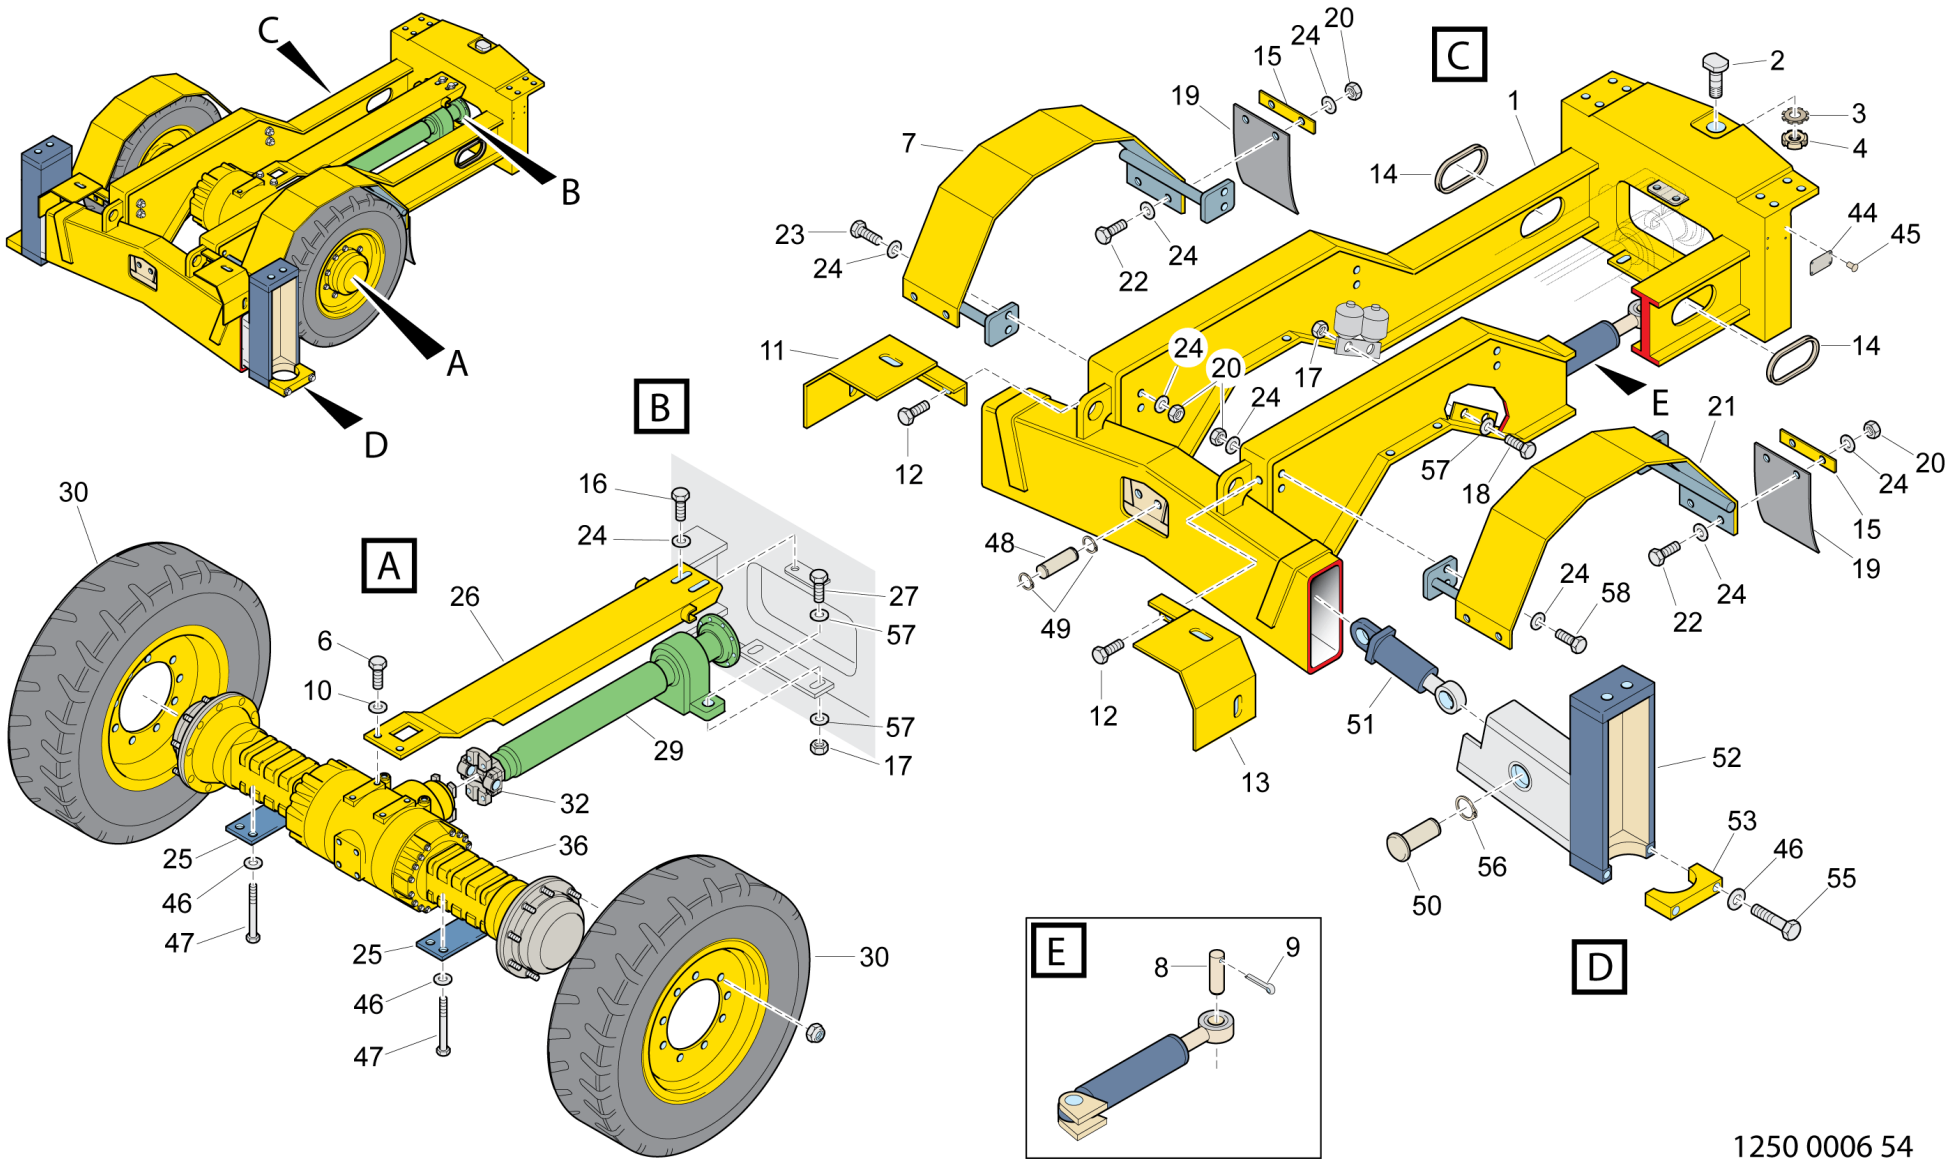

B0025396

FRAME BOOM PART / RAM BOMDEL

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3021 00	1	FRAME	RAM		
2	5112 2325 00	2	WAIST SHAFT	MIDJEAXEL		
3	0333 6113 00	2	LOCK WASHER	LÅSBRICKA		60 / 73 X 1,5
4	0295 3113 00	2	LOCK NUT	LÅSMUTTER		M 60X2 - KM 12 - 11 0727
5	0291 1128 28	8	LOCK NUT	LÅSMUTTER		M 20 - 8 FZB / ISO 7040
6	0147 1475 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 30 - 8.8 FZB
7	5112 3064 13	1	MUDGUARD	STÄNKSKÄRM		
8	5112 2326 00	2	SHAFT	AXEL		
9	0108 1400 00	2	SPRING PIN	RÖRPINNE		10 X 90 DIN 1481
10	0301 2378 00	2	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
11	5112 3001 70	1	PROTECTION	SKYDD		
12	0147 1367 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 50 - 8.8 FZB
13	5112 3001 71	1	PROTECTION	SKYDD		
14	5112 2405 08	2	RUBBER PROTEC	GUMMISKYDD		
15	5112 2404 00	2	DAMPER BIT	MOTLÄGG		
16	0147 1360 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
17	0291 1128 22	4	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
18	0147 1409 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 70 - 8.8 FZB
19	5112 2403 00	2	FENDER	STÄNKSKYDD		
20	0291 1128 20	16	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
21	5112 3064 12	1	MUDGUARD	STÄNKSKÄRM		
22	0147 1364 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 35 - 8.8 FZB
23	0147 1370 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 65 - 8.8 FZB
24	0301 2344 00	36	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
25	5112 3000 35	2	ATTACHM. PLATE	FÄSTPLÅT		
26	5112 3000 38	1	CARDAN PROTECT.	KARDANSKYDD		
27	0147 1408 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 65 - 8.8 FZB
29	5112 3020 95	1	CARDAN SHAFT	KARDANAXEL	Page 343	
32	0144 4000 32	4	SCREW, HEX HEAD	SKRUV, SEXKANT		UNF 3/8 X 45 - 10.9
36	5112 3021 84	1	DRIVE SHAFT	DRIVAXEL	Page 345	
45	0129 3104 00	4	BLIND RIVET	BLINDNIT		2,4 X 7,4 TAP / D 48 BS
46	0301 2394 00	20	PLAIN WASHER	RUNDBRICKA		21 / 37 X 3 - HB 200 FZB

FRAME BOOM PART / RAM BOMDEL

(Sheet 2 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
47	0211 1963 51	8	SCREW	SKRUV		MC6S M 20 X 280 - 12.9
48	3217 6814 00	2	SHAFT	AXEL		
49	0335 1132 00	4	CIRCLIP	SPÅRRING		SGA 30 X 1,5 DIN 471
50	5112 2363 00	2	SHAFT	AXEL		
51	5112 2360 80	2	HYDR. CYLINDER	HYDRAULCYLINDER	Page 349	HC09-K63-32K-400-A37
52	5112 3022 87	2	JACK TUBE	DOMKRAFTRÖR		
53	5112 2710 00	2	ATTACHM. PLATE	FÄSTPLÅT		
55	0147 1491 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 110 - 8.8 FZB
56	0335 2136 00	2	CIRCLIP	SPÅRRING		SGH 35 X 1,5 DIN 472
57	0301 2358 00	8	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
58	0147 1365 03	7	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 40 - 8.8 FZB
59	9106 0110 81	1	HOSE GUIDE	SLANGFÖRARE		

FRAME BOOM PART / RAM BOMDEL

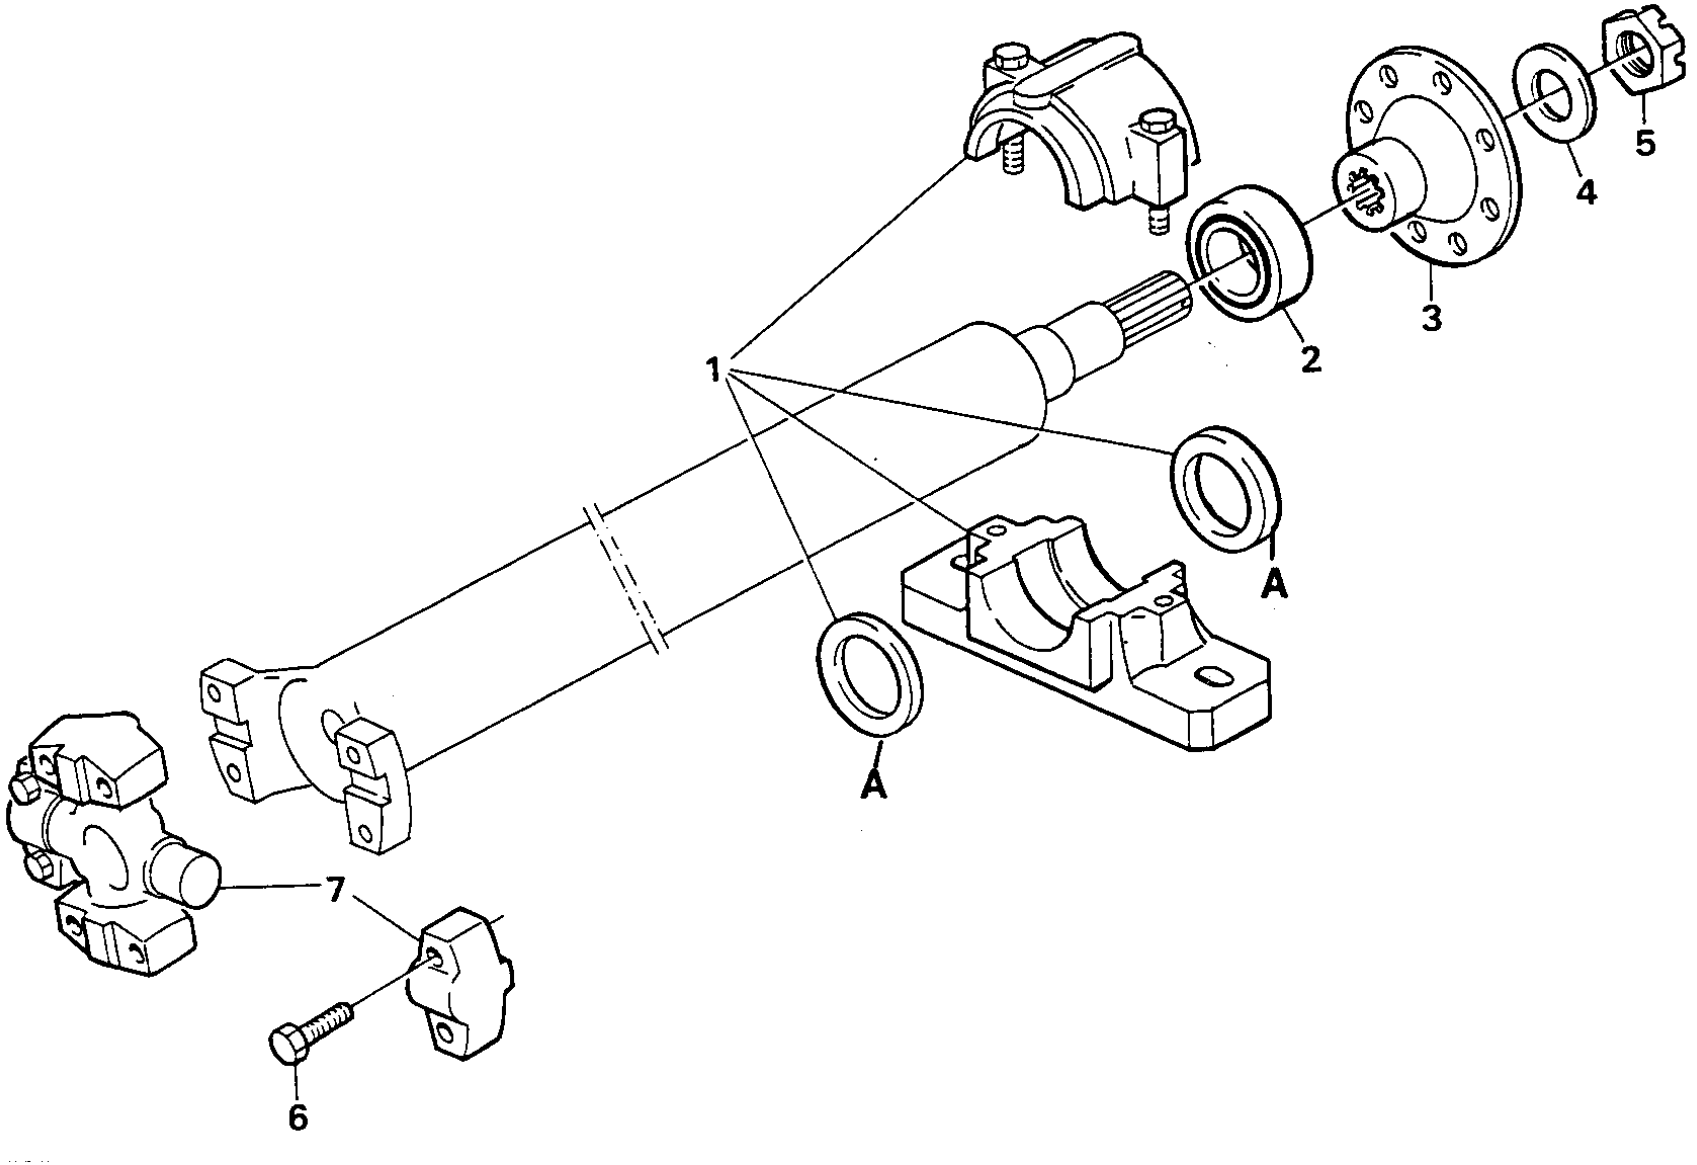


B0001672

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 3109 18	1	SEAL KIT	TÄTNINGSSATS		
1	0502 8010 21	1	BEARING HOUSING	LAGERHUS		SNH 209 TA
2	0503 2109 00	1	BALL BEARING	KULLAGER		2209 ETN9
3	5112 3109 23	1	COUNTER FLANGE	MOTFLÄNS		
4	5112 3102 79	1	WASHER	BRICKA		
5	5112 3102 80	1	NUT	MUTTER		
6	0144 4291 00	4	SCREW, HEX HEAD	SKRUV, SEXKANT		UNF 3/8 X 45 - 8.8
7	5112 3102 71	1	TRUNNION BLOCK	KNUTKORS		

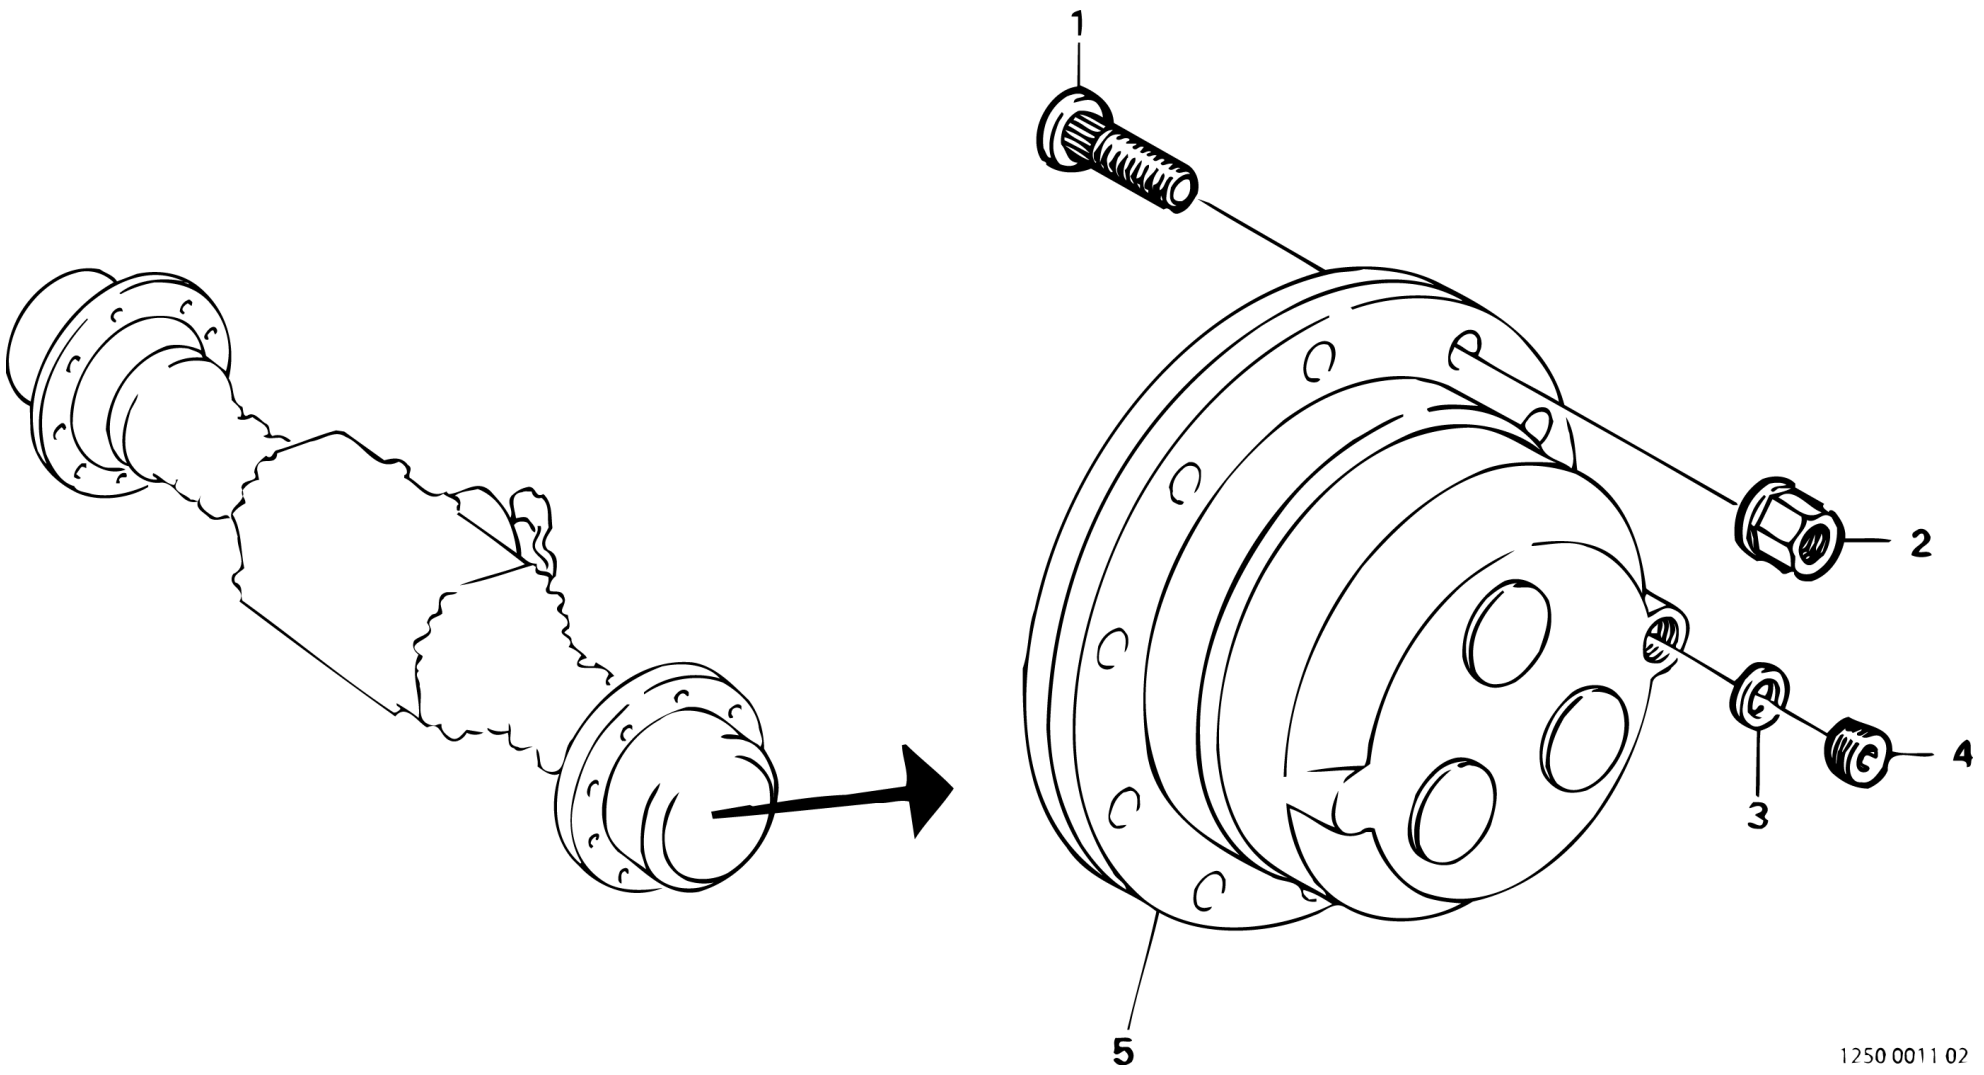

B0024996


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 3024 66	1	BRAKE DISC KIT	BROMSLAMELLSATS	Page 237	COMPLETE KIT ONLY
	5112 3024 68	1	CROWN WHEEL KIT	KRONHJULSATS	Page 239	COMPLETE KIT ONLY
	5112 3024 71	2	PLANET GEAR KIT	PLANETHJULSSATS	Page 241	COMPLETE KIT ONLY
	5112 3190 18	1	DIFF.KIT	DIFF.SATS	Page 347	COMPLETE KIT ONLY
1	5112 3003 35	20	WHEEL BOLT	HJULBULT		
2	0299 1000 06	20	WHEEL NUT	HJULMUTTER		M 22X1,5 - 10 FOSF. TYP A
3	0653 1128 00	2	GASKET	PACKNING		22 / 27 X 1,5 -11 5013 12
4	5112 3003 37	2	PLUG	PLUGG		
5	5112 3104 74	2	PLANET GEAR HO.	PLANETVÄXELHUS		

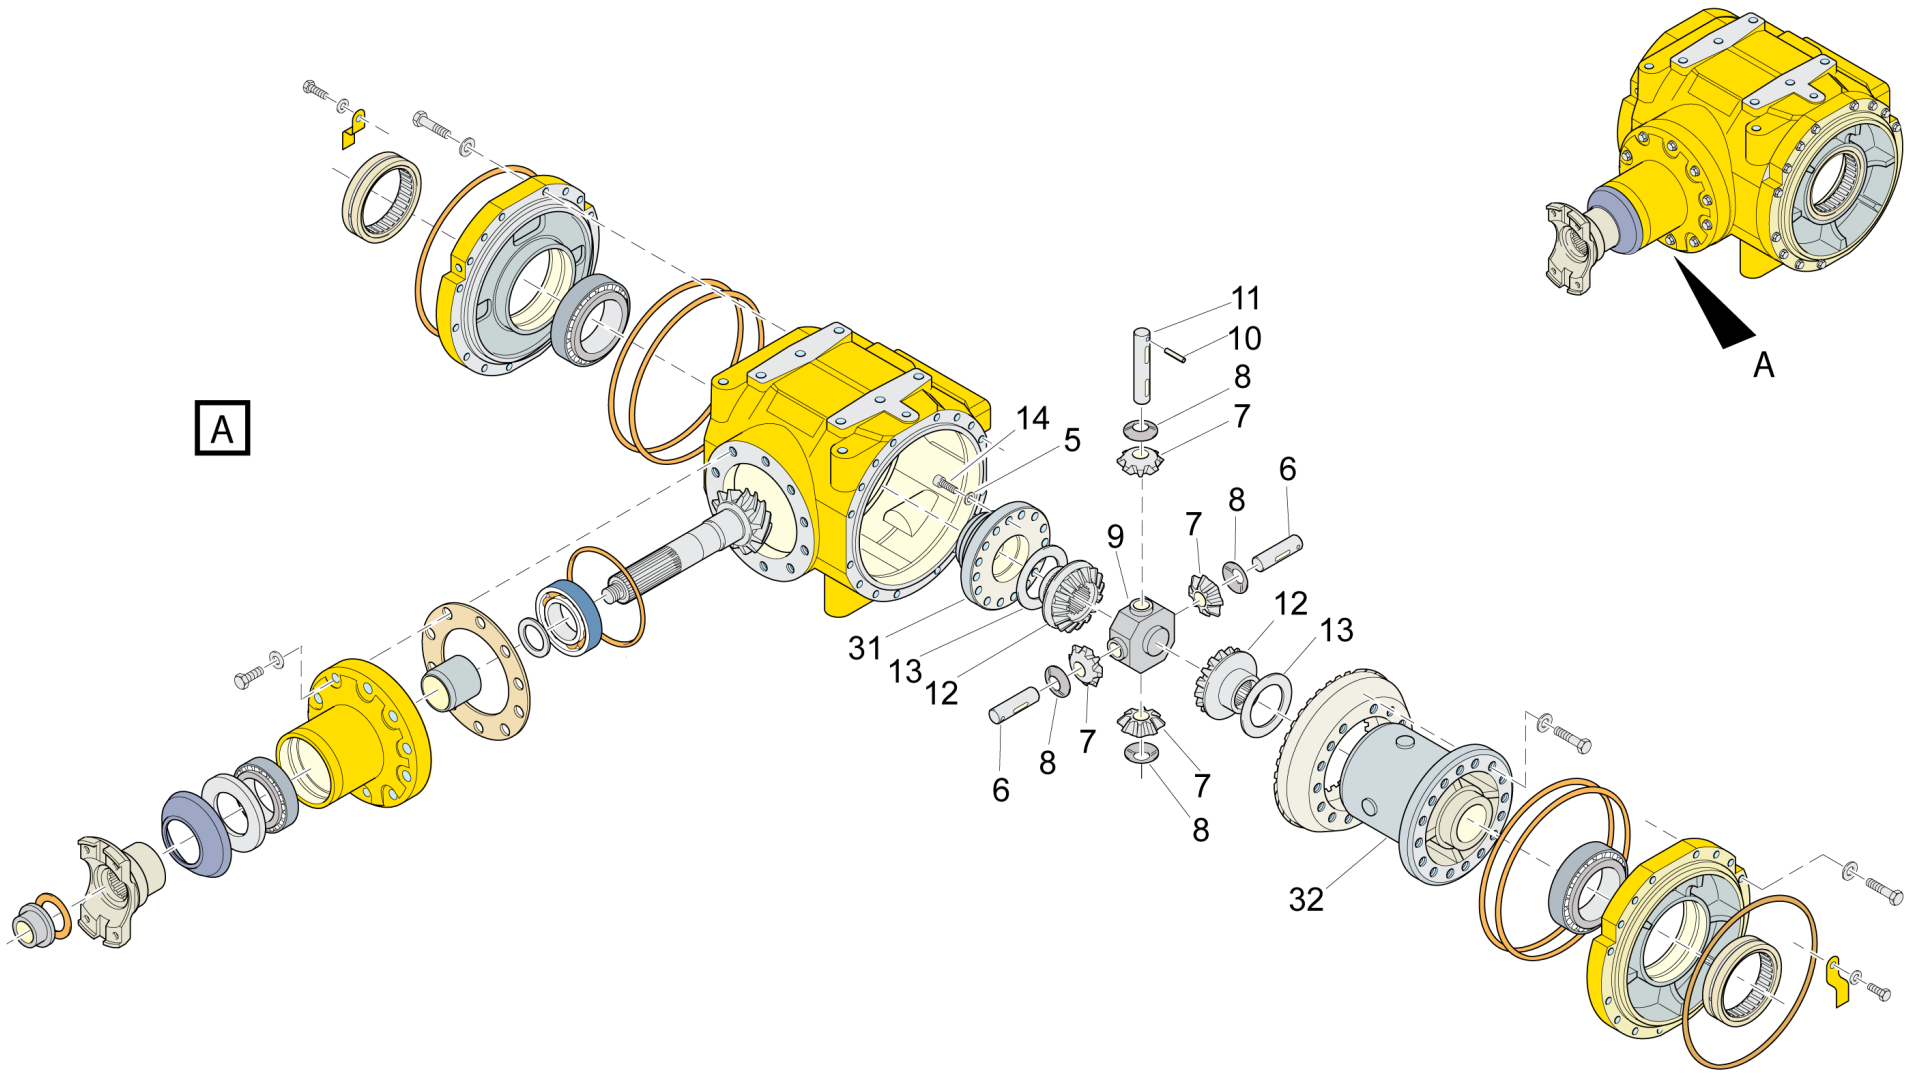

1250 0129 69


B0023616

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
5	5112 3187 77	8	SPRING WASHER	FJÄDERBRICKA		
6	5112 3003 15	2	PIN	PINNE		
7	5112 3188 03	4	DIFFERENT.WHEEL	DIFFERENT. HJUL		
8	5580 0110 80	4	WASHER	BRICKA		
9	5112 3188 08	1	DIFF.SPIDER	DIFF.KORS		
10	5112 3003 77	3	PIN	PINNE		
11	5112 3188 09	1	SHAFT	AXEL		
12	5112 3190 14	2	SIDE WHEEL	SIDOHJUL		
13	5112 3003 10	2	FRICTION RING	FRIKTIONSRING		
14	5112 3190 15	8	BOLT	BULT		
31	5112 3190 16	1	COVER	LOCK		
32	5112 3190 17	1	DIFF.CASE	DIFF.HUS		

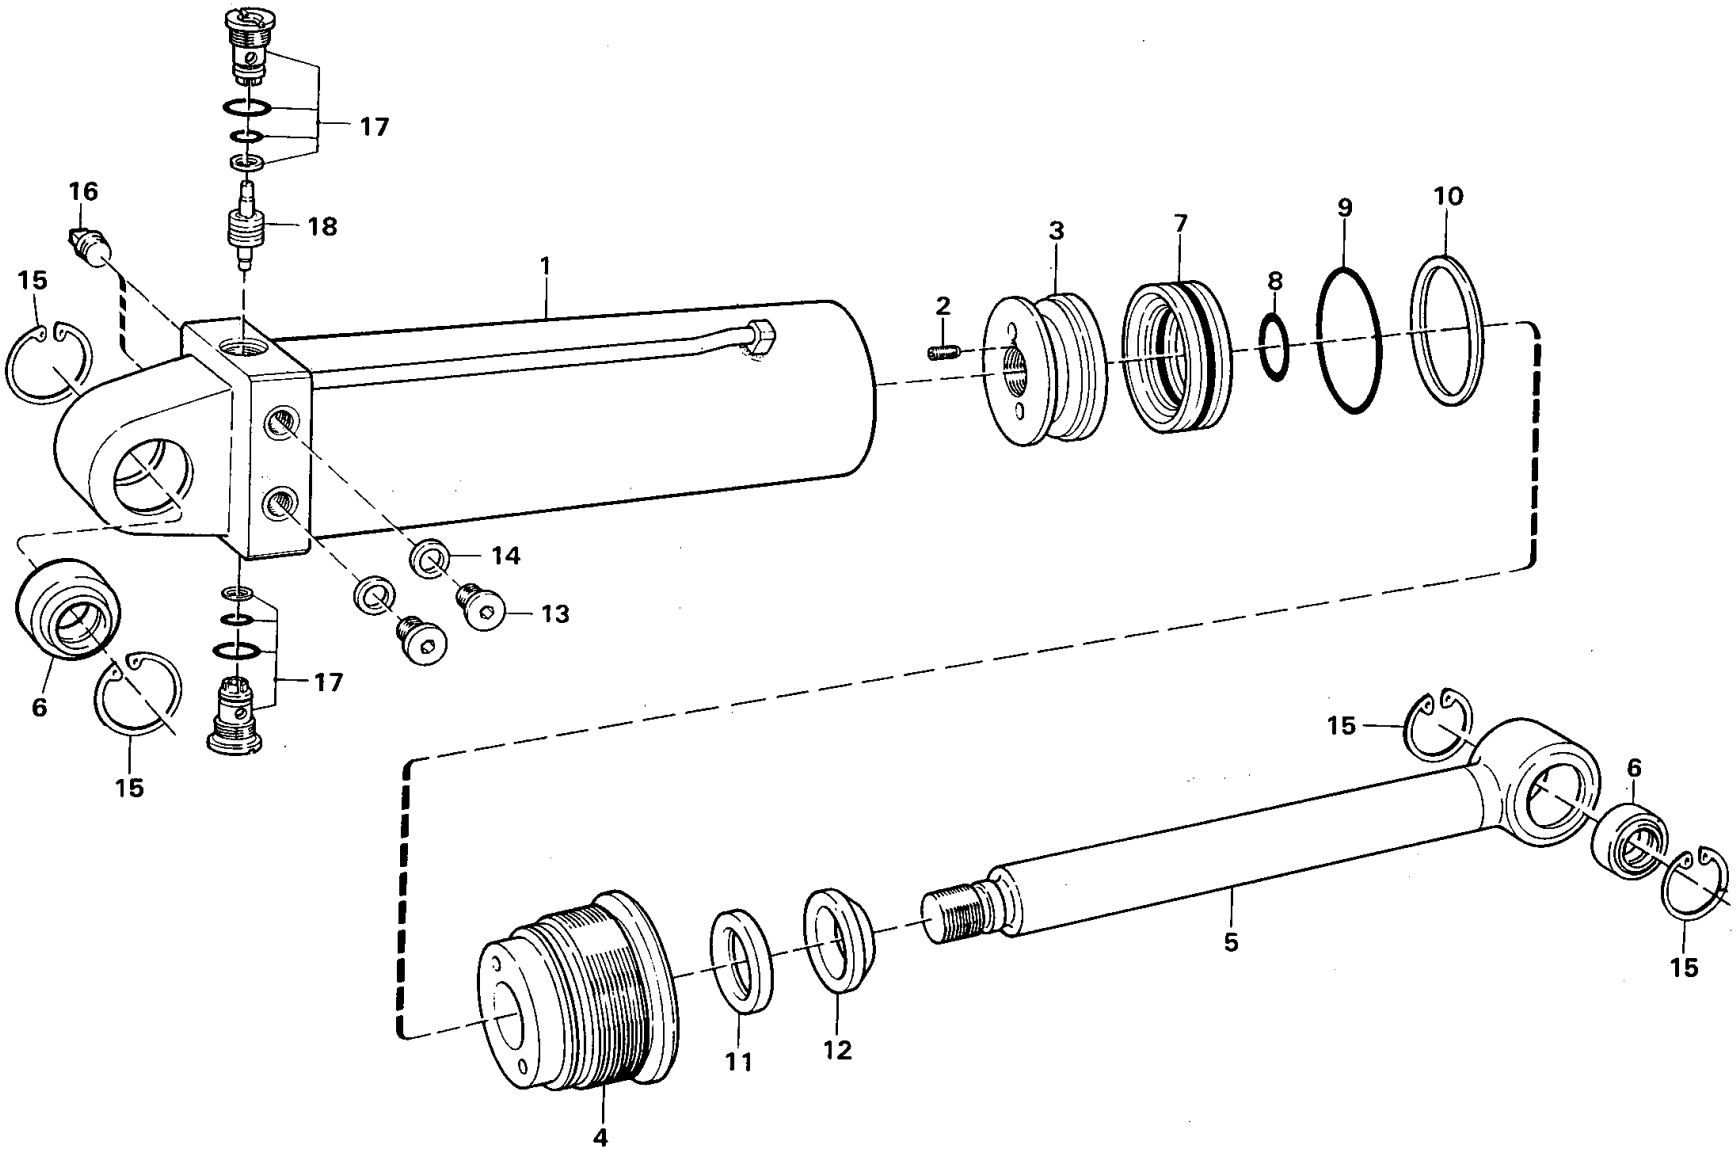


B0001037

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9120 0990 08	1	SEAL KIT	TÄTNINGSSATS		INCL.2,7-12
	9120 0990 20	1	SEAL KIT	TÄTNINGSSATS		INCL.17,18
2	0196 1552 24	1	SET SCREW	STOPPSKRUV		M 5 X 8 SK6SS DIN 916
3	9124 9565 00	1	PISTON	KOLV		
4	9123 3553 00	1	CYLINDER COVER	CYLINDERLOCK		
5	5112 2360 06	1	PISTON ROD	KOLVSTÅNG		
6	0501 0014 00	2	BEARING,SP.PL.	LEDLAGER		30 / 47 X 40,7
7	0665 0020 18	1	PISTON SEAL	KOLVTÄTNING		SKEGA 63 / 47 / 51 7045
8	0663 6127 00	1	O-RING	O-RING		22,1 X 1,6 70 SHORE
9	0663 6135 00	1	O-RING	O-RING		54,5 X 3 70 SHORE
10	0661 1500 66	1	BACK-UP RING	STÖDRING		58 63 2,5 1,3
11	0665 0010 12	1	SEAL RING	TÄTNINGSRING		A1 32 40
12	0665 9100 17	1	WIPER	AVSTRYKARE		32 / 45 X 10 AU 94
13	0686 6442 00	2	PLUG	PROPP		G 1/4 TYPE B - STEEL 5.8
14	0661 1020 00	2	SEAL WASHER	TÄTNINGSBRICKA		13,7 / 20,6 X 2,1 - FZ ST TREDO 1/4
15	0335 2143 00	4	CIRCLIP	SPÅRRING		SGH 47 X 1,75 DIN 472
16	0686 3103 00	2	PLUG	PROPP		KR 3/8 - 11 0815 00
17	3128 2099 55	2	CHECK VALVE	BACKVENTIL	Page 351	
18	9128 6998 00	1	SLIDE	SLID		

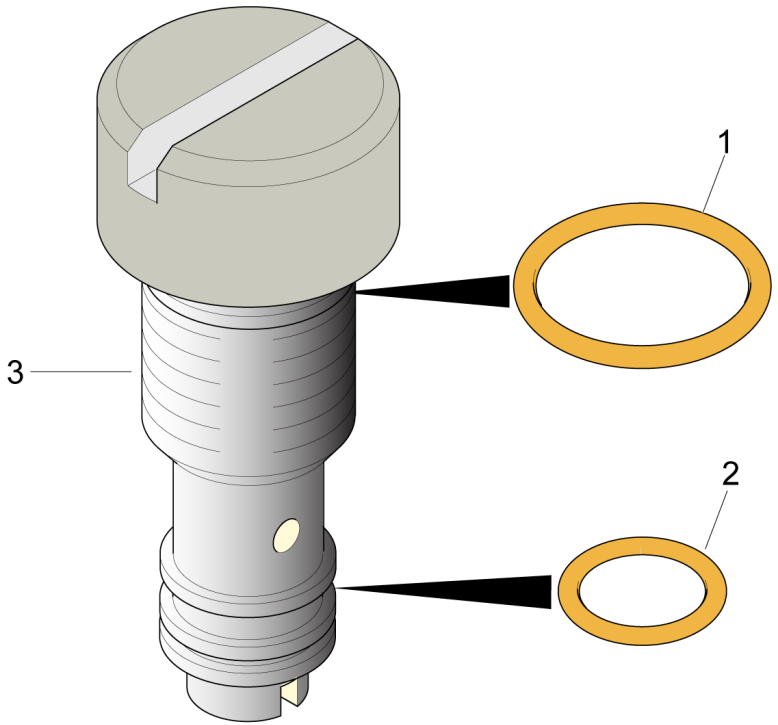

1250 0018 31


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0663 9099 00	1	O-RING	O-RING		17,86X 2,62 70 SHORE
2	0663 2118 01	1	O-RING	O-RING		11,3 X 2,4 90 SHORE
3	0661 1500 95	1	BACK-UP RING	STÖDRING		12 16 2 1,3

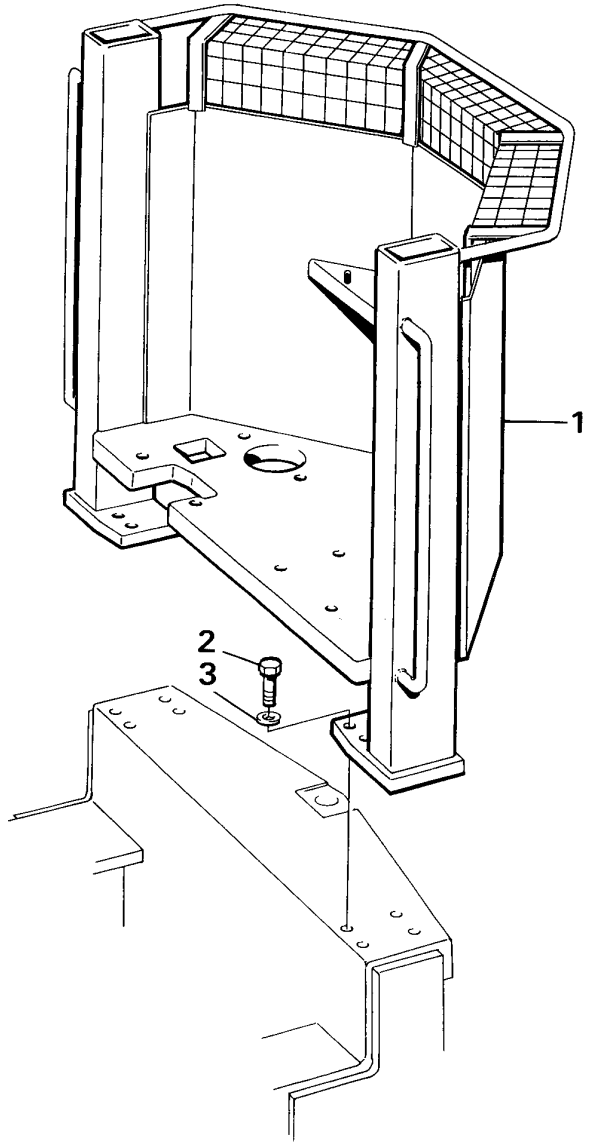

B0000260

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3133 98	1	DRIVERS PLATF.	FÖRARPLATTFORM		
2	0147 1553 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 20 X 60 - 8.8 FZB
3	0301 2394 00	8	PLAIN WASHER	RUNDBRICKA		21 / 37 X 3 - HB 200 FZB
4	5112 3152 90	1	WASHER	BRICKA		
5	5112 3152 91	1	COVER	LOCK		
6	0162 4204 00	1	SCREW, SLOTTED	SPÅRSKRUV		M 5 X 10 - 4.8 FZB

CHAIR COMPL. / STOL KOMPL.

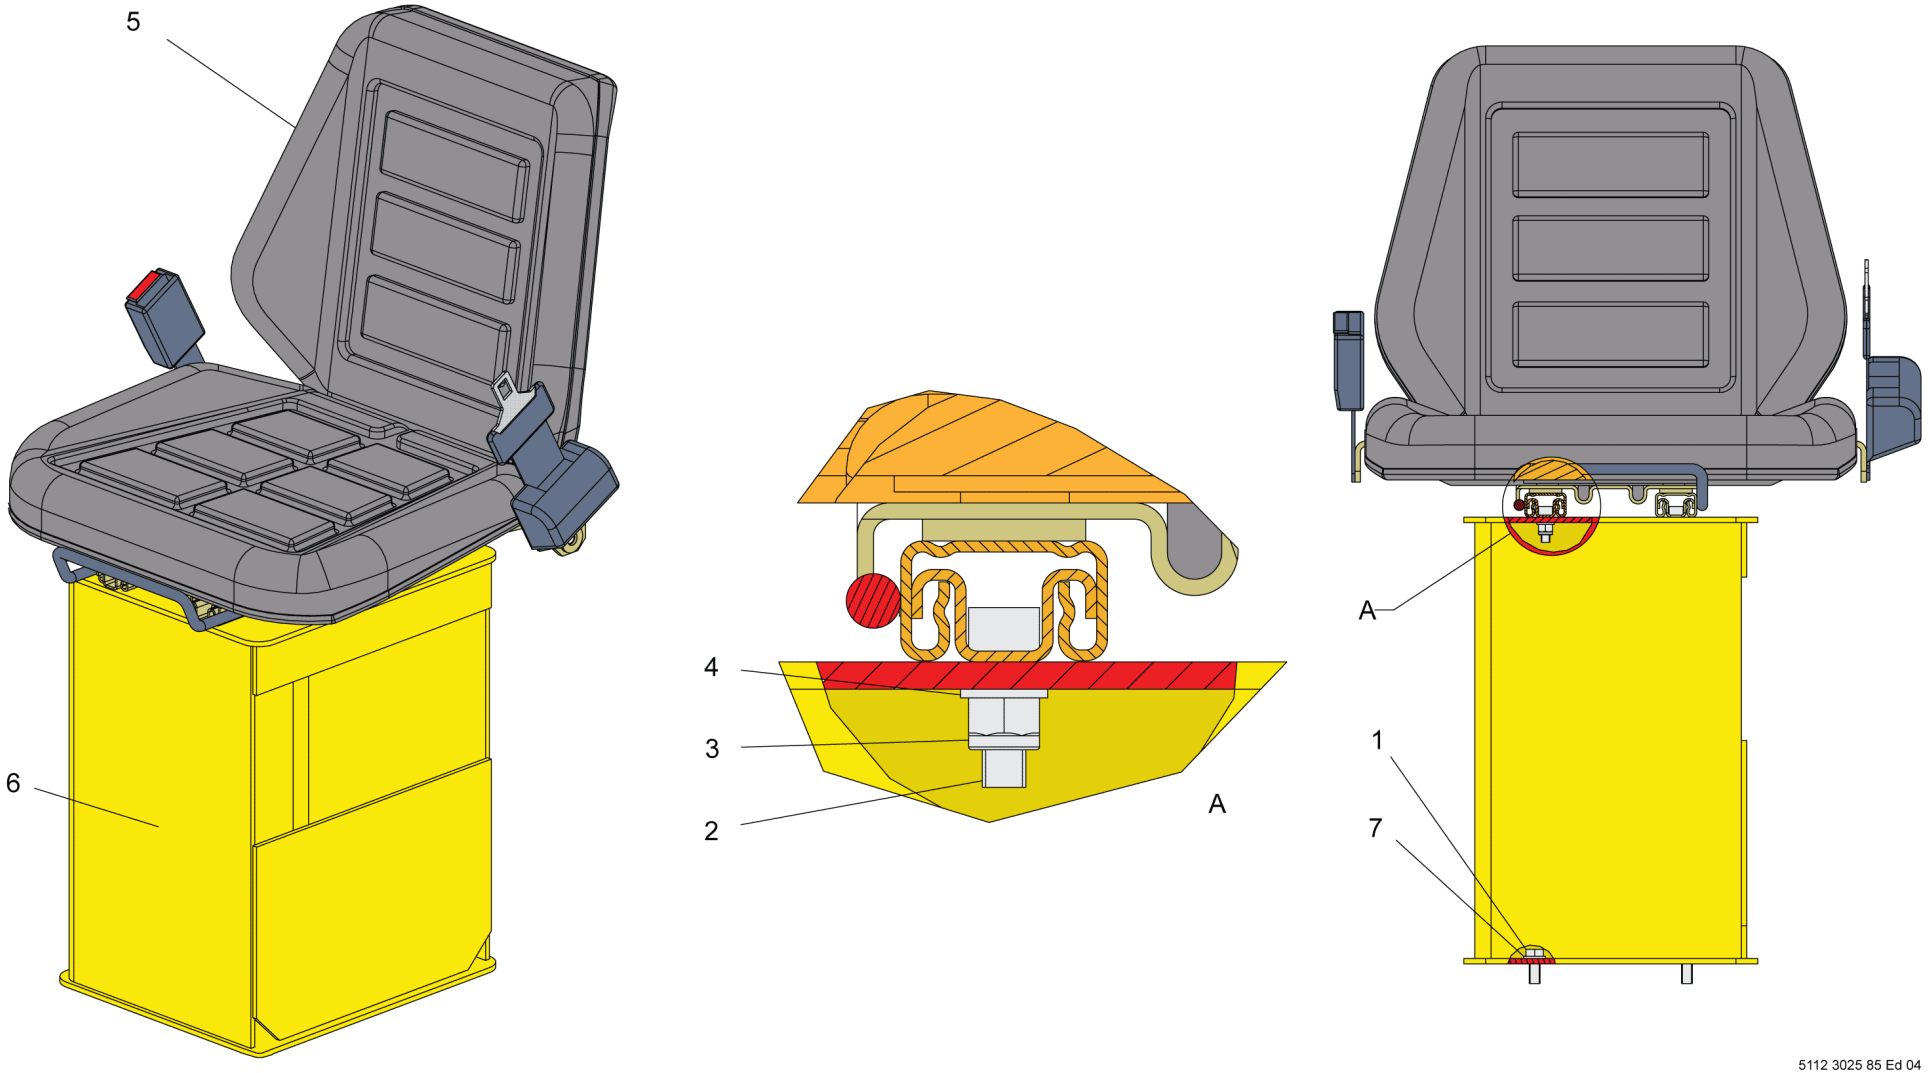


5112 3025 85 Ed 04

B0042936

CHAIR COMPL. / STOL KOMPL.


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0147 1362 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
2	0211 1325 03	4	SCREW	SKRUV		MC6S M 8 X 25 - 8.8 FZB
3	0291 1128 18	4	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
4	0301 2335 00	4	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
5	5112 0007 80	1	CHAIR COMPL.	STOL KOMPL.	Page 357	
6	5112 3021 20	1	CHAIR SUPPORT	STOLSTATIV		
7	0301 2344 00	4	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB

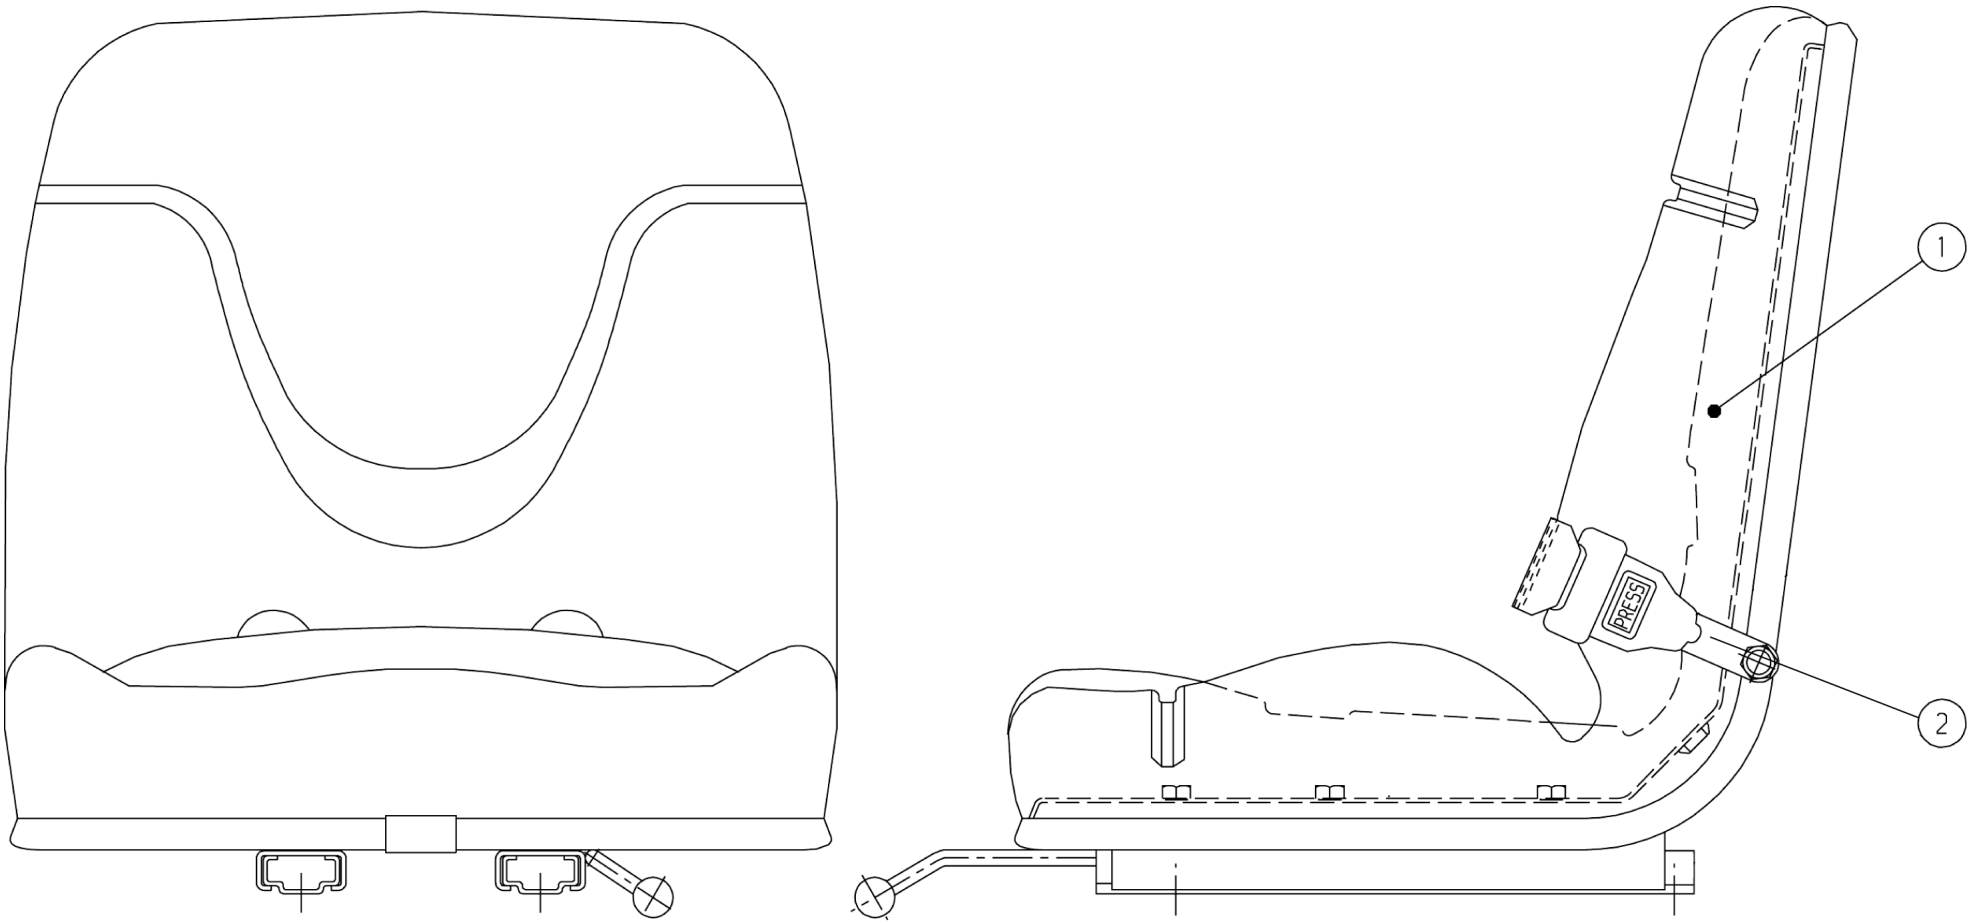

5112 3078 70/1 Ed02


B0038276


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 0105 24	1	DRIVERS CHAIR	FÖRARSTOL		
2	5112 0007 77	1	SAFETY BELT	SÄKERHETSBÄLTE		

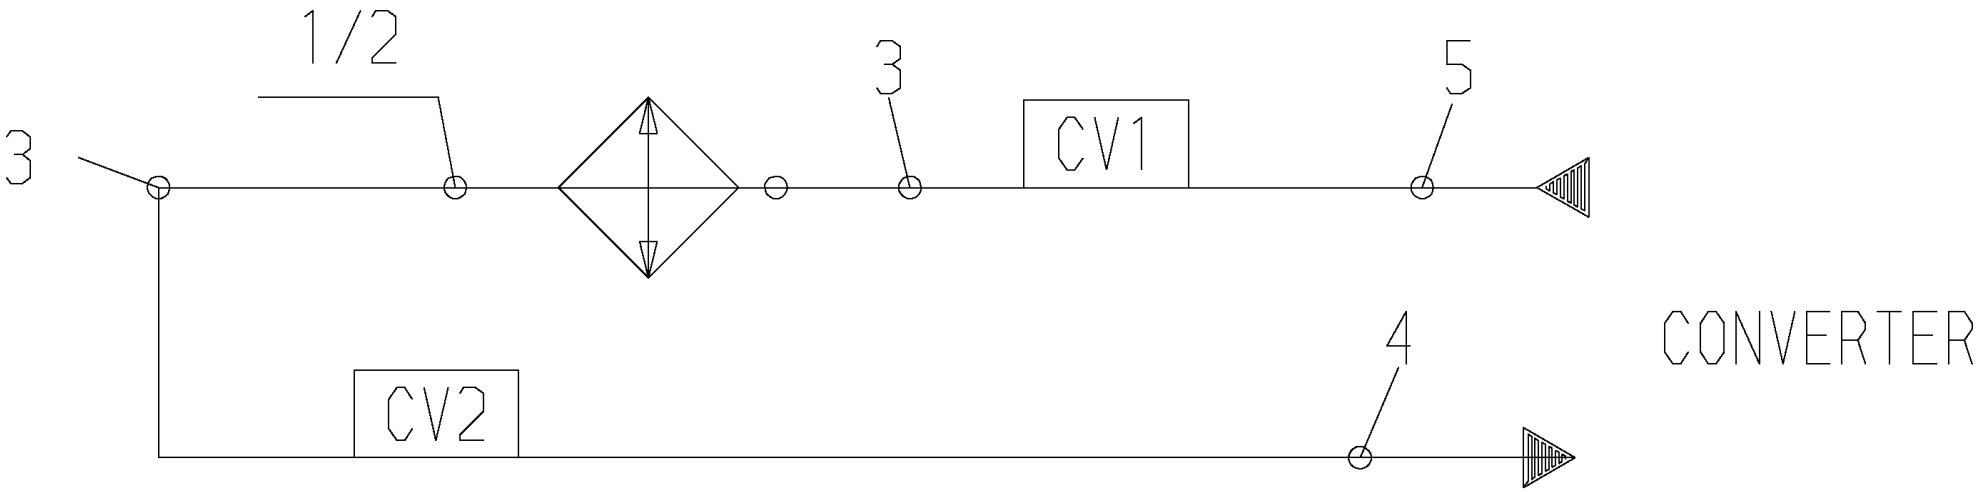

5112 2877 19/1 Ed01

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2328 00	1	BUSHING	BUSSNING		
2	0653 1174 00	1	GASKET	PACKNING		30 / 38 X 2 - 11 5013 12
3	3176 6566 00	2	NIPPLE	NIPPEL		UN 1 1/16 - G 1/2
4	3176 6560 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 1/16
5	3176 6535 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 7/8

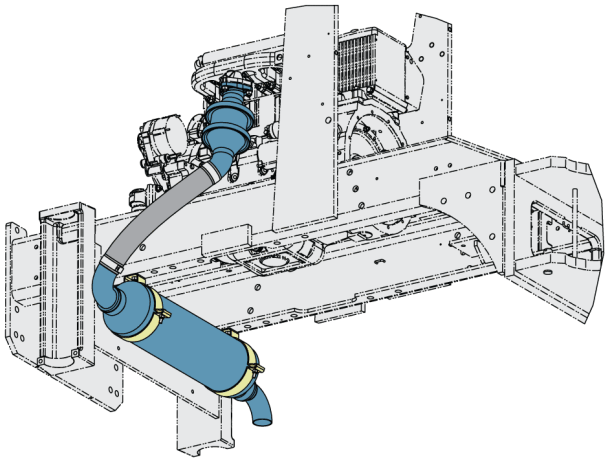


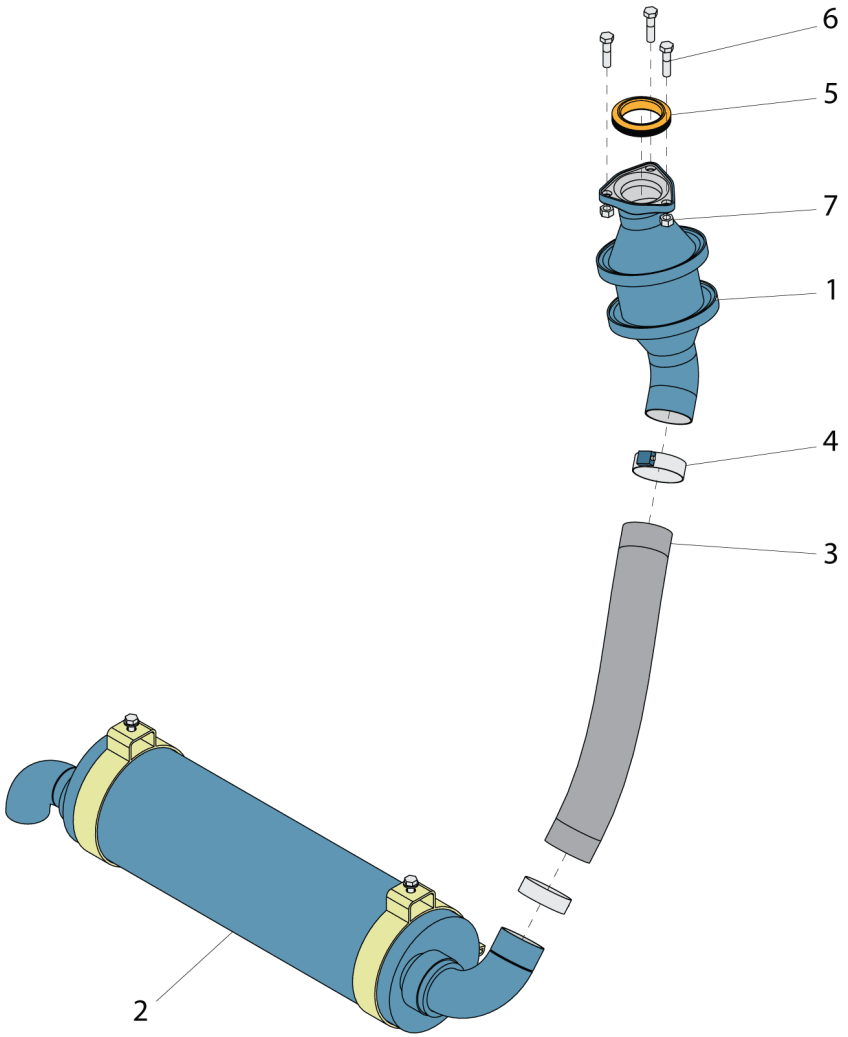

5112 3231 28/1-2 Ed01


B0044381

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3232 52	1	CATALYSER	KATALYSATOR	Page 363	
2	–	1	SILENCER	LJUDDÄMPARE	Page 365	
3	5112 3231 35	1	EXHAUST HOSE	AVGASSLANG		
4	0347 4676 00	2	HOSE CLIP	SLANGKLÄMMA		D=80 NORMA TYP SK
5	5112 0001 83	1	GASKET	PACKNING		
6	0211 1964 35	3	HEX SOCK. SCREW	SEXKANTHÅLSKRUV		SKRUV
7	5112 3231 37	3	LOCK NUT	LÅSMUTTER		

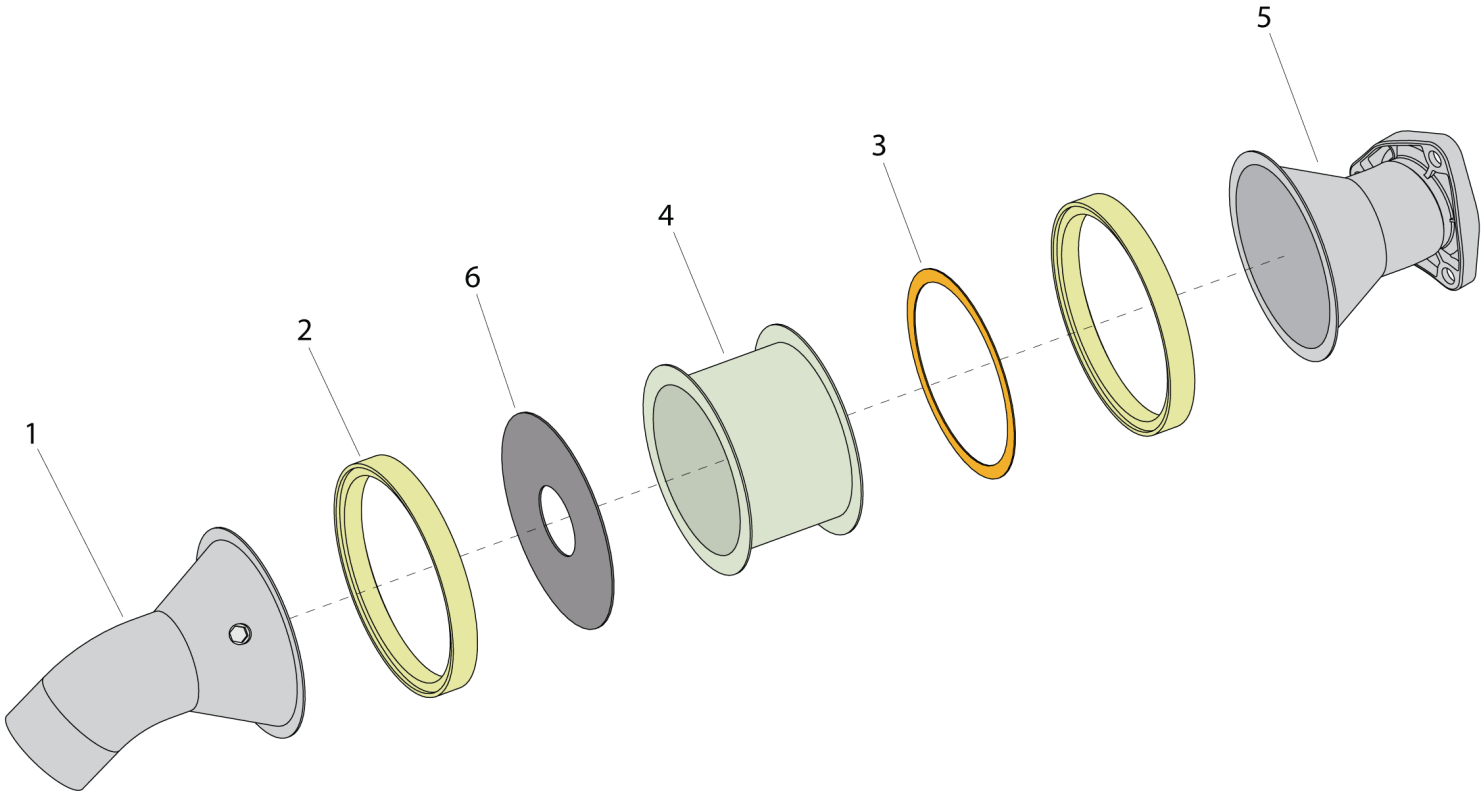

5112 3232 52 Ed01


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3231 32	1	OUTLET	UTLOPP		
2	5112 3202 38	2	CLAMP	KLAMMA		
3	5112 3202 37	2	GASKET	PACKNING		
4	5112 3202 39	1	CATALYSER	KATALYSATOR		
5	5112 3231 31	1	INLET	INLOPP		
6	5112 3232 48	1	RESTR. WASHER	STRYPBRICKA		

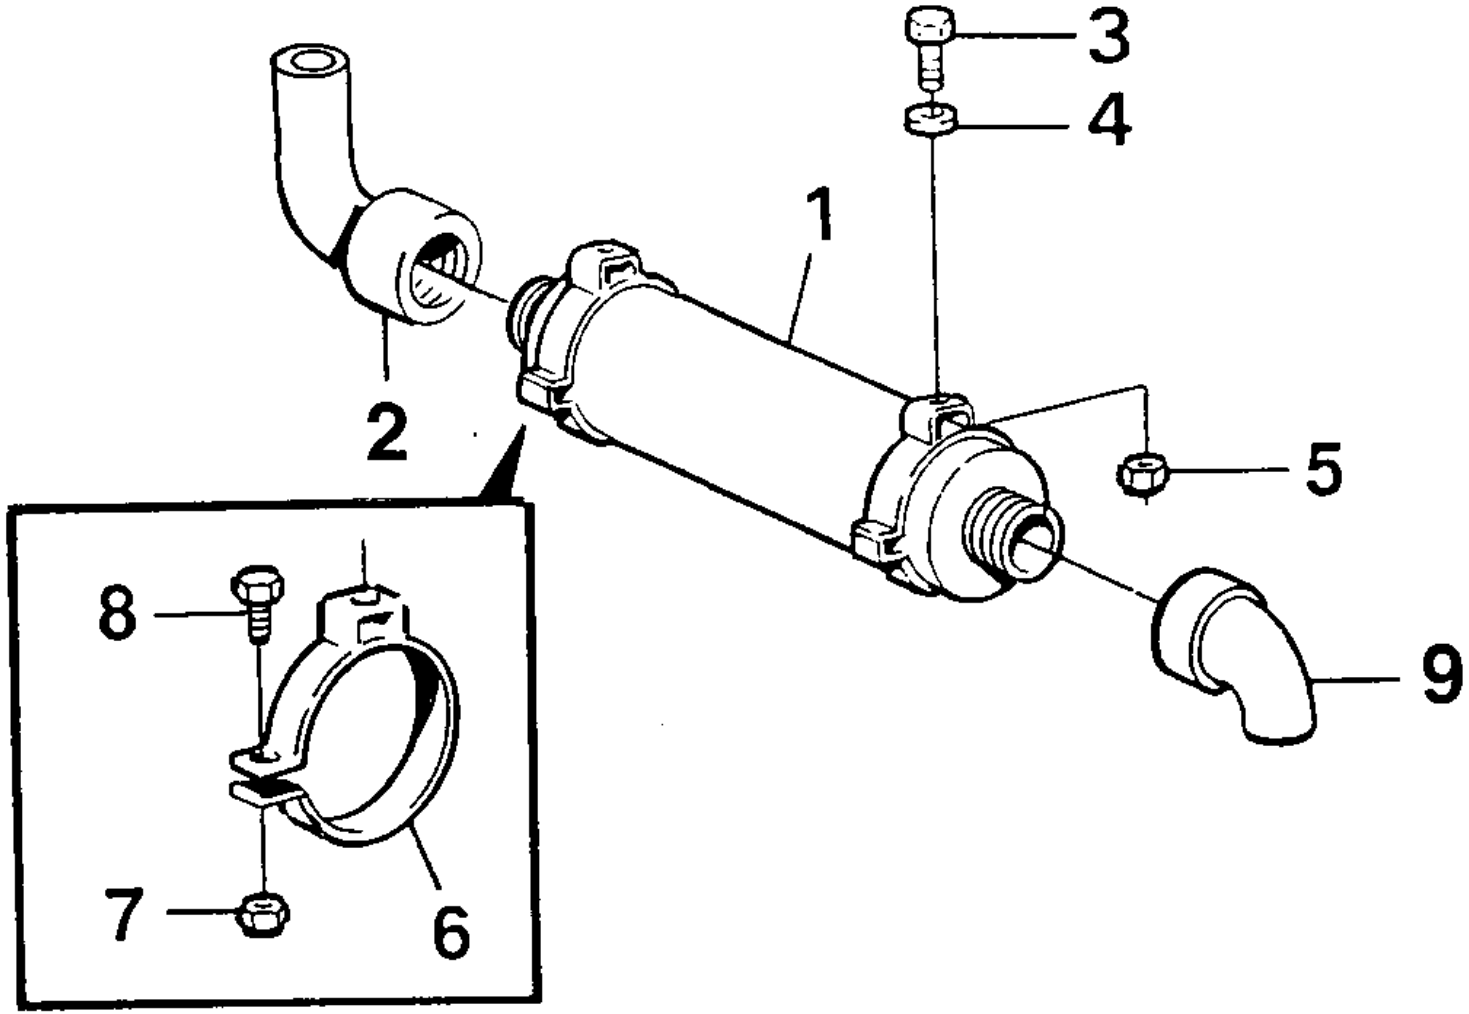

B0002205

SILENCER / LJUDDÄMPARE


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2051 00	1	SILENCER	LJUDDÄMPARE		
2	5112 3231 33	1	INLET	INLOPP		
3	0147 1402 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
4	0301 2358 00	2	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
5	0291 1128 22	2	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
6	5112 2579 00	2	BAND	BAND		
7	0291 1128 20	2	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
8	0147 1366 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 45 - 8.8 FZB
9	5112 3102 48	1	EXHAUST BEND	AVGASKRÖK		

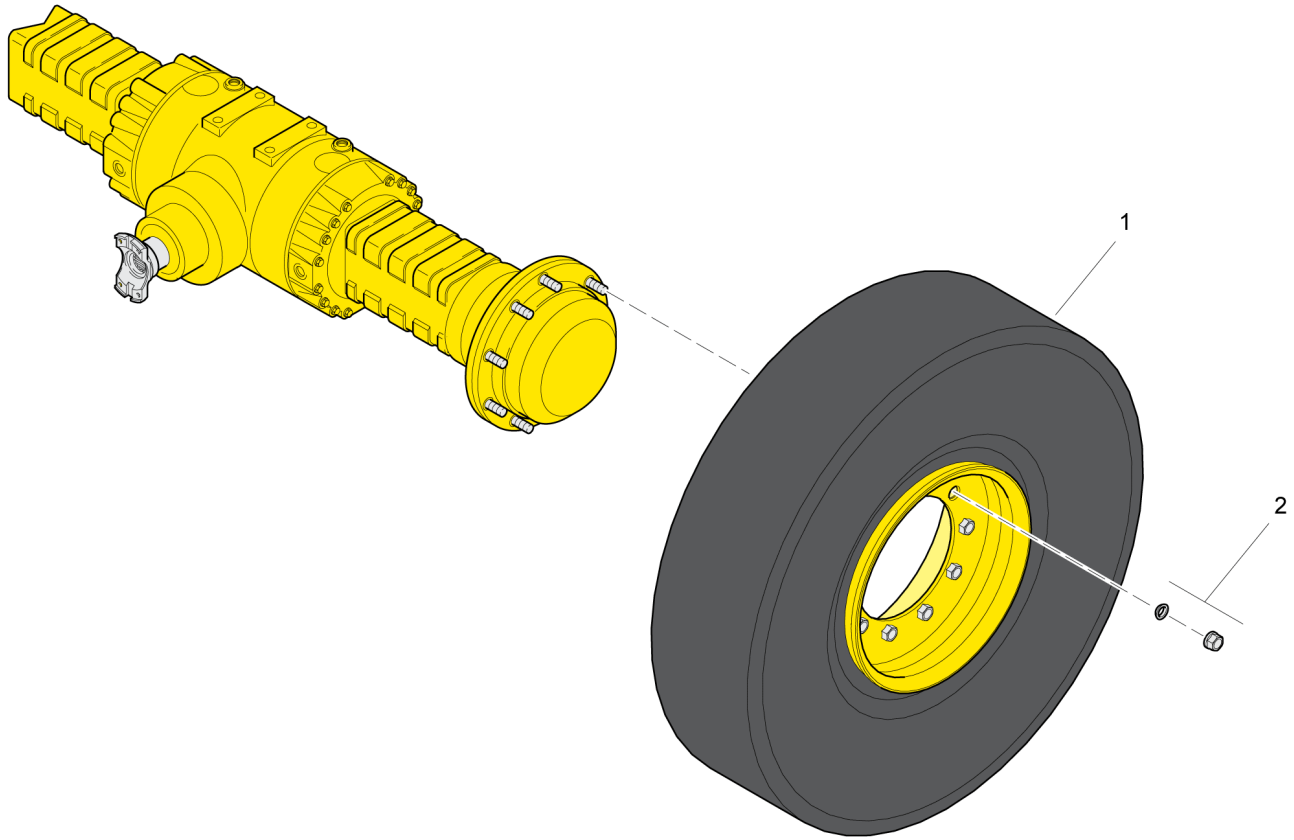

5112323527 01

B0050481


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3223 56	2	WHEEL COMPL.	HJUL KOMPL.	Page 369	SOLIDEAL 12.0X20/20 LAGER
2	5112 3302 52	2	ASSEMBLY SET	MONTERINGSSATS	Page 373	WHEEL NUT AND WASHER

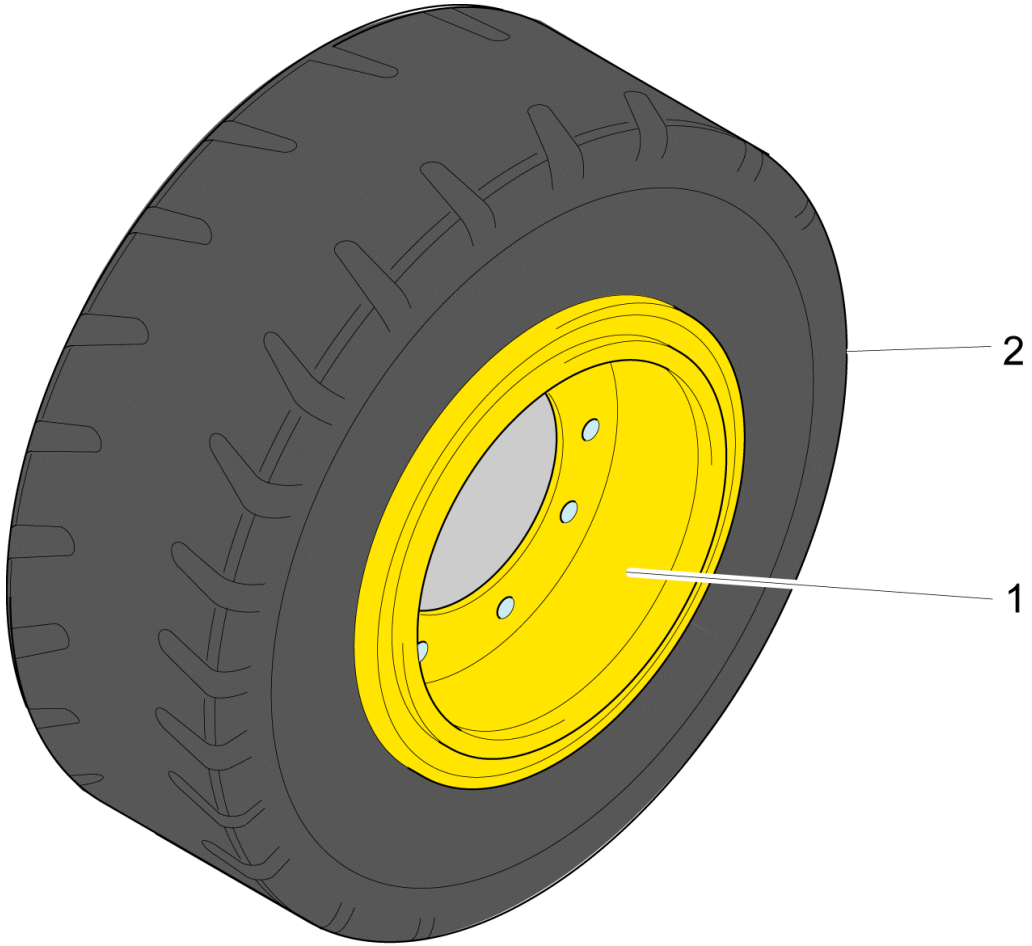

1250 0140 88

B0025808


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2335 80	1	RIM COMPL.	FÄLG KOMPL.	Page 371	

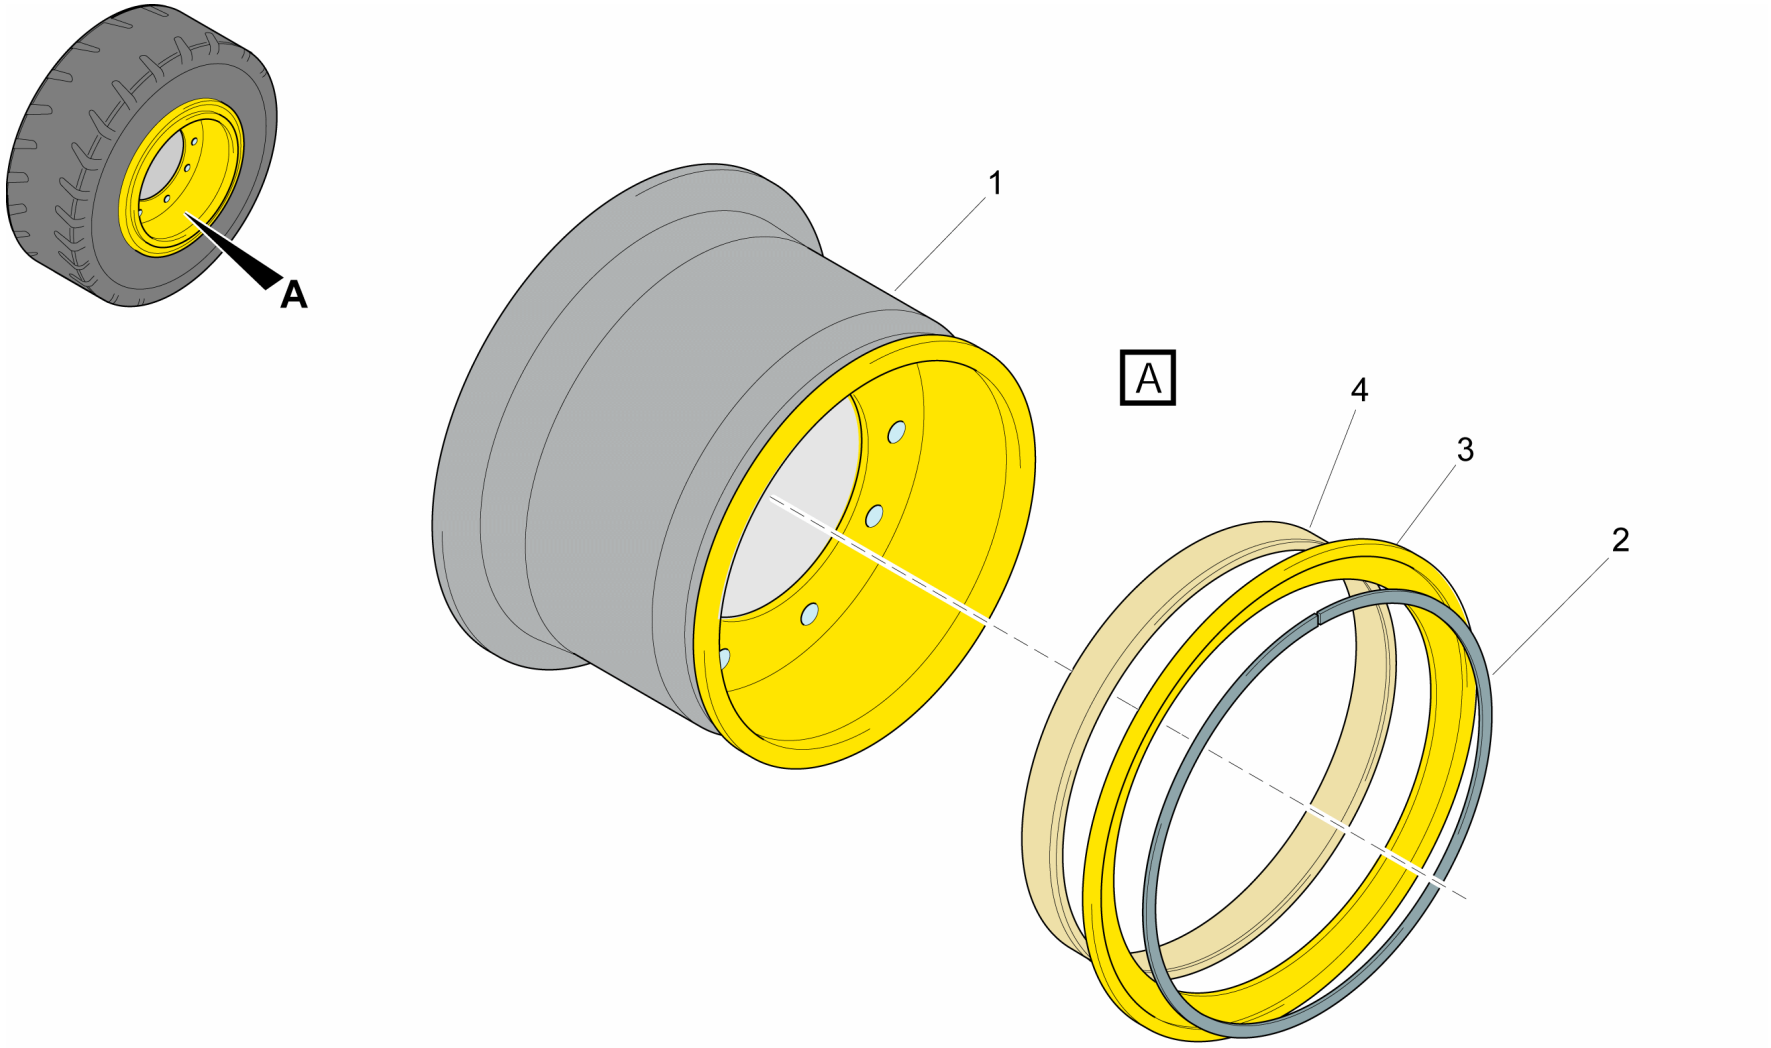

1250 0010 22

B0002326

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	RIM	FÄLG		
2	5112 2335 08	1	RIM COLLAR	FÄLGHORN		
3	5112 2335 10	1	RING	RING		
4	5112 2335 09	1	LOCK RING	LÅSRING		

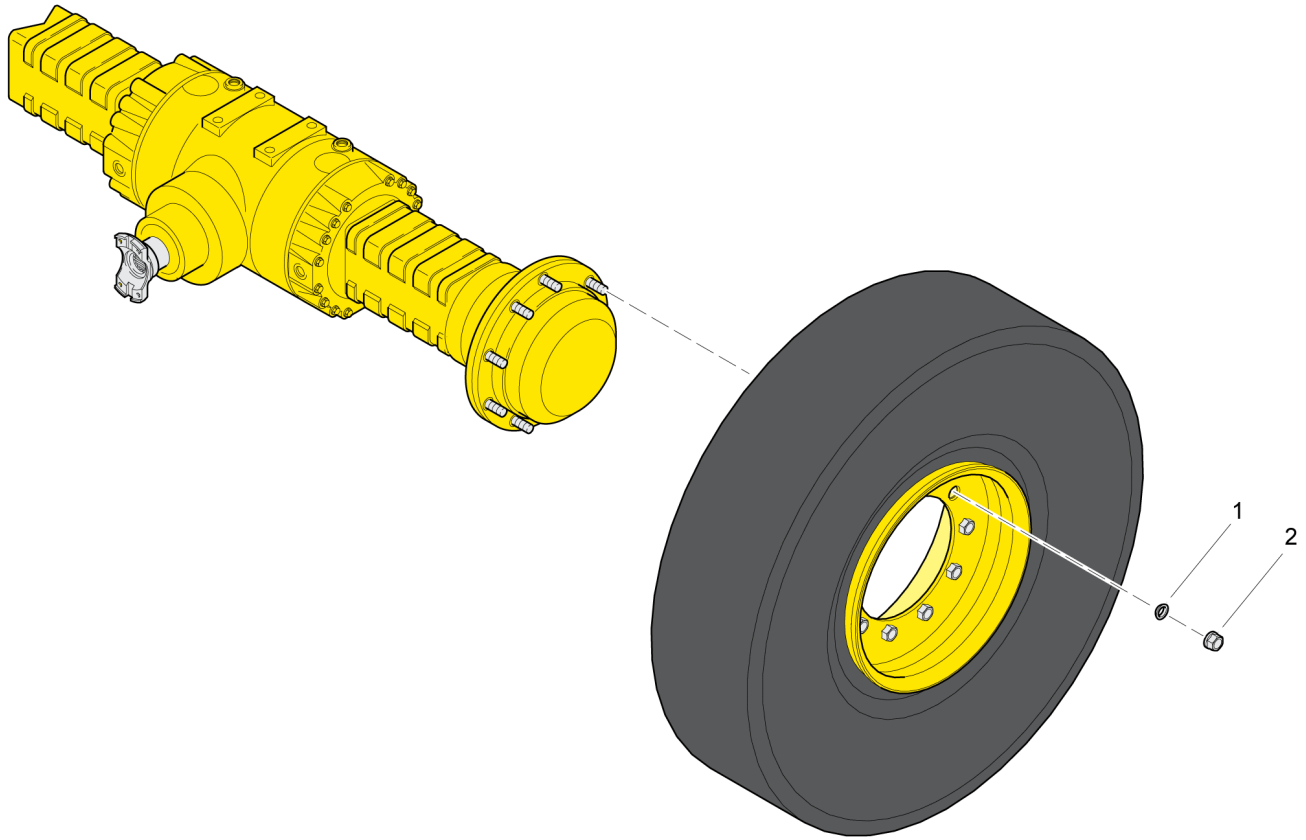


5112330252 02

B0050482

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0333 0500 24	10	SPERIC WASHER	SFÄRISK BRICKA		D - 22,5 34 24 18 - 8 - S
2	0299 1000 10	10	WHEEL NUT	HJULMUTTER		B M22X1,5 36 22 6 30 10 G

GUIDE UNIT / STYRENHET

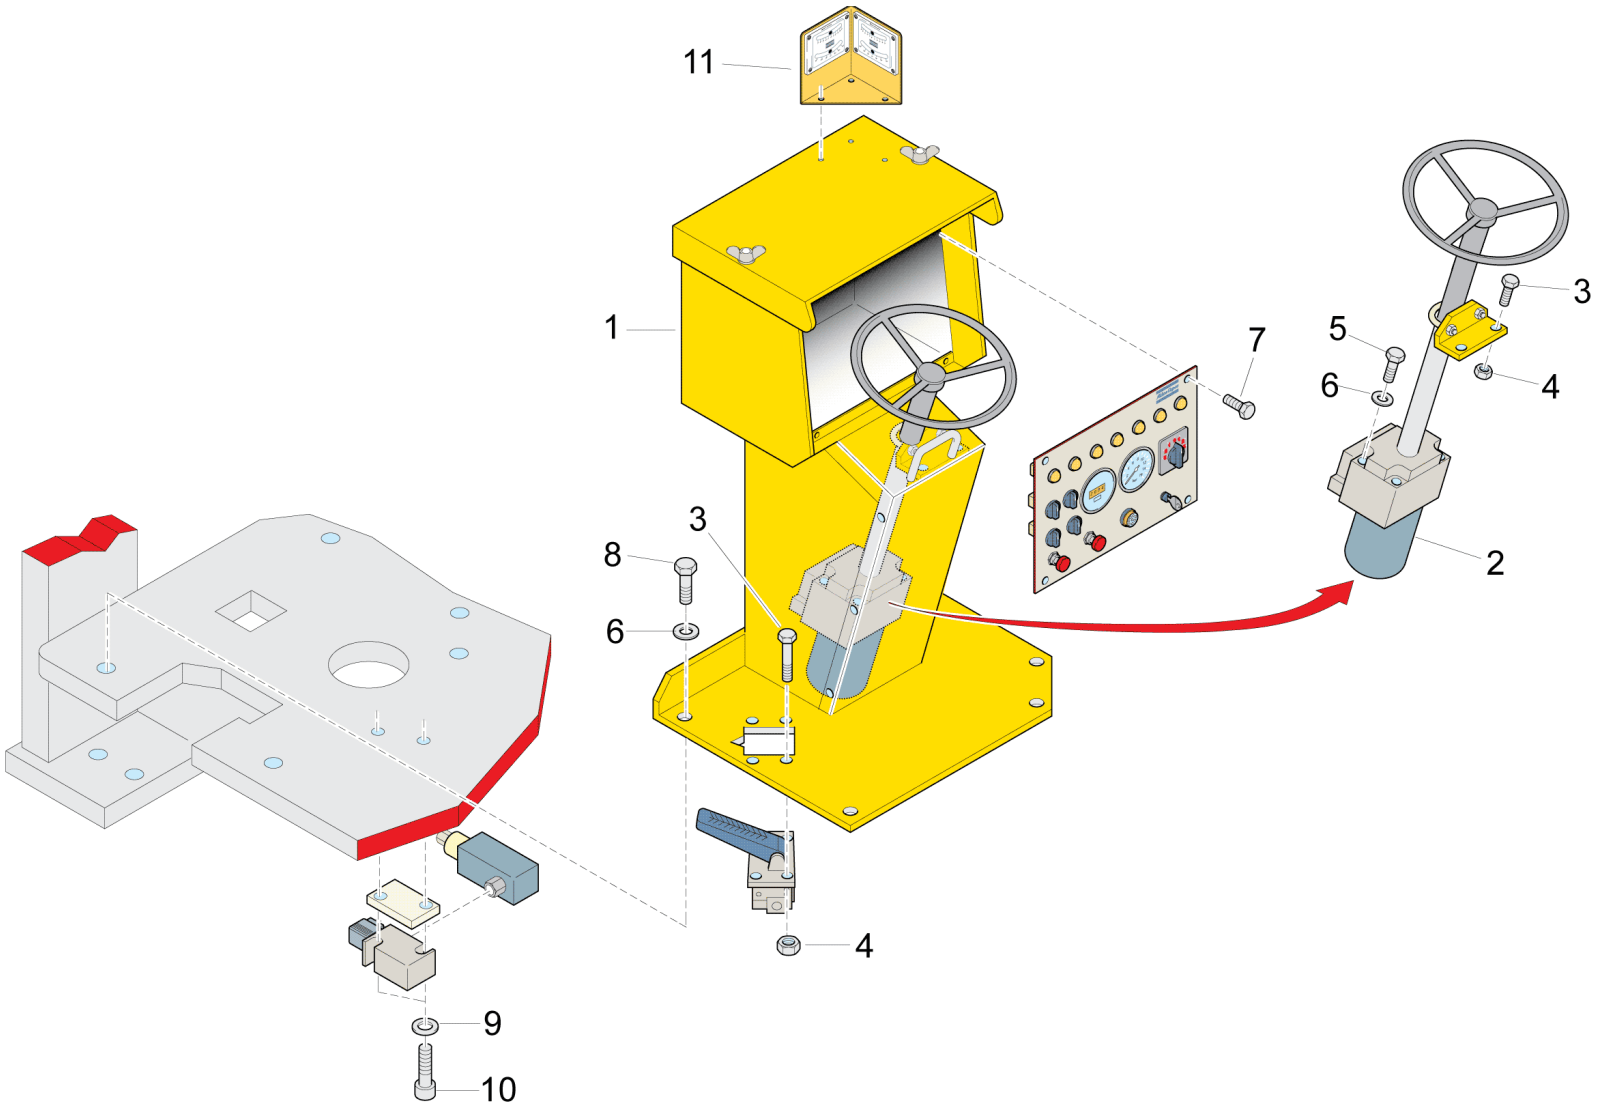


1250 0208 92

B0044383

GUIDE UNIT / STYRENHET


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3025 20	1	CONTROL PANEL	MANÖVERPULPET	Page 377	
2	5112 3025 14	1	STEERING SYSTEM	STYRSYSTEM	Page 379	
3	0147 1326 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 30 - 8.8 FZB
4	0291 1128 18	6	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
5	0147 1364 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 35 - 8.8 FZB
6	0301 2344 00	6	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
7	0147 1246 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 16 - 8.8 FZB
8	0147 1362 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
9	0301 2321 00	2	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
10	0147 1252 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		
11	5112 3024 99	1	ANGLE POINTER	VINKELVISARE	Page 381	

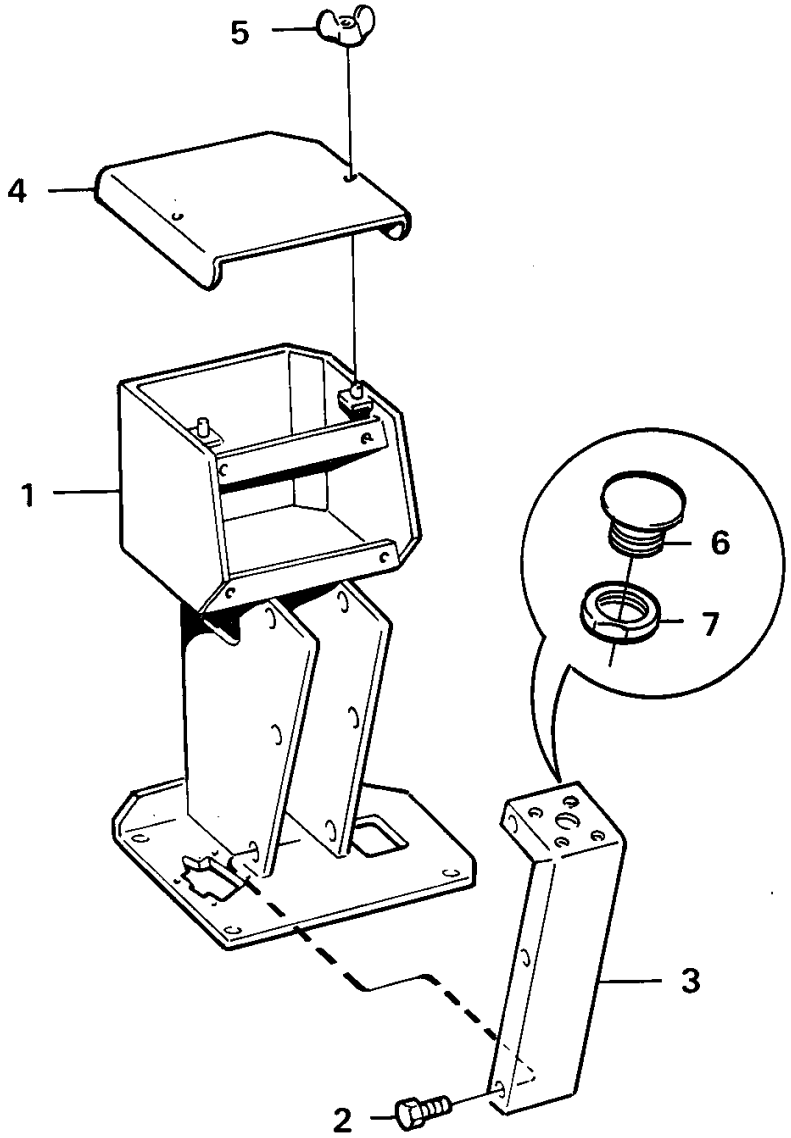


B0001049

CONTROL PANEL / MANÖVERPULPET 5112 3025 20

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3024 33	1	CONTROL PANEL	MANÖVERPULPET		
2	0147 1323 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 20 -8.8 FZB
3	–	1	VALVE ATTM.	VENTILFÄSTE		
4	5112 3021 07	1	COVER	LOCK		
5	0296 1110 00	2	WING NUT	VINGMUTTER		M 8 - 4
6	0697 9810 18	2	END PLUG	AVSLUTN.PROPP		M16X1,5 A3
7	0697 9809 13	2	LOCK NUT	LÅSMUTTER		M16X1,5 A3
8	0697 9810 19	1	END PLUG	AVSLUTN.PROPP		M20X1,5 A3
9	0697 9809 14	1	LOCK NUT	LÅSMUTTER		M20X1,5 A3

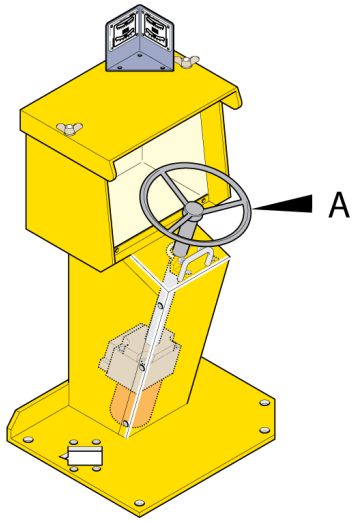


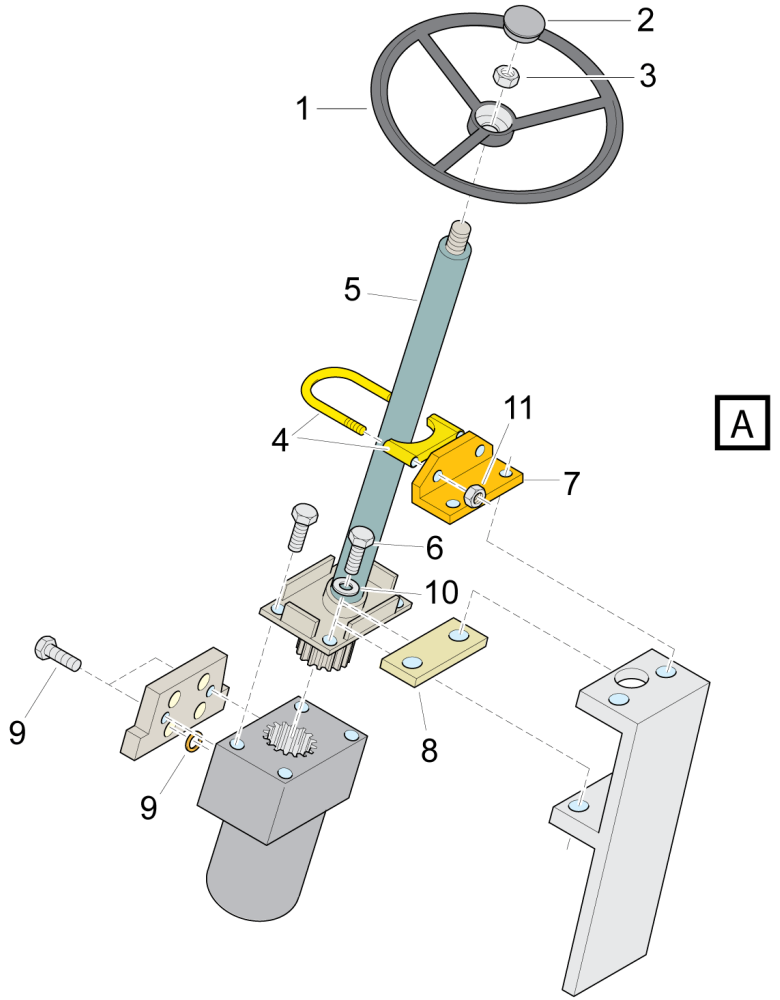



1250 0010 27

B0001047

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 2350 15	1	STEERING KPL	RATT KPL		
3	0266 1115 04	1	NUT	MUTTER		M 18X1,5 - 12 (DIN 934)
4	5112 2336 00	1	CLAMP	KLAMMER		
5	5112 2349 80	1	STEERING SHANK	RATTSTAM		
6	0147 1361 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 22 - 8.8 FZB
7	5112 2337 00	1	ANGLE BRACKET	FÄSTVINKEL		
8	5112 2185 00	1	CUSHION	UNDERLÄGG		
9	5112 2348 93	1	ASSEMBLY SET	MONTERINGSSATS		
10	0301 2344 00	2	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
11	0291 1128 19	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7043

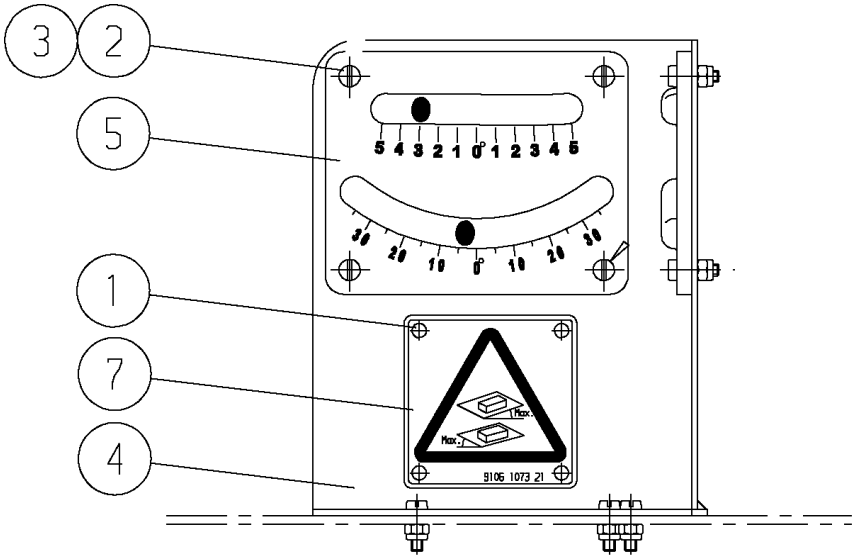

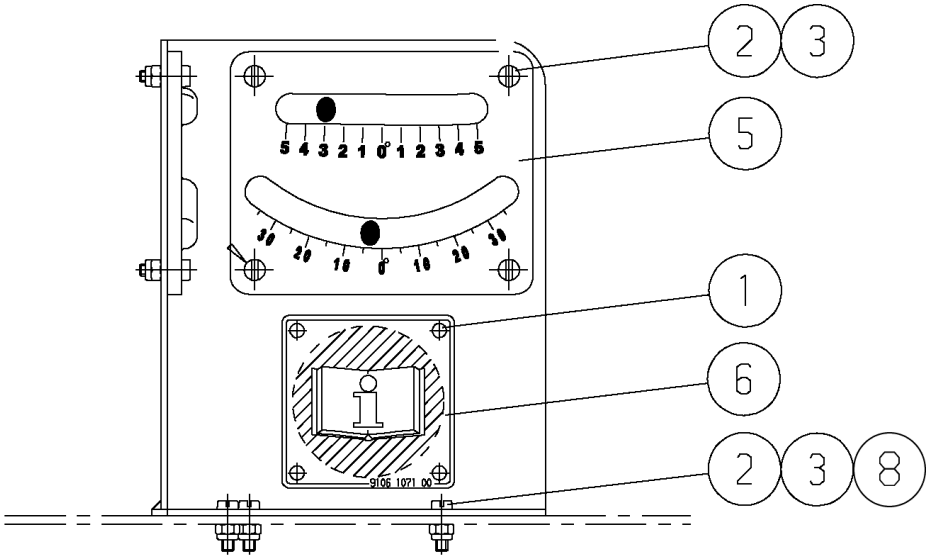

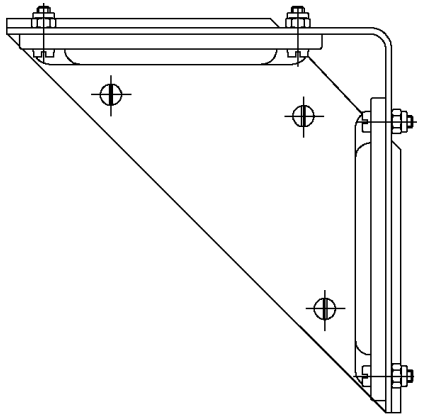

5112 3024 99/1 Ed02

B0009454

ANGLE POINTER / VINKELVISARE 5112 3024 99

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0129 3104 00	8	BLIND RIVET	BLINDNIT		2,4 X 7,4 TAP / D 48 BS
2	0160 6041 00	11	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 14 - 4.8
3	0291 1128 13	11	LOCK NUT	LÅSMUTTER		M 4 - 8 FZB / ISO 7040
4	–	1	HOLDER	HÅLLARE		
5	5112 3102 43	2	ANGLE POINTER	VINKELVISARE		
6	–	1	READ INSTR.BOOK	LÄS INSTR.BOK		SYMBOL
7	9106 1073 21	1	TIPP. HAZ. DOWN	TIPPRISK NEDFÖR		
8	0301 2315 00	22	PLAIN WASHER	RUNDBRICKA		4,3 / 9 X 0,8 -HB 200 FZB


X0000000


MOTOR CAP CATCH / MOTORHUVSPÄRR

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
217	5112 3125 51	1	PAWL PIN	SPÄRRPINNE	Page 385	
218	5112 3125 60	1	PROTECTION	SKYDD		

PAWL PIN / SPÄRRPINNE

5112 3125 51

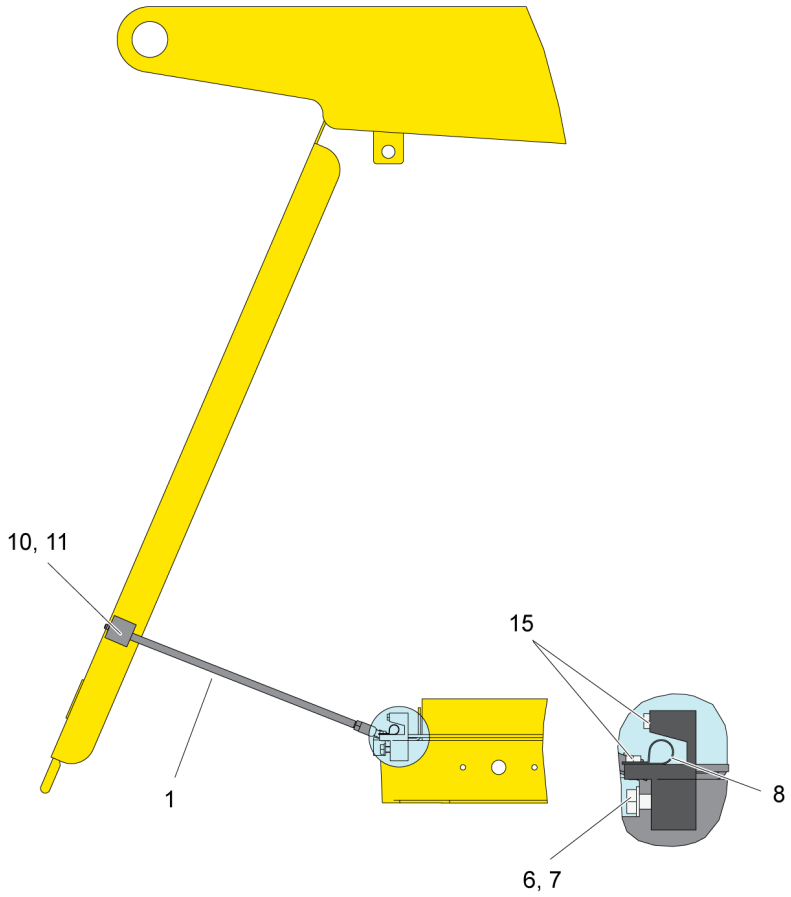

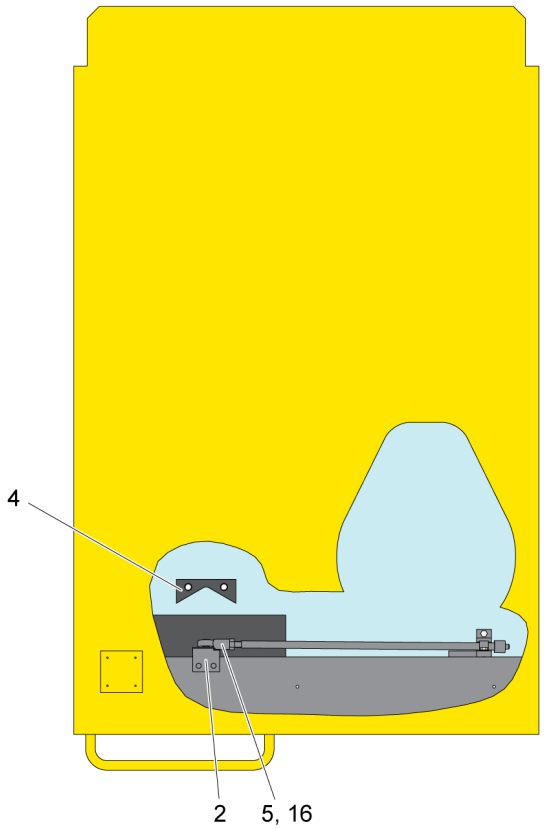

5112312551 01


B0059883

PAWL PIN / SPÄRRPINNE

5112 3125 51

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3125 61	1	PAWL PIN	SPÄRRPINNE		
2	5112 3125 53	1	ATTACHMENT	FÄSTE		
3	5112 3125 54	1	HOLDER	HÅLLARE		
4	5112 3125 58	1	GUIDE	STYRNING		
5	0501 1005 05	1	ROD END	LÄNKHUVUD		10 / 28 X 57 - M 10X1,5
6	0147 1363 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 30 - 8.8 FZB
7	0301 2344 00	3	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
8	0346 1002 42	1	PIPE CLAMP	RÖRKLÄMMA		D=15 NORMA TYP RSGU
10	0147 1403 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 40 - 8.8 FZB
11	0300 8011 00	2	PLAIN WASHER	RUNDBRICKA		12,5 / 35 X 3 -11 300 FZB
15	0147 1244 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 12 - 8.8 FZB
16	0266 2111 00	1	NUT	MUTTER		M 10 - 8 FZB

BOOMBRACKET CPL / BOMKONSOL KOMPL

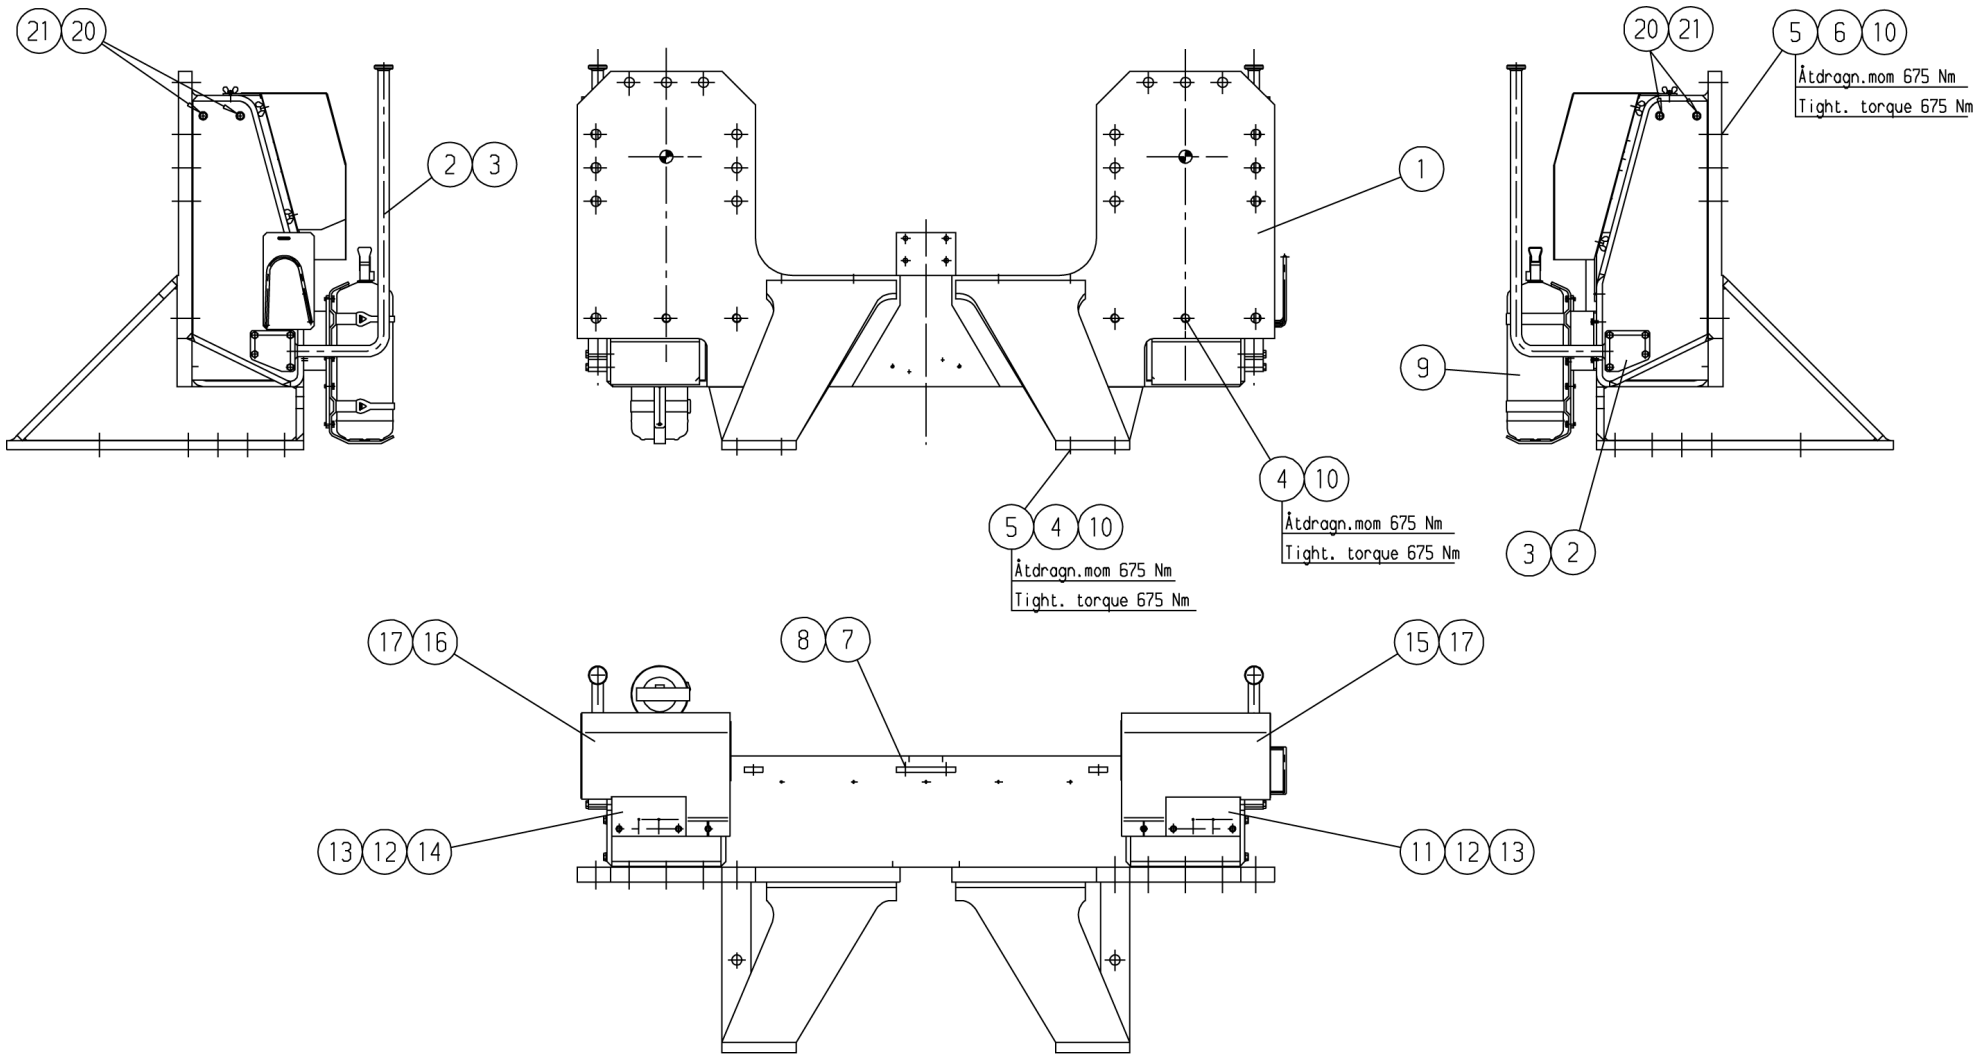

9110 9995 00/1 Ed05


B0011426

BOOMBRACKET CPL / BOMKONSOL KOMPL

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	BOOM BRACKET	BOMKONSOL		
2	9110 9556 10	2	HANDLE	HANDTAG		
3	0147 1370 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 65 - 8.8 FZB
4	0211 1963 41	24	SCREW	SKRUV		MC6S M 24 X 100 - 12.9
5	0291 1128 30	40	LOCK NUT	LÅSMUTTER		M 24 - 8 FZB / ISO 7040
6	0211 1964 02	20	HEX SOCK. SCREW	SEXKANTHÅLSKRUV		MC6S M 24 X 130 - 12.9
7	0147 1364 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 35 - 8.8 FZB
8	0291 1128 20	8	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
9	–	1	FIRE EXTINGUIS.	ELDSLÄCKARE		
10	0301 2405 00	84	PLAIN WASHER	RUNDBRICKA		25 / 44 X 4 - HB 200 FZB
11	–	1	VALVE SHEET	VENTILPLÅT		
12	0147 1322 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
13	0301 2335 00	10	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
14	–	1	VALVE SHEET	VENTILPLÅT		
15	5112 3135 77	1	PROTECT. COVER	SKYDDSHUV		
16	5112 3135 82	1	PROTECT. COVER	SKYDDSHUV		
17	0223 1322 02	6	WING SCREW	VINGSKRUV		1 M 8 16
18	3176 7358 00	1	U-BOLT	U-BULT		36 / 56 / 32 M8
19	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
20	0147 1360 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
21	0301 2344 00	4	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB

SUPPORT LEG / STÖDBEN

9110 8551 00

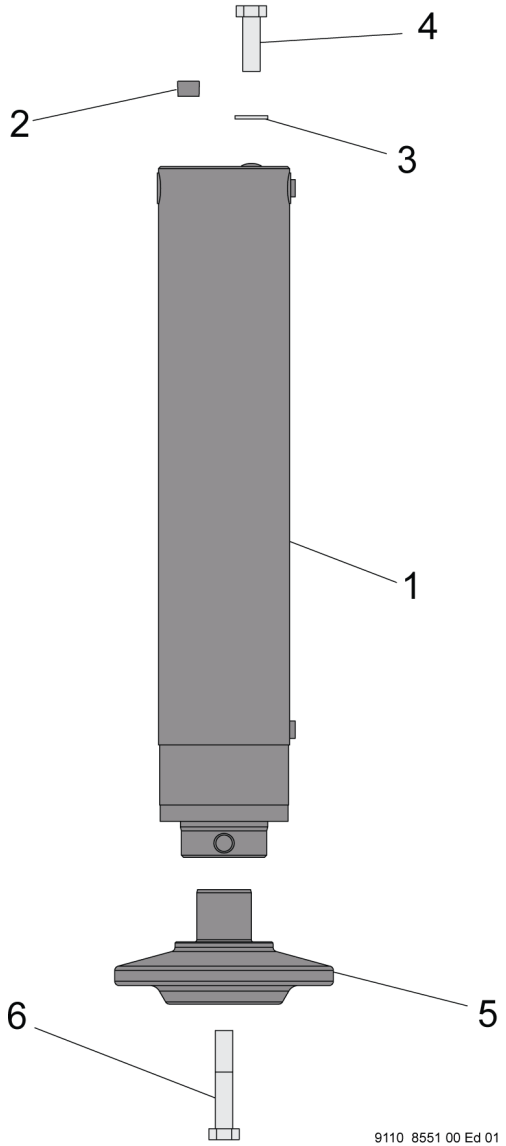


B0047796

SUPPORT LEG / STÖDBEN

9110 8551 00


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9121 5913 01	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 391	SUPPORT LEG BSJ 10-40
2	9106 1804 77	2	COVER PLUG	TÄCKPLUGG		055 0143 000 03
3	0301 2378 00	2	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
4	0147 1479 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
5	9110 8967 00	1	FOOT PLATE	FOTPLATTA		
6	0147 1487 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 90 - 8.8 FZB

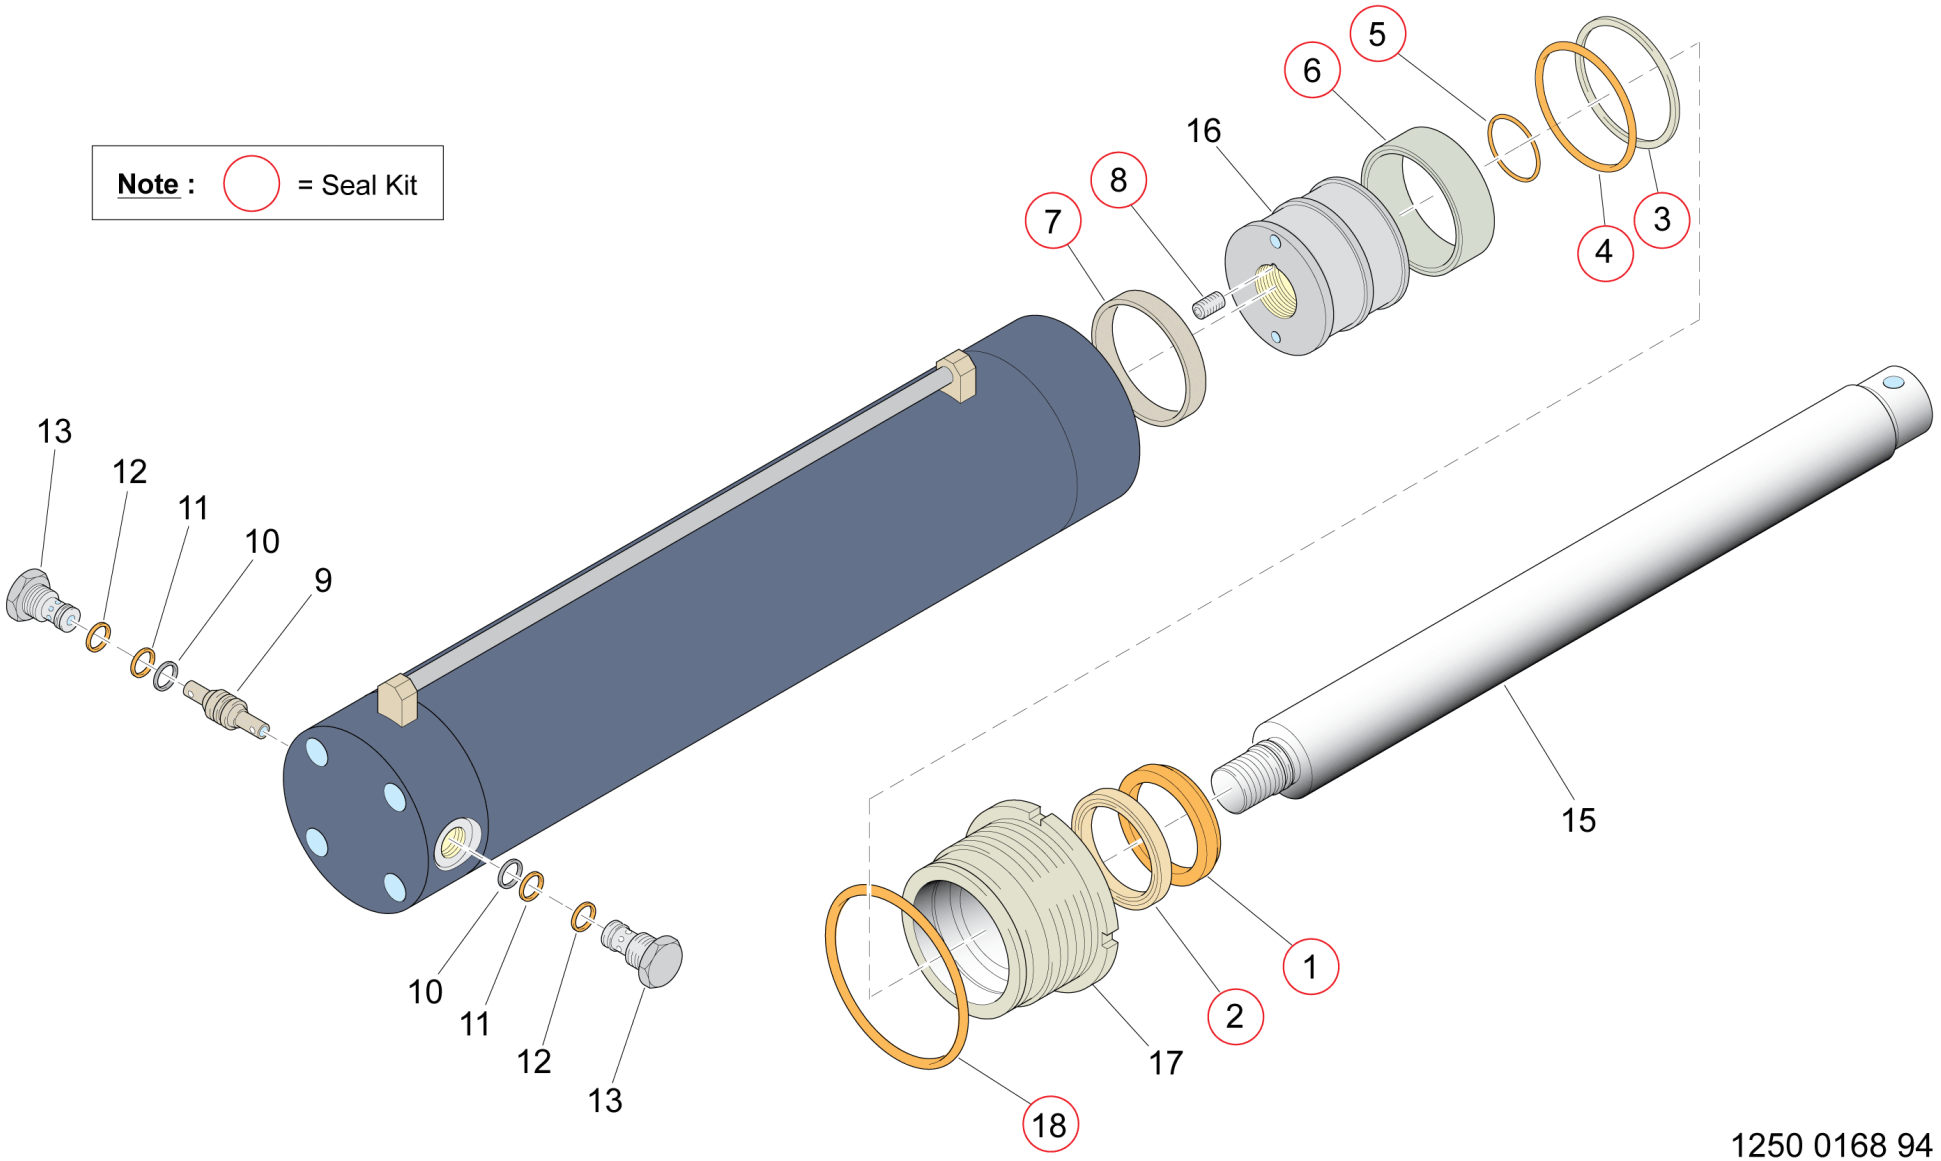

1250 0168 94

B0035372


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9120 0990 20	1	SEAL KIT	TÄTNINGSSATS		REF. 9-12
	9121 5913 50	1	SEAL KIT	TÄTNINGSSATS		REF. 1-8
1	0665 9214 00	1	WIPER	AVSTRYKARE		80 / 90 X 10 AU 92
2	0665 1000 46	1	SEAL	TÄTNING		80 / 90 X 12 94 AU/925
3	0661 1540 00	1	BACK-UP RING	STÖDRING		95 / 100 X 1,3
4	0663 6143 00	1	O-RING	O-RING		94,5 X 3 70 SHORE
5	0663 2134 00	1	O-RING	O-RING		42,2 X 3 70 SHORE
6	0665 0800 21	1	PISTON SEAL	KOLVTÄTNING		85 / 100 X 19,5 NBR
7	0665 9300 46	1	GUIDE RING, EXT	STYRRING, UTV.		PWR 100 / 94 X 25
8	0194 1320 00	1	SET SCREW	STOPPSKRUV		M 8 X 12 S6SS DIN 914
9	9128 7076 00	1	PISTON	KOLV		
10	0661 1510 00	2	BACK-UP RING	STÖDRING		12 / 16 X 1,3
11	0663 2118 01	2	O-RING	O-RING		11,3 X 2,4 90 SHORE
12	0663 9099 00	2	O-RING	O-RING		17,86X 2,62 70 SHORE
13	3128 2099 55	2	CHECK VALVE	BACKVENTIL	Page 351	
14	–	1	CYLINDER	CYLINDER		
15	9126 2010 01	1	PISTON ROD	KOLVSTÅNG		
16	9126 2012 00	1	PISTON	KOLV		
17	9126 2011 00	1	COVER	LOCK		

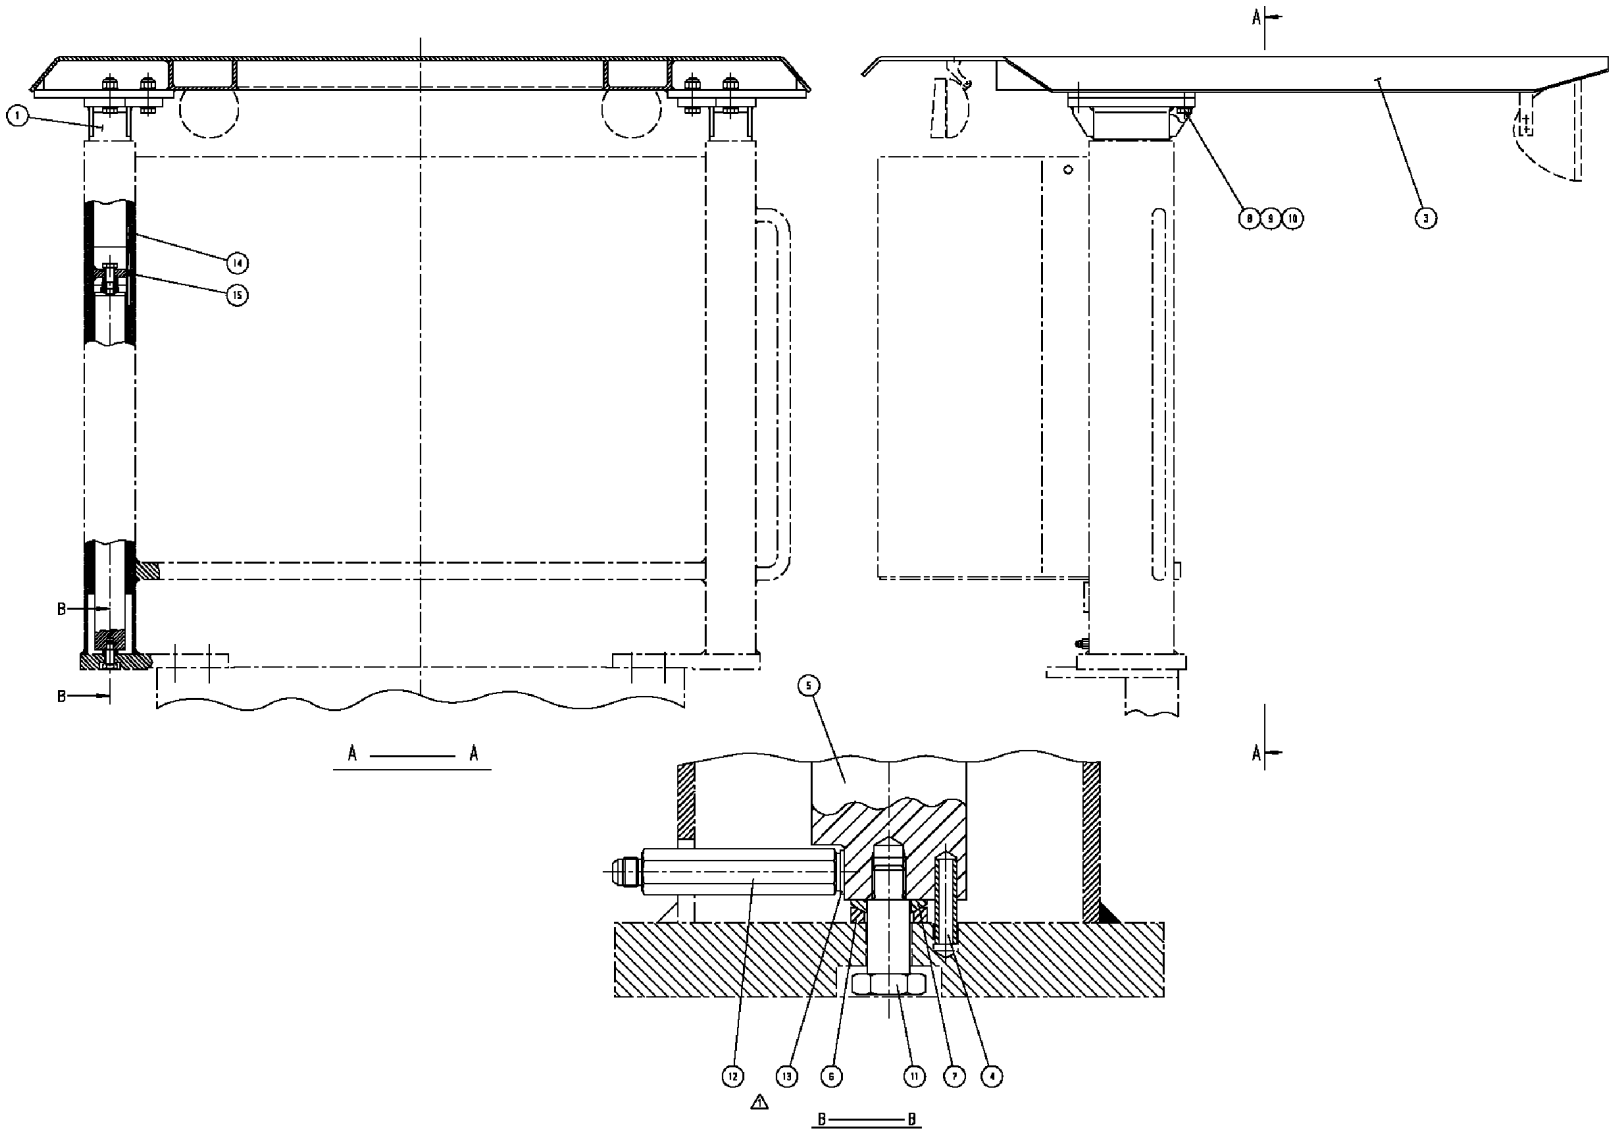

9110 7438 80/1 Ed04

B0000320

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 6736 00	2	INNER TUBE	INNERRÖR		
3	9110 6735 01	1	PROTECTION ROOF	SKYDDSTAK		
4	0108 3392 00	2	SPRING PIN	SPÄNNSTIFT		10 X 40 DIN 7343
5	9126 1580 00	2	HYDR. CYLINDER	HYDRAULCYLINDER	Page 395	
6	0304 1012 00	4	SPERIC WASHER	SFÄRISK BRICKA		23,2 / 36 X 7,5 -DIN 6319
7	0304 1062 00	4	SPERIC WASHER	SFÄRISK BRICKA		21 / 36 X 6,3 - DIN 6319
8	0301 2394 00	16	PLAIN WASHER	RUNDBRICKA		21 / 37 X 3 - HB 200 FZB
9	0291 1128 28	8	LOCK NUT	LÅSMUTTER		M 20 - 8 FZB / ISO 7040
10	0147 1557 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 20 X 80 - 8.8 FZB
11	3217 6993 00	4	SCREW	SKRUV		
12	9110 8324 00	4	NIPPLE	NIPPEL		UNF 9/16-R 1/4
13	0661 1020 00	4	SEAL WASHER	TÄTNINGSBRICKA		13,7 / 20,6 X 2,1 - FZ ST TREDO 1/4
14	9110 8772 00	2	HATCH	LUCKA		
15	0147 1246 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 16 - 8.8 FZB

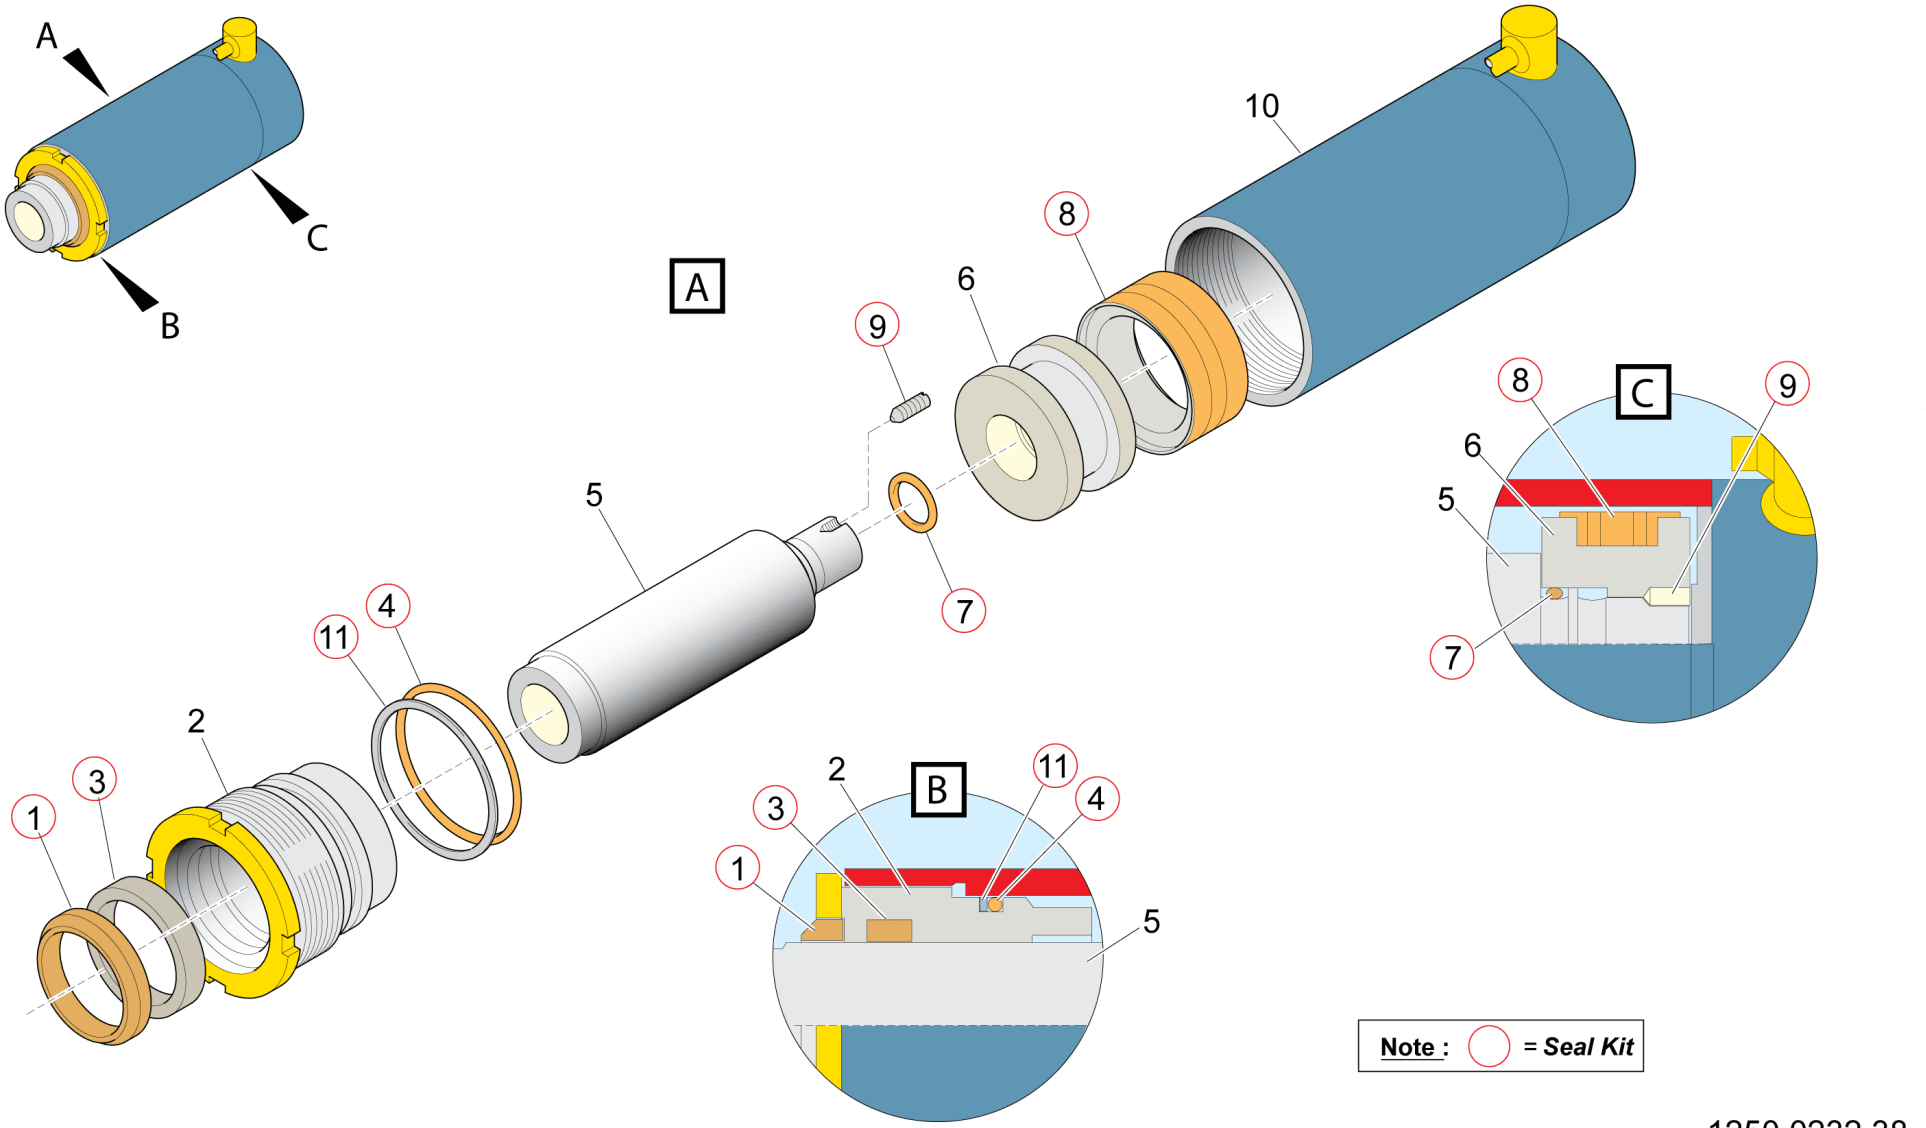


1250 0232 38

B0046923

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9120 0990 09	1	SEALING SET	PACKNINGSSATS		REF.1,3,4,7-9,11
1	0665 9170 01	1	WIPER	AVSTRYKARE		40 / 50 X 7 NBR 90
2	9123 3554 00	1	COVER	LOCK		
3	0665 0010 14	1	SEAL RING	TÄTNINGSRING		STEFA 40/50 X 10,5 S11EI
4	0663 6135 00	1	O-RING	O-RING		54,5 X 3 70 SHORE
5	9126 1581 00	1	PISTON ROD	KOLVSTÅNG		STROKE LENGTH 700
6	9124 9565 00	1	PISTON	KOLV		
7	0663 6127 00	1	O-RING	O-RING		22,1 X 1,6 70 SHORE
8	0665 0020 18	1	PISTON SEAL	KOLVTÄTNING		SKEGA 63 / 47 / 51 7045
9	0196 1203 00	1	SET SCREW	STOPPSKRUV		M 5 X 8 SK6SS DIN 916
11	0661 1500 66	1	BACK-UP RING	STÖDRING		58 63 2,5 1,3

WARNING SIGNS / VARNINGSSKYLTAR

Fig. 1 of 2

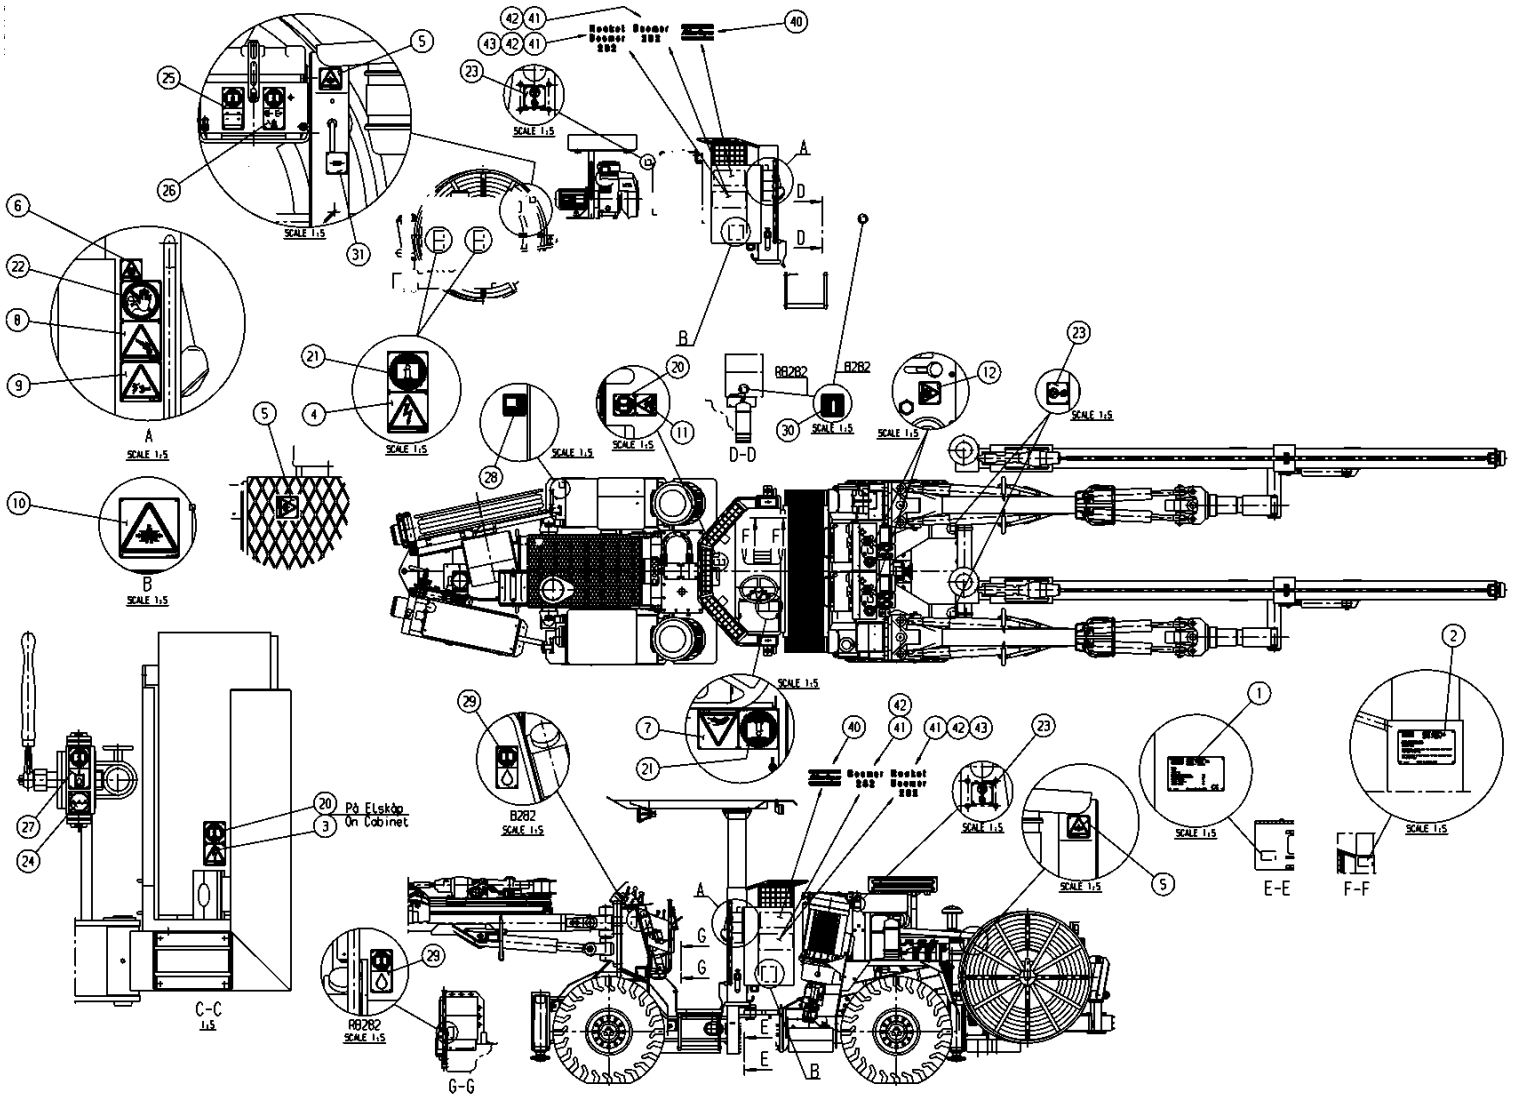


9106 1682 00 Ed01

B0012281

WARNING SIGNS / VARNINGSSKYLTAR


Fig. 2 of 2

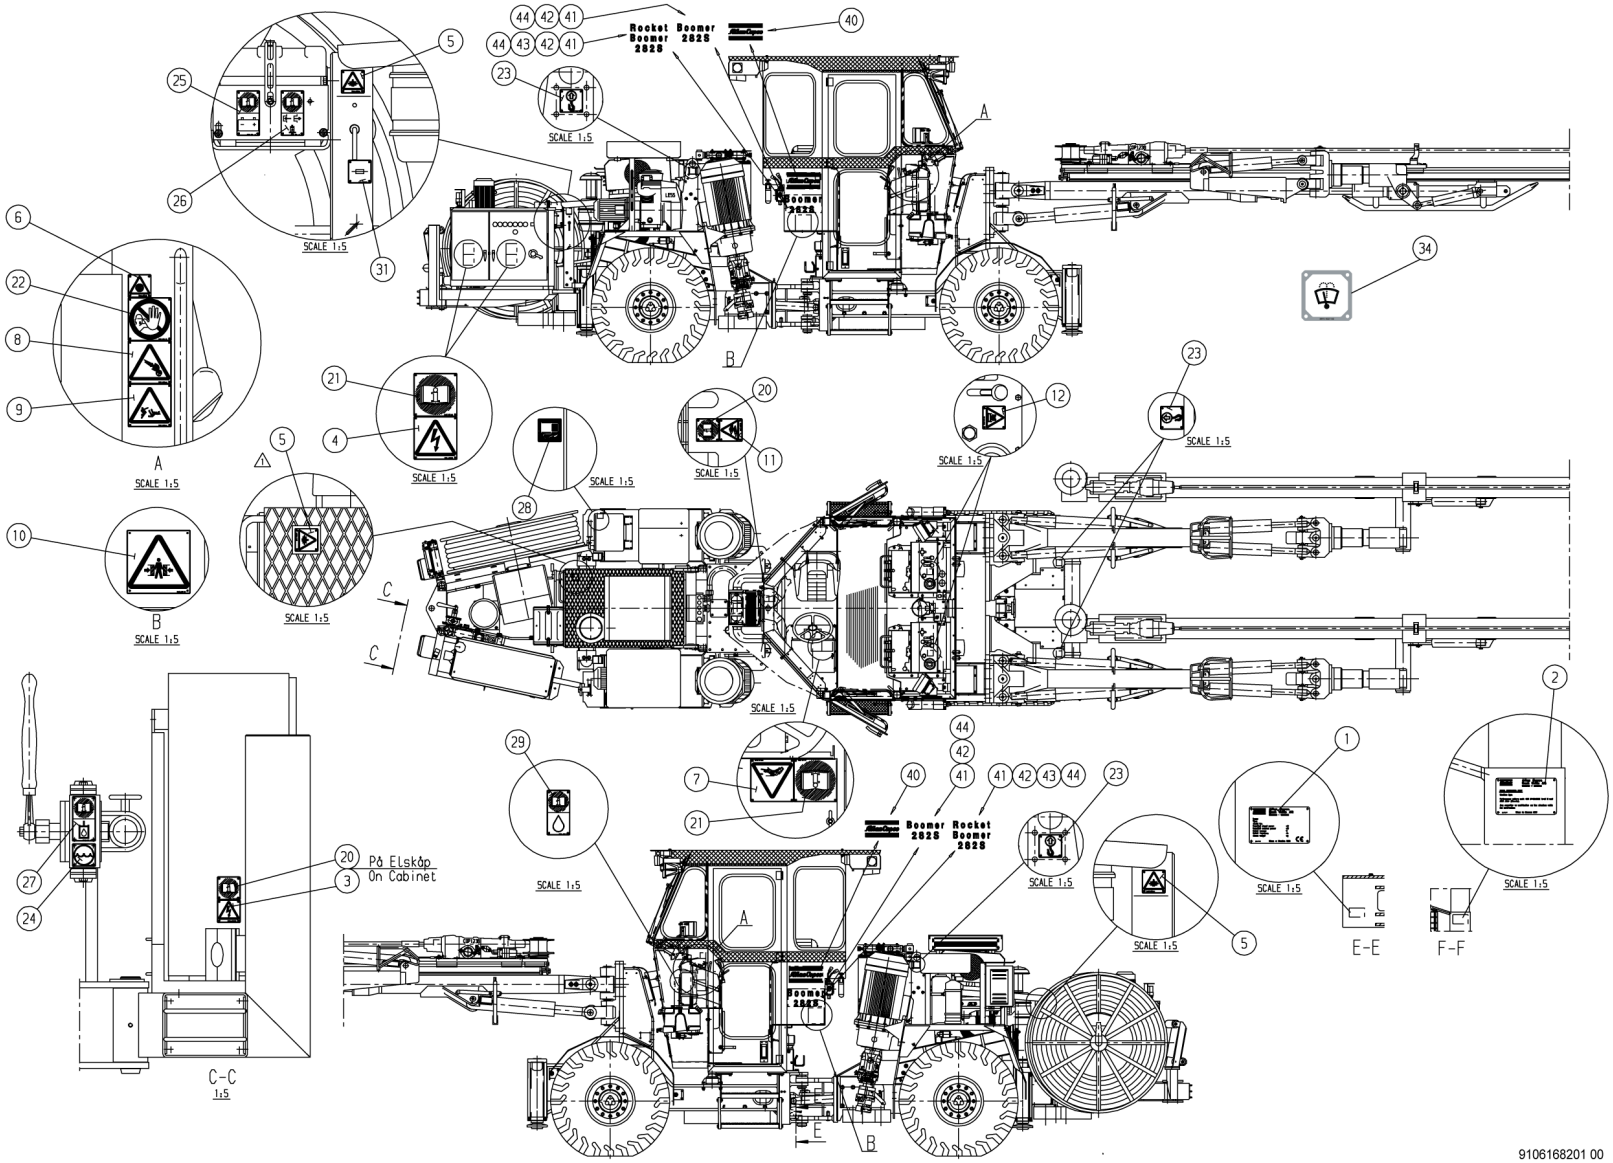

WARNING SIGNS / VARNINGSSKYLTAR

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1071 94	1	DATA PLATE CE	DATASKYLT CE		
1	9106 1071 95	1	DATA PLATE	DATASKYLT		DATA PLATE
2	5112 3054 00	1	PLATE	SKYLT		
3	9106 1073 00	1	ELECTRIC. SHOCK	ELEKTRISK STÖT		WARNING SIGN
4	9106 1073 01	2	ELECTRIC. SHOCK	ELEKTRISK STÖT		
5	9106 1073 04	3	RISK OF CRUSH.	KLÄMRISK		
6	–	2	HIGH SOUND LEV.	HÖG LJUDNIVÅ		
7	9106 1073 09	1	TIPPING HAZ. TR	TIPPRISK TRANS.		
8	9106 1073 13	2	FALLING BOOM	FALLANDE BOM		
9	9106 1073 14	2	WARNING SIGN	VARNINGSSKYLT		
10	9106 1073 16	2	RISK OF CRUSH.	KLÄMRISK		
11	9106 1073 21	1	TIPP. HAZ. DOWN	TIPPRISK NEDFÖR		
12	9106 1073 26	2	TIPPING HAZ. DR	TIPPRISK BORRN.		
20	–	2	READ INSTR.BOOK	LÄS INSTR.BOK		SYMBOL
21	9106 1071 01	3	READ INSTR.BOOK	LÄS INSTR.BOK		
22	9106 1071 03	2	NO ADMITTANCE	TILLTRÄDE FÖRB.		
23	9106 1071 06	4	SIGN	SKYLT		
24	9106 1071 07	1	SYMBOL PLATE	SYMBOLSKYLT		
25	9106 1071 11	1	WELDING INSTR.	SVETSINSTRUKT.		
26	9106 1071 12	1	BATTERY SWITCH	BATTERIFR.SKILJ		
27	9106 1071 13	1	LABEL	DEKAL		HYD.OLJA/INSTR.BOK
28	9106 1071 15	1	FUEL	BRÄNSLE		SYMBOL 57 X 57
29	9106 1071 27	1	LUBRICATING OIL	SMÖRJOLJA		
30	9106 1071 32	1	PLATE	SKYLT		
31	9106 1071 93	1	PLATE	SKYLT		
32	8915 0025 73	2	INFORMATION LAB	INFORMATIONSSKY		I FIRE EXTINGUISHER READ
33	9106 1071 09	1	SYMBOL PLATE	SYMBOLSKYLT		
34	8915 0027 02	1	INFO SIGN	INFOSKYLT		SPOLARVATTEN

WARNING SIGNS / VARNINGSSKYLTAR

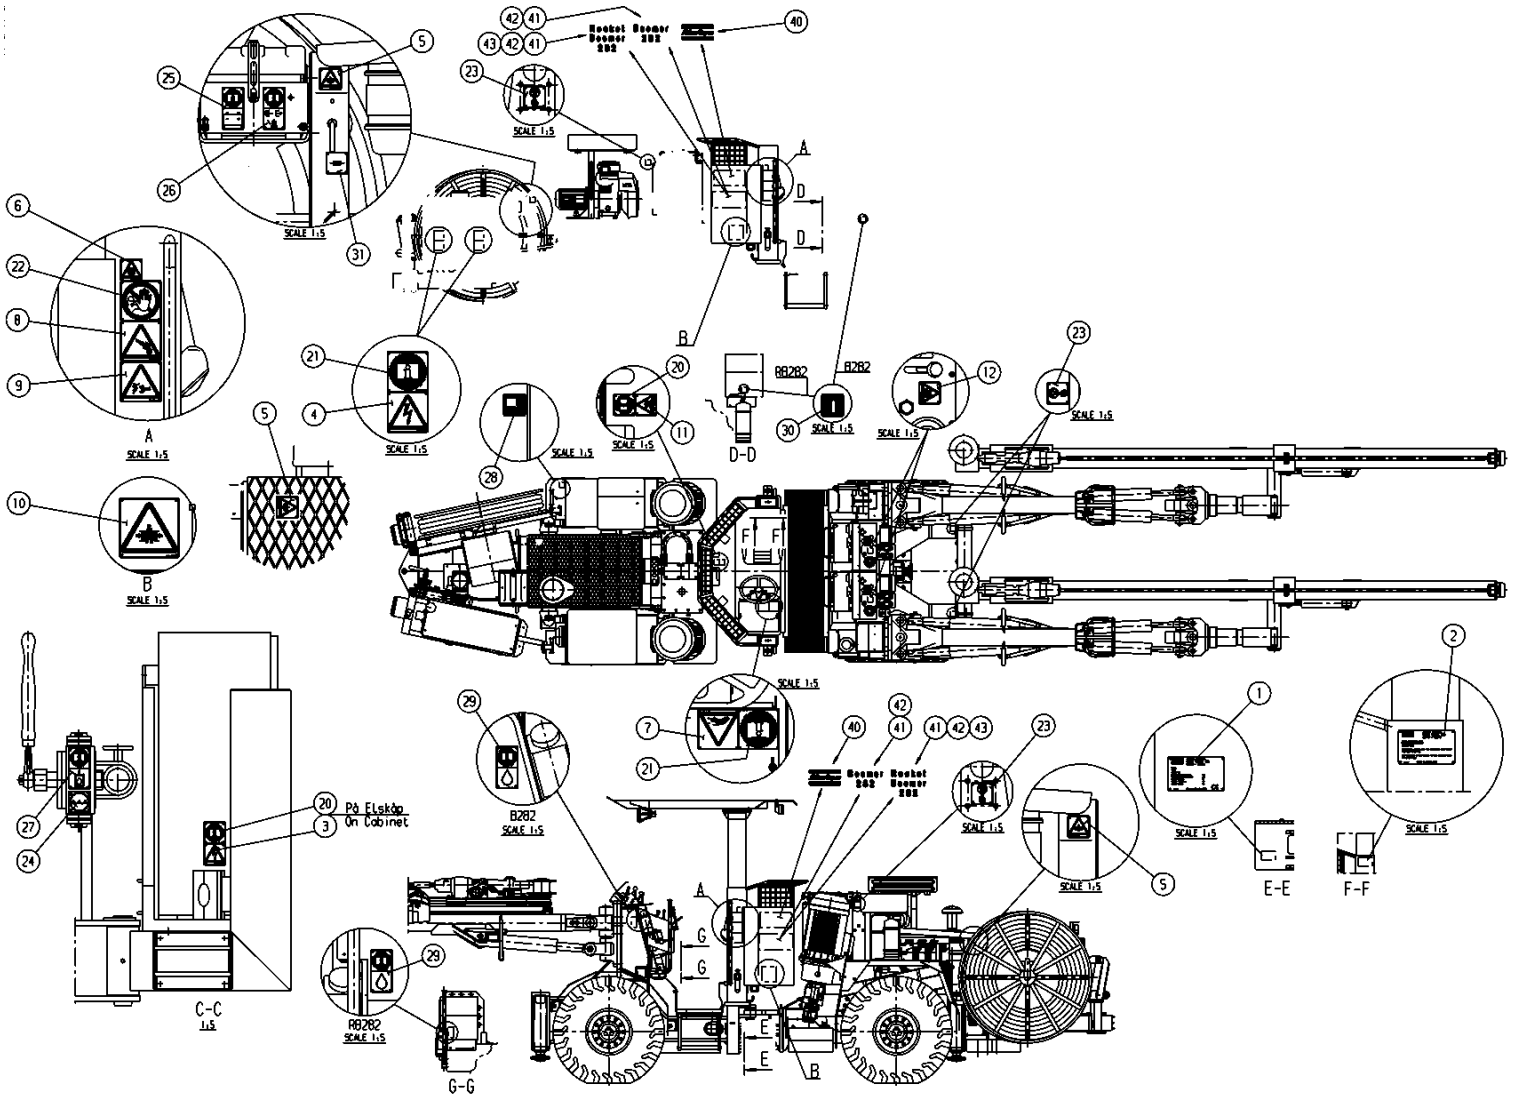


9106 1682 00 Ed01


B0012281

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
40	0690 1132 02	2	LOGOTYPE LABEL	LOGOTYPMÄRKE		320X160
41	9106 1427 41	2	PLATE	SKYLT		
42	9106 1427 52	2	SIGN	SKYLT		

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3049 30	1	FIRE EXTING.SET	ELDSLÄCKN.SATS	Page 405	ANSUL SYSTEM
2	–	1	CONNECTION SET	ANSLUTNINGSSATS	Page 411	ANSUL
3	–	1	HOSE SET	SLANGSATS	Page 413	ANSUL

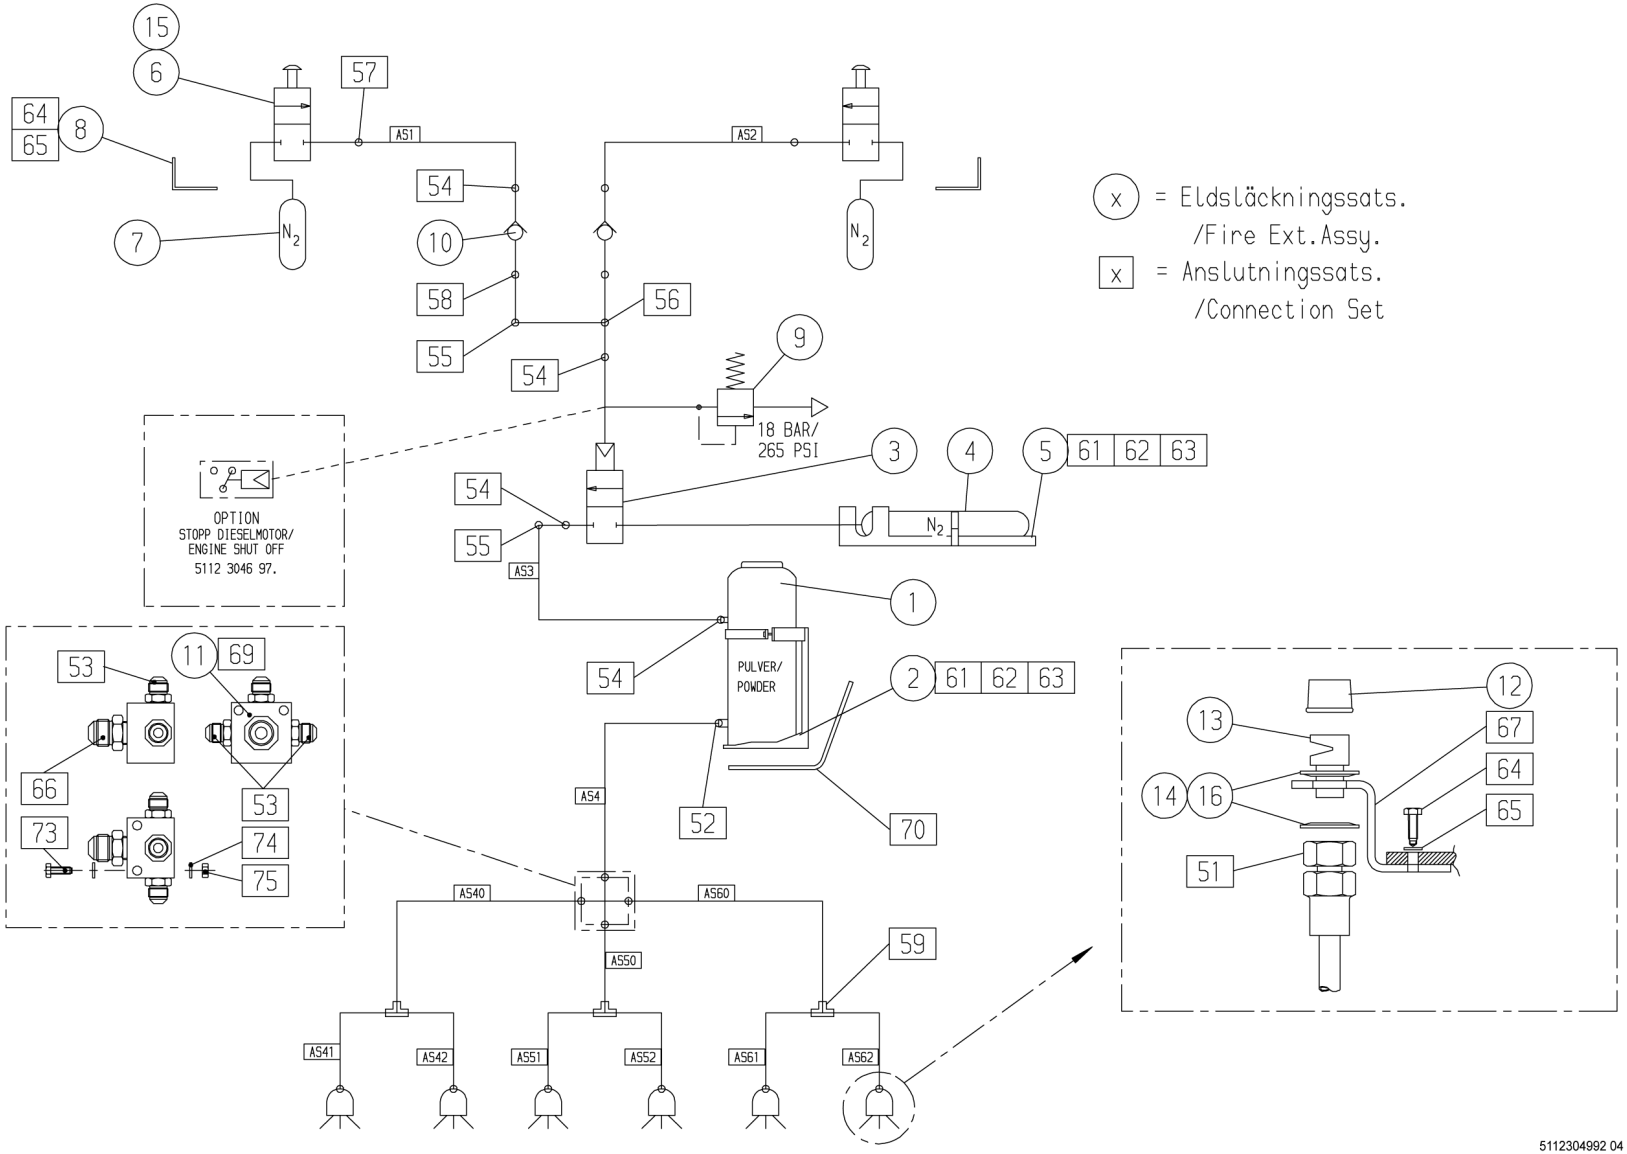
(x) = Eldsläckningssats.
/Fire Ext.Assy.
[x] = Anslutningssats.
/Connection Set
OPTION
STOPP DIESELMOTOR/
ENGINE SHUT OFF
5112 3046 97.
18 BAR/
265 PSI
PULVER/
POWDER
AS1
AS2
AS3
AS40
AS41
AS42
AS50
AS51
AS52
AS54
AS60
AS61
AS62
5112304992 04

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3218 2008 28	1	TANK	TANK		INCL. ATTACHMENT
2	3217 9316 42	1	ATTACHMENT	FÄSTE		LT-A-101-30
3	5112 3171 40	1	TRIGGER	UTLÖSARE		
4	–	1	GAS CARTRIDGE	GASPATRON		
5	3217 9316 44	1	ATTACHMENT	FÄSTE		
6	3217 9316 18	2	TRIGGER	UTLÖSARE		
7	3217 9316 19	2	GAS CARTRIDGE	GASPATRON		
8	3217 9316 28	2	ATTACHMENT	FÄSTE		
9	3217 9316 02	1	SAFETY VALVE	SÄKERHETSVENTIL		
10	3217 9316 24	2	CHECK VALVE	BACKVENTIL		
11	3217 9316 30	1	BRANCH BLOCK	FÖRGREN.BLOCK		
13	3217 9316 11	6	NOZZLE	MUNSTYCKE	Page 407	
14	3217 9316 14	12	LOCK WASHER	LÅSBRICKA		
15	–	2	SEAL	PLOMB	Page 409	
16	5112 3049 08	6	GUIDE DISC	RIKTSKIVA		T V-MUNSTYCKE

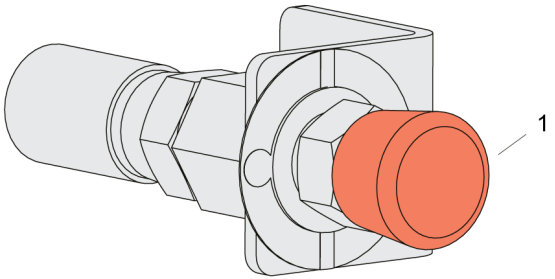


Part of 5112010682 05

B0060308

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3049 06	1	CAP	HUV		

SEAL / PLOMB


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3218 2008 31	1M	SEAL	PLOMB		
2	3218 2008 32	0.20M	STEEL WIRE	STÅLTRÅD		

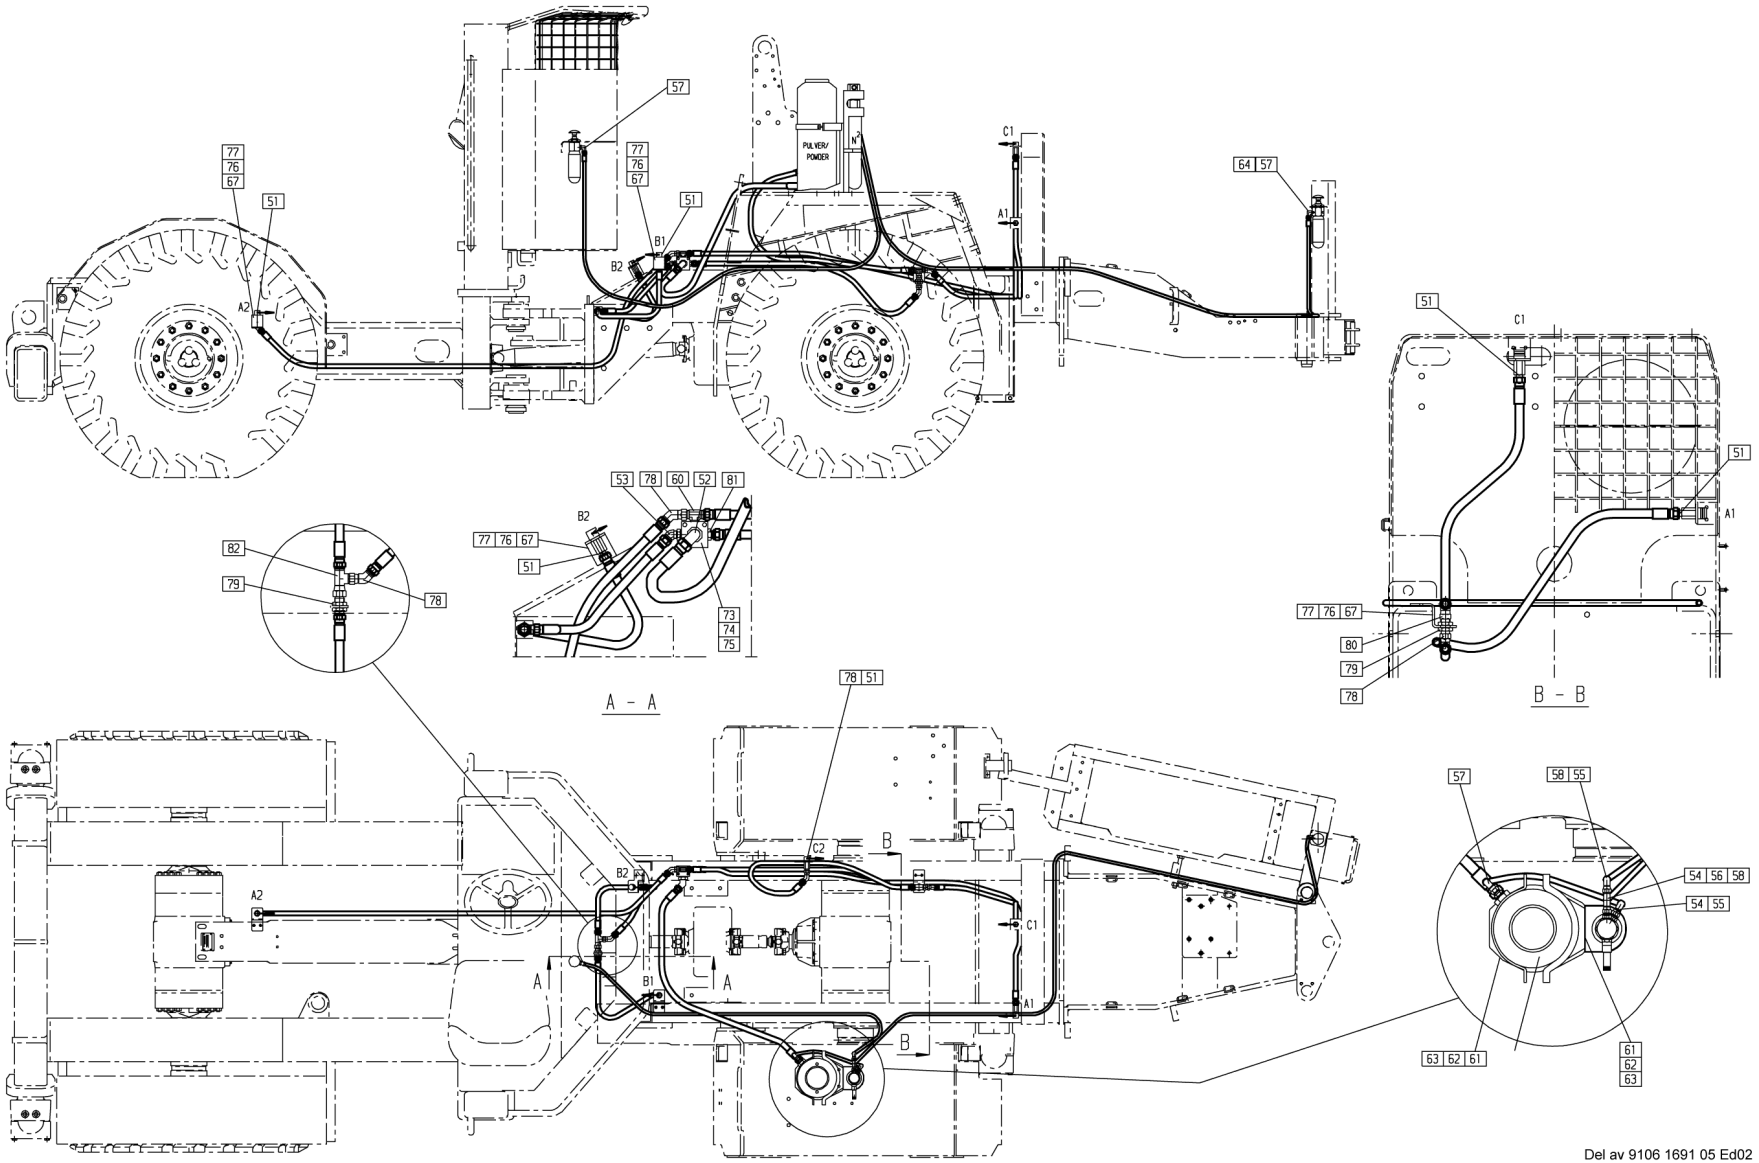

Del av 9106 1691 05 Ed02


B0041310

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
51	3176 6527 00	6	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
52	3176 6550 00	1	ELBOW	RÖRVINKEL		UN 1 1/16
53	3176 6562 00	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
54	3176 0064 00	4	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
55	3715 0584 00	2	ELBOW NIPPLE	VINKELNIPPEL		UNF 9/16 - UNF 9/16
56	3176 5427 00	1	NIPPLE	NIPPEL		UNF 9/16
57	3176 0063 00	3	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
58	3177 0074 13	2	CROSSING NIPPLE	ÖVERGÅNGSNIPPEL		UNF 9/16 - NPTF 1/4
60	3176 1523 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
61	0147 1362 03	12	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
62	0301 2344 00	24	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
63	0291 1128 20	12	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
64	0226 0307 00	14	TAPPING SCREW	GÄNGANDE SKRUV		M6SF M 6 X 20 STEEL FZB
65	0301 2321 00	12	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
66	5500 5110 00	1	PIPE CONNECTION	RÖRANSLUTNING		CONNECTOR (PIPE/JIC)BULKH
67	5112 3049 11	4	ATTACHMENT	FÄSTE		
69	5112 0107 19	1	ATTACHMENT	FÄSTE		
70	3176 6539 00	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
73	0147 1326 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 30 - 8.8 FZB
74	0301 2335 00	4	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
75	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
76	0147 1249 03	12	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 25 - 8.8 FZB
77	0291 1128 15	12	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
78	3176 6549 00	6	NIPPLE	NIPPEL		UNF 7/8
79	3176 6498 00	2	NIPPLE	NIPPEL		UNF 7/8
80	3176 6036 00	1	NIPPLE	NIPPEL		UNF 7/8
81	3176 1508 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
82	3176 6590 00	1	NIPPLE	NIPPEL		UNF 7/8 T- /SVIVELNUT

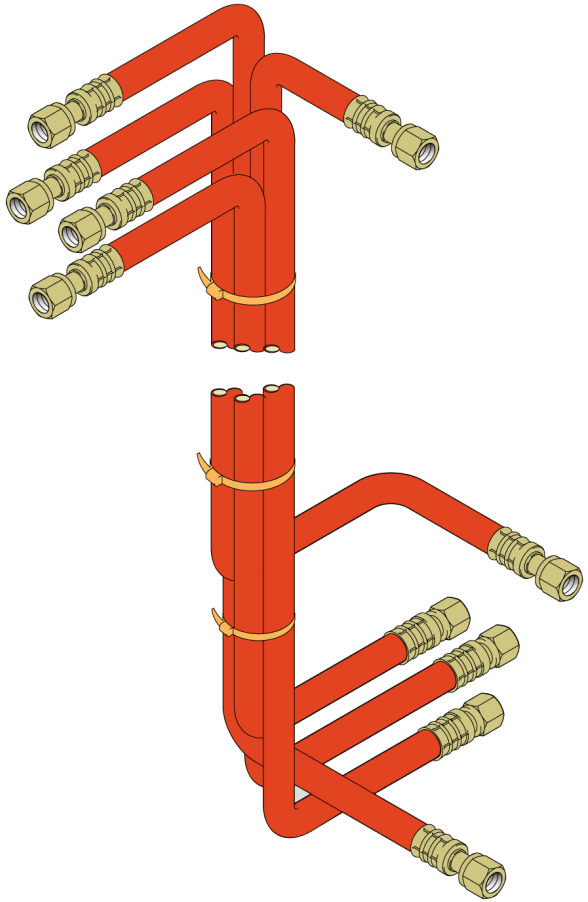

B0042983

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
AS1	0574 0068 08	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5500 R1T RÖD
AS2	0574 0068 42	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4500 R1T RÖD
AS3	0574 0068 03	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R1T RÖD
AS4	0574 0068 36	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R1T RÖD
AS41	0574 0068 29	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2500 R1T RÖD
AS42	0574 0068 28	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2400 R1T RÖD
AS50	0574 0068 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 500 R1T RÖD
AS51	0574 0068 13	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 700 R1T RÖD
AS52	0574 0068 13	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 700 R1T RÖD
AS60	0574 0068 17	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1100 R1T RÖD
AS61	0574 0068 18	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1200 R1T RÖD
AS62	0574 0068 17	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1100 R1T RÖD

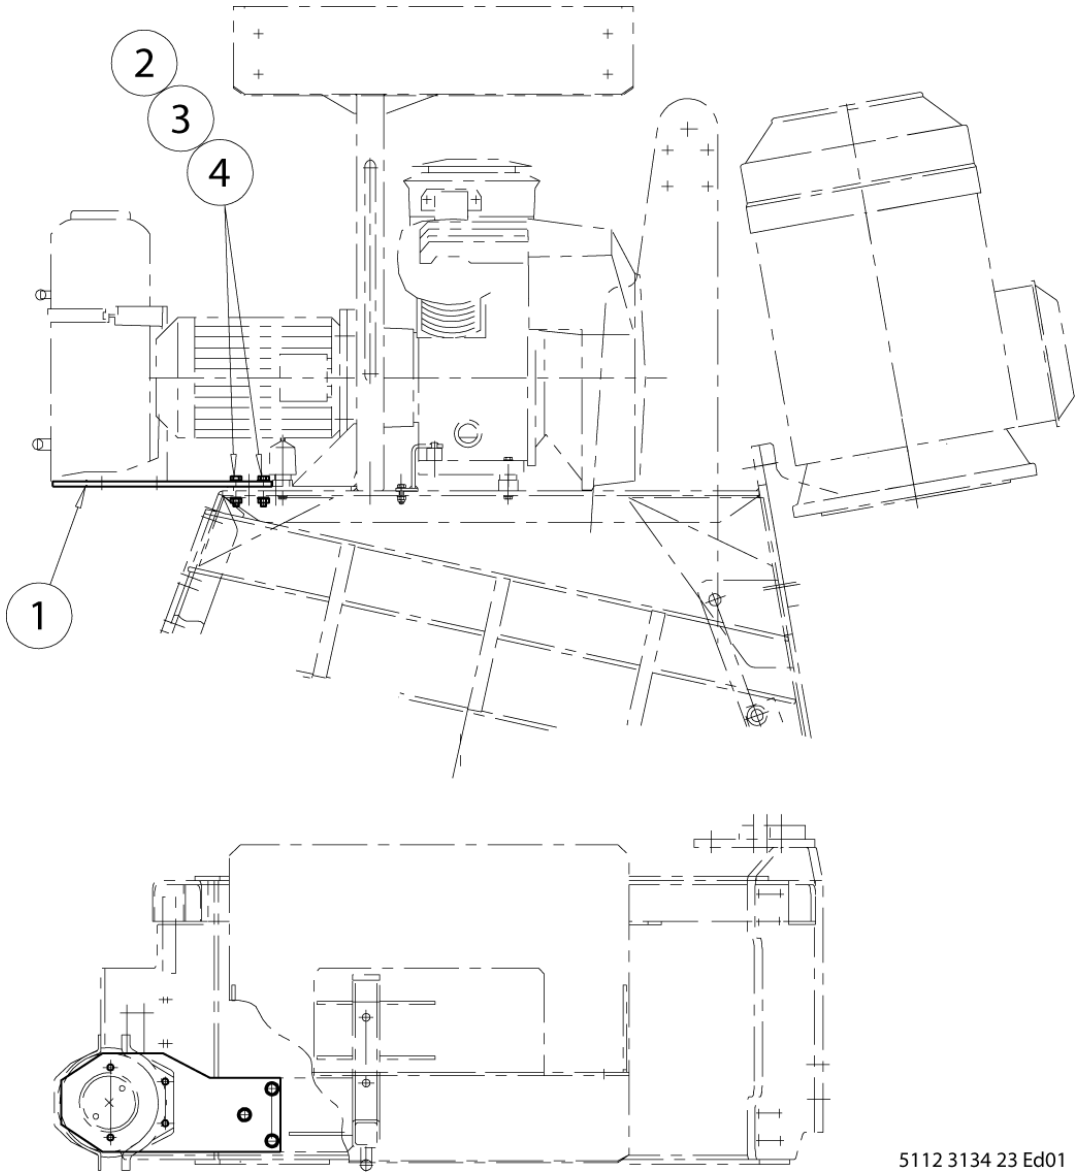


5112 3134 23 Ed01

B0015094

ASSEMBLY SET / MONTERINGSSATS

ANSUL

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3134 22	1	ATTACHMENT	FÄSTE		
2	0147 1365 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 40 - 8.8 FZB
3	0291 1128 20	3	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
4	0301 2344 00	6	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
5	3217 9316 28	1	ATTACHMENT	FÄSTE		

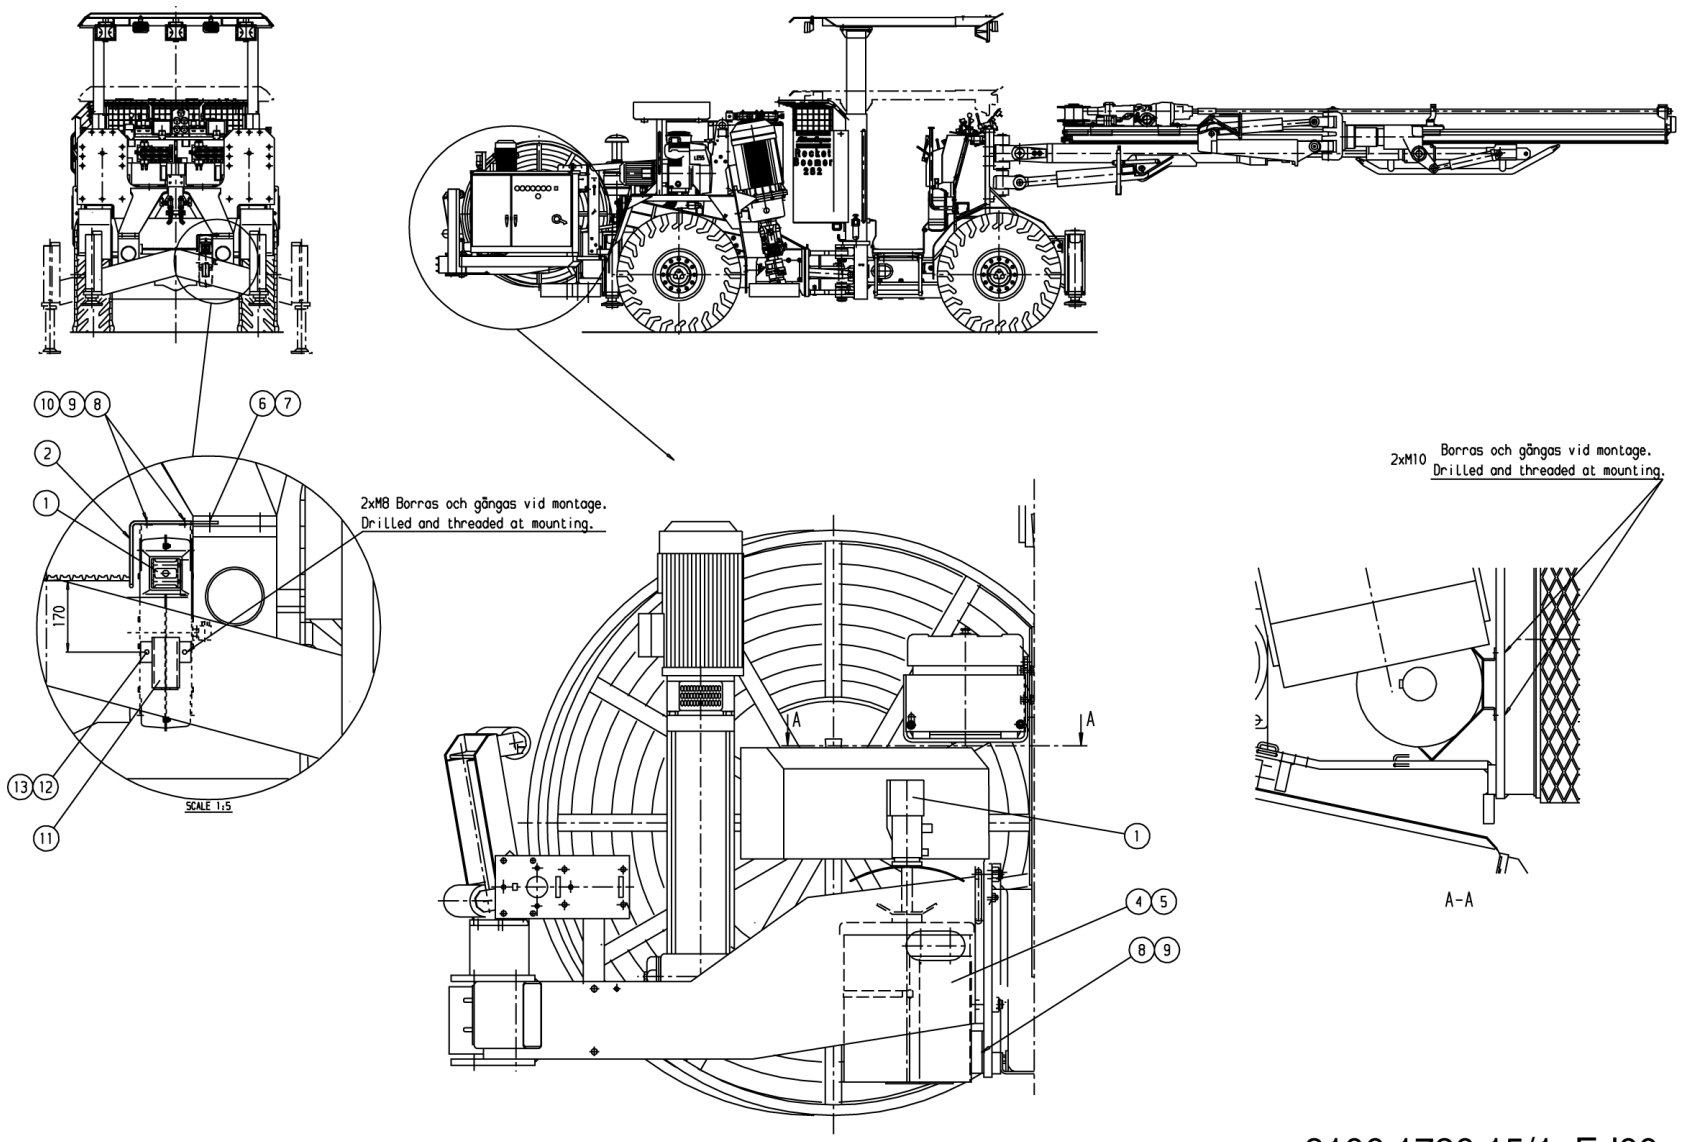


9106 1726 15/1 Ed00

B0011185

MAN.GREASE SYST / MAN.FETTSMÖRJN.


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	MAN.GREASE SYST	MAN.FETTSMÖRJN.	Page 419	
3	–	1	HOSE SET	SLANGSATS	Page 425	
5	9110 9787 23	1	HOLDER	HÅLLARE		
6	0147 1398 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 20 - 8.8 FZB
7	0301 2358 00	2	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
8	0147 1360 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
9	0291 1128 20	4	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
10	0301 2344 00	10	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
11	–	1	HOLDER	HÅLLARE		
12	0147 1322 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
13	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB

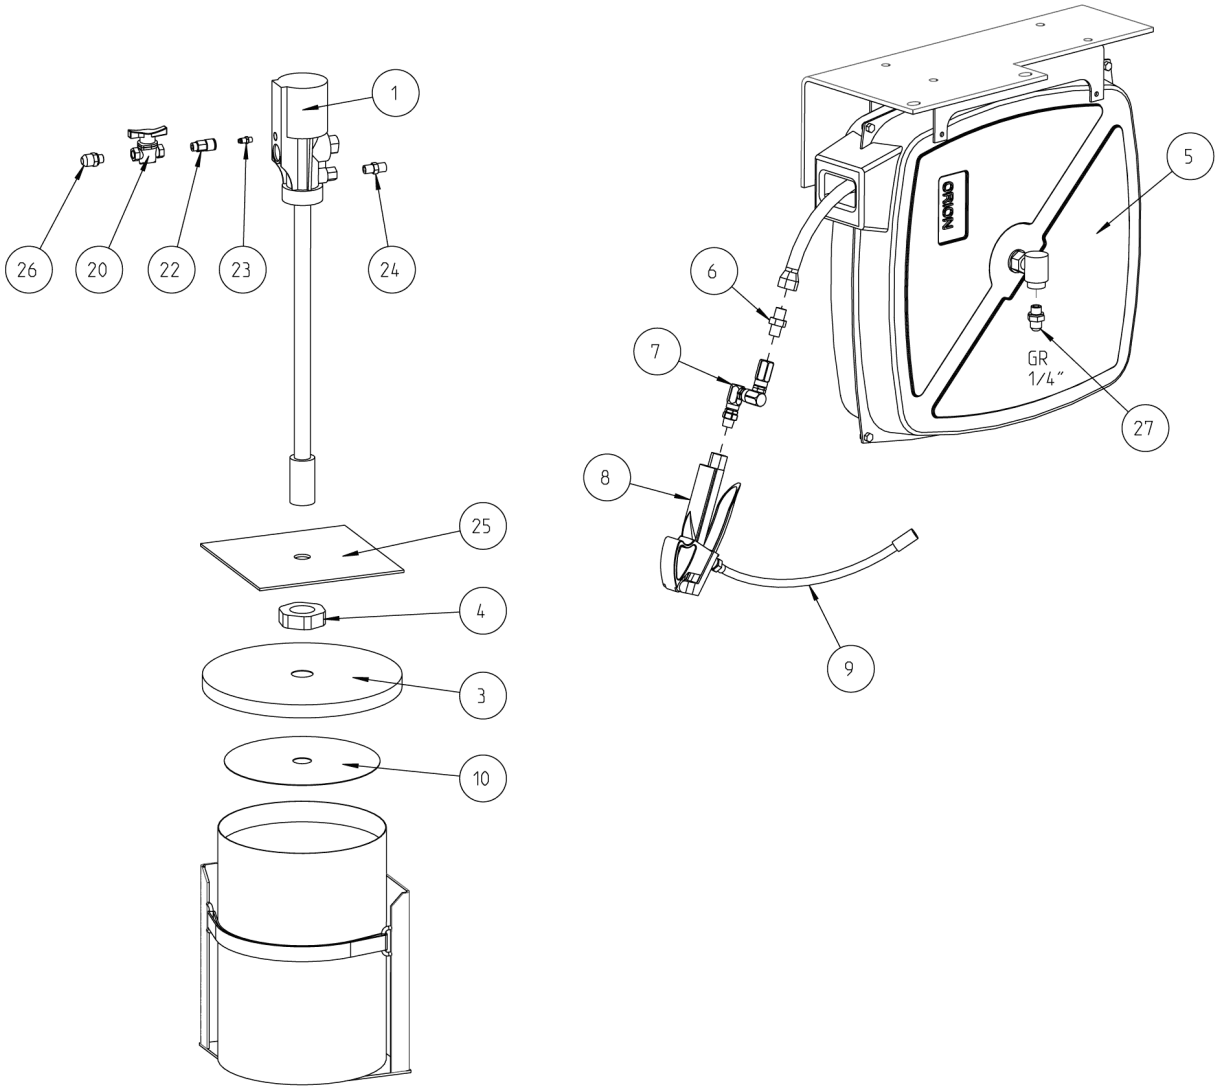

3217 9766 51 Ed00

B0039885

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9766 01	1	DRUM PUMP	FATPUMP	Page 421	
3	3217 9766 03	1	COVER	LOCK		
4	3217 9766 15	1	ADAPTER	FÖRSKRUVNING		
5	3217 9783 03	1	HOSE REEL	SLANGVINDA		
6	–	1	BUSHING	BUSSNING		
7	3217 9766 10	1	SWIVEL	SVIVEL		
8	3217 9766 12	1	LUBR. VALVE	SMÖRJVENTIL		
9	3217 9766 11	1	EXTENSION	FÖRLÄNGNING		
10	3217 9766 16	1	COVER	LOCK		
20	8202 0301 05	1	BALL VALVE	KULVENTIL		BAL 08
22	8202 1300 38	1	QUICK COUPLING	SNABBKOPPLING		QIC 08 M08
23	8202 1205 59	1	QUICK COUPLING	SNABBKOPPLING		NIP 08 M08
24	3216 7882 00	1	NIPPLE	NIPPEL		
25	9106 0790 12	1	RUBBER CLOTH	GUMMIDUK		
26	3176 6511 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/4
27	3176 6348 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4

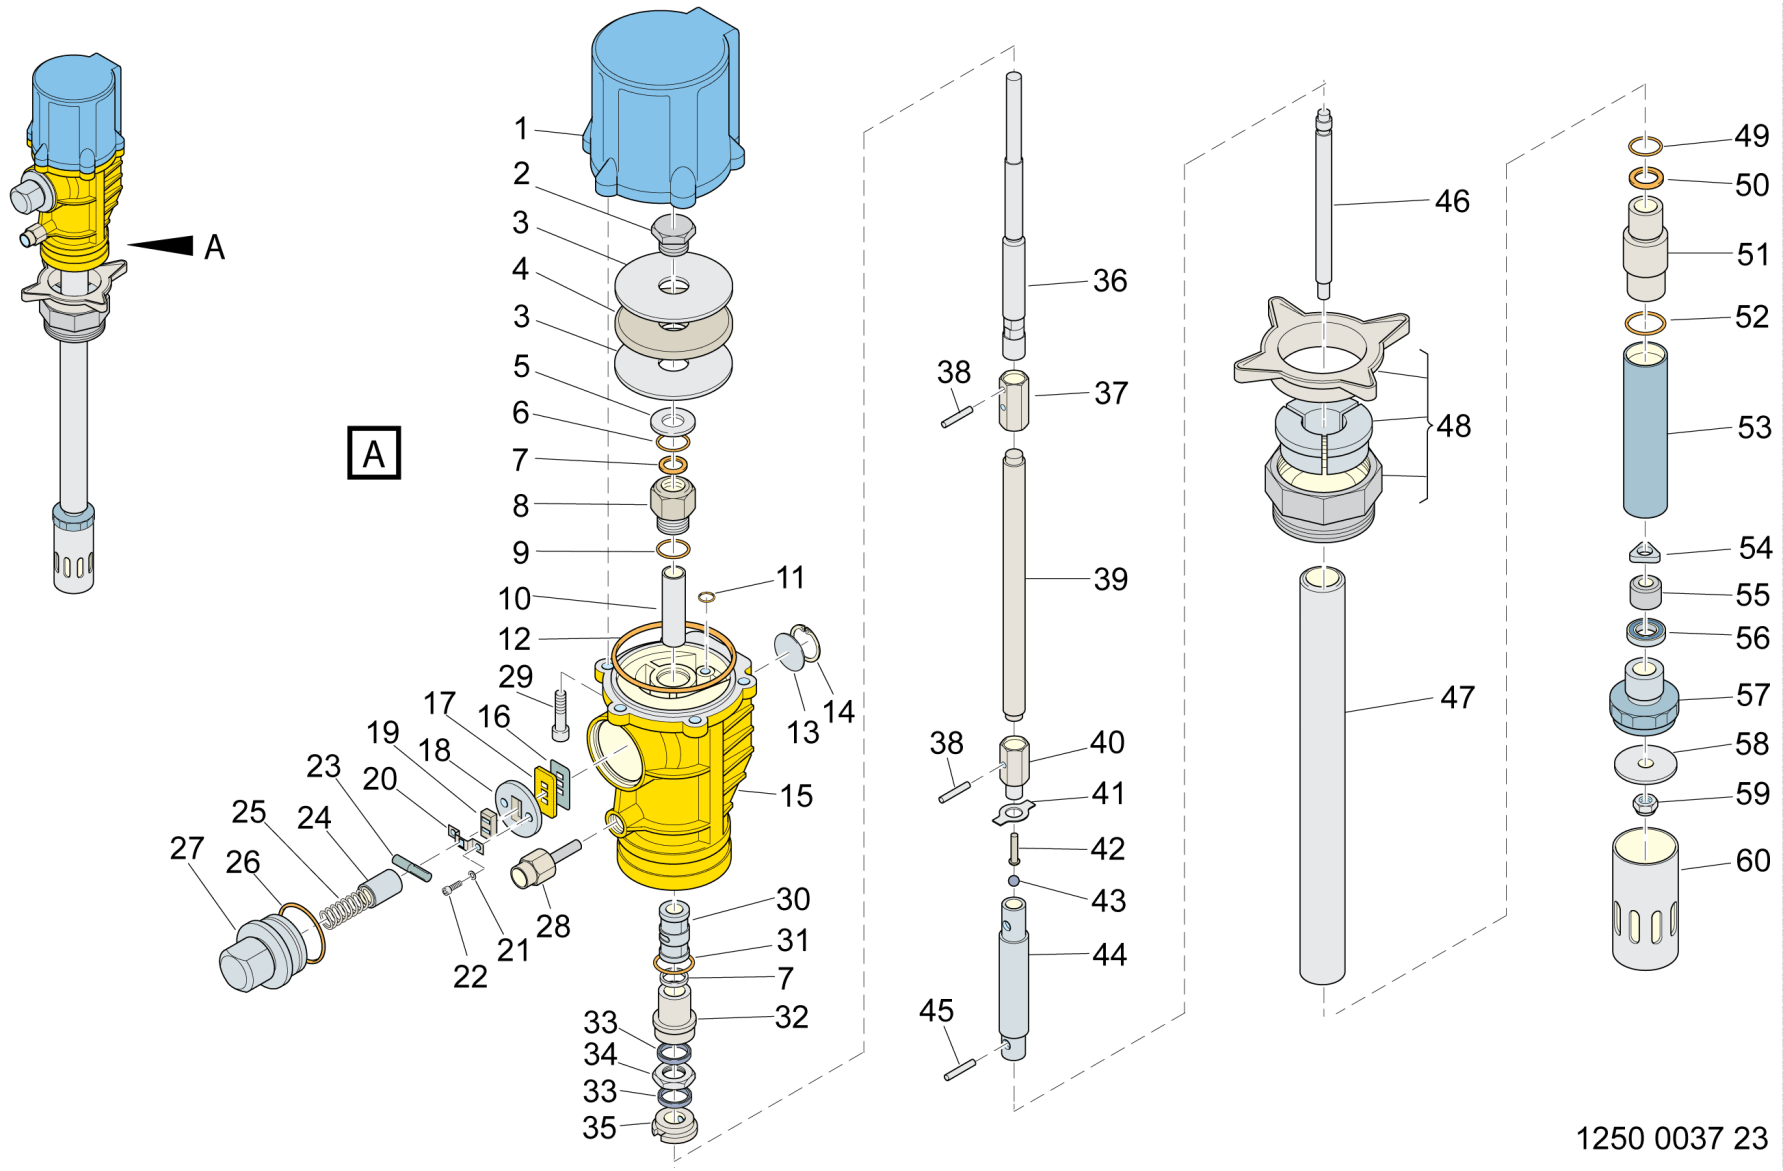
A
A
1
2
3
4
3
5
6
7
8
9
10
12
29
17
16
19
18
23
20
25
24
27
26
22
21
28
11
13
14
15
30
31
7
32
33
34
33
35
36
38
37
39
38
40
41
42
43
44
45
46
48
47
49
50
51
52
53
54
55
56
57
58
59
60
1250 0037 23

B0039854


(Sheet 1 of 3)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3217 9766 13	1	VALVE	VENTIL		INCL.POS.38(3X),41-43,46,54-56
	3217 9766 14	1	VALVE	VENTIL		INCL.POS.38,41-45,49-52
	9106 1331 00	1	SEALING SET	PACKNINGSSATS		INCL.POS.6,7,11,12,26,31,32, 33(2X),34,35
	9106 1331 01	1	REPAIR KIT	RENOVERINGSSATS		INCL.POS.3(2X),4,6,7,9,11,12, 16-26,30,31
1	–	1	COVER	LOCK		NOT SOLD SEPARATELY
2	–	1	SCREW	SKRUV		NOT SOLD SEPARATELY
3	–	2	WASHER	BRICKA		NOT SOLD SEPARATELY
4	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY
5	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY
6	–	1	SEAL RING	TÄTNINGSRING		NOT SOLD SEPARATELY
7	–	1	SEAL RING	TÄTNINGSRING		NOT SOLD SEPARATELY
8	–	1	PIN	TAPP		NOT SOLD SEPARATELY
9	–	1	RING	RING		NOT SOLD SEPARATELY
10	–	1	TUBE	RÖR		NOT SOLD SEPARATELY
11	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
12	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
13	–	1	COVER	LOCK		NOT SOLD SEPARATELY
14	–	1	LOCK RING	LÅSRING		NOT SOLD SEPARATELY
15	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
16	–	1	SHIM	SHIMS		NOT SOLD SEPARATELY
17	–	1	PLATE	PLATTA		NOT SOLD SEPARATELY
18	–	1	MANIFOLD	ANSLUTN.BLOCK		NOT SOLD SEPARATELY
19	–	1	ADAPTER	ADAPTER		NOT SOLD SEPARATELY
20	–	1	HOLDER	HÅLLARE		NOT SOLD SEPARATELY
21	–	2	WASHER	BRICKA		NOT SOLD SEPARATELY
22	–	2	SCREW	SKRUV		NOT SOLD SEPARATELY
23	–	1	PIN	PINNE		NOT SOLD SEPARATELY
24	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
25	–	1	SPRING	FJÄDER		NOT SOLD SEPARATELY
26	–	1	O-RING	O-RING		NOT SOLD SEPARATELY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
27	–	1	PLUG	PLUGG		NOT SOLD SEPARATELY
28	–	1	VALVE	VENTIL		NOT SOLD SEPARATELY
29	–	1	SCREW	SKRUV		NOT SOLD SEPARATELY
30	–	1	GUIDE SLEEVE	STYRHYLSA		NOT SOLD SEPARATELY
31	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
32	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
33	–	2	SEAL	TÄTNING		NOT SOLD SEPARATELY
34	–	1	NUT	MUTTER		NOT SOLD SEPARATELY
35	–	1	ATTACHMENT LUG	FÄSTÖRA		NOT SOLD SEPARATELY
36	–	1	SHAFT	AXEL		NOT SOLD SEPARATELY
37	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
38	–	1	LOCKING CLIP	LÅSSPRINT		NOT SOLD SEPARATELY
39	–	1	SHAFT	AXEL		NOT SOLD SEPARATELY
40	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
41	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY
42	–	1	PIN	PINNE		NOT SOLD SEPARATELY
43	–	1	BALL	KULA		NOT SOLD SEPARATELY
44	–	1	SHAFT	AXEL		NOT SOLD SEPARATELY
45	–	1	LOCKING CLIP	LÅSSPRINT		NOT SOLD SEPARATELY
46	–	1	SHAFT	AXEL		NOT SOLD SEPARATELY
47	–	1	TUBE	RÖR		NOT SOLD SEPARATELY
48	3217 9766 15	1	ADAPTER	FÖRSKRUVNING		
49	–	1	SEAL RING	TÄTNINGSRING		NOT SOLD SEPARATELY
50	–	1	SEAL RING	TÄTNINGSRING		NOT SOLD SEPARATELY
51	–	1	CYLINDER	CYLINDER		NOT SOLD SEPARATELY
52	–	1	SEAL RING	TÄTNINGSRING		NOT SOLD SEPARATELY
53	–	1	TUBE	RÖR		NOT SOLD SEPARATELY
54	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY
55	–	1	VALVE UNIT	VENTILENHET		NOT SOLD SEPARATELY
56	–	1	VALVE SEAT	VENTILSÄTE		NOT SOLD SEPARATELY
57	–	1	INLET UNIT	INLOPPSENHET		NOT SOLD SEPARATELY
58	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
59	–	1	NUT	MUTTER		NOT SOLD SEPARATELY
60	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY

HOSE SET / SLANGSATS

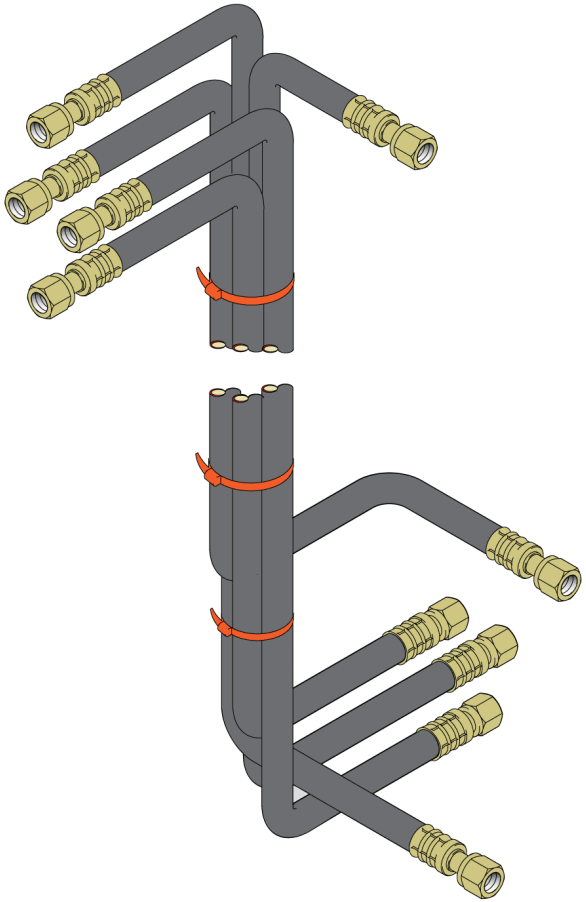

B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
GR1	0574 0296 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 7000 R2AT
L20	3176 5682 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3000 R2AT


BOOM / BOM
LIST OF CONTENTS


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	BOOM	BOM	433	
3128 3144 26	– BASIC BOOM	– GRUNDBOM	435	BUT 28 RIGHT VER G
–	– – BOOM PART	– – BOMDEL	437	
3128 2800 31	– – – BOOM ATTACHMENT	– – – BOMFÄSTE	439	
3128 2800 36	– – – BOOM LINK	– – – BOMLÄNK	441	
3128 3146 72	– – – CYLINDER LINK	– – – CYLINDERLÄNK	443	
3128 3154 51	– – – SHAFT COMPL.	– – – AXEL KOMPL.	445	
3125 4946 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	447	
3125 1981 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	449	
3125 1981 81	– – – EXPANDING SHAFT	– – – EXP.AXEL	451	
3128 3080 39	– – – BOOM	– – – BOM	453	
9106 0630 10	– – – – DOUBLE CH.VALVE	– – – – HYDRAULLÅS	455	
9106 0630 11	– – – – DOUBLE CH.VALVE	– – – – HYDRAULLÅS	457	
9121 7032 00	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	459	BOOM CYL. REAR HC09 125/85/536
8231 1202 86	– – – – CHECK VALVE	– – – – BACKVENTIL	461	
3125 4968 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	463	
–	– – – TELESCOPE SET	– – – TELESKOPSATS	465	
3128 2592 42	– – – – HYDR. CYLINDER	– – – – HYDRAULCYLINDER	467	
3125 4944 86	– – – – BEARING HOUSING	– – – – LAGERHUS	469	
–	– – BOOM PART	– – BOMDEL	471	
–	– – – BOOM ATTACHMENT	– – – BOMFÄSTE	473	
3128 2800 07	– – – LINK	– – – LÄNK	475	
3125 1974 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	477	
3125 1982 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	479	
3125 4937 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	481	
3128 2172 03	– – – CYLIND.BRACKET	– – – CYLINDERFÄSTE	483	

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
9121 7017 02	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	485	
8231 1202 86	– – – – CHECK VALVE	– – – – BACKVENTIL	461	
8231 1203 06	– – – – OVERCENT.VALVE	– – – – LASTHÅLL.VENTIL	487	
9123 6507 11	– – – – COVER COMPL.	– – – – LOCK KOMPL.	489	
3128 3143 31	– – BOOM PART	– – BOMDEL	491	RIGHT
3128 3126 44	– – – TURNING DEVICE	– – – VRIDDON	493	
3128 3146 44	– – – BEARING HOUSING	– – – LAGERHUS	495	RIGHT
3128 2592 43	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	497	
9106 0630 10	– – – DOUBLE CH.VALVE	– – – HYDRAULLÅS	455	
3128 3219 00	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	499	
3125 4968 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	463	
3125 4952 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	501	
3128 3083 67	– – HOSE NIPPLE SET	– – SLANGNIPPELSATS	503	
3128 3083 68	– – – HOSE SET	– – – SLANGSATS	505	
3128 0969 87	– – HOSE FRAME SET	– – SLANGHÅLLARSATS	507	
3128 3062 56	– – – HOSE HOLDER	– – – SLANGHÅLLARE	509	
3128 3144 27	– BASIC BOOM	– GRUNDBOM	511	BUT 28 LEFT VER G
–	– – BOOM PART	– – BOMDEL	437	
3128 2800 31	– – – BOOM ATTACHMENT	– – – BOMFÄSTE	439	
3128 2800 36	– – – BOOM LINK	– – – BOMLÄNK	441	
3128 3146 72	– – – CYLINDER LINK	– – – CYLINDERLÄNK	443	
3128 3154 51	– – – SHAFT COMPL.	– – – AXEL KOMPL.	445	
3125 4946 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	447	
3125 1981 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	449	
3125 1981 81	– – – EXPANDING SHAFT	– – – EXP.AXEL	451	
3128 3080 39	– – – BOOM	– – – BOM	453	
9106 0630 10	– – – – DOUBLE CH.VALVE	– – – – HYDRAULLÅS	455	
9106 0630 11	– – – – DOUBLE CH.VALVE	– – – – HYDRAULLÅS	457	

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
9121 7032 00	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	459	BOOM CYL. REAR HC09 125/85/536
8231 1202 86	– – – – CHECK VALVE	– – – – BACKVENTIL	461	
3125 4968 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	463	
–	– – – TELESCOPE SET	– – – TELESKOPSATS	465	
3128 2592 42	– – – – HYDR. CYLINDER	– – – – HYDRAULCYLINDER	467	
3125 4944 86	– – – – BEARING HOUSING	– – – – LAGERHUS	469	
–	– – BOOM PART	– – BOMDEL	471	
–	– – – BOOM ATTACHMENT	– – – BOMFÄSTE	473	
3128 2800 07	– – – LINK	– – – LÄNK	475	
3125 1974 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	477	
3125 1982 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	479	
3125 4937 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	481	
3128 2172 03	– – – CYLIND.BRACKET	– – – CYLINDERFÄSTE	483	
9121 7017 02	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	485	
8231 1202 86	– – – – CHECK VALVE	– – – – BACKVENTIL	461	
8231 1203 06	– – – – OVERCENT.VALVE	– – – – LASTHÅLL.VENTIL	487	
9123 6507 11	– – – – COVER COMPL.	– – – – LOCK KOMPL.	489	
–	– – BOOM PART	– – BOMDEL	513	
3128 3126 44	– – – TURNING DEVICE	– – – VRIDDON	493	
3128 3146 59	– – – BEARING HOUSING	– – – LAGERHUS	515	
3128 2592 43	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	497	
9106 0630 10	– – – DOUBLE CH.VALVE	– – – HYDRAULLÅS	455	
3128 3219 00	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	499	
3125 4968 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	463	
3125 4952 80	– – – EXPANDING SHAFT	– – – EXP.AXEL	501	
3128 3083 67	– – HOSE NIPPLE SET	– – SLANGNIPPELSATS	503	
3128 3083 68	– – – HOSE SET	– – – SLANGSATS	505	
3128 0969 87	– – HOSE FRAME SET	– – SLANGHÅLLARSATS	507	

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
3128 3062 56	– – – HOSE HOLDER	– – – SLANGHÅLLARE	509	
–	– HOSE NIPPLE SET	– SLANGNIPPELSATS	517	
–	– – HOSE SET	– – SLANGSATS	519	
–	– HOSE NIPPLE SET	– SLANGNIPPELSATS	517	
–	– – HOSE SET	– – SLANGSATS	519	
–	– HOSE SET	– SLANGSATS	521	
–	– HOSE SET	– SLANGSATS	523	
3128 0940 39	– ASSEMBLY SET	– MONTERINGSSATS	525	BUT 28/BMHT 2000
3128 3061 81	– – HOLDER	– – HÅLLARE	527	
3128 3061 80	– – HOLDER	– – HÅLLARE	529	
3128 0940 39	– ASSEMBLY SET	– MONTERINGSSATS	525	BUT 28/BMHT 2000
3128 3061 81	– – HOLDER	– – HÅLLARE	527	
3128 3061 80	– – HOLDER	– – HÅLLARE	529	
3128 3090 03	– COVER SET	– TÄCKLOCKSATS	531	

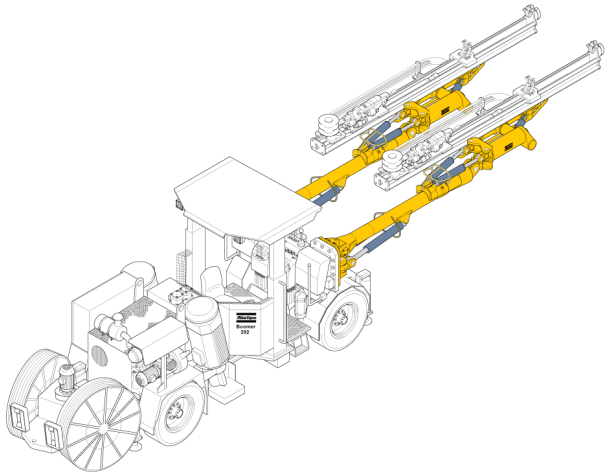


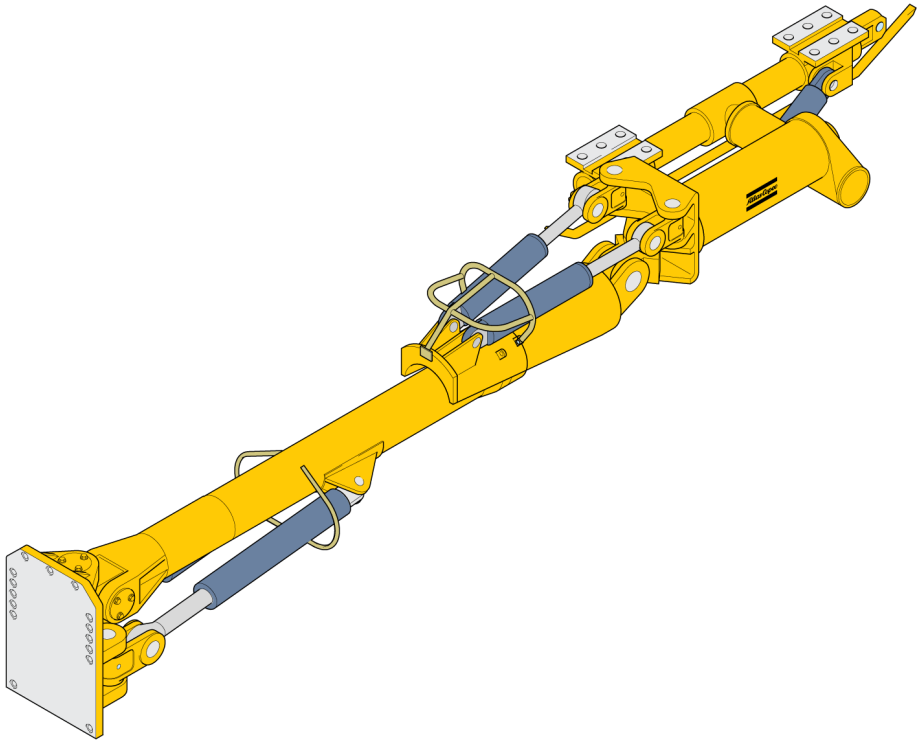

B0057487

BOOM / BOM

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
131	3128 3144 26	1	BASIC BOOM	GRUNDBOM	Page 435	BUT 28 RIGHT VER G
132	3128 3144 27	1	BASIC BOOM	GRUNDBOM	Page 511	BUT 28 LEFT VER G
151	–	1	HOSE NIPPLE SET	SLANGNIPPELSATS	Page 517	
152	–	1	HOSE NIPPLE SET	SLANGNIPPELSATS	Page 517	
161	–	1	HOSE SET	SLANGSATS	Page 521	
162	–	1	HOSE SET	SLANGSATS	Page 523	
171	3128 0940 39	1	ASSEMBLY SET	MONTERINGSSATS	Page 525	BUT 28/BMHT 2000
172	3128 0940 39	1	ASSEMBLY SET	MONTERINGSSATS	Page 525	BUT 28/BMHT 2000
225	3128 3011 68	2	STOP	STOPP		
960	3128 3090 03	2	COVER SET	TÄCKLOCKSATS	Page 531	

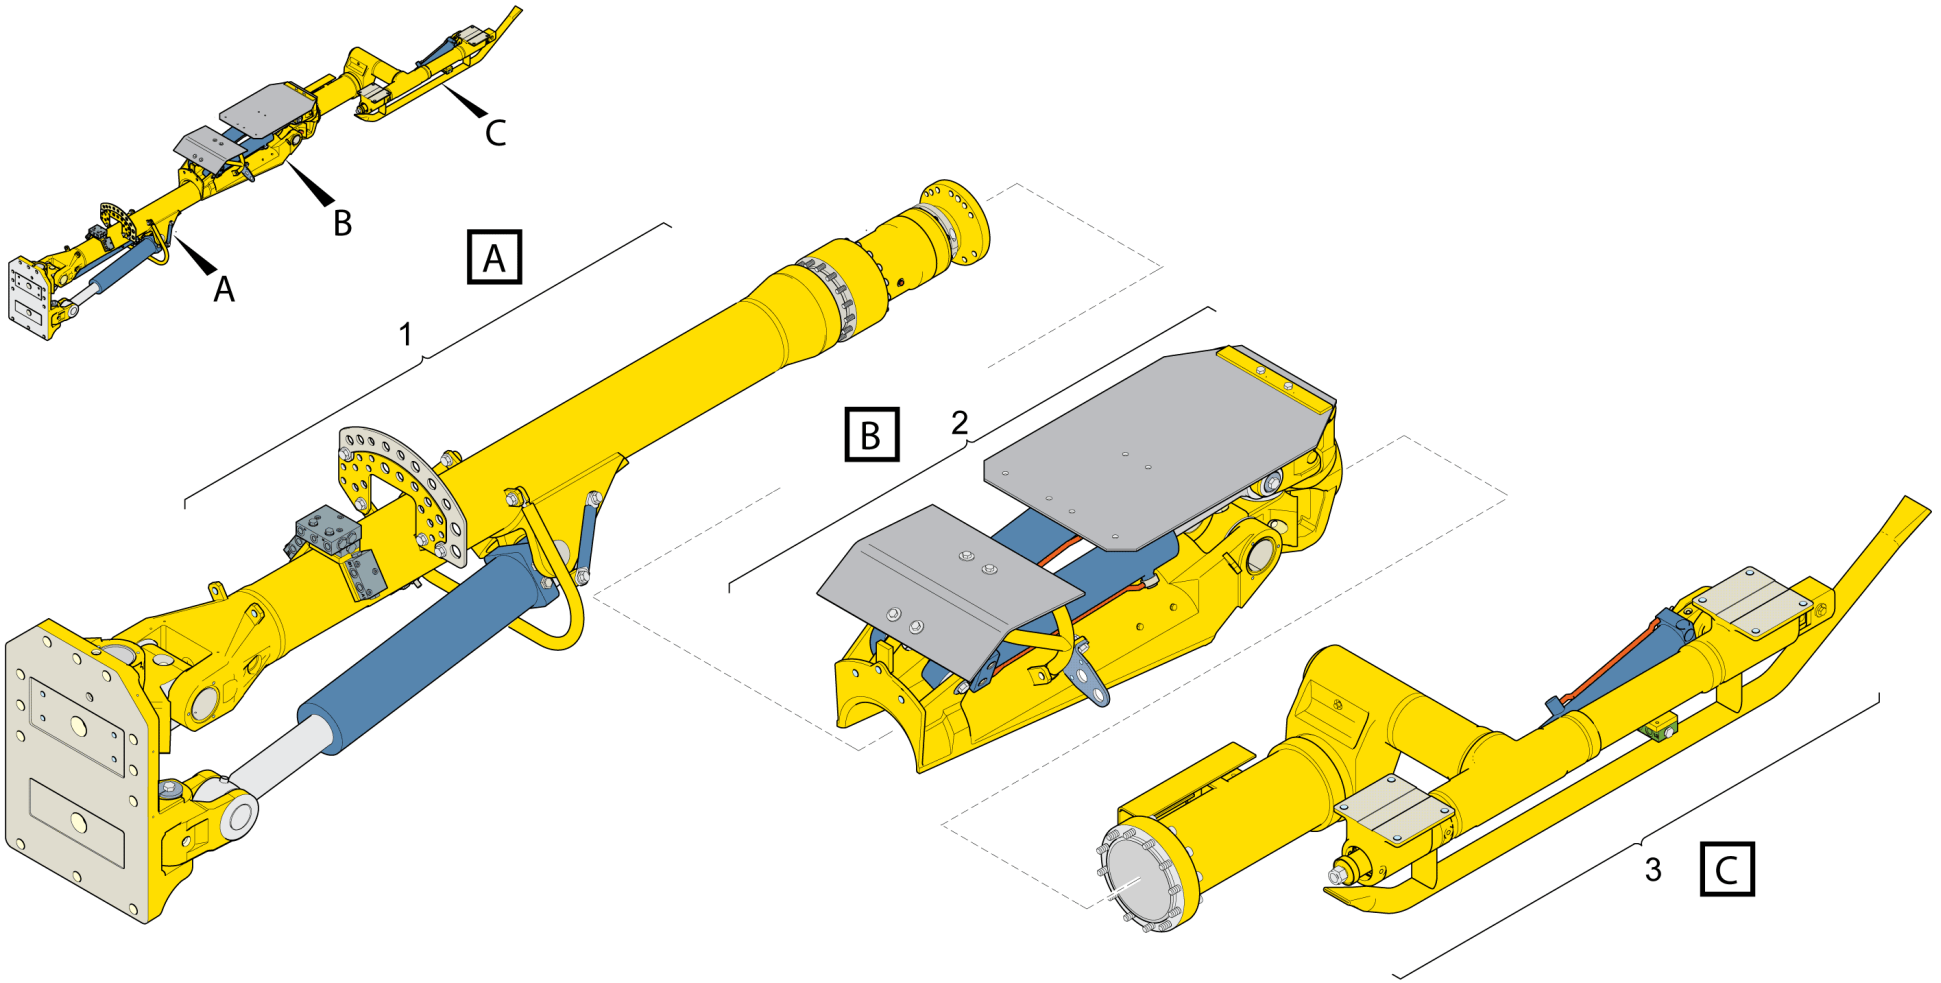


1250 0234 34

B0047038

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	BOOM PART	BOMDEL	Page 437	
2	–	1	BOOM PART	BOMDEL	Page 471	
3	3128 3143 31	1	BOOM PART	BOMDEL	Page 491	RIGHT
50	3128 3083 67	1	HOSE NIPPLE SET	SLANGNIPPELSATS	Page 503	
51	3128 0969 87	1	HOSE FRAME SET	SLANGHÅLLARSATS	Page 507	


BOOM PART / BOMDEL

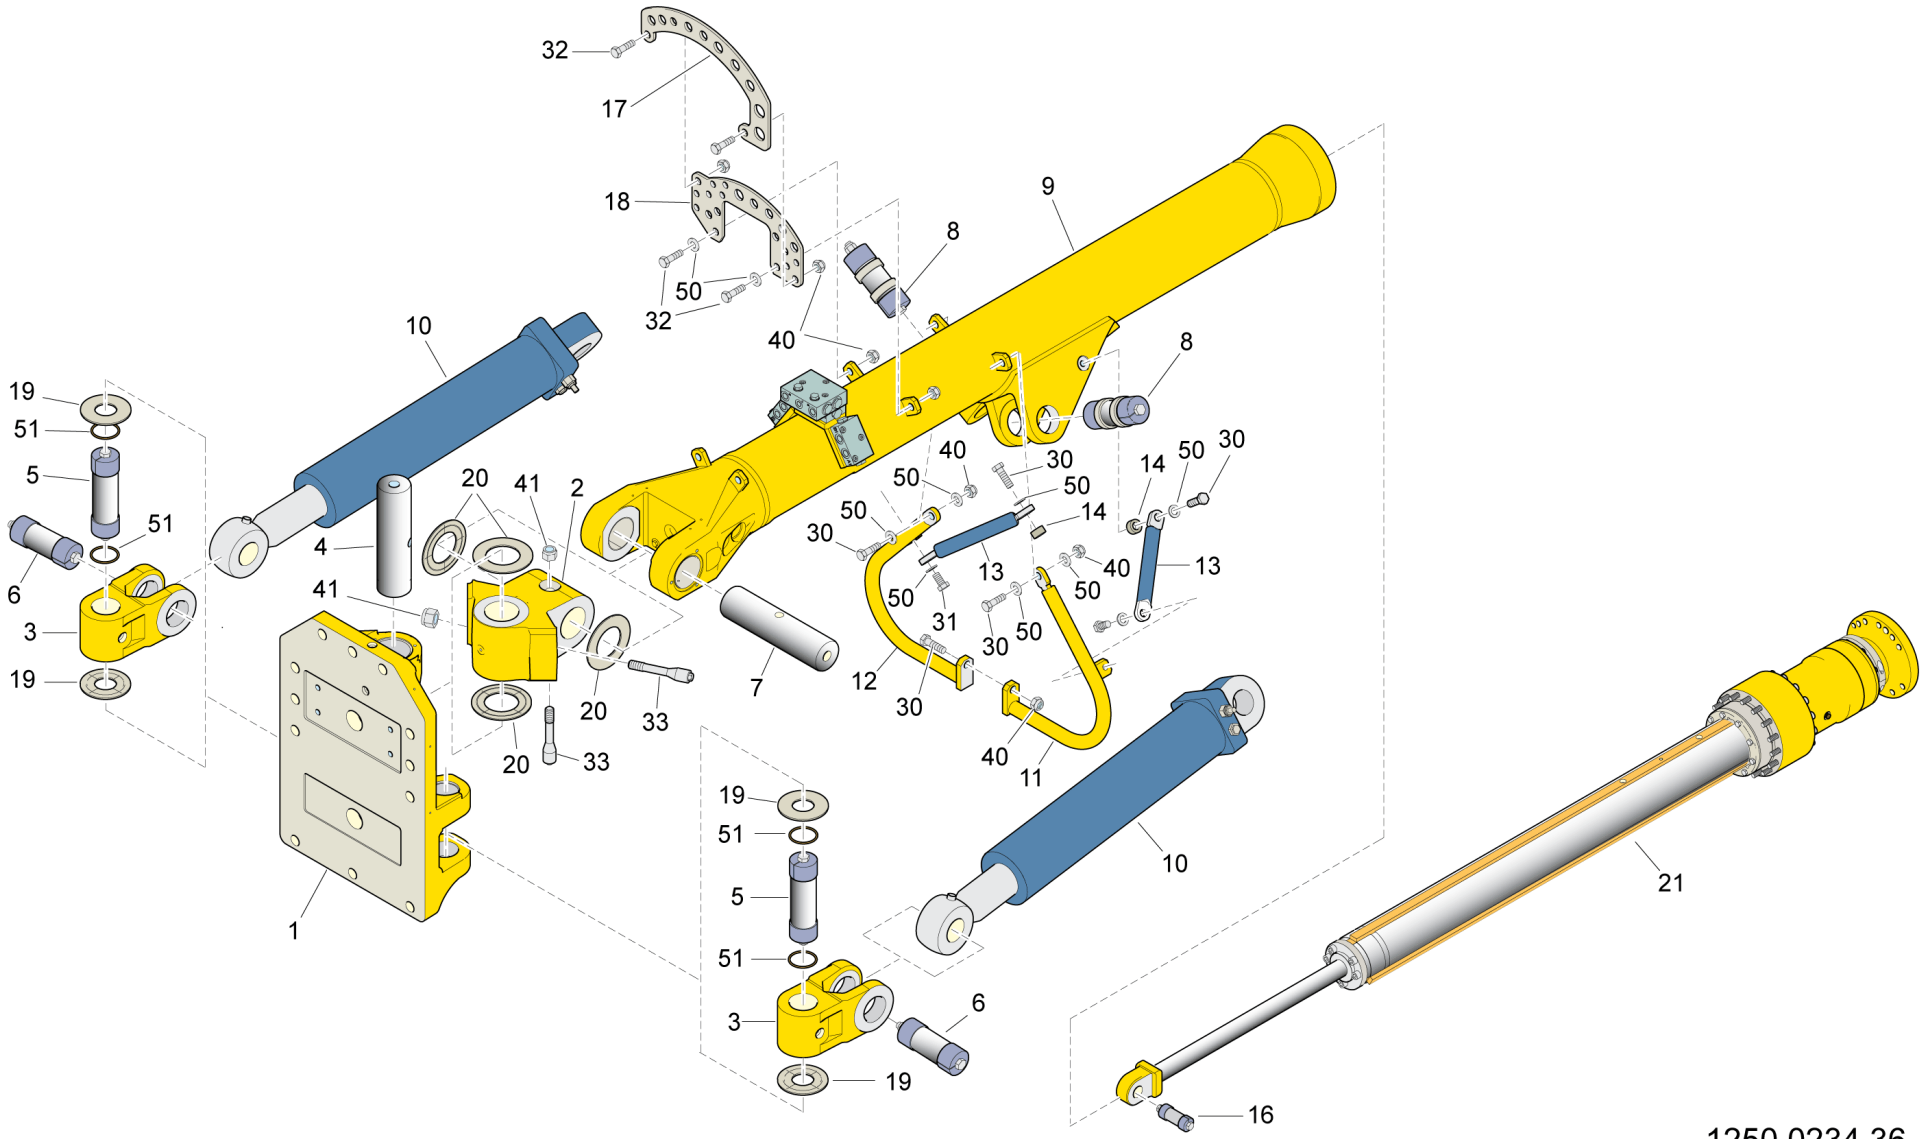

B0047040

BOOM PART / BOMDEL


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 2800 31	1	BOOM ATTACHMENT	BOMFÄSTE	Page 439	
2	3128 2800 36	1	BOOM LINK	BOMLÄNK	Page 441	
3	3128 3146 72	2	CYLINDER LINK	CYLINDERLÄNK	Page 443	
4	3128 3154 51	1	SHAFT COMPL.	AXEL KOMPL.	Page 445	
5	3125 4946 80	2	EXPANDING SHAFT	EXP.AXEL	Page 447	
6	3125 1981 80	2	EXPANDING SHAFT	EXP.AXEL	Page 449	
7	3128 3083 03	1	SHAFT	AXEL		
8	3125 1981 81	2	EXPANDING SHAFT	EXP.AXEL	Page 451	
9	3128 3080 39	1	BOOM	BOM	Page 453	
10	9121 7032 00	2	HYDR. CYLINDER	HYDRAULCYLINDER	Page 459	BOOM CYL. REAR HC09 125/85/536
11	3128 3035 70	1	PROTECTION	SKYDD		
12	3128 3035 71	1	PROTECTION	SKYDD		
13	3128 3035 69	2	SUPPORT	STÖD		
14	3128 0902 00	2	SPACER	DISTANS		
16	3125 4968 80	1	EXPANDING SHAFT	EXP.AXEL	Page 463	
17	3128 3079 83	1	BULKHEAD CONN.	SKOTTGENOMGÅNG		
18	3128 3079 82	1	BULKHEAD CONN.	SKOTTGENOMGÅNG		
19	3128 2800 09	4	THRUST BEARING	AXIALLAGER		
20	3128 2800 08	4	THRUST BEARING	AXIALLAGER		
21	–	1	TELESCOPE SET	TELESKOPSATS	Page 465	
30	0147 1480 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 55 - 8.8 FZB
31	0147 1475 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 30 - 8.8 FZB
32	0147 1479 03	7	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
33	3128 3069 55	2	BOLT	BULT		
40	0291 1128 25	7	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
41	0291 1128 28	2	LOCK NUT	LÅSMUTTER		M 20 - 8 FZB / ISO 7040
50	0301 2378 00	8	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
51	0663 6136 00	4	O-RING	O-RING		59,5 X 3 70 SHORE

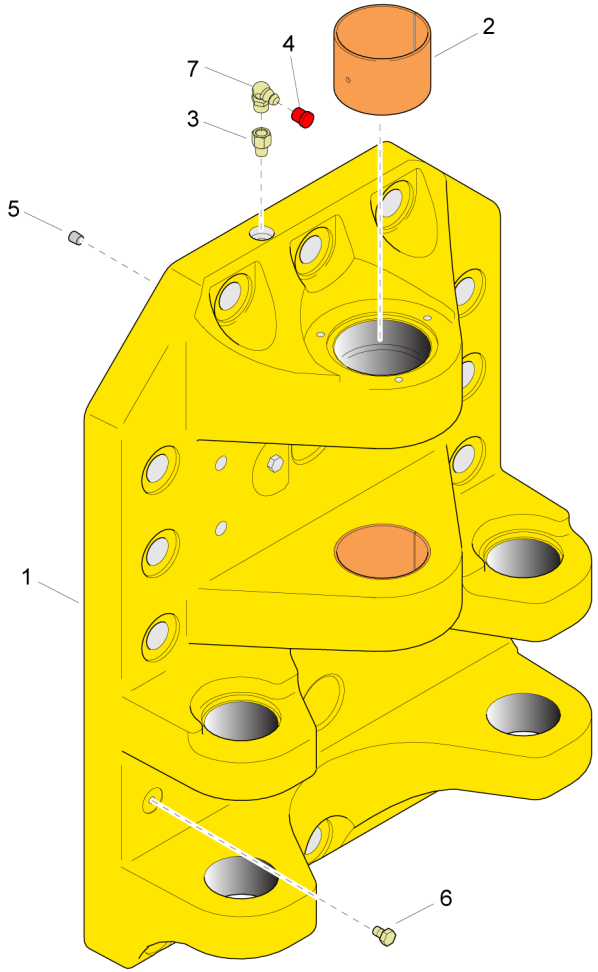

3128 2800 31Ed04

B0045021


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 2800 27	1	BOOM ATTACHMENT	BOMFÄSTE		
2	3128 3038 97	2	BUSHING	BUSSNING		
3	0544 2562 00	1	GREASE NIPPLE	SMÖRJNIPPEL		CH KR 1/8 SMS 1586
4	0686 9252 27	1	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED
5	0686 6101 00	1	PLUG	PROPP		ISO7-R1/8 11 1550 00
6	0147 1320 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 12 - 8.8 FZB
7	3128 2538 06	1	EXTENDER	FÖRLÄNGARE		ISO 7-R 1/8' X G 1/8',L= 20 MM

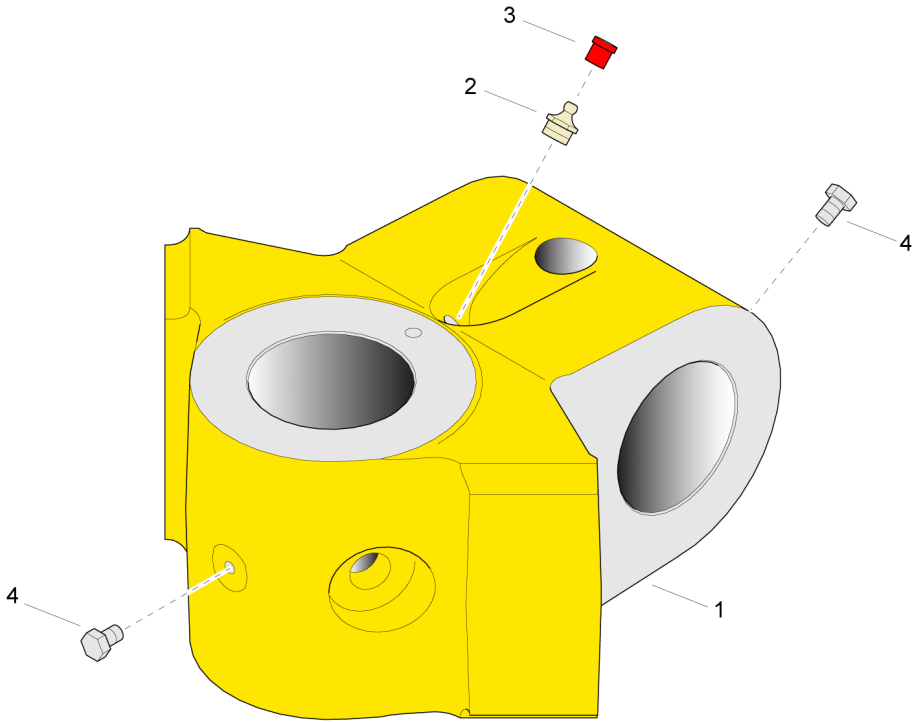

3128 2800 36 Ed03

B0045018

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	BOOM LINK	BOMLÄNK		
2	0544 2153 00	1	GREASE NIPPLE	FETTNIPPEL		AH G 1/4 SMS 1585
3	0686 9252 27	1	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED
4	0147 1320 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 12 - 8.8 FZB

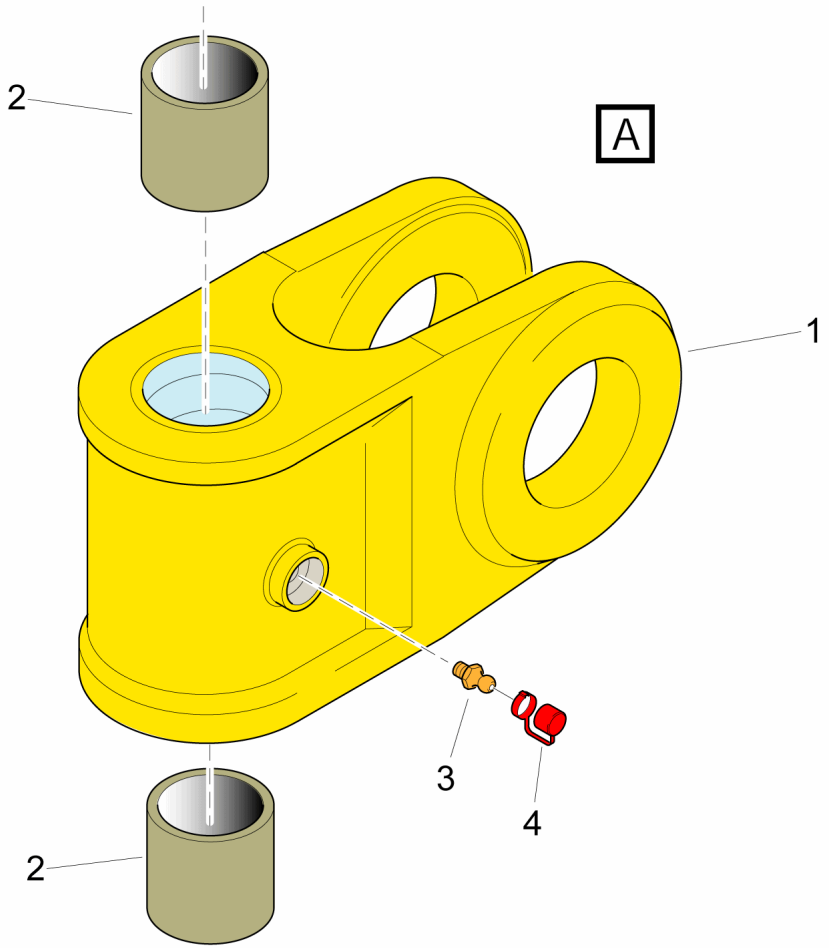


1250 0146 65

B0027434

CYLINDER LINK / CYLINDERLÄNK 3128 3146 72

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	CYLINDER LINK	CYLINDERLÄNK		
2	3177 0074 01	2	BEARING BUSHING	LAGERBUSSNING		60 65 50 F8-H8 H7
3	0544 2153 00	2	GREASE NIPPLE	FETTNIPPEL		AH G 1/4 SMS 1585
4	0686 9252 27	2	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

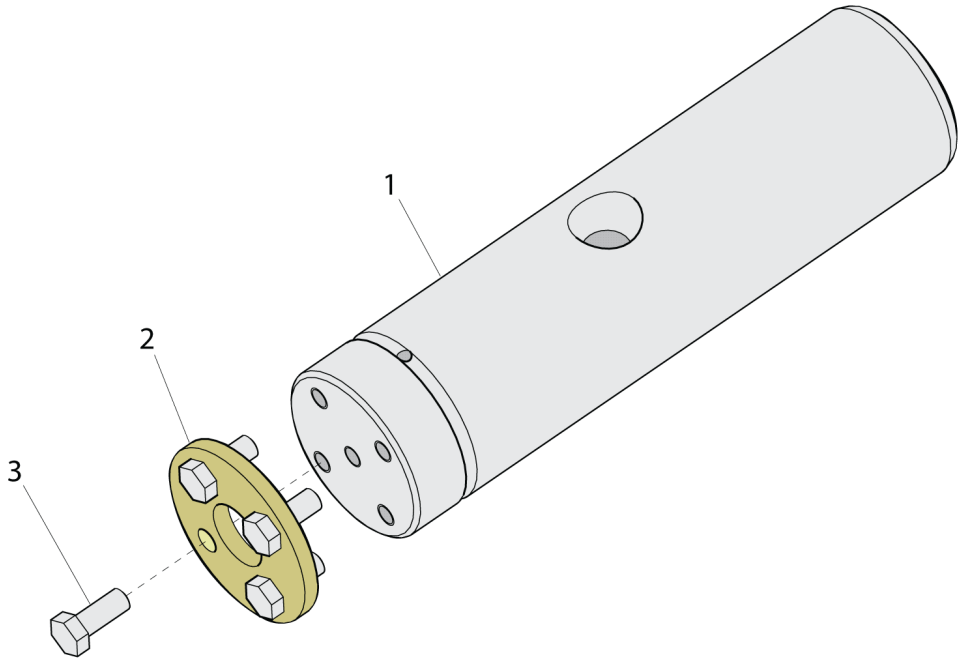


3128 3154 51 Ed01

SHAFT COMPL. / AXEL KOMPL.

3128 3154 51

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	PIN	AXEL		
2	3128 3154 50	1	FLANGE	FLÄNS		
3	0147 1362 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB

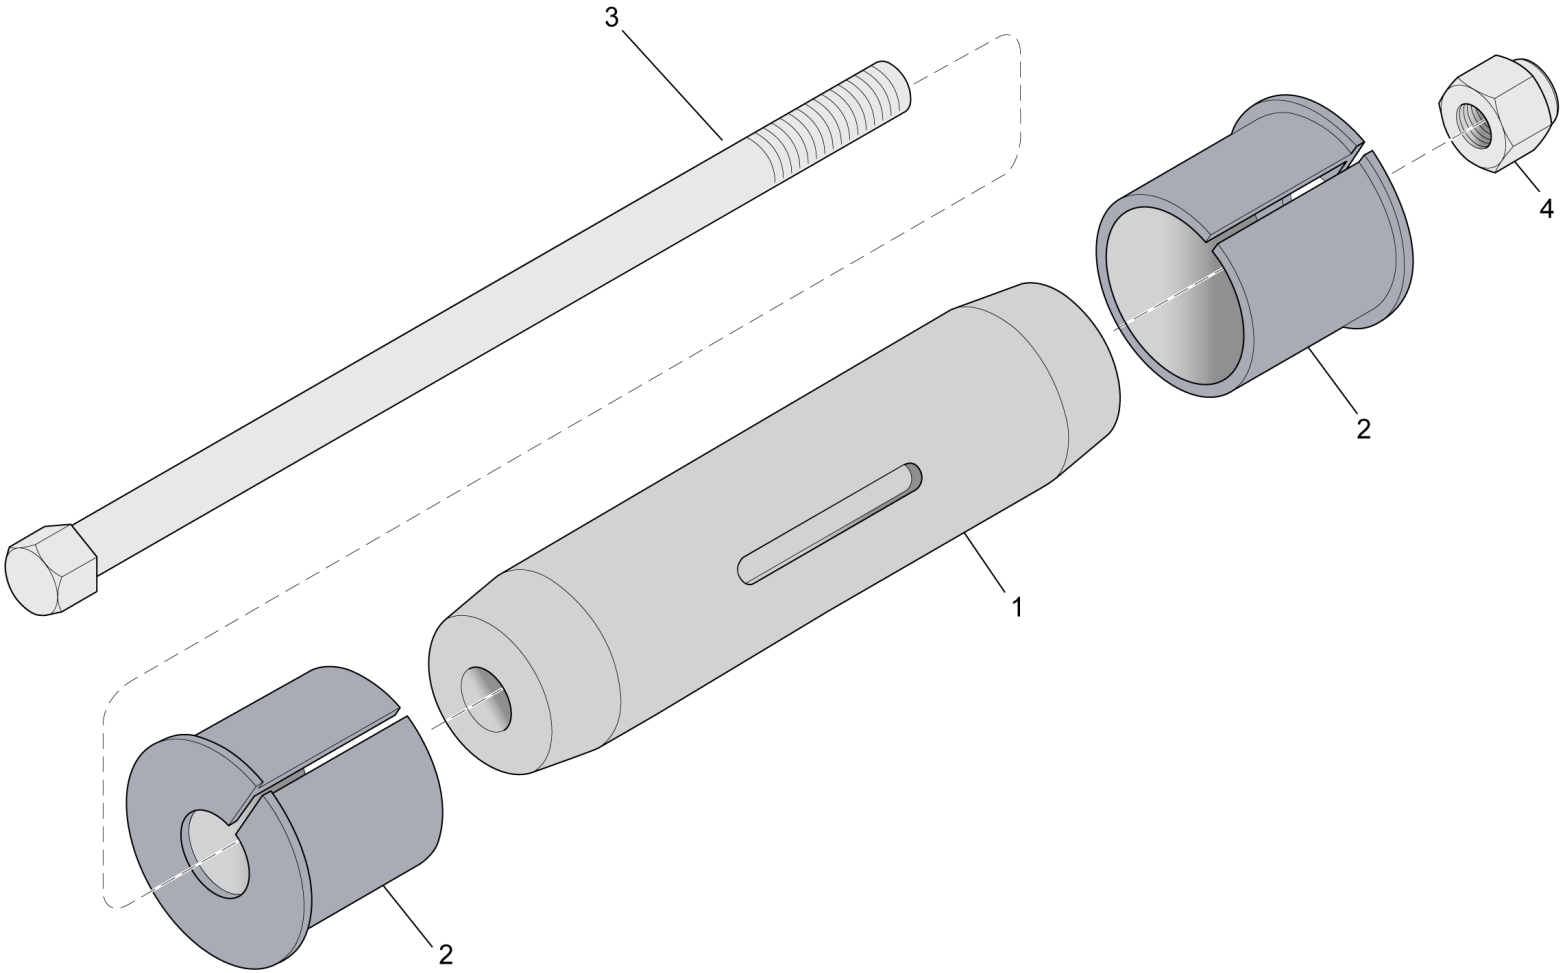


1250 0001 83

B0000559

EXPANDING SHAFT / EXP.AXEL

3125 4946 80


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	SHAFT	AXEL		
2	3125 2178 00	2	BUSHING	BUSSNING		
3	0147 1501 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 240 - 8.8 FZB
4	0291 1128 25	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040

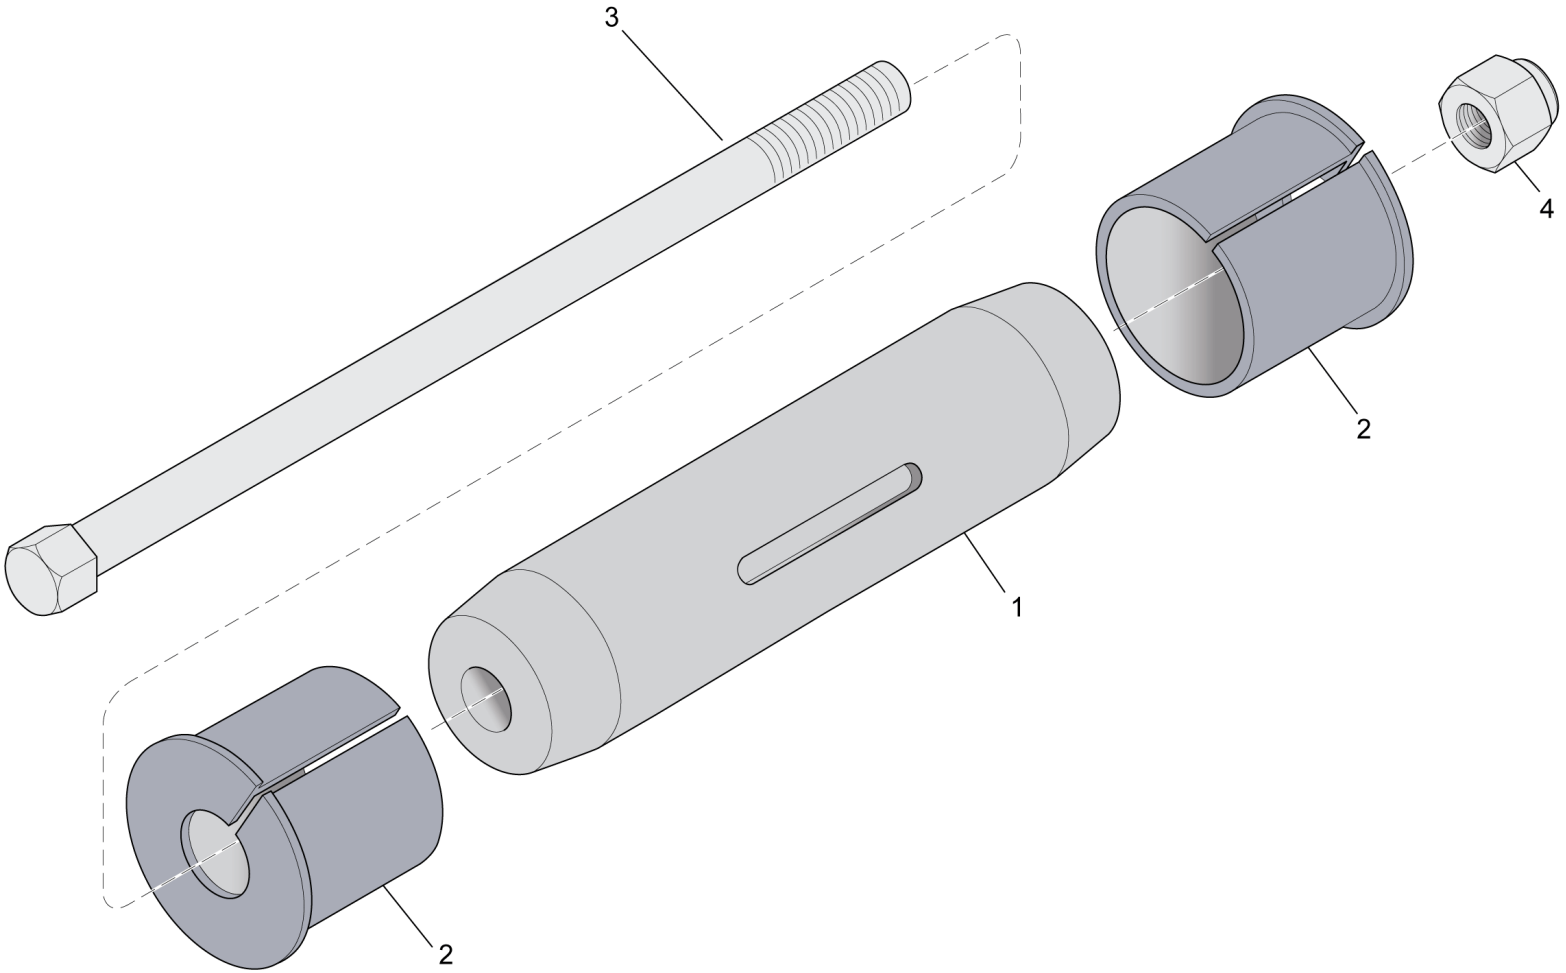

1250 0001 83

B0000559


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	SHAFT	AXEL		
2	3125 2178 00	2	BUSHING	BUSSNING		
3	0147 1499 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 200 - 8.8 FZB
4	0291 1128 25	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040

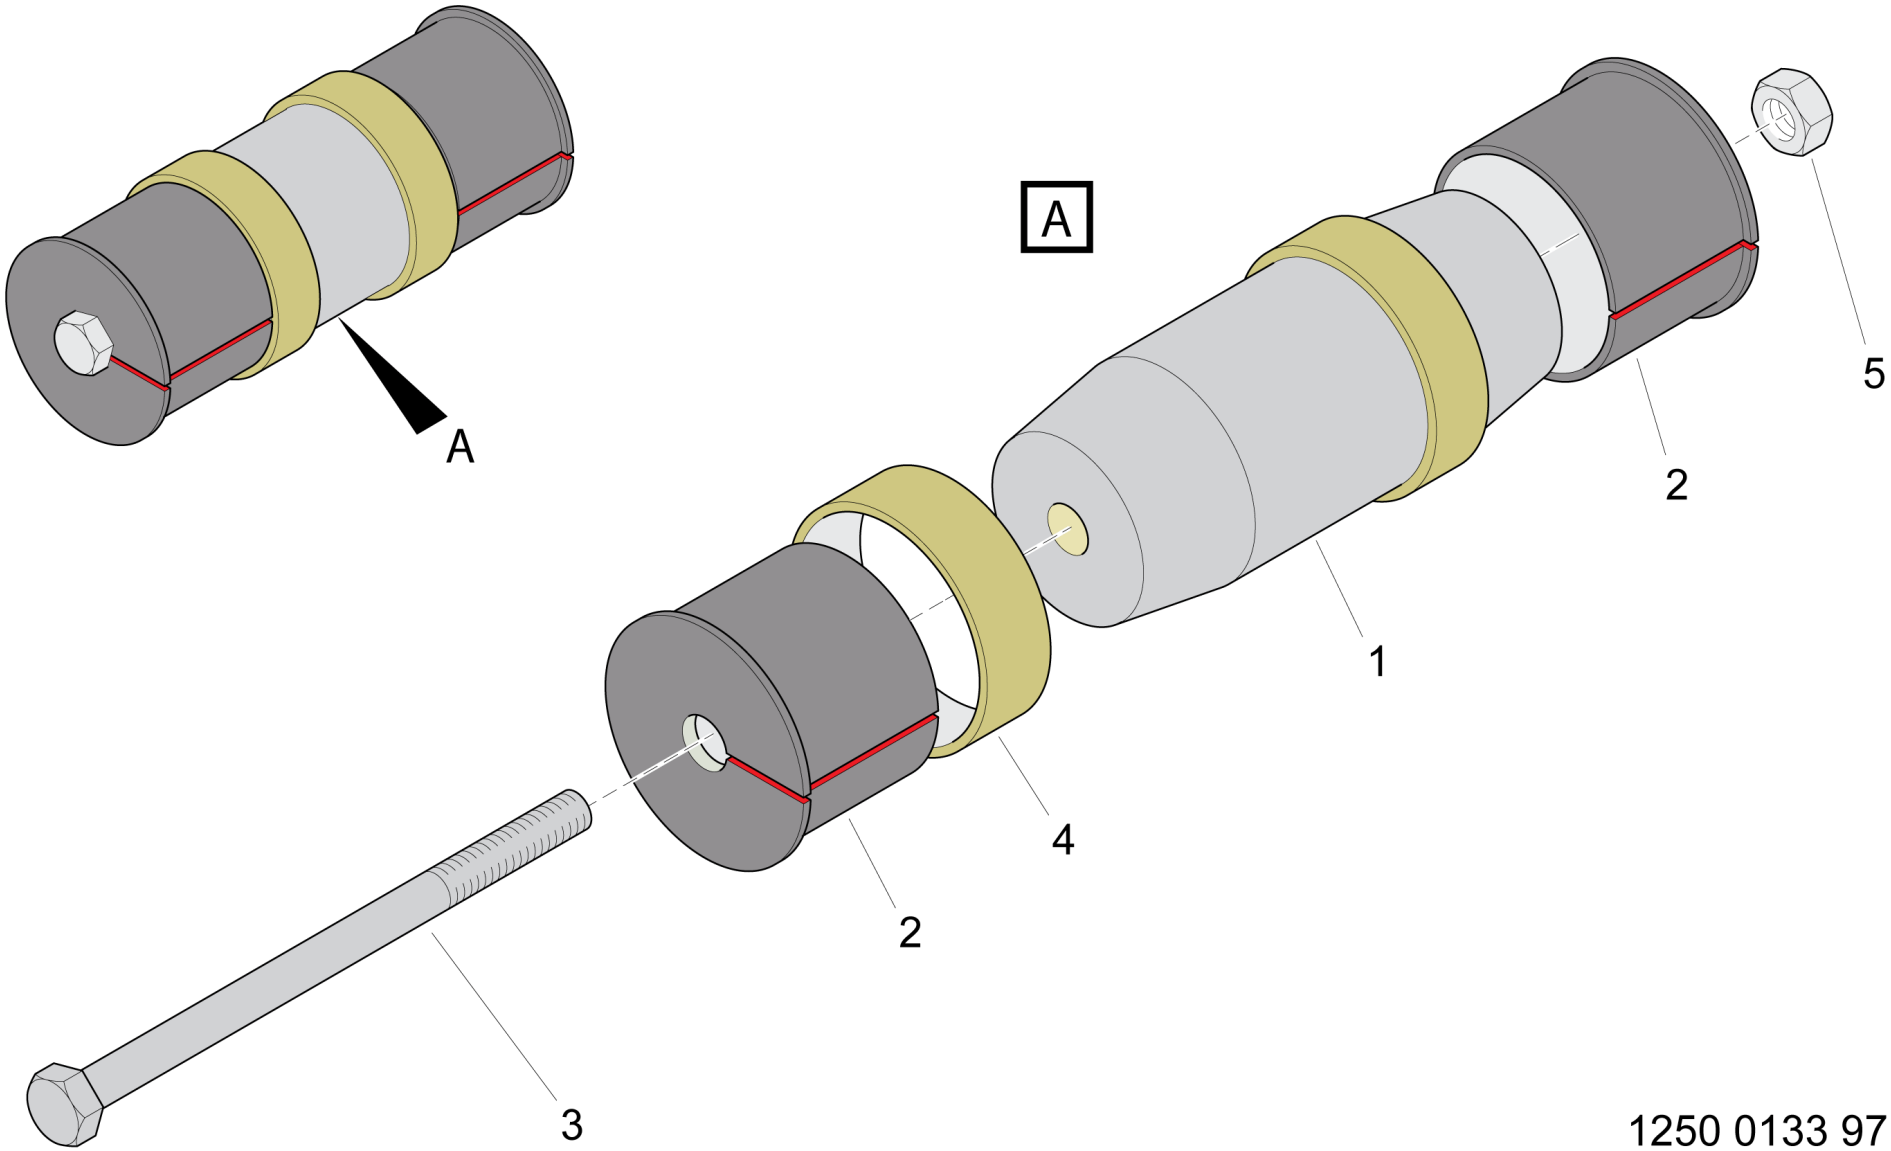

1250 0133 97


B0024370


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
20	–	1	SHAFT	AXEL		
30	3125 2178 00	2	BUSHING	BUSSNING		
40	0147 1499 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 200 - 8.8 FZB
50	3125 2005 00	2	SPACER RING	DISTANSRING		
60	0291 1128 25	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040

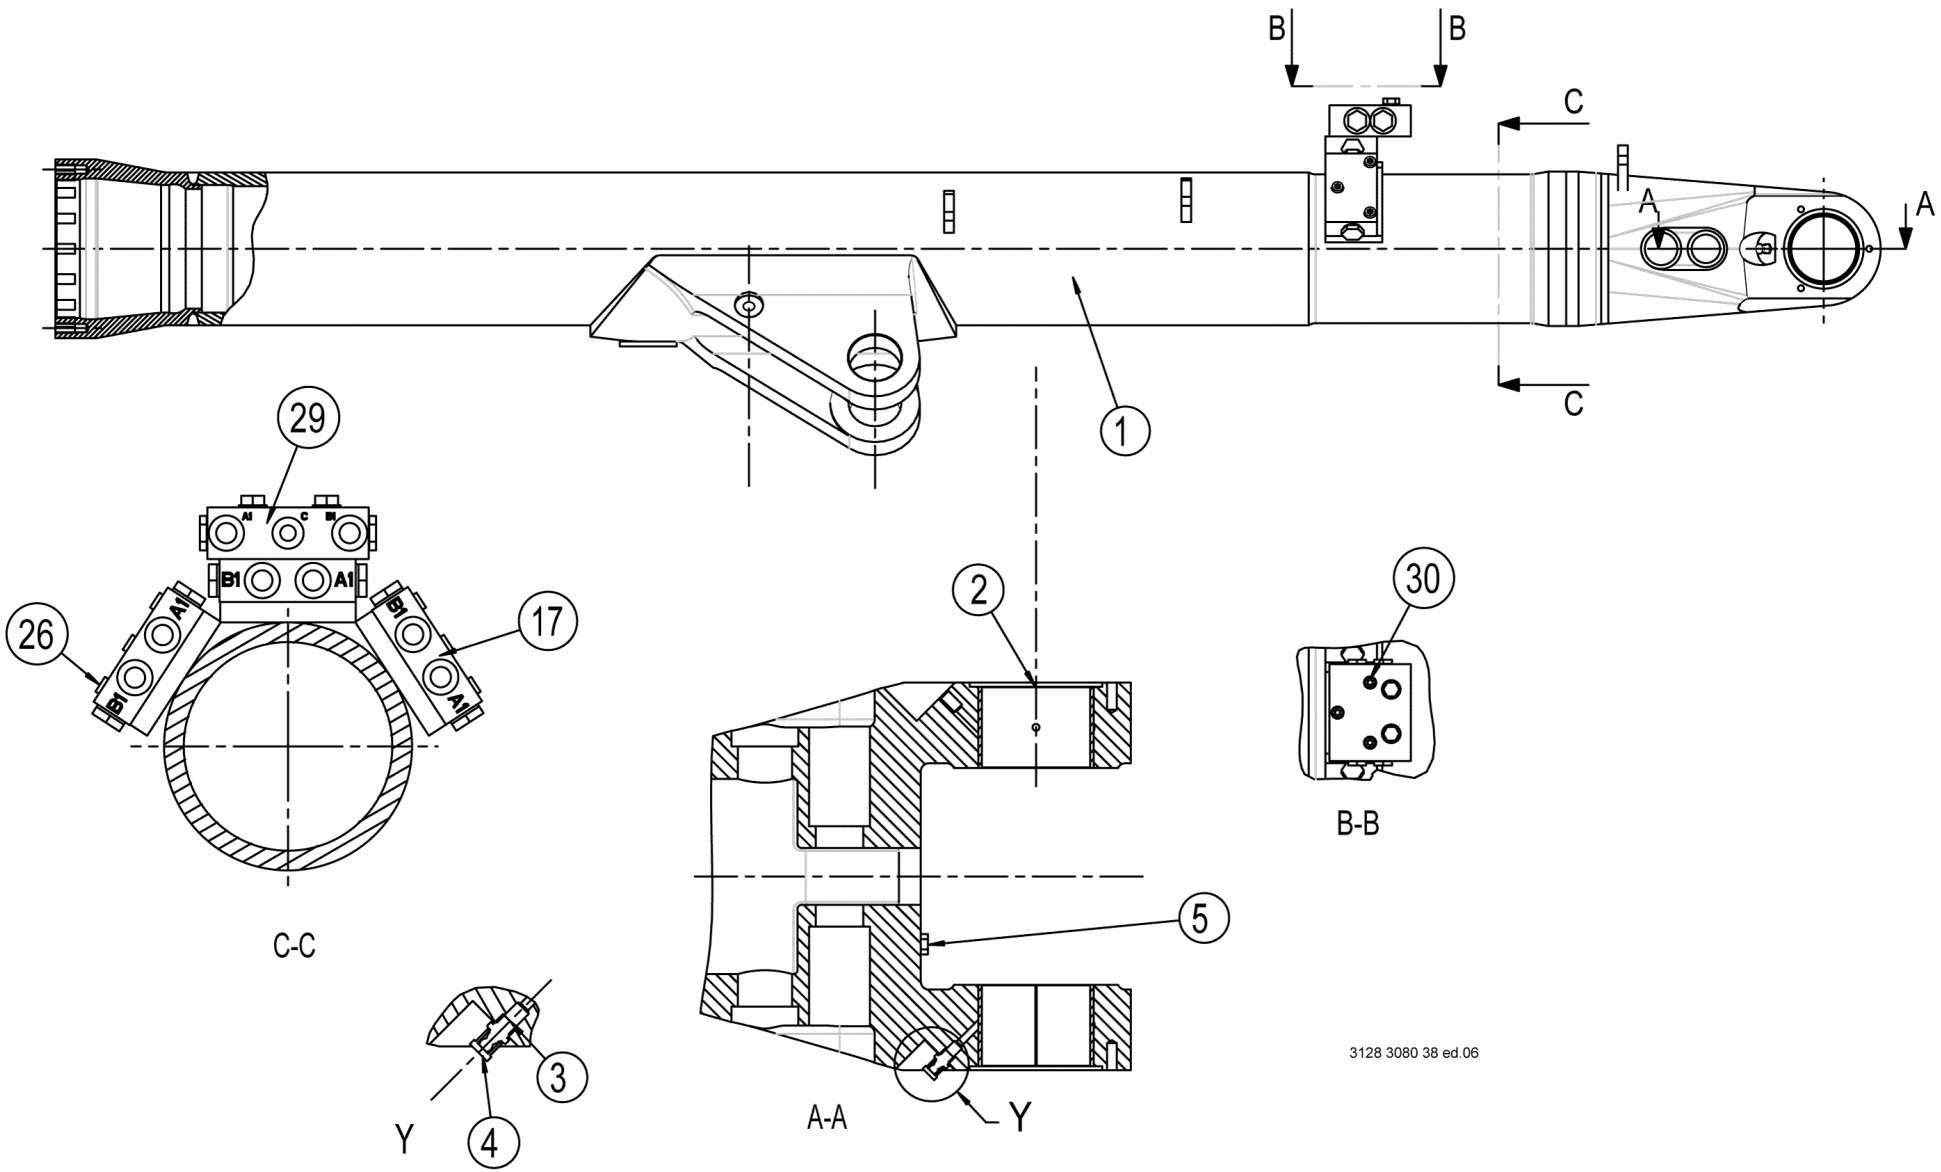
B
B
C
A
A
C
1
29
A1
C
B1
B1
A1
26
A1
B1
17
B1
A1
C-C
2
30
B-B
5
3
Y
4
A-A
Y
3128 3080 38 ed.06

B0029273

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3080 43	1	BOOM	BOM		
2	3128 3038 97	2	BUSHING	BUSSNING		
3	0544 2162 00	2	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
4	0686 9252 27	2	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED
5	0147 1320 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 12 - 8.8 FZB
17	9106 0630 10	4	DOUBLE CH.VALVE	HYDRAULLÅS	Page 455	
26	0211 1962 91	9	SCREW	SKRUV		MC6S M 8 X 35 - 12.9
29	9106 0630 11	1	DOUBLE CH.VALVE	HYDRAULLÅS	Page 457	
30	0211 1963 14	3	SCREW	SKRUV		MC6S M 8 X 70 - 12.9

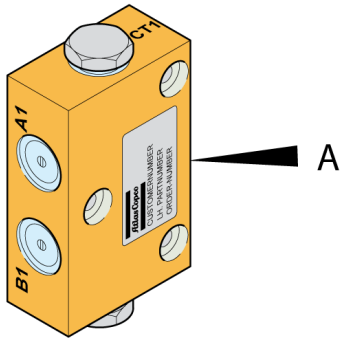

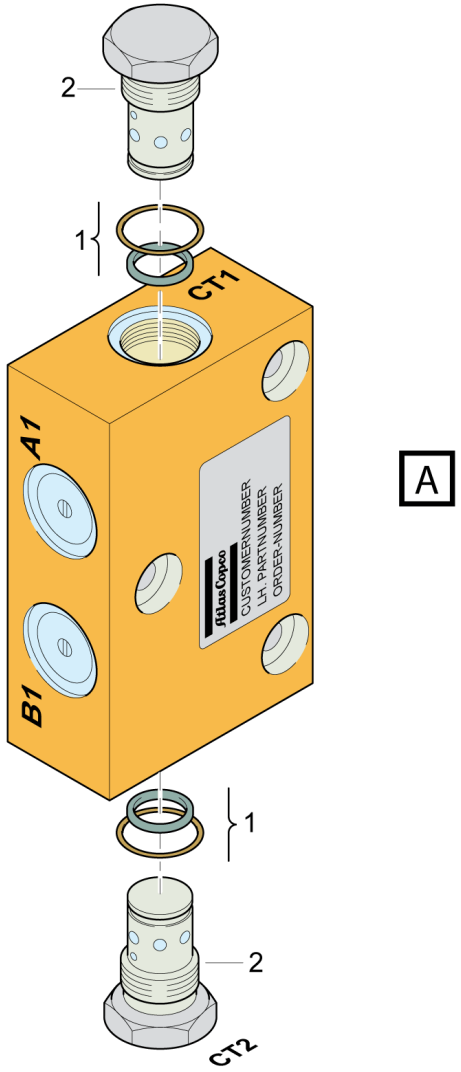



A

1250 0130 95

B0014698

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 0631 24	2	SEAL KIT	TÄTNINGSSATS		POS.1
2	9106 0631 23	2	CARTRIDGE	PATRON		

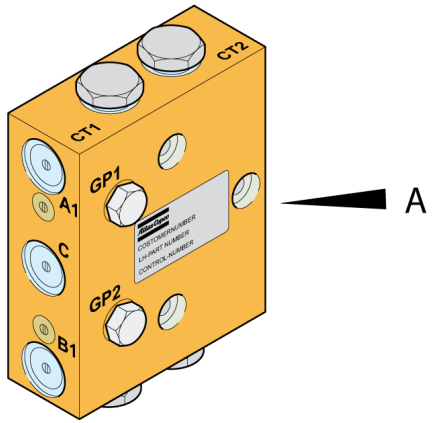

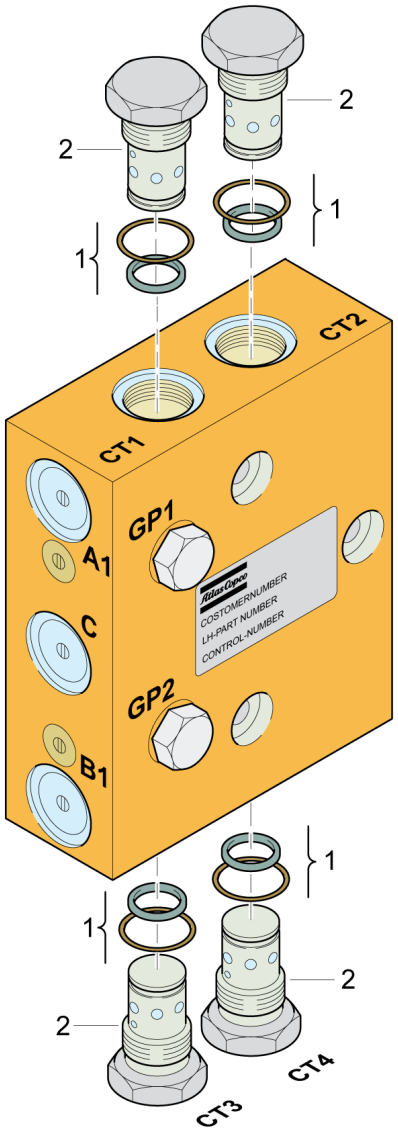


A

1250 0130 96

B0014697


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 0631 24	4	SEAL KIT	TÄTNINGSSATS		
2	9106 0631 23	4	CARTRIDGE	PATRON		

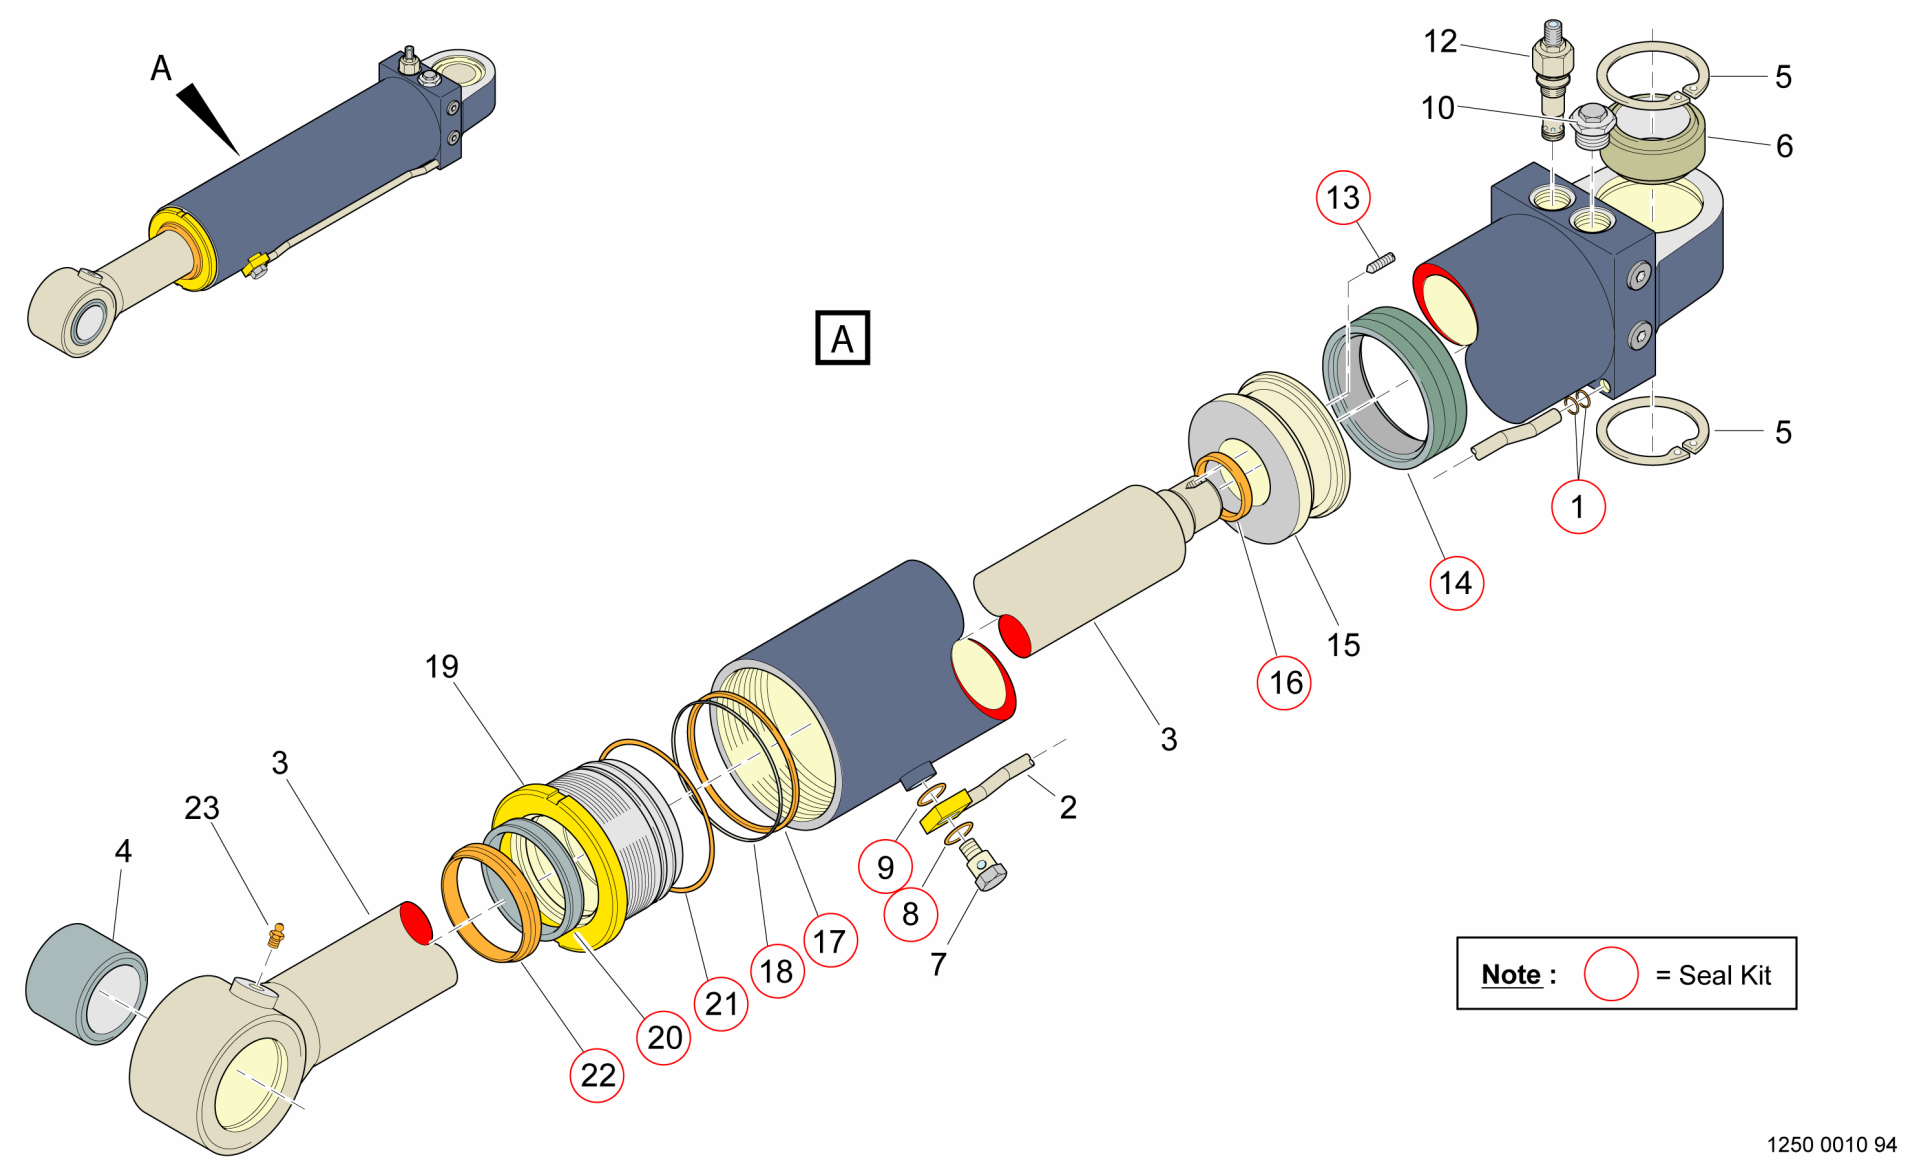


1250 0010 94

B0001293

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9120 0994 01	1	SEAL KIT	TÄTNINGSSATS		INCL. 1,8,9.
	9121 6696 50	1	SEAL KIT	TÄTNINGSSATS		INCL.1,8,9,13,14,16-18,20-22
2	9126 4610 09	1	PIPE	RÖR		
3	9123 9198 00	1	PISTON ROD	KOLVSTÅNG		
4	9128 7345 00	1	BUSHING	BUSSNING		
5	0335 2165 00	2	CIRCLIP	SPÅRRING		SGH 90 X 3 DIN 472
6	0501 0019 00	1	BEARING,SP.PL.	LEDLAGER		60 / 90 X 80
7	9127 2300 00	1	SCREW	HÅLSKRUV		
10	8231 1202 86	1	CHECK VALVE	BACKVENTIL	Page 461	
12	8231 1203 67	1	OVERCENT.VALVE	LASTHÅLL.VENTIL		
15	9124 9568 00	1	PISTON	KOLV		
19	9123 7603 00	1	COVER	LOCK		
23	0544 2106 00	2	GREASE NIPPLE	SMÖRJNIPPEL		AH M 6X1 SMS 1568

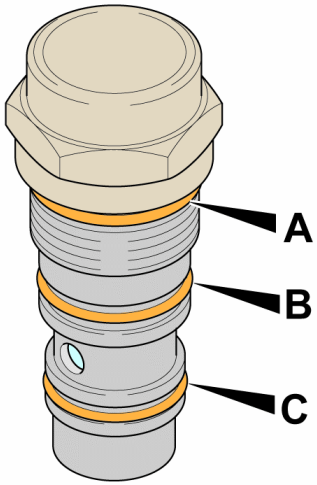


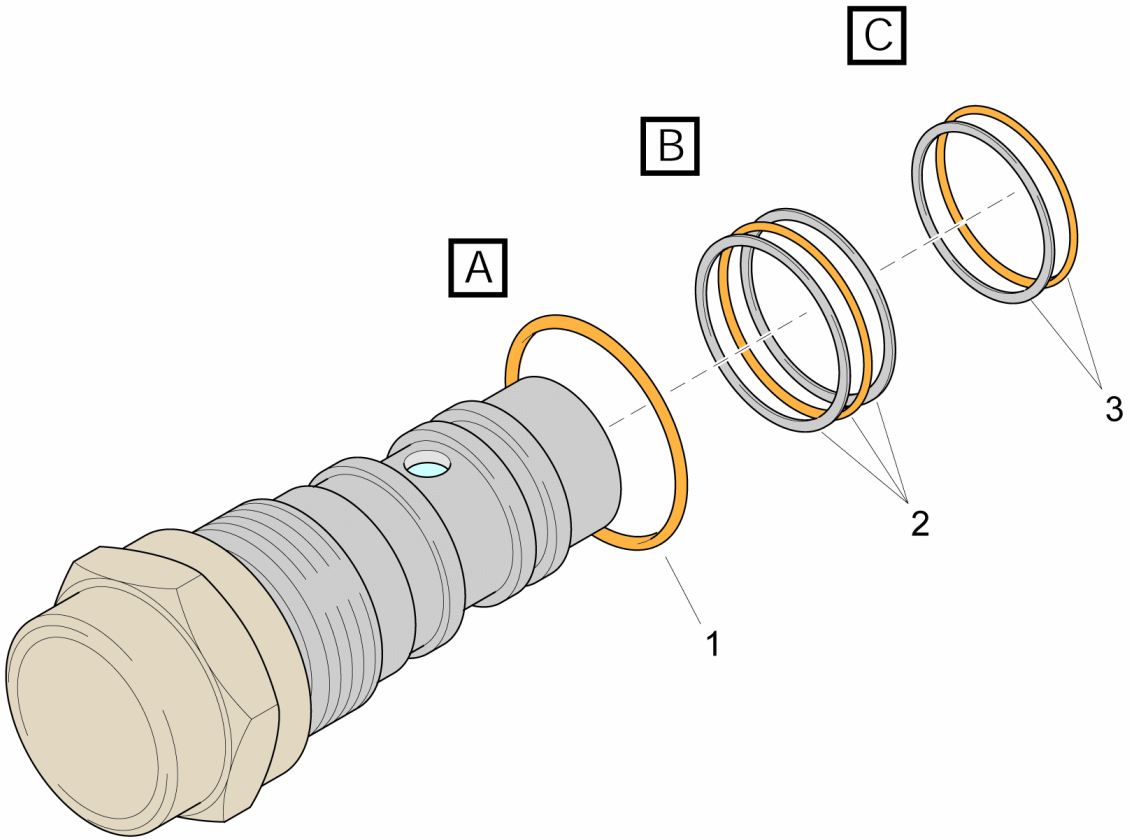

1250 0113 59

B0012651

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	8231 1206 98	1	SEAL KIT	TÄTNINGSSATS		INCL.ITEM 1-3

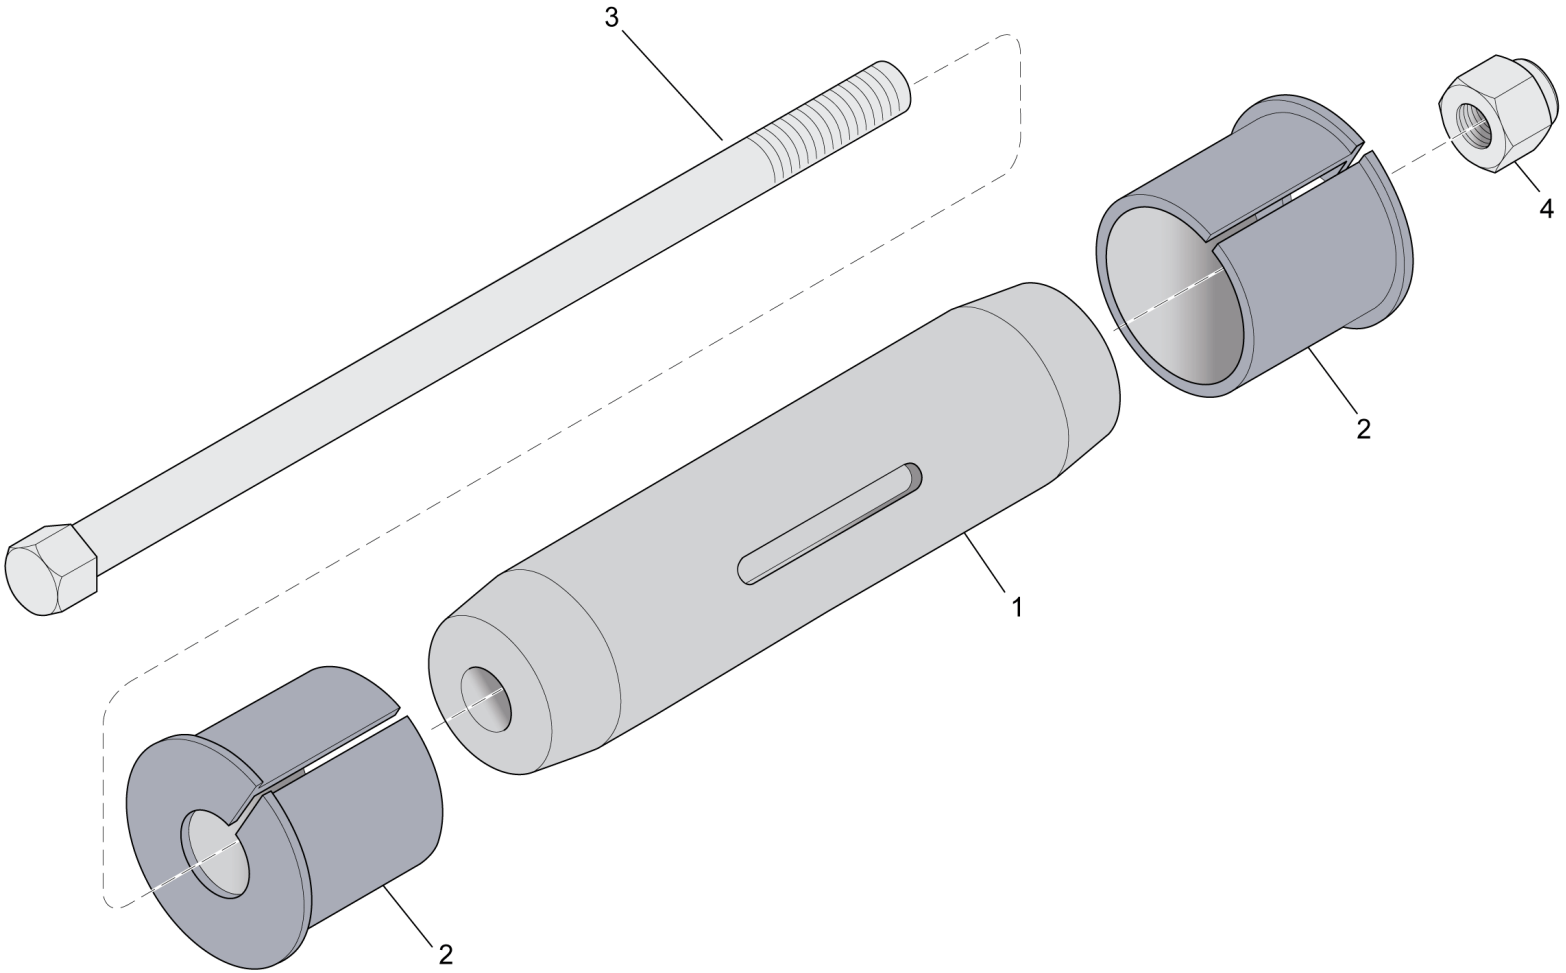

1250 0001 83


B0000559

EXPANDING SHAFT / EXP.AXEL

3125 4968 80

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3125 4968 00	1	SHAFT	AXEL		
2	3125 4969 00	2	BUSHING	BUSSNING		
3	0147 1415 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 100 - 8.8 FZB
4	0291 1128 22	1	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040


TELESCOPE SET / TELESKOPSATS

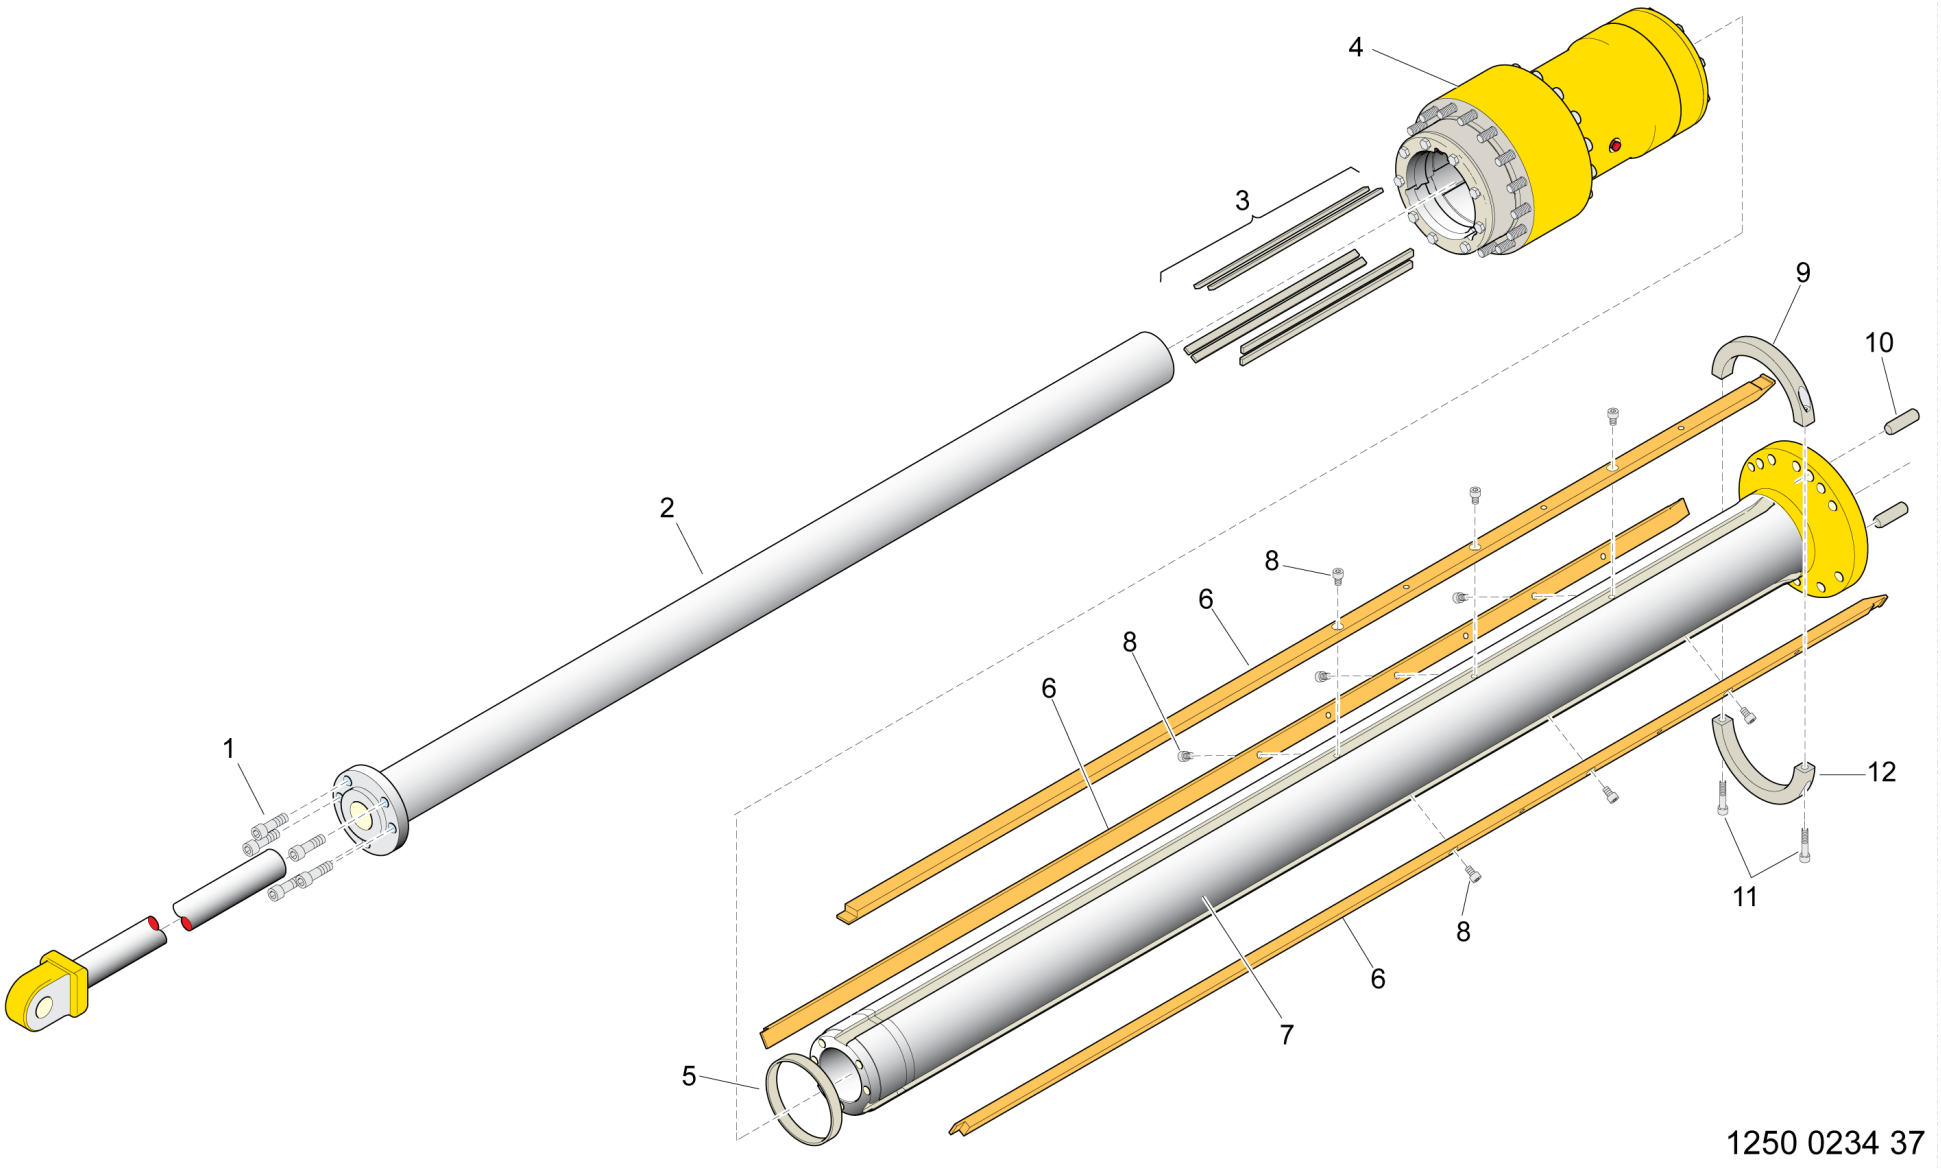

B0047039

TELESCOPE SET / TELESKOPSATS


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0211 1962 94	5	SCREW	SKRUV		MC6S M 12 X 40 - 12.9
2	3128 2592 42	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 467	
3	3125 4976 01	6	CRADLE	SLÄDE		
4	3125 4944 86	1	BEARING HOUSING	LAGERHUS	Page 469	
5	3125 4974 00	1	RING	RING		
6	3128 3125 77	3	KEY	KIL		
7	3128 3125 79	1	EXTENSION TUBE	TELESKOPRÖR		
8	0211 1962 78	9	SCREW	SKRUV		MC6S M 8 X 12 - 12.9
9	–	1	CLAMPING RING	KLÄMRING		
10	3128 3020 00	2	PIN	PINNE		
11	0211 1960 78	2	SCREW	SKRUV		MC6S M 8 X 40 - 12.9
12	–	1	CLAMPING RING	KLÄMRING		

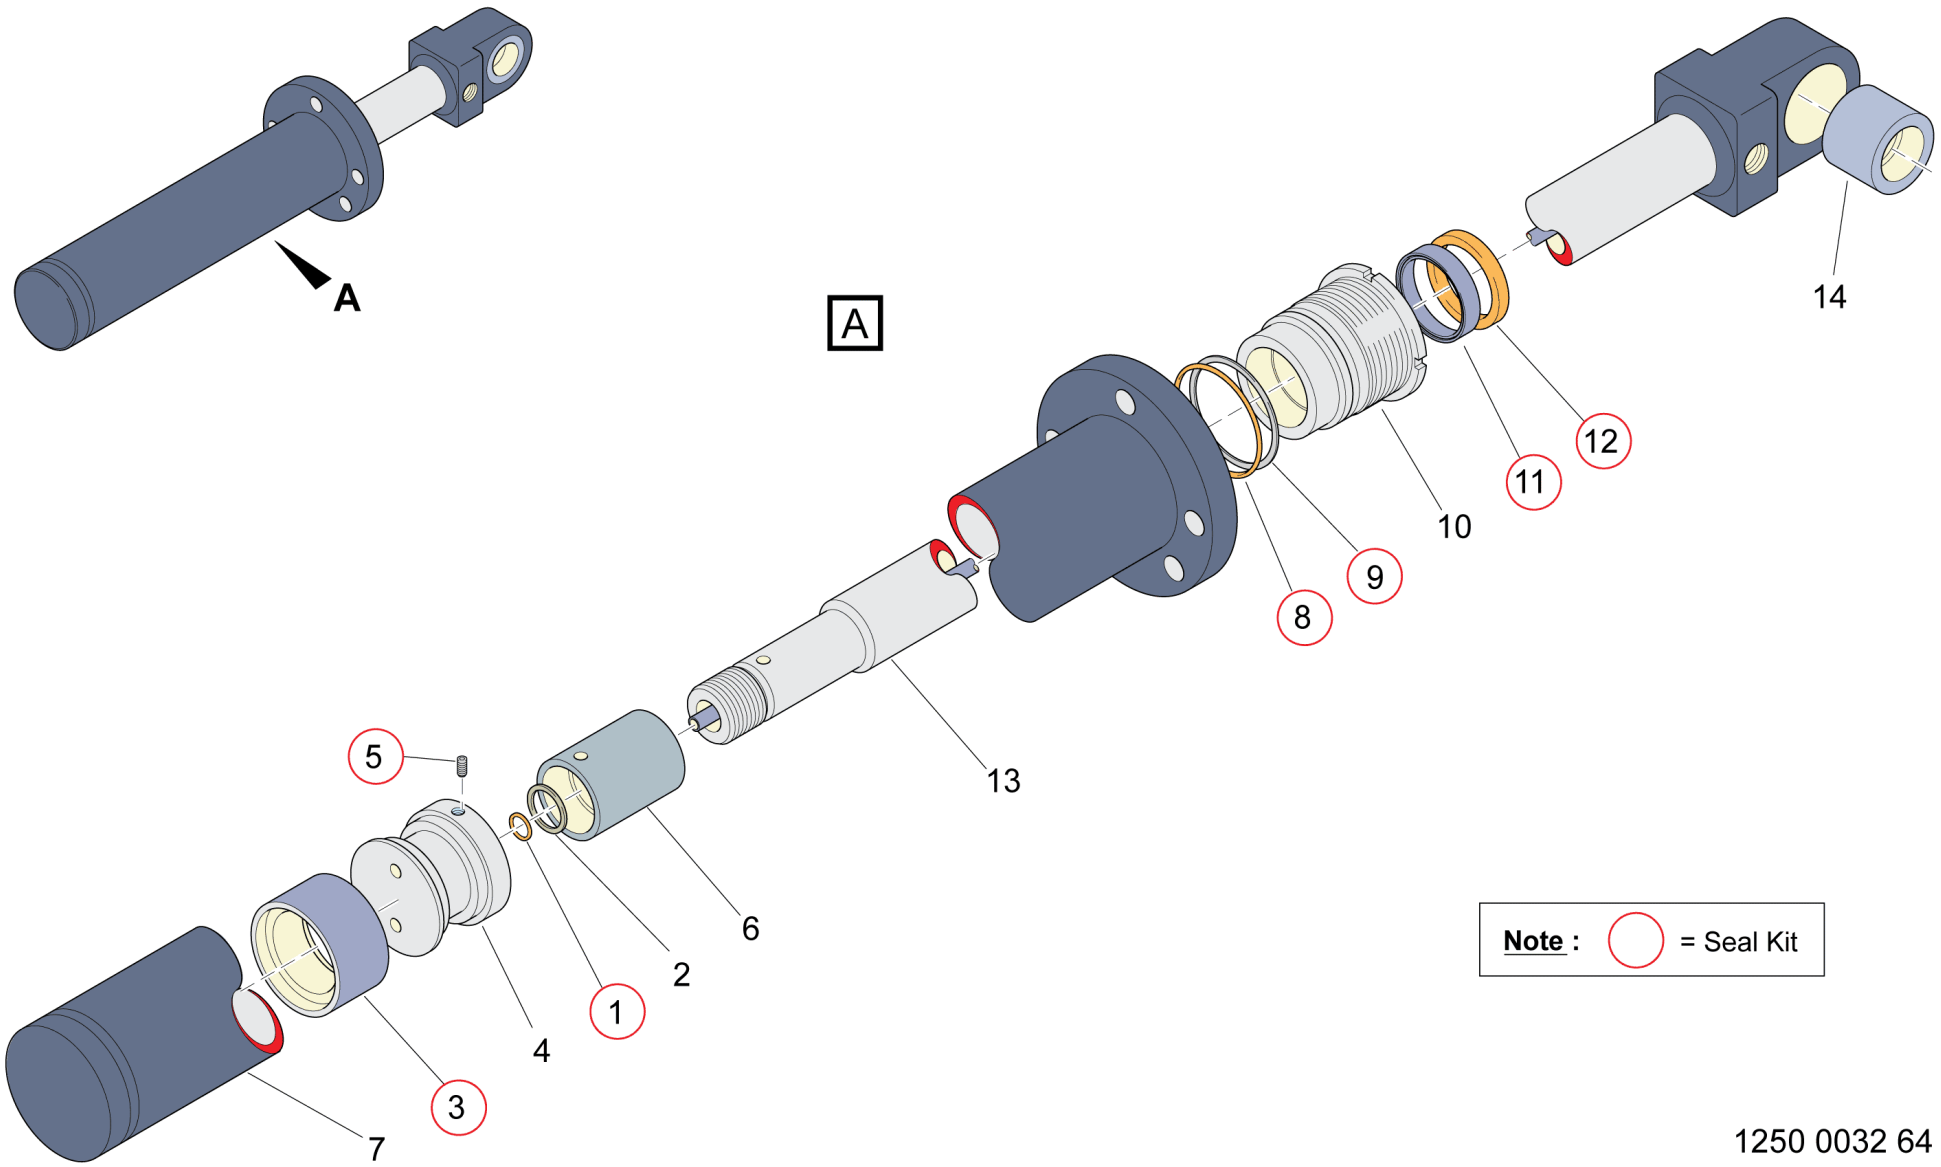

1250 0032 64

B0003443

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2592 58	1	SEAL KIT	TÄTNINGSSATS		INCL.REF. 1,3,5,8,9,11,12
1	0663 2116 00	1	O-RING	O-RING		9,3 X 2,4 70 SHORE
2	3128 2592 59	1	WASHER	BRICKA		
3	0665 0020 18	1	PISTON SEAL	KOLVTÄTNING		SKEGA 63 / 47 / 51 7045
4	3128 2592 61	1	PISTON	KOLV		
5	9125 7295 00	1	SET SCREW	STOPPSKRUV		A2 M 6 8
6	3128 2592 62	1	SPACER	DISTANS		
8	0663 6135 00	1	O-RING	O-RING		54,5 X 3 70 SHORE
9	0661 1500 66	1	BACK-UP RING	STÖDRING		58 63 2,5 1,3
10	9123 3554 00	1	COVER	LOCK		
11	0665 0010 14	1	SEAL RING	TÄTNINGSRING		STEFA 40/50 X 10,5 S11EI
12	0665 9170 00	1	WIPER	AVSTRYKARE		40 / 50 X 10 AU 92
13	3128 2592 63	1	PISTON ROD	KOLVSTÅNG		
14	9128 7342 00	1	BUSHING	BUSSNING		

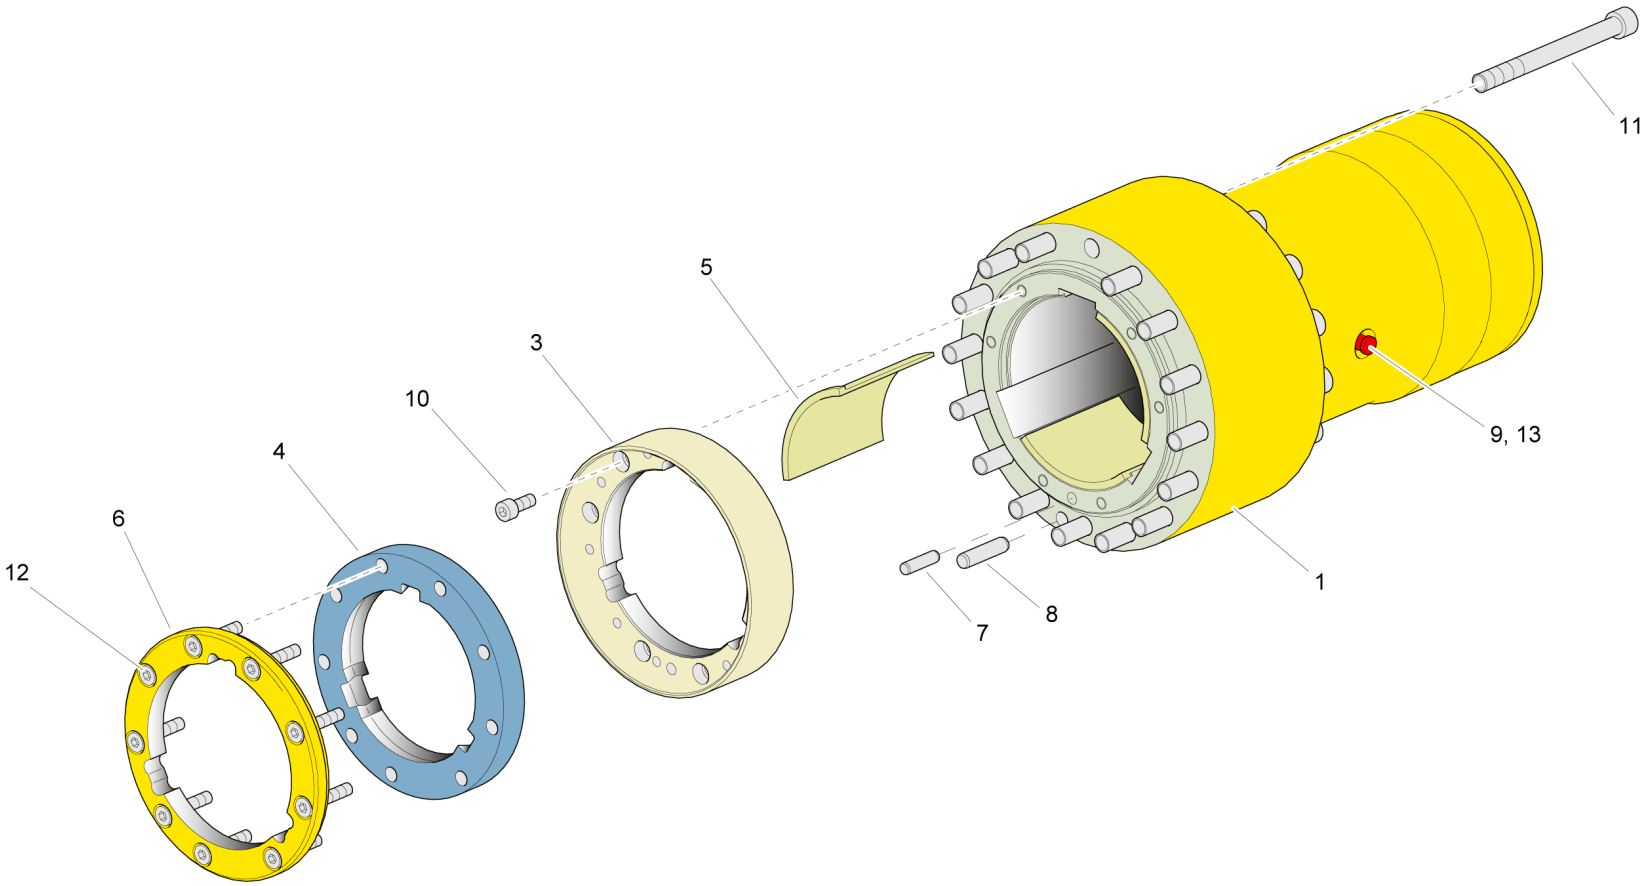


3125 4944 86 Ed05

B0048161

BEARING HOUSING / LAGERHUS 3125 4944 86

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3125 4944 03	1	BEARING HOUSING	LAGERHUS		
3	3128 2165 00	2	COVER	LOCK		
4	3128 2166 00	2	SEAL	TÄTNING		
5	3128 2169 00	6	BUSHING SEGMENT	BUSSN.SEGMENT		
6	3128 3219 59	2	WASHER	BRICKA		
7	0101 1364 00	2	PIN	PINNE		CP 8H6 X 30 - 11 1650 06
8	0102 0415 00	1	PIN	PINNE		CP 10M6 X 40 - 11 1922 04
9	0544 2162 00	3	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
10	0211 1962 81	12	SCREW	SKRUV		MC6S M 8 X 20 - 12.9
11	0211 1963 47	16	SCREW	SKRUV		MC6S M 12 X 130 - 12.9
12	0211 1327 03	18	SCREW	SKRUV		MC6S M 8 X 35 - 8.8 FZB
13	0686 9252 27	3	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

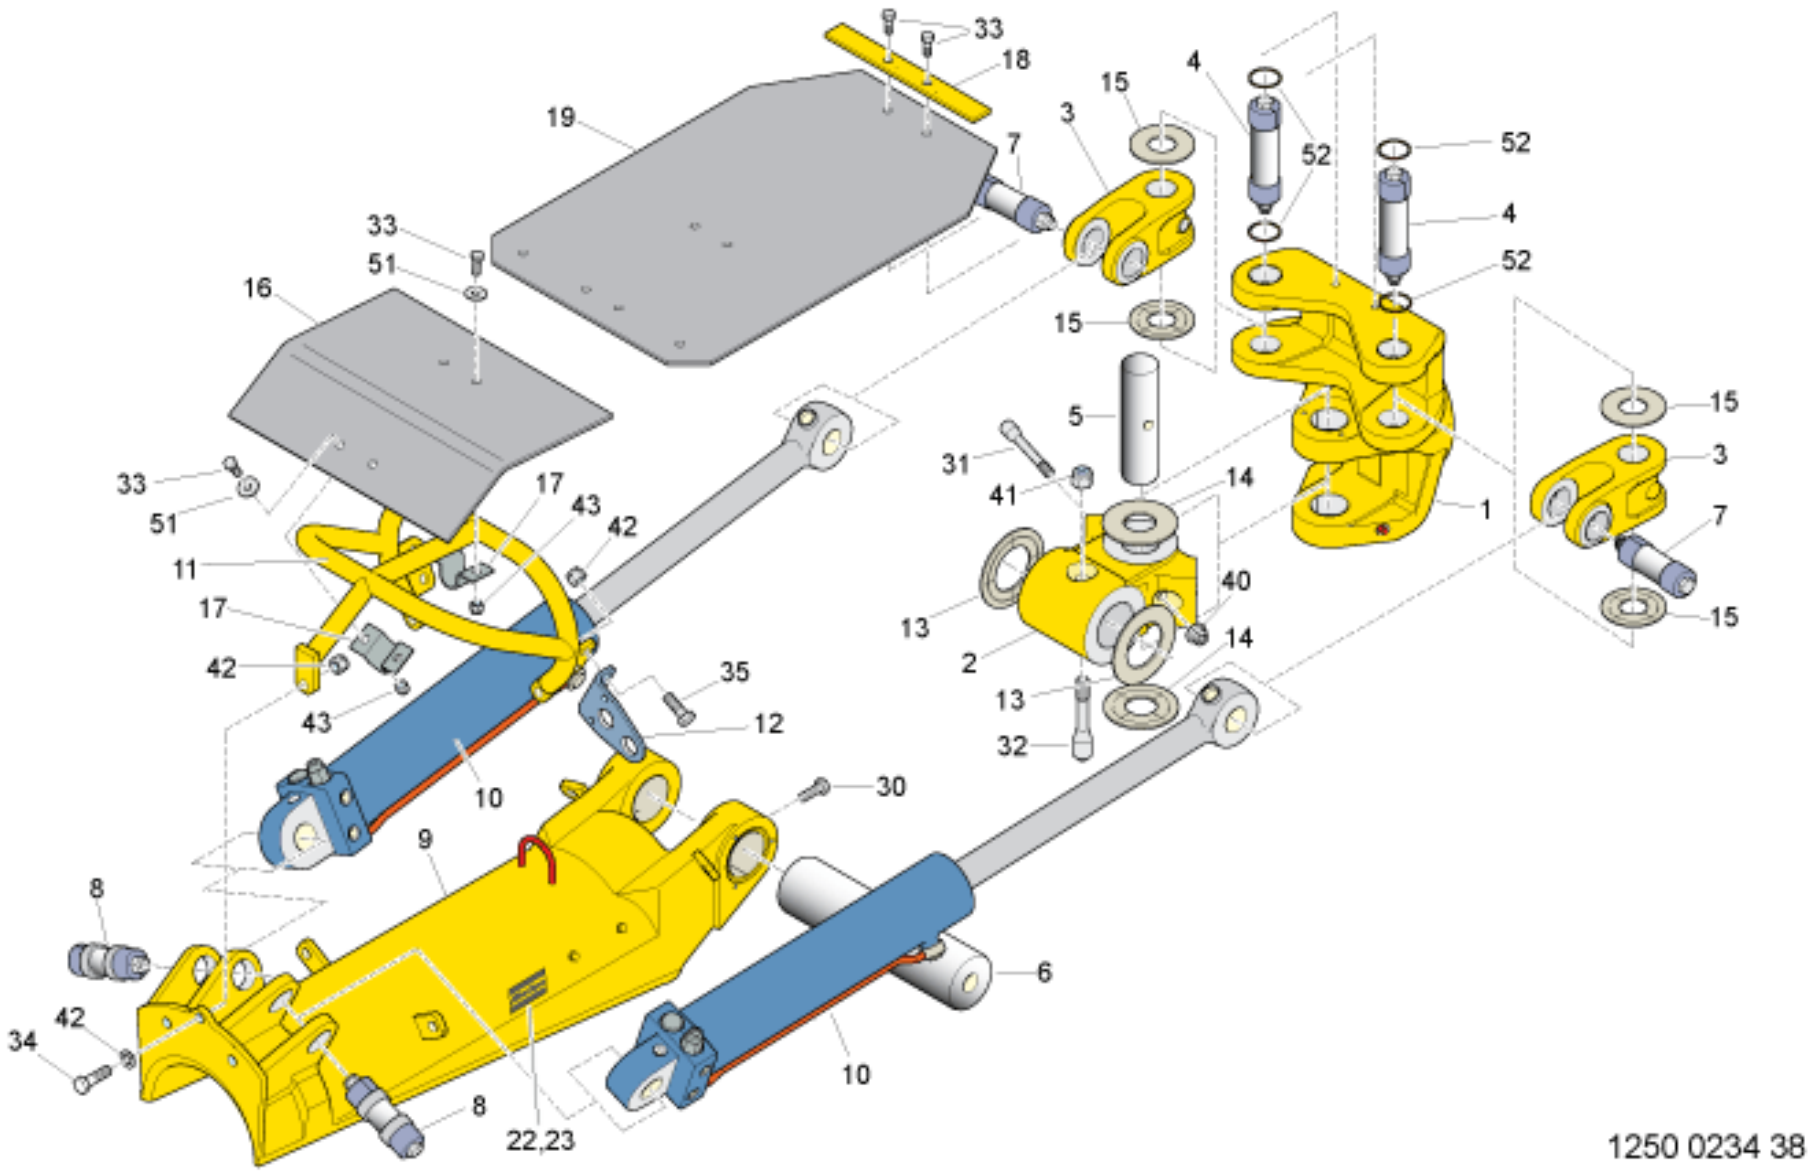

33
18
19
7
15
3
4
52
52
4
52
15
5
31
41
14
1
15
3
7
15
40
14
13
2
13
32
33
51
16
17
43
42
11
17
42
43
35
12
10
30
9
8
42
34
8
22,23
10
6
1250 0234 38

B0047041

BOOM PART / BOMDEL

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	BOOM ATTACHMENT	BOMFÄSTE	Page 473	
2	3128 2800 05	1	LINK	LÄNK		
3	3128 2800 07	2	LINK	LÄNK	Page 475	
4	3125 1974 80	2	EXPANDING SHAFT	EXP.AXEL	Page 477	
5	3128 3069 51	1	SHAFT	AXEL		
6	3128 3083 03	1	SHAFT	AXEL		
7	3125 1982 80	2	EXPANDING SHAFT	EXP.AXEL	Page 479	
8	3125 4937 80	2	EXPANDING SHAFT	EXP.AXEL	Page 481	
9	3128 2172 03	1	CYLIND.BRACKET	CYLINDERFÄSTE	Page 483	
10	9121 7017 02	2	HYDR. CYLINDER	HYDRAULCYLINDER	Page 485	
11	3128 0251 10	1	CYLINDER GUARD	CYLINDERSKYDD		
12	3128 0251 02	1	ATTACHMENT	FÄSTE		
13	3128 2800 08	2	THRUST BEARING	AXIALLAGER		
14	3128 2800 09	2	THRUST BEARING	AXIALLAGER		
15	3128 2800 10	4	THRUST BEARING	AXIALLAGER		
16	3128 3056 26	1	RUBBER CLOTH	GUMMIDUK		
17	3128 3020 55	2	ATTACHMENT	FÄSTE		
18	3128 3020 56	1	FLAT BAR	PLATTSTÅNG		
19	3128 3020 54	1	RUBBER CLOTH	GUMMIDUK		
22	0690 1116 00	2	PLATE	SKYLT		160 X 80
23	0129 3104 00	8	BLIND RIVET	BLINDNIT		2,4 X 7,4 TAP / D 48 BS
30	0211 1963 28	10	SCREW	SKRUV		MC6S M 16 X 80 - 12.9
31	3128 3069 54	1	BOLT	BULT		
32	3128 3069 55	1	BOLT	BULT		
33	0147 1478 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 45 - 8.8 FZB
40	0291 1128 26	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7043
41	0291 1128 28	1	LOCK NUT	LÅSMUTTER		M 20 - 8 FZB / ISO 7040
42	0291 1128 25	5	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
50	0301 2378 00	3	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
52	0663 2135 00	4	O-RING	O-RING		44,2 X 3 70 SHORE

BOOM ATTACHMENT / BOMFÄSTE

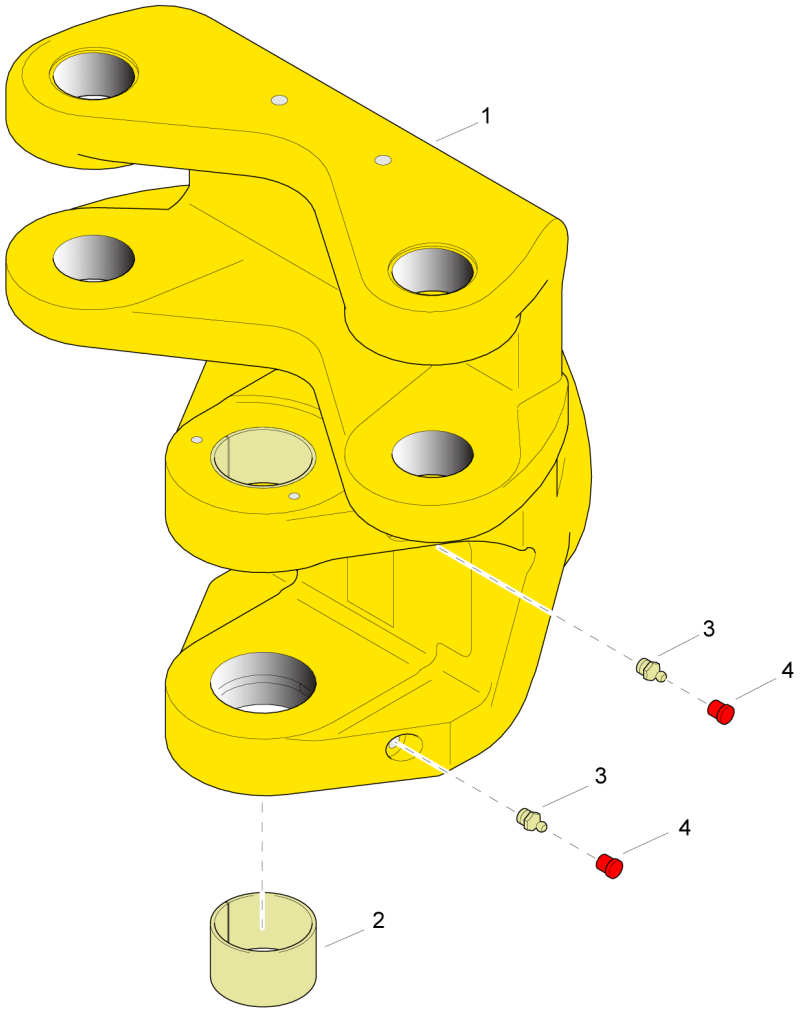


3128 3080 69 Ed02

B0045025

BOOM ATTACHMENT / BOMFÄSTE


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3080 42	1	BOOM ATTACHMENT	BOMFÄSTE		
2	0500 4520 03	2	BUSHING	BUSSNING		60 / 65 X 40 6040 DX
3	0544 2162 00	2	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
4	0686 9252 27	2	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

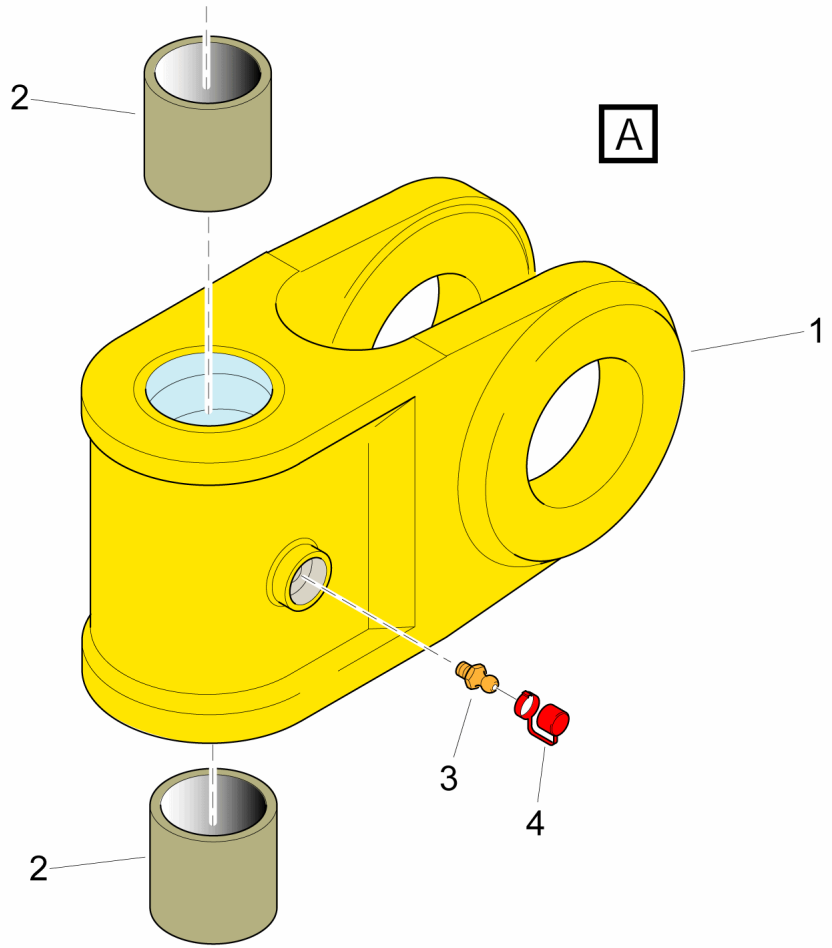

1250 0146 65

B0027434

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	LINK	LÄNK		
2	3177 0074 00	2	BEARING BUSHING	LAGERBUSSNING		45 50 40 F8-H8 H7
3	0544 2153 00	1	GREASE NIPPLE	FETTNIPPEL		AH G 1/4 SMS 1585
4	0686 9252 27	1	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

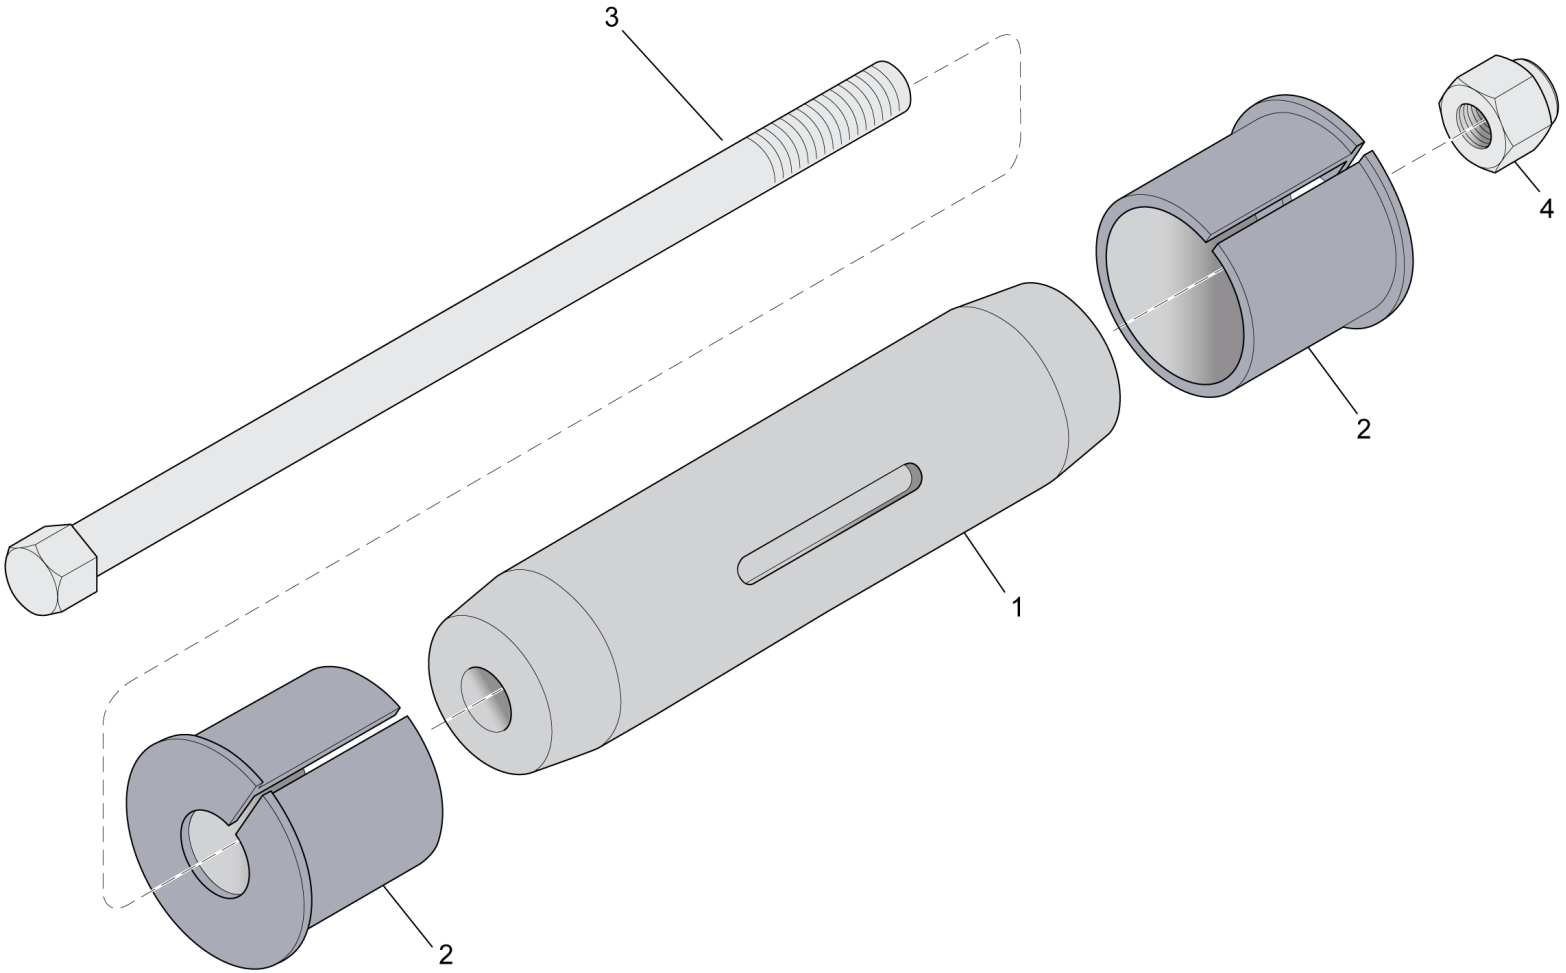


1250 0001 83

B0000559

EXPANDING SHAFT / EXP.AXEL

3125 1974 80


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3077 86	1	SHAFT	AXEL		
2	3125 2179 00	2	BUSHING	BUSSNING		
3	0147 1960 28	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 210 - 8.8 FZB
4	0291 1128 25	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040

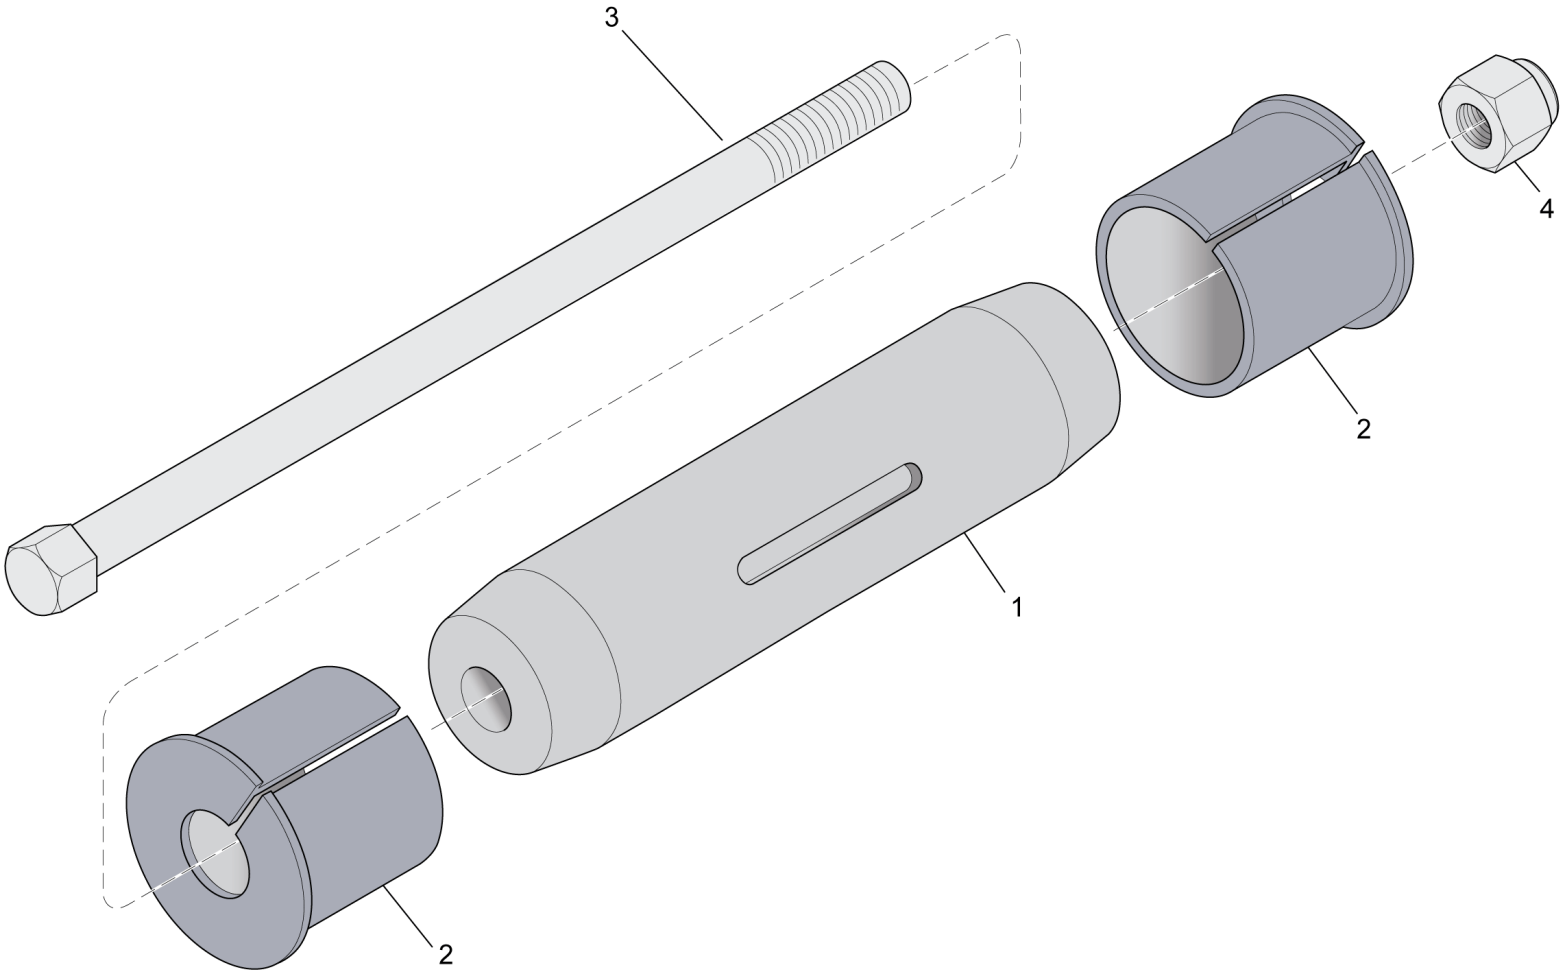

1250 0001 83

B0000559


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	SHAFT	AXEL		
2	3125 2179 00	2	BUSHING	BUSSNING		
3	0147 1496 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 160 - 8.8 FZB
4	0291 1128 25	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040

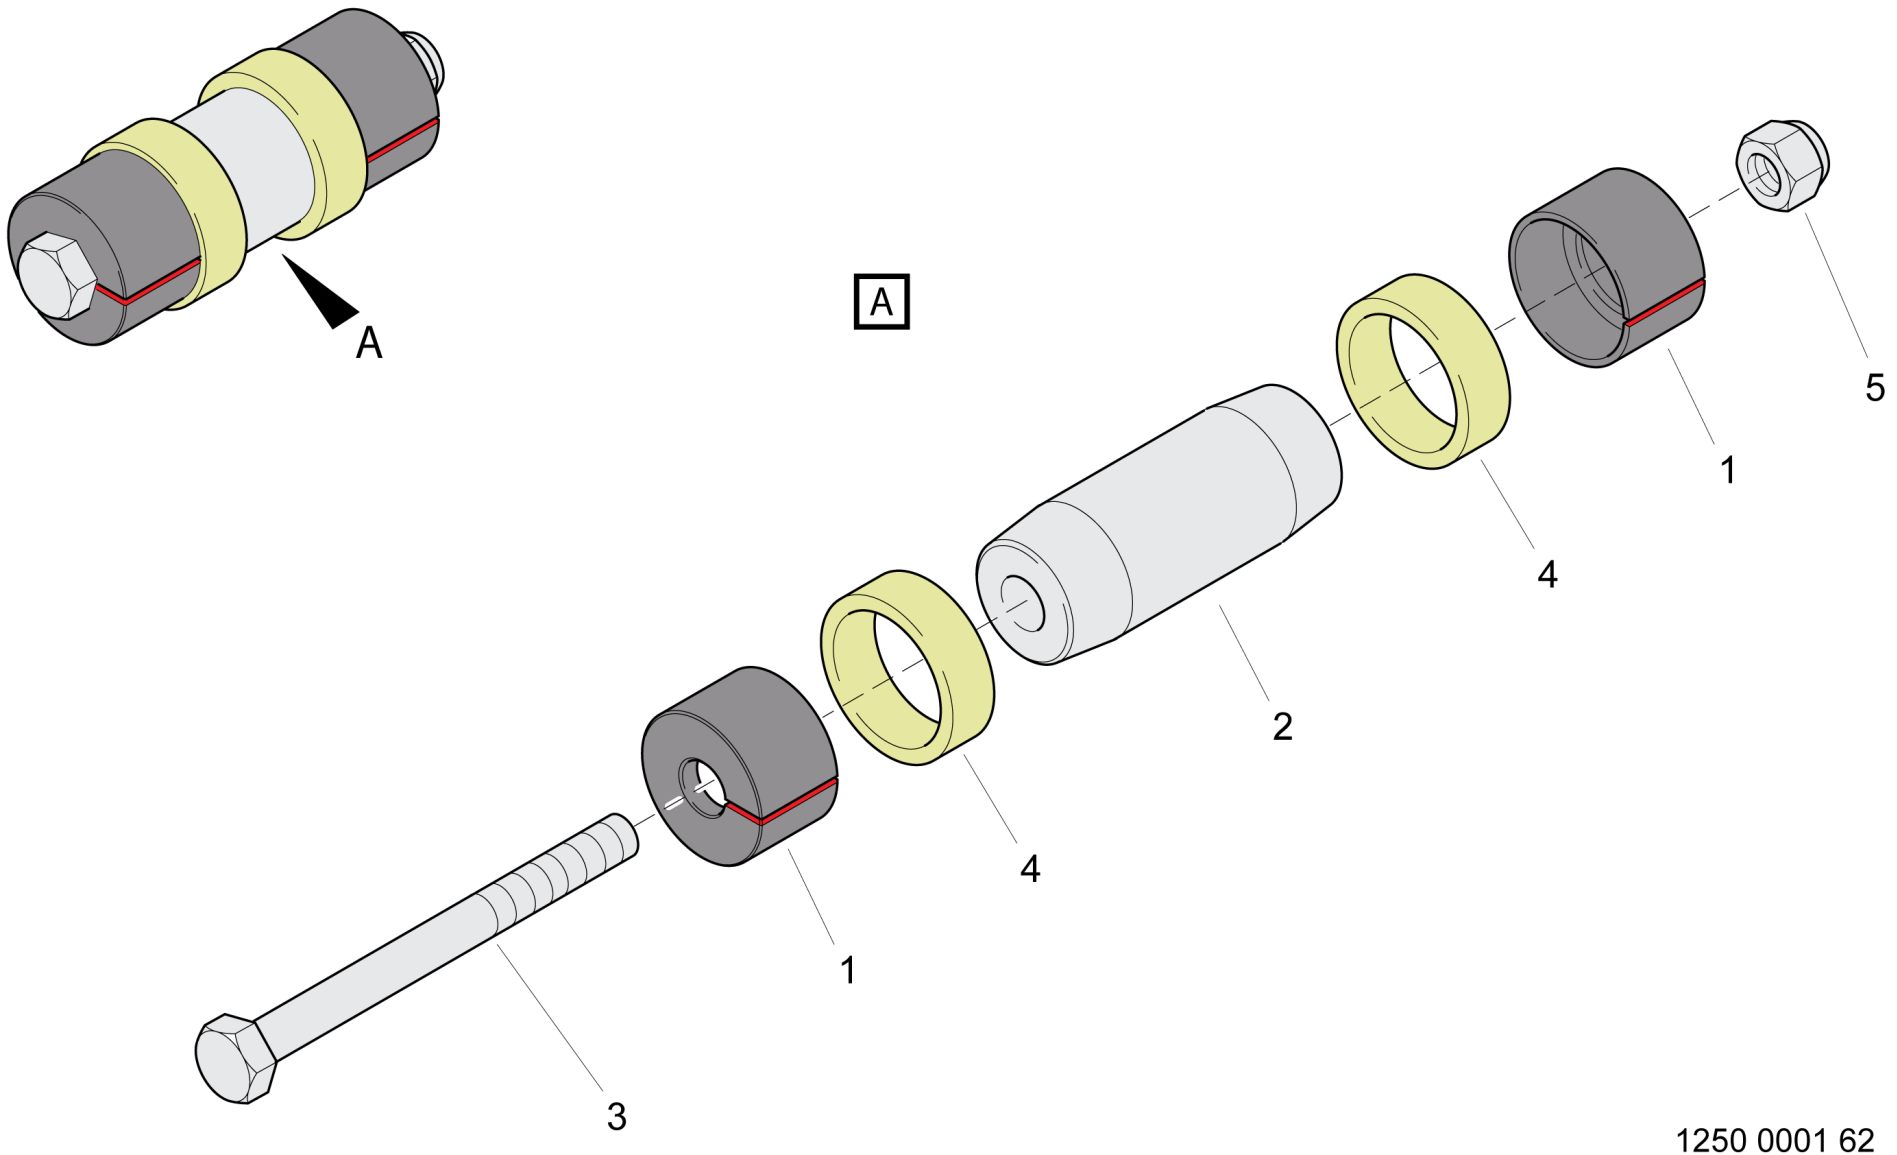

1250 0001 62


B0012036

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3125 4937 00	2	BUSHING	BUSSNING		
2	–	1	SHAFT	AXEL		
3	0147 1496 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 160 - 8.8 FZB
4	3125 2002 00	2	SPACER RING	DISTANSRING		
5	0291 1128 25	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040

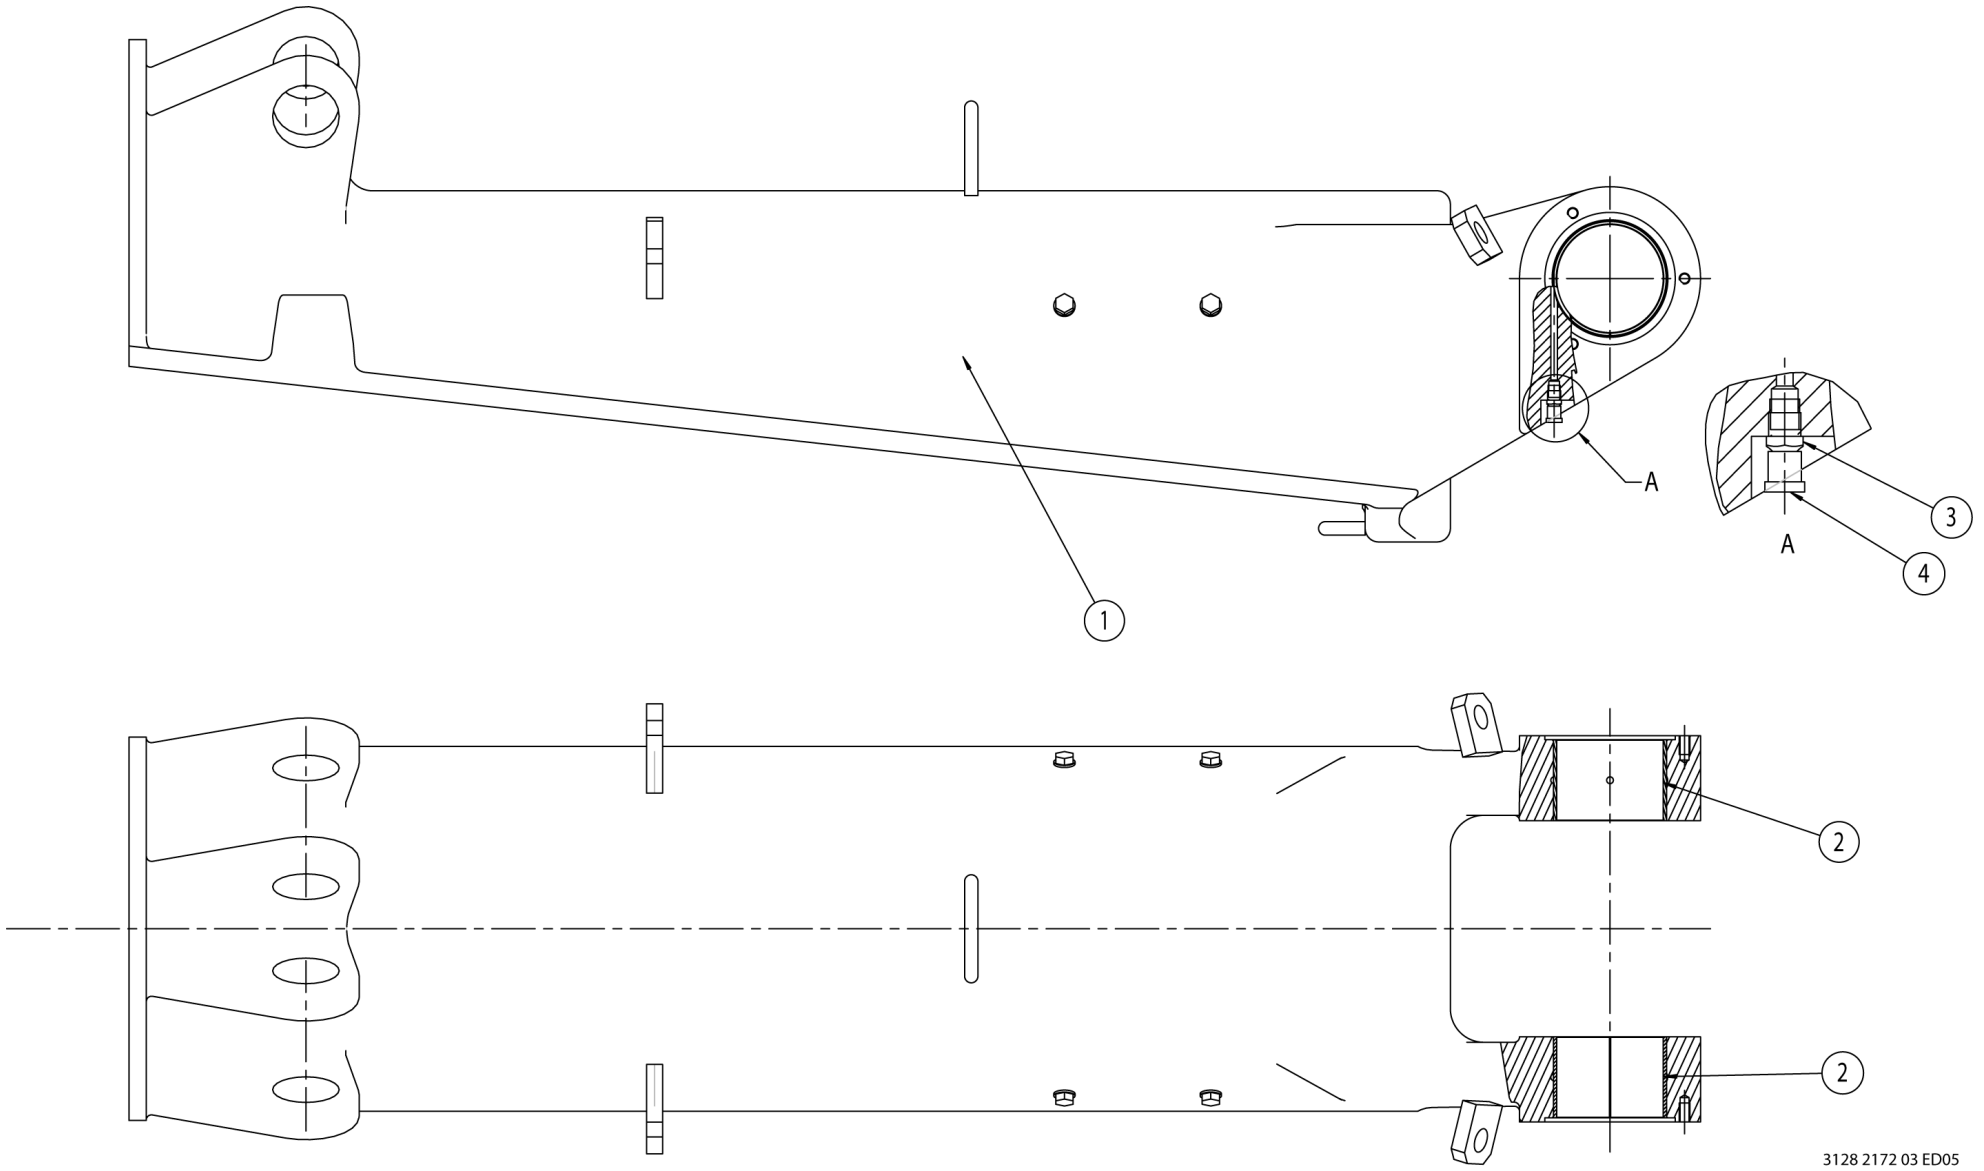

B0025302


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 2172 02	1	CYLIND.BRACKET	CYLINDERFÄSTE		
2	3128 3038 97	2	BUSHING	BUSSNING		
3	0544 2162 00	2	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
4	0686 9252 27	2	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

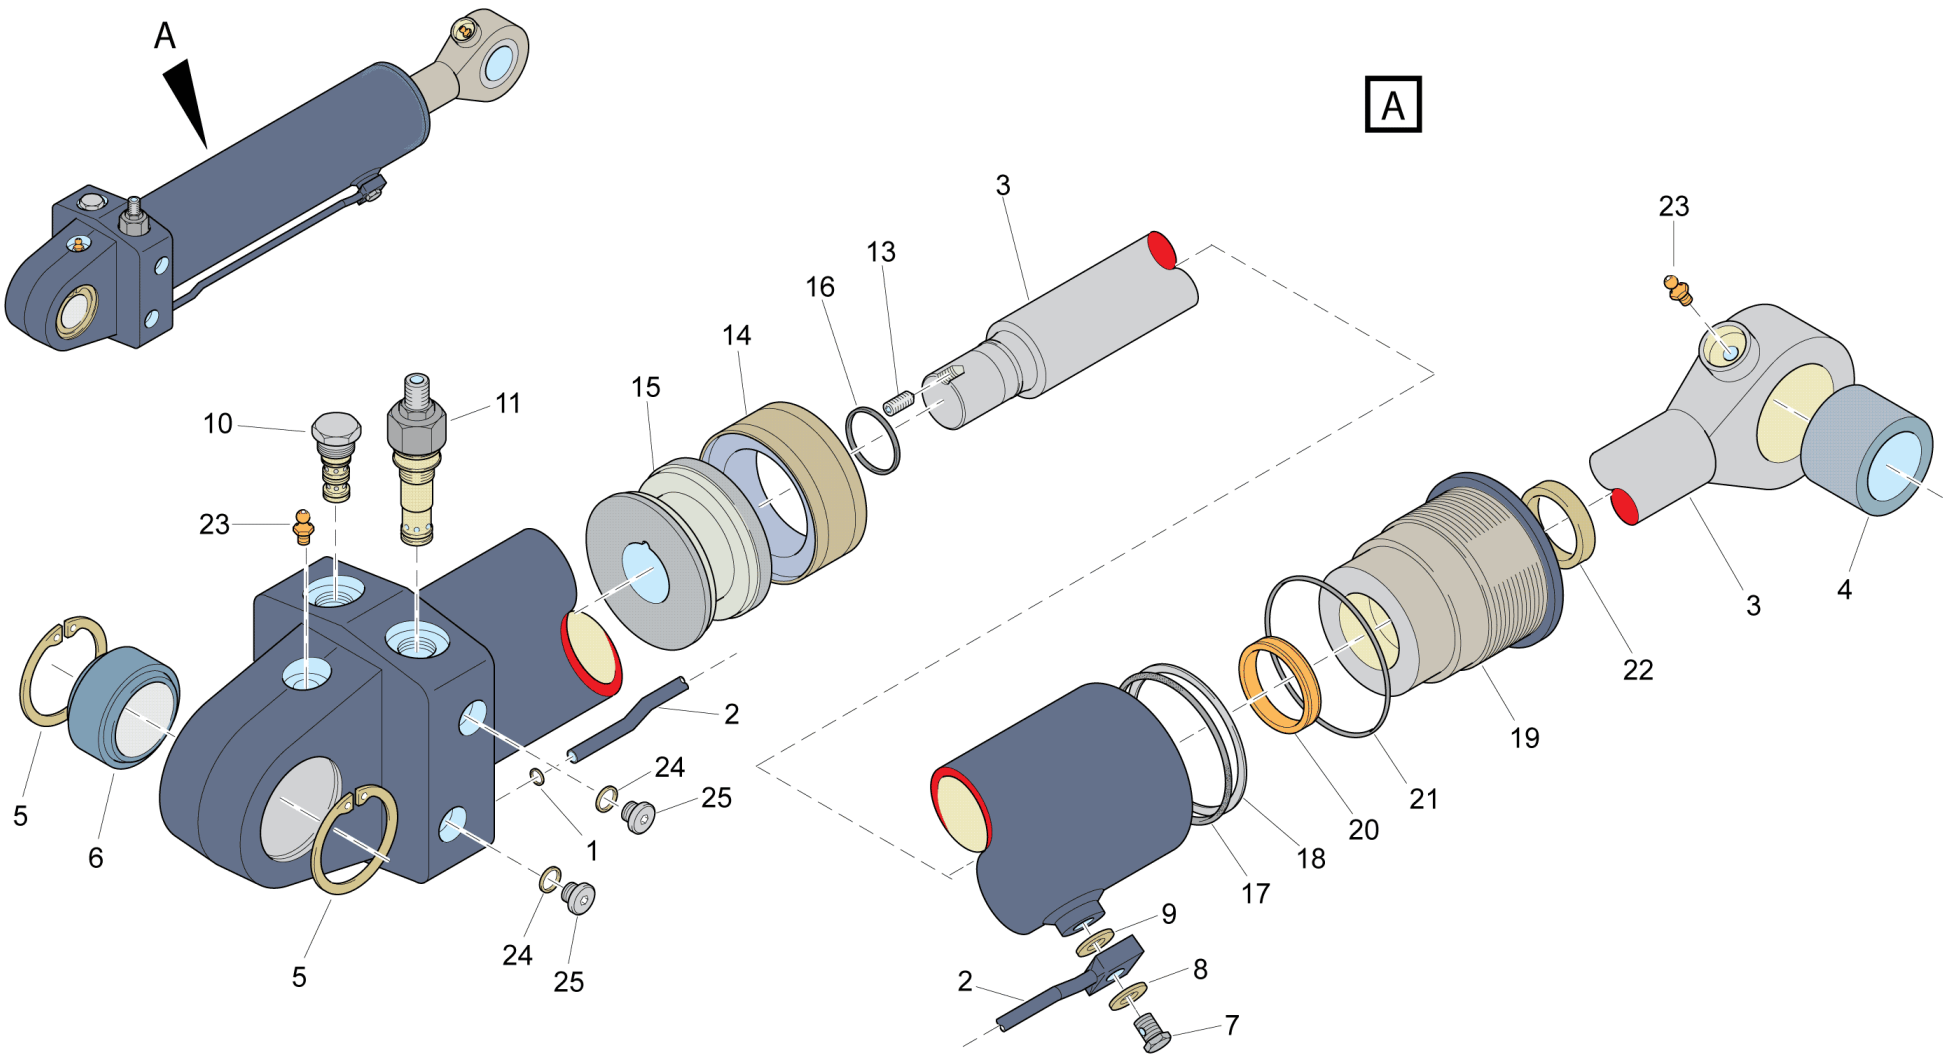

1250 0133 96

B0024408


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	8231 1206 98	2	SEAL KIT	TÄTNINGSSATS		FOR STERLING VALVES
	9120 0994 01	1	SEAL KIT	TÄTNINGSSATS		REF. 1,8,9
	9121 7017 50	1	SEAL KIT	TÄTNINGSSATS		REF.1,8,9,13,14,16-28,20-22
1	9125 6186 00	2	O-RING	O-RING		9,1 X 1,6 90 SHORE
2	9126 4492 02	1	PIPE	RÖR		
3	9126 1812 03	1	PISTON ROD	KOLVSTÅNG		
4	9128 7344 00	1	BUSHING	BUSSNING		
5	0335 2155 00	2	CIRCLIP	SPÅRRING		SGH 68 X 2,5 DIN 472
6	0501 0000 16	1	BEARING,SP.PL.	LEDLAGER		45 / 68 X 32
7	9127 2300 00	1	SCREW	HÅLSKRUV		
8	9125 6648 00	1	SEAL WASHER	TÄTNINGSBRICKA		
9	0661 1000 13	1	SEAL WASHER	TÄTNINGSBRICKA		18,7 26,0
10	8231 1202 86	1	CHECK VALVE	BACKVENTIL	Page 461	
11	8231 1203 06	1	OVERCENT.VALVE	LASTHÅLL.VENTIL	Page 487	
13	0196 1552 10	1	SET SCREW	STOPPSKRUV		M 8 X 12 SK6SS DIN 916
14	0665 0800 34	1	PISTON SEAL	KOLVTÄTNING		E1X 75 100
15	9124 9567 00	1	PISTON	KOLV		
16	0663 2131 00	1	O-RING	O-RING		34,2 X 3 70 SHORE
17	0663 6143 00	1	O-RING	O-RING		94,5 X 3 70 SHORE
18	0661 1500 68	1	BACK-UP RING	STÖDRING		95 100 2,5 1,3
19	9123 6507 11	1	COVER COMPL.	LOCK KOMPL.	Page 489	
20	0665 0010 16	1	SEAL RING	TÄTNINGSRING		STEFA 50 / 65 X 10 S11EI
21	9125 6059 00	1	O-RING	O-RING		99,1 X 2,4 70 SHORE
22	0665 9181 00	1	WIPER	AVSTRYKARE		50 / 60 X 10 AU 92
23	0544 2106 00	2	GREASE NIPPLE	SMÖRJNIPPEL		AH M 6X1 SMS 1568
24	9125 8016 00	2	PLUG	PROPP		3/8' BSP DIN 908
25	0661 1000 16	2	SEAL WASHER	TÄTNINGSBRICKA		17,28 X 23,8

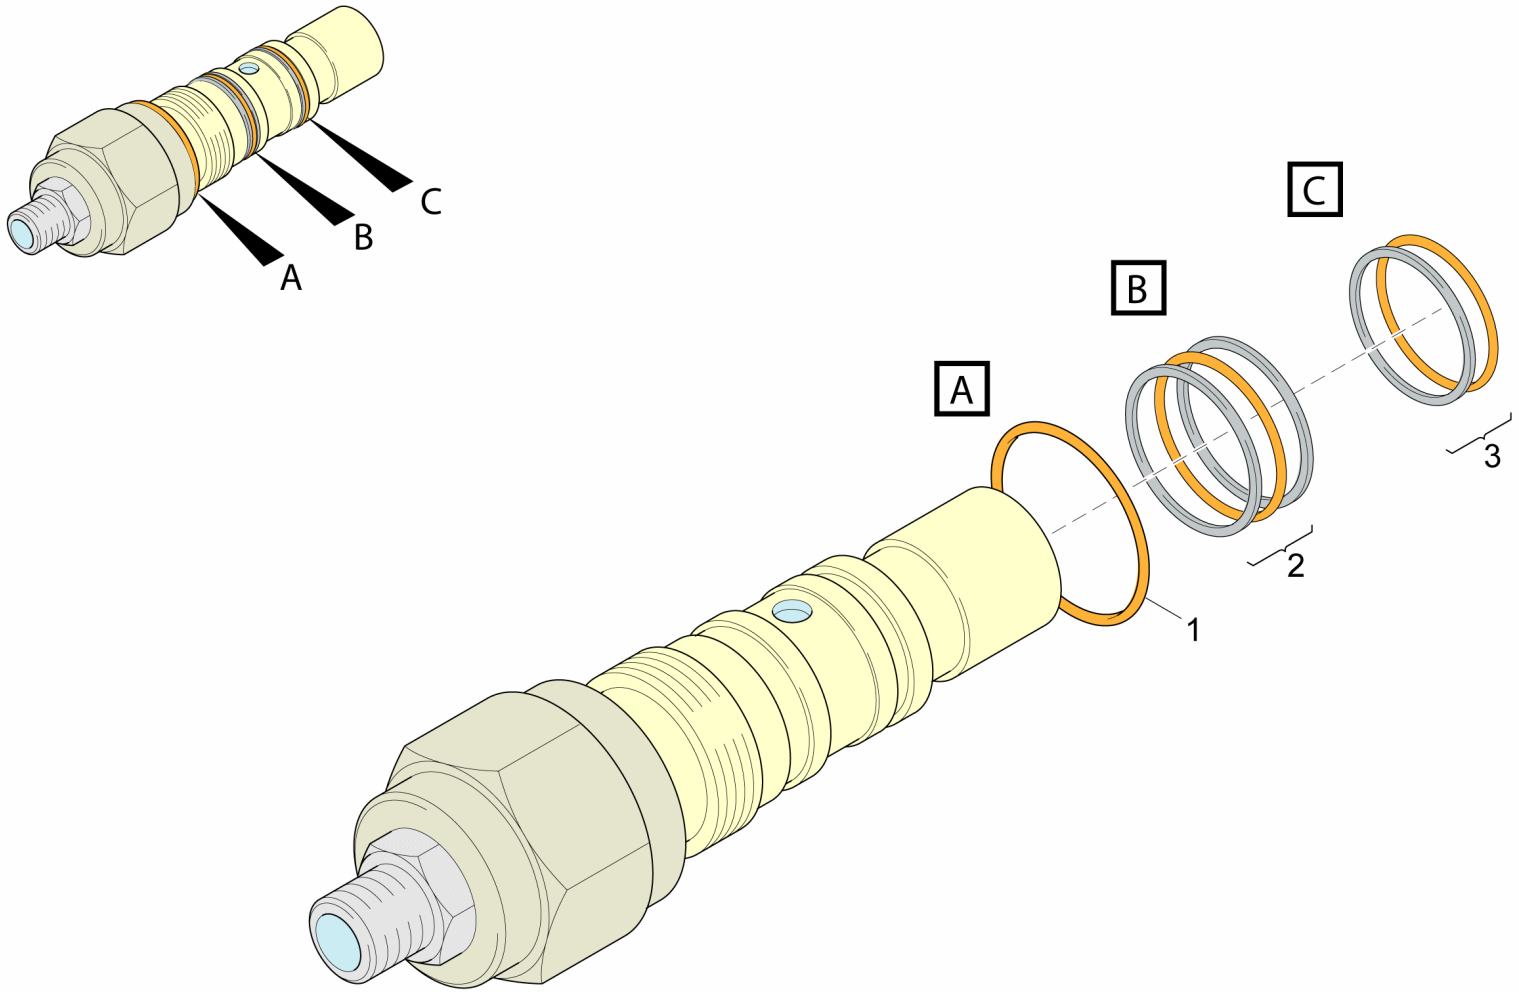

1250 0113 60

B0012650

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	8231 1206 98	1	SEAL KIT	TÄTNINGSSATS		INCL. ITEM 1-3

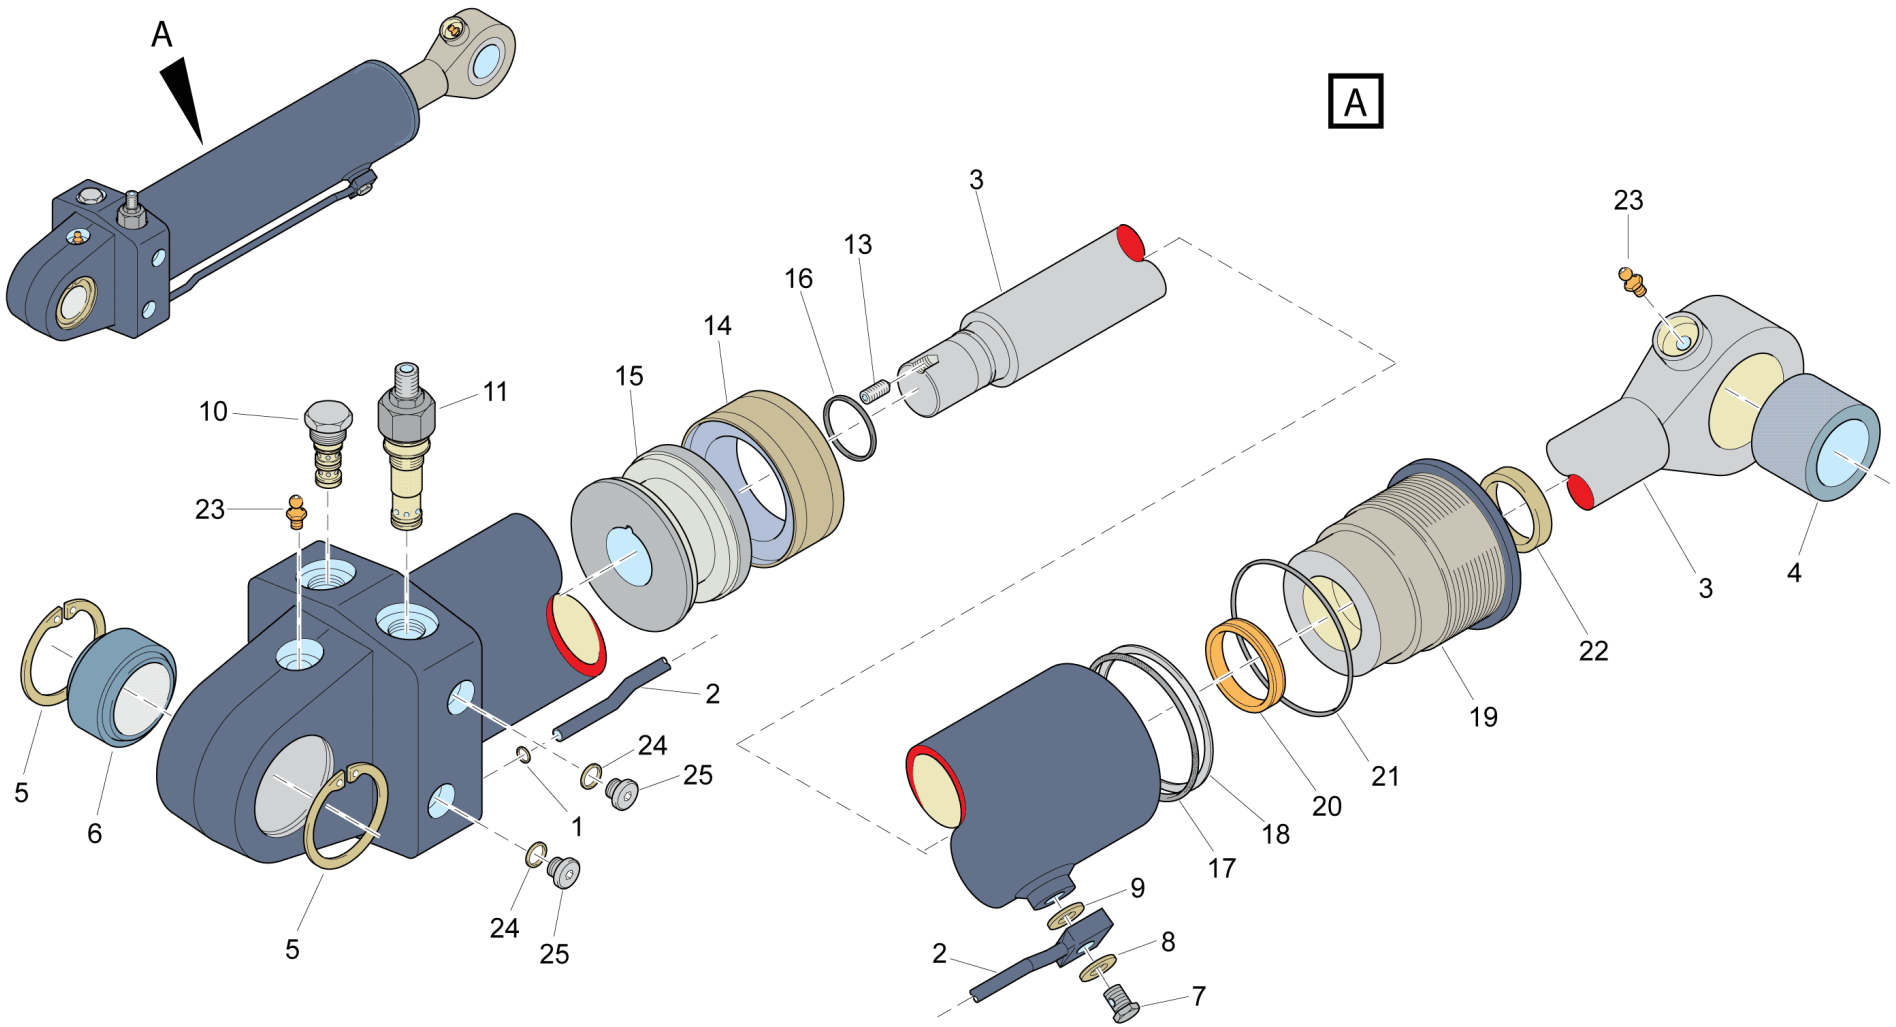


1250 0133 96


B0000952

COVER COMPL. / LOCK KOMPL. 9123 6507 11

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9123 3557 00	1	COVER	LOCK		
2	0663 6143 00	1	O-RING	O-RING		94,5 X 3 70 SHORE
3	0661 1500 68	1	BACK-UP RING	STÖDRING		95 100 2,5 1,3
4	9125 6584 00	1	SEALRING	KOLVSTÅNGSTÄTN.		HC09 DIA 50MM
5	0665 9181 00	1	WIPER	AVSTRYKARE		50 / 60 X 10 AU 92

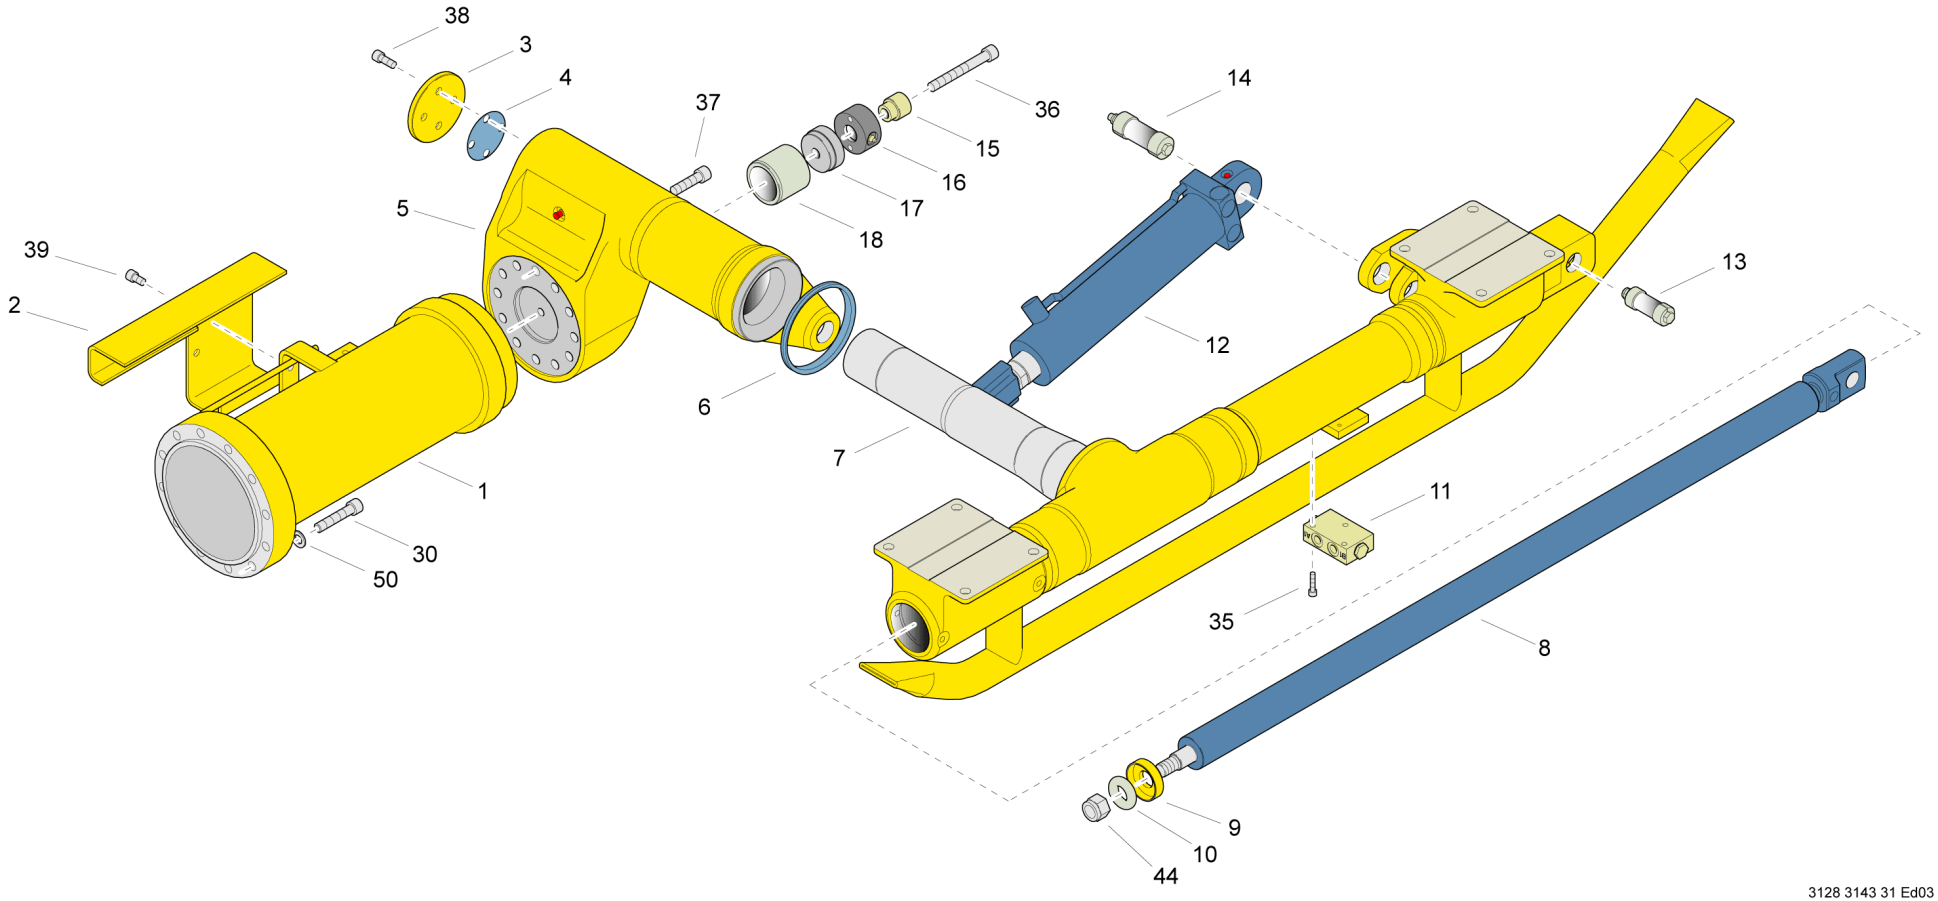
38
3
4
37
36
14
15
16
17
18
5
39
2
13
12
6
7
1
30
50
11
35
8
9
10
44
3128 3143 31 Ed03


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3126 44	1	TURNING DEVICE	VRIDDON	Page 493	
2	3128 3140 86	1	PROTECTION	SKYDD		
3	3125 4941 00	1	COVER	LOCK		
4	3125 4924 00	1	SHIM	MELLANLÄGG		
5	3128 3146 44	1	BEARING HOUSING	LAGERHUS	Page 495	RIGHT
6	0666 8096 03	1	AXIAL SEAL	AXIALTÄTNING		135 / 149 X 18
7	3128 3217 71	1	FEED HOLDER	MATARHÅLLARE		
8	3128 2592 43	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 497	
9	3153 8650 00	1	WASHER	BRICKA		
10	3122 0309 00	1	RUBBER RING	GUMMIRING		
11	9106 0630 10	1	DOUBLE CH.VALVE	HYDRAULLÅS	Page 455	
12	3128 3219 00	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 499	
13	3125 4968 80	1	EXPANDING SHAFT	EXP.AXEL	Page 463	
14	3125 4952 80	2	EXPANDING SHAFT	EXP.AXEL	Page 501	
15	3125 4964 00	1	BUSHING	BUSSNING		
16	3125 4965 00	1	BUSHING	BUSSNING		
17	3125 4963 00	1	WASHER	BRICKA		
18	3128 3059 15	1	SPACER SLEEVE	DISTANSHYLSA		
30	0211 1963 28	12	SCREW	SKRUV		MC6S M 16 X 80 - 12.9
35	0211 1962 91	3	SCREW	SKRUV		MC6S M 8 X 35 - 12.9
36	0211 1963 48	1	SCREW	SKRUV		MC6S M 16 X 130 - 12.9
37	0211 1963 09	12	SCREW	SKRUV		MC6S M 16 X 60 - 12.9
38	0211 1962 89	4	SCREW	SKRUV		MC6S M 12 X 30 -12.9
39	0211 1960 83	2	SCREW	SKRUV		MC6S M 12 X 20 - 12.9
44	0291 1128 30	1	LOCK NUT	LÅSMUTTER		M 24 - 8 FZB / ISO 7040
50	0301 2378 00	12	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB

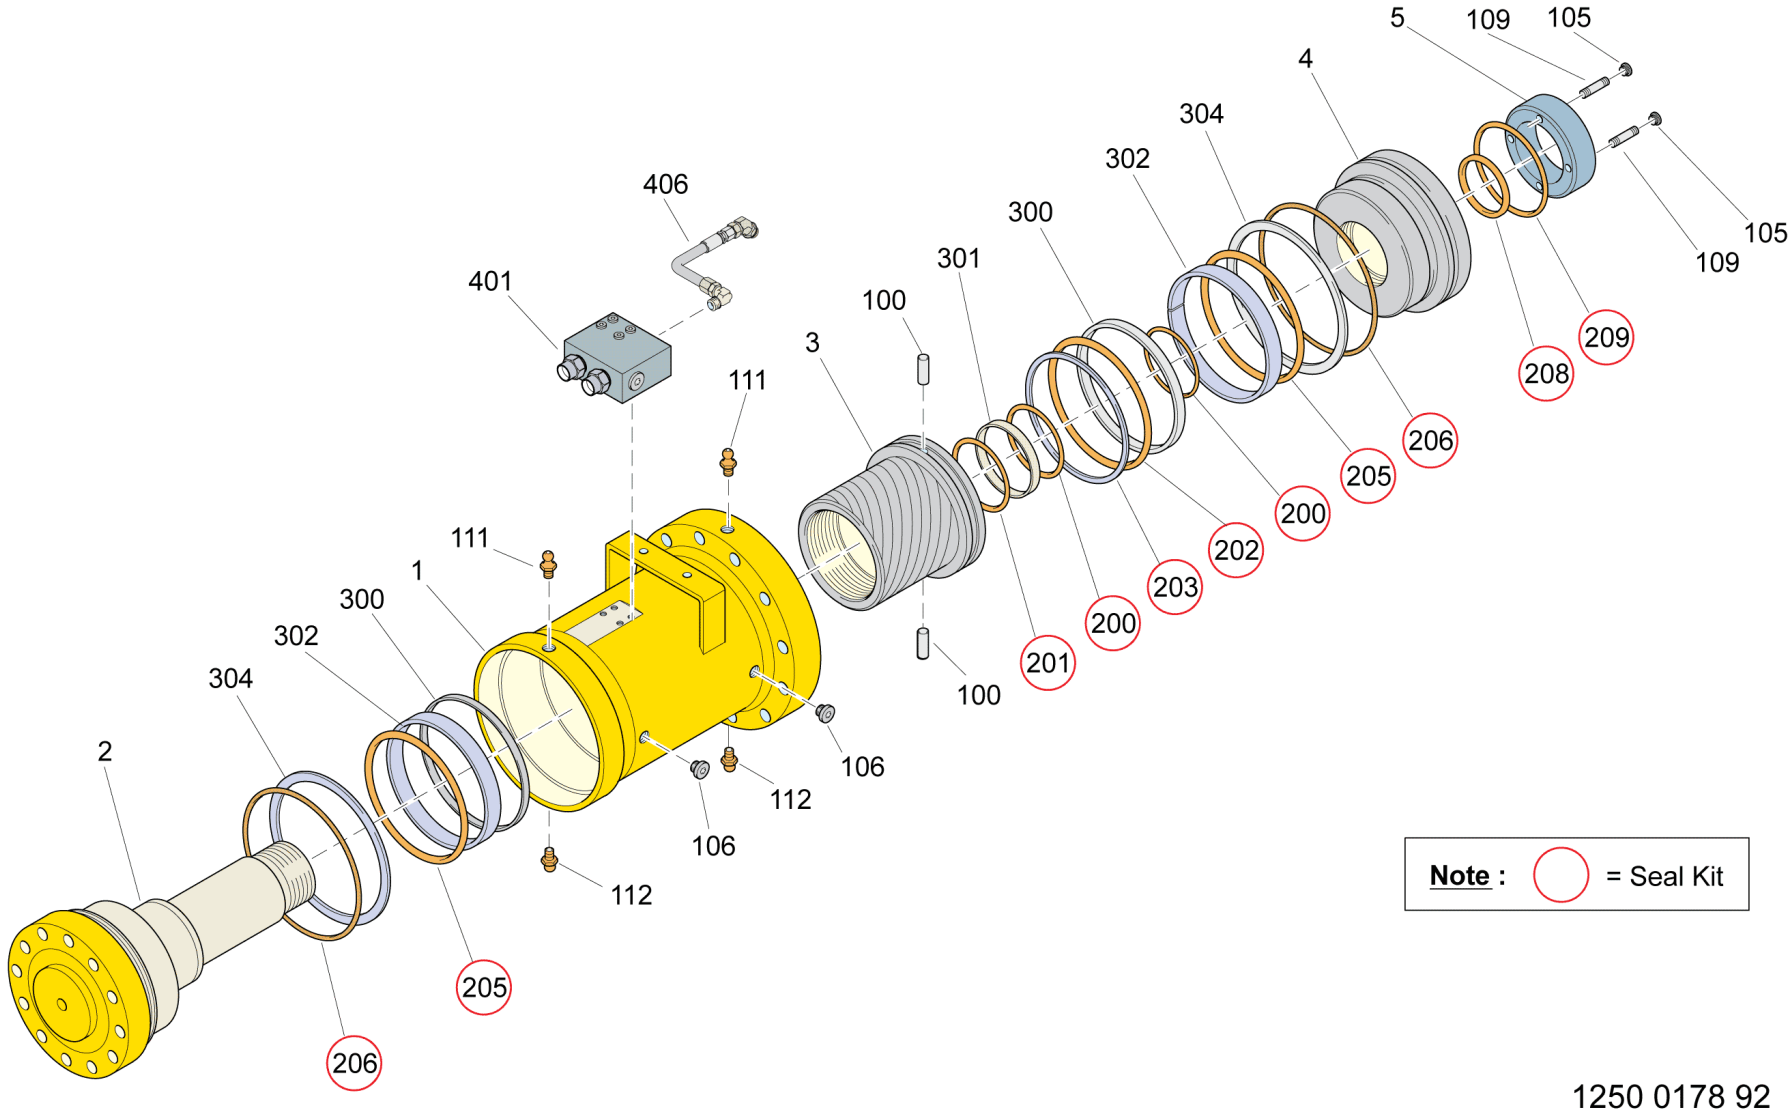

1250 0178 92

B0038942

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2091 44	1	SEAL KIT	TÄTNINGSSATS		INCL.POS. 200-203,205,206, 208,209
	3128 2091 45	1	BEARING KIT	LAGERSATS		INCL.POS. 300-304
	3128 3127 07	1	KIT	SATS		INCL.POS. 100,105,106,109, 111,112
1	3128 3127 08	1	HOUSE	HUS		
2	3128 3127 09	1	SHAFT	AXEL		
3	3128 3127 10	1	PISTON	KOLV		
4	3128 3126 88	1	END CAP	ÄNDMUFF		
5	3128 3127 11	1	LOCK NUT	LÅSMUTTER		
111	3128 3151 47	2	GREASE NIPPLE	SMÖRJNIPPEL		
112	3128 3151 48	2	BLEEDER SCREW	AVLUFTN.SKRUV		
401	3128 3127 12	1	VALVE	VENTIL		
406	3128 3127 13	1	TUBE	RÖR		

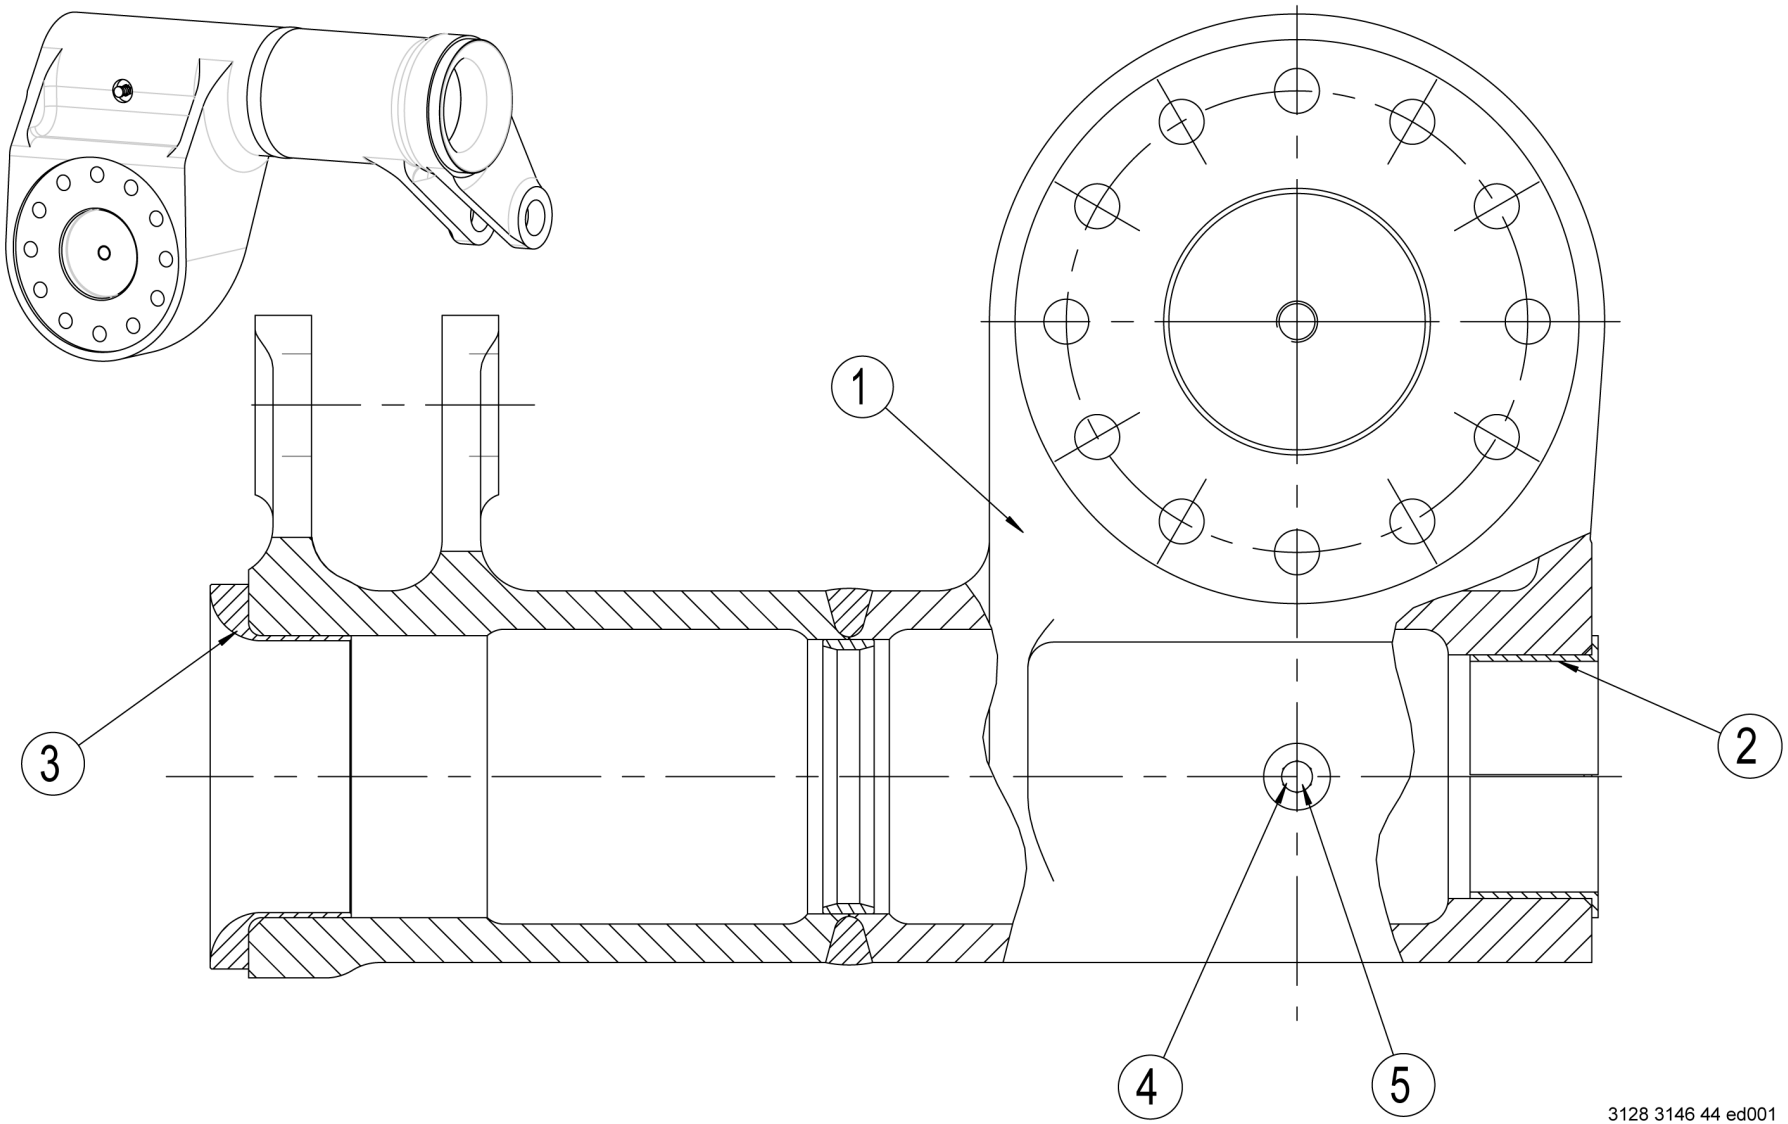


B0029275

BEARING HOUSING / LAGERHUS

3128 3146 44 RIGHT


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3146 43	1	BEARING HOUSING	LAGERHUS		
2	0500 4500 03	1	FLANGE BEARING	FLÄNSLAGER		B1T 90 95 50 110
3	3128 3141 67	1	BUSHING	BUSSNING		
4	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
5	0686 9252 27	1	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

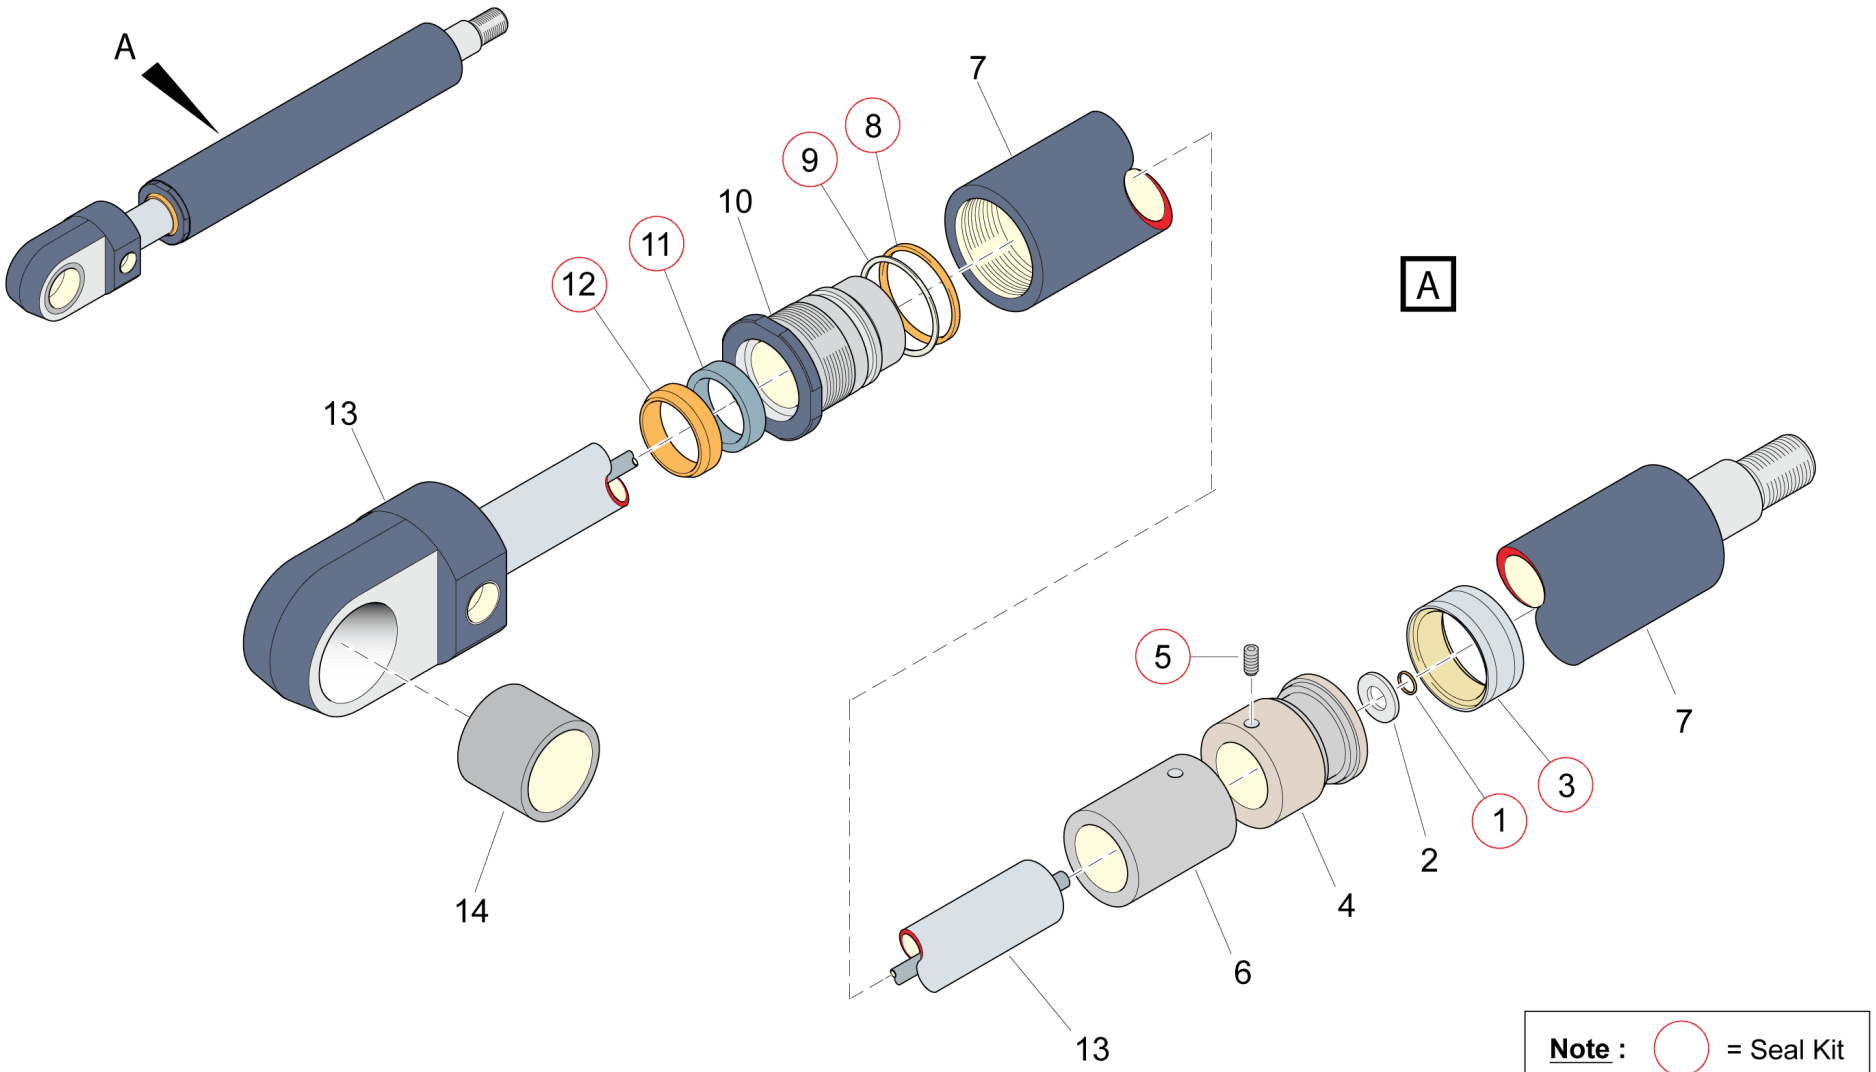

1250 0032 65

B0038392


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2592 54	1	SEAL KIT	TÄTNINGSSATS		1,3,5,8,9,11,12
1	0663 2116 00	1	O-RING	O-RING		9,3 X 2,4 70 SHORE
2	3128 2592 49	1	WASHER	BRICKA		
3	–	1	SEAL	TÄTNING		M 50/40 X 12,5
4	3128 2592 55	1	PISTON	KOLV		
5	9125 7295 00	1	SET SCREW	STOPPSKRUV		A2 M 6 8
6	3128 2592 56	1	SPACER	DISTANS		
8	0663 2135 00	1	O-RING	O-RING		44,2 X 3 70 SHORE
9	0661 1500 65	1	BACK-UP RING	STÖDRING		45 50 2,5 1,3
10	9123 3552 00	1	CYLINDER COVER	CYLINDERLOCK		
11	0665 0010 12	1	SEAL RING	TÄTNINGSRING		A1 32 40
12	0665 9100 17	1	WIPER	AVSTRYKARE		32 / 45 X 10 AU 94
13	3128 2592 57	1	PISTON ROD	KOLVSTÅNG		
14	9128 7342 00	1	BUSHING	BUSSNING		

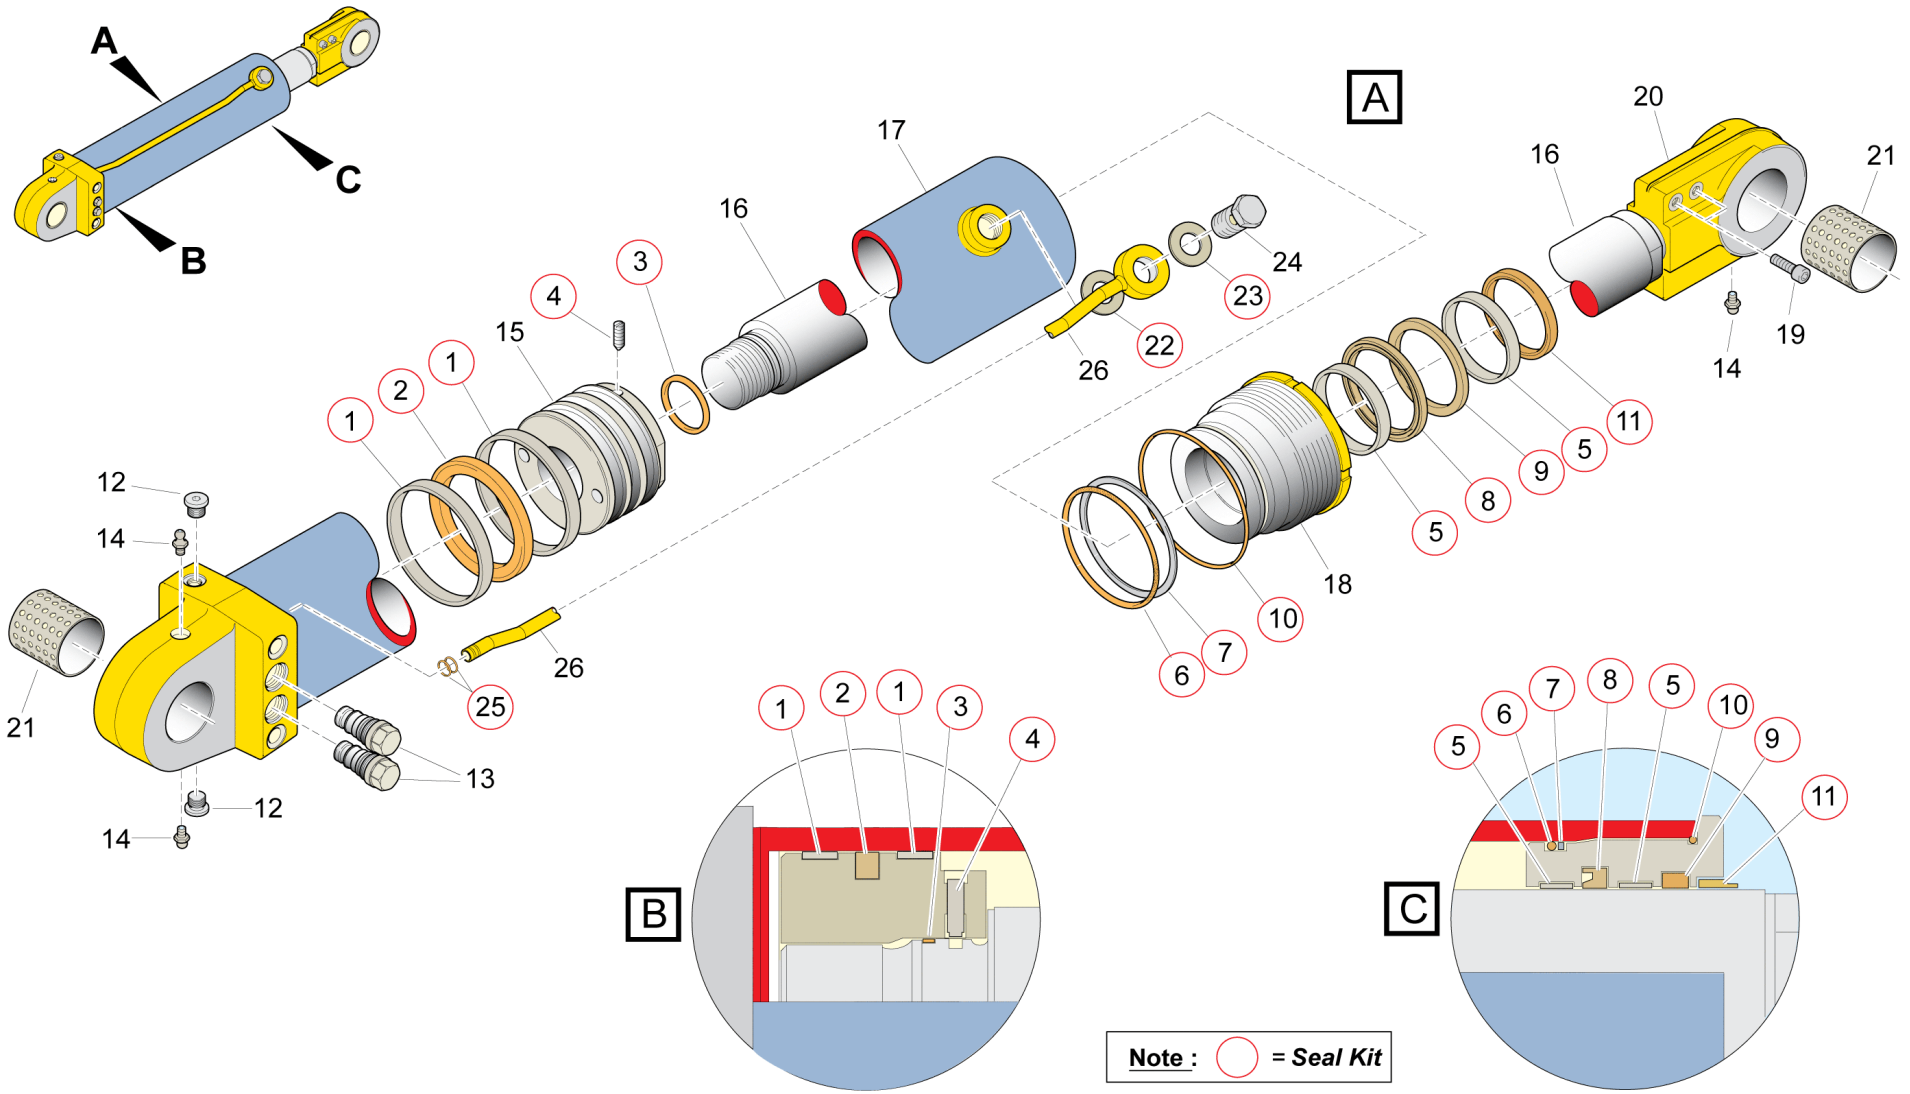

1250 0247 34

B0050305

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 3219 36	1	SEAL KIT	TÄTNINGSSATS		INCL.POS.1(2X),2-4,5(2X),6-11
	9120 0994 01	1	SEAL KIT	TÄTNINGSSATS		INCL.POS.25(2X),22,23
1	–	2	GUIDE RING	STYRRING		NOT SOLD SEPARATELY
2	–	1	PISTON SEAL	KOLVTÄTNING		NOT SOLD SEPARATELY
3	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	1	SCREW	SKRUV		NOT SOLD SEPARATELY
5	–	2	GUIDE RING	STYRRING		NOT SOLD SEPARATELY
6	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
7	–	1	BACK-UP RING	STÖDRING		NOT SOLD SEPARATELY
8	–	1	PISTON ROD SEAL	KOLVSTÅNGSTÄTN.		NOT SOLD SEPARATELY
9	–	1	PISTON ROD SEAL	KOLVSTÅNGSTÄTN.		NOT SOLD SEPARATELY
10	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
11	–	1	WIPER	AVSTRYKARE		NOT SOLD SEPARATELY
12	3128 3219 97	2	PLUG	PROPP		
13	8231 1206 86	2	OVERCENT.VALVE	LASTHÅLL.VENTIL		
14	0544 2162 00	3	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
15	3128 3220 28	2	PISTON	KOLV		
16	3128 3219 85	1	PISTON ROD	KOLVSTÅNG		
17	–	1	CYL.BARREL	CYLINDERRÖR		NOT SOLD SEPARATELY
18	3128 3222 13	1	COVER	LOCK		
19	3128 3222 19	2	SCREW	SKRUV		
20	3128 3222 45	1	PISTON ROD EYE	KOLVSTÅNGSÖRA		
21	3128 3219 86	2	BUSHING	BUSSNING		
22	–	1	SEAL RING	TÄTNINGSRING		NOT SOLD SEPARATELY
23	–	1	SEAL RING	TÄTNINGSRING		NOT SOLD SEPARATELY
24	9127 2300 00	1	SCREW	HÅLSKRUV		
25	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
26	9126 4610 02	1	PIPE	RÖR		

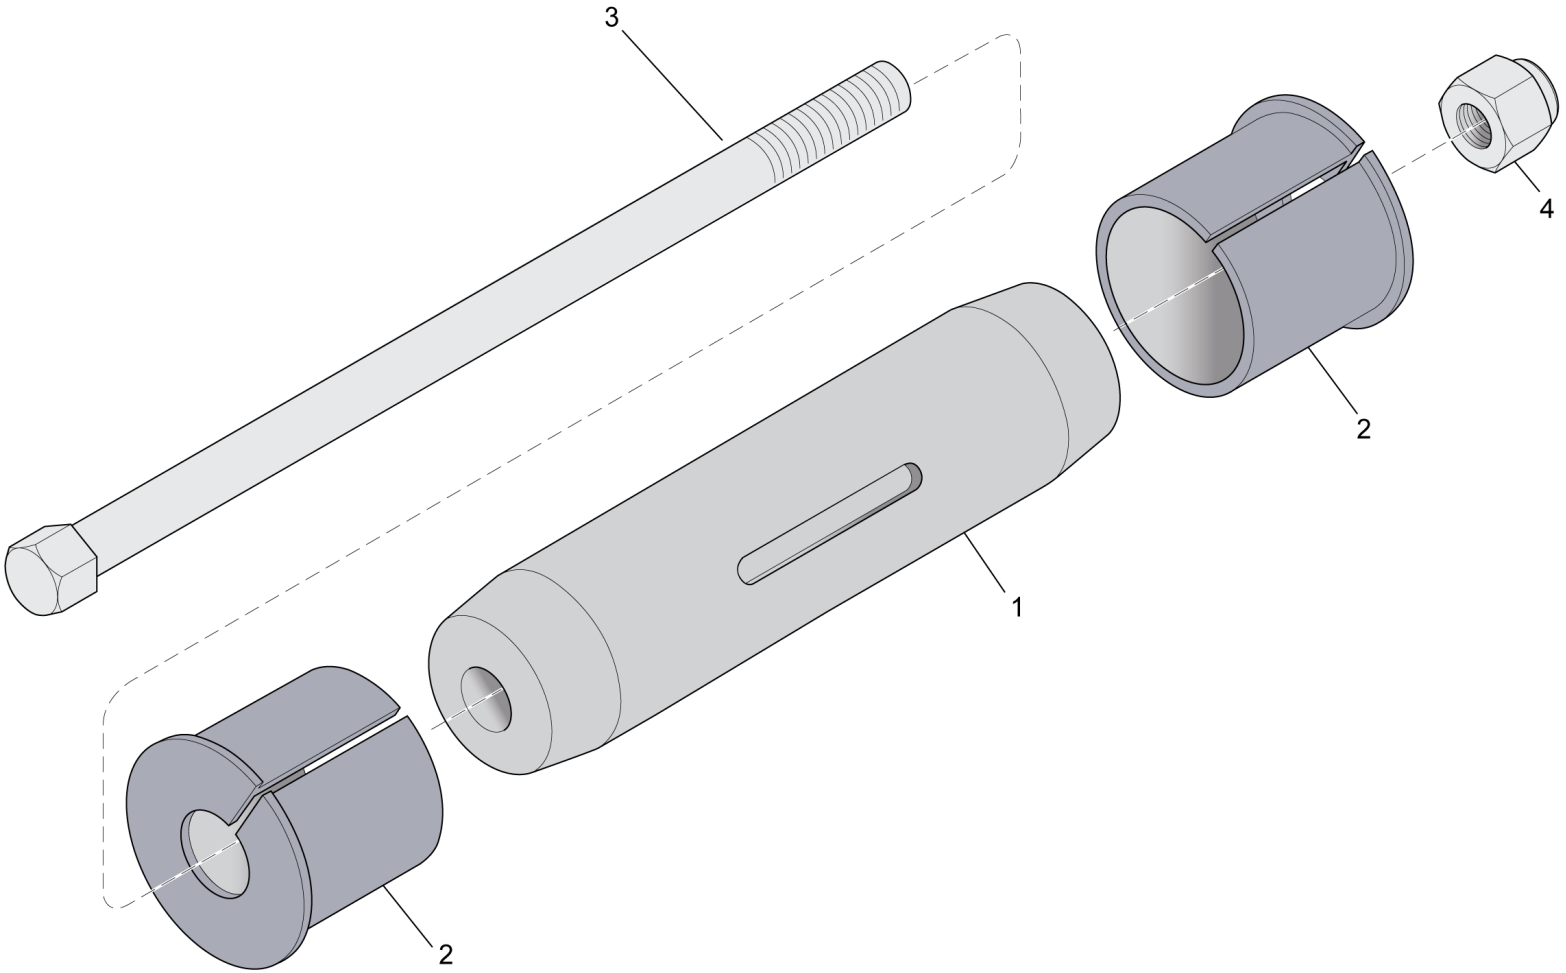

1250 0001 83

B0000559


EXPANDING SHAFT / EXP.AXEL

3125 4952 80

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3125 4952 00	1	SHAFT	AXEL		
2	3125 4953 00	2	BUSHING	BUSSNING		
3	0147 1419 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 130 - 8.8 FZB
4	0291 1128 22	1	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040

FE	MATNINGSFÖRSKJUTNING	FEED EXT	ORANGE / ORANGE
B	TELESKOP	BOOM EXT	VIT / WHITE ¤)
Z	STICKNING	LOOK-OUT	LILA / LILAC
K	MATNINGSROTATION	FEED ROTATION	GRÖN / GREEN
A1	BOMCYL BAKRE VÄNSTER	BOOM CYL. REAR LEFT	BLÅ / BLUE
A2	BOMCYL BAKRE HÖGER	BOOM CYL. REAR RIGHT	RÖD / RED
E1	BOMCYL FRÄMRE VÄNSTER	BOOM CYL. FRONT LEFT	RÖD-GUL / RED-YELLOW
E2	BOMCYL FRÄMRE HÖGER	BOOM CYL. FRONT RIGHT	BLÅ-GUL / BLUE-YELLOW


¤) INGEN FÄRGMÄRKNING PÅ BOMMEN ENDAST PÅ PANELEN
¤) NO COLOURED MARKS ON THE BOOM ONLY ON THE PANEL

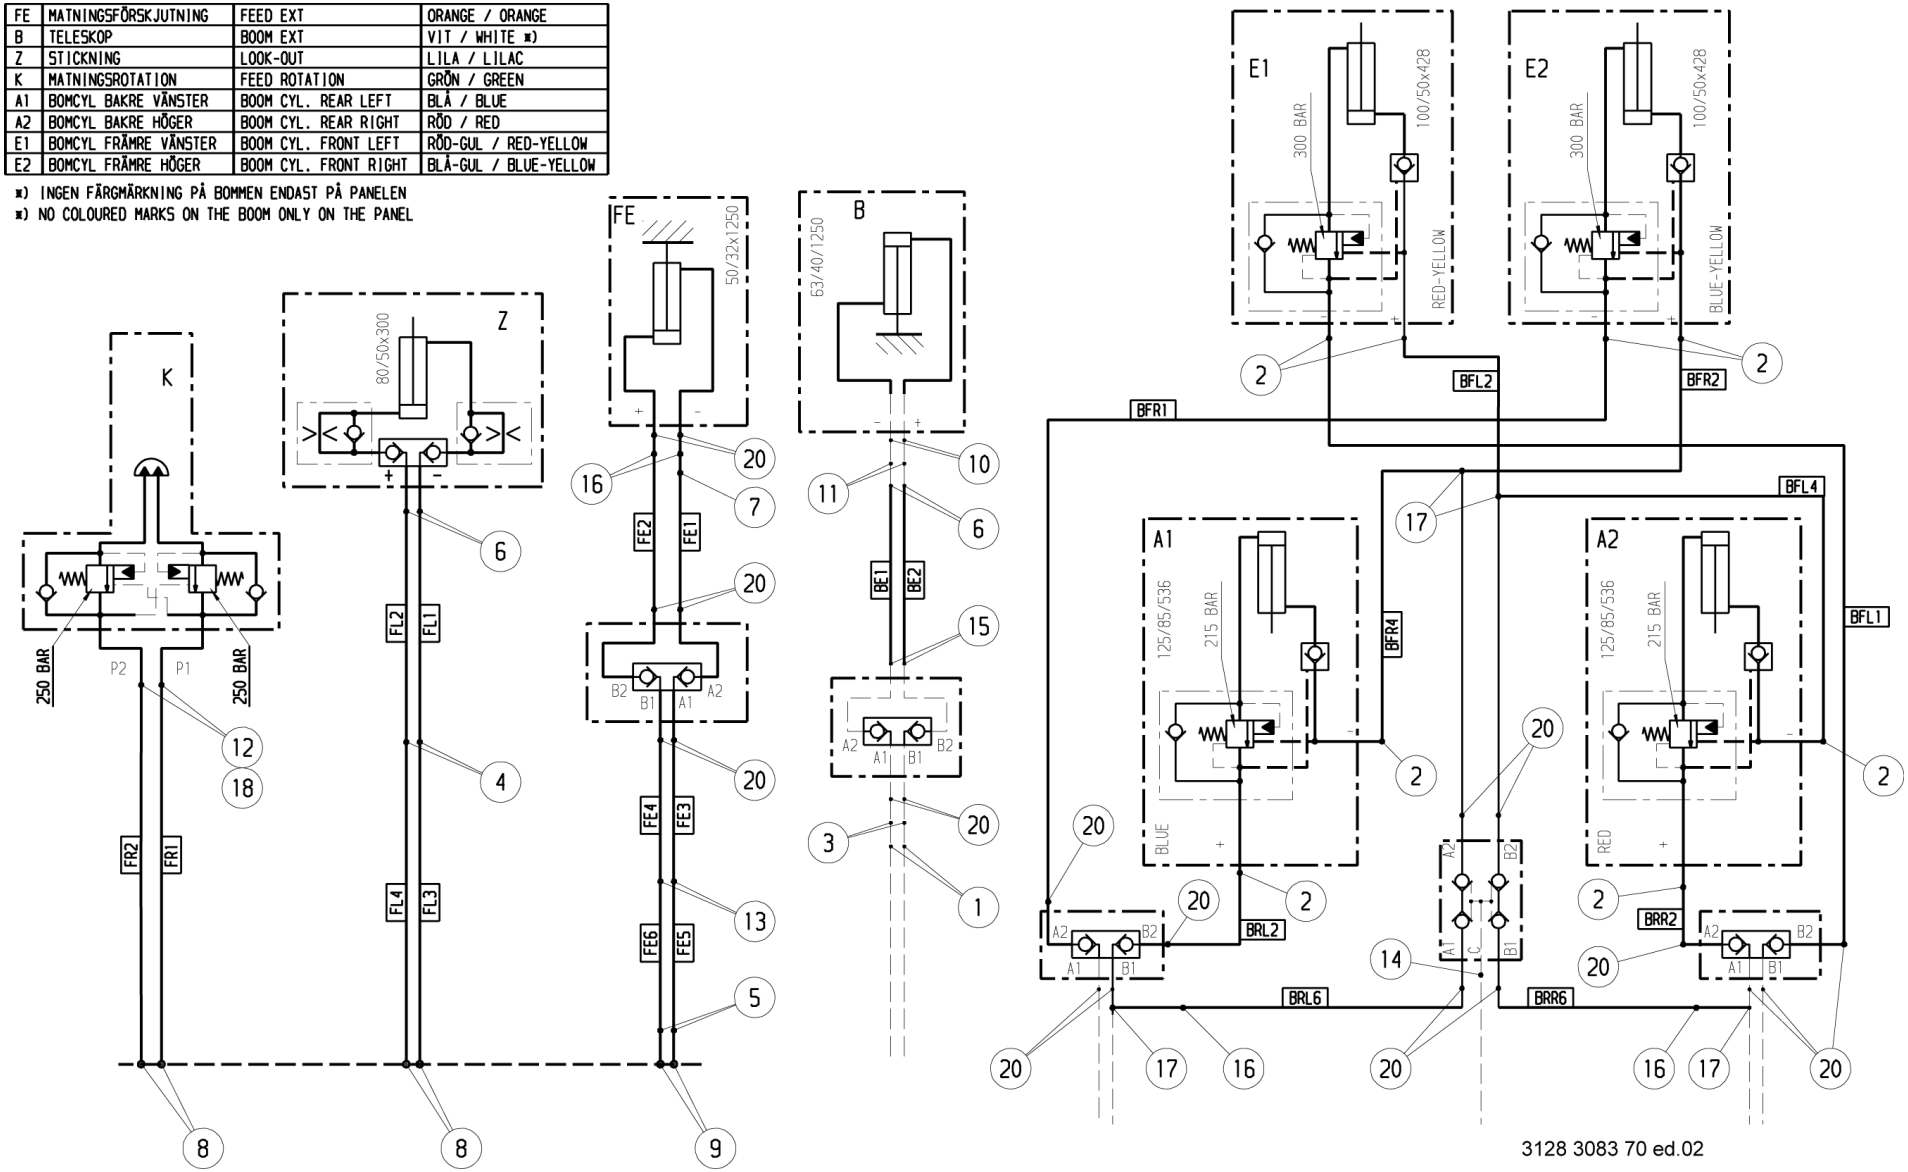

B0025408

HOSE NIPPLE SET / SLANGNIPPELSATS 3128 3083 67

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3083 68	1	HOSE SET	SLANGSATS	Page 505	

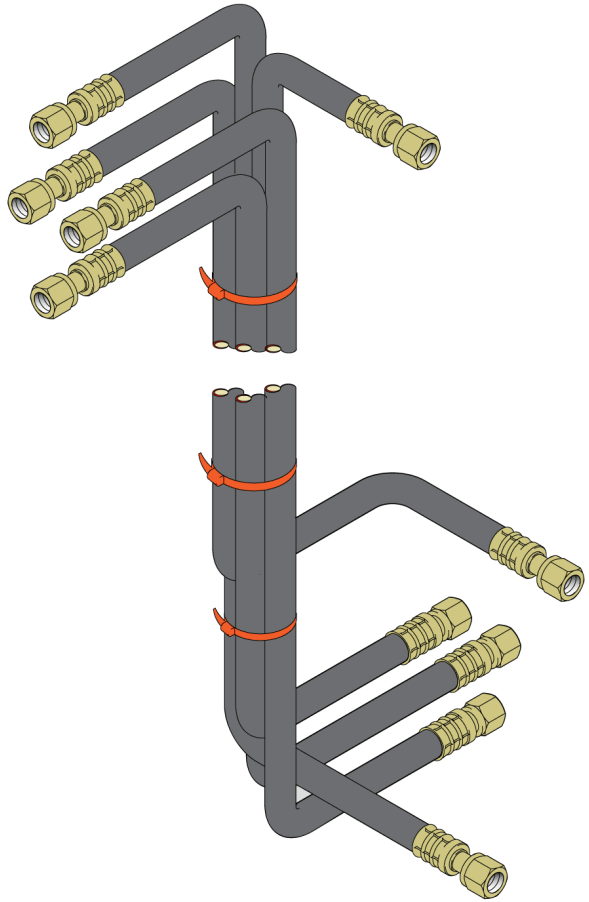

B0015365


HOSE SET / SLANGSATS


3128 3083 68


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
BFL1	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFL2	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFL4	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT 10 X 700 R2AT
BFR1	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFR2	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFR4	0574 1262 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 750 R2AT
BRL2	3176 5681 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 600 R2AT
BRL6	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
BRR2	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT 10 X 700 R2AT
BRR6	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
BE1	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
BE2	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
FE1	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
FE2	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
FE3	0574 1286 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3800 R2AT
FE4	0574 1286 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3800 R2AT
FE5	0574 1276 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1900 R2AT
FE6	0574 1276 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1900 R2AT
FL1	3176 6859 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3800 R2AT
FL2	3176 6859 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3800 R2AT
FL3	0574 0278 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2200 R2AT
FL4	0574 0278 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2200 R2AT
FR1	0574 0317 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4300 R2AT
FR2	0574 0289 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4400 R2AT


HOSE FRAME SET / SLANGHÅLLARSATS


3128 0969 87

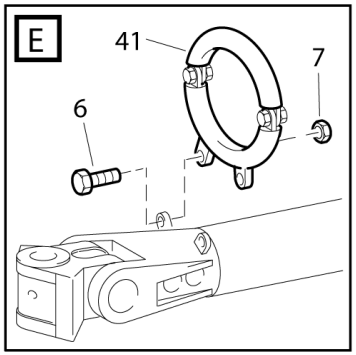


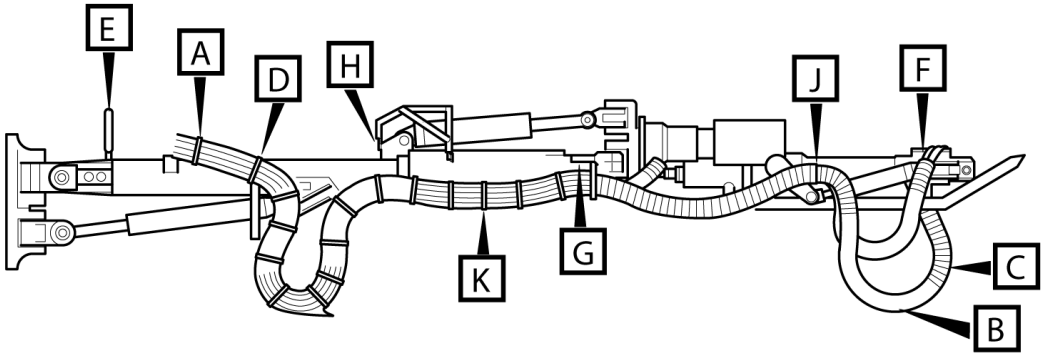


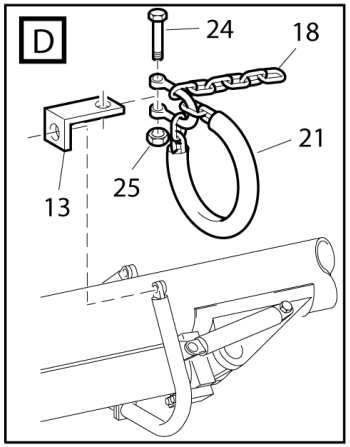


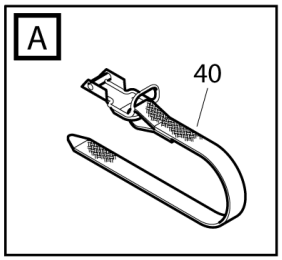


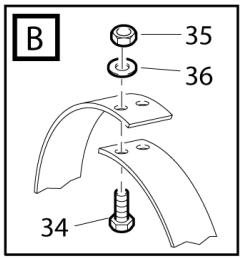


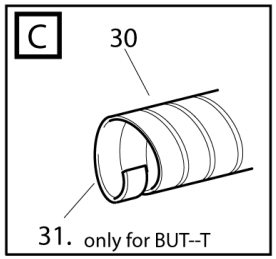


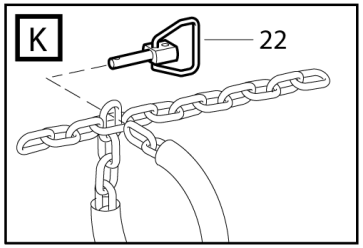

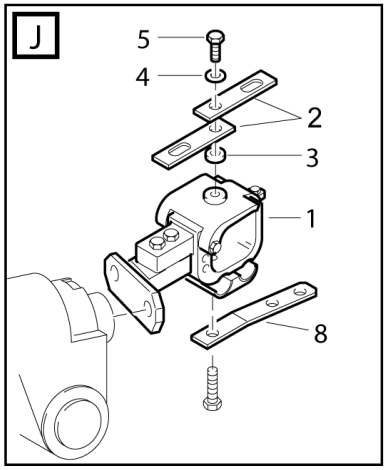

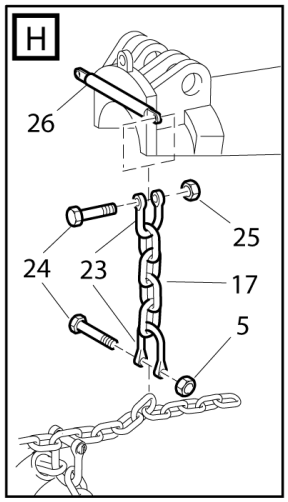

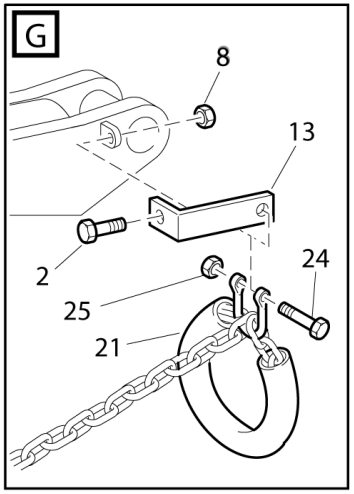

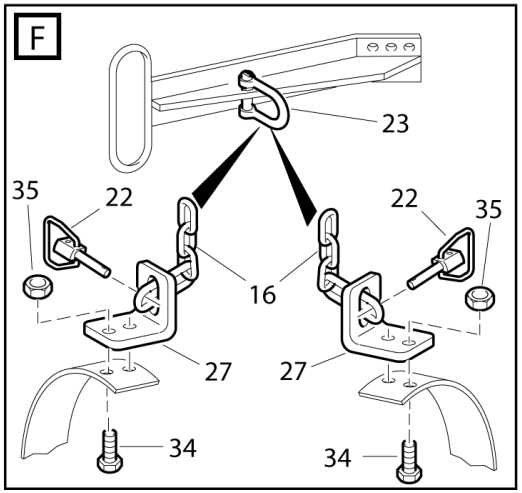

1250 0065 65


B0007900

HOSE FRAME SET / SLANGHÅLLARSATS 3128 0969 87

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3062 56	1	HOSE HOLDER	SLANGHÅLLARE	Page 509	
2	3128 2098 00	2	ATTACHM. PLATE	FÄSTPLÅT		
3	3128 2097 00	2	SLEEVE	HYLSA		
4	0300 8011 00	1	PLAIN WASHER	RUNDBRICKA		12,5 / 35 X 3 -11 300 FZB
5	0147 1402 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
6	0147 1479 03	5	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
7	0291 1128 25	5	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
8	3128 2098 01	1	ATTACHM. PLATE	FÄSTPLÅT		
13	3128 0244 00	2	ATTACHMENT	FÄSTE		
16	3128 0287 00	2	CHAIN	KÄTTING		BUT 25/30/35
17	3128 0289 04	1	CHAIN	KÄTTING		
18	3128 0289 05	1	CHAIN	KÄTTING		
21	3128 3077 19	12	HOSE HOLDER	SLANGHÅLLARE		
22	3128 0289 03	11	RING PIN	RINGSPRINT		
23	3217 3124 00	5	SHACKLE	SCHACKEL		STRAIGHT M10,15MM OPENING
24	0147 1366 03	5	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 45 - 8.8 FZB
25	0291 1128 20	5	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
26	3128 3061 02	1	ATTACHMENT LUG	FÄSTÖRA		
27	3128 0289 01	2	ELBOW PLATE	VINKELPLÅT		
30	3128 0224 00	5	PROTECTION COIL	SKYDDSSPIRAL		80 X 1200 MM
31	3128 0225 01	1	PROTECTION COIL	SKYDDSSPIRAL		48 X 1100 MM
34	0226 9915 12	16	SCREW	SKRUV		M 6 X 20 - STEEL FZB
35	0266 2108 00	16	NUT	MUTTER		M 6 - 8 FZB
36	0301 2321 00	6	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
40	3176 3681 00	8	STRAP	BAGAGEBAND		L=500,B=25 TYG BLACK YELLOW TEXT
41	3125 1997 80	1	HOSE PROTECTION	SLANGSKYDD		

HOSE HOLDER / SLANGHÅLLARE


3128 3062 56

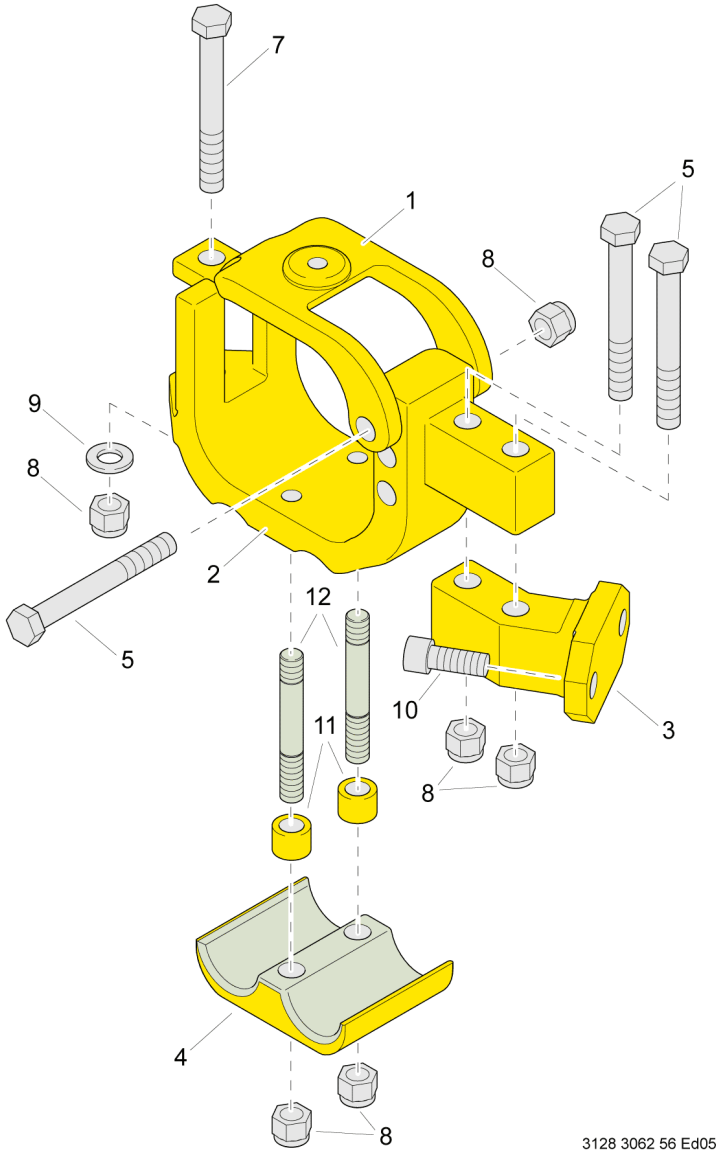

B0047752

HOSE HOLDER / SLANGHÅLLARE 3128 3062 56


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3062 57	1	YOKE	BYGEL		
2	–	1	ATTACHMENT	FÄSTE		
3	3128 3062 61	1	ATTACHMENT	FÄSTE		
4	3128 3063 18	1	CLAMP	ÖVERFALL		
5	0147 1415 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 100 - 8.8 FZB
6	0147 1417 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 110 - 8.8 FZB
7	0147 1415 12	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 100 - 8.8 FZB
8	0291 1128 22	6	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
9	0301 2358 00	1	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
10	0211 1962 89	2	SCREW	SKRUV		MC6S M 12 X 30 -12.9
11	3128 3108 40	2	SPACER	DISTANS		
12	0246 1956 52	2	STUD	PINNSKRUV		M 12 90 4 30 15 75 8.8 -

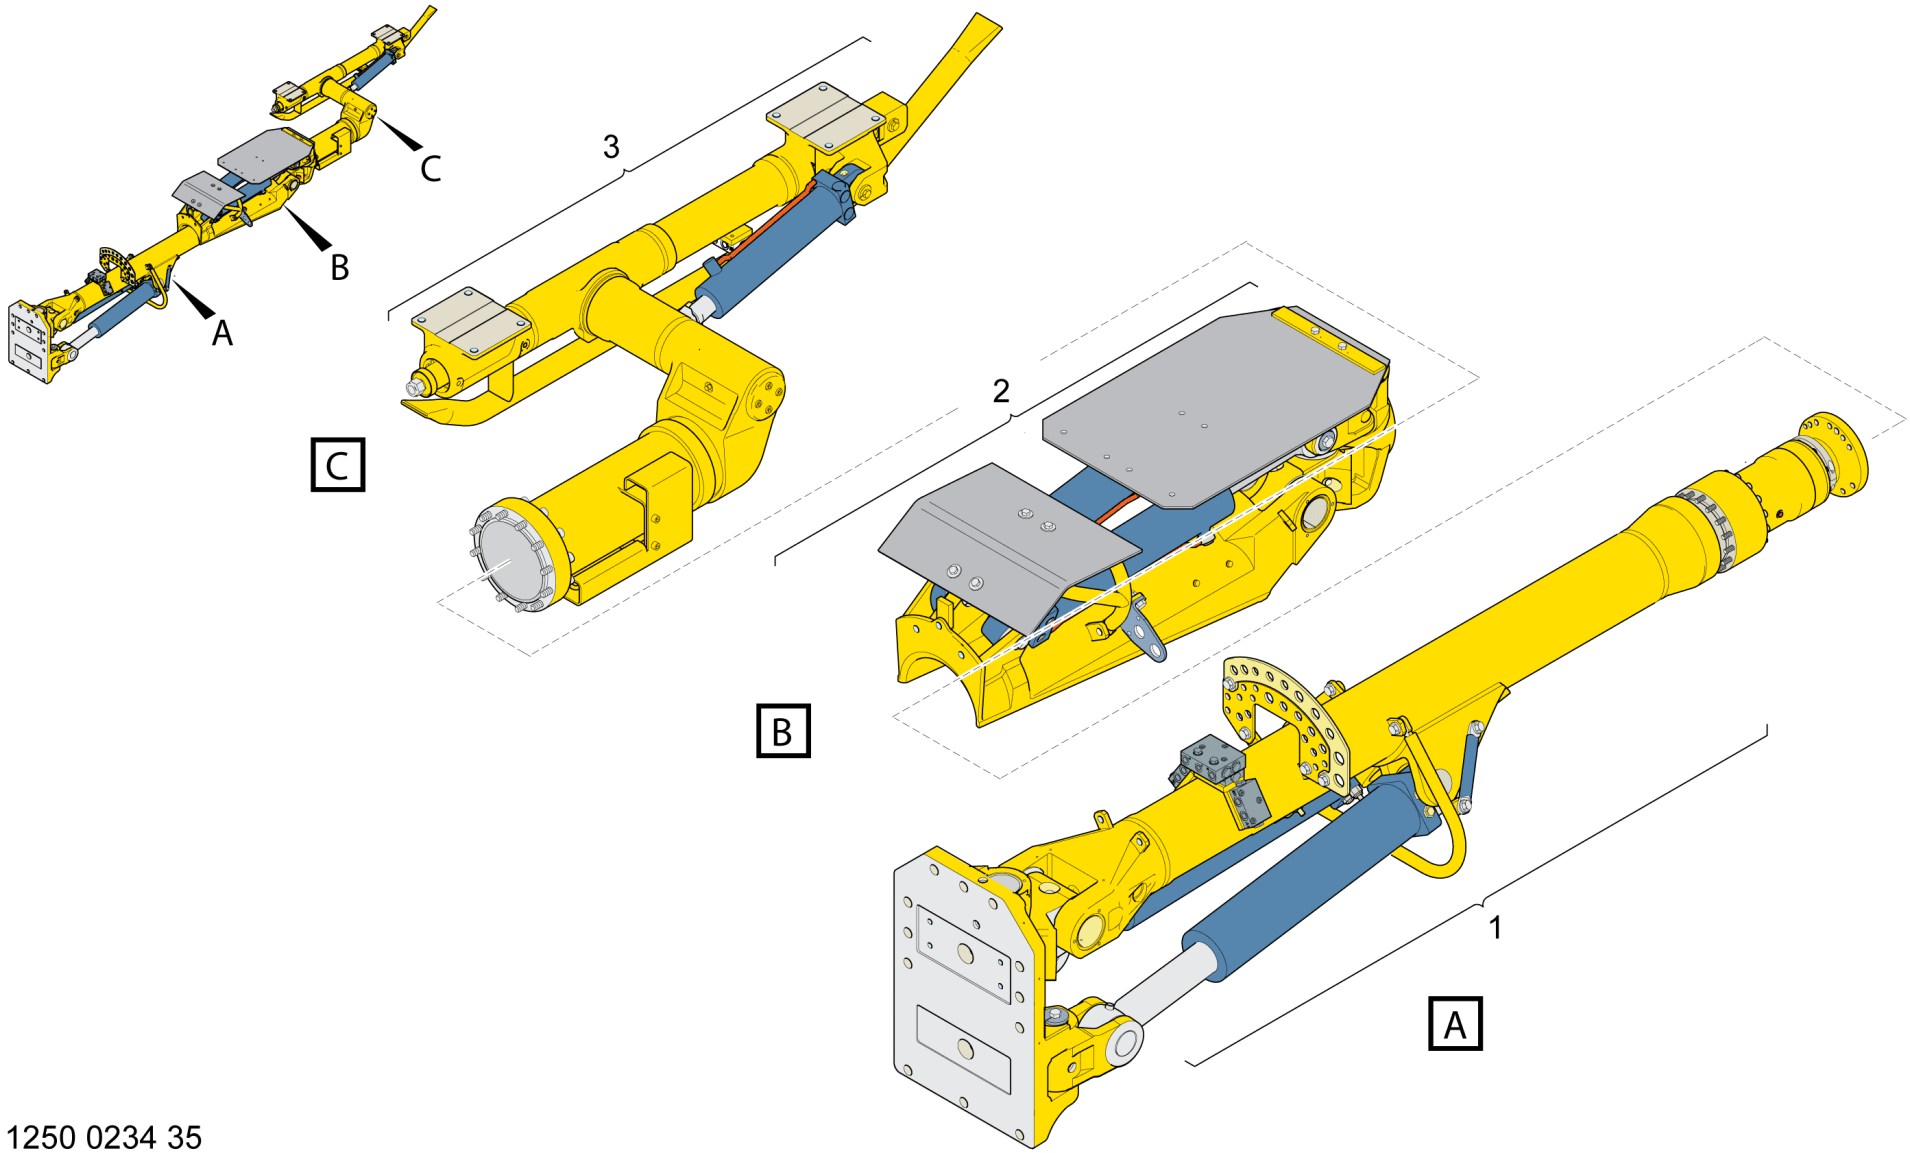

1250 0234 35

B0047037

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	BOOM PART	BOMDEL	Page 437	
2	–	1	BOOM PART	BOMDEL	Page 471	
3	–	1	BOOM PART	BOMDEL	Page 513	
50	3128 3083 67	1	HOSE NIPPLE SET	SLANGNIPPELSATS	Page 503	
51	3128 0969 87	1	HOSE FRAME SET	SLANGHÅLLARSATS	Page 507	

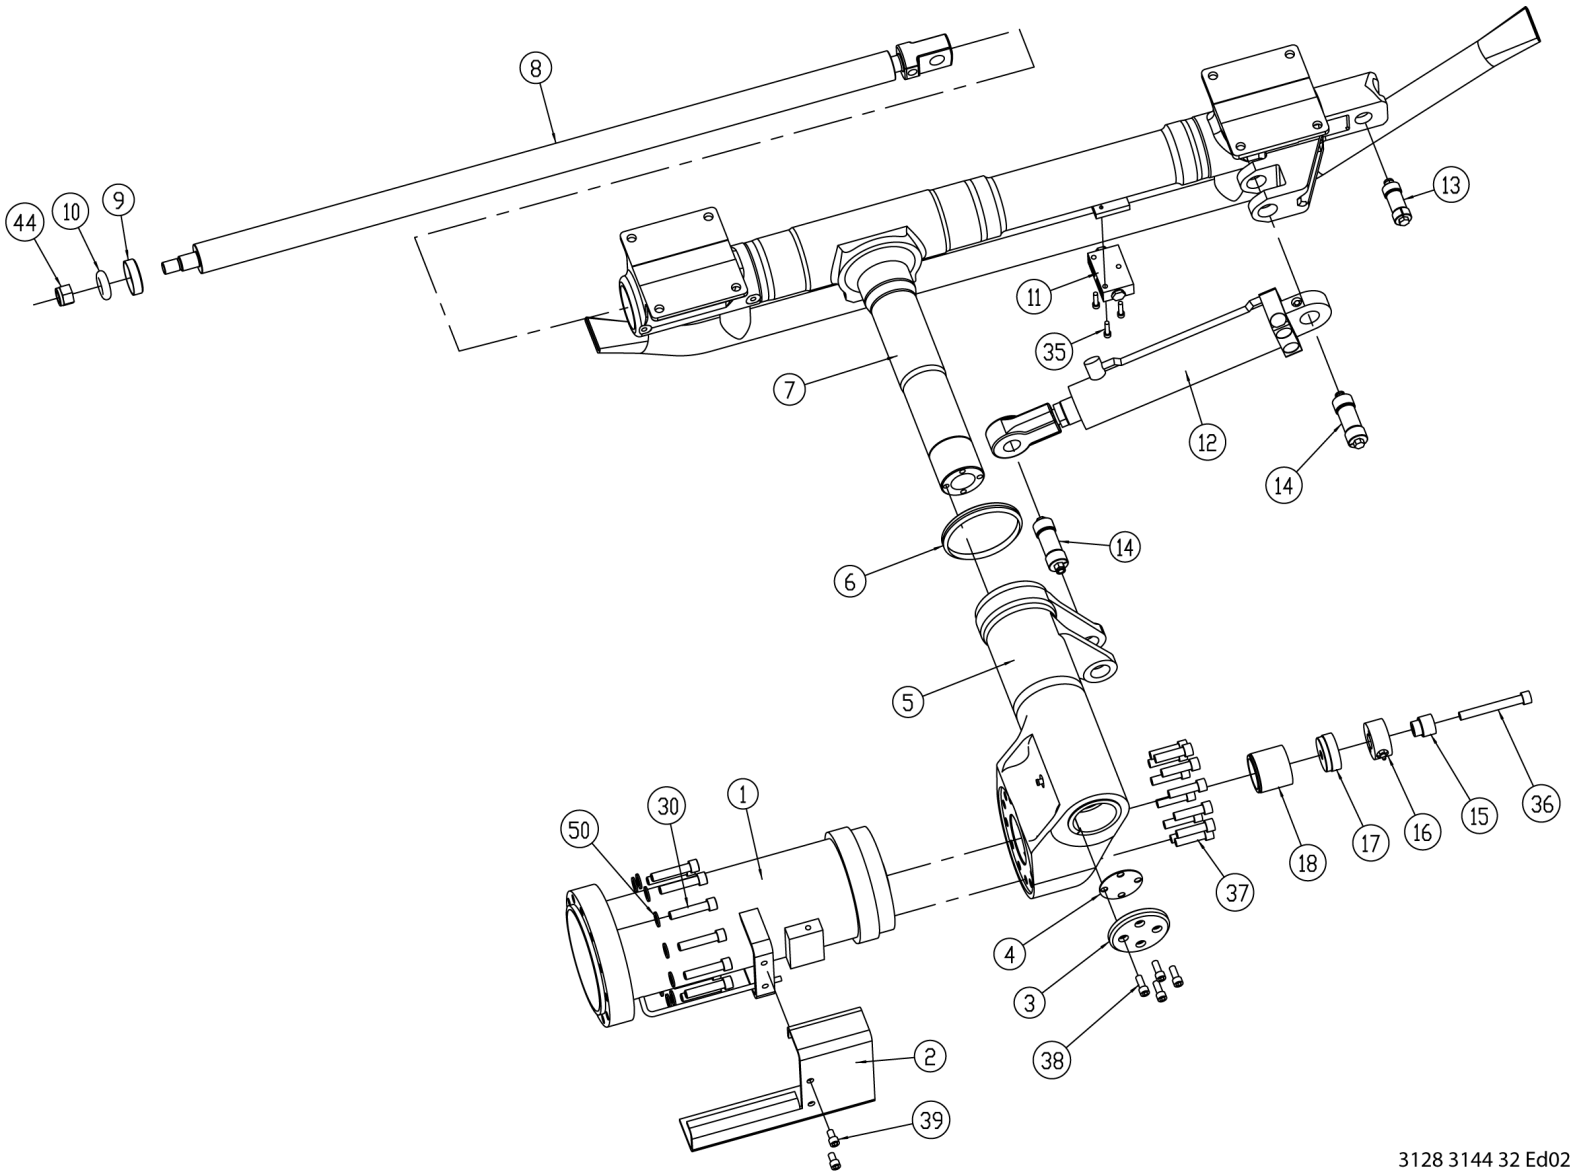


3128 3144 32 Ed02

B0026778

BOOM PART / BOMDEL

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3126 44	1	TURNING DEVICE	VRIDDON	Page 493	
2	3128 3140 86	1	PROTECTION	SKYDD		
3	3125 4941 00	1	COVER	LOCK		
4	3125 4924 00	1	SHIM	MELLANLÄGG		
5	3128 3146 59	1	BEARING HOUSING	LAGERHUS	Page 515	
6	0666 8096 03	1	AXIAL SEAL	AXIALTÄTNING		135 / 149 X 18
7	3128 3217 72	1	FEED HOLDER	MATARHÅLLARE		
8	3128 2592 43	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 497	
9	3153 8650 00	1	WASHER	BRICKA		
10	3122 0309 00	1	RUBBER RING	GUMMIRING		
11	9106 0630 10	1	DOUBLE CH.VALVE	HYDRAULLÅS	Page 455	
12	3128 3219 00	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 499	
13	3125 4968 80	1	EXPANDING SHAFT	EXP.AXEL	Page 463	
14	3125 4952 80	2	EXPANDING SHAFT	EXP.AXEL	Page 501	
15	3125 4964 00	1	BUSHING	BUSSNING		
16	3125 4965 00	1	BUSHING	BUSSNING		
17	3125 4963 00	1	WASHER	BRICKA		
18	3128 3059 15	1	SPACER SLEEVE	DISTANSHYLSA		
30	0211 1963 28	12	SCREW	SKRUV		MC6S M 16 X 80 - 12.9
35	0211 1962 91	3	SCREW	SKRUV		MC6S M 8 X 35 - 12.9
36	0211 1963 48	1	SCREW	SKRUV		MC6S M 16 X 130 - 12.9
37	0211 1963 09	12	SCREW	SKRUV		MC6S M 16 X 60 - 12.9
38	0211 1962 89	4	SCREW	SKRUV		MC6S M 12 X 30 -12.9
39	0211 1960 83	2	SCREW	SKRUV		MC6S M 12 X 20 - 12.9
44	0291 1128 30	1	LOCK NUT	LÅSMUTTER		M 24 - 8 FZB / ISO 7040
50	0301 2378 00	12	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB

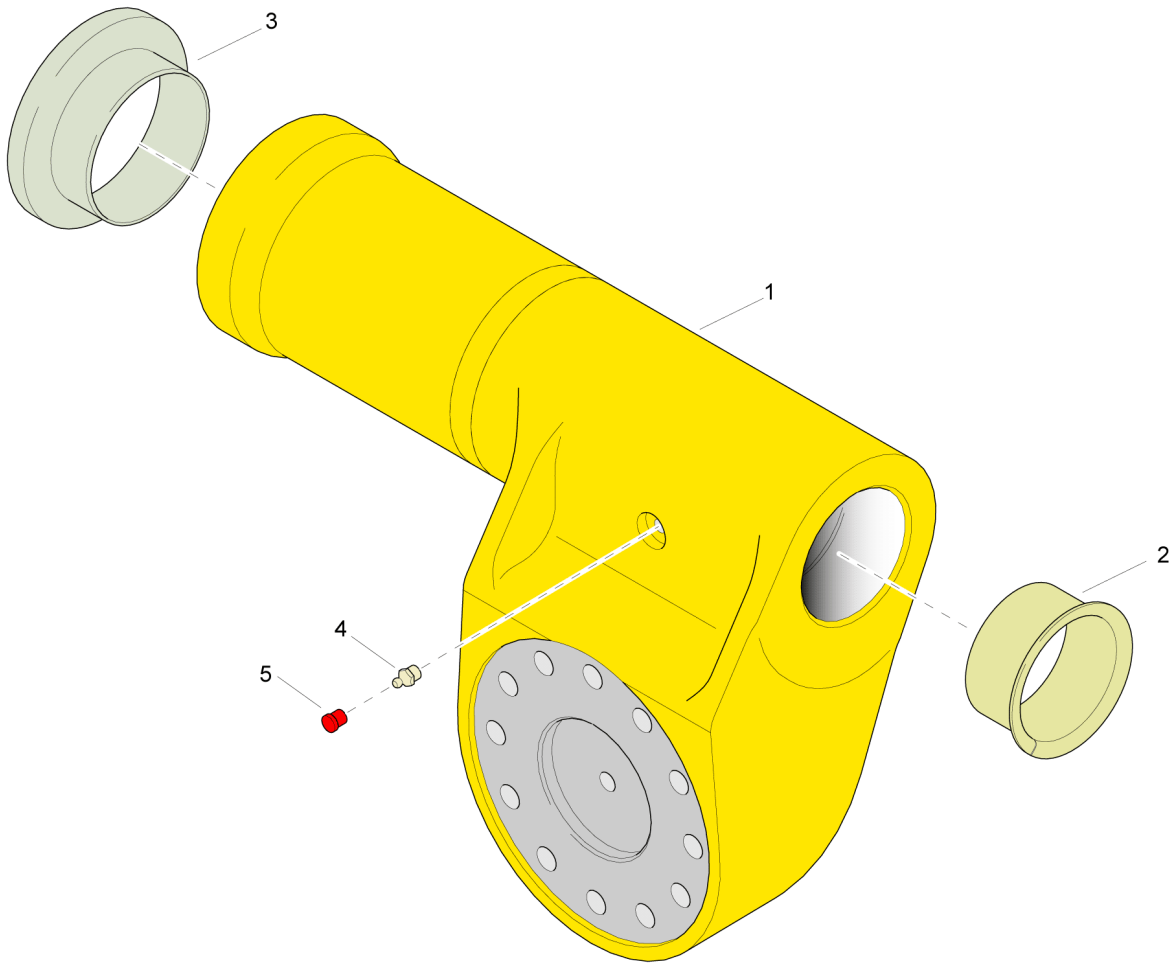

3128 3146 59 Ed01


B0048361

BEARING HOUSING / LAGERHUS

3128 3146 59

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	BEARING HOUSING	LAGERHUS		
2	0500 4500 03	1	FLANGE BEARING	FLÄNSLAGER		B1T 90 95 50 110
3	3128 3141 67	1	BUSHING	BUSSNING		
4	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
5	0686 9252 27	1	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

HOSE NIPPLE SET / SLANGNIPPELSATS

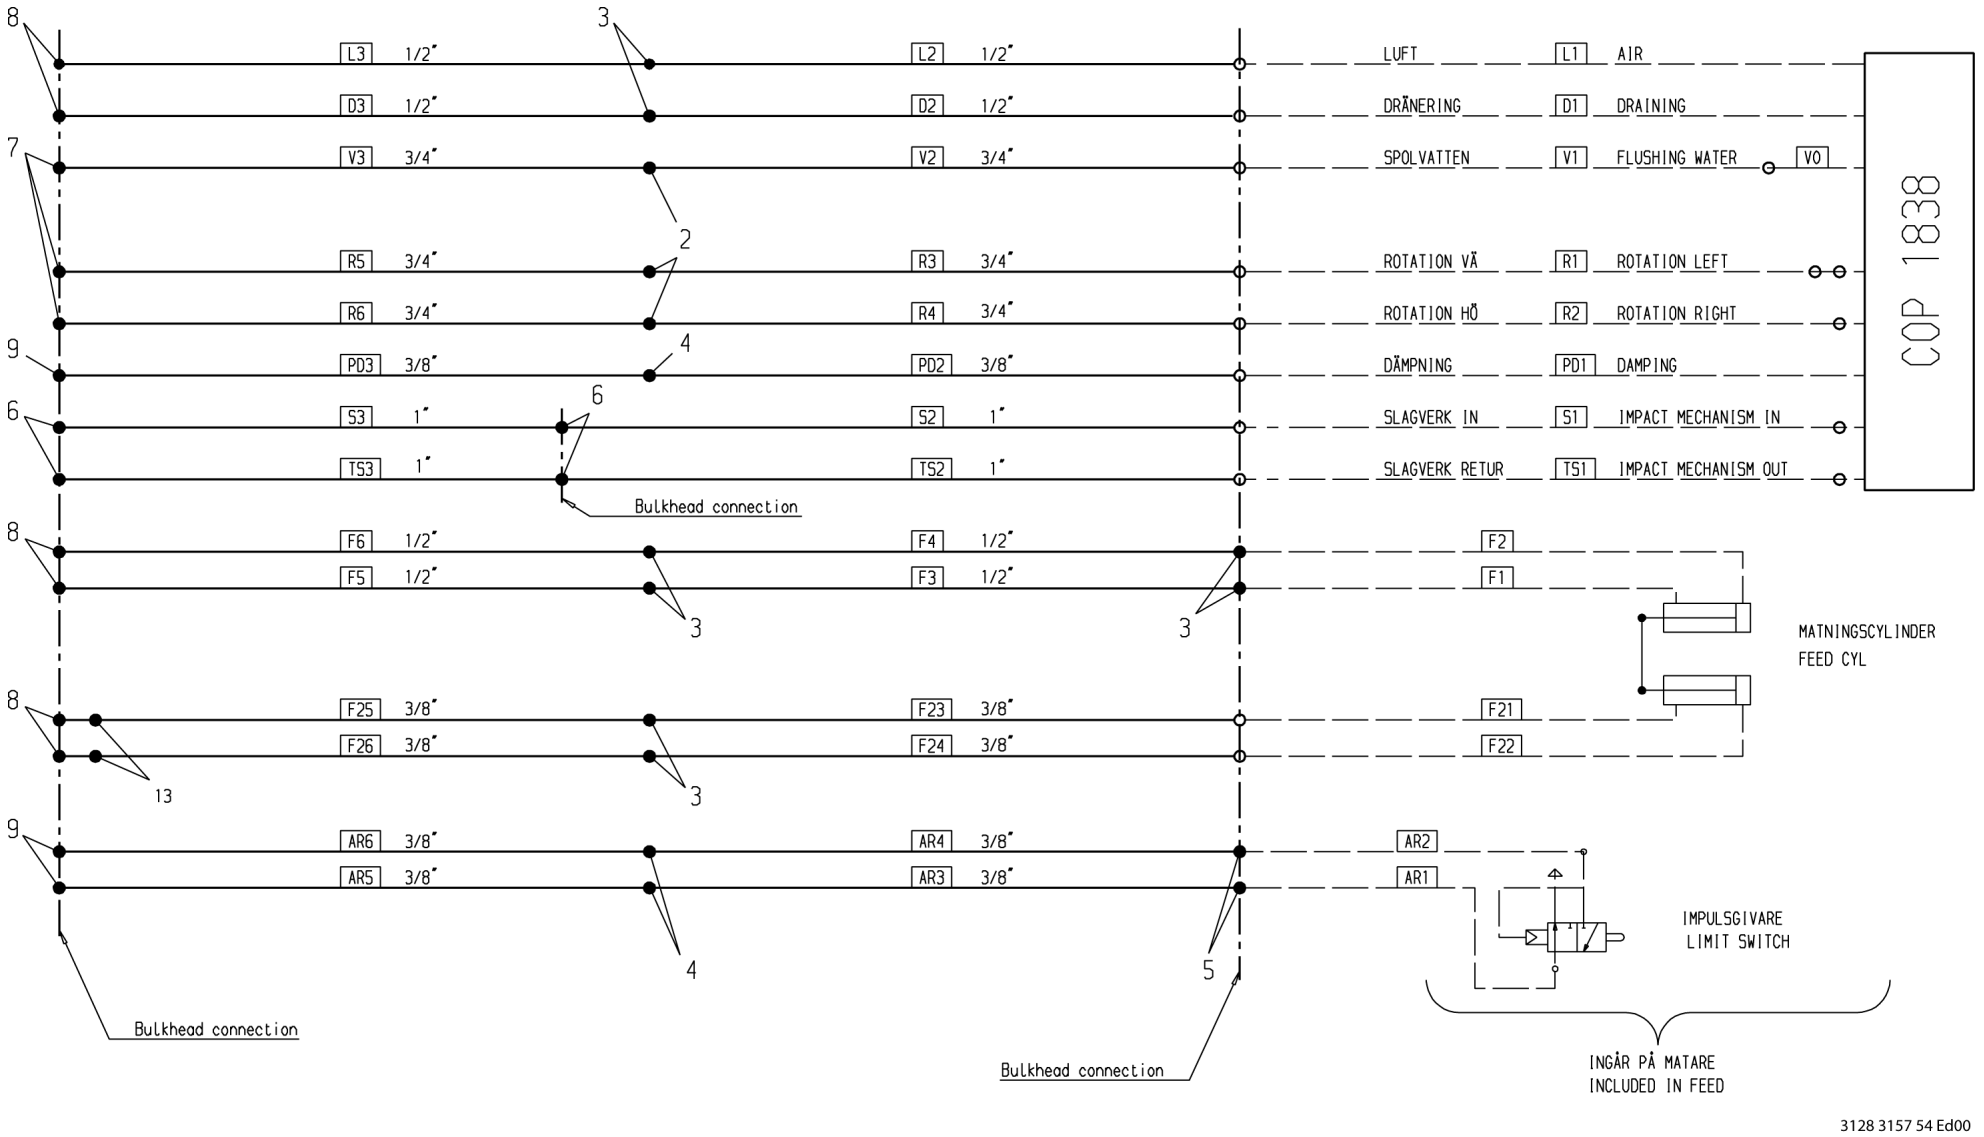


B0028160

HOSE NIPPLE SET / SLANGNIPPELSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2	–	1	HOSE SET	SLANGSATS	Page 519	

HOSE SET / SLANGSATS

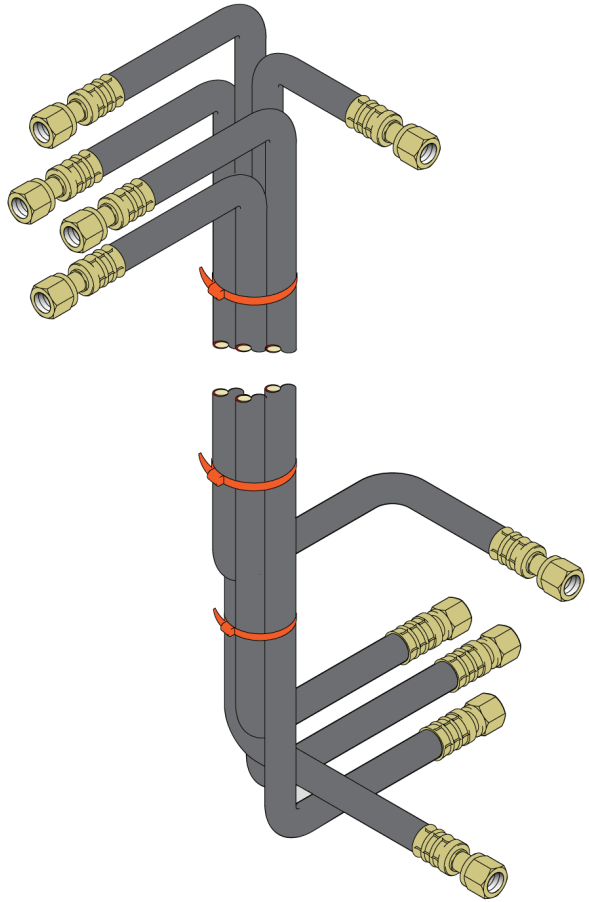


B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
AR3	0574 1285 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3600 R2AT
AR4	0574 1285 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3600 R2AT
AR5	0574 1288 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4200 R2AT
AR6	0574 1288 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4200 R2AT
D2	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
D3	0574 0064 65	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4700 R2AT
F23	0574 0065 88	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3700 R2AT
F24	0574 0065 88	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3700 R2AT
F25	0574 0064 55	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4300 R2AT
F26	0574 0064 55	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4300 R2AT
F3	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
F4	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
F5	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT
F6	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT
L2	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
L3	0574 0064 65	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4700 R2AT
PD2	0574 1284 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3400 R2AT
PD3	0574 1290 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4600 R2AT
R3	0574 3284 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R2AT
R4	0574 3284 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R2AT
R5	0574 3289 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4400 R2AT
R6	0574 3289 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4400 R2AT
S2	0574 0065 29	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 5300 R9R
S3	0574 0000 32	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 2700 R9R
TS2	0574 0065 30	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 5300 R2AT
TS3	0574 0064 97	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 2700 R2AT
V2	0574 3284 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R2AT
V3	0574 3290 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4600 R2AT

HOSE SET / SLANGSATS

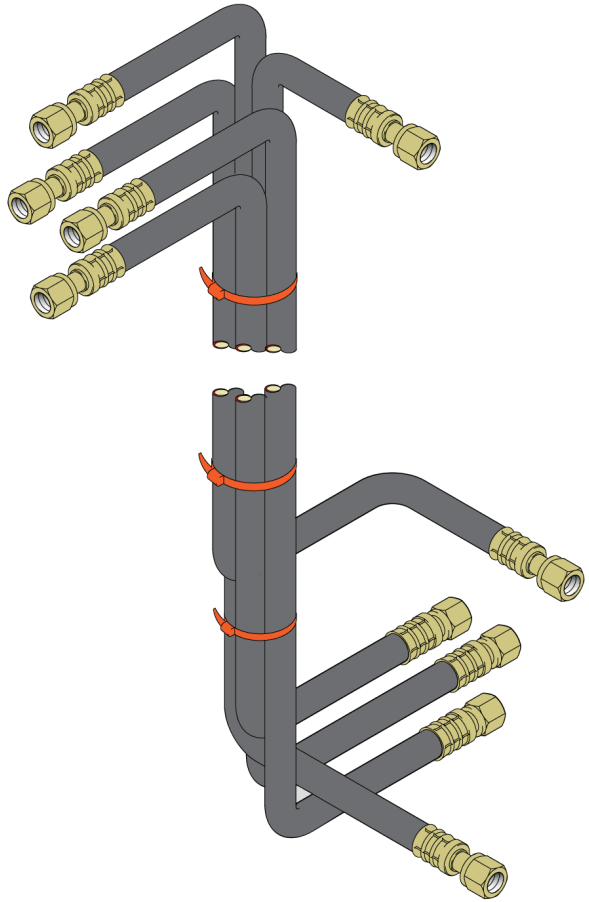


B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1D4	0574 2326 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3100 R2AT
1F7	0574 0063 07	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3700 R2AT
1F8	0574 0000 21	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3500 R2AT
1L4	0574 2325 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3300 R2AT
1R7	0574 3334 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3700 R2AT
1R8	0574 3334 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3700 R2AT
1S4	0574 4536 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3800 R9R
1W4	0574 3331 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3900 R2AT
1AR7	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
1AR8	0574 0000 23	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2100 R2AT
1BE3	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
1BE4	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
1FE7	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
1FE8	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
1FL5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1FL6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1FR5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1FR6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1PD4	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
1TS5	0574 4316 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3100 R2AT
1BAN1	0574 0064 50	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1900 R2AT
1BFL3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
1BFR3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
1BRL4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
1BRR4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT


HOSE SET / SLANGSATS

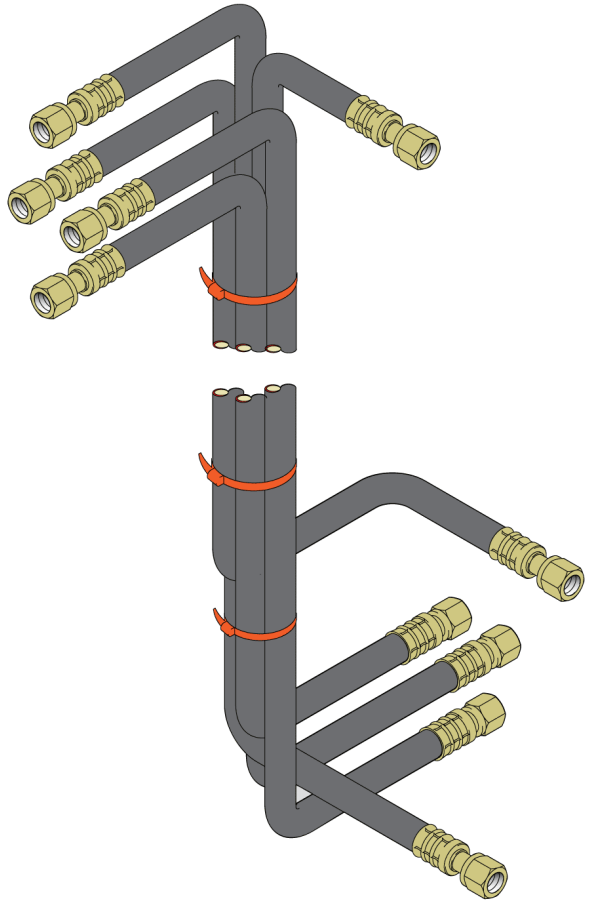

B0015365


HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2D4	0574 2326 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3100 R2AT
2F7	0574 0000 21	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3500 R2AT
2F8	0574 0063 07	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3700 R2AT
2L4	0574 2325 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3300 R2AT
2R7	0574 3286 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3800 R2AT
2R8	0574 3286 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3800 R2AT
2S4	0574 4536 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3800 R9R
2W4	0574 3331 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3900 R2AT
2AR7	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
2AR8	0574 0000 23	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2100 R2AT
2BE3	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
2BE4	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
2FE7	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
2FE8	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
2FL5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
2FL6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
2FR5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
2FR6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
2PD4	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
2TS5	0574 4316 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3100 R2AT
2BAN1	0574 0064 50	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1900 R2AT
2BFL3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
2BFR3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
2BRL4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
2BRR4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT

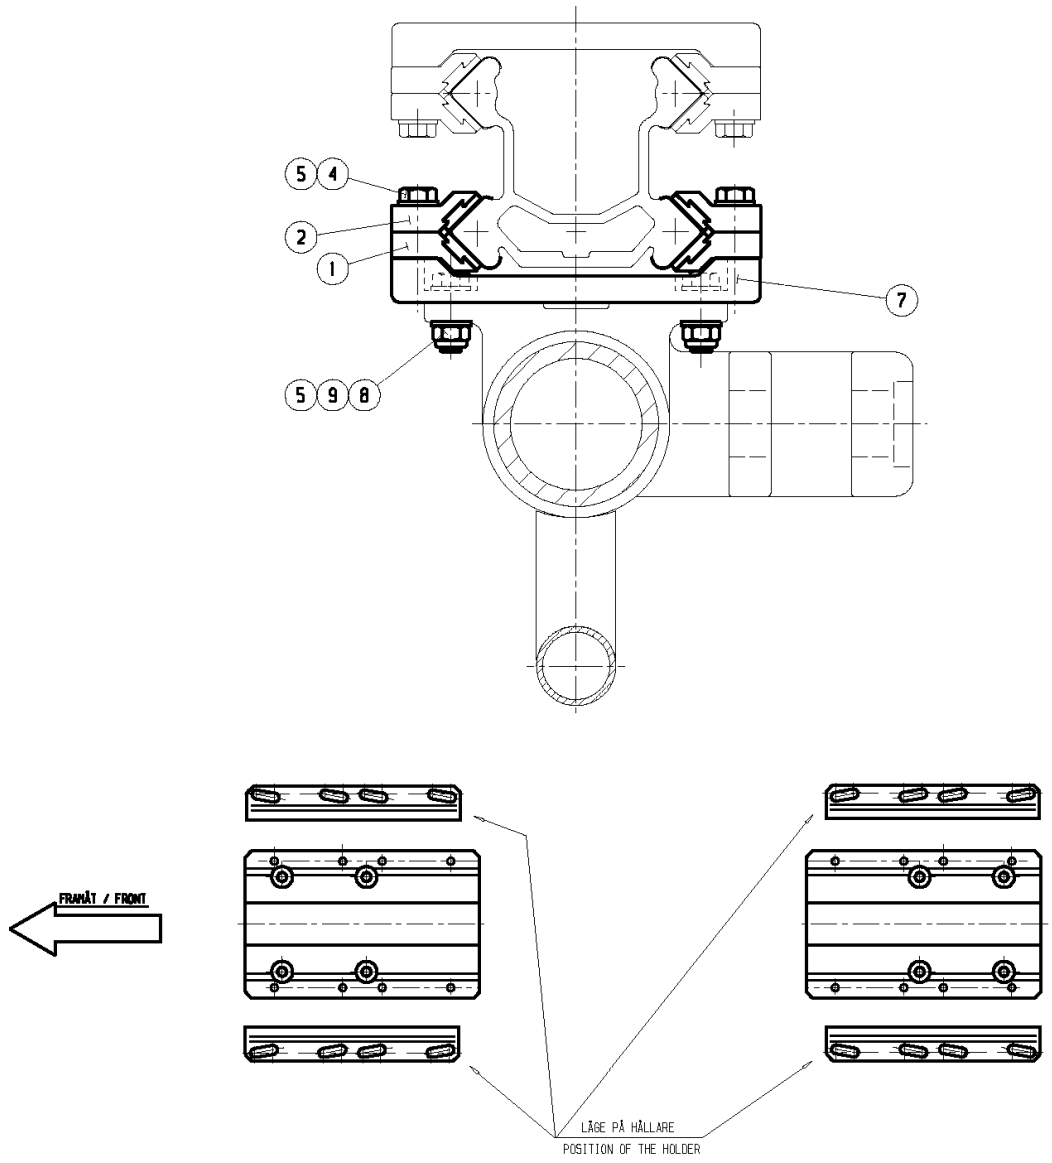
5
4
2
1
7
5
9
8
FRAMÅT / FRONT
LÄGE PÅ HÅLLARE
POSITION OF THE HOLDER

B0006906


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3061 81	4	HOLDER	HÅLLARE	Page 527	
2	3128 3061 80	4	HOLDER	HÅLLARE	Page 529	
4	0147 1483 03	16	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 70 - 8.8 FZB
5	0301 2378 00	32	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
7	3128 0940 00	2	ATTACHM. PLATE	FÄSTPLÅT		
8	0147 1479 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
9	0291 1128 25	8	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040

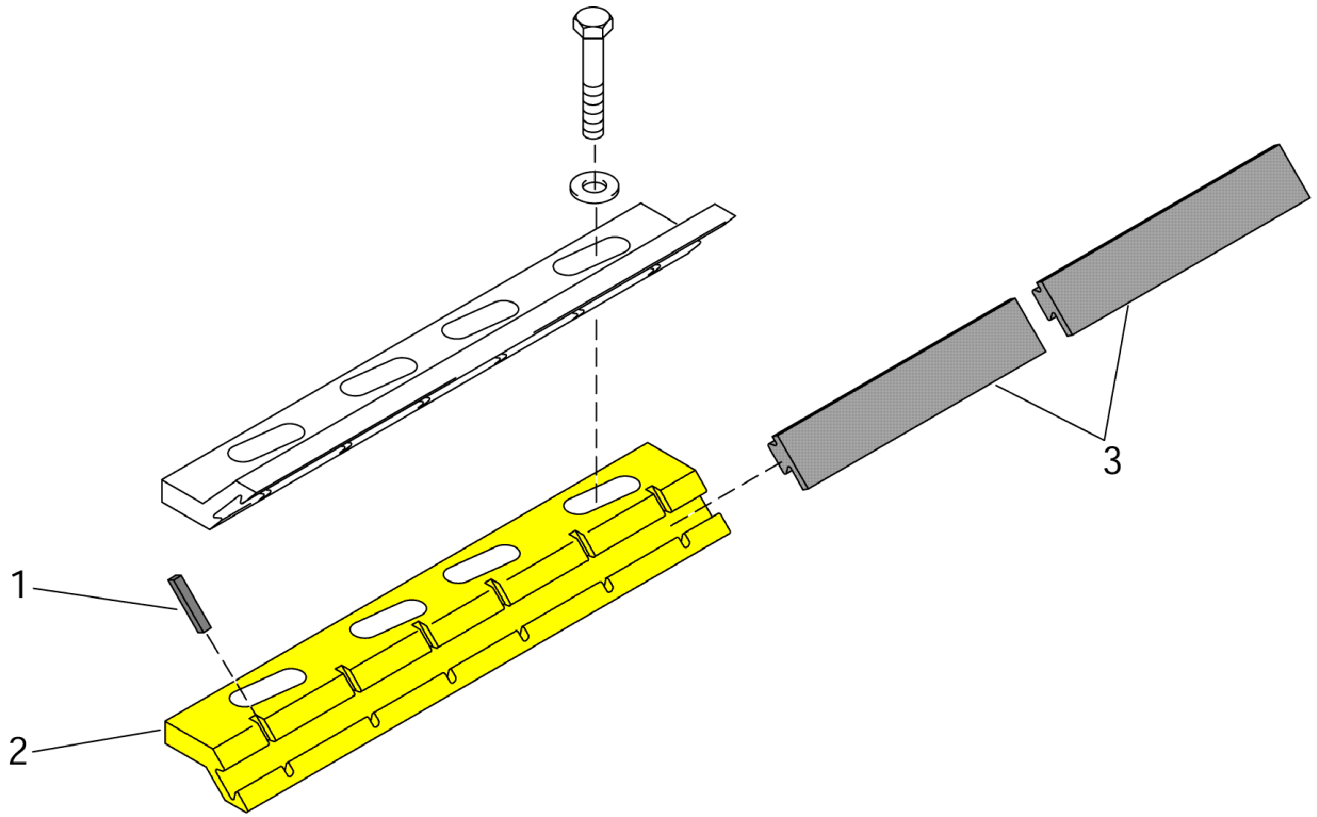

1250 0001 07

B0014087

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 0619 00	6	KEY	KIL		
2	3128 0784 39	1	HOLDER	HÅLLARE		
3	3128 3074 88	2	SLIDING PIECE	GLIDSTYCKE		

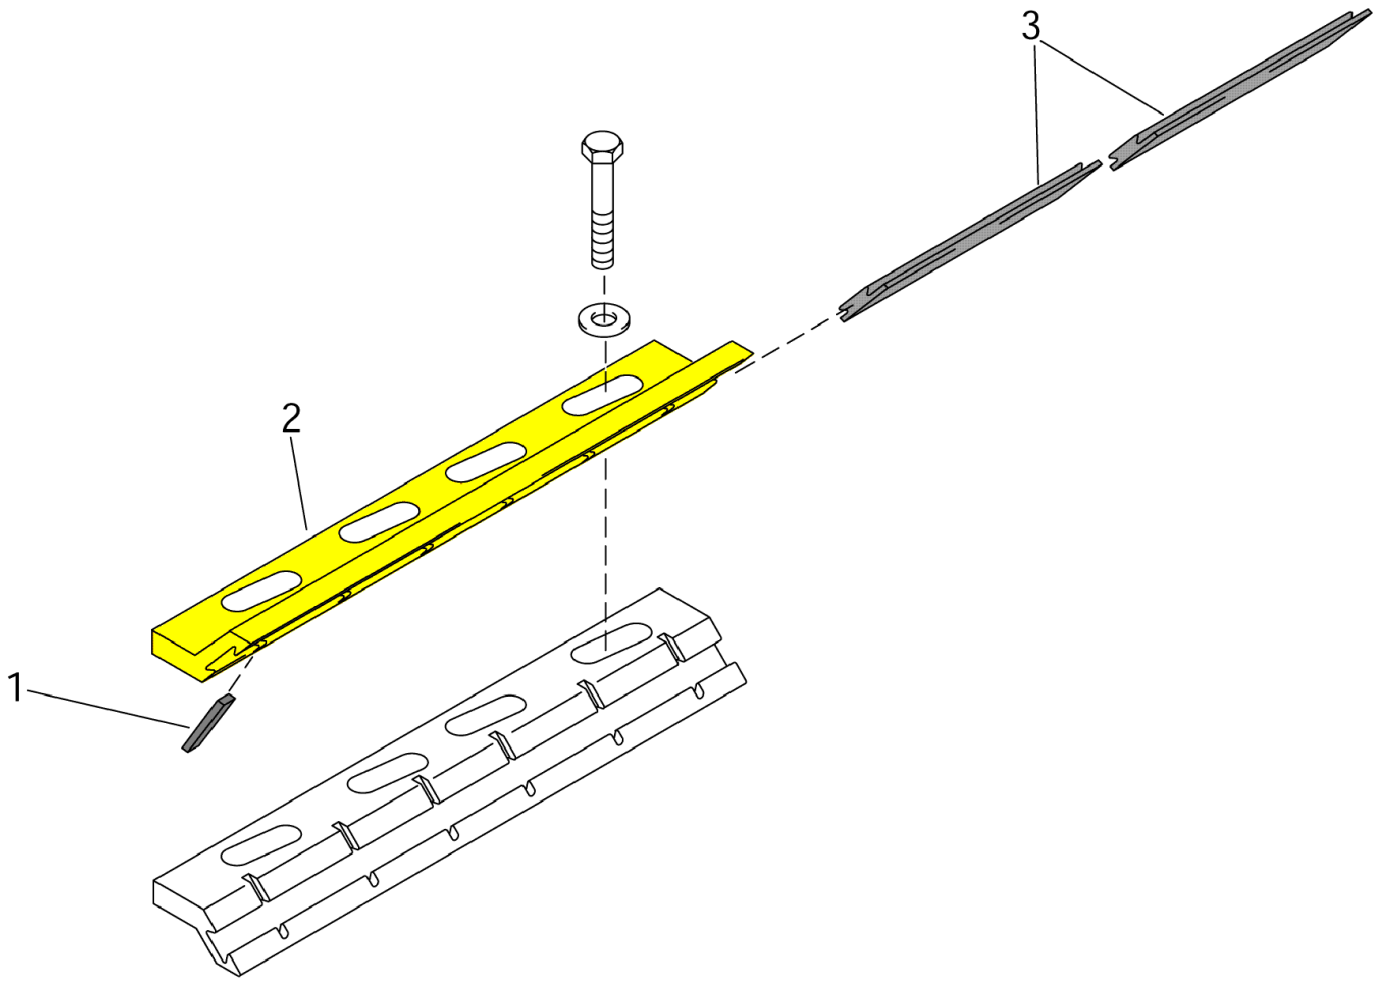


1250 0001 06

B0014086

HOLDER / HÅLLARE

3128 3061 80

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 0619 00	6	KEY	KIL		
2	3128 0784 38	1	HOLDER	HÅLLARE		HOLDER RIGHT
3	3128 3074 88	2	SLIDING PIECE	GLIDSTYCKE		

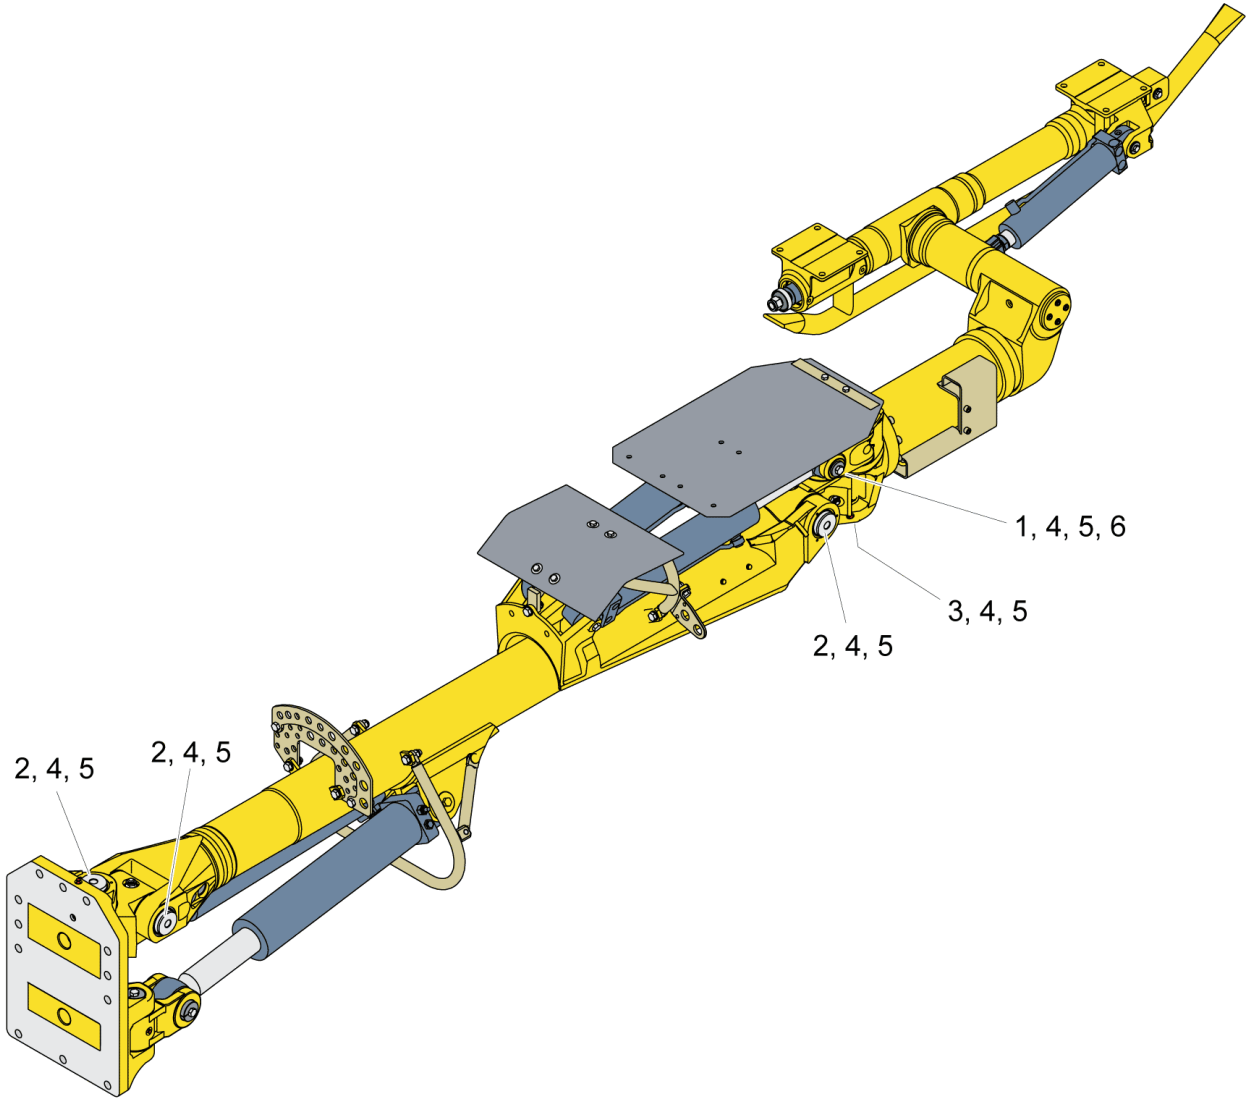

1250 0235 35

B0047069

COVER SET / TÄCKLOCKSATS 3128 3090 03


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3080 92	1	COVER	TÄCKLOCK		
2	3128 2900 20	5	COVER	TÄCKLOCK		
3	3128 2900 21	1	COVER	TÄCKLOCK		
4	0147 1326 03	19	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 30 - 8.8 FZB
5	0301 2335 00	19	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
6	0663 6138 00	1	O-RING	O-RING		69,5 X 3 70 SHORE

ROCK DRILL / BERGBORRMASKIN
LIST OF CONTENTS


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
8311 1257 50	ROCK DRILL	BERGBORRMASKIN	539	
3115 5035 81	– GEAR HOUSING	– VÄXELHUS	545	COMPLETE INCL ITEM 103-111
3115 5042 80	– FRONT PART COMP	– FRONTDEL KOMPL.	547	
3115 3451 81	– ACCUMULATOR	– ACKUMULATOR	549	
3115 3511 81	– ACCUMULATOR	– ACKUMULATOR	551	
3115 2615 91	– RETURN ACCUM.	– RETURACKUMULAT.	553	
3115 3473 80	– HYDRAULIC MOTOR	– HYDRAULMOTOR	555	MSQ 80 SH (02)
3115 3473 81	– HYDRAULIC MOTOR	– HYDRAULMOTOR	557	MSQ 100 SH (05)
3115 3473 83	– HYDRAULIC MOTOR	– HYDRAULMOTOR	559	MSQ 160 SH (07)
3115 3473 85	– HYDRAULIC MOTOR	– HYDRAULMOTOR	561	MSQ 250 SH (09)
3115 1603 91	– NIPPLE SET	– NIPPELSATS	563	
–	– OPTIONAL SET	– OPTIONGRUPP	565	COP 1838HD
3115 2887 80	– – CONNECT. PLATE	– – ANSLUTN.PLATTA	567	OMS
3115 9150 99	– – SEAL KIT	– – TÄTNINGSSATS	569	COP 1838HD
3115 9153 90	– – – O-RING SET	– – – O-RINGSSATS	571	COP 1638-2560
3115 9238 91	– – OVERHAUL KIT	– – RENOVERINGSSATS	573	400 IMPACT HOURS
3115 9150 99	– – – SEAL KIT	– – – TÄTNINGSSATS	569	COP 1838HD
3115 9153 90	– – – – O-RING SET	– – – – O-RINGSSATS	571	COP 1638-2560
3115 9238 92	– – OVERHAUL KIT	– – RENOVERINGSSATS	577	800 IMPACT HOURS
3115 9238 91	– – – OVERHAUL KIT	– – – RENOVERINGSSATS	573	400 IMPACT HOURS
3115 9150 99	– – – – SEAL KIT	– – – – TÄTNINGSSATS	569	COP 1838HD
3115 9153 90	– – – – – O-RING SET	– – – – – O-RINGSSATS	571	COP 1638-2560
3115 5042 90	– – CONVERSION KIT	– – OMBYGGNADSSATS	579	COP 1838ME TO COP 1838HD
3115 5035 81	– – – GEAR HOUSING	– – – VÄXELHUS	545	COMPLETE INCL ITEM 103-111
–	– – – COVER GROUP	– – – LOCKGRUPP	581	
3115 5042 80	– – – FRONT PART COMP	– – – FRONTDEL KOMPL.	547	


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
3115 5042 93	– – CONVERSION KIT	– – OMBYGGNADSSATS	583	800H REPAIR KIT. TO BE USED TOGETHER WITH CONV.KIT 3115 5042 90
3115 9150 99	– – – SEAL KIT	– – – TÄTNINGSSATS	569	COP 1838HD
3115 9153 90	– – – – O-RING SET	– – – – O-RINGSSATS	571	COP 1638-2560

Fig. 1 of 3

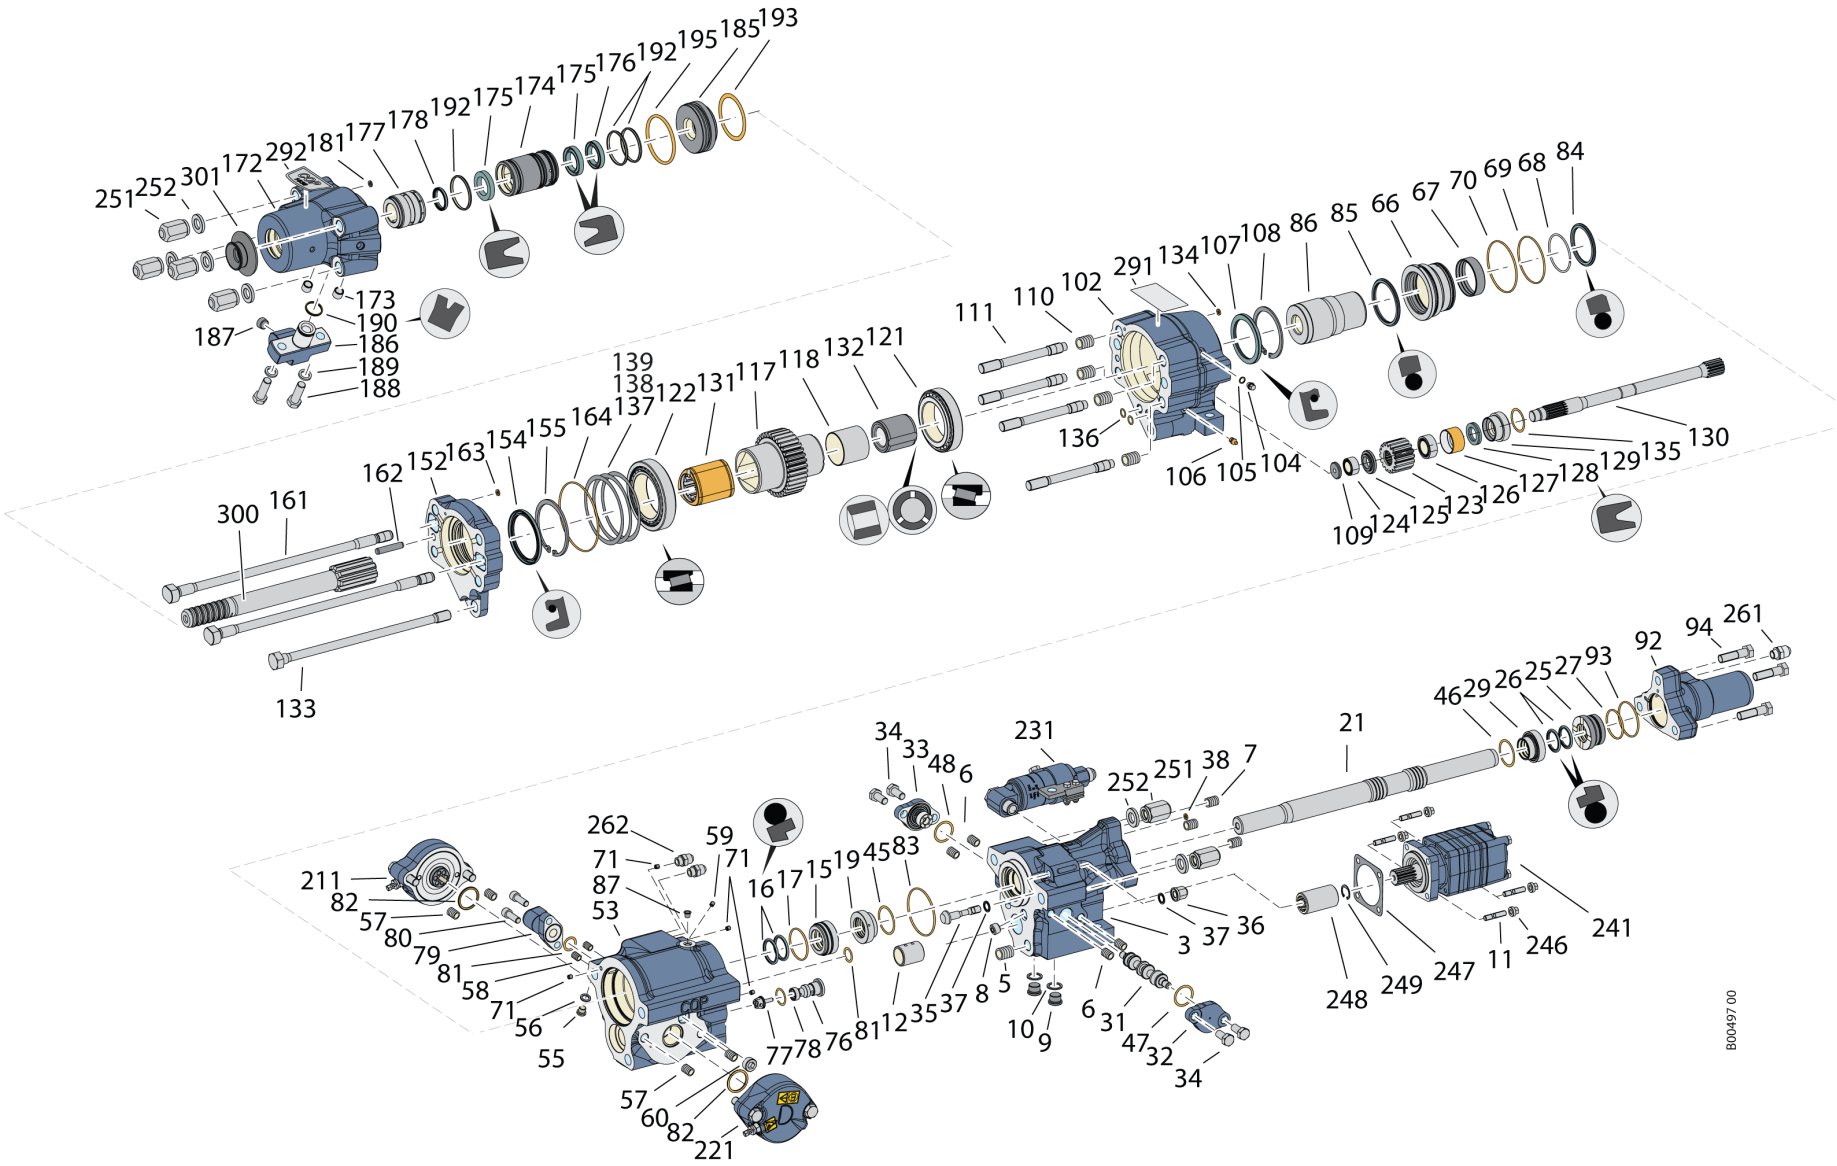

B0049700

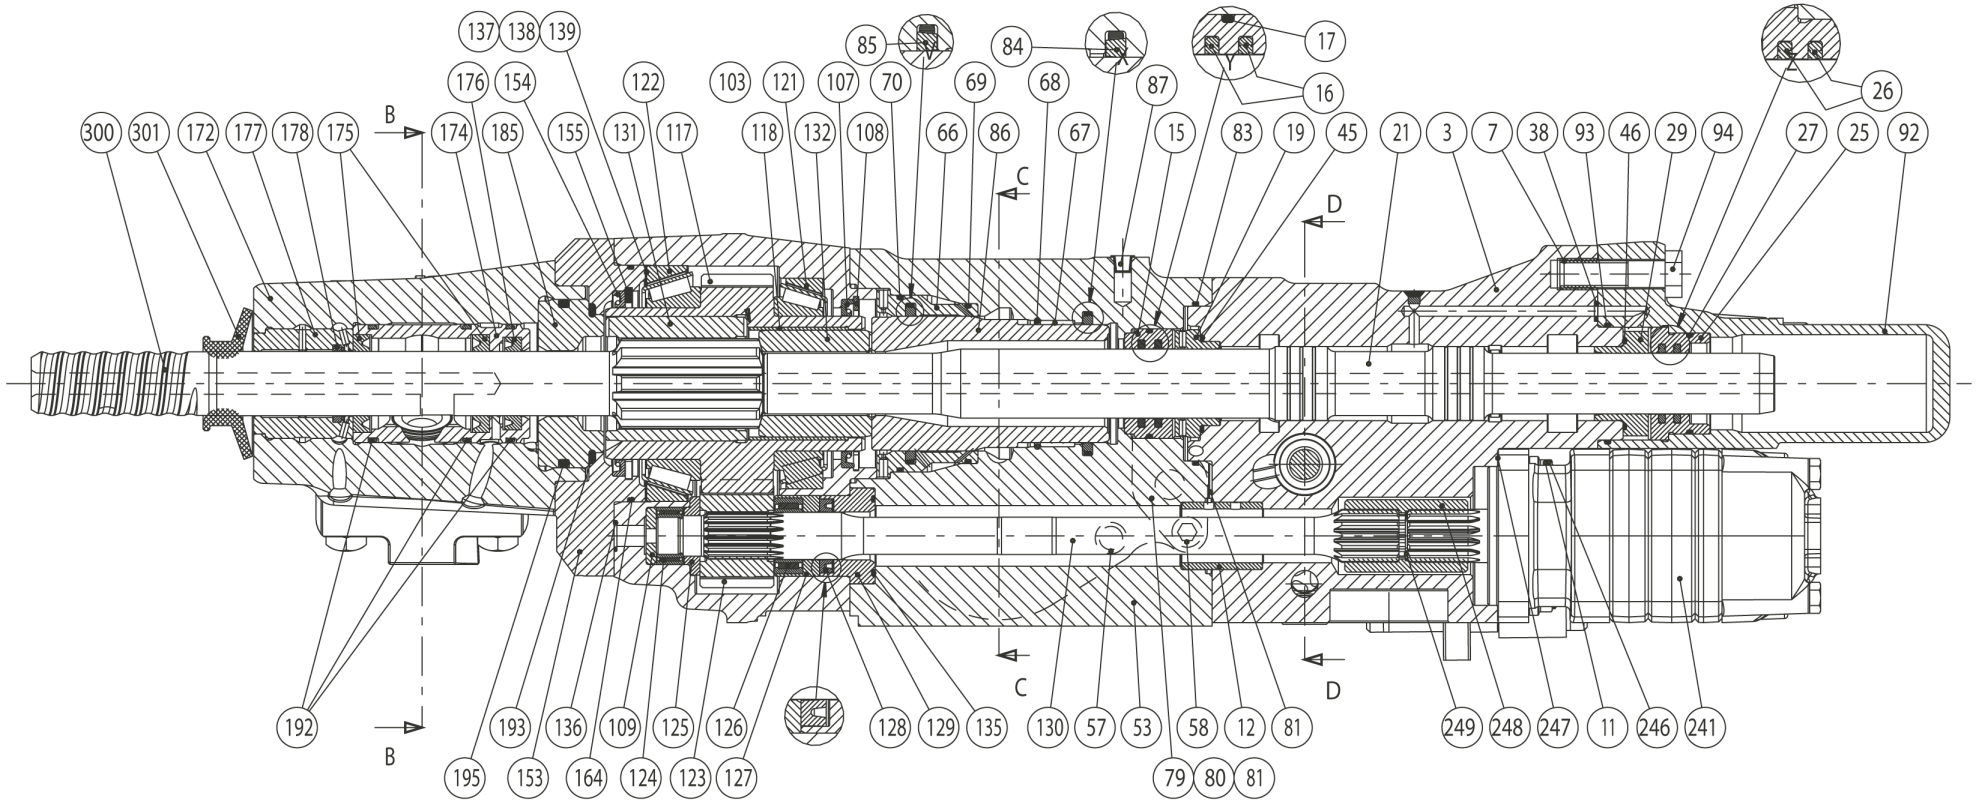
137 138 139
176 154
122
103 121 107 70
85
84
69 68 87
17
16
26
300 301 172 177 178 175
B
174 185 155 131 117
118 132 108 66 86 67 15 83 19 45 21 3 7 38 93 46 29 94 27 25 92
C
D
192
B
193 136 109 125 126
128 129 135
130 57 53 58 12 81
249 248 247 11 246 241
195 153 164 124 123 127
79 80 81
B00541 46

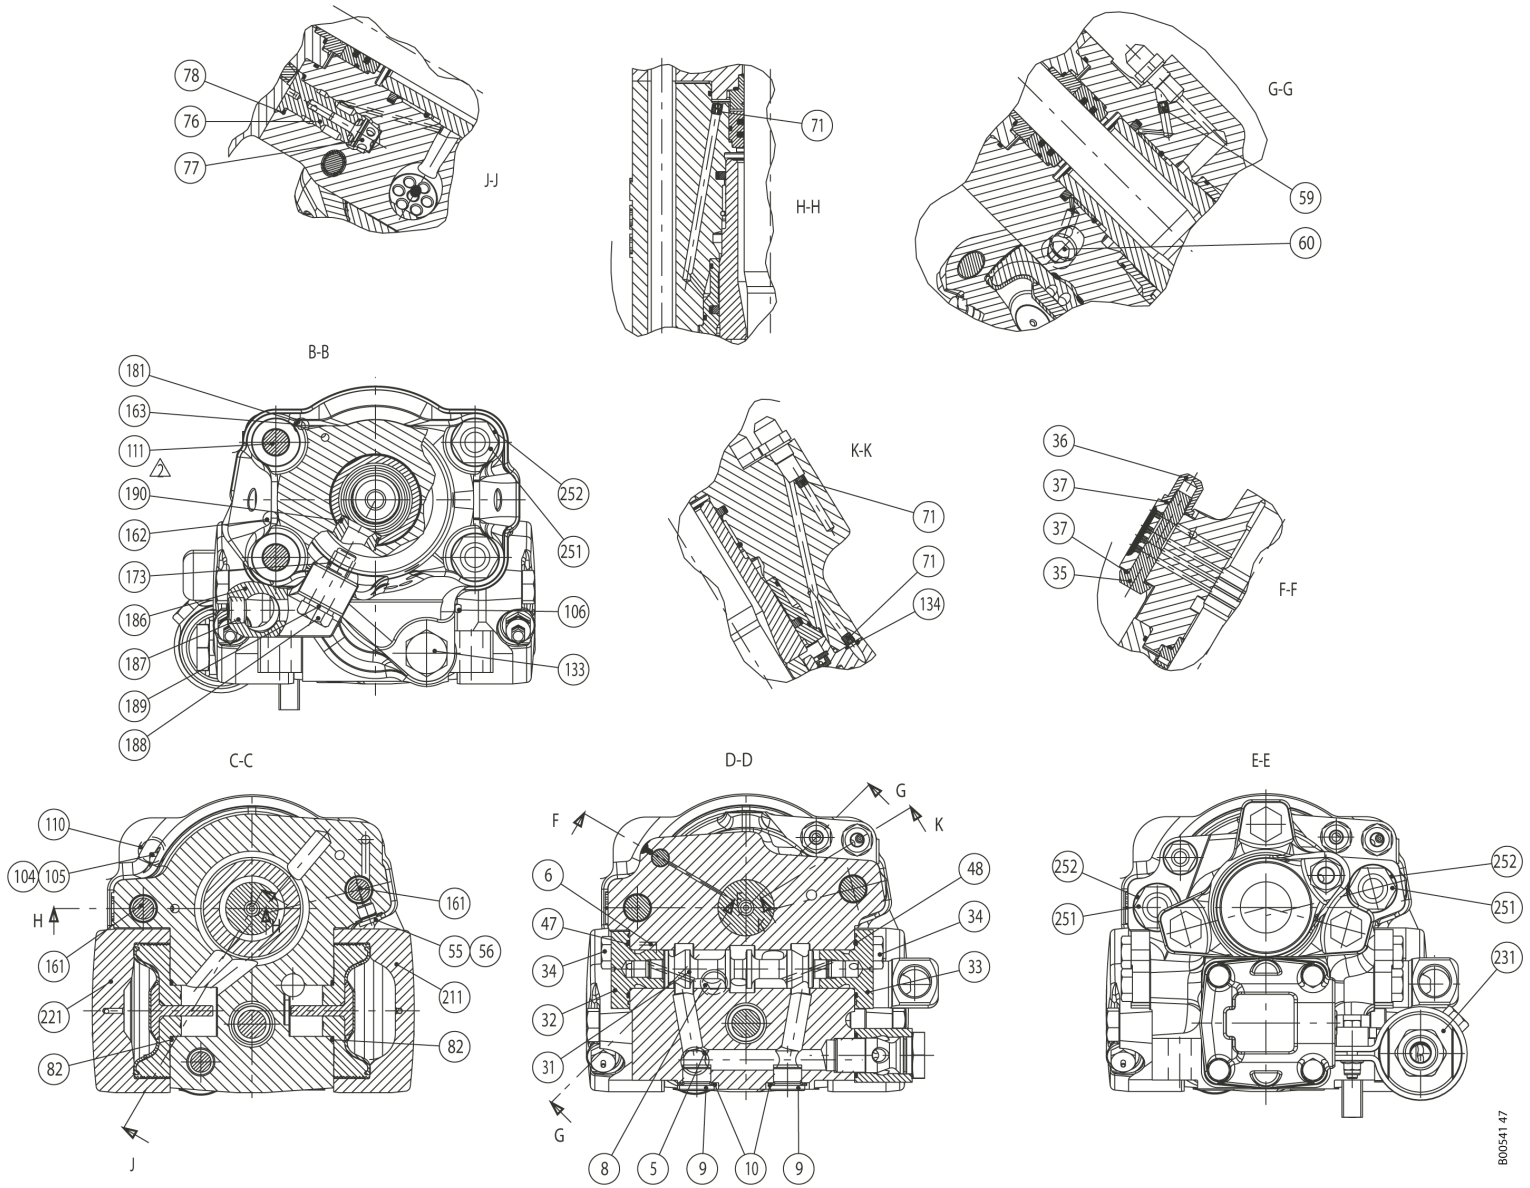
78
76
77
J-J
71
H-H
G-G
59
60
B-B
181
163
111
190
162
173
186
187
189
188
252
251
106
133
K-K
71
71
134
36
37
37
35
F-F
C-C
110
104
105
H
161
161
221
82
J
55
56
211
82
D-D
F
G
K
6
47
34
32
31
G
48
34
33
8
5
9
10
9
E-E
252
251
252
251
231
B00541 47

(Sheet 1 of 5)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2	3115 1944 80	1	CYLINDER	CYLINDER		COMPLETE INCL.POS 3-12
3	–	1	CYLINDER	CYLINDER		NOT DELIVERY SEPARATELY
5	0259 0311 00	1	THREAD INSERT	GÄNGINSATS		HELI-COIL M 20X2 X 1,5 D
6	0259 0011 00	4	THREAD INSERT	GÄNGINSATS		HELI-COIL M 14 X 1,5 D
7	0259 2061 00	3	THREAD INSERT	GÄNGINSATS		HELI-COIL M 16 X 1,5 D
8	3115 1825 00	1	PLUG	RÖRPROPP		
9	0686 6447 04	2	PLUG	PROPP		M 22X1,5 - STEEL 5.8
10	0661 1034 00	2	SEAL WASHER	TÄTNINGSBRICKA		22,7 / 30 X 2 TREDO
11	3115 1165 00	4	STUD	PINNSKRUV		
12	3115 2112 00	1	GUIDE	STYRNING		
14	3115 2766 80	1	SEAL HOUSE COMP	TÄTN. HUS KOMPL		INCL. POS 15-17
15	–	1	SEAL HOUSING	TÄTNINGSHUS		NOT DELIVERY SEPARATELY
16	3115 0970 00	2	SEAL KIT	TÄTNINGSSATS		
17	0663 6136 00	1	O-RING	O-RING		59,5 X 3 70 SHORE
19	3115 5050 01	1	PISTON GUIDE	KOLVSTYRNING		
21	3115 3635 00	1	PISTON	KOLV		HEAVY DUTY
24	3115 2772 80	1	SEAL HOUSE COMP	TÄTN. HUS KOMPL		REAR INCL.POS 25-27
25	–	1	SEAL HOUSING	TÄTNINGSHUS		NOT DELIVERY SEPARATELY
26	3115 1156 00	2	SEAL KIT	TÄTNINGSSATS		
27	0663 6135 00	1	O-RING	O-RING		54,5 X 3 70 SHORE
29	3115 1680 00	1	PISTON GUIDE	KOLVSTYRNING		
31	3115 1765 00	1	VALVE PISTON	VENTILKOLV		
32	3115 2077 03	1	VALVE COVER	VENTILGAVEL		
33	3115 2076 05	1	VALVE COVER	VENTILGAVEL		
34	0147 1438 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 14 X 30 - 8.8 FZB
35	3115 3291 00	1	REG. PLUG	REGLERPROPP		
36	3115 3214 00	1	NUT	BOTTENMUTTER		
37	3115 1697 00	2	SEAL WASHER	TÄTNINGSBRICKA		GM 1000
38	3115 3245 00	1	SEAL RING	TÄTNINGSRING		
45	0663 6134 01	1	O-RING	O-RING		49,5 X 3 90 SHORE
46	0663 6134 01	1	O-RING	O-RING		49,5 X 3 90 SHORE
47	0663 2133 01	1	O-RING	O-RING		39,2 X 3 90 SHORE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
48	0663 2133 01	1	O-RING	O-RING		39,2 X 3 90 SHORE
52	3115 2583 81	1	INTERM. COMPL.	MELLANDEL,KOMPL		INCL.POS 53-60,66-71
53	3115 2583 45	1	INTERMED. PART	MELLANDEL		INCL. POS 54-60
54	–	1	INTERMED. PART	MELLANDEL		NOT DELIVERY SEPARATELY
55	0686 6442 00	1	PLUG	PROPP		G 1/4 TYPE B - STEEL 5.8
56	0661 1020 00	1	SEAL WASHER	TÄTNINGSBRICKA		13,7 / 20,6 X 2,1 - FZ ST TREDO 1/4
57	0259 2061 00	4	THREAD INSERT	GÄNGINSATS		HELI-COIL M 16 X 1,5 D
58	0259 0068 00	2	THREAD INSERT	GÄNGINSATS		HELI-COIL M 12 X 1,5 D
59	3115 1746 06	1	NOZZLE	MUNSTYCKE		M8X8, D=1,7
60	3115 2401 00	1	PLUG	RÖRPROPP		
66	3115 3474 00	1	LINER	FODER		
67	3115 3744 00	1	BUSHING	BUSSNING		
68	0335 3500 10	1	LOCK RING	LÅSRING		80 X 3,2 DIN 7993 B
69	0663 2105 96	1	O-RING	O-RING		89,5 X 3 90 SHORE
70	0663 2104 94	1	O-RING	O-RING		99,5 X 3 90 SHORE
71	3115 1746 06	3	NOZZLE	MUNSTYCKE		M8X8, D=1,7
76	3115 2384 00	1	VALVE SEAT	VENTILSÄTE		
77	3115 2383 00	1	VALVE CONE	VENTILKÄGLA		
78	0663 2129 01	1	O-RING	O-RING		29,2 X 3 90 SHORE
79	3115 3455 00	1	CONNECT. PLATE	ANSLUTN.PLATTA		
80	0211 1960 84	2	SCREW	SKRUV		MC6S M 12 X 35 -12.9
81	0663 2100 62	2	O-RING	O-RING		24,2 X 3 90 SHORE
82	3115 2988 00	2	SEAL RING	TÄTNINGSRING		
83	3115 5146 01	1	SEAL RING	TÄTNINGSRING		
84	3115 1879 00	1	SEAL KIT	TÄTNINGSSATS		
85	3115 1880 00	1	SEAL KIT	TÄTNINGSSATS		
86	3115 2971 00	1	DAMPING PISTON	DÄMPKOLV		
87	0686 9110 00	1	PROTECTION PLUG	SKYDDSPROPP		9,3 / 10,9 X 9
92	3115 3481 00	1	BACK HEAD	BAKSTYCKE		
93	0663 6138 00	1	O-RING	O-RING		69,5 X 3 70 SHORE
94	0147 1481 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 60 - 8.8 FZB

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
102	3115 5035 81	1	GEAR HOUSING	VÄXELHUS	Page 545	COMPLETE INCL ITEM 103-111
103	–	1	GEAR HOUSING	VÄXELHUS		
104	0686 4201 03	1	PLUG	PROPP		
105	0653 9038 00	1	GASKET	PACKNING		10 / 13,5 X 1 -11 4010 14
106	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
107	0666 7188 01	1	RADIAL LIP SEAL	RADIALTÄTNING		80 / 100 X 7
108	0335 2169 00	1	CIRCLIP	SPÅRRING		SGH 100 X 3 DIN 472
109	3115 0273 00	1	WASHER	BRICKA		
111	3115 3613 00	4	STUD	PINNBULT		
116	3115 1732 81	1	ROT.CHUCK	BORRHYLSA		INCL.POS 117,118
117	–	1	ROT.CHUCK	BORRHYLSA		NOT DELIVERY SEPARATELY
118	3115 1881 00	1	BUSHING	BUSSNING		
121	0509 0221 00	1	ROLLER BEARING	RULLAGER		32016
122	0509 0223 00	1	ROLLER BEARING	RULLAGER		90 / 140 X 32
123	3115 0274 00	1	GEAR WHEEL	KUGGHJUL		
124	0516 1504 01	1	NEEDLE BEARING	NÅLLAGER		22 / 34 X 16
125	3115 0823 00	1	WASHER	BRICKA		
126	0516 1538 00	1	NEEDLE BEARING	NÅLLAGER		28 / 45 X 17
127	3115 0824 00	1	SLEEVE	HYLSA		
128	0667 1206 00	1	SEAL	TÄTNING		28 / 44 X 8 90 NBR/108
129	3115 2742 00	1	GUIDE SLEEVE	STYRHYLSA		
130	3115 0821 00	1	SHAFT	AXEL		
131	3115 1582 00	1	DRIVER	MEDBRINGARE		
132	3115 2968 00	1	ROT.CH.BUSHING	BORRBUSSNING		
133	3115 1457 00	1	SIDE BOLT	SIDOBULT		
134	3115 3245 00	1	SEAL RING	TÄTNINGSRING		
135	0663 2133 01	1	O-RING	O-RING		39,2 X 3 90 SHORE
136	0663 2120 00	2	O-RING	O-RING		13,3 X 2,4 70 SHORE
137	3115 0297 01	1	SHIM	SHIMS		0,10 MM
138	3115 0297 02	1	SHIM	SHIMS		0,15 MM
139	3115 0297 03	1	SHIM	SHIMS		0,5 MM
152	3115 5036 80	1	COVER COMPL.	LOCK KOMPL.		
153	3115 5036 00	1	COVER	LOCK		

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
154	0666 7190 01	1	RADIAL LIP SEAL	RADIALTÄTNING		SIMRIT 90 / 110 X 7
155	0335 2173 00	1	CIRCLIP	SPÅRRING		SGH 110 X 4 DIN 472
161	3115 5040 00	2	SIDE BOLT	SIDOBULT		
162	0102 0473 00	1	PIN	PINNE		CP 12M6 X 60 - 11 1922 04
163	3115 3245 00	1	SEAL RING	TÄTNINGSRING		
164	0663 6151 00	1	O-RING	O-RING		134,5 X 3 70 SHORE
171	3115 5042 80	1	FRONT PART COMP	FRONTDEL KOMPL.	Page 547	
172	3115 5042 00	1	FRONT PART	FRONTDEL		
173	0259 0084 00	2	THREAD INSERT	GÄNGINSATS		1 M16 1 D
174	3115 5044 00	1	FLUSHING HEAD	SPOLHUVUD		
175	3115 2333 00	2	CUP SEAL	U-MANSCHETT		
176	3115 5190 00	1	CUP SEAL	U-MANSCHETT		
177	3115 5045 01	1	GUIDE	STYRNING		D=38
178	3115 3024 00	1	WIPER	AVSTRYKARE		
181	3115 3245 00	1	SEAL RING	TÄTNINGSRING		
185	3115 2122 00	1	STOP RING	STOPPRING		
186	3115 5043 00	1	CONNECT. PLATE	ANSLUTN.PLATTA		
187	3115 1825 00	1	PLUG	RÖRPROPP		
188	0147 1479 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
189	3315 0195 10	2	LOCK WASHER	LÅSBRICKA		17/25,4 X 3,7 HRC50 FZB
190	3115 3445 00	1	SEAL RING	TÄTNINGSRING		
192	3115 3289 17	3	SEAL RING	TÄTNINGSRING		
193	0663 2143 00	1	O-RING	O-RING		79,2 X 5,7 70 SHORE
195	0663 2145 01	1	O-RING	O-RING		89,1 X 5,7 90 SHORE
211	3115 3451 81	1	ACCUMULATOR	ACKUMULATOR	Page 549	
221	3115 3511 81	1	ACCUMULATOR	ACKUMULATOR	Page 551	
231	3115 2615 91	1	RETURN ACCUM.	RETURACKUMULAT.	Page 553	
241	3115 3473 80	1	HYDRAULIC MOTOR	HYDRAULMOTOR	Page 555	MSQ 80 SH (02)
241	3115 3473 81	1	HYDRAULIC MOTOR	HYDRAULMOTOR	Page 557	MSQ 100 SH (05)
241	3115 3473 83	1	HYDRAULIC MOTOR	HYDRAULMOTOR	Page 559	MSQ 160 SH (07)
241	3115 3473 85	1	HYDRAULIC MOTOR	HYDRAULMOTOR	Page 561	MSQ 250 SH (09)
246	3115 3548 00	4	NUT	MUTTER		


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
247	3115 0327 00	1	GASKET	PACKNING		
248	3115 0277 00	1	COUPLING	KOPPLING		
249	0335 2130 00	1	CIRCLIP	SPÅRRING		SGH 28 X 1,2 DIN 472
251	3115 0286 00	6	DOME NUT	KUPOLMUTTER		
252	3115 0287 00	6	WASHER	BRICKA		
261	3176 6514 00	1	NIPPLE	NIPPEL		UNF 7/8 - R 3/8
262	3176 6512 00	2	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
291	3115 3164 00	1	LABEL	DEKAL		ATLAS COPCO
292	3115 5240 00	1	LABEL	DEKAL		
300	7490 5160 87	1	SHANK ADAPTER	NACKADAPTER		R32 (SECOROC 90516087)
300	7490 5160 88	1	SHANK ADAPTER	NACKADAPTER		R32E (SECOROC 90516088)
300	7490 5160 98	1	SHANK ADAPTER	NACKADAPTER		R38 (SECOROC 90516098)
300	7490 5160 99	1	SHANK ADAPTER	NACKADAPTER		R38E (SECOROC 90516099)
300	7490 5161 20	1	SHANK ADAPTER	NACKADAPTER		T38 (SECOROC 90516120)
300	7490 5161 21	1	SHANK ADAPTER	NACKADAPTER		T38E (SECOROC 90516121)
301	3115 2231 00	1	DRILL COLLAR	BORRMANSCHETT		R28/R32/R38/T38 ADAPTER
	0686 9250 26	2	PLUG	PROPP		SKRUVPLUGG G 1/2'
	0686 9250 27	2	PLUG	PROPP		SKRUVPLUGG G 3/4'
	3115 1603 91	1	NIPPLE SET	NIPPELSATS	Page 563	
	–	1	OPTIONAL SET	OPTIONGRUPP	Page 565	COP 1838HD

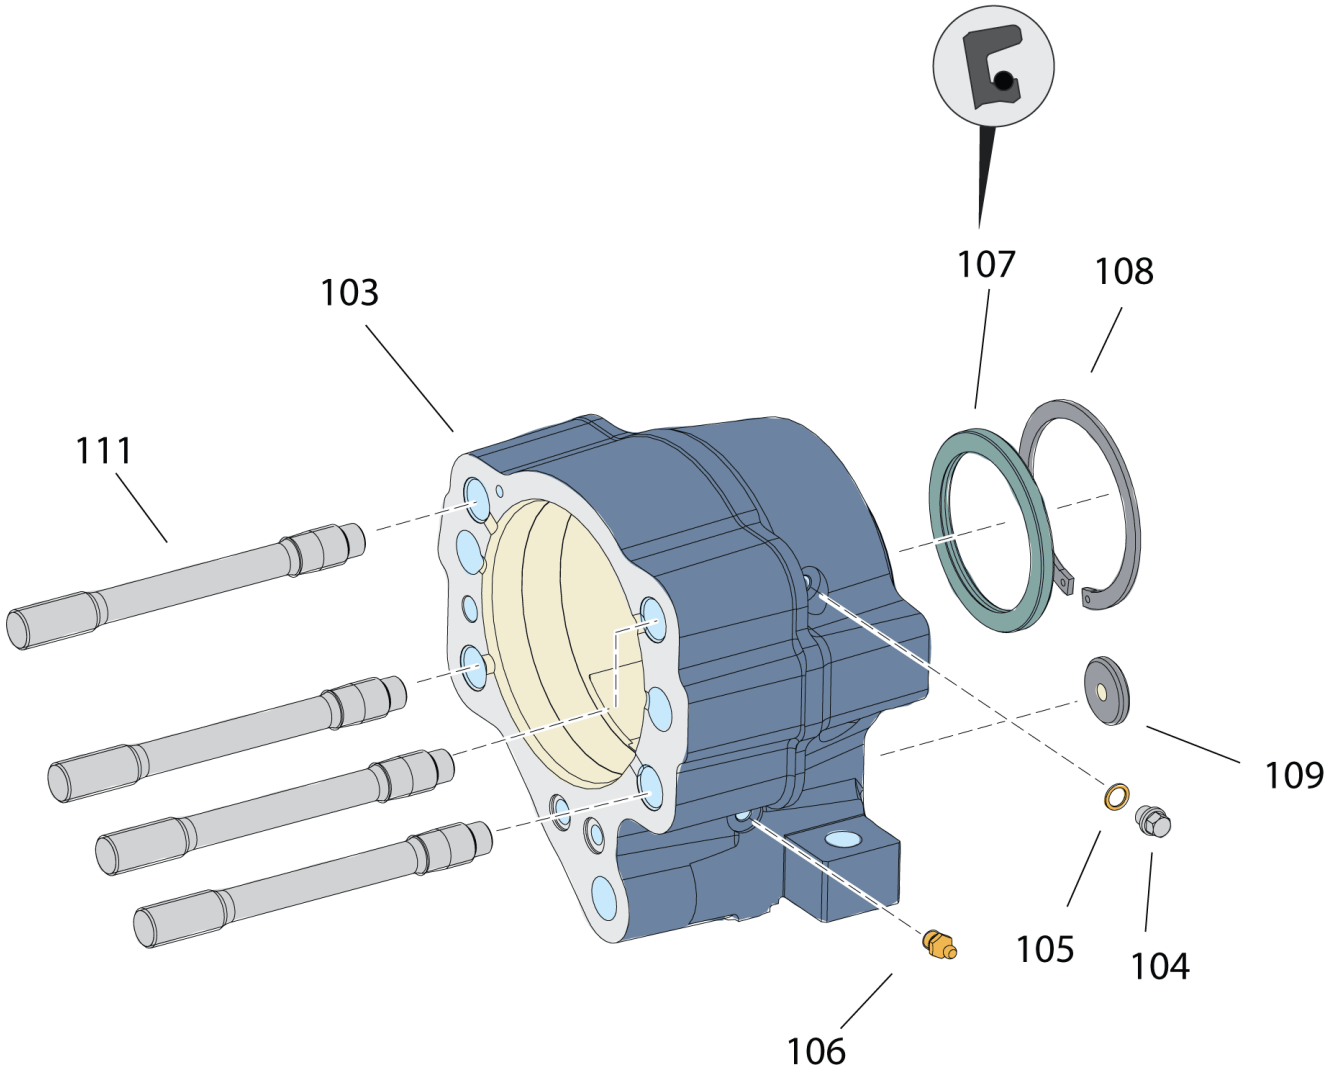

B0049718

B0049718


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
103	–	1	GEAR HOUSING	VÄXELHUS		
104	0686 4201 03	1	PLUG	PROPP		
105	0653 9038 00	1	GASKET	PACKNING		10 / 13,5 X 1 -11 4010 14
106	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
107	0666 7188 01	1	RADIAL LIP SEAL	RADIALTÄTNING		80 / 100 X 7
108	0335 2169 00	1	CIRCLIP	SPÅRRING		SGH 100 X 3 DIN 472
109	3115 0273 00	1	WASHER	BRICKA		
111	3115 3613 00	4	STUD	PINNBULT		

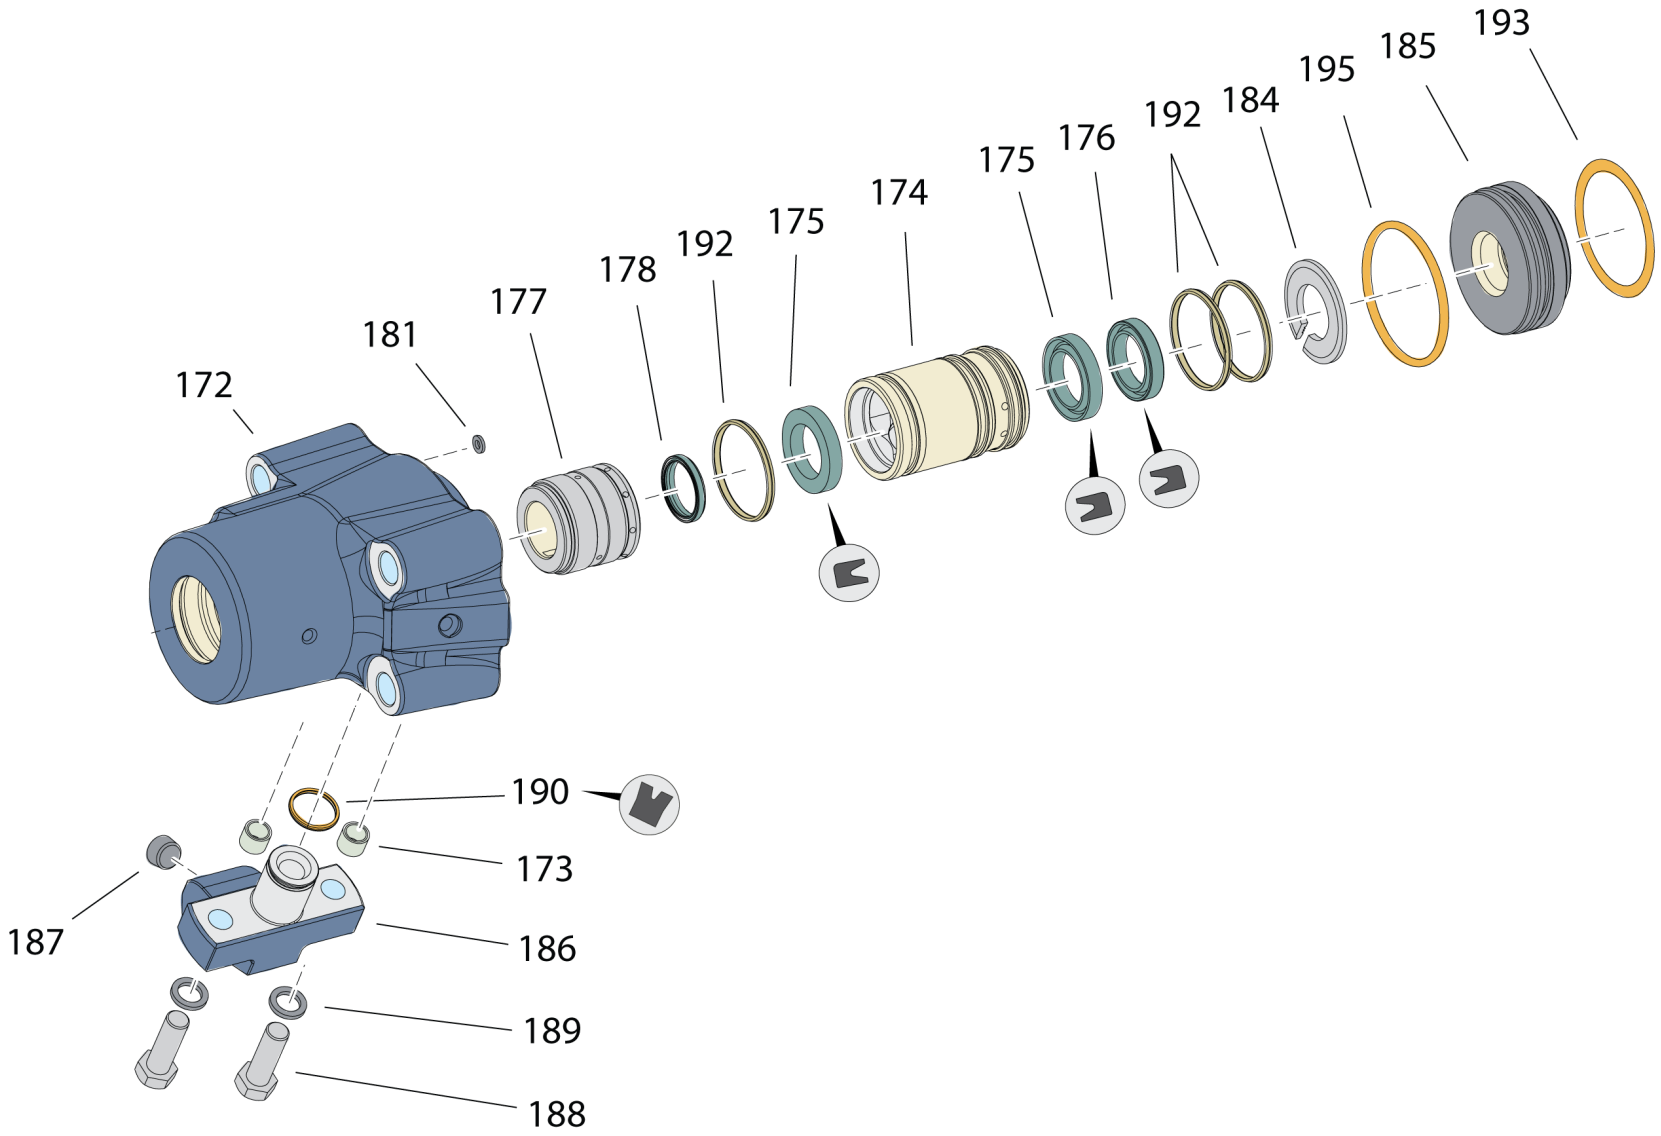
193
185
195
184
192
176
175
174
175
192
178
177
181
172
190
173
187
186
189
188
B00541 49

B0054149

FRONT PART COMP / FRONTDEL KOMPL. 3115 5042 80


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
172	3115 5042 00	1	FRONT PART	FRONTDEL		
174	3115 5044 00	1	FLUSHING HEAD	SPOLHUVUD		
175	3115 2333 00	2	CUP SEAL	U-MANSCHETT		
176	3115 5190 00	1	CUP SEAL	U-MANSCHETT		
177	3115 5045 01	1	GUIDE	STYRNING		D=38
178	3115 3024 00	1	WIPER	AVSTRYKARE		
181	3115 3245 00	1	SEAL RING	TÄTNINGSRING		
185	3115 2122 00	1	STOP RING	STOPPRING		
186	3115 5043 10	1	CONNECT. PLATE	ANSLUTN.PLATTA		
188	0147 1479 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
189	3315 0195 10	2	LOCK WASHER	LÅSBRICKA		17/25,4 X 3,7 HRC50 FZB
190	3115 3445 00	1	SEAL RING	TÄTNINGSRING		
192	3115 3289 17	3	SEAL RING	TÄTNINGSRING		
193	0663 2143 00	1	O-RING	O-RING		79,2 X 5,7 70 SHORE
195	0663 2145 01	1	O-RING	O-RING		89,1 X 5,7 90 SHORE

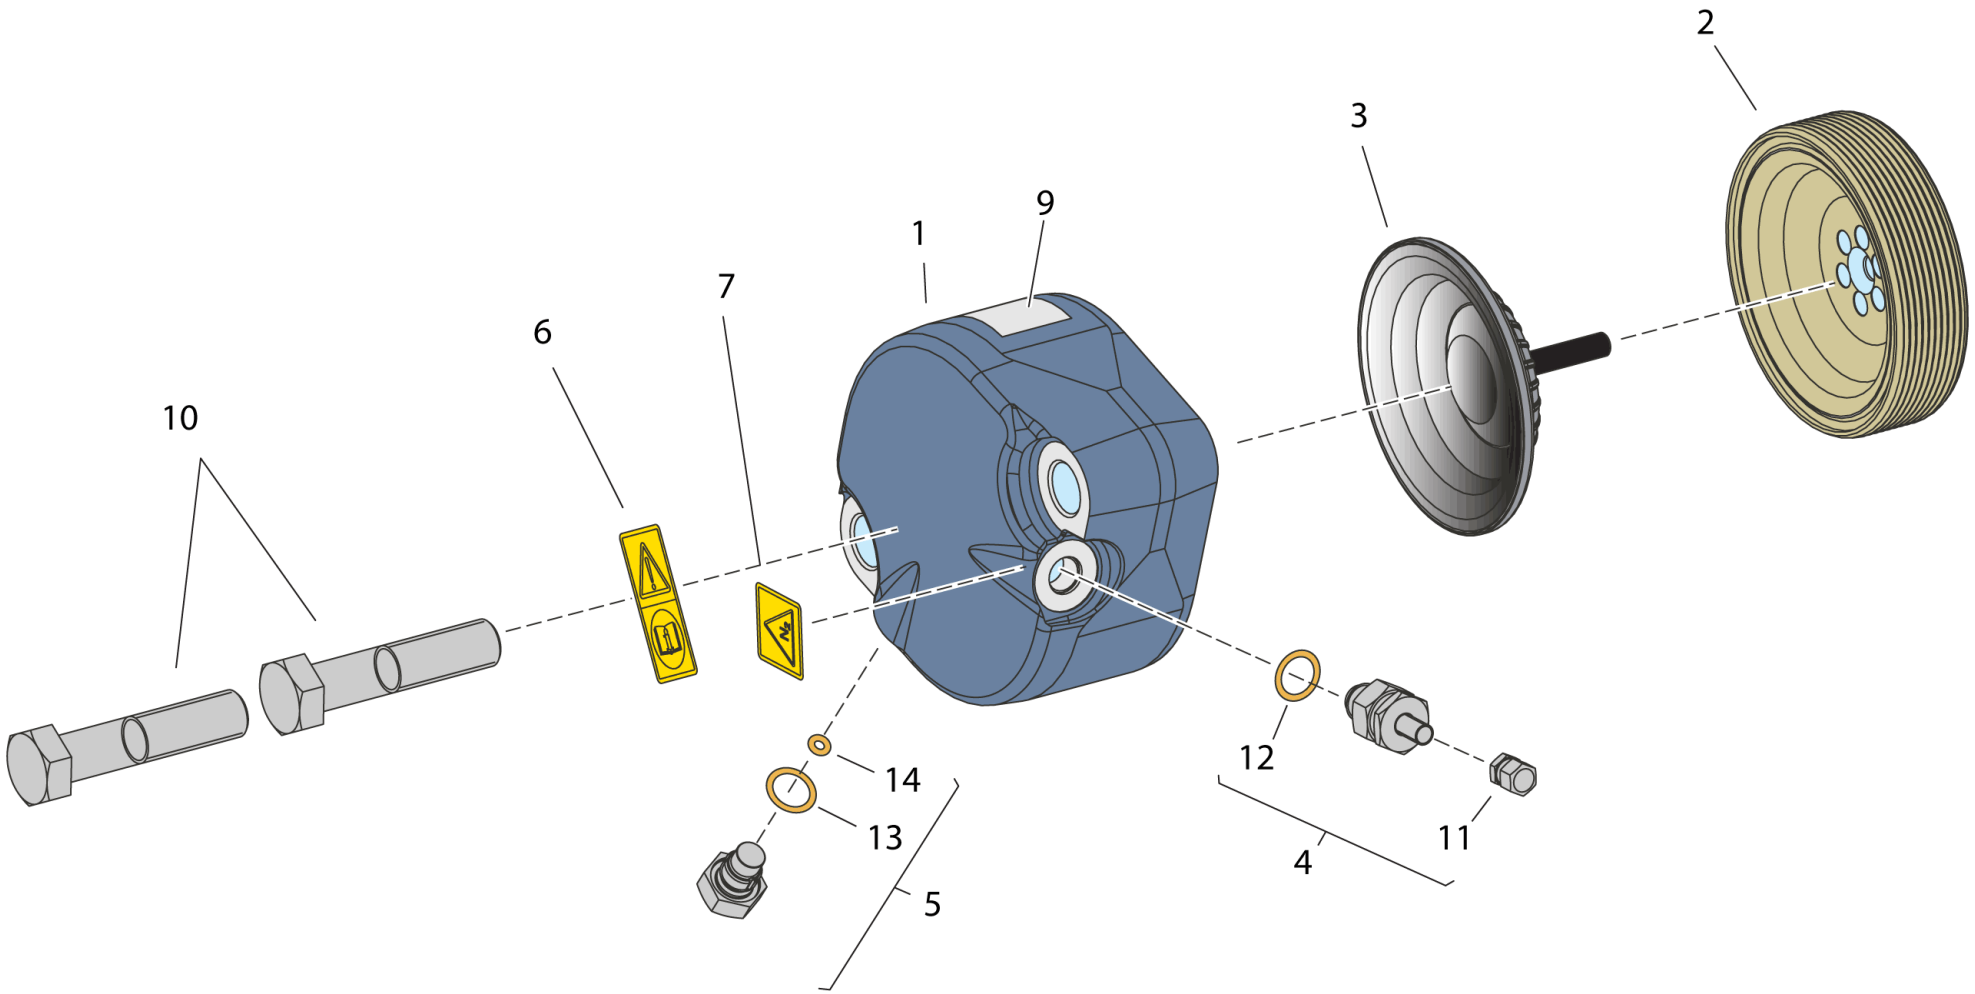

1250 0243 44
B00497 08


B0049708

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 1870 00	1	PROTECTION PLUG	SKYDDSPROPP		
1	–	1	DIAPHRAGM COVER	MEMBRANLOCK		
2	–	1	DIAPHRA.HOUSING	MEMBRANHUS		
3	3115 1822 01	1	DIAPHRAGM	MEMBRAN		
4	3115 0262 00	1	VALVE	VENTIL		COMPLETE INCL. POS 621,622
5	3115 2196 81	1	TEST VALVE	KONTROLLVENTIL		COMPLETE
9	3115 2714 90	1	LABEL SET	DEKALSATS		
10	3115 2702 10	2	SCREW	SKRUV		
11	3310 4076 00	1	CAP	HUV		
12	0663 9056 00	1	O-RING	O-RING		14 X 1,78 70 SHORE
13	0663 6121 00	1	O-RING	O-RING		14,1 X 1,6 70 SHORE
14	0663 2110 00	1	O-RING	O-RING		10,3 X 2,4 70 SHORE

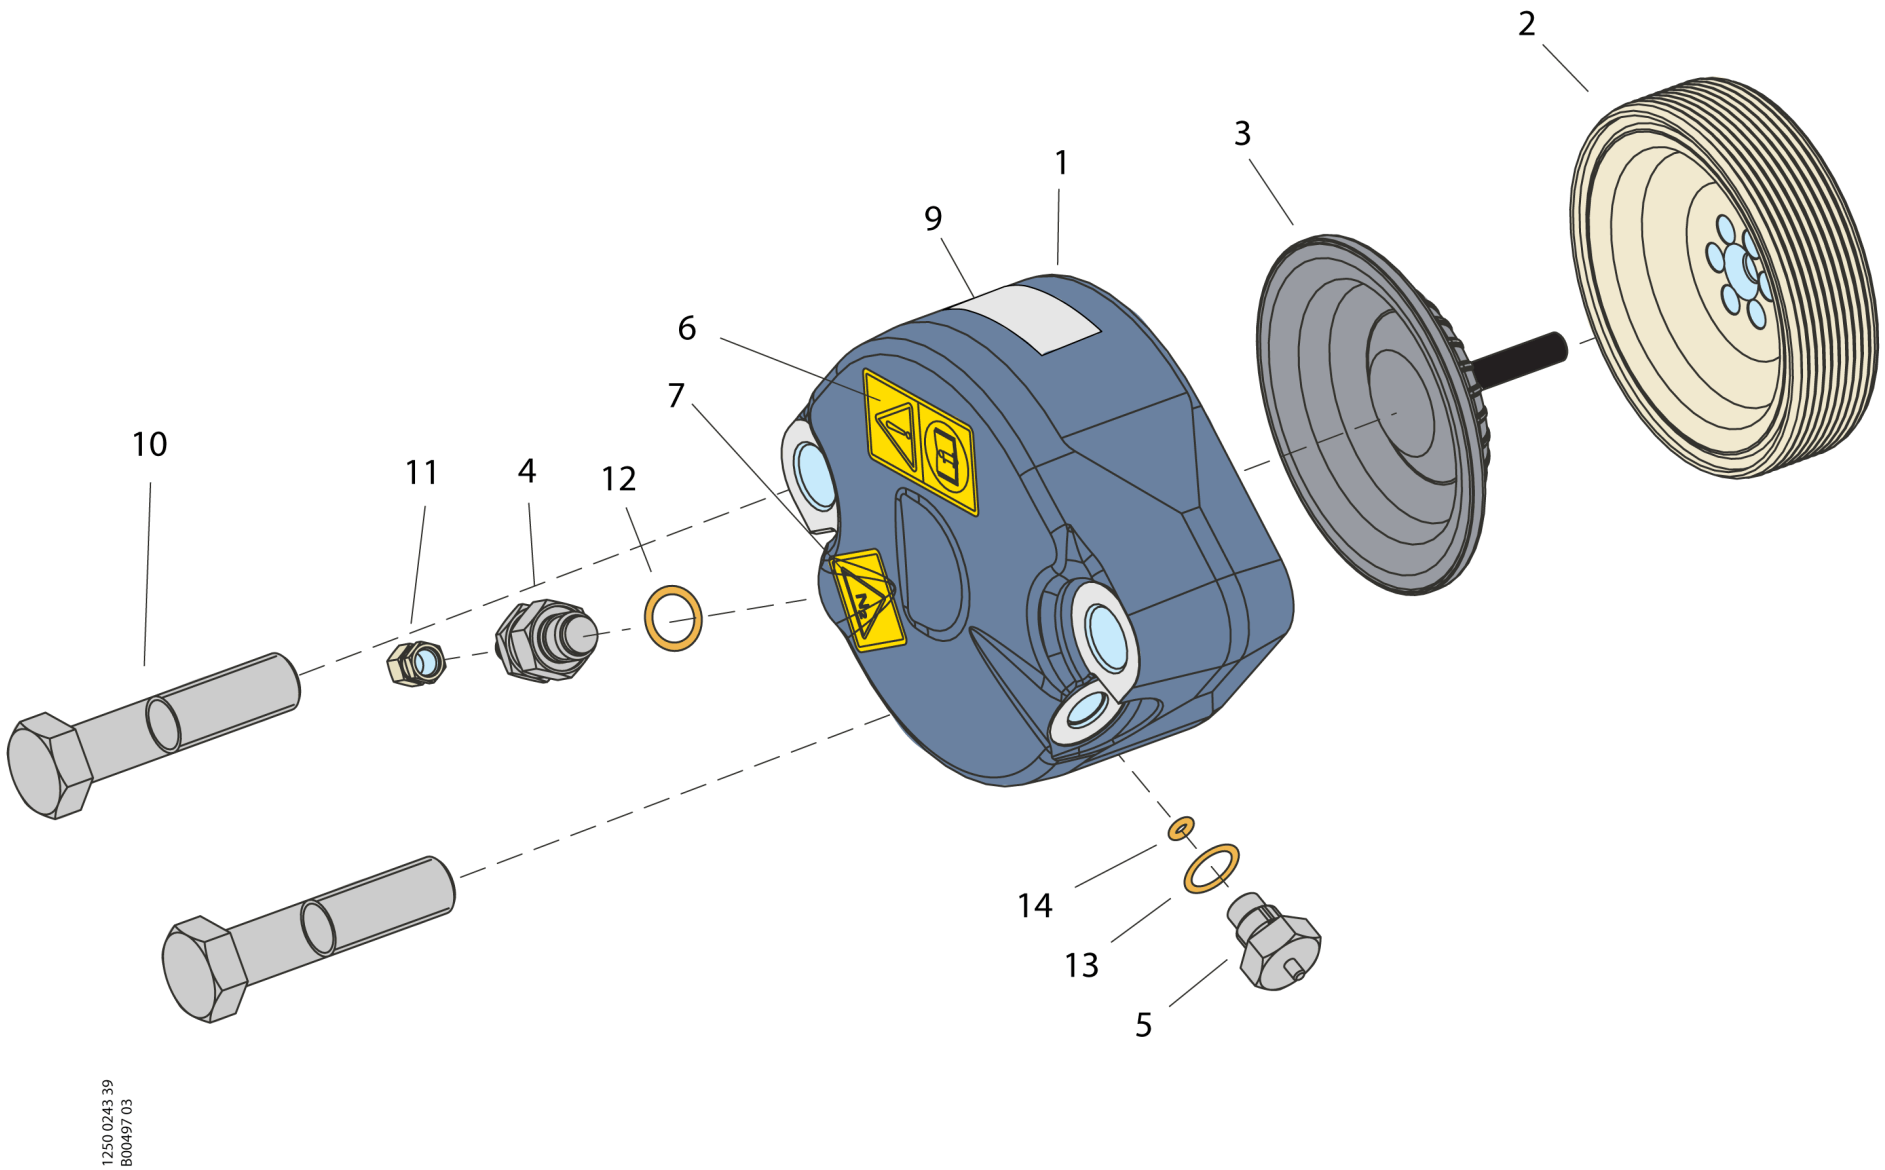


B0049703

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 1870 00	1	PROTECTION PLUG	SKYDDSPROPP		
1	–	1	DIAPHRAGM COVER	MEMBRANLOCK		
2	–	1	DIAPHRA.HOUSING	MEMBRANHUS		
3	3115 1822 01	1	DIAPHRAGM	MEMBRAN		
4	3115 0262 00	1	VALVE	VENTIL		COMPLETE INCL. POS 621,622
5	3115 2196 81	1	TEST VALVE	KONTROLLVENTIL		COMPLETE
9	3115 2715 90	1	LABEL SET	DEKALSATS		
10	3115 2702 10	2	SCREW	SKRUV		
11	3310 4076 00	1	CAP	HUV		
12	0663 9056 00	1	O-RING	O-RING		14 X 1,78 70 SHORE
13	0663 6121 00	1	O-RING	O-RING		14,1 X 1,6 70 SHORE
14	0663 2110 00	1	O-RING	O-RING		10,3 X 2,4 70 SHORE

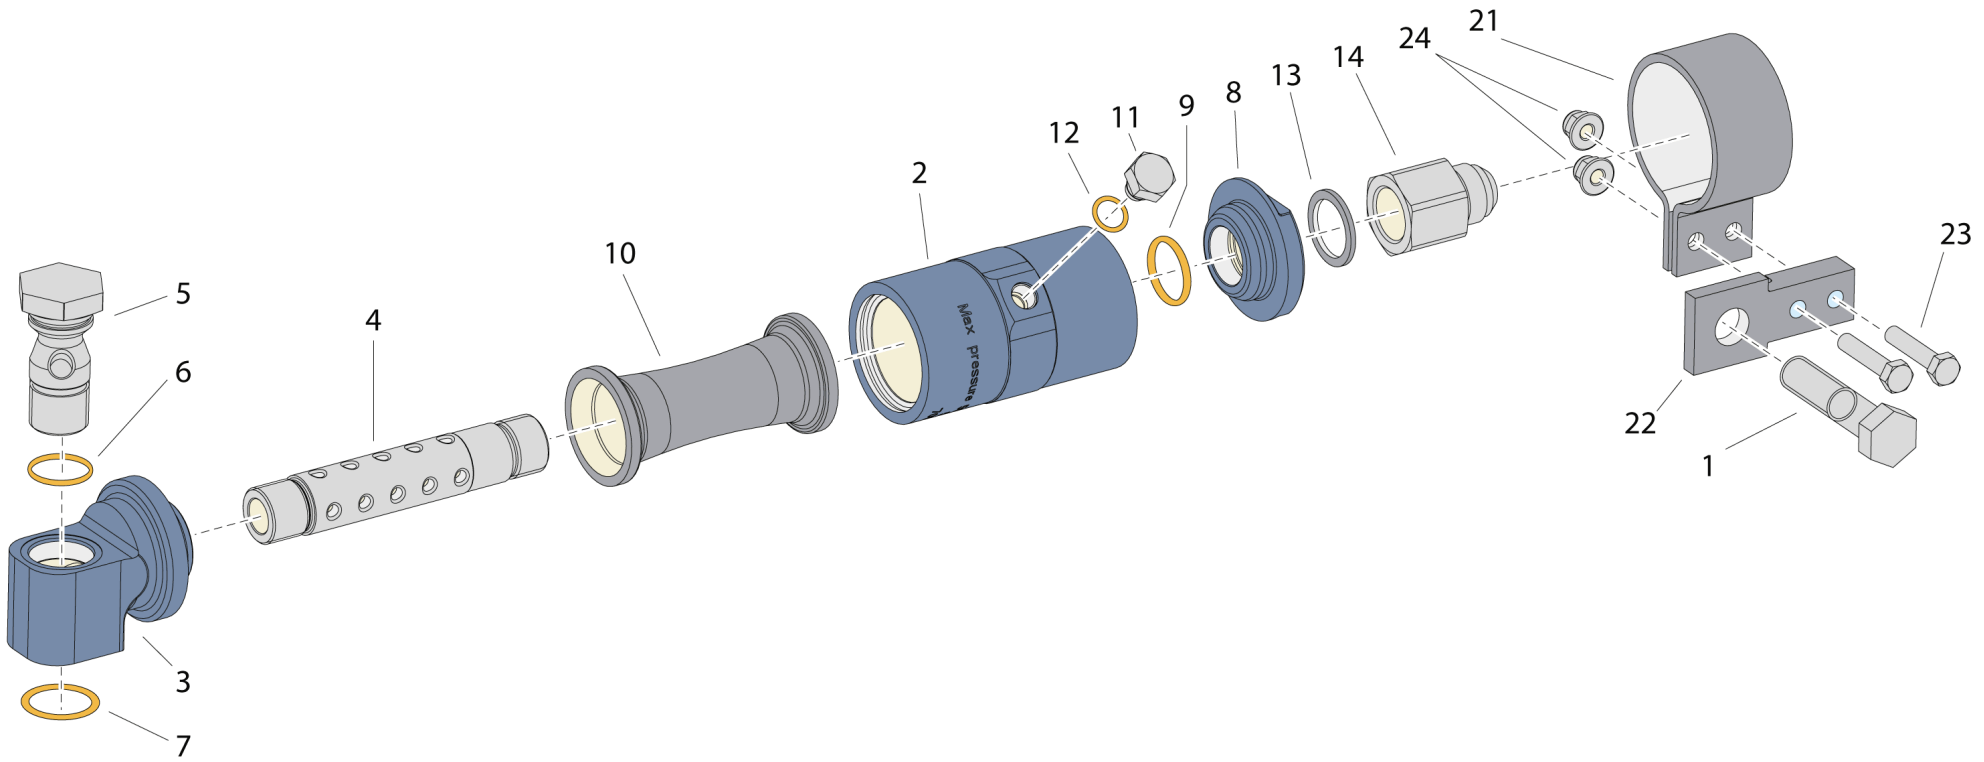


B0054144

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	0686 9010 54	1	PROTECTING PLUG	PROPP, SKYDD		26,4 29,5 19 27,7 24,7 45
1	0147 1483 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 70 - 8.8 FZB
2	3115 2615 20	1	TUBE	RÖR		
3	3115 2885 00	1	TUBE COVER	RÖRGAVEL		
4	3115 2886 00	1	PIPE	RÖR		
5	3115 2889 00	1	PRESSURE SCREW	TRYCKSKRUV		
6	0663 2109 37	1	O-RING	O-RING		25 X 2 90 SHORE
7	0663 2129 01	1	O-RING	O-RING		29,2 X 3 90 SHORE
8	3115 2618 00	1	END PIECE	GAVEL		
9	0663 2128 00	1	O-RING	O-RING		26,2 X 3 70 SHORE
10	3115 1926 02	1	DIAPHRAGM	MEMBRAN		
11	3115 2617 20	1	PLUG	PROPP		
12	9125 6191 00	1	O-RING	O-RING		14,1 X 1,6 90 SHORE
13	0661 1038 00	1	SEAL WASHER	TÄTNINGSBRICKA		27 / 35 X 2,5 FZ ST.
14	3176 6528 00	1	NIPPLE	NIPPEL		UNF 1 1/16 - G 3/4
21	3115 2275 00	1	CLAMP	KLAMMA		
22	3115 2276 00	1	HOLDER	HÅLLARE		
23	0147 1328 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 40 - 8.8 FZB
24	0291 1128 19	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7043

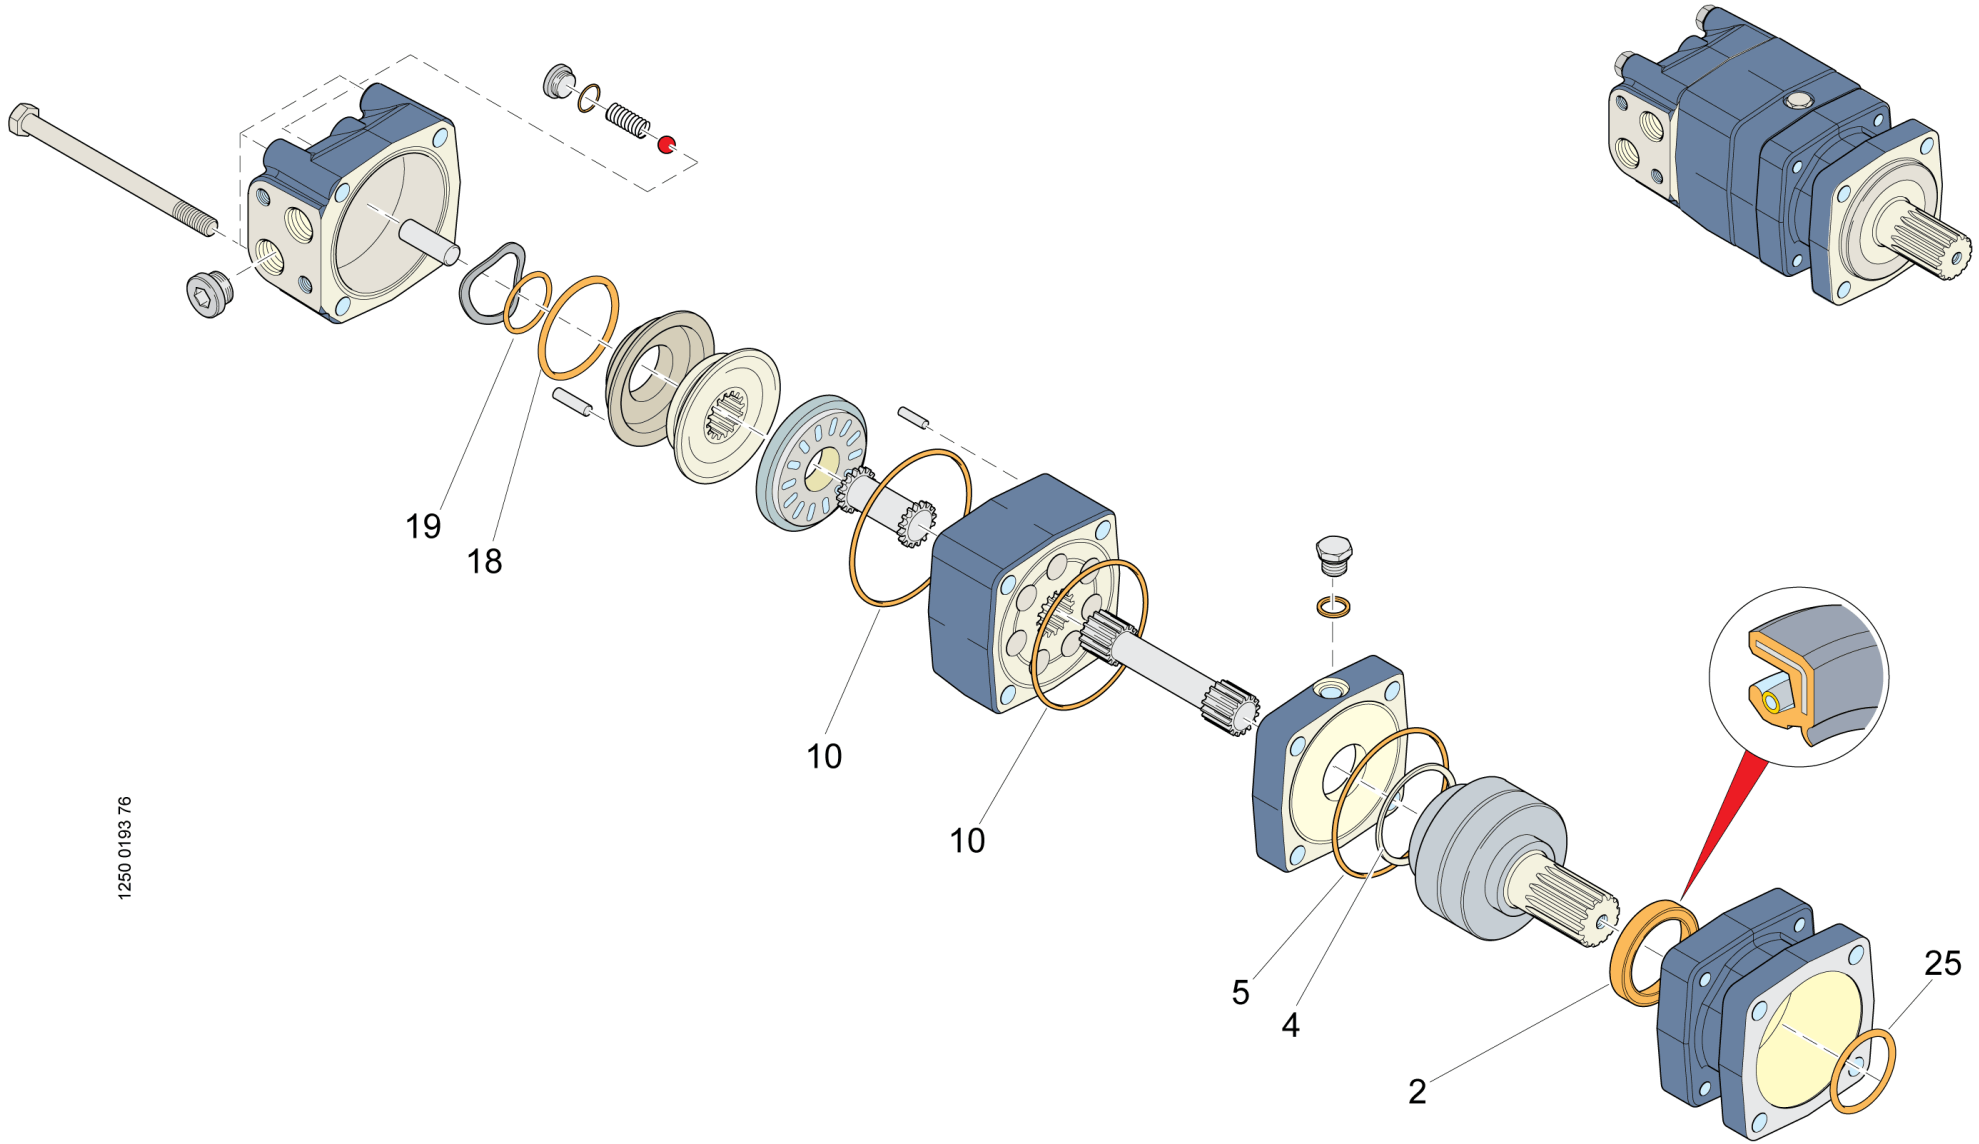


B0040501

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 3473 90	1	SEAL KIT	TÄTNINGSSATS		INCL. POS 2,4,5,10,18,19,25

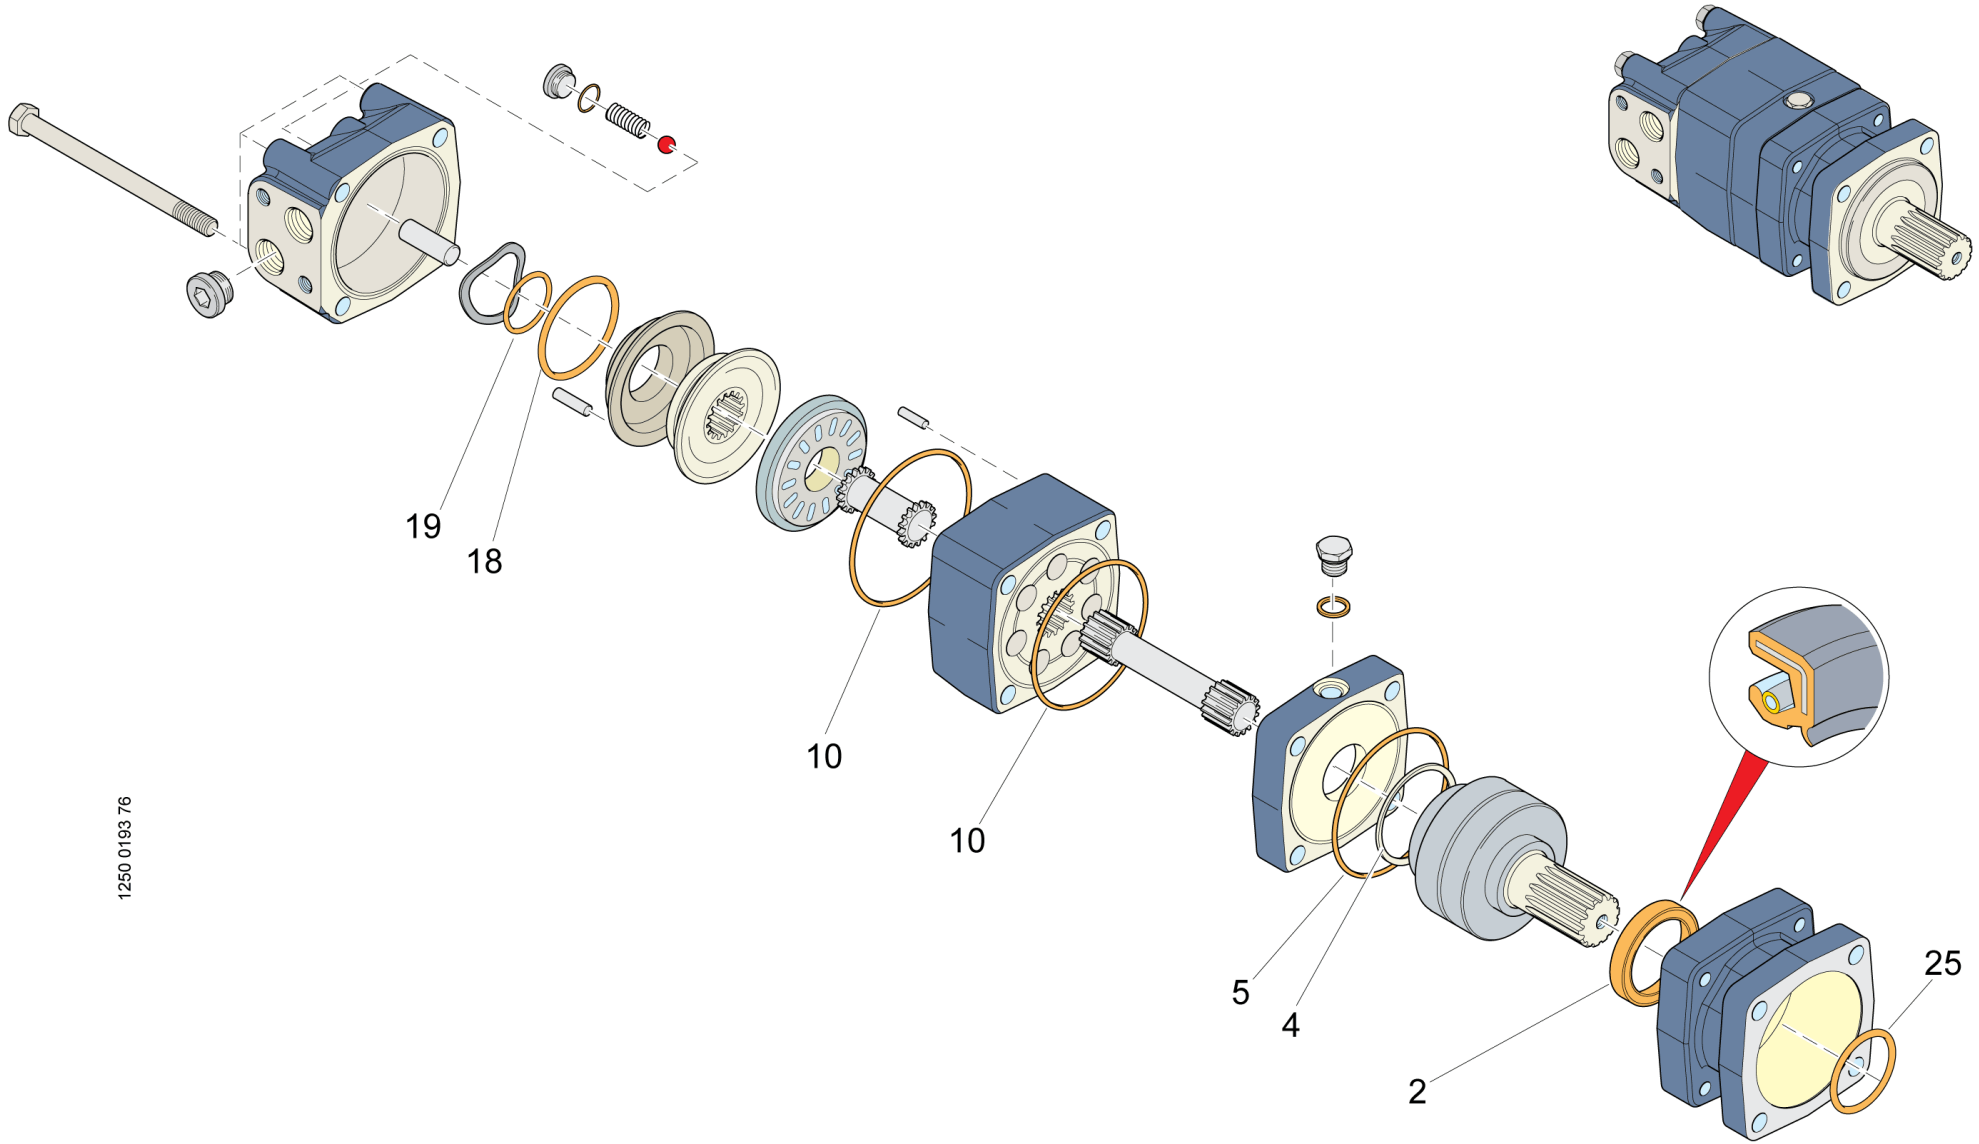


B0040501

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 3473 90	1	SEAL KIT	TÄTNINGSSATS		INCL. POS 2,4,5,10,18,19,25

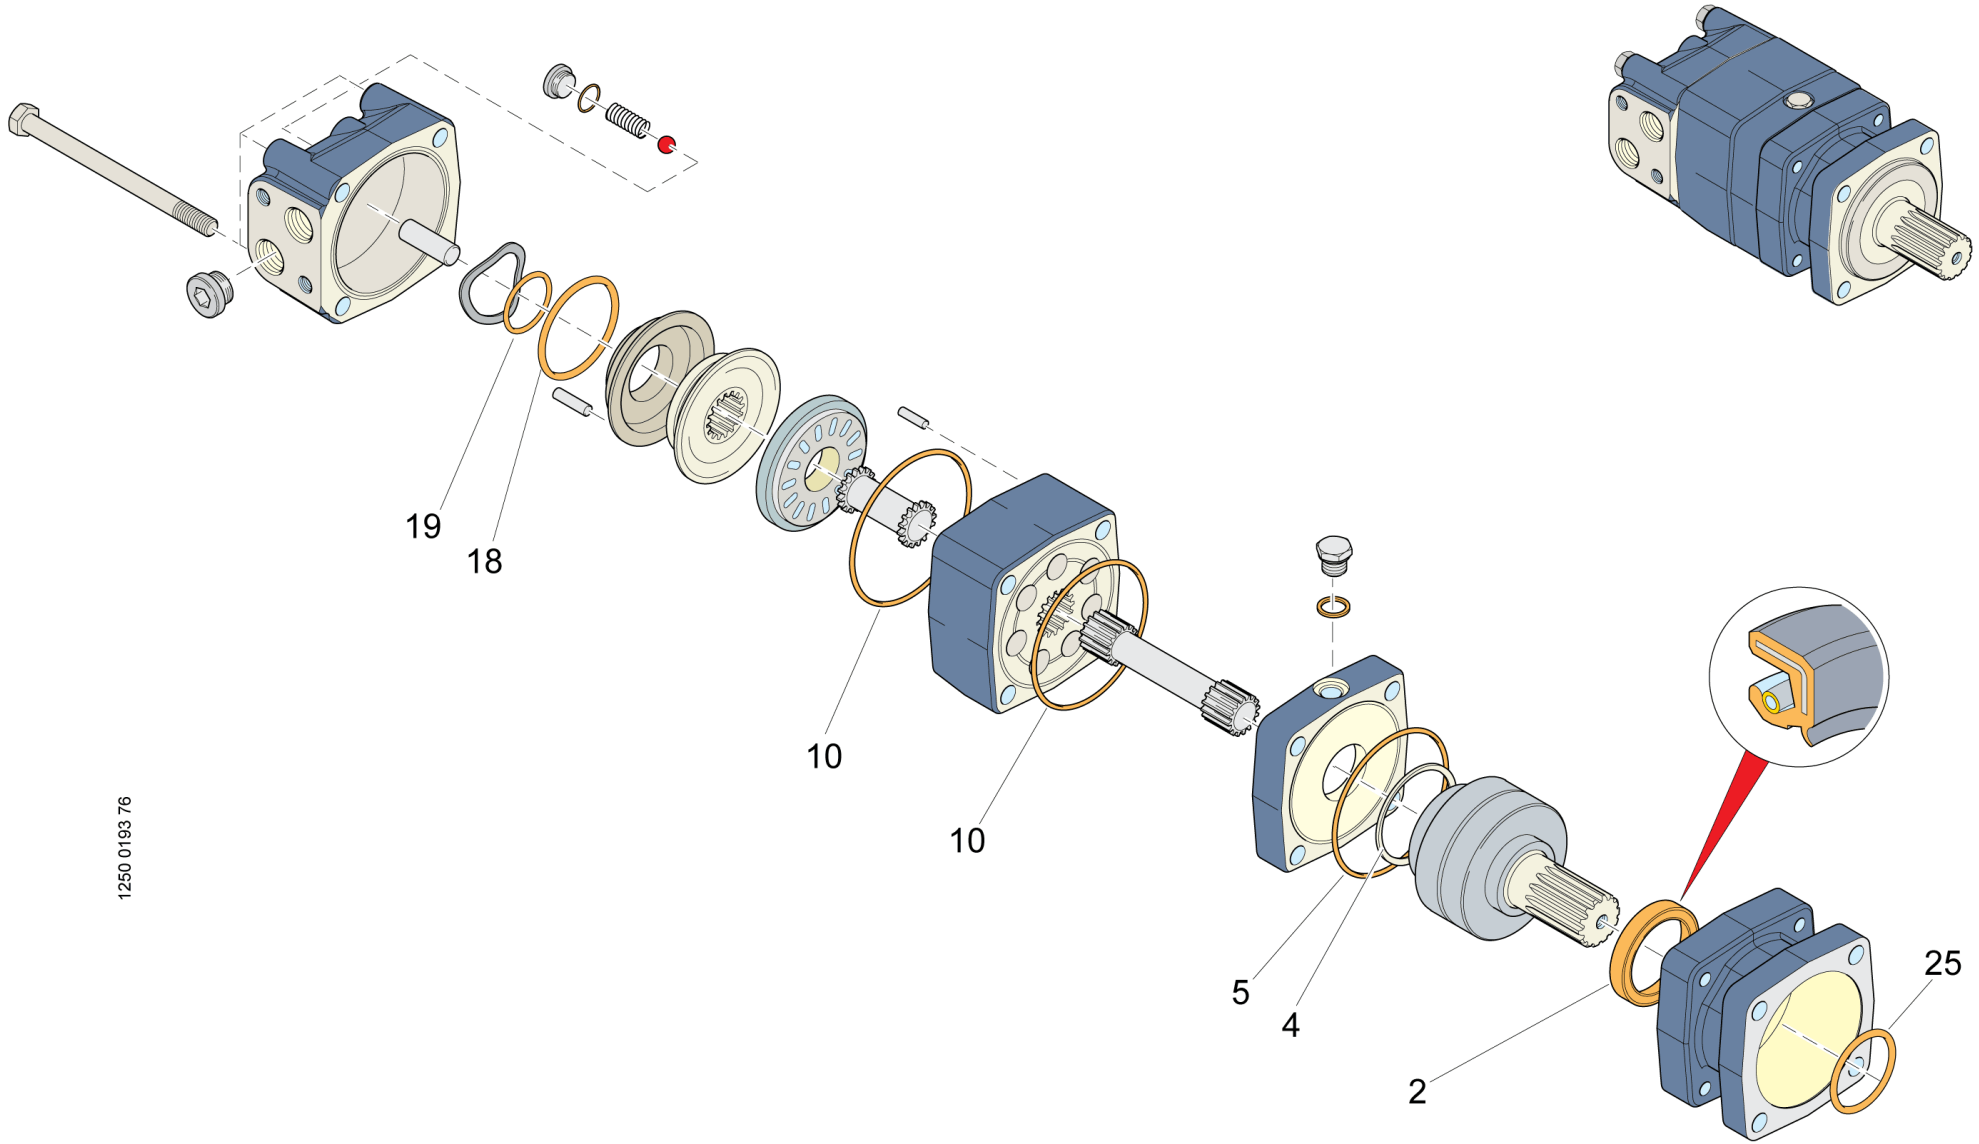

B0040501

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 3473 90	1	SEAL KIT	TÄTNINGSSATS		INCL. POS 2,4,5,10,18,19,25

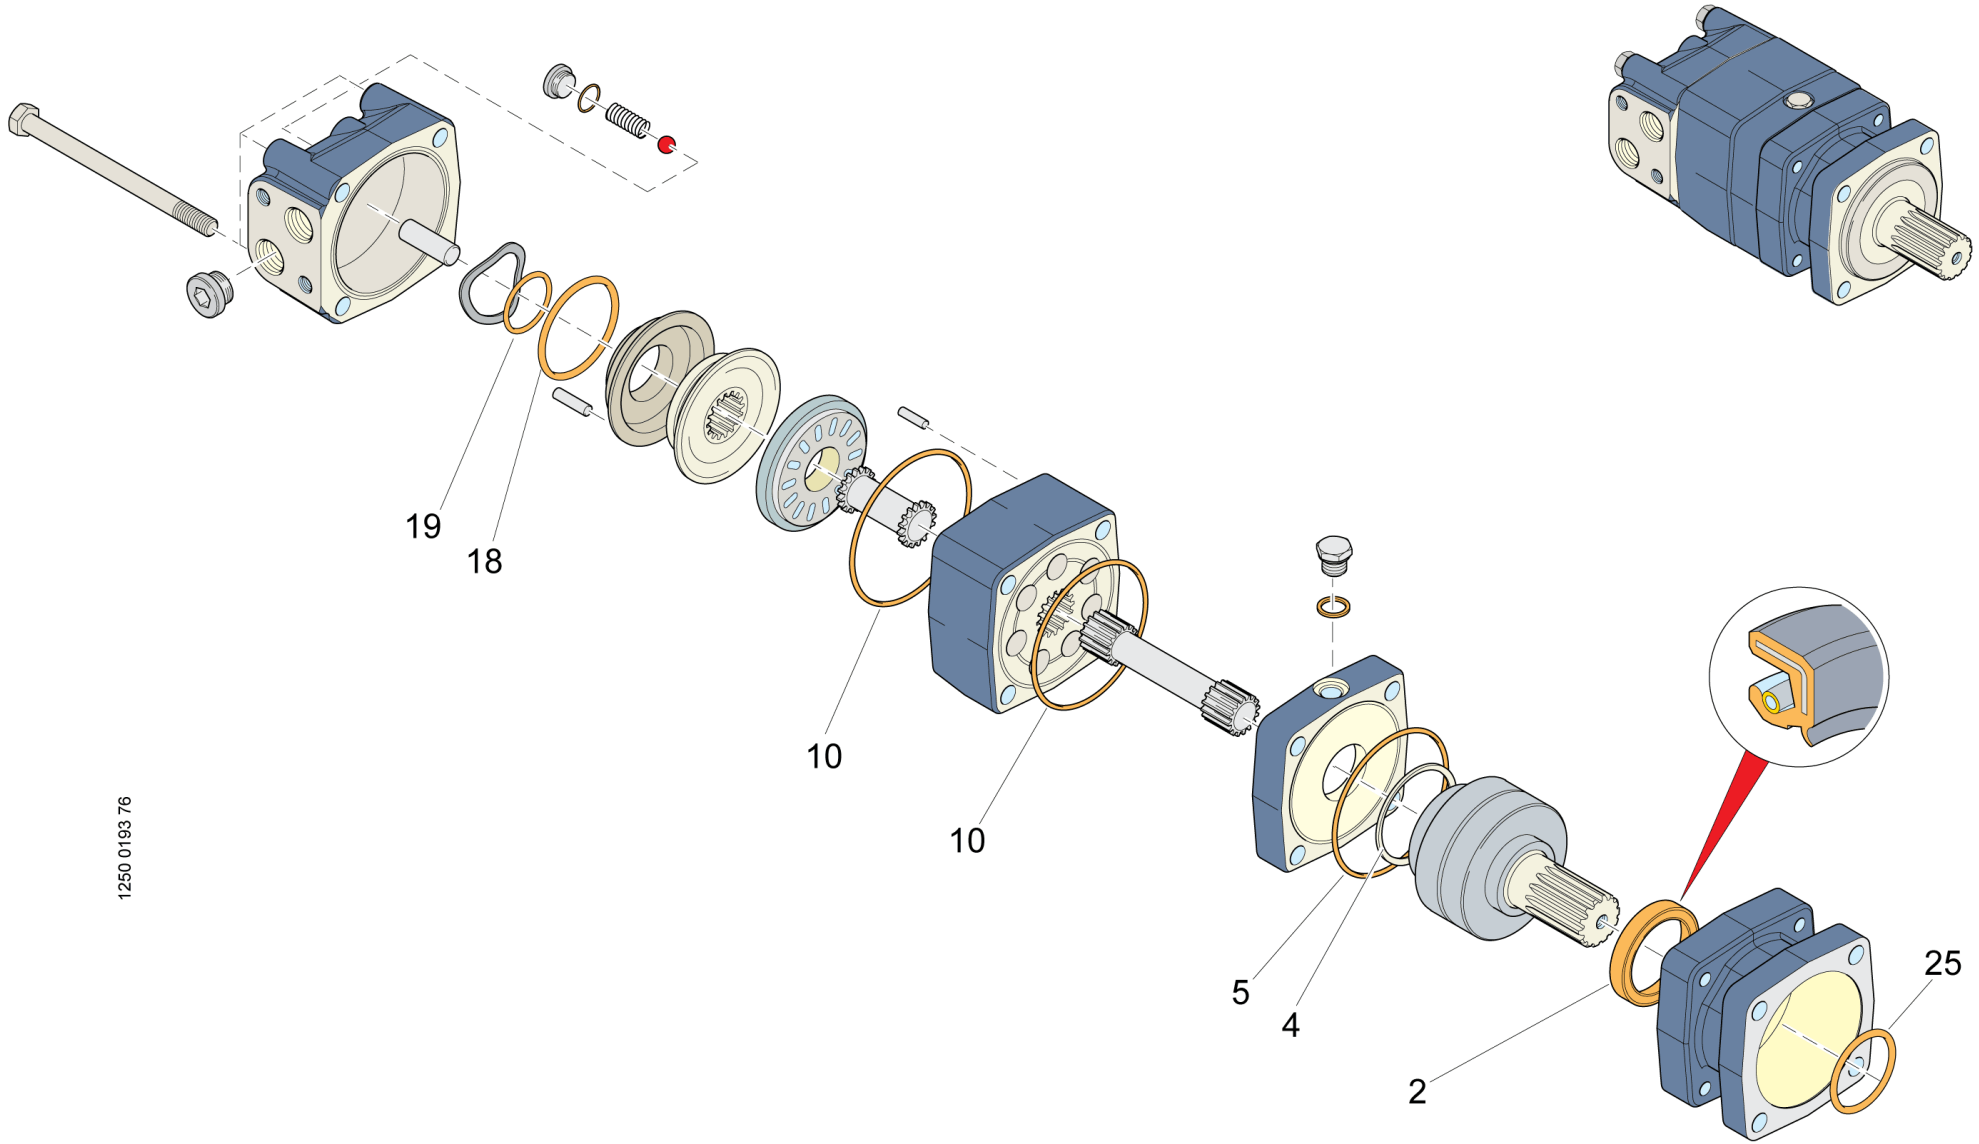

B0040501

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 3473 90	1	SEAL KIT	TÄTNINGSSATS		POS. 2,5,10,18,19,25


ORIGINALDELAR • GENUINE PARTS • PIEZAS ORIGINALES •
Atlas Copco

NIPPLE SET / NIPPELSATS


3115 1603 91

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3177 3046 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 3/4
2	3176 6565 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
3	3115 1459 00	1	NIPPLE	NIPPEL		
4	3176 6515 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
5	9900 0004 00	1	PLASTIC BAG	PLASTPÅSE		


ORIGINALDELAR • GENUINE PARTS • PIEZAS ORIGINALES •
Atlas Copco

B0040518

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
20	3115 2163 00	1	MANDREL	DORN		FOR ASSY OF ITEM 67
30	3115 2724 80	1	DISASSEMB.TOOLS	DEMONT.VERKTYG		FOR THE DRIVER
40	3115 5255 00	1	DISASSEMB.TOOLS	DEMONT.VERKTYG		
50	0371 1100 02	1	LIFTING EYE	LYFTÖGLA		SS 1899 - M 12
100	3115 3223 00	1	REG. PLUG	REGLERPROPP		
110	3128 3211 13	1	HOSE ASSEMBLY	SLANGLEDNING		
200	3115 2887 80	1	CONNECT. PLATE	ANSLUTN.PLATTA	Page 567	OMS
211	3115 5044 10	1	FLUSHING HEAD	SPOLHUVUD		
212	3115 5045 11	1	GUIDE	STYRNING		
221	3115 5044 20	1	FLUSHING HEAD	SPOLHUVUD		
222	3115 5045 21	1	GUIDE	STYRNING		
250	3115 9150 99	1	SEAL KIT	TÄTNINGSSATS	Page 569	COP 1838HD
251	3115 9238 91	1	OVERHAUL KIT	RENOVERINGSSATS	Page 573	400 IMPACT HOURS
252	3115 9238 92	1	OVERHAUL KIT	RENOVERINGSSATS	Page 577	800 IMPACT HOURS
690	3115 5042 90	1	CONVERSION KIT	OMBYGGNADSSATS	Page 579	COP 1838ME TO COP 1838HD
690	3115 5042 93	1	CONVERSION KIT	OMBYGGNADSSATS	Page 583	800H REPAIR KIT. TO BE USED TOGETHER WITH CONV.KIT 3115 5042 90

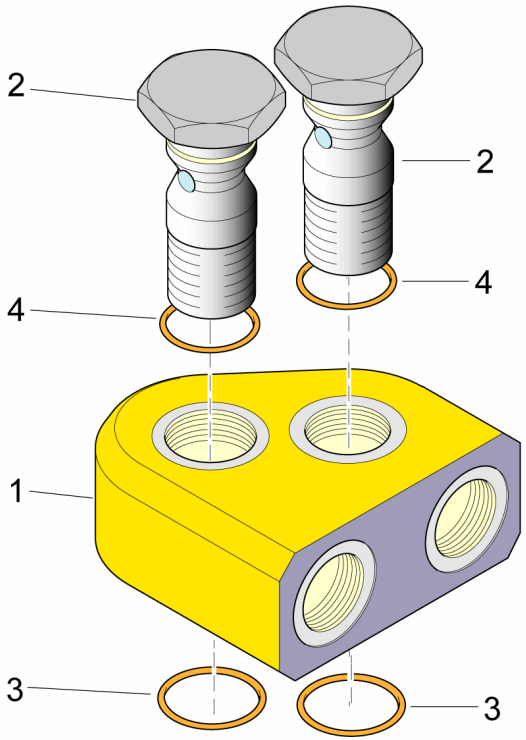

1250 0160 66

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	CONNECT. PLATE	ANSLUTN.PLATTA		
2	3115 2888 00	2	PRESSURE SCREW	TRYCKSKRUV		
3	0663 2100 62	2	O-RING	O-RING		24,2 X 3 90 SHORE
4	0663 2109 36	2	O-RING	O-RING		20 X 1,5 90 SHORE


ORIGINALDELAR • GENUINE PARTS • PIEZAS ORIGINALES
Atlas Copco

B0040518

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 9153 90	1	O-RING SET	O-RINGSSATS	Page 571	COP 1638-2560
10	0661 1034 00	2	SEAL WASHER	TÄTNINGSBRICKA		22,7 / 30 X 2 TREDO
16	3115 0970 00	2	SEAL KIT	TÄTNINGSSATS		
26	3115 1156 00	2	SEAL KIT	TÄTNINGSSATS		
37	3115 1697 00	2	SEAL WASHER	TÄTNINGSBRICKA		GM 1000
56	0661 1020 00	1	SEAL WASHER	TÄTNINGSBRICKA		13,7 / 20,6 X 2,1 - FZ ST TREDO 1/4
83	3115 5146 01	1	SEAL RING	TÄTNINGSRING		
85	3115 1880 90	1	SEAL KIT	TÄTNINGSSATS		FOR DAMPING PISTON
104	0686 4201 03	1	PLUG	PROPP		
105	0653 9038 00	1	GASKET	PACKNING		10 / 13,5 X 1 -11 4010 14
106	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
107	0666 7188 01	1	RADIAL LIP SEAL	RADIALTÄTNING		80 / 100 X 7
128	0667 1206 00	1	SEAL	TÄTNING		28 / 44 X 8 90 NBR/108
154	0666 7190 01	1	RADIAL LIP SEAL	RADIALTÄTNING		SIMRIT 90 / 110 X 7
175	3115 2333 00	2	CUP SEAL	U-MANSCHETT		
176	3115 5190 00	1	CUP SEAL	U-MANSCHETT		
178	3115 3024 00	1	WIPER	AVSTRYKARE		
190	3115 3445 00	1	SEAL RING	TÄTNINGSRING		
192	3115 3289 17	3	SEAL RING	TÄTNINGSRING		
193	0663 2143 00	1	O-RING	O-RING		79,2 X 5,7 70 SHORE
231	0661 1038 00	1	SEAL WASHER	TÄTNINGSBRICKA		27 / 35 X 2,5 FZ ST.
231	0663 2109 37	1	O-RING	O-RING		25 X 2 90 SHORE
231	0663 2128 00	1	O-RING	O-RING		26,2 X 3 70 SHORE
231	0663 2129 01	1	O-RING	O-RING		29,2 X 3 90 SHORE
231	9125 6191 00	1	O-RING	O-RING		14,1 X 1,6 90 SHORE
247	3115 0327 00	1	GASKET	PACKNING		


ORIGINALDELAR • GENUINE PARTS • PIEZAS ORIGINALES •
Atlas Copco

B0040518

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	0663 2100 62	2	O-RING	O-RING		24,2 X 3 90 SHORE
	0663 2104 94	1	O-RING	O-RING		99,5 X 3 90 SHORE
	0663 2105 96	2	O-RING	O-RING		89,5 X 3 90 SHORE
	0663 2109 37	1	O-RING	O-RING		25 X 2 90 SHORE
	0663 2110 00	2	O-RING	O-RING		10,3 X 2,4 70 SHORE
	0663 2115 00	1	O-RING	O-RING		8,3 X 2,4 70 SHORE
	0663 2120 00	2	O-RING	O-RING		13,3 X 2,4 70 SHORE
	0663 2128 00	1	O-RING	O-RING		26,2 X 3 70 SHORE
	0663 2129 01	2	O-RING	O-RING		29,2 X 3 90 SHORE
	0663 2133 01	3	O-RING	O-RING		39,2 X 3 90 SHORE
	0663 2134 00	1	O-RING	O-RING		42,2 X 3 70 SHORE
	0663 2143 00	1	O-RING	O-RING		79,2 X 5,7 70 SHORE
	0663 2144 00	1	O-RING	O-RING		84,1 X 5,7 70 SHORE
	0663 2145 01	4	O-RING	O-RING		89,1 X 5,7 90 SHORE
	0663 6121 00	2	O-RING	O-RING		14,1 X 1,6 70 SHORE
	0663 6134 01	2	O-RING	O-RING		49,5 X 3 90 SHORE
	0663 6135 00	1	O-RING	O-RING		54,5 X 3 70 SHORE
	0663 6135 01	2	O-RING	O-RING		54,5 X 3 90 SHORE
	0663 6136 00	1	O-RING	O-RING		59,5 X 3 70 SHORE
	0663 6138 00	1	O-RING	O-RING		69,5 X 3 70 SHORE
	0663 6143 00	2	O-RING	O-RING		94,5 X 3 70 SHORE
	0663 6144 00	1	O-RING	O-RING		99,5 X 3 70 SHORE
	0663 6151 00	2	O-RING	O-RING		134,5 X 3 70 SHORE
	0663 9056 00	3	O-RING	O-RING		14 X 1,78 70 SHORE
	0663 9104 01	2	O-RING	O-RING		23,47X 2,62 90 SHORE
	0663 9158 00	1	O-RING	O-RING		56,7 X 3 70 SHORE
	3115 2988 00	2	SEAL RING	TÄTNINGSRING		
	3115 3245 00	5	SEAL RING	TÄTNINGSRING		
	9125 6191 00	1	O-RING	O-RING		14,1 X 1,6 90 SHORE
	9900 0003 00	1	PLASTIC BAG	PLASTPÅSE		


ORIGINALDELAR • GENUINE PARTS • PIEZAS ORIGINALES
Atlas Copco

B0040518

OVERHAUL KIT / RENOVERINGSSATS 3115 9238 91 400 IMPACT HOURS

(Sheet 1 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 9150 99	1	SEAL KIT	TÄTNINGSSATS	Page 569	COP 1838HD
	9853 1189 01	1	OVERH. INSTRUC.	REP.INSTRUKTION		
	9853 6667 20	1	SPARE PART.LIST	RESERVDELSLISTA		
34	0147 1438 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 14 X 30 - 8.8 FZB
68	0335 3500 10	1	LOCK RING	LÅSRING		80 X 3,2 DIN 7993 B
80	0211 1960 84	2	SCREW	SKRUV		MC6S M 12 X 35 -12.9
94	0147 1481 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 60 - 8.8 FZB
108	0335 2169 00	1	CIRCLIP	SPÅRRING		SGH 100 X 3 DIN 472
121	0509 0221 00	1	ROLLER BEARING	RULLAGER		32016
122	0509 0223 00	1	ROLLER BEARING	RULLAGER		90 / 140 X 32
124	0516 1504 01	1	NEEDLE BEARING	NÅLLAGER		22 / 34 X 16
126	0516 1538 00	1	NEEDLE BEARING	NÅLLAGER		28 / 45 X 17
133	3115 1457 00	1	SIDE BOLT	SIDOBULT		
137	3115 0297 01	3	SHIM	SHIMS		0,10 MM
138	3115 0297 02	3	SHIM	SHIMS		0,15 MM
139	3115 0297 03	1	SHIM	SHIMS		0,5 MM
149	3115 3613 00	4	STUD	PINNBULT		
155	0335 2173 00	1	CIRCLIP	SPÅRRING		SGH 110 X 4 DIN 472
161	3115 5040 00	2	SIDE BOLT	SIDOBULT		
188	0147 1479 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
189	3315 0195 10	2	LOCK WASHER	LÅSBRICKA		17/25,4 X 3,7 HRC50 FZB
211	3115 0262 00	2	VALVE	VENTIL		COMPLETE INCL. POS 621,622
211	3115 1822 01	2	DIAPHRAGM	MEMBRAN		
211	3115 2702 10	4	SCREW	SKRUV		
211	3115 2714 90	1	LABEL SET	DEKALSATS		
221	3115 2715 90	1	LABEL SET	DEKALSATS		
231	3115 1926 02	1	DIAPHRAGM	MEMBRAN		
231	3115 2617 10	1	PLUG	PROPP		
246	3115 3548 00	4	NUT	MUTTER		
249	0335 2130 00	1	CIRCLIP	SPÅRRING		SGH 28 X 1,2 DIN 472
251	3115 0286 00	6	DOME NUT	KUPOLMUTTER		
252	3115 0287 00	6	WASHER	BRICKA		

OVERHAUL KIT / RENOVERINGSSATS 3115 9238 91

(Sheet 2 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
291	3115 3164 00	1	LABEL	DEKAL		ATLAS COPCO
292	3115 3308 00	1	LABEL	DEKAL		
1000	0018 4635 75	1	PLYWOOD BOX	PLYWOODLÅDA		750 280 195 KITTLÅDA
1001	0690 1132 00	1	PLATE	SKYLT		320 X 160 SVART TEXT


ORIGINALDELAR • GENUINE PARTS • PIEZAS ORIGINALES •
Atlas Copco


B0040518

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3115 9238 91	1	OVERHAUL KIT	RENOVERINGSSATS	Page 573	400 IMPACT HOURS
19	3115 5050 01	1	PISTON GUIDE	KOLVSTYRNING		
21	3115 3635 01	1	PISTON	KOLV		
29	3115 1680 00	1	PISTON GUIDE	KOLVSTYRNING		
67	3115 3744 00	1	BUSHING	BUSSNING		
86	3115 2971 00	1	DAMPING PISTON	DÄMPKOLV		
118	3115 1881 00	1	BUSHING	BUSSNING		
131	3115 1582 00	1	DRIVER	MEDBRINGARE		
132	3115 2968 00	1	ROT.CH.BUSHING	BORRBUSSNING		
177	3115 5045 01	1	GUIDE	STYRNING		D=38
185	3115 2122 00	1	STOP RING	STOPPRING		


ORIGINALDELAR • GENUINE PARTS • PIEZAS ORIGINALES
Atlas Copco

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9853 1189 01	1	OVERH. INSTRUC.	REP.INSTRUKTION		
	9853 6667 20	1	SPARE PART.LIST	RESERVDELSLISTA		
19	3115 5050 01	1	PISTON GUIDE	KOLVSTYRNING		
21	3115 3635 01	1	PISTON	KOLV		
83	3115 5146 01	1	SEAL RING	TÄTNINGSRING		
102	3115 5035 81	1	GEAR HOUSING	VÄXELHUS	Page 545	COMPLETE INCL ITEM 103-111
151	–	1	COVER GROUP	LOCKGRUPP	Page 581	
171	3115 5042 80	1	FRONT PART COMP	FRONTDEL KOMPL.	Page 547	
251	3115 0286 00	6	DOME NUT	KUPOLMUTTER		
252	3115 0287 00	6	WASHER	BRICKA		

COVER GROUP / LOCKGRUPP

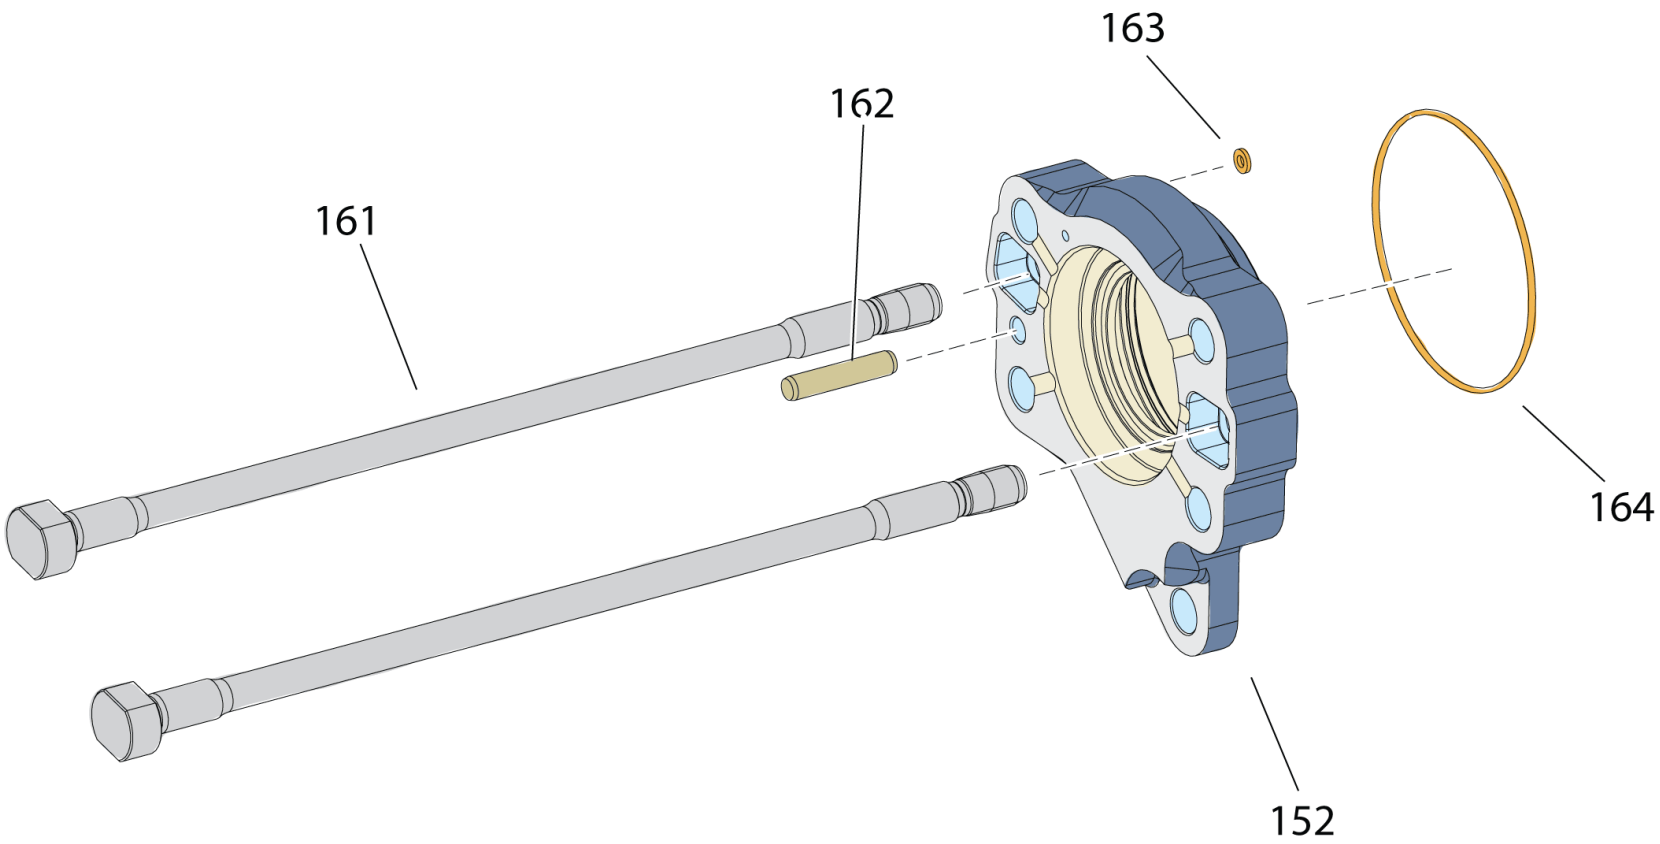

1250 0255 30
B00497 17

B0049717

COVER GROUP / LOCKGRUPP

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
152	3115 5036 80	1	COVER COMPL.	LOCK KOMPL.		
161	3115 5040 00	2	SIDE BOLT	SIDOBULT		
162	0102 0473 00	1	PIN	PINNE		CP 12M6 X 60 - 11 1922 04
163	3115 3245 00	1	SEAL RING	TÄTNINGSRING		
164	0663 6151 00	1	O-RING	O-RING		134,5 X 3 70 SHORE

CONVERSION KIT / OMBYGGNADSSATS **3115 5042 93** 800H REPAIR KIT. TO BE USED TOGETHER WITH CONV.KIT 3115 5042 90



B0040518


CONVERSION KIT / OMBYGGNADSSATS **3115 5042 93** 800H REPAIR KIT. TO BE USED TOGETHER WITH CONV.KIT 3115 5042 90

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
29	3115 1680 00	1	PISTON GUIDE	KOLVSTYRNING		
67	3115 3744 00	1	BUSHING	BUSSNING		
86	3115 2971 00	1	DAMPING PISTON	DÄMPKOLV		
118	3115 1881 00	1	BUSHING	BUSSNING		
131	3115 1582 00	1	DRIVER	MEDBRINGARE		
132	3115 2968 00	1	ROT.CH.BUSHING	BORRBUSSNING		
	3115 9150 99	1	SEAL KIT	TÄTNINGSSATS	Page 569	COP 1838HD
34	0147 1438 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 14 X 30 - 8.8 FZB
68	0335 3500 10	1	LOCK RING	LÅSRING		80 X 3,2 DIN 7993 B
80	0211 1960 84	2	SCREW	SKRUV		MC6S M 12 X 35 -12.9
94	0147 1481 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 60 - 8.8 FZB
121	0509 0221 00	1	ROLLER BEARING	RULLAGER		32016
122	0509 0223 00	1	ROLLER BEARING	RULLAGER		90 / 140 X 32
124	0516 1504 01	1	NEEDLE BEARING	NÅLLAGER		22 / 34 X 16
126	0516 1538 00	1	NEEDLE BEARING	NÅLLAGER		28 / 45 X 17
133	3115 1457 00	1	SIDE BOLT	SIDOBULT		
137	3115 0297 01	3	SHIM	SHIMS		0,10 MM
138	3115 0297 02	3	SHIM	SHIMS		0,15 MM
139	3115 0297 03	1	SHIM	SHIMS		0,5 MM
211	3115 0262 00	2	VALVE	VENTIL		COMPLETE INCL. POS 621,622
211	3115 1822 01	2	DIAPHRAGM	MEMBRAN		
211	3115 2702 10	4	SCREW	SKRUV		
211	3115 2714 90	1	LABEL SET	DEKALSATS		
221	3115 2715 90	1	LABEL SET	DEKALSATS		
231	3115 1926 02	1	DIAPHRAGM	MEMBRAN		
231	3115 2617 10	1	PLUG	PROPP		
246	3115 3548 00	4	NUT	MUTTER		
249	0335 2130 00	1	CIRCLIP	SPÅRRING		SGH 28 X 1,2 DIN 472
291	3115 3164 00	1	LABEL	DEKAL		ATLAS COPCO
292	3115 3308 00	1	LABEL	DEKAL		
1000	0018 4635 75	1	PLYWOOD BOX	PLYWOODLÅDA		750 280 195 KITTLÅDA
1001	0690 1132 00	1	PLATE	SKYLT		320 X 160 SVART TEXT

FEED / MATARE
LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	FEED	MATARE	589	
3128 1036 81	– FEED	– MATARE	591	
3128 1036 82	– – BASIC PART SET	– – GRUNDDETALJSATS	593	
–	– – – DETAIL SET	– – – DETALJSATS	595	
3128 0784 30	– – – – PULLEY WHEEL	– – – – LINHJUL	597	
3128 3140 12	– – – – HOLDER SET	– – – – HÅLLARSATS	599	
3128 3140 13	– – – – HOLDER SET	– – – – HÅLLARSATS	601	
–	– – – DETAIL SET	– – – DETALJSATS	603	
–	– – – DETAIL SET	– – – DETALJSATS	607	BMHT 2000 AC
3128 2801 30	– – – – CYLINDER SET	– – – – CYLINDERSATS	611	LOWER
3128 3182 08	– – – – – HOSE SET	– – – – – SLANGSATS	613	F21, F22
9126 2322 00	– – – – – HYDR. CYLINDER	– – – – – HYDRAULCYLINDER	615	50/32 2200 MT S S BMHT 1000/2000
3128 3061 83	– – – – LIMIT SWITCH	– – – – GRÄNSLÄG.VENTIL	617	
3128 3061 63	– – – – HOLDER SET	– – – – HÅLLARSATS	619	
3128 3061 64	– – – – HOLDER SET	– – – – HÅLLARSATS	621	
–	– – – DETAIL SET	– – – DETALJSATS	623	
3128 3061 75	– – ROCK DRILL KIT	– – BORRMASKINSATS	625	COP 1238/1838
3128 0475 10	– – – HOSE DRUM	– – – SLANGTRUMMA	627	COMPL.WITH BUSHINGS
3128 3184 72	– – FEED BEAM	– – MATARBALK	629	
3128 3184 73	– – FEED BEAM	– – MATARBALK	631	
–	– – CYLINDER SET	– – CYLINDERSATS	633	
–	– – – HOSE SET	– – – SLANGSATS	635	F1, F2
3128 2594 01	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	637	
3128 1036 80	– FEED	– MATARE	639	
3128 1036 82	– – BASIC PART SET	– – GRUNDDETALJSATS	593	
–	– – – DETAIL SET	– – – DETALJSATS	595	


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
3128 0784 30	– – – – PULLEY WHEEL	– – – – LINHJUL	597	
3128 3140 12	– – – – HOLDER SET	– – – – HÅLLARSATS	599	
3128 3140 13	– – – – HOLDER SET	– – – – HÅLLARSATS	601	
–	– – – DETAIL SET	– – – DETALJSATS	603	
–	– – – DETAIL SET	– – – DETALJSATS	607	BMHT 2000 AC
3128 2801 30	– – – – CYLINDER SET	– – – – CYLINDERSATS	611	LOWER
3128 3182 08	– – – – – HOSE SET	– – – – – SLANGSATS	613	F21, F22
9126 2322 00	– – – – – HYDR. CYLINDER	– – – – – HYDRAULCYLINDER	615	50/32 2200 MT S S BMHT 1000/2000
3128 3061 83	– – – – LIMIT SWITCH	– – – – GRÄNSLÄG.VENTIL	617	
3128 3061 63	– – – – HOLDER SET	– – – – HÅLLARSATS	619	
3128 3061 64	– – – – HOLDER SET	– – – – HÅLLARSATS	621	
–	– – – DETAIL SET	– – – DETALJSATS	623	
3128 3061 75	– – ROCK DRILL KIT	– – BORRMASKINSATS	625	COP 1238/1838
3128 0475 10	– – – HOSE DRUM	– – – SLANGTRUMMA	627	COMPL.WITH BUSHINGS
3128 3184 72	– – FEED BEAM	– – MATARBALK	629	
3128 3184 73	– – FEED BEAM	– – MATARBALK	631	
–	– – CYLINDER SET	– – CYLINDERSATS	633	
–	– – – HOSE SET	– – – SLANGSATS	635	F1, F2
3128 2594 01	– – – HYDR. CYLINDER	– – – HYDRAULCYLINDER	637	
–	– HOSE SET	– SLANGSATS	641	
–	– HOSE SET	– SLANGSATS	641	

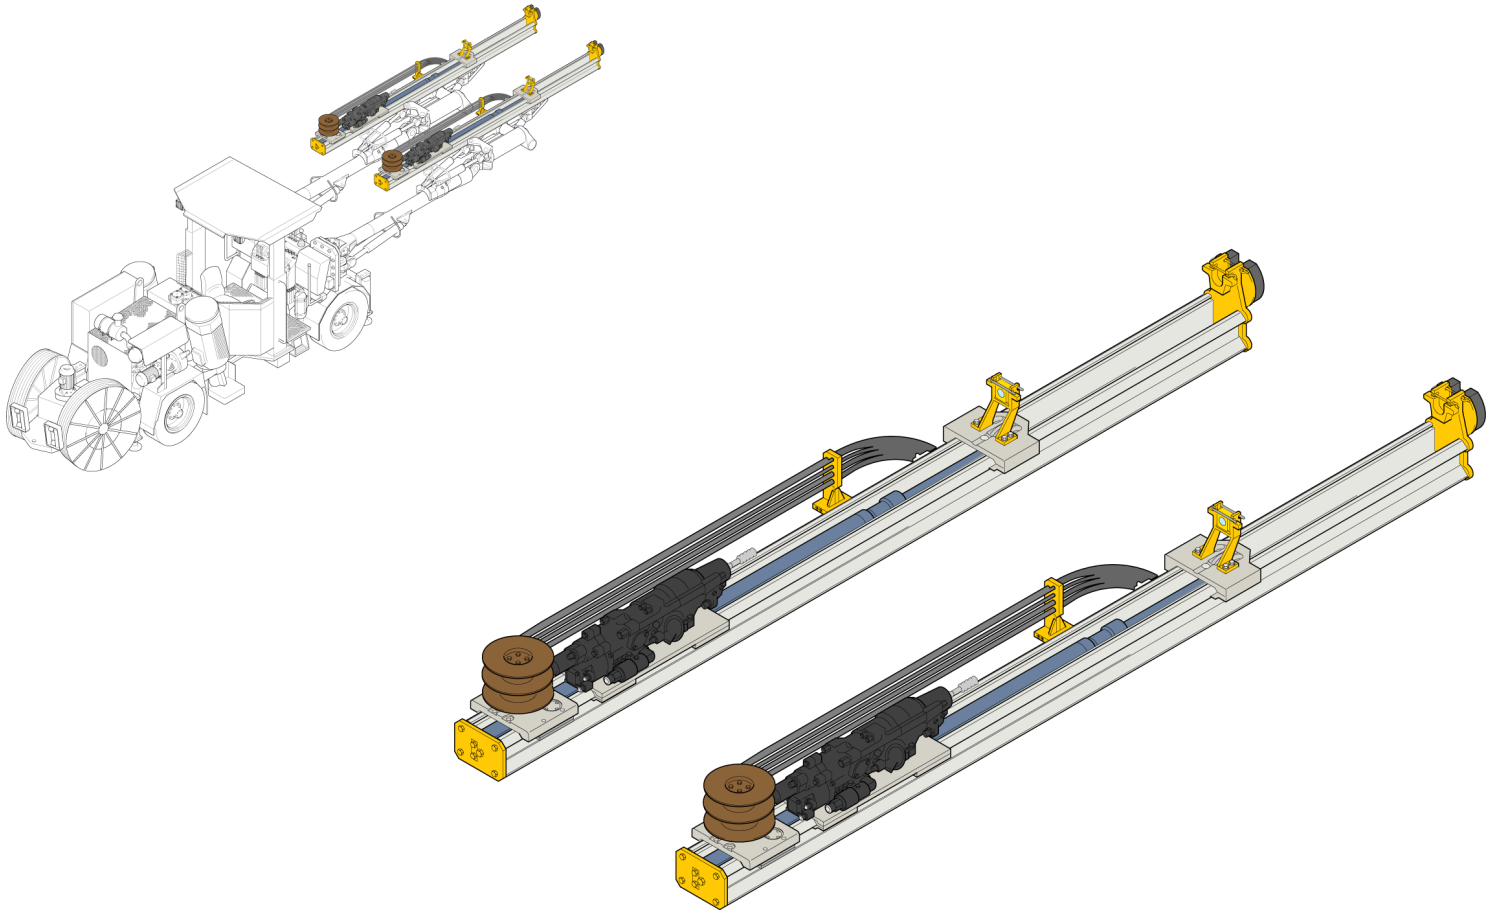

B0057488

FEED / MATARE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
51	3128 1036 81	1	FEED	MATARE	Page 591	
52	3128 1036 80	1	FEED	MATARE	Page 639	
71	–	1	HOSE SET	SLANGSATS	Page 641	
72	–	1	HOSE SET	SLANGSATS	Page 641	
81	3128 0940 50	1	GABLE PLATE	GAVELPLÅT		BMHT 2000-BUT 28
82	3128 0940 50	1	GABLE PLATE	GAVELPLÅT		BMHT 2000-BUT 28

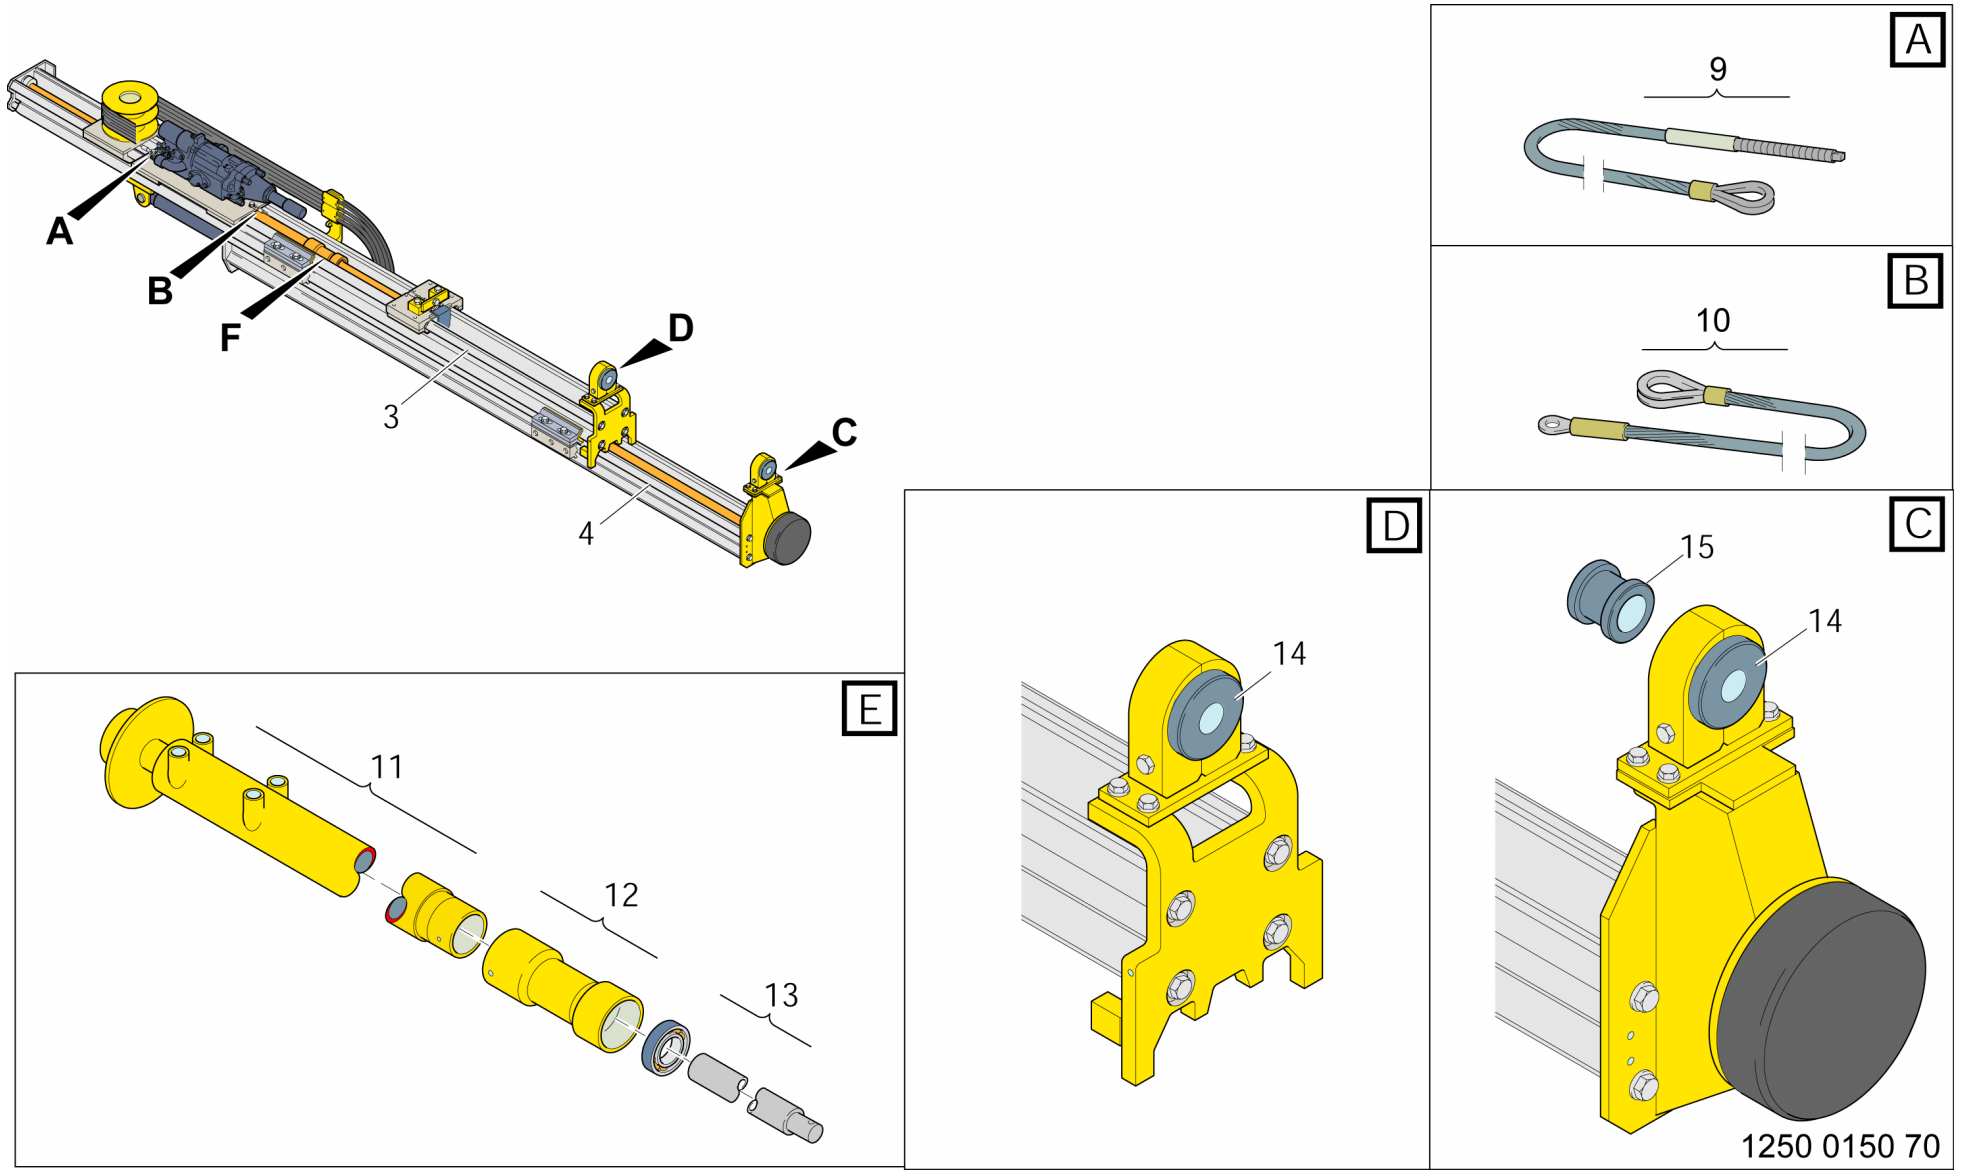

B0028929


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 1036 82	1	BASIC PART SET	GRUNDDETALJSATS	Page 593	
2	3128 3061 75	1	ROCK DRILL KIT	BORRMASKINSATS	Page 625	COP 1238/1838
3	3128 3184 72	1	FEED BEAM	MATARBALK	Page 629	
4	3128 3184 73	1	FEED BEAM	MATARBALK	Page 631	
9	3128 0551 01	1	RETURN ROPE	RETURLINA		
10	3128 0647 02	1	PULL ROPE	DRAGLINA		
11	–	1	CYLINDER SET	CYLINDERSATS	Page 633	
12	3128 0494 00	1	SPACER SLEEVE	DISTANSHYLSA		
13	3128 0781 96	1	SPACER	DISTANS		
14	3128 3136 18	2	BUSHING	BUSSNING		DRILL BUSHING(42MM INNER DIA)

X0000000

BASIC PART SET / GRUNDDETALJSATS 3128 1036 82

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	DETAIL SET	DETALJSATS	Page 595	
2	–	1	DETAIL SET	DETALJSATS	Page 603	
3	–	1	DETAIL SET	DETALJSATS	Page 607	BMHT 2000 AC
5	–	1	DETAIL SET	DETALJSATS	Page 623	


DETAIL SET / DETALJSATS

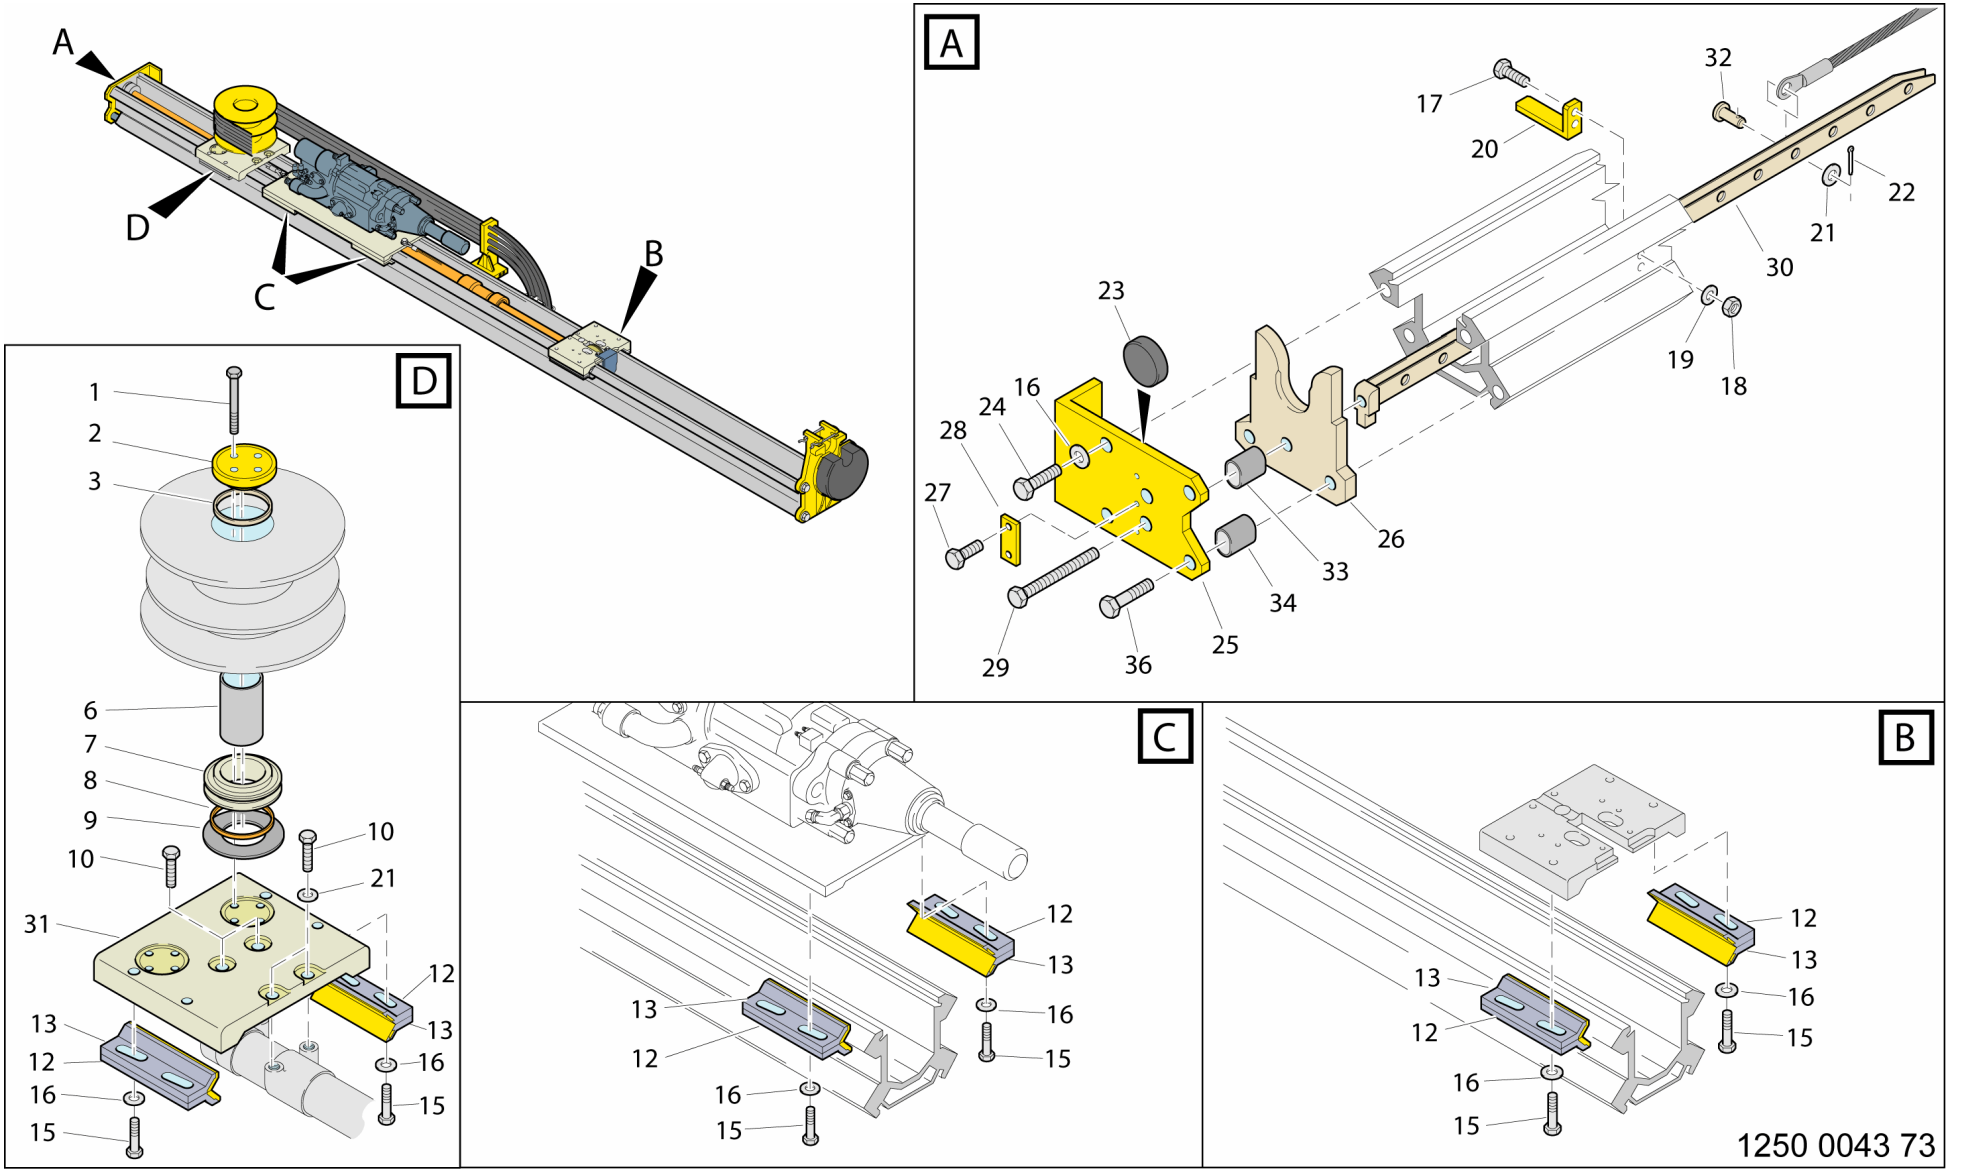

B0004107

DETAIL SET / DETALJSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0147 1500 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 220 - 8.8 FZB
2	3128 0497 00	1	COVER	LOCK		
3	0666 6718 00	1	RADIAL LIP SEAL	RADIALTÄTNING		SIMRIT 100 / 120 X 12
6	3128 0486 00	1	PIPE	RÖR		
7	3128 0784 30	1	PULLEY WHEEL	LINHJUL	Page 597	
8	0666 8007 04	1	AXIAL SEAL	AXIALTÄTNING		137 / 162 X 15
9	3128 0485 00	1	PLATE	PLÅT		
10	0147 1400 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
12	3128 3140 12	8	HOLDER SET	HÅLLARSATS	Page 599	
13	3128 3140 13	8	HOLDER SET	HÅLLARSATS	Page 601	
15	0147 1483 03	14	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 70 - 8.8 FZB
16	0301 2378 00	20	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
17	0147 1249 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 25 - 8.8 FZB
18	0291 1128 15	2	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
19	0301 2321 00	2	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
20	3128 3008 53	1	PLATE	PLÅT		
21	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
22	0111 1281 00	1	SPLIT PIN	SAXPINNE		3,2 X 25 SP 1325 - 00
23	3125 0639 00	1	BUFFER	BUFFERT		
24	0147 1485 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 80 - 8.8 FZB
25	3128 2561 39	1	BACK HEAD	BAKSTYCKE		
26	3128 0786 26	1	END PIECE	GAVEL		
27	0147 1359 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 16 - 8.8 FZB
28	3128 0476 00	1	WASHER	BRICKA		
29	0147 1958 29	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 320 - 8.8 FZB
30	3222 3097 49	1	ROPE TENSION	LINSPÄNNARE		
31	3128 0484 00	1	CRADLE PLATE	SLÄDPLÅT		
32	0113 2231 00	1	BOLT	BULT		HCB 12H11 X 35
33	3128 2561 37	1	SPACER	DISTANS		
34	3128 2561 36	2	SPACER	DISTANS		
35	0147 1494 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 140 - 8.8 FZB

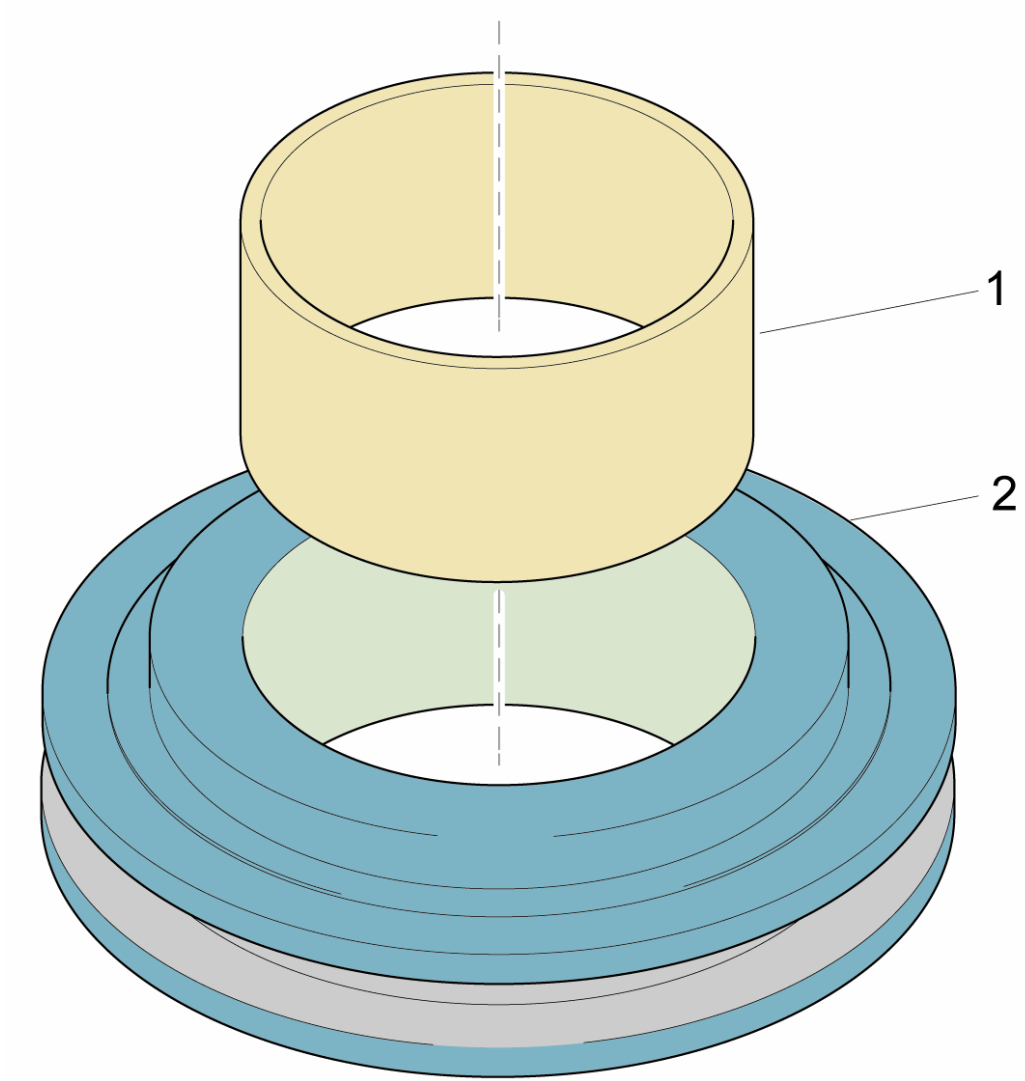


B0015095

PULLEY WHEEL / LINHJUL

3128 0784 30

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0500 4536 20	1	BUSHING	BUSSNING		100 / 105 X 50
2	–	1	PULLEY WHEEL	LINHJUL		

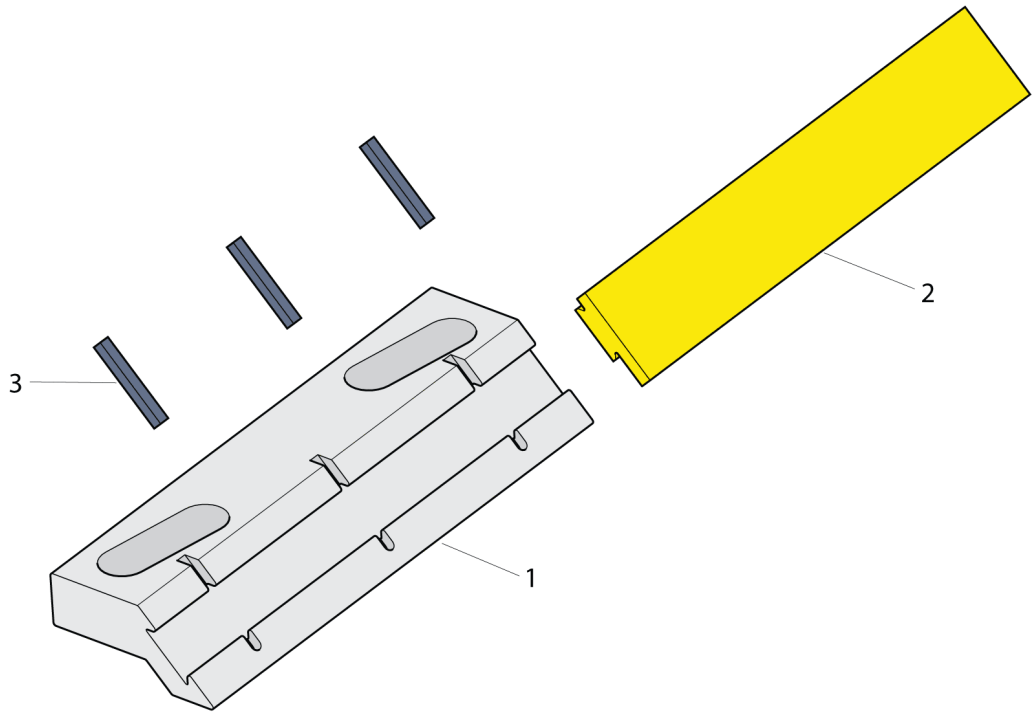


3128 3140 12 Ed01

B0045023

HOLDER SET / HÅLLARSATS

3128 3140 12

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 0785 48	1	HOLDER	HÅLLARE		
2	3128 3039 30	1	SLIDING PIECE	GLIDSTYCKE		
3	3128 0619 00	3	KEY	KIL		

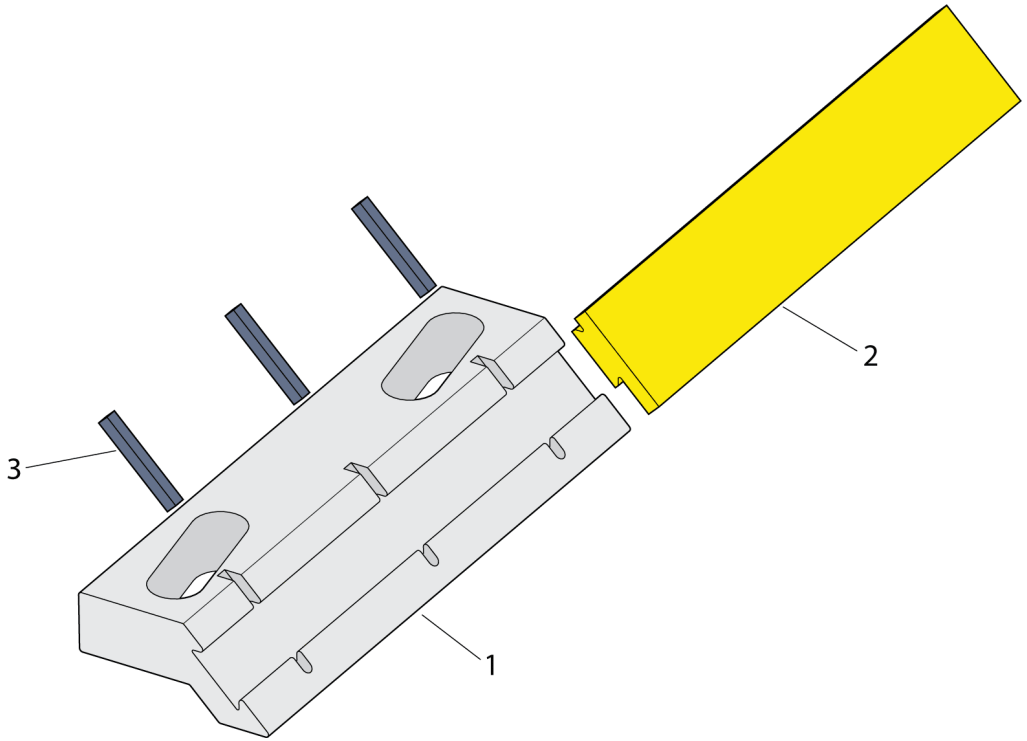

3128 3140 13 Ed01


B0045024

HOLDER SET / HÅLLARSATS

3128 3140 13

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 0785 49	1	HOLDER	HÅLLARE		
2	3128 3039 30	1	SLIDING PIECE	GLIDSTYCKE		
3	3128 0619 00	3	KEY	KIL		

DETAIL SET / DETALJSATS

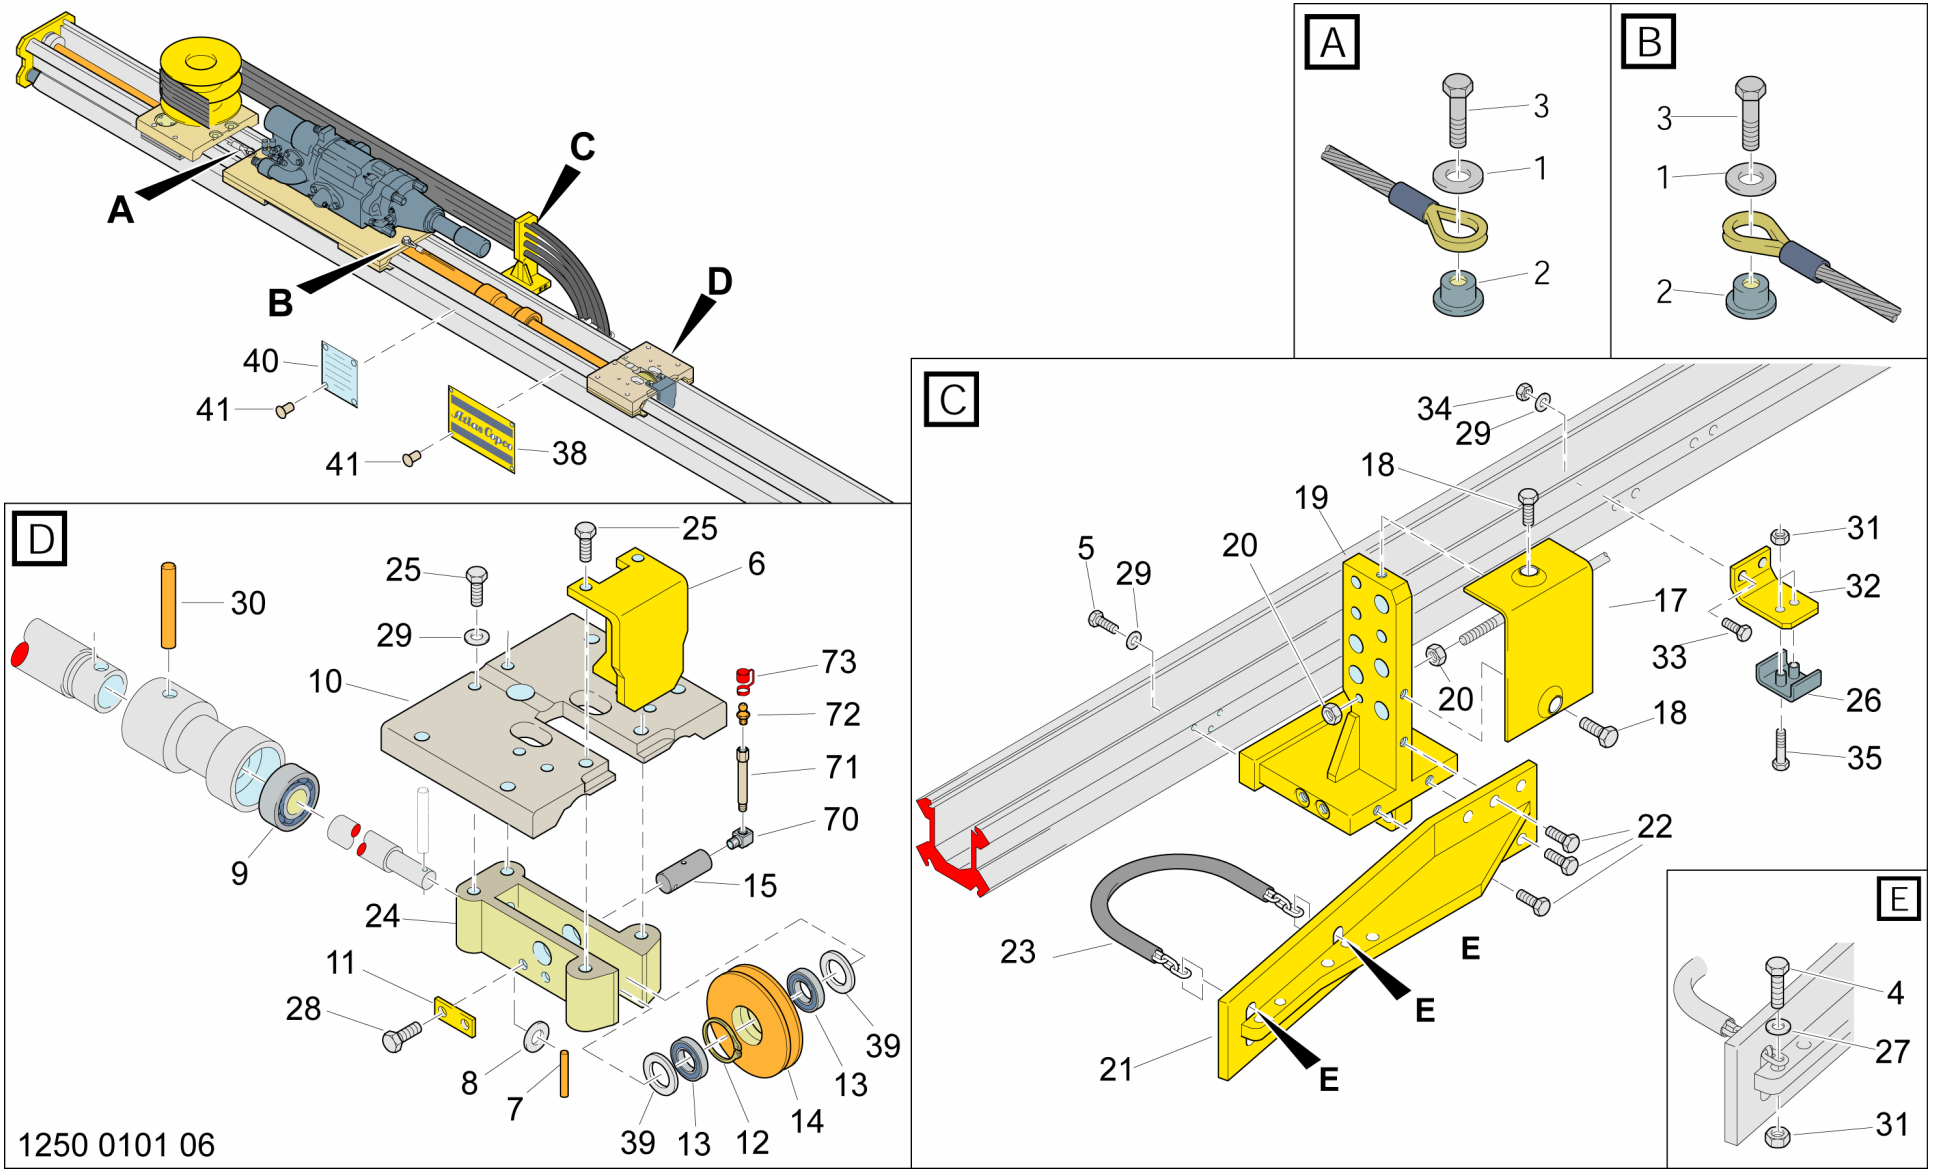

DETAIL SET / DETALJSATS

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 0785 36	2	WASHER	BRICKA		
2	3128 3051 49	2	ATTACHMENT	FÄSTE		
3	0147 1479 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 50 - 8.8 FZB
4	0147 1326 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 30 - 8.8 FZB
5	0147 1402 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
6	3128 0783 78	1	WIPER	AVSKRAPARE		
7	0108 3359 00	1	SPRING PIN	SPÄNNSTIFT		8 X 32 DIN 7343
8	0301 2394 00	1	PLAIN WASHER	RUNDBRICKA		21 / 37 X 3 - HB 200 FZB
9	0339 1000 20	1	CLAMPING UNIT	SPÄNNSATS		C 35 60 17 M 6 22 28 34 8
10	3128 0782 58	1	CRADLE PLATE	SLÄDPLÅT		
11	3128 0476 00	1	WASHER	BRICKA		
12	0335 2152 00	2	CIRCLIP	SPÅRRING		SGH 62 X 2 DIN 472
13	0502 1226 01	1	BALL BEARING	KULLAGER		35 / 62 X 14
14	3128 0781 90	1	PULLEY WHEEL	LINHJUL		
15	3128 0481 00	1	SHAFT	AXEL		
17	3128 3134 42	1	PROTECTION	SKYDD		
18	0147 1400 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
19	3128 3115 41	1	HOSE ATTACHMENT	SLANGFÄSTE		
20	0266 2114 00	2	NUT	MUTTER		M 16 - 8 FZB
21	3128 3079 58	1	HOSE GUIDE	SLANGFÖRARE		
22	0147 1401 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 30 - 8.8 FZB
23	3128 3079 77	1	HOSE HOLDER	SLANGHÅLLARE		
24	3128 0893 00	1	PROFILE	PROFIL		
25	0147 1408 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 65 - 8.8 FZB
26	3128 3055 75	1	CLAMP	ÖVERFALL		
27	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
28	0147 1359 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 16 - 8.8 FZB
29	0301 2358 00	10	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
30	0108 3322 00	1	SPRING PIN	SPÄNNSTIFT		6 X 16 DIN 7343
31	0291 1128 18	4	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
32	3128 0783 67	1	ATTACHMENT	FÄSTE		
33	0147 1403 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 40 - 8.8 FZB

DETAIL SET / DETALJSATS

(Sheet 2 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
34	0291 1128 22	2	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
35	0147 1330 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 50 - 8.8 FZB
38	3222 3168 52	2	SIGN	SKYLT		
39	3128 0482 00	2	WASHER	BRICKA		
40	3128 0782 73	1	DATA PLATE	DATASKYLT		
41	0129 3104 00	12	BLIND RIVET	BLINDNIT		2,4 X 7,4 TAP / D 48 BS
70	3222 3104 40	1	NIPPLE	NIPPEL		R 1/8-R 1/8 90 DEGREE
71	3222 3104 54	1	EXTENDER	FÖRLÄNGARE		
72	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
73	0686 9252 27	1	PROTECTION CAP	SKYDDSHUV		12 X 12 PELD / RED

DETAIL SET / DETALJSATS

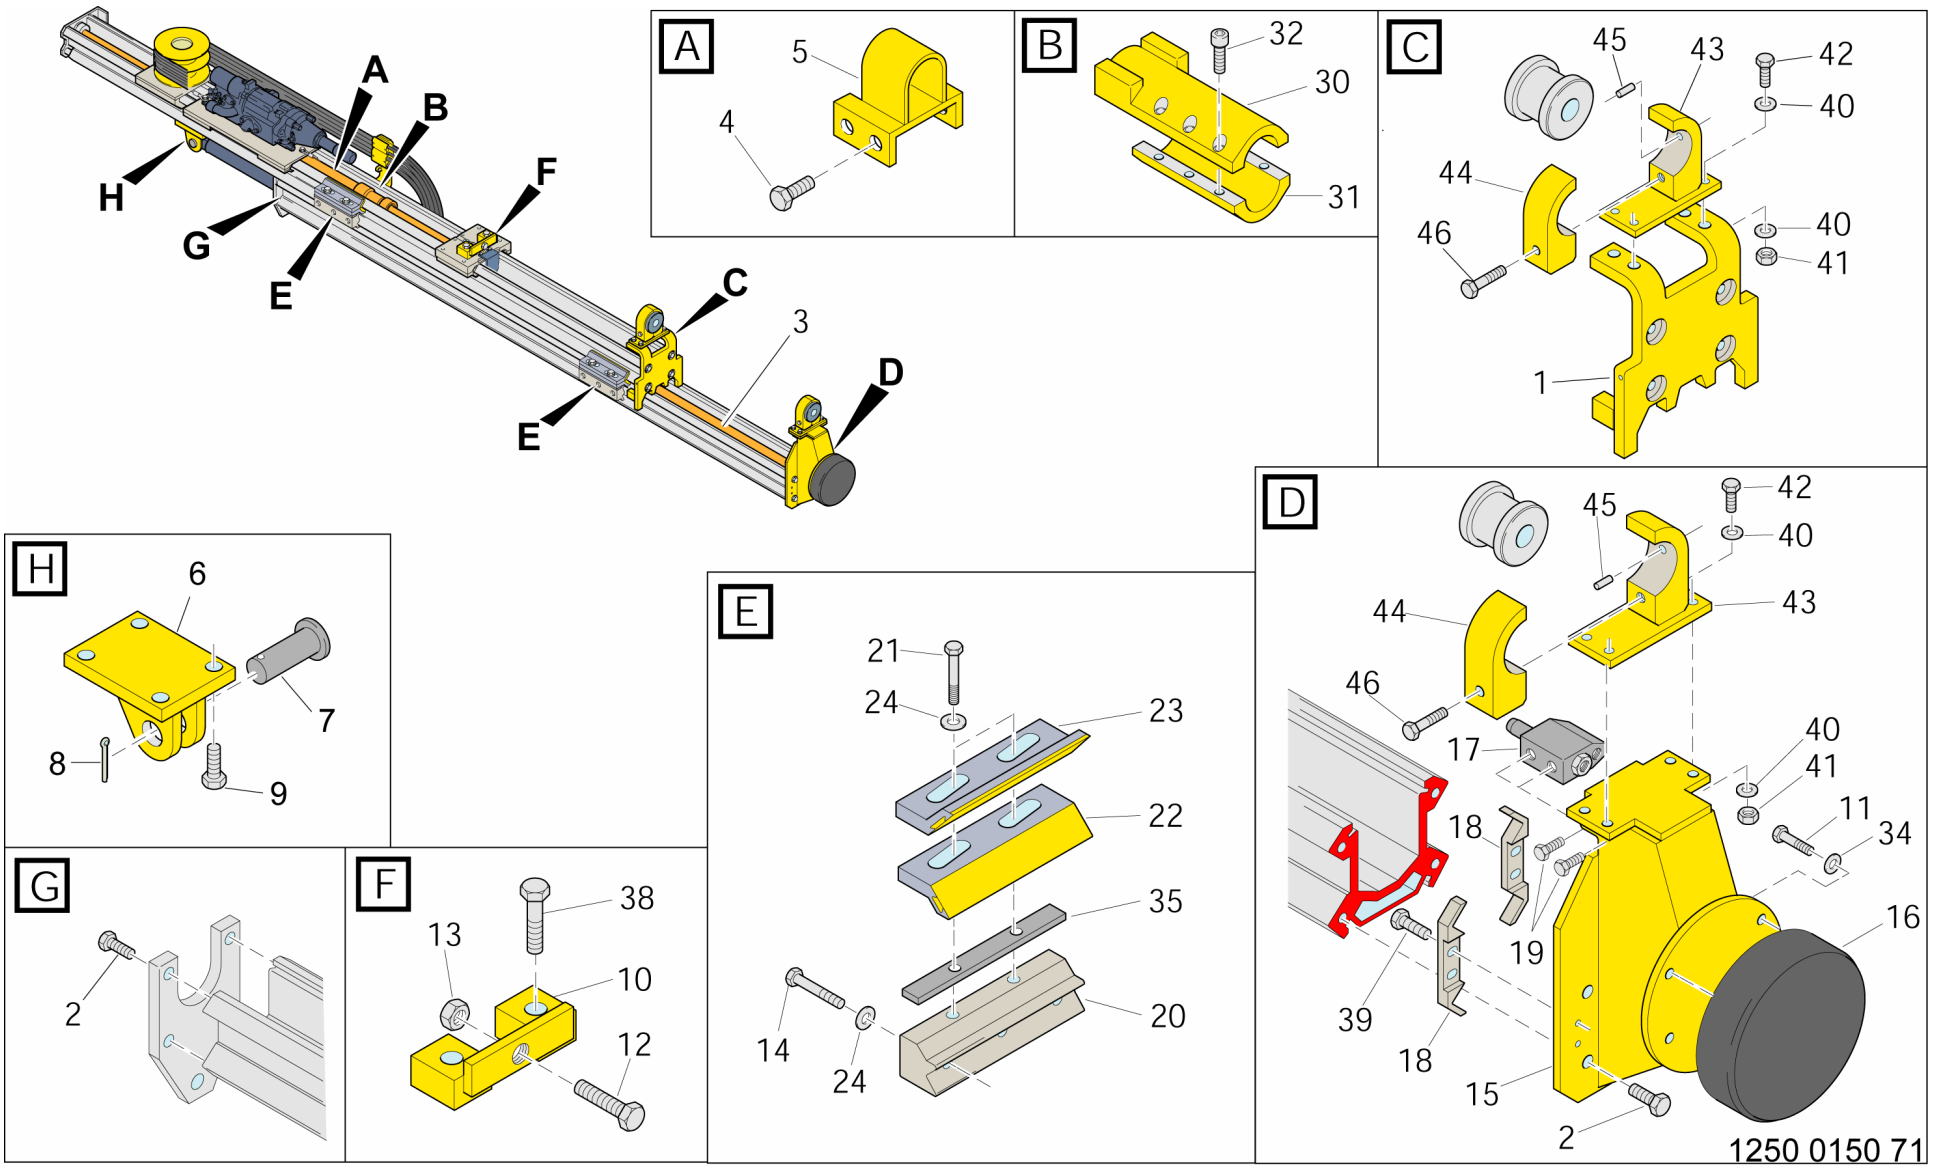
A
B
C
D
E
F
G
H
3
4
5
30
31
32
40
41
42
43
44
45
46
1
6
7
8
9
2
10
12
13
38
14
20
21
22
23
24
35
11
15
16
17
18
19
34
39
1250 0150 71

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3186 98	1	END PLATE	ÄNDPLÅT		
2	0147 1485 03	12	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 80 - 8.8 FZB
3	3128 2801 30	1	CYLINDER SET	CYLINDERSATS	Page 611	LOWER
4	0147 1362 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
5	3128 0768 00	1	CLAMP	KLAMMA		
6	3128 0783 60	1	ATTACHMENT	FÄSTE		
7	0113 2413 00	2	BOLT	BULT		HCB 25H11 X 65
8	0111 1377 00	2	SPLIT PIN	SAXPINNE		5 X 40 SP 1325 - 00
9	0147 1401 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 30 - 8.8 FZB
10	3128 3153 65	1	BRACKET	KONSOL		
11	0147 1400 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
12	0147 1402 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
13	0266 2112 00	1	NUT	MUTTER		M 12 - 8 FZB
14	0147 1487 03	12	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 90 - 8.8 FZB
15	3128 3160 02	1	DRILL STEEL SUP	BORRSTÖD		
16	3125 0634 00	1	DOWEL	DUBB		
17	3128 3061 83	1	LIMIT SWITCH	GRÄNSLÄG.VENTIL	Page 617	
18	3128 3160 08	2	ATTACHM. PLATE	FÄSTPLATTA		
19	0147 1362 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
20	3128 0940 37	4	HOLDER	HÅLLARE		
21	0147 1487 03	16	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 90 - 8.8 FZB
22	3128 3061 63	4	HOLDER SET	HÅLLARSATS	Page 619	
23	3128 3061 64	4	HOLDER SET	HÅLLARSATS	Page 621	
24	0301 2378 00	16	PLAIN WASHER	RUNDBRICKA		17 / 30 X 3 - HB 200 FZB
25	3128 3148 00	4	HOLDER	HÅLLARE		
26	0147 1402 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
30	3128 0782 87	1	TOP PART	ÖVERDEL		
31	3128 0782 85	1	LOWER PART	UNDERDEL		
32	0211 1962 85	6	SCREW	SKRUV		MC6S M 8 X 25 - 12.9
33	0686 3702 00	1	PLUG	PROPP		R 1/4 - 11 1550
34	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
35	3128 0940 38	4	SHIM	MELLANLÄGG		

DETAIL SET / DETALJSATS

(Sheet 2 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
38	0147 1413 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 90 - 8.8 FZB
39	0147 1360 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
40	0333 5200 09	16	LOCK WASHER	LÅSBRICKA		13 / 25,4 X 3,7 FZB
41	0291 1128 20	8	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
42	0147 1405 03	8	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 50 - 8.8 FZB
43	3128 3136 21	2	HOLDER	HÅLLARE		
44	3128 3136 23	2	SUPPORT HALF	STÖDHALVA		
45	0102 0458 00	2	PIN	PINNE		CP 12M6 X 25 - 11 1922 04
46	0147 1489 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 100 - 8.8 FZB


DETAIL SET / DETALJSATS

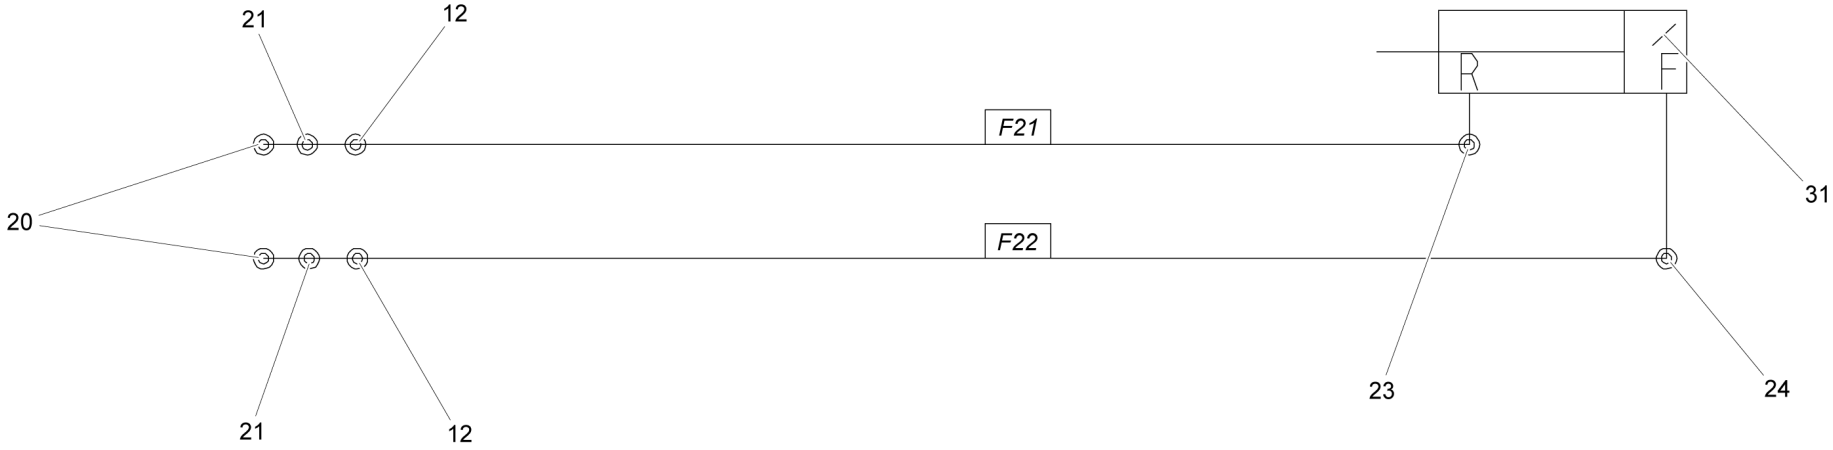

3128280129 00


B0055872

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 3182 08	1	HOSE SET	SLANGSATS	Page 613	F21, F22
12	3176 3060 00	2	NIPPLE	NIPPEL		UNF 3/4
20	3176 5313 00	2	CAP	HUV		UNF 3/4
21	3176 6497 00	2	NIPPLE	NIPPEL		UNF 3/4
23	3176 6513 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
24	3176 6564 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
31	9126 2322 00	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 615	50/32 2200 MT S S BMHT 1000/2000

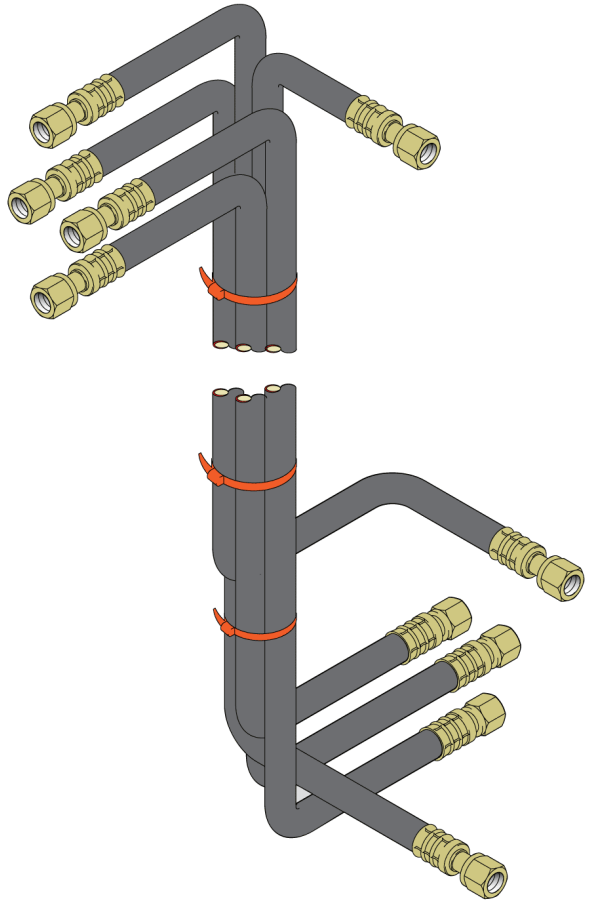

B0015365


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
F21	0574 1266 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 950 R2AT
F22	0574 1266 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 950 R2AT

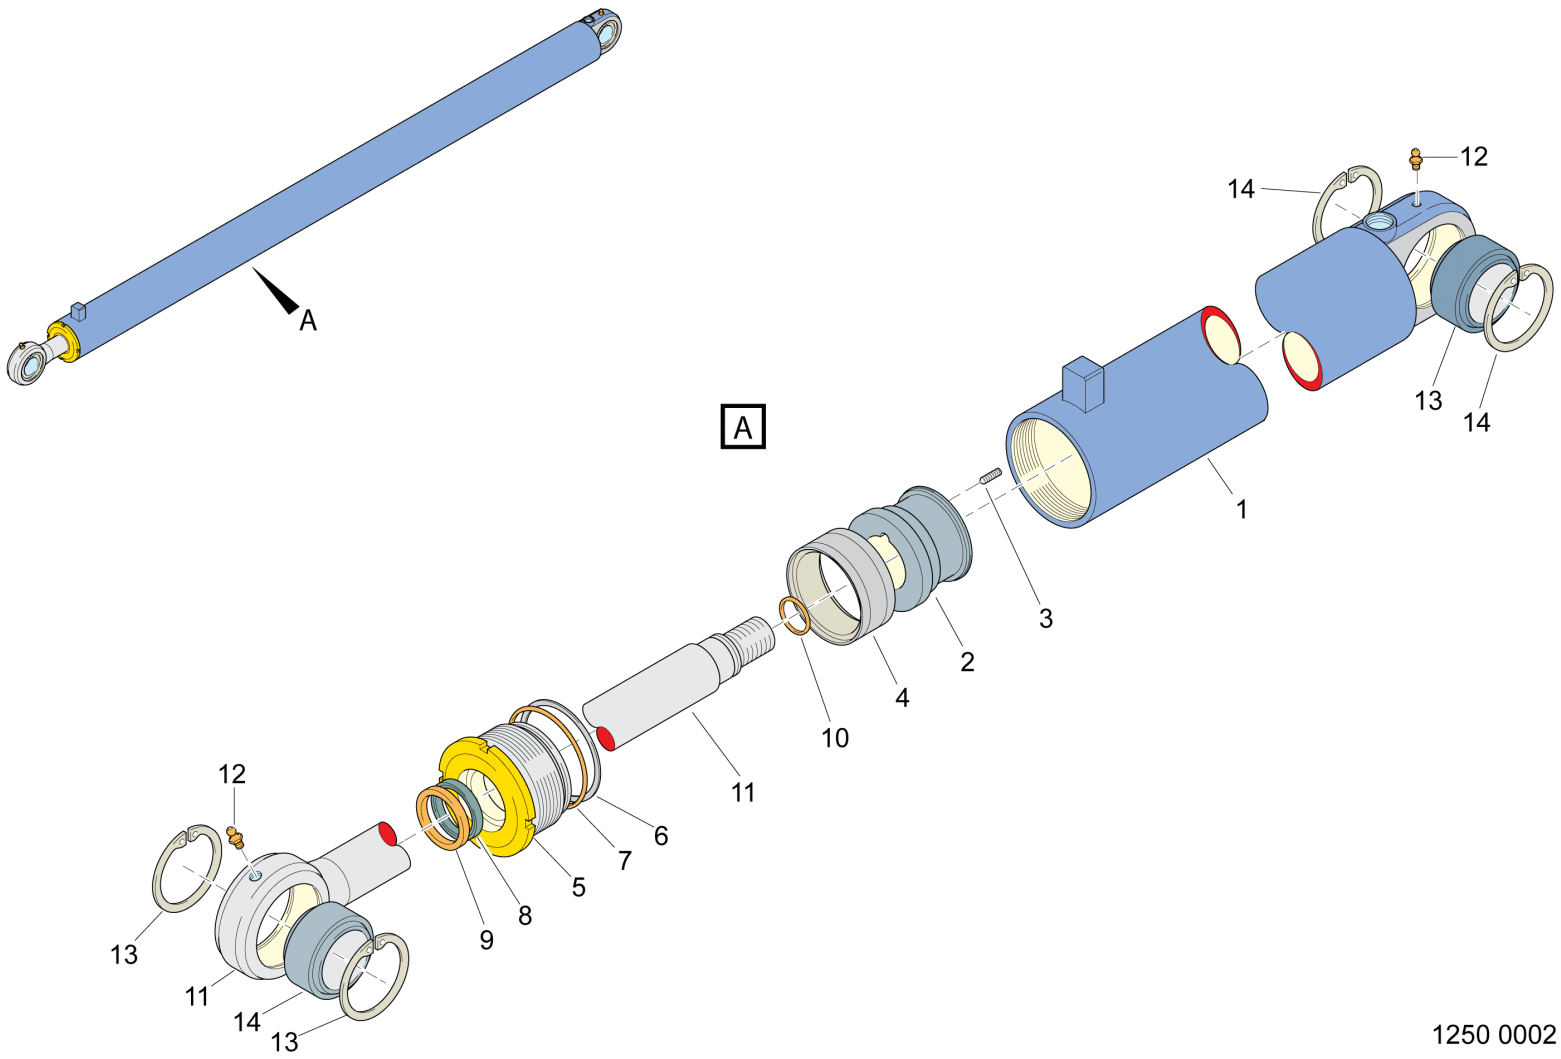

1250 0002 59

B0001989


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9120 0990 07	1	SEALING SET	PACKNINGSSATS		REF. 3,4,6-10
1	–	1	MANTLE	MANTEL		
2	9124 9564 00	1	PISTON	KOLV		
3	0196 1552 24	1	SET SCREW	STOPPSKRUV		M 5 X 8 SK6SS DIN 916
4	9125 6720 00	1	PISTON SEAL	KOLVTÄTNING		
5	9123 3552 00	1	CYLINDER COVER	CYLINDERLOCK		
6	0663 2135 00	1	O-RING	O-RING		44,2 X 3 70 SHORE
7	0661 1500 65	1	BACK-UP RING	STÖDRING		45 50 2,5 1,3
8	0665 0010 12	1	SEAL RING	TÄTNINGSRING		A1 32 40
9	0665 9100 17	1	WIPER	AVSTRYKARE		32 / 45 X 10 AU 94
10	0663 6123 00	1	O-RING	O-RING		15,9 X 1,6 70 SHORE
11	9126 4300 03	1	PISTON ROD	KOLVSTÅNG		
12	0544 2106 00	2	GREASE NIPPLE	SMÖRJNIPPEL		AH M 6X1 SMS 1568
13	0501 0013 00	2	BEARING,SP.PL.	LEDLAGER		25 / 42 X 20
14	0335 2141 00	2	CIRCLIP	SPÅRRING		SGH 42 X 1,75 DIN 472

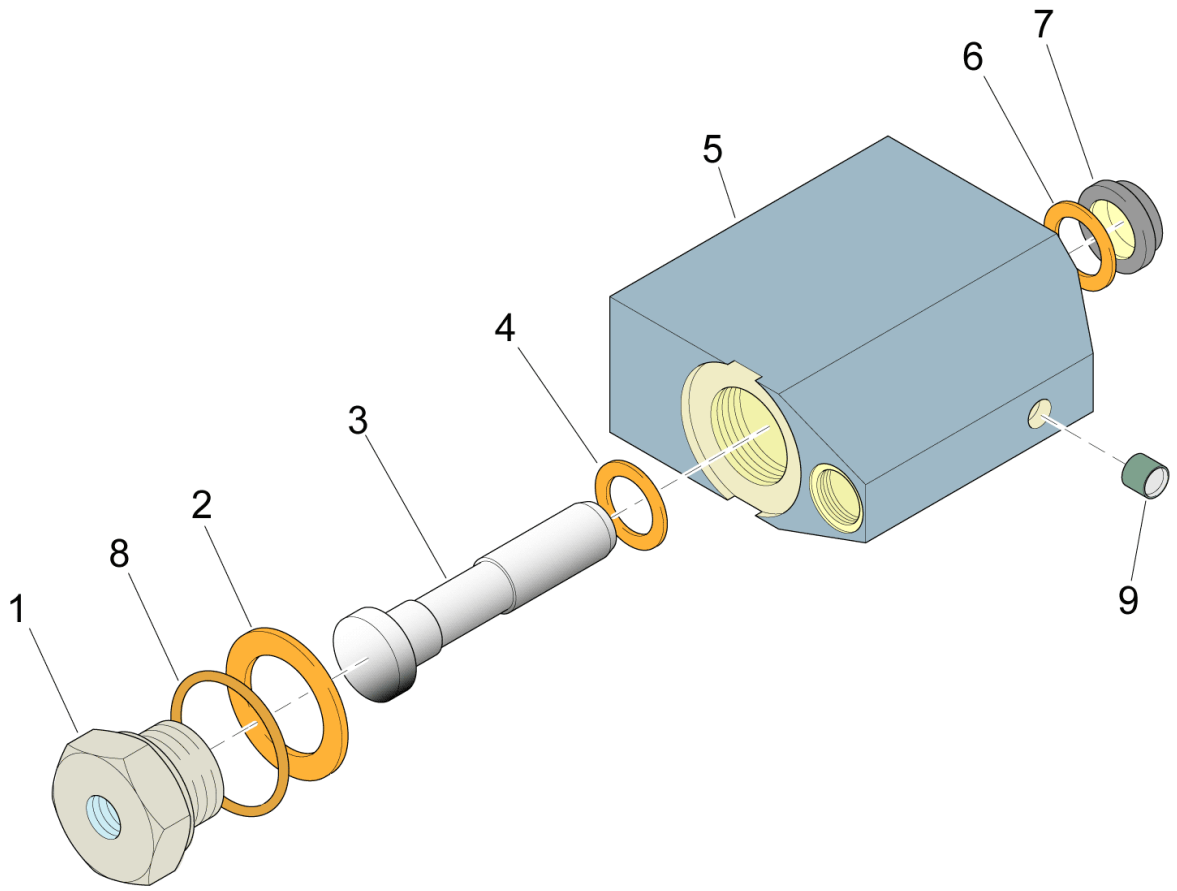

1250 0042 22

B0003972

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5580 0147 74	1	SEAL KIT	TÄTNINGSSATS		
1	3128 0709 00	1	BUSHING	BUSSNING		
3	3128 0827 00	1	PLUNGER	PLUNGE		
5	–	1	VALVE HOUSING	VENTILHUS		
9	3128 3061 86	1	SEAL PLUG	TÄTNINGSPLUGG		

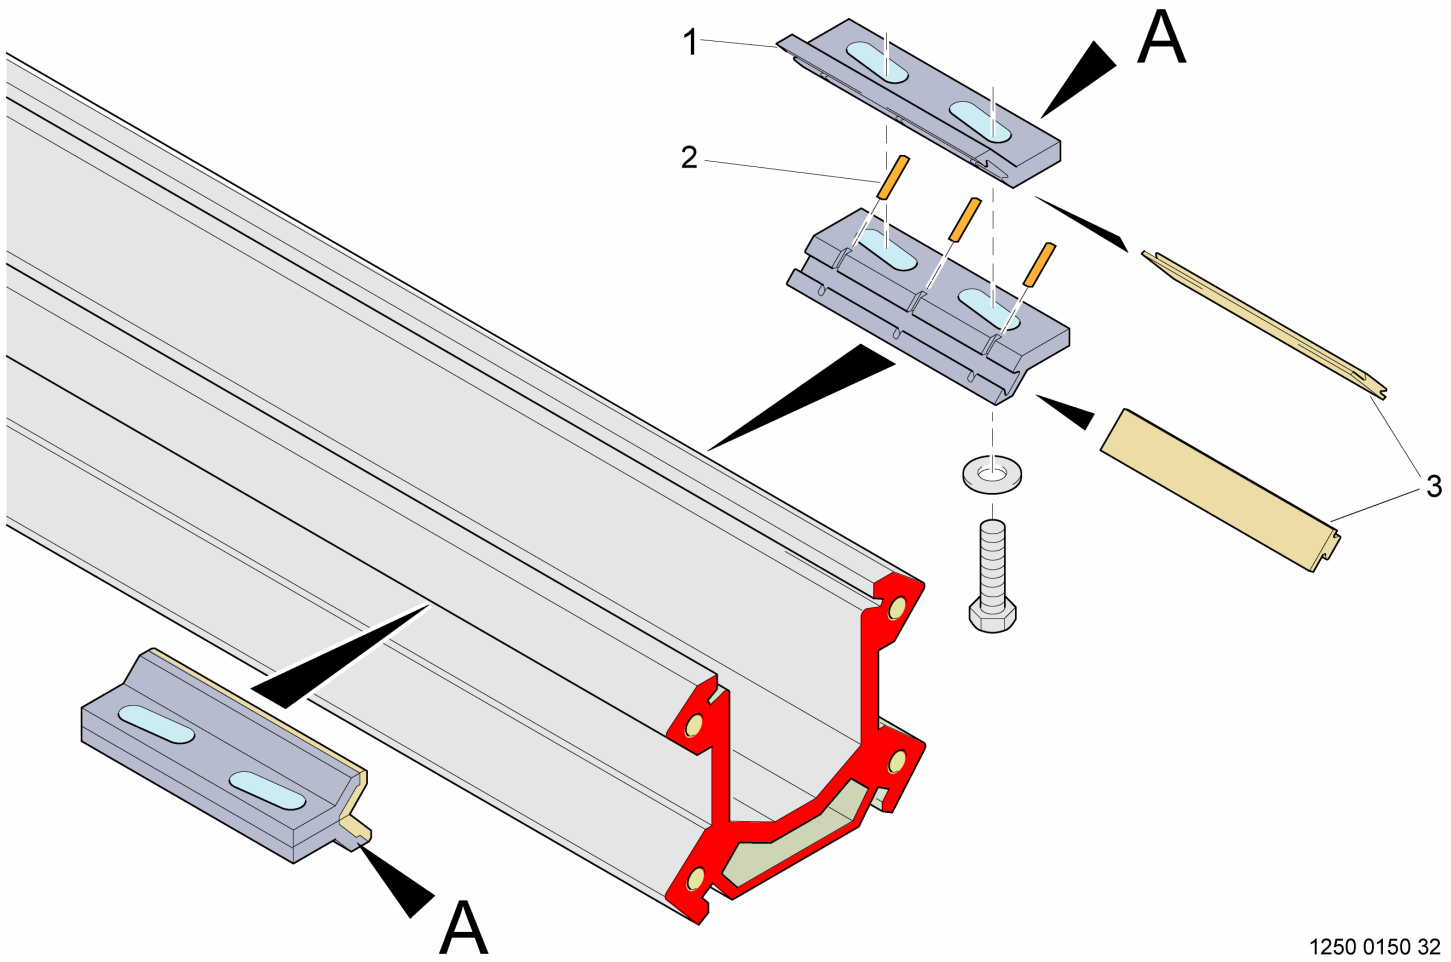


1250 0150 32

B0028615

HOLDER SET / HÅLLARSATS

3128 3061 63

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 0785 48	1	HOLDER	HÅLLARE		
2	3128 0619 00	3	KEY	KIL		
3	3128 3074 88	1	SLIDING PIECE	GLIDSTYCKE		

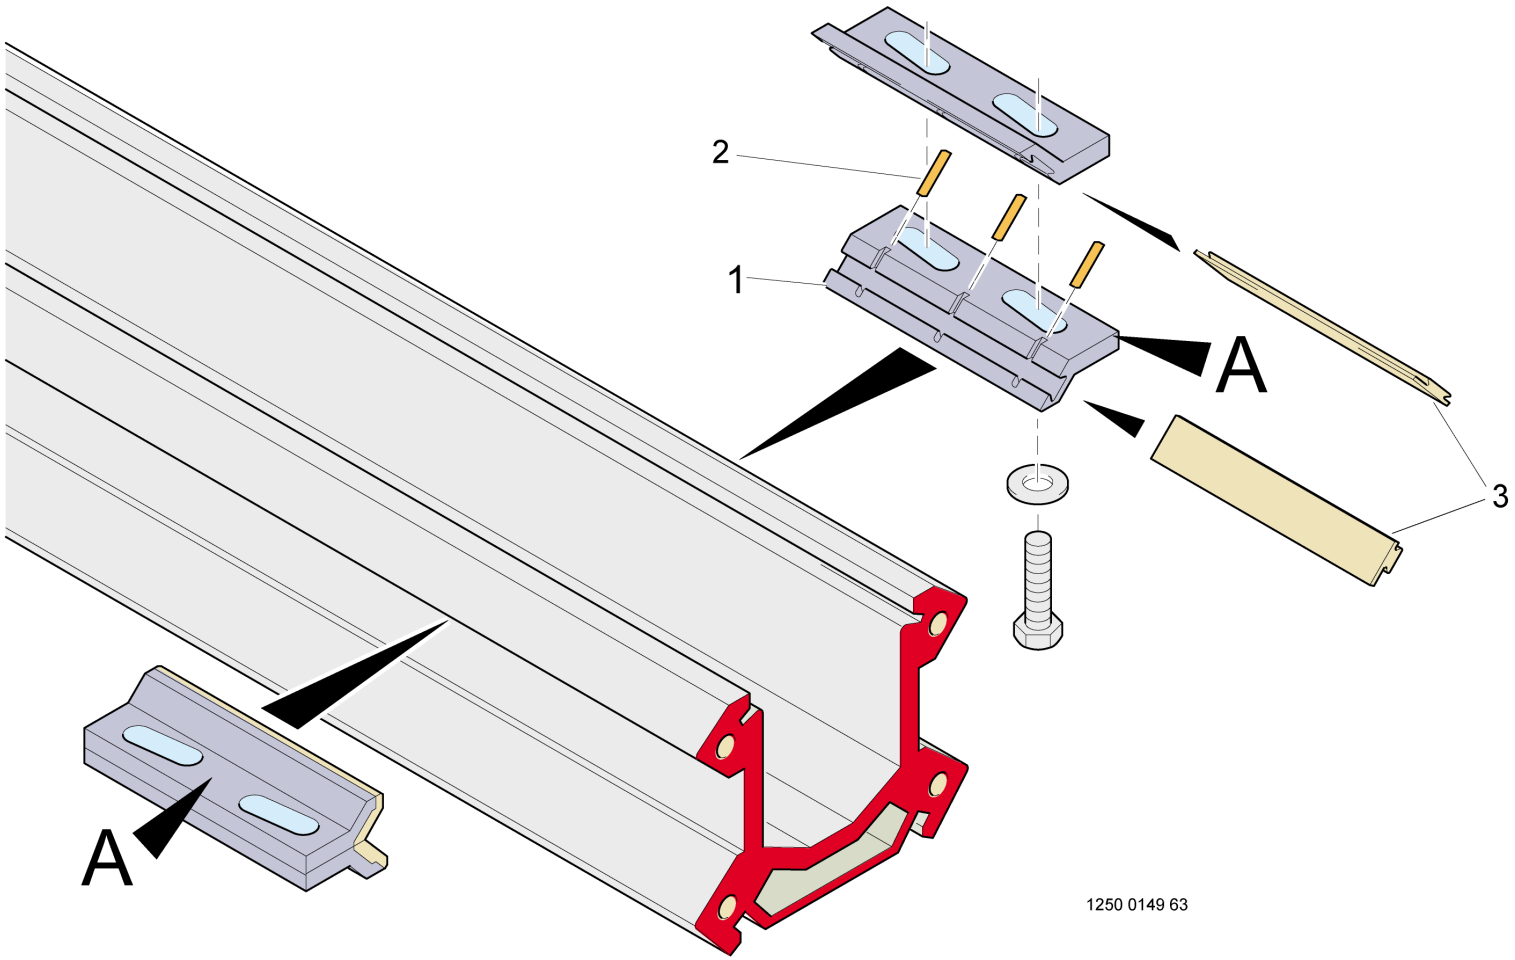



B0028616


HOLDER SET / HÅLLARSATS

3128 3061 64

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 0785 49	1	HOLDER	HÅLLARE		
2	3128 0619 00	3	KEY	KIL		
3	3128 3074 88	1	SLIDING PIECE	GLIDSTYCKE		

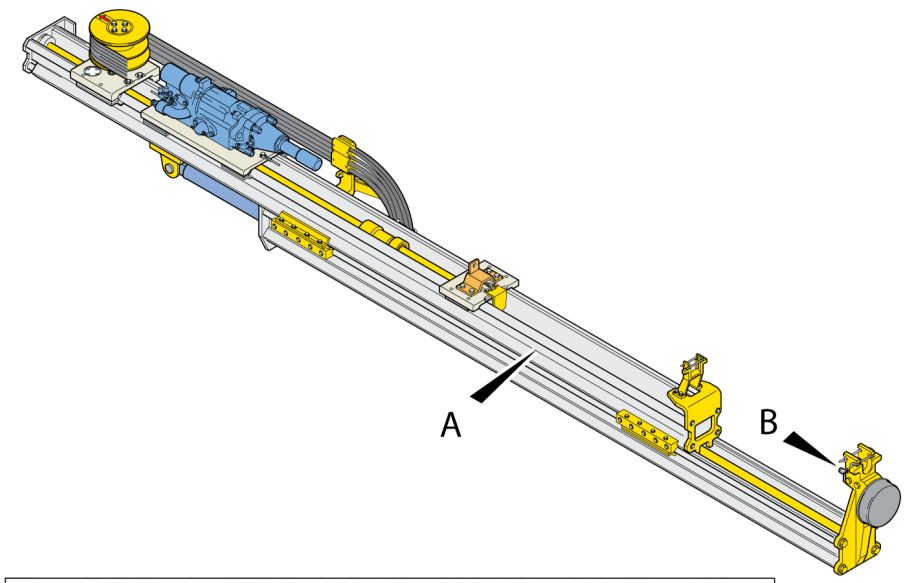

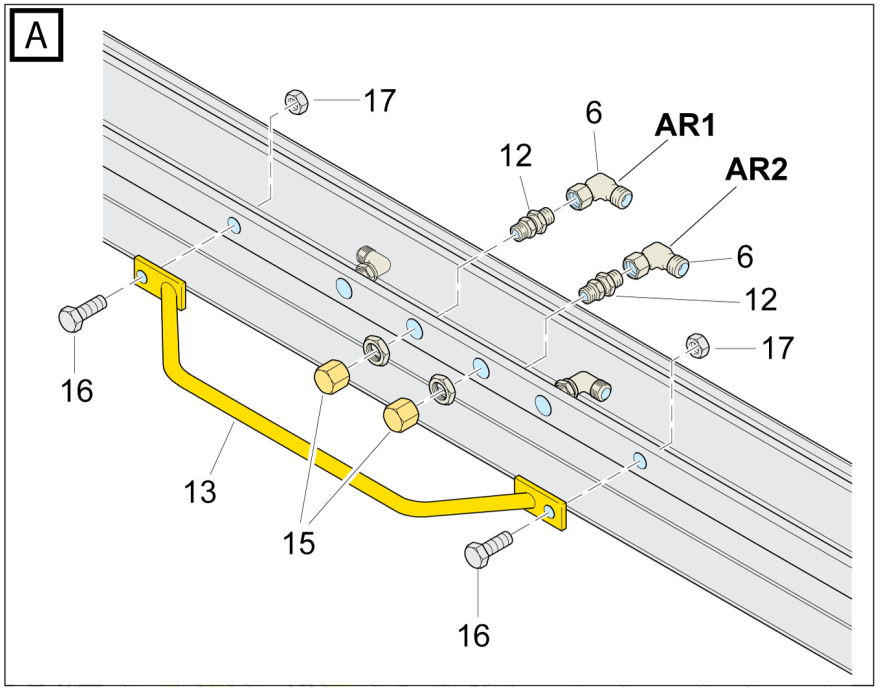

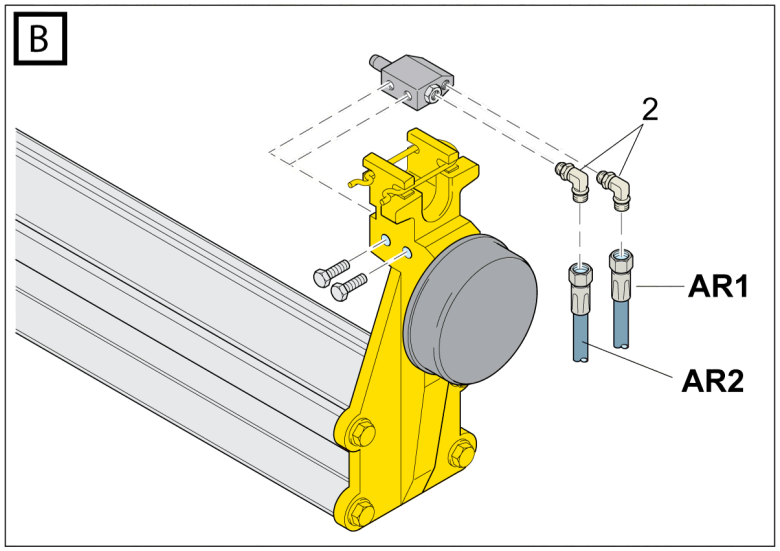



1250 0043 12


B0058429

DETAIL SET / DETALJSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
AR1LS1	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
AR2LS2	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
2	3176 6351 00	2	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
6	3715 0584 00	2	ELBOW NIPPLE	VINKELNIPPEL		UNF 9/16 - UNF 9/16
12	3176 6496 00	2	NIPPLE	NIPPEL		UNF 9/16=WTXNS10 UNF 9/16
13	3128 0981 00	1	PROTECTION	SKYDD		
15	3176 5429 00	2	CAP	HUV		UNF 9/16
16	0147 1402 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 35 - 8.8 FZB
17	0291 1128 22	2	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040

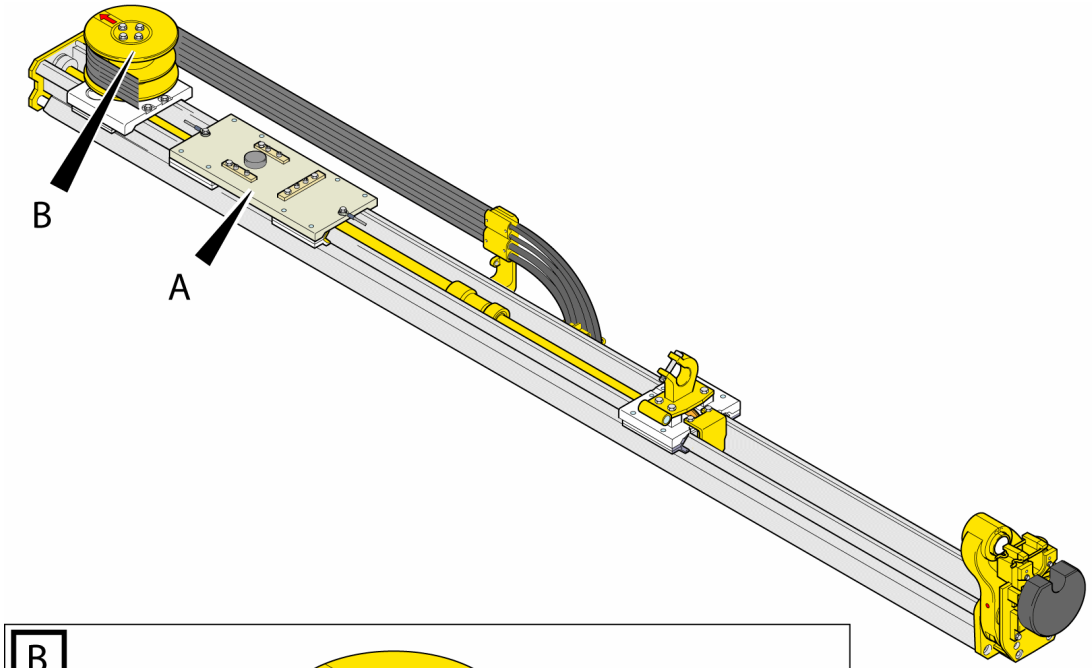


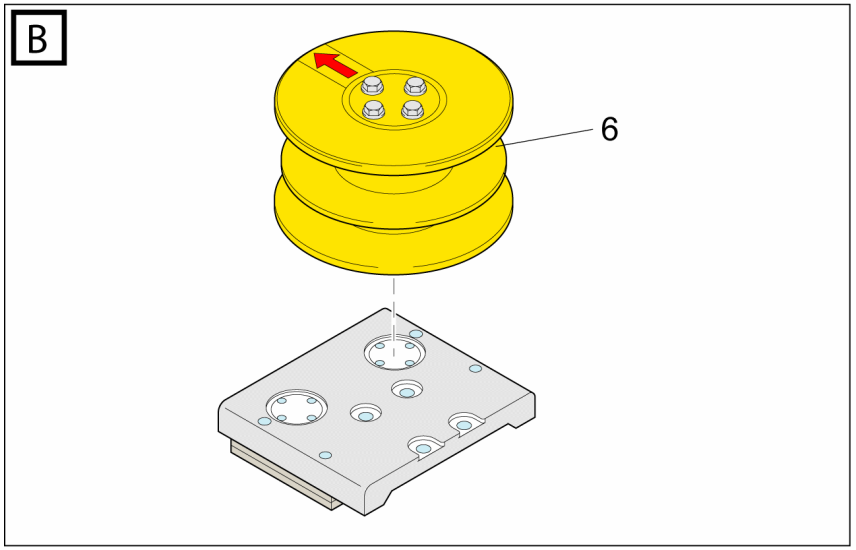

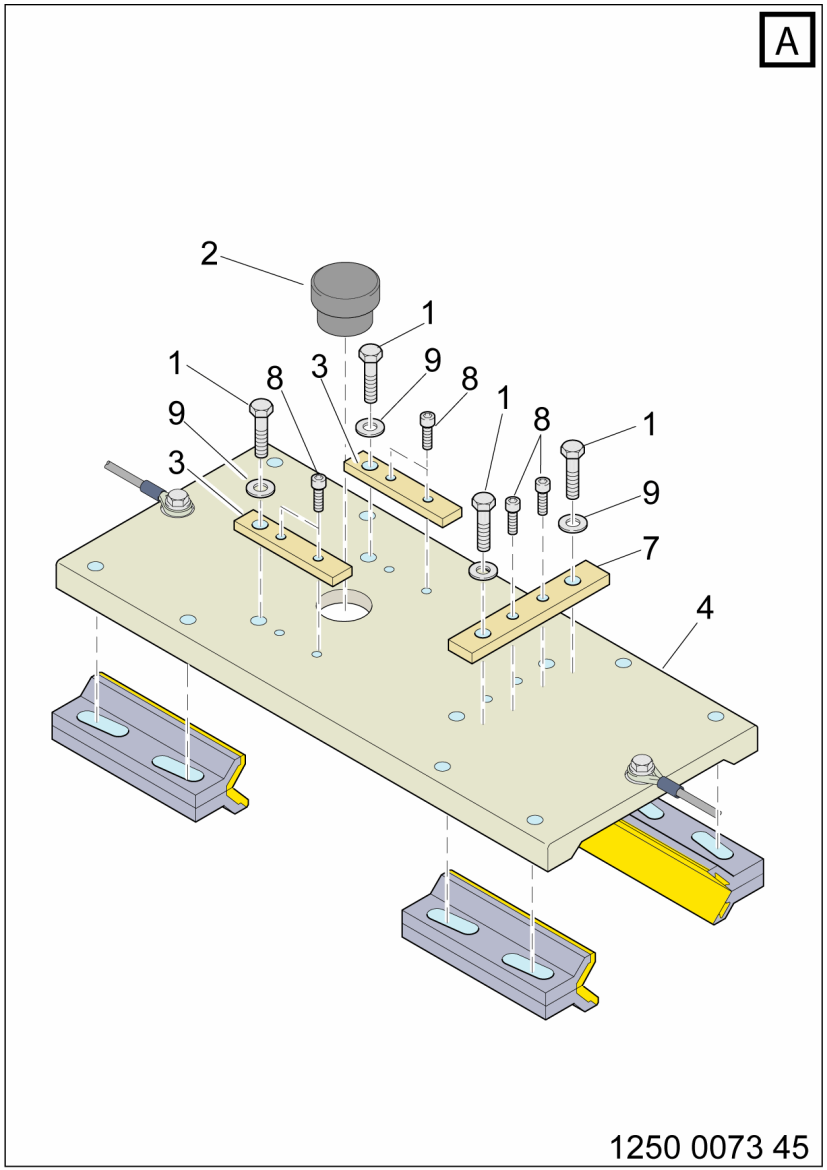

B0024517

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0147 1482 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 65 - 8.8 FZB
2	3128 3052 25	1	DRIVER	MEDBRINGARE		
3	3128 0610 00	2	SPACER	DISTANS		
4	3128 3061 74	1	CRADLE	SLÄDE		
6	3128 0475 10	1	HOSE DRUM	SLANGTRUMMA	Page 627	COMPL.WITH BUSHINGS
7	3128 0609 00	1	SPACER	DISTANS		
8	0211 1963 83	6	SCREW	SKRUV		MC6S M 6 X 16 - 12.9
9	3315 0195 10	4	LOCK WASHER	LÅSBRICKA		17/25,4 X 3,7 HRC50 FZB

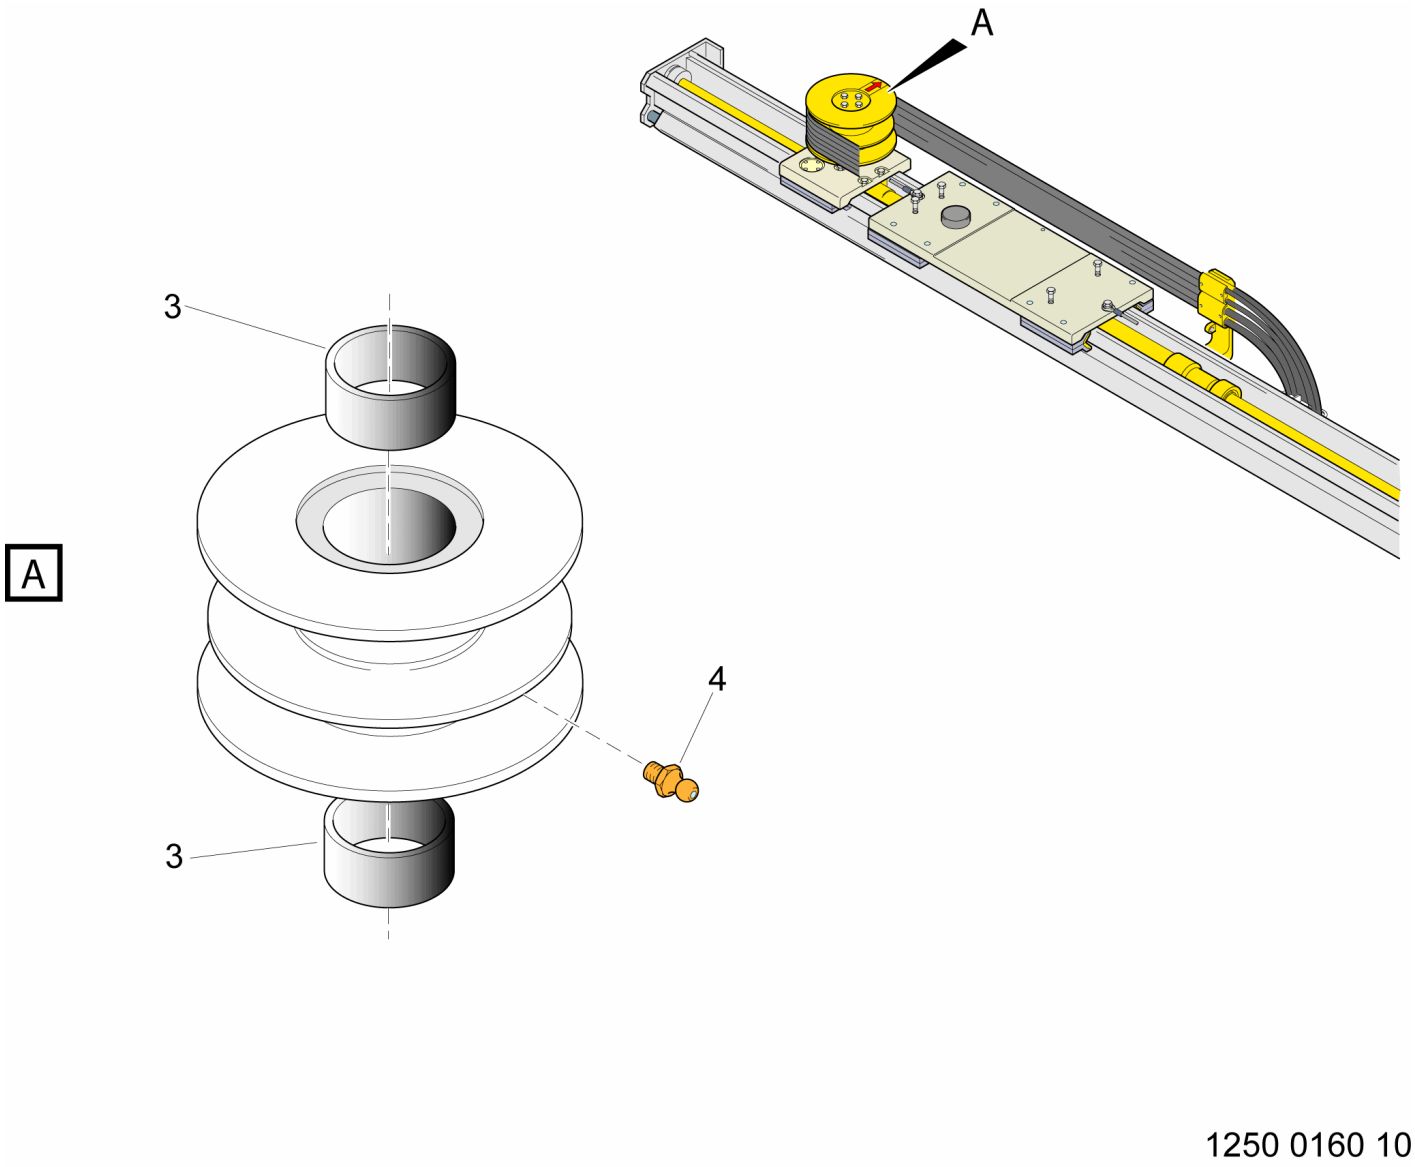


1250 0160 10

B0000853

HOSE DRUM / SLANGTRUMMA


3128 0475 10 COMPL.WITH BUSHINGS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	HOSE DRUM	SLANGTRUMMA		NOT SOLD SEPARATELY
2	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
3	0500 4536 20	2	BUSHING	BUSSNING		100 / 105 X 50
4	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH

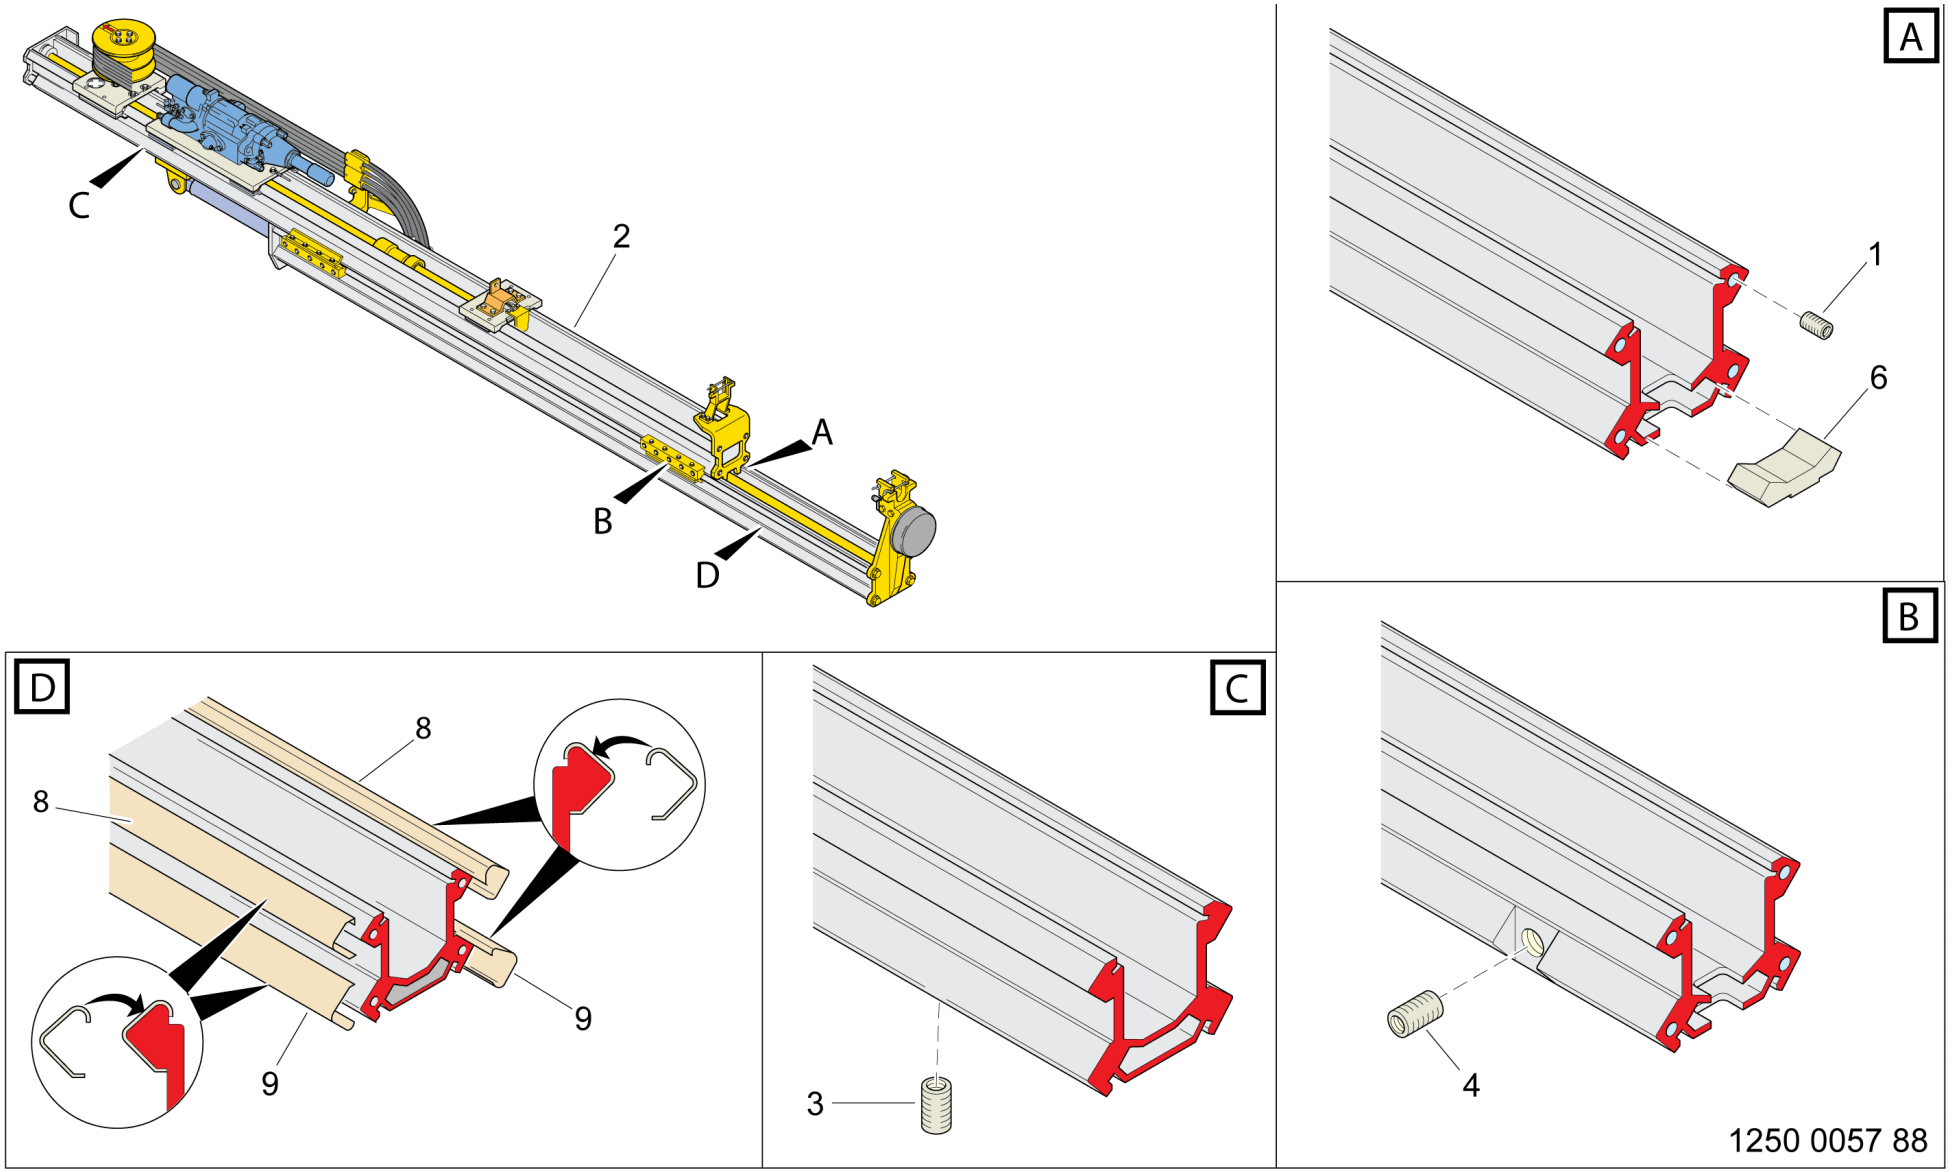


B0006883

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0259 2062 00	8	THREAD INSERT	GÄNGINSATS		HELI-COIL M 16 X 2 D M16 MID-GRIP
2	–	1	FEED BEAM	MATARBALK		
3	0259 2009 00	4	THREAD INSERT	GÄNGINSATS		HELI-COIL M 12 X 1 D M12 MID-GRIP
4	0259 2061 00	4	THREAD INSERT	GÄNGINSATS		HELI-COIL M 16 X 1,5 D
6	3128 3004 07	1	PLUG	PLUGG		
8	3128 0458 01	4	SLIDE BAR	GLIDSKENA		

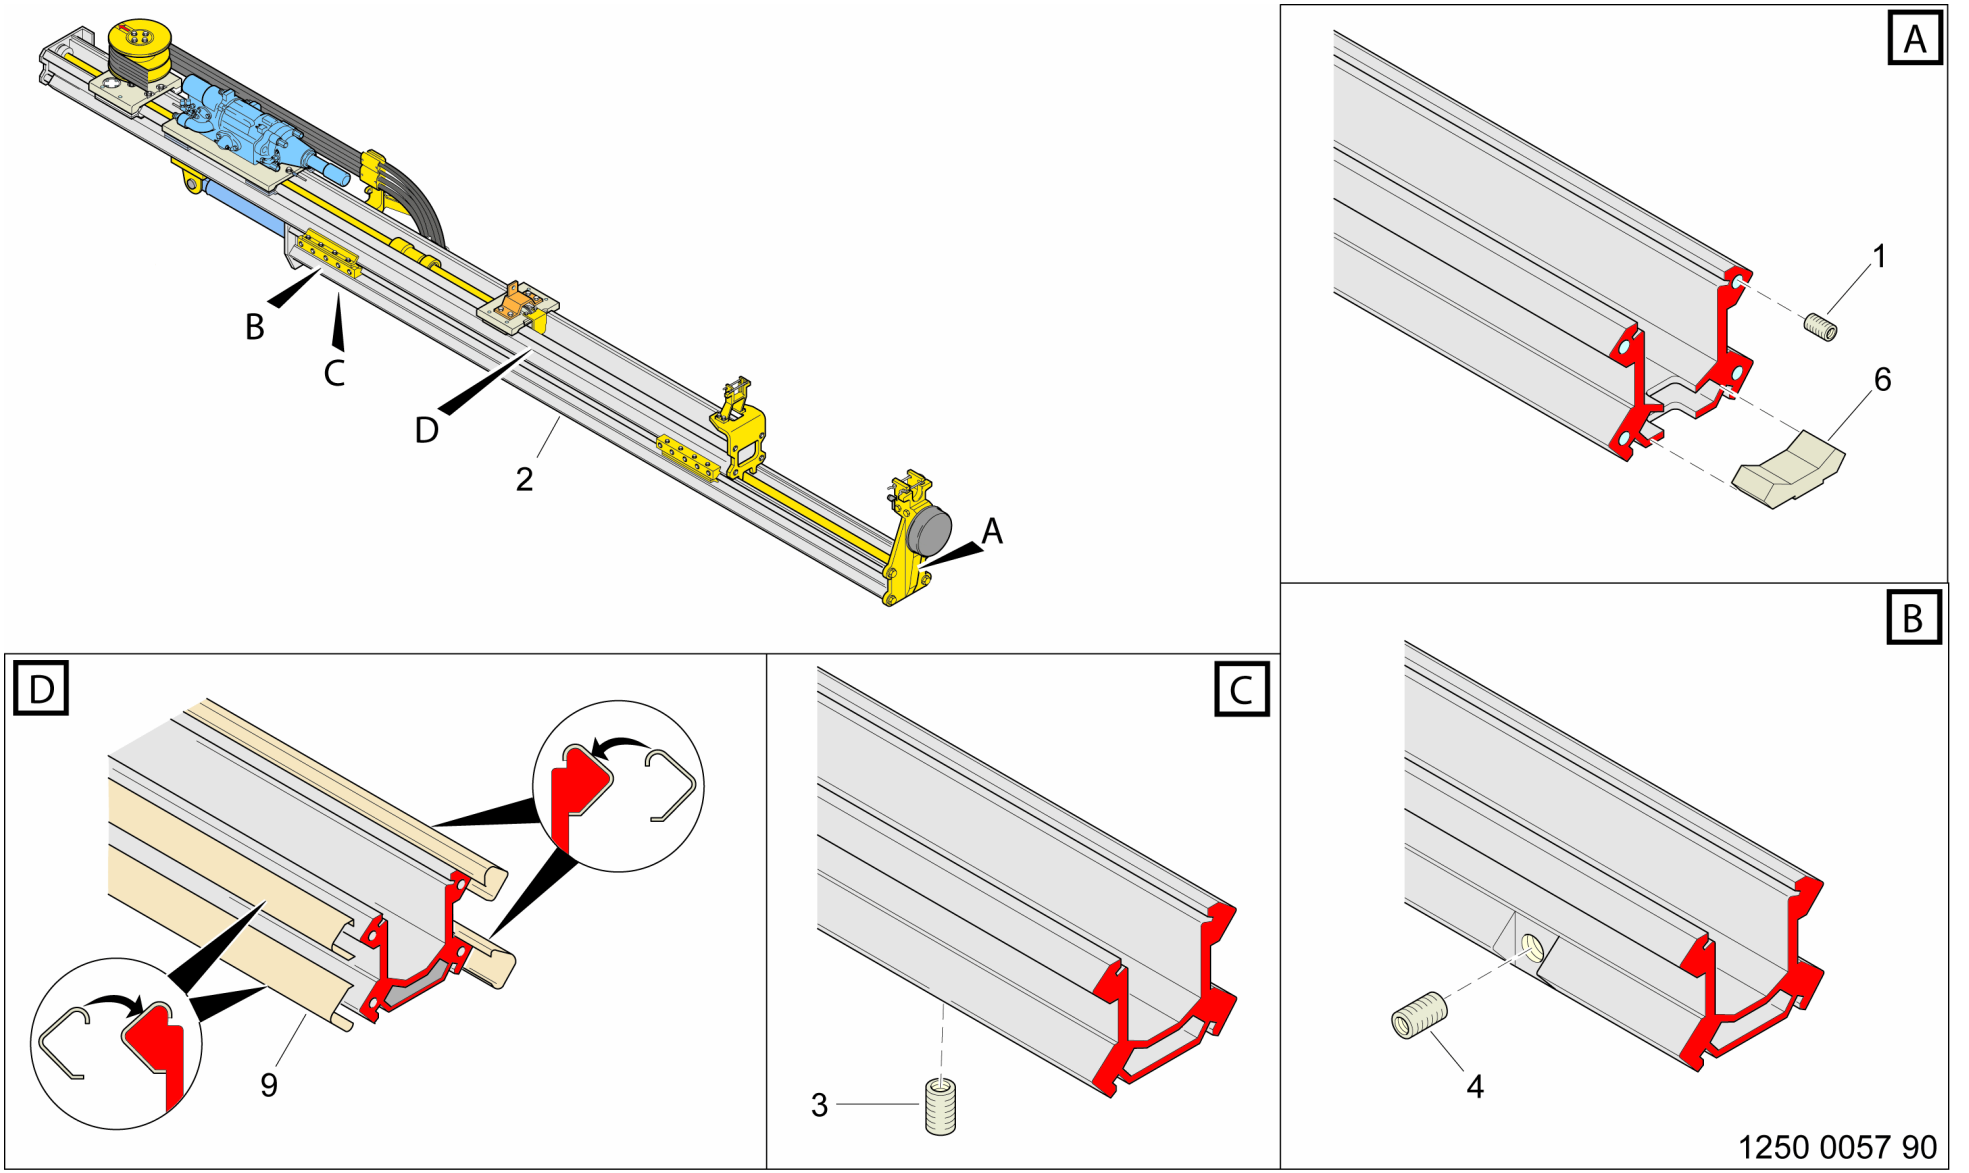
A
B
C
D
1
2
3
4
6
9
1250 0057 90

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0259 2062 00	8	THREAD INSERT	GÄNGINSATS		HELI-COIL M 16 X 2 D M16 MID-GRIP
2	–	1	FEED BEAM	MATARBALK		
3	0259 2009 00	4	THREAD INSERT	GÄNGINSATS		HELI-COIL M 12 X 1 D M12 MID-GRIP
4	0259 0150 10	4	THREAD INSERT	GÄNGINSATS		M16 1,25D 2
6	3128 3004 07	1	PLUG	PLUGG		
9	3128 0458 01	4	SLIDE BAR	GLIDSKENA		

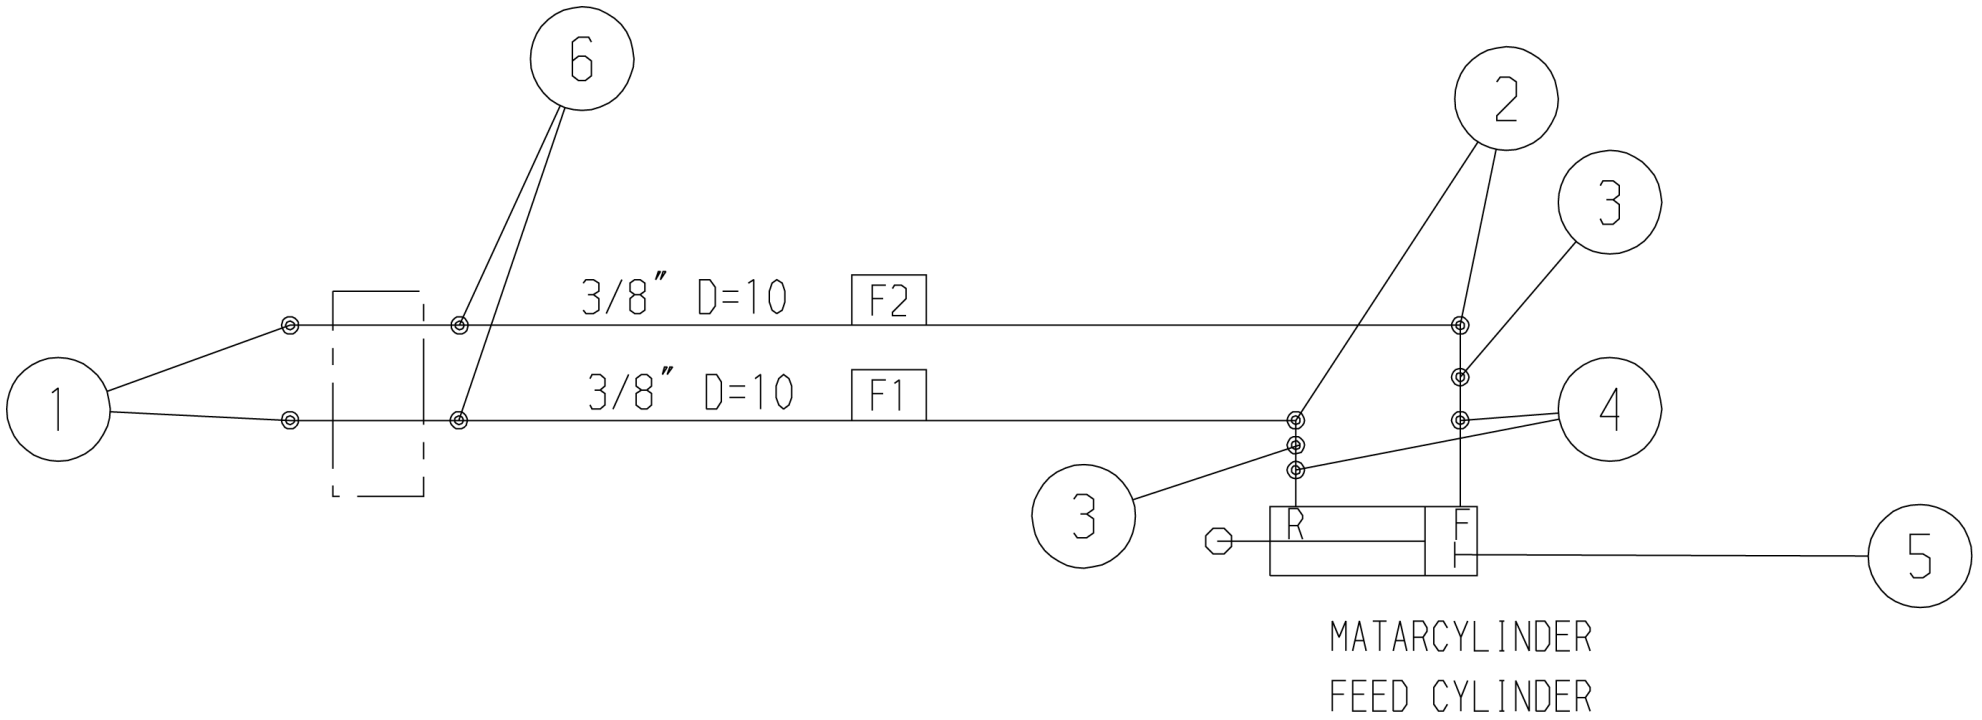


3128 3115 58/1 Ed00

B0011941

CYLINDER SET / CYLINDERSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	–	1	HOSE SET	SLANGSATS	Page 635	F1, F2
1	3176 6514 00	2	NIPPLE	NIPPEL		UNF 7/8 - R 3/8
2	3176 3060 00	2	NIPPLE	NIPPEL		UNF 3/4
3	3128 0782 66	2	NIPPLE	NIPPEL		
4	0661 1026 00	2	SEAL WASHER	TÄTNINGSBRICKA		TREDO G 3/8
5	3128 2594 01	1	HYDR. CYLINDER	HYDRAULCYLINDER	Page 637	
6	3176 6512 00	2	NIPPLE	NIPPEL		UNF 3/4 - G 3/8

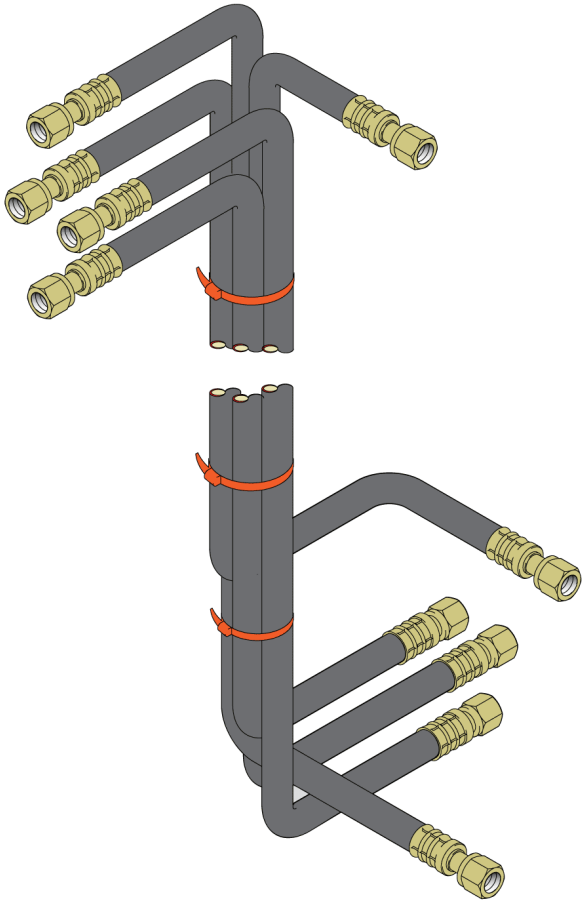


B0015365

HOSE SET / SLANGSATS

F1, F2


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
F1	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
F2	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT

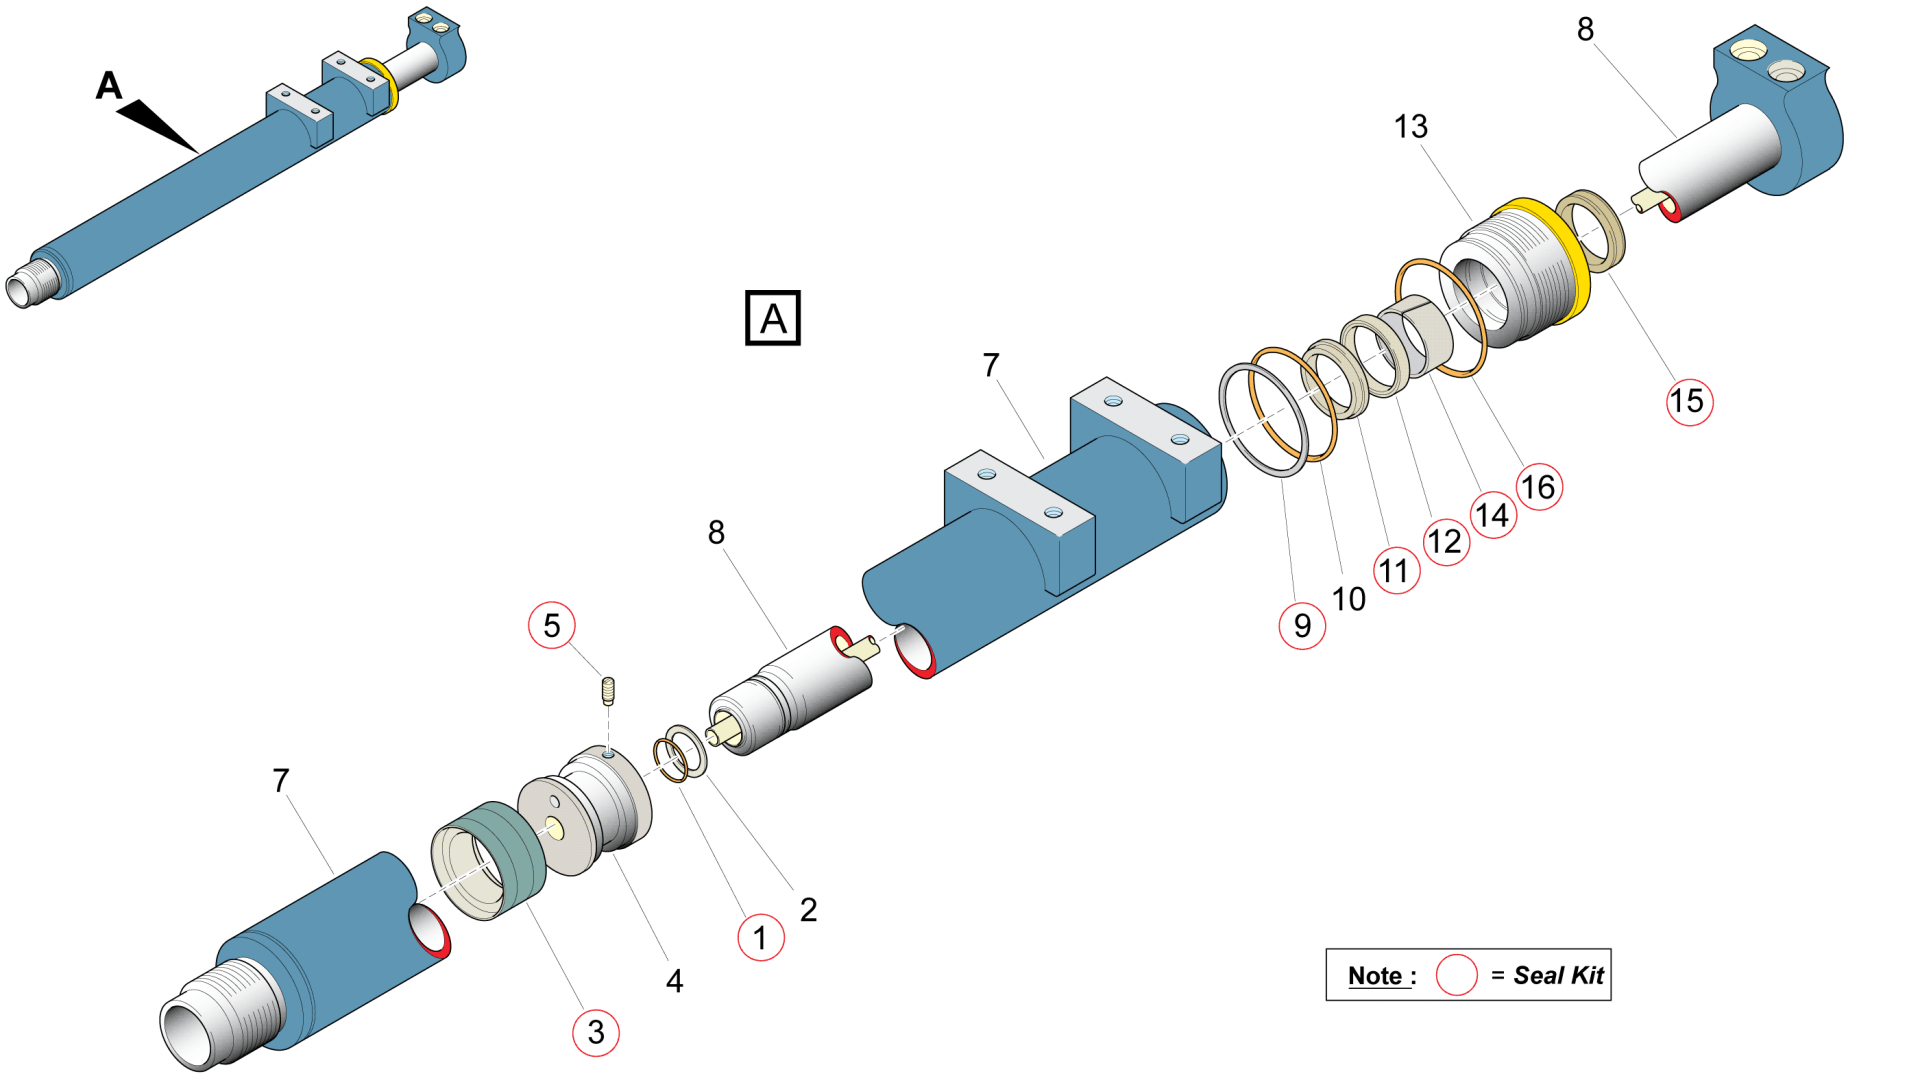

1250 0228 95

B0045167


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3128 2594 05	1	SEAL KIT	TÄTNINGSSATS		INCL. ITEM 1,3,5,9,11,12,14-16
1	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
2	9127 3547 70	1	WASHER	BRICKA		
3	–	1	PISTON SEAL	KOLVTÄTNING		NOT SOLD SEPARATELY
4	9236 2010 29	1	PISTON	KOLV		
5	–	1	SCREW	SKRUV		NOT SOLD SEPARATELY
7	–	1	CYL.BARREL	CYLINDERRÖR		NOT SOLD SEPARATELY
8	–	1	PISTON ROD	KOLVSTÅNG		NOT SOLD SEPARATELY
9	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
10	0661 1500 66	1	BACK-UP RING	STÖDRING		58 63 2,5 1,3
11	–	1	LOCK RING	LÅSRING		NOT SOLD SEPARATELY
12	–	1	PISTON ROD SEAL	KOLVSTÅNGSTÄTN.		NOT SOLD SEPARATELY
13	9126 3951 00	1	COVER	LOCK		
14	–	1	GUIDE RING	STYRRING		NOT SOLD SEPARATELY
15	–	1	WIPER	AVSTRYKARE		NOT SOLD SEPARATELY
16	–	1	O-RING	O-RING		NOT SOLD SEPARATELY

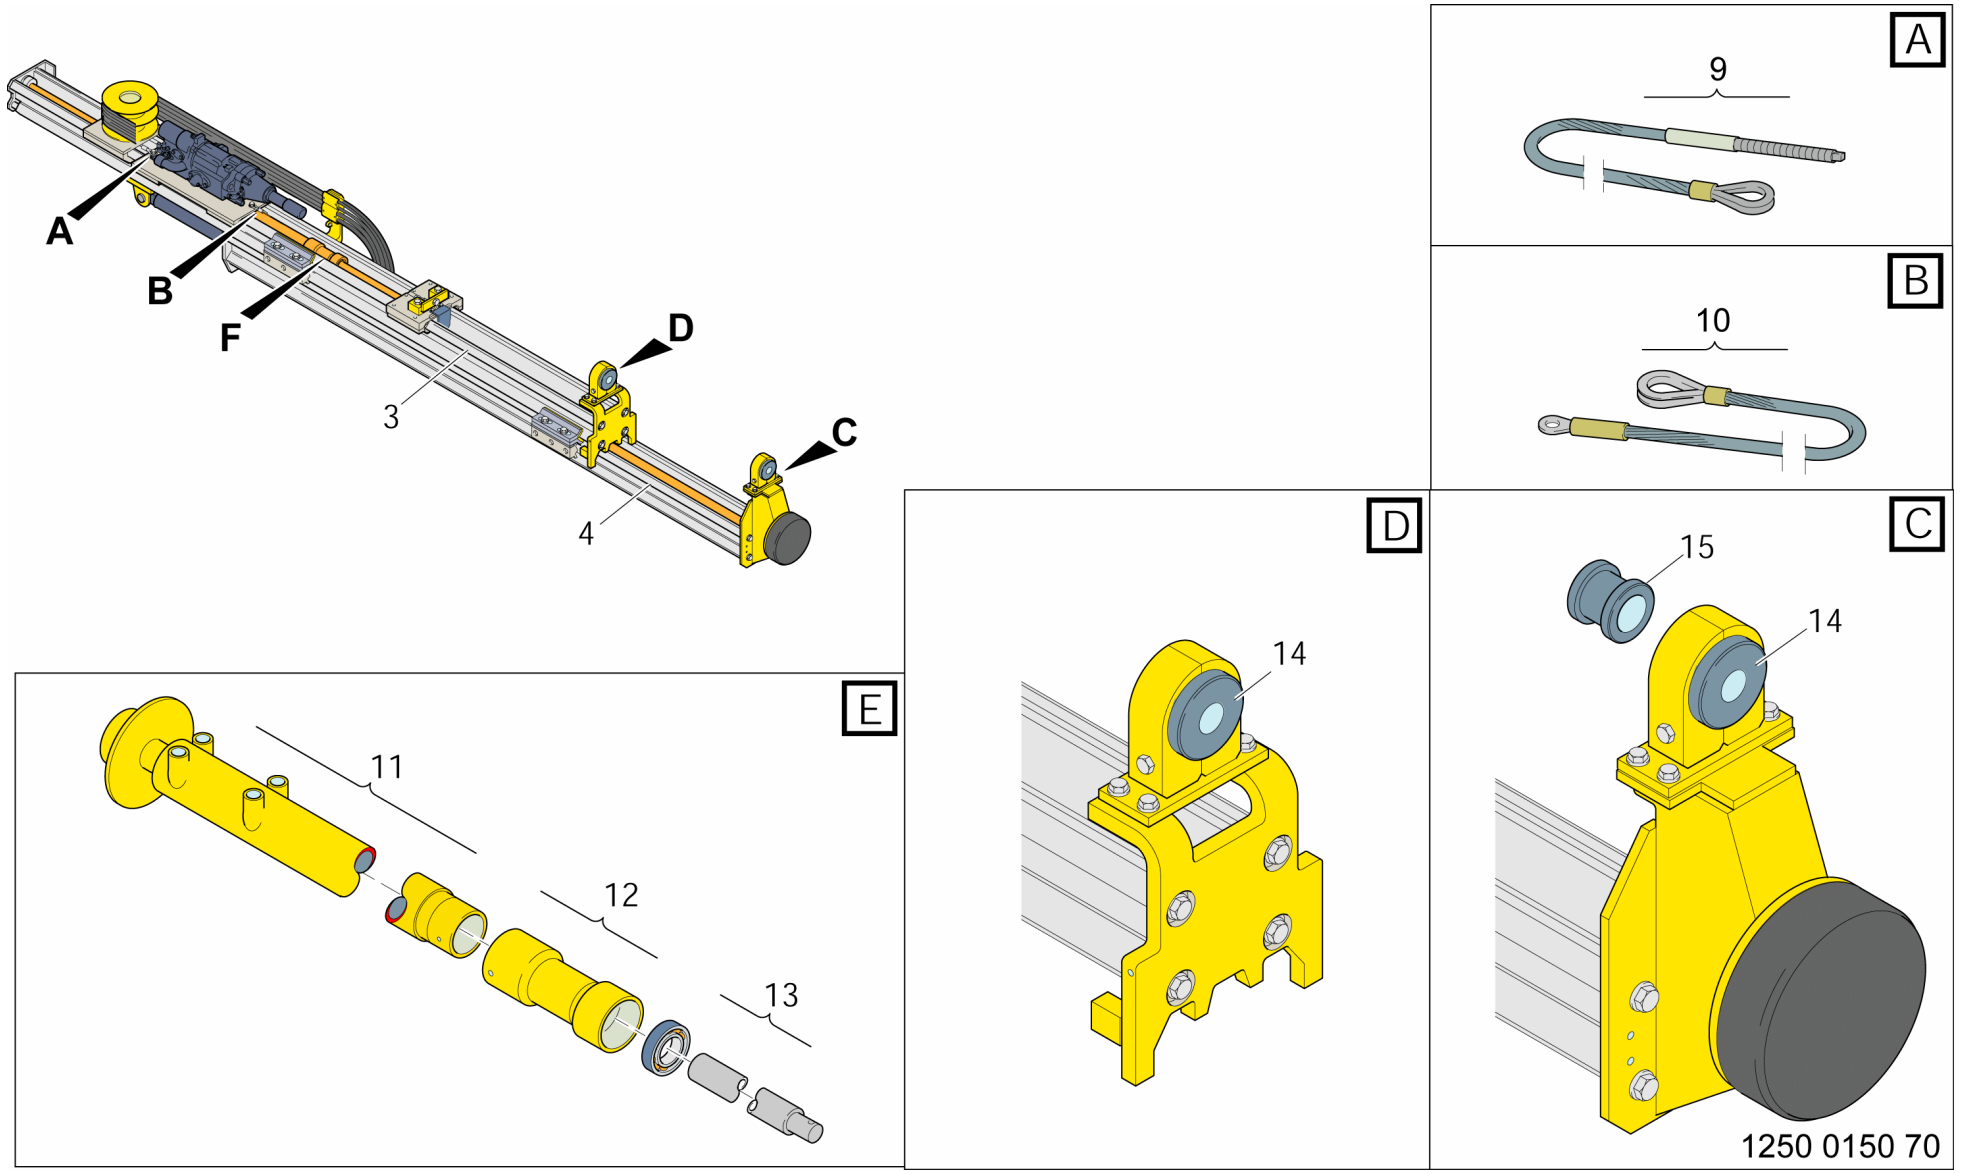

B0028929

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3128 1036 82	1	BASIC PART SET	GRUNDDETALJSATS	Page 593	
2	3128 3061 75	1	ROCK DRILL KIT	BORRMASKINSATS	Page 625	COP 1238/1838
3	3128 3184 72	1	FEED BEAM	MATARBALK	Page 629	
4	3128 3184 73	1	FEED BEAM	MATARBALK	Page 631	
9	3128 0551 01	1	RETURN ROPE	RETURLINA		
10	3128 0647 02	1	PULL ROPE	DRAGLINA		
11	–	1	CYLINDER SET	CYLINDERSATS	Page 633	
12	3128 0494 00	1	SPACER SLEEVE	DISTANSHYLSA		
13	3128 0781 96	1	SPACER	DISTANS		
14	3128 3136 18	2	BUSHING	BUSSNING		DRILL BUSHING(42MM INNER DIA)

HOSE SET / SLANGSATS

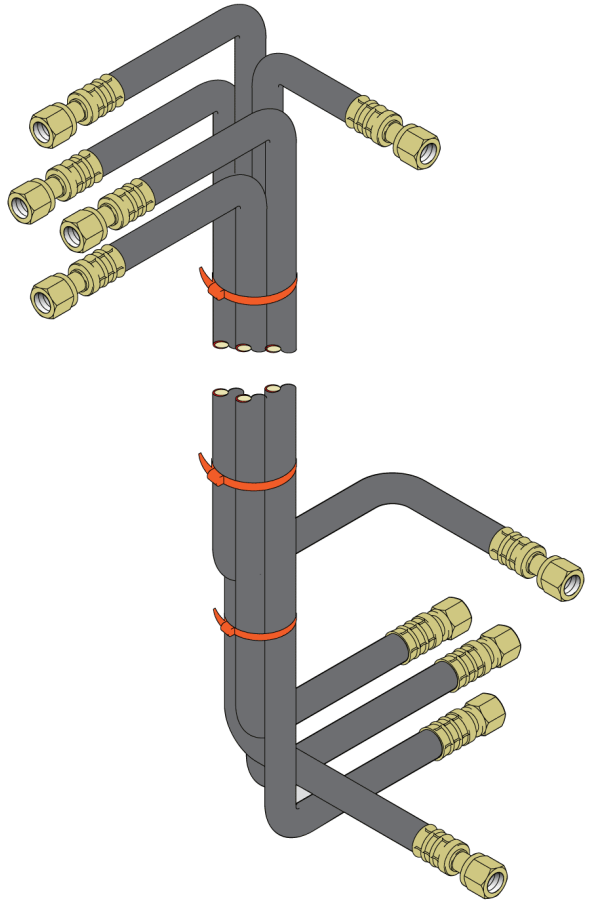

B0015365

HOSE SET / SLANGSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
PD1	0574 1321 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2500 R2AT
TS1	0574 3320 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2300 R2AT
D1	3176 6972 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2200 R2AT
L1	0574 1321 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2500 R2AT
R1	0574 3278 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2200 R2AT
R2	0574 3278 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2200 R2AT
S1	0574 0000 16	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2700 R9R
V0	3128 3211 13	1	HOSE ASSEMBLY	SLANGLEDNING		19X750 MULTIMAX
V1	0574 3278 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2200 R2AT

ELECTR. SYSTEM / ELSYSTEM
LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	ELECTR. SYSTEM	ELSYSTEM	647	
–	– ELCABINET SET	– ELSKÅPSATS	649	
–	– – BASIC EL.CAB.	– – GRUNDELSKÅP	651	380-690V 50/60HZ
9106 1289 61	– – – ELECTR.CABINET	– – – ELSKÅP	653	ECS,DCS,EDS 37/45/55-2Y/D
9106 1286 31	– – – – ELECTR.CABINET	– – – – ELSKÅP	659	
9106 1286 42	– – – – – DOOR	– – – – – DÖRR	661	
9106 1286 41	– – – – – DOOR	– – – – – DÖRR	663	
9106 1125 50	– – – – MAIN SWITCH	– – – – HUVUDBRYTARE	665	MG NS250-COIL 110V
3217 0011 09	– – – EMERG. STOP BOX	– – – NÖDSTOPPSLÅDA	667	
3217 0011 09	– – EMERG. STOP BOX	– – NÖDSTOPPSLÅDA	667	
9106 1223 62	– – ELECTRIC SET	– – ELSATS	669	
3217 0011 09	– – – EMERG. STOP BOX	– – – NÖDSTOPPSLÅDA	667	
–	– VOLT KIT	– VOLTSATS	671	
–	– – THERMAL RELAYS	– – TERMISKA RELÄER	673	
3217 9255 90	– – WATER PUMP	– – VATTENPUMP	675	
–	– EMC-SET	– EMC-SATS	679	
–	– – EMC-SET	– – EMC-SATS	681	
–	– ELECTRIC SET	– ELSATS	683	
–	– – CABLE SET	– – KABELSATS	687	
–	– – FLANGE SET	– – FLÄNSSATS	689	
–	– – CABLE CONNEC	– – KABELFÄSTE	691	
–	– HEADLIGHT SET	– STRÅLKASTARSATS	693	
–	– – HEADLIGHT	– – STRÅLKASTARE	695	
–	– – – YOKE	– – – BYGEL	697	
5112 3134 81	– – HEADLIGHT	– – STRÅLKASTARE	699	NORDIC 100 24V
9110 9994 64	– FLASHING BEACON	– VARNINGSFYR	701	
–	– HEADLIGHT SET	– STRÅLKASTARSATS	703	70W 24V DC


Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
3176 0032 38	– – HEADLIGHT SET	– – STRÅLKASTARSATS	705	
5112 3217 81	– – JUNCTION BOX	– – KOPPLINGSLÅDA	707	






B0057489

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
650	–	1	ELCABINET SET	ELSKÅPSATS	Page 649	
652	–	1	VOLT KIT	VOLTSATS	Page 671	
653	–	1	EMC-SET	EMC-SATS	Page 679	
670	–	1	ELECTRIC SET	ELSATS	Page 683	
680	–	1	HEADLIGHT SET	STRÅLKASTARSATS	Page 693	
681	9110 9994 64	1	FLASHING BEACON	VARNINGSFYR	Page 701	
685	–	1	HEADLIGHT SET	STRÅLKASTARSATS	Page 703	70W 24V DC

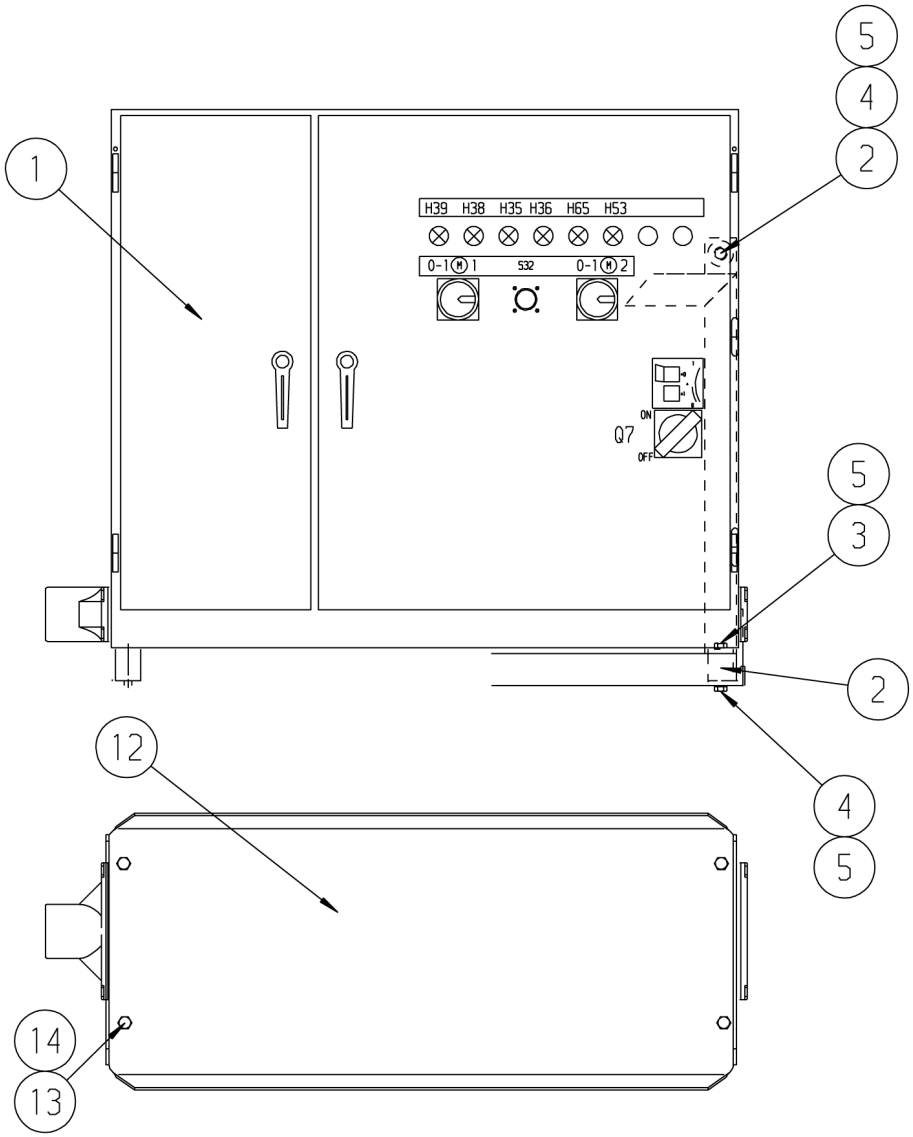

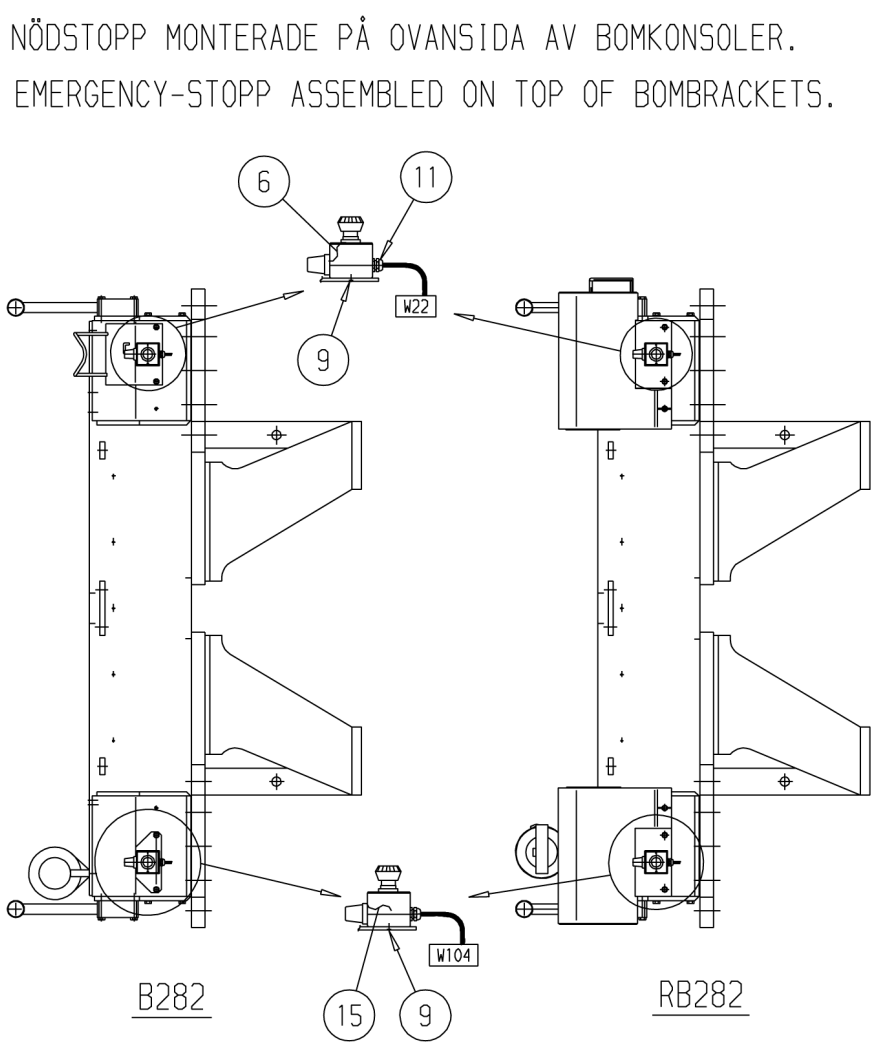


Del av 9110 9994 71 Ed01
9106 1289 61 Ed00

B0027471

ELCABINET SET / ELSKÅPSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	BASIC EL.CAB.	GRUNDELSKÅP	Page 651	380-690V 50/60HZ
2	0392 1110 02	6	DAMPER	DÄMPARE		50 / 36 60 IRH 1800
3	0147 1360 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
4	0147 1359 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 16 - 8.8 FZB
5	0301 2344 00	10	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
6	3217 0011 09	1	EMERG. STOP BOX	NÖDSTOPPSLÅDA	Page 667	
9	0160 6039 00	4	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 10 - 4.8 FZB
11	0698 5140 61	1	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
12	9106 1069 39	1	PROTECTION ROOF	SKYDDSTAK		
13	0147 1400 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
14	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
15	9106 1223 62	1	ELECTRIC SET	ELSATS	Page 669	

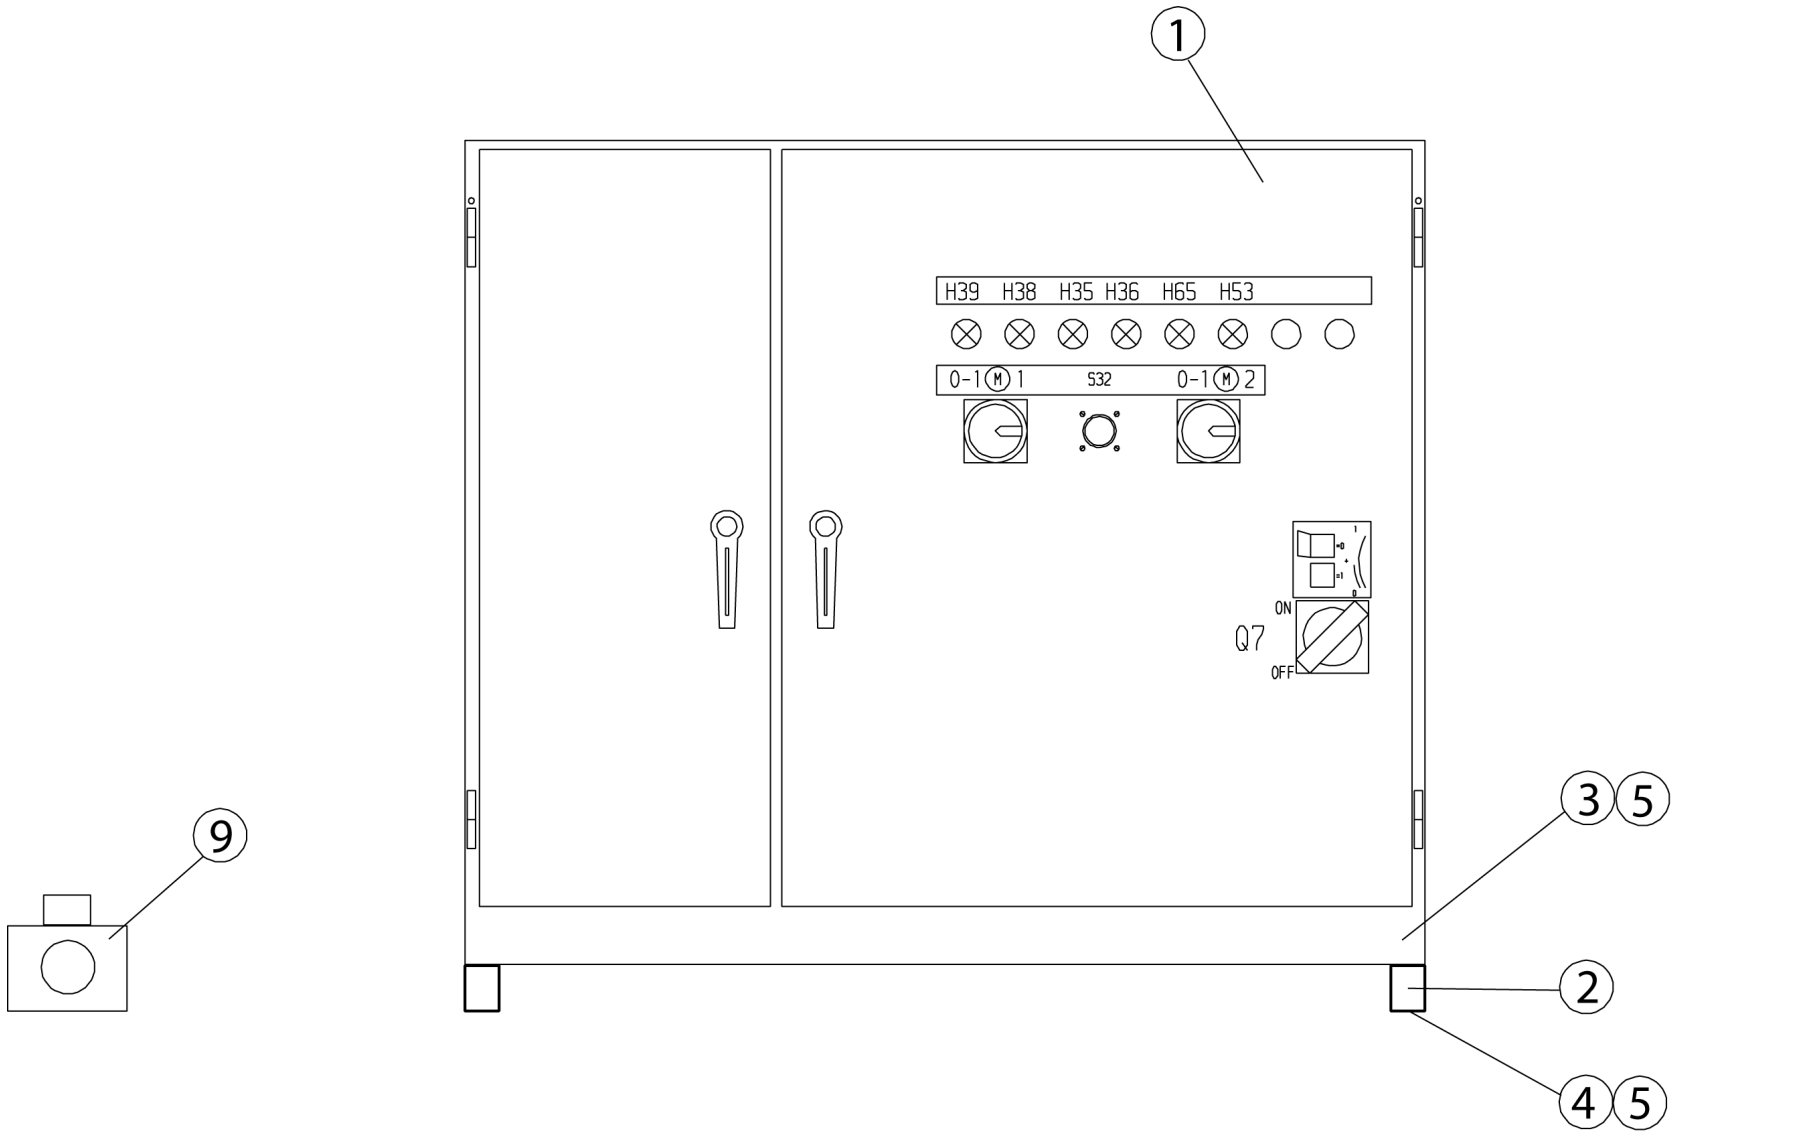


Del av 9106 1289 61

B0027427

BASIC EL.CAB. / GRUNDELSKÅP

380-690V 50/60HZ

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1289 61	1	ELECTR.CABINET	ELSKÅP	Page 653	ECS,DCS,EDS 37/45/55-2Y/D
2	0392 1110 02	6	DAMPER	DÄMPARE		50 / 36 60 IRH 1800
3	0147 1360 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
4	0147 1359 03	6	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 16 - 8.8 FZB
5	0301 2344 00	12	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
9	3217 0011 09	3	EMERG. STOP BOX	NÖDSTOPPSLÅDA	Page 667	
10	0698 5140 61	1	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
11	9111 3891 10	10M	CABLE, 5-CORE	KABEL, 5-LEDARE		150 5G1.5 D2=9.8

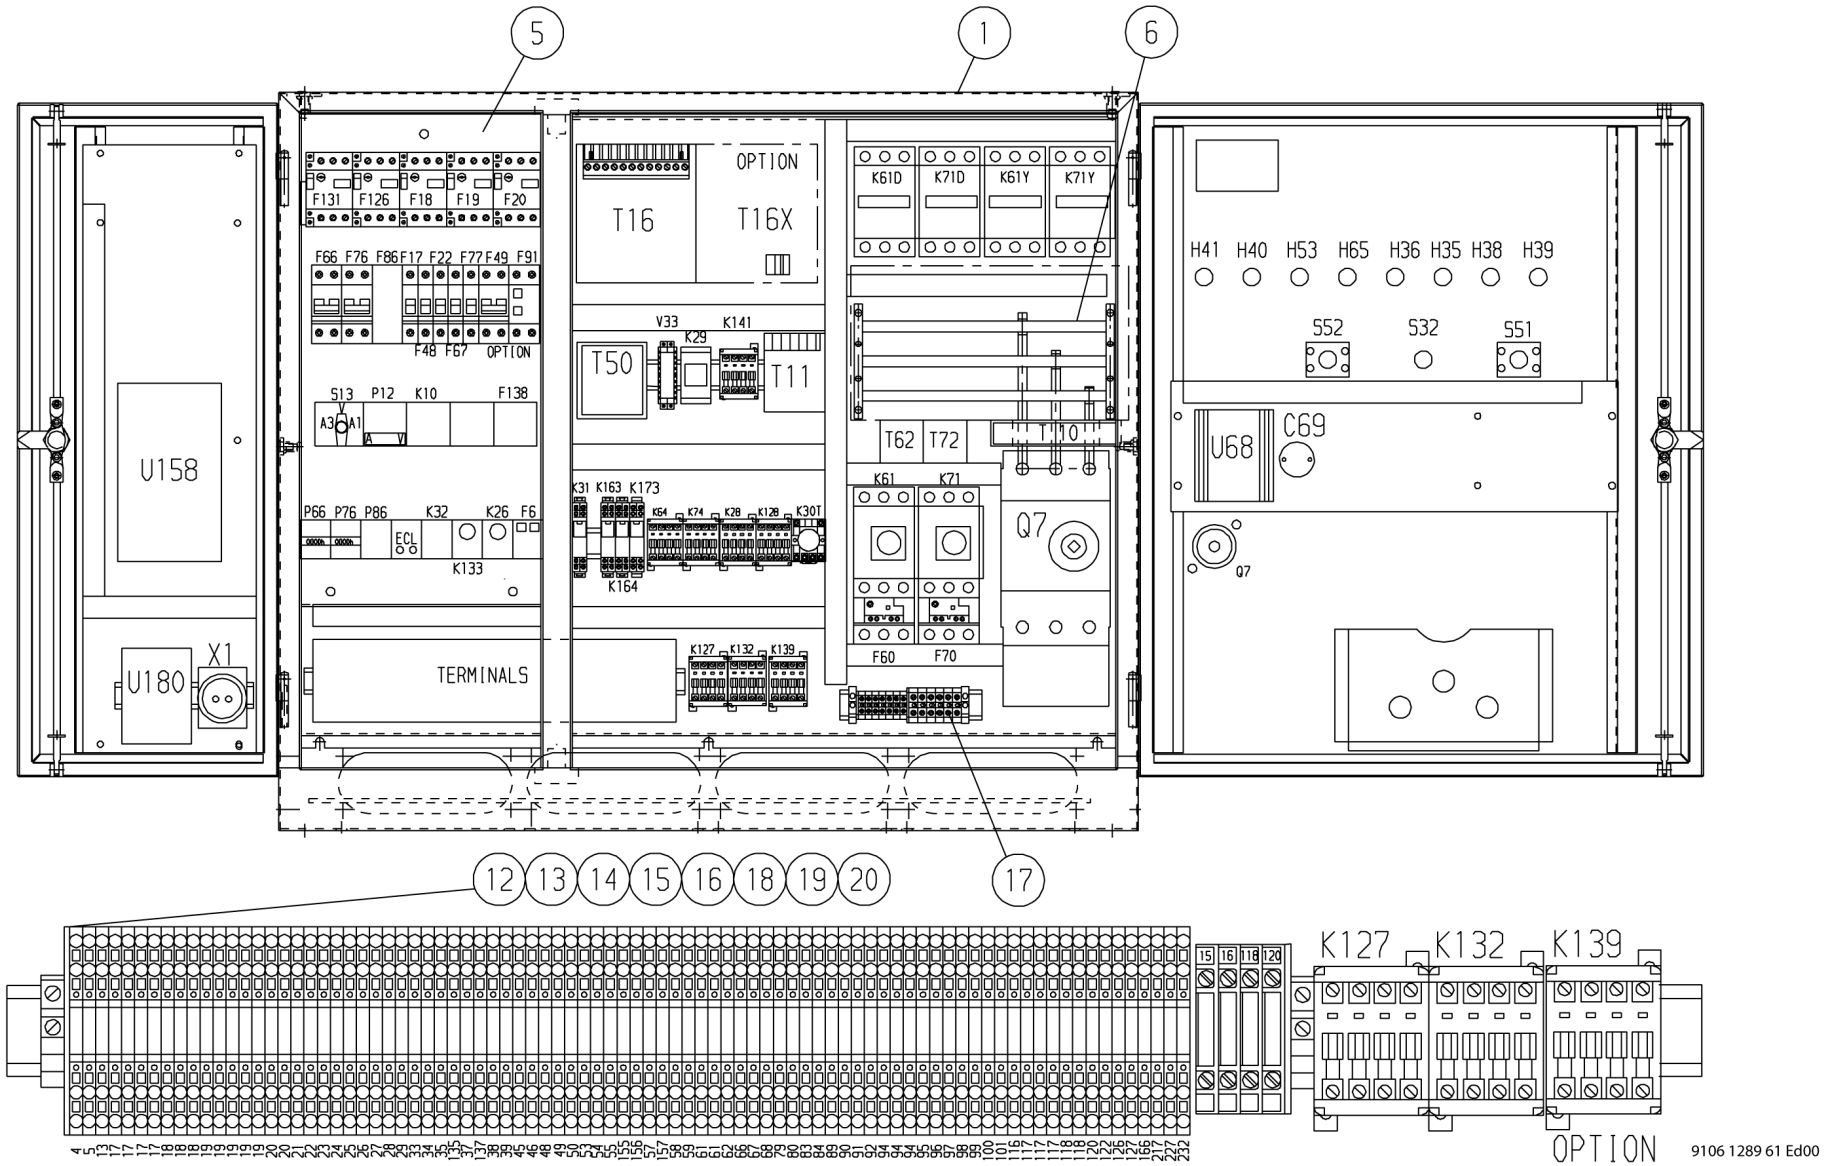
5
1
6
OPTION
T16
T16X
K61D
K71D
K61Y
K71Y
F131
F126
F18
F19
F20
F66 F76 F86 F17 F22 F77 F49 F91
F48 F67 OPTION
V33
K141
K29
T50
T11
513
P12
K10
F138
A3
A1
U158
T62
T72
K61
K71
Q7
P66 P76 P86
K32
K26
F6
ECL
K133
K31 K163 K173
K64
K74
K28
K128
K30T
K164
H41 H40 H53 H65 H36 H35 H38 H39
552
532
551
U68
C69
Q7
U180
X1
TERMINALS
K127
K132
K139
F60
F70
12
13
14
15
16
18
19
20
17
15
16
118
120
K127
K132
K139
OPTION
9106 1289 61 Ed00

B0027428


(Sheet 1 of 4)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1286 31	1	ELECTR.CABINET	ELSKÅP	Page 659	
5	9106 1286 44	1	TOUCH GUARD	BERÖRINGSSKYDD		
6	9106 1288 40	1	BUSBAR MODULE	SKENSYSTEMMODUL		
C 69	3176 4325 03	1	CAPACITOR	KONDENSATOR		
ECL	3217 9871 00	1	PULSE UNIT	PULSAGGREGAT		
F 6	3217 9311 55	1	MOTORPROTECTOR	MOTORSKYDDSBRYT		
F 17	3176 4492 01	1	MIN CIRC BREAK	AUTOMATSÄKRING		1-POL 6A
F 18	3217 9311 65	1	MOTORPROTECTOR	MOTORSKYDDSBRYT		
F 19	3217 9311 66	1	MOTORPROTECTOR	MOTORSKYDDSBRYT		
F 20	3217 9311 80	1	MOTORPROTECTOR	MOTORSKYDDSBRYT		
F 22	3176 4492 03	1	MIN CIRC BREAK	AUTOMATSÄKRING		1-POL 16A
F 48	3176 4492 03	1	MIN CIRC BREAK	AUTOMATSÄKRING		1-POL 16A
F 49	3176 4492 02	1	MIN CIRC BREAK	AUTOMATSÄKRING		1-POL 10A 10A
F 66	3176 4258 01	1	MIN CIRC BREAK	AUTOMATSÄKRING		2-POL. 6A G/U-CHARACT. *
F 67	3176 4492 22	1	MIN CIRC BREAK	AUTOMATSÄKRING		
F 76	3176 4258 01	1	MIN CIRC BREAK	AUTOMATSÄKRING		2-POL. 6A G/U-CHARACT. *
F 77	3176 4492 21	1	MIN CIRC BREAK	AUTOMATSÄKRING		
F 91	3217 9873 02	1	EARTHFAULTRELAY	JORDFELSRELÄ		
H 35	3217 0010 47	1	LAMP CALOTTE	LAMPKALOTT		
H 35	3217 0010 59	5	LAMP INSERT	LAMPINSATS		
H 35	3217 0010 72	6	INTERMED. PART	MELLANDEL		
H 36	3217 0010 47	1	LAMP CALOTTE	LAMPKALOTT		
H 38	3217 0010 47	1	LAMP CALOTTE	LAMPKALOTT		
H 39	3217 0010 47	1	LAMP CALOTTE	LAMPKALOTT		
H 53	3217 0010 45	1	LAMP CALOTTE	LAMPKALOTT		
H 53	3217 0010 61	1	LAMP INSERT	LAMPINSATS		
H 65	3217 0010 47	1	LAMP CALOTTE	LAMPKALOTT		
K 10	3217 9666 02	1	EARTHFAULTRELAY	JORDFELSRELÄ		CONTREL ELR-3C 110V 0.3A
K 26	3217 9708 06	1	PHASE SEQ.RELAY	FASFÖLJDSVAKT		3*200-500VAC CSA APPROVED
K 28	3035 3313 73	1	AUX. CONTACT	HJÄLPBLOCK		

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
K 28	3217 9787 53	1	RELAY	RELÄ		
K 28	9111 3734 31	1	TRANSIENT PROT.	TRANSIENTSKYDD		
K 29	3176 4108 00	1	DIODE	DIOD		
K 29	3176 4261 01	1	RELAY	RELÄ		INSTICKS- 11-POL
K 29	3176 4324 02	1	RELAY SOCKET	RELÄSOCKEL		SR3P-05 11-POLIG
K 30	3217 9787 53	1	RELAY	RELÄ		
K 30	9111 3734 31	1	TRANSIENT PROT.	TRANSIENTSKYDD		
K 30T	3217 9788 51	1	TIMING RELAY	TIDRELÄ		
K 31	3217 9583 03	1	RELAY	RELÄ		
K 32	3217 9299 05	1	TIMING RELAY	TIDRELÄ		
K 61	9106 1157 62	1	CONTACTOR	KONTAKTOR		
K 61	9111 3734 32	1	TRANSIENT PROT.	TRANSIENTSKYDD		110-250V VARISTOR
K 61D	9106 1157 62	1	CONTACTOR	KONTAKTOR		
K 61D	9111 3734 32	1	TRANSIENT PROT.	TRANSIENTSKYDD		110-250V VARISTOR
K 61DT	3217 9788 51	1	TIMING RELAY	TIDRELÄ		
K 61T	3217 9788 51	1	TIMING RELAY	TIDRELÄ		
K 61Y	9106 1157 61	1	CONTACTOR	KONTAKTOR		
K 61Y	9111 3734 32	1	TRANSIENT PROT.	TRANSIENTSKYDD		110-250V VARISTOR
K 64	3035 3313 73	1	AUX. CONTACT	HJÄLPBLOCK		
K 64	3217 9787 53	1	RELAY	RELÄ		
K 64	9111 3734 31	1	TRANSIENT PROT.	TRANSIENTSKYDD		
K 71	9106 1157 62	1	CONTACTOR	KONTAKTOR		
K 71	9111 3734 32	1	TRANSIENT PROT.	TRANSIENTSKYDD		110-250V VARISTOR
K 71D	9106 1157 62	1	CONTACTOR	KONTAKTOR		
K 71D	9111 3734 32	1	TRANSIENT PROT.	TRANSIENTSKYDD		110-250V VARISTOR
K 71DT	3217 9788 51	1	TIMING RELAY	TIDRELÄ		
K 71T	3217 9788 51	1	TIMING RELAY	TIDRELÄ		
K 71Y	9106 1157 61	1	CONTACTOR	KONTAKTOR		
K 71Y	9111 3734 32	1	TRANSIENT PROT.	TRANSIENTSKYDD		110-250V VARISTOR
K 74	3035 3313 73	1	AUX. CONTACT	HJÄLPBLOCK		
K 74	3217 9787 53	1	RELAY	RELÄ		
K 74	9111 3734 31	1	TRANSIENT PROT.	TRANSIENTSKYDD		


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
K127	9106 1157 05	1	CONTACTOR	KONTAKTOR		
K127	9111 3734 31	1	TRANSIENT PROT.	TRANSIENTSKYDD		
K128	9111 3734 10	1	RELAY	RELÄ		CA3KN40BD 24VDC
K128	9111 3734 30	1	TRANSIENT PROT.	TRANSIENTSKYDD		
K132	9106 1157 05	1	CONTACTOR	KONTAKTOR		
K132	9111 3734 31	1	TRANSIENT PROT.	TRANSIENTSKYDD		
K133	3217 9299 05	1	TIMING RELAY	TIDRELÄ		
K163	3217 9583 01	1	RELAY	RELÄ		IK 8701.12 24V DC D & S 24 VOLT 16A
K164	3217 9583 01	1	RELAY	RELÄ		IK 8701.12 24V DC D & S 24 VOLT 16A
P 12	3217 9277 37	1	VOLT METER	VOLTMETER		500V/5A
P 66	3217 9658 02	1	HOUR METER	TIMRÄKNARE		12-24V DC SKENMONT. *)
P 76	3217 9658 02	1	HOUR METER	TIMRÄKNARE		12-24V DC SKENMONT. *)
Q 7	9106 1125 50	1	MAIN SWITCH	HUVUDBRYTARE	Page 665	MG NS250-COIL 110V
S 13	3217 9841 11	1	SWITCH	STRÖMSTÄLLARE		
S 32	3217 0010 02	1	TRIGGER	TRYCKE		ZB5-AA2
S 32	3217 0010 72	1	INTERMED. PART	MELLANDEL		
S 32	3217 0010 73	1	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY OPEN
S 51	3217 9841 12	1	SWITCH	STRÖMSTÄLLARE		
S 52	3217 9841 12	1	SWITCH	STRÖMSTÄLLARE		
T 10	3217 9655 22	1	TRANSFORMER	TRANSFORMATOR		
T 11	3217 9512 02	1	TRANSFORMER	TRANSFORMATOR		400-690/110V 50VA
T 16	3217 9656 15	1	TRANSFORMER	TRANSFORMATOR		
T 50	3217 9789 02	1	TRANSFORMER	TRANSFORMATOR		500-1000V
T 62	3217 9655 10	1	TRANSFORMER	TRANSFORMATOR		
T 72	3217 9655 10	1	TRANSFORMER	TRANSFORMATOR		
U 68	3176 4329 05	1	RECTIFIER	LIKRIKTARE		
U 68	3176 4329 30	1	COOLING FLANGE	KYLFLÄNS		
U158	3217 9674 07	1	BATTERY CHARGER	BATTERILADDARE		
U180	9106 0713 01	1	POWER UNIT	STRÖMFÖRS.ENHET		
V 33	3176 4326 01	1	DIODE UNIT	DIODENHET		
X1	3176 4568 03	1	SOCKET OUTLET	STICKDOSA		

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
12	3176 4049 00	84	TERMINAL BLOCK	KOPPLINGSPLINT		ZDU 2.5/4AN
13	3176 4049 01	2	END PLATE	ÄNDPLATTA		FOR ZDU 2,5/4A
14	3176 4049 02	2	BRIDGE CONN.	ÖVERKOPPL.BLECK		10-POL
15	3176 4049 04	9	TERMINAL BLOCK	KOPPLINGSPLINT		
16	3176 4049 11	2	TERMINAL BLOCK	KOPPLINGSPLINT		
17	3176 4049 40	6	TERMINAL BLOCK	KOPPLINGSPLINT		
18	3176 4049 51	14	END SUPPORT	ÄNDSTÖD		TERMINAL MODULE
20	3176 4049 12	1	END PLATE	ÄNDPLATTA		
21	3176 4491 03	1	MARKING PLATE	MÄRKSKYLT		5FW 101-150
22	3176 4491 04	1	MARKING PLATE	MÄRKSKYLT		5FW 151-200
50	–	1	MARKING SET	MÄRKSATS		

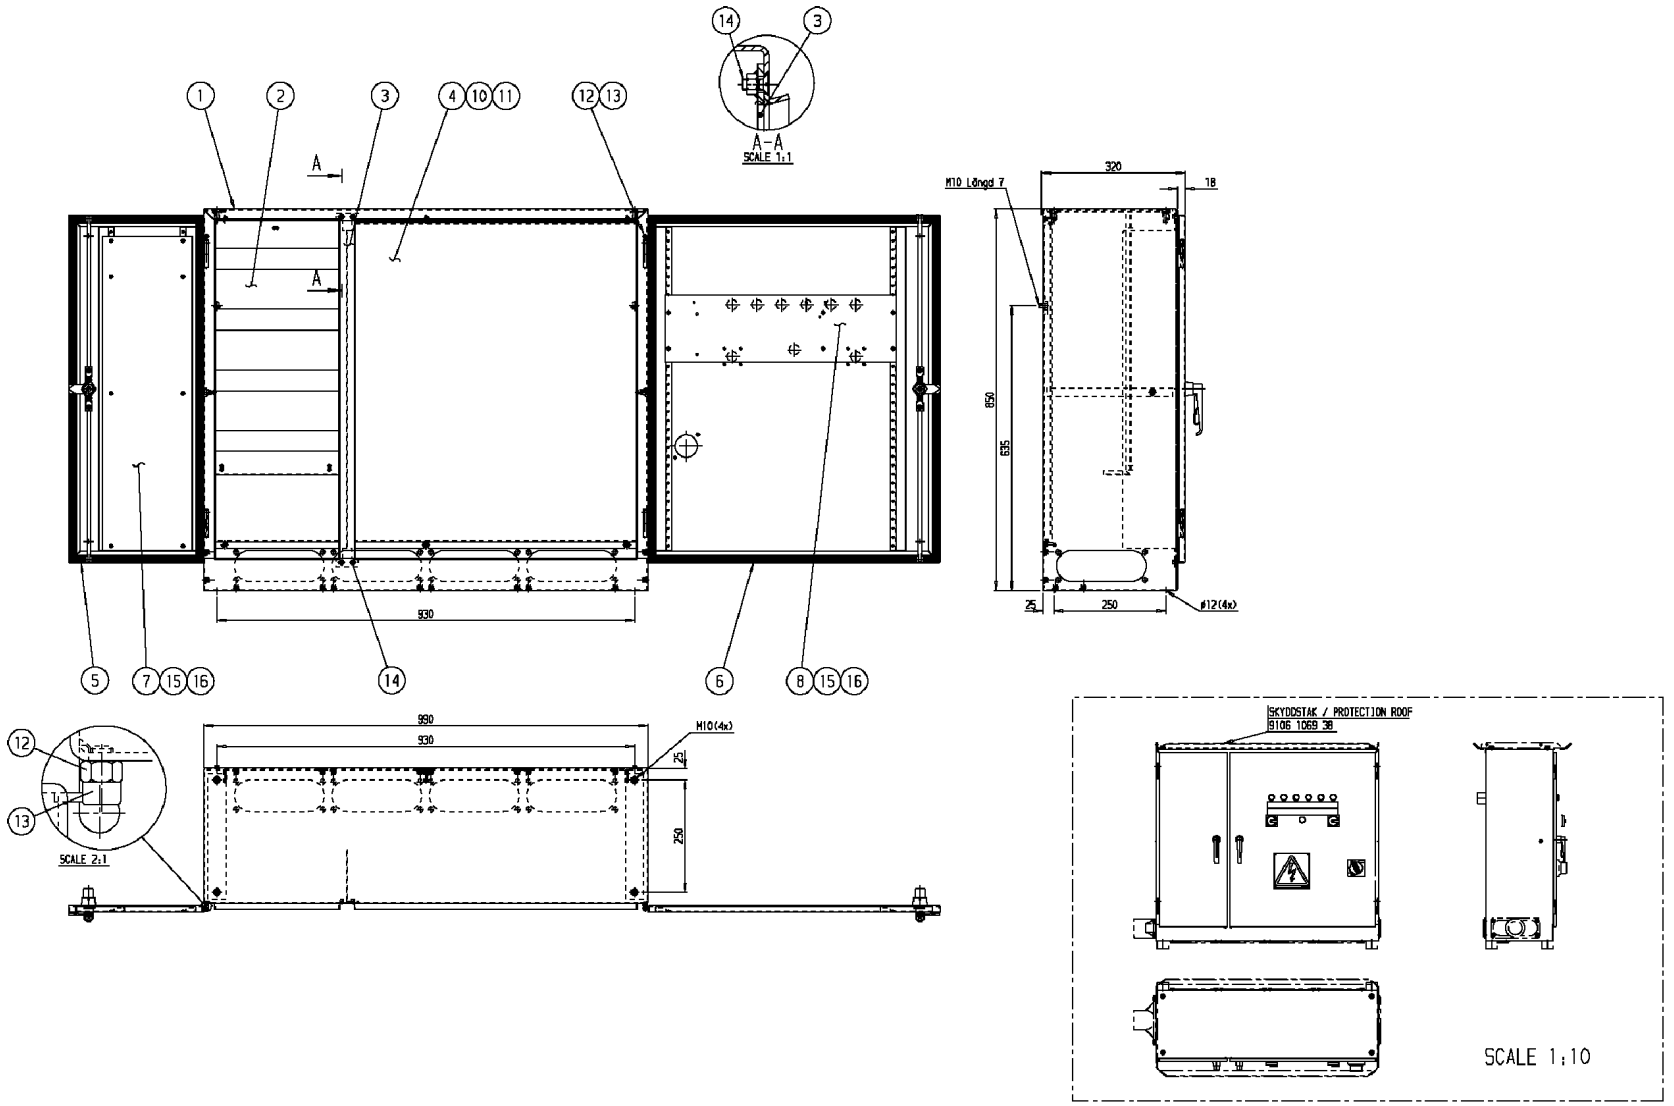


9106 1286 31/1 Ed01

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1286 40	1	CABINET	SKÅP		
2	9106 1286 44	1	TOUCH GUARD	BERÖRINGSSKYDD		
3	9106 1286 47	1	SLIDE	LIST		
4	–	1	MOUNTING PLATE	MONTERINGSPLÅT		
5	9106 1286 42	1	DOOR	DÖRR	Page 661	
6	9106 1286 41	1	DOOR	DÖRR	Page 663	
7	9106 1286 63	1	MOUNTING PLATE	MONTERINGSPLÅT		
8	9106 1286 64	1	MOUNTING PLATE	MONTERINGSPLÅT		
10	0301 2335 00	6	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
11	0266 2110 00	6	NUT	MUTTER		M 8 - 8 FZB
12	0266 2107 00	2	NUT	MUTTER		M 5 - 8 FZB
13	0211 1205 03	2	SCREW	SKRUV		MC6S M 5 X 12 - 8.8 FZB
14	0162 4205 00	4	SCREW, SLOTTED	SPÅRSKRUV		M 5 X 12 - 4.8 FZB
15	0226 0350 05	8	TAPPING SCREW	GÄNGANDE SKRUV		A M 5 8
16	0301 2318 00	8	PLAIN WASHER	RUNDBRICKA		5,3 / 10 X 1 - HB 200 FZB

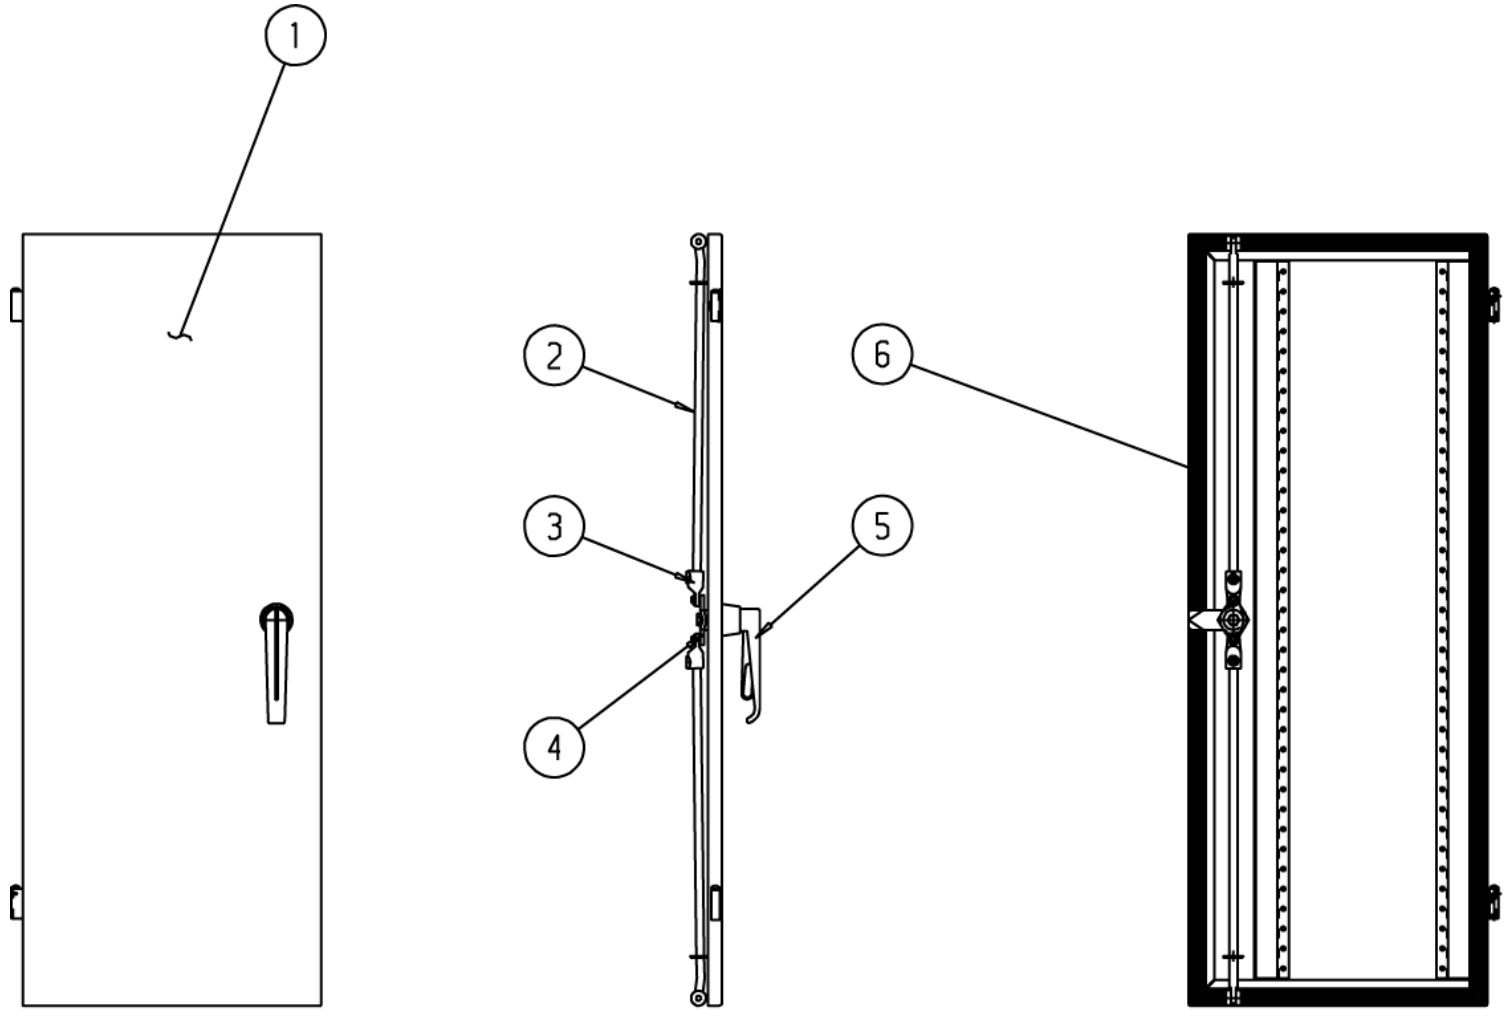

9106 1286 42 Ed01

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	DOOR	DÖRR		
2	9106 1120 14	2	ROD	STÅNG		
3	9106 1120 13	2	ADAPTER	ADAPTER		
4	9106 1120 09	1	LATCH	REGEL		
5	9106 1120 50	1	HANDLE	HANDTAG		
6	0090 7005 01	2.10M	RUBBERMOULDING	GUMMILIST		15 X 10 MTRL. = EPDM

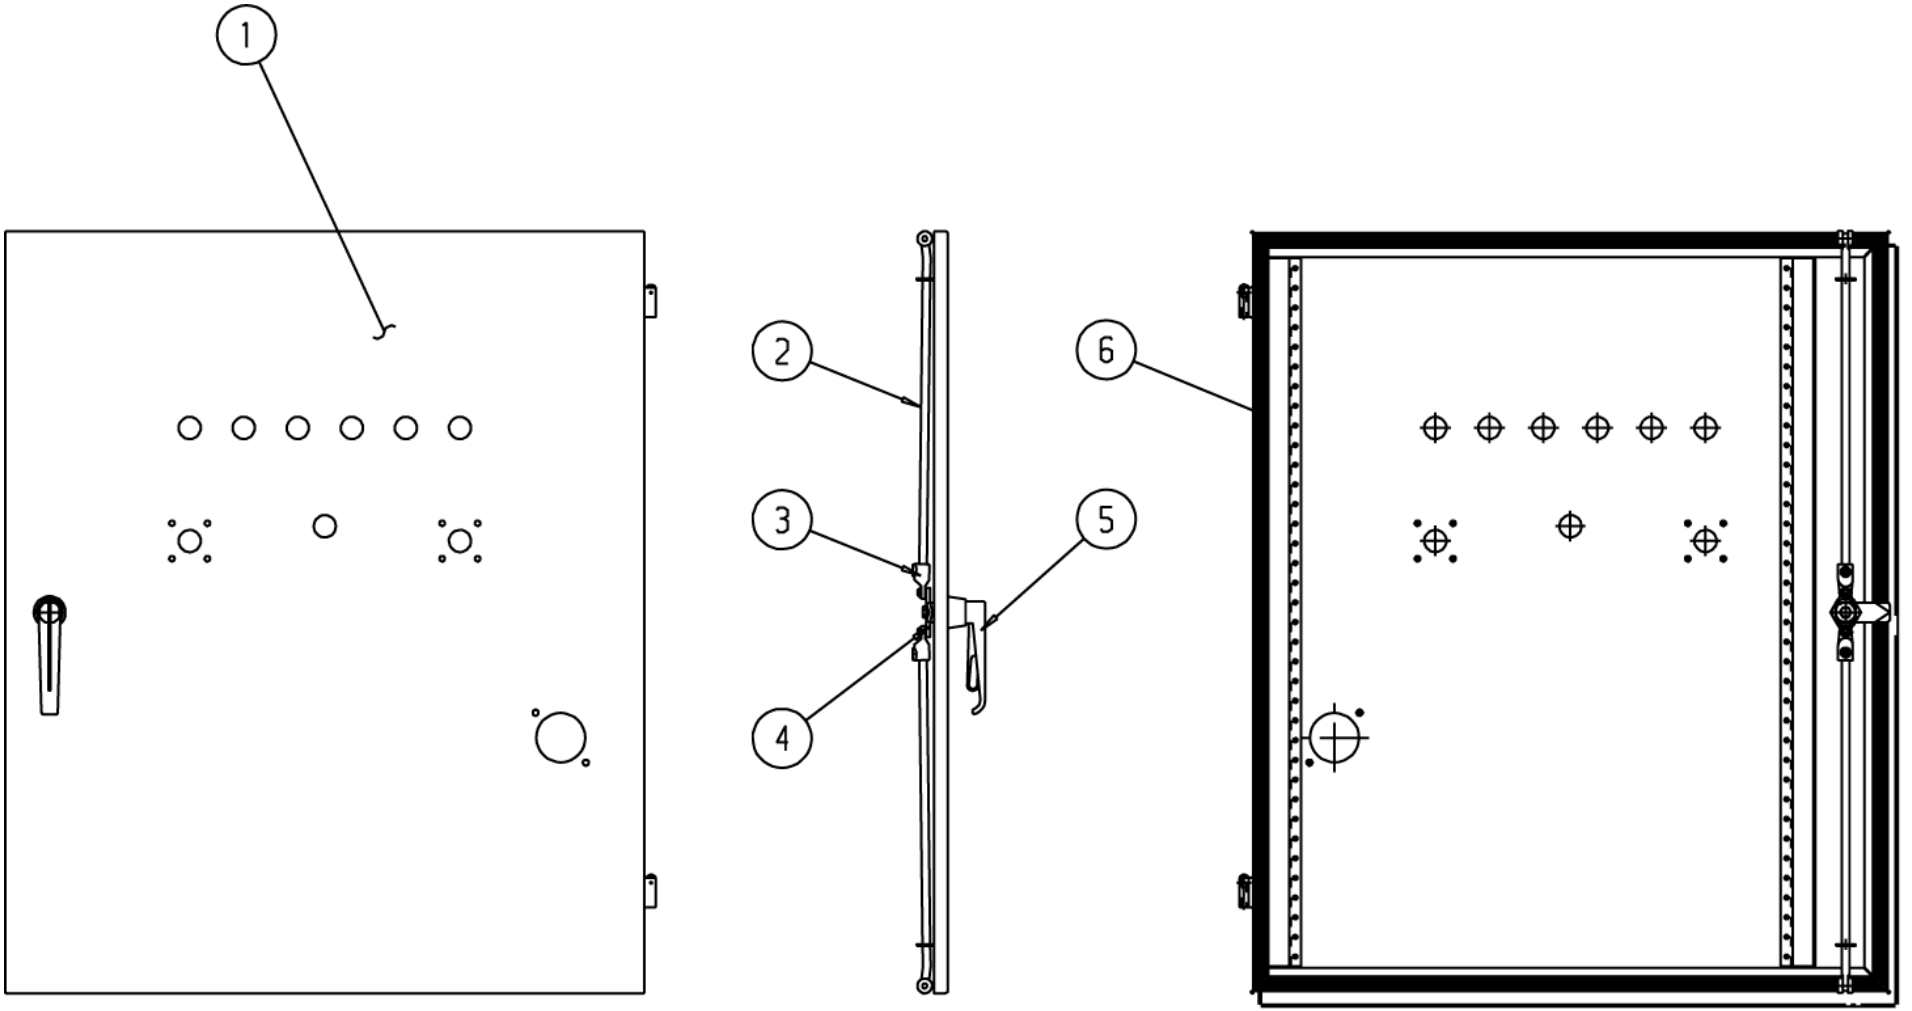

9106 1286 41 Ed01

B0012954


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1286 55	1	DOOR	DÖRR		
2	9106 1120 14	2	ROD	STÅNG		
3	9106 1120 13	2	ADAPTER	ADAPTER		
4	9106 1120 09	1	LATCH	REGEL		
5	9106 1120 50	1	HANDLE	HANDTAG		
6	0090 7005 01	2.80M	RUBBERMOULDING	GUMMILIST		15 X 10 MTRL. = EPDM

Name: Circuit breaker 3-pole Max 250A 690V
Benämning: Effektbrytare 3-polig

Manufakture:
Fabrikat: MERLIN GERIN

Supplier:
Leverantör: SCNEIDER ELECTRIC AB

	(1) Breaker Brytare	(2) Shortcircuit protection Magnetiskt skydd	(3) Prot. cover Beröringsskydd	(4) Auxilliary contacts Hjälp kontakter	(5) Under voltage coil Undersp. spole	(6) Handle Handtag
Typ:	NS250		.		110V 50/60 Hz	.
MG/no:	31403	31500	29323	29450	29406	29338

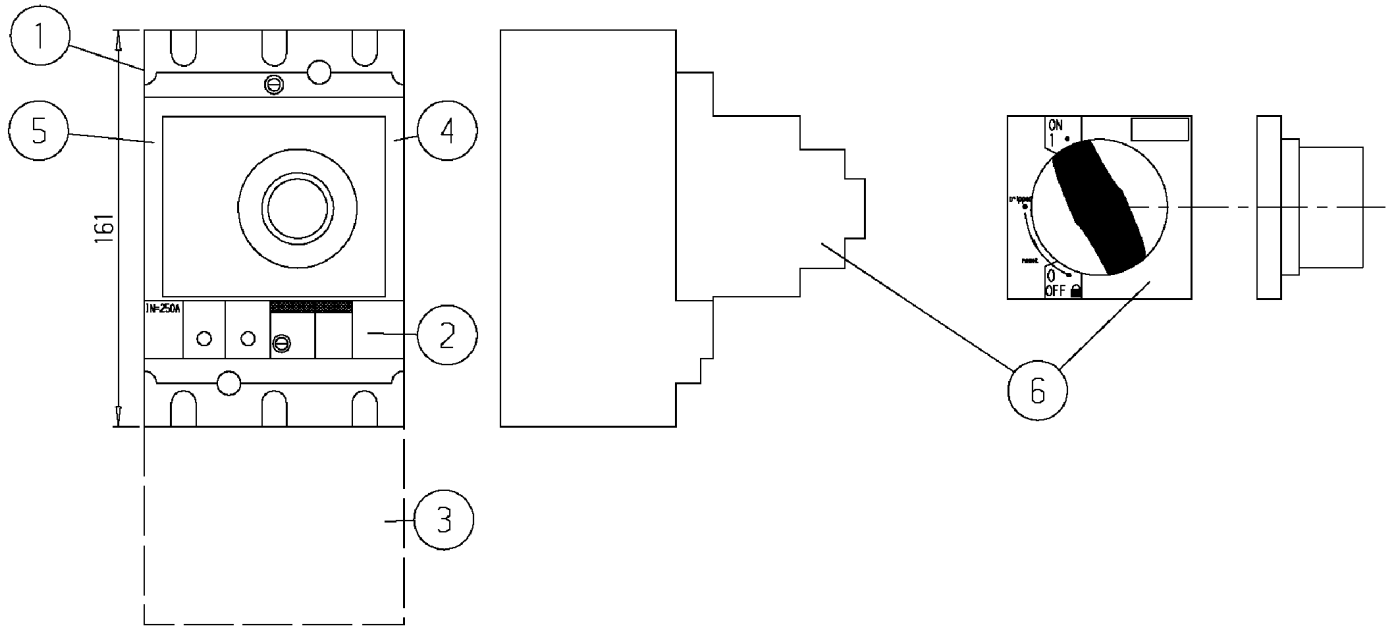


9106 1125 50/1 Ed00

B0004735

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1125 20	1	CONTACT BREAKER	BRYTARE		
2	9106 1125 21	1	TRIGGER	UTLÖSARE		
3	9106 1125 12	1	PROTECTION	SKYDD		
4	9106 1125 13	1	CONTACT BLOCK	KONTAKTBLOCK		
5	9106 1125 15	1	COIL	SPOLE		
6	9106 1125 16	1	PALM GRIP	VRED		
7	9106 1125 35	1	CABEL LUG SET	KABELSKOSATS		

X0000000

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0001 14	1	LIGHT EMIT. DIO	LYSDIOD		
2	0698 5140 61	1	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1

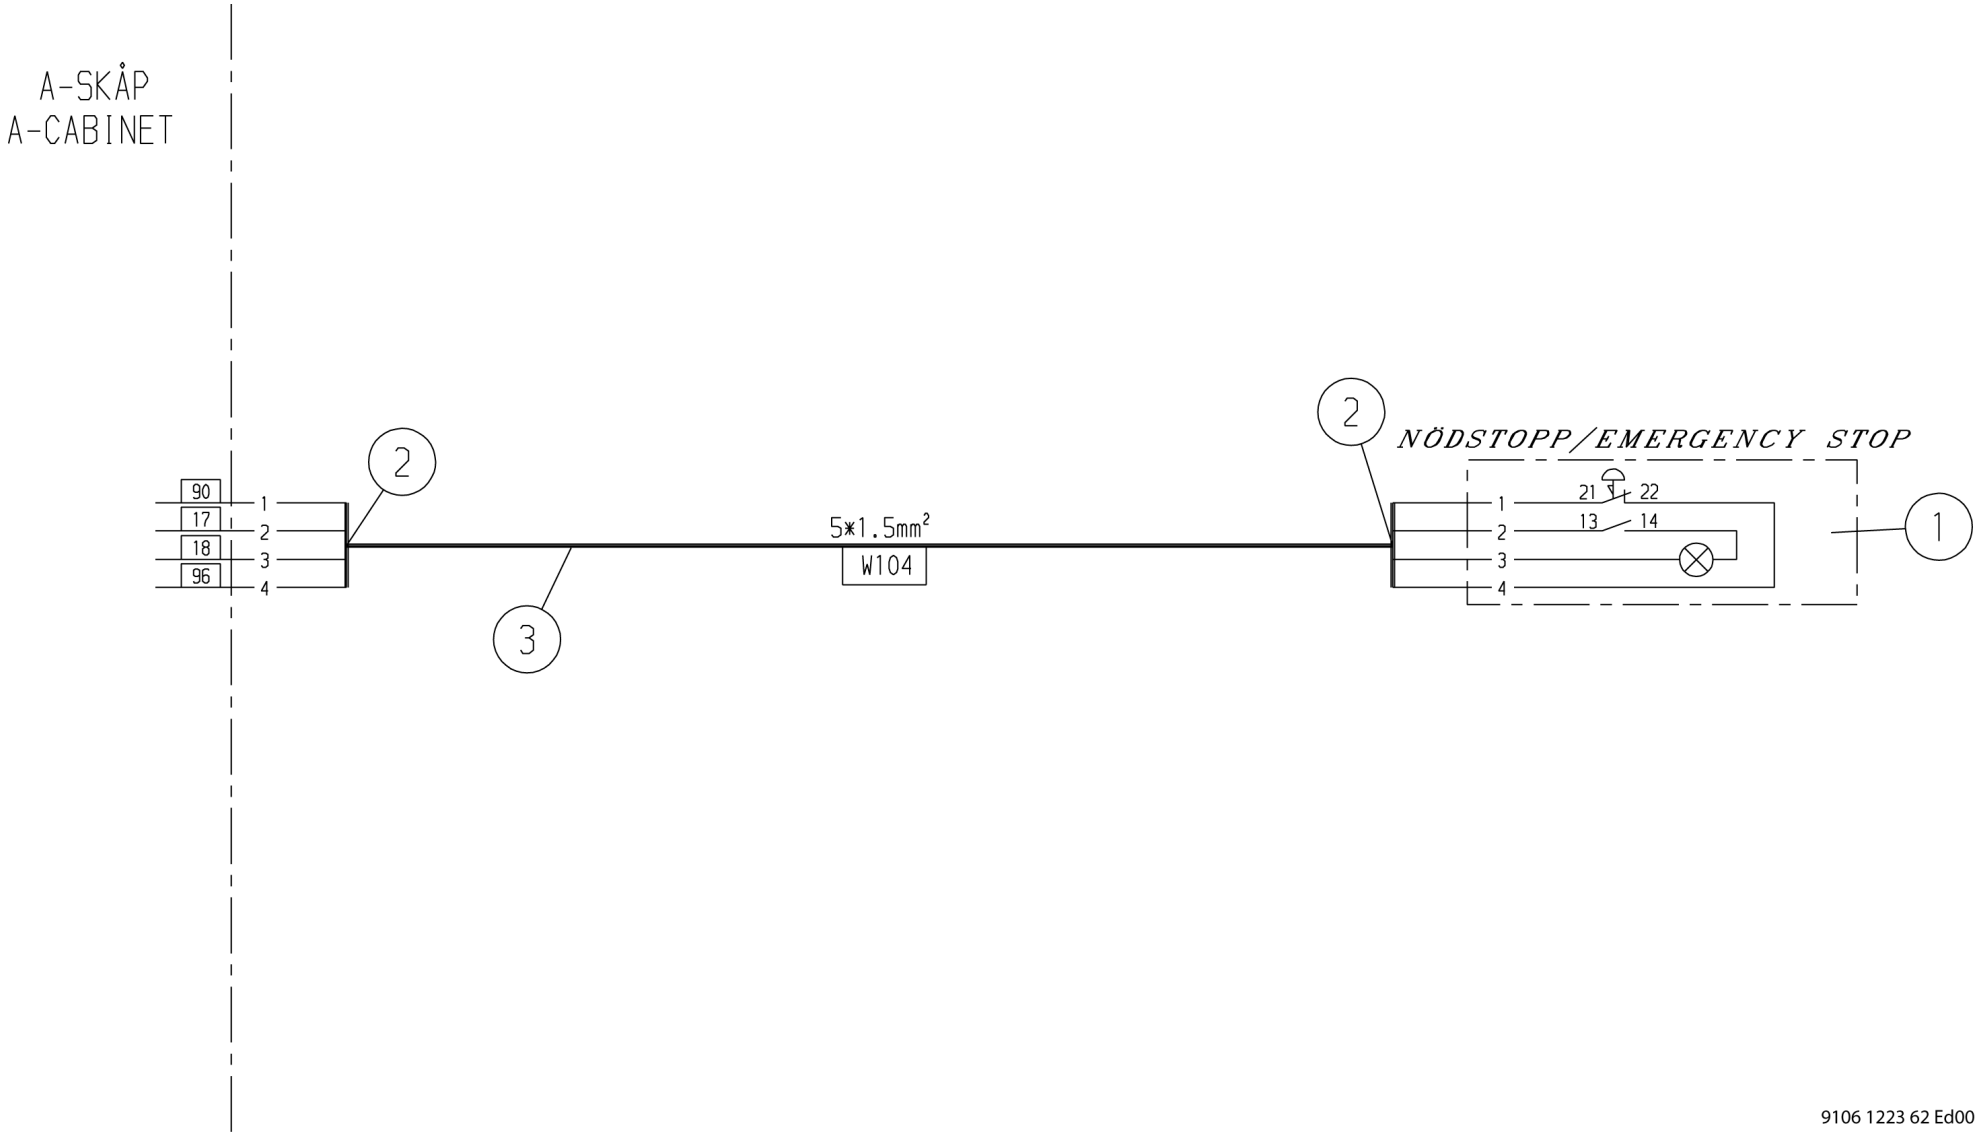


9106 1223 62 Ed00

B0024577

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 0011 09	1	EMERG. STOP BOX	NÖDSTOPPSLÅDA	Page 667	
2	0698 5140 61	1	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
3	9111 3891 10	7M	CABLE, 5-CORE	KABEL, 5-LEDARE		150 5G1.5 D2=9.8

VOLT KIT / VOLTSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	THERMAL RELAYS	TERMISKA RELÄER	Page 673	
2	9106 1089 03	2	ELECTRIC MOTOR	ELMOTOR		
3	9106 1069 05	2	SPACER TUBE	DISTANSRÖR		
4	0544 1100 11	2	GREASE NIPPLE	SMÖRJNIPPEL		CH M 6 SMS 1568
5	3217 9255 90	1	WATER PUMP	VATTENPUMP	Page 675	
6	3217 9561 04	1	ELECTRIC MOTOR	ELMOTOR		5,5KW 500VD 50HZ
7	8115 4705 96	1	COMPRESSOR	KOMPRESSOR		LE10 SEE 2930 1401 00-PDF

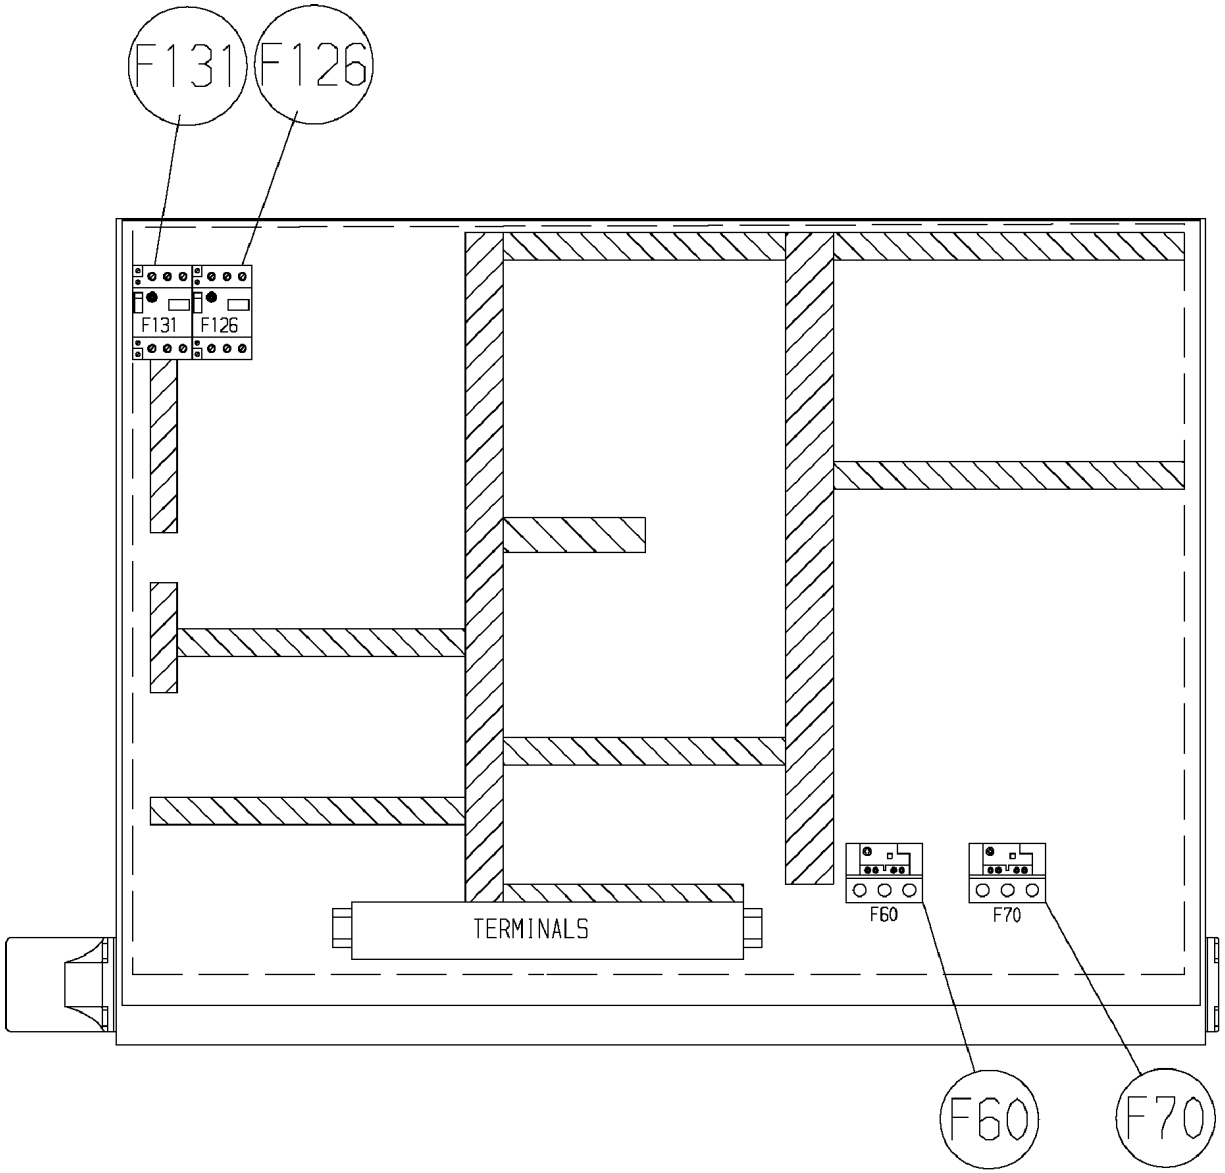


9106 1130 09/1 Ed01

B0001721

THERMAL RELAYS / TERMISKA RELÄER

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
F 60	3217 9904 96	1	OVERLOAD RELAY	ÖVERSTRÖMSRELÄ		
F 70	3217 9904 96	1	OVERLOAD RELAY	ÖVERSTRÖMSRELÄ		
F126	3217 9311 61	1	MOTORPROTECTOR	MOTORSKYDDSBRYT		GV2M16 9-14AMP
F126	3217 9311 70	1	AUX. CONTACTS	HJÄLPKONTAKTER		
F131	3217 9311 60	1	MOTORPROTECTOR	MOTORSKYDDSBRYT		
F131	3217 9311 70	1	AUX. CONTACTS	HJÄLPKONTAKTER		

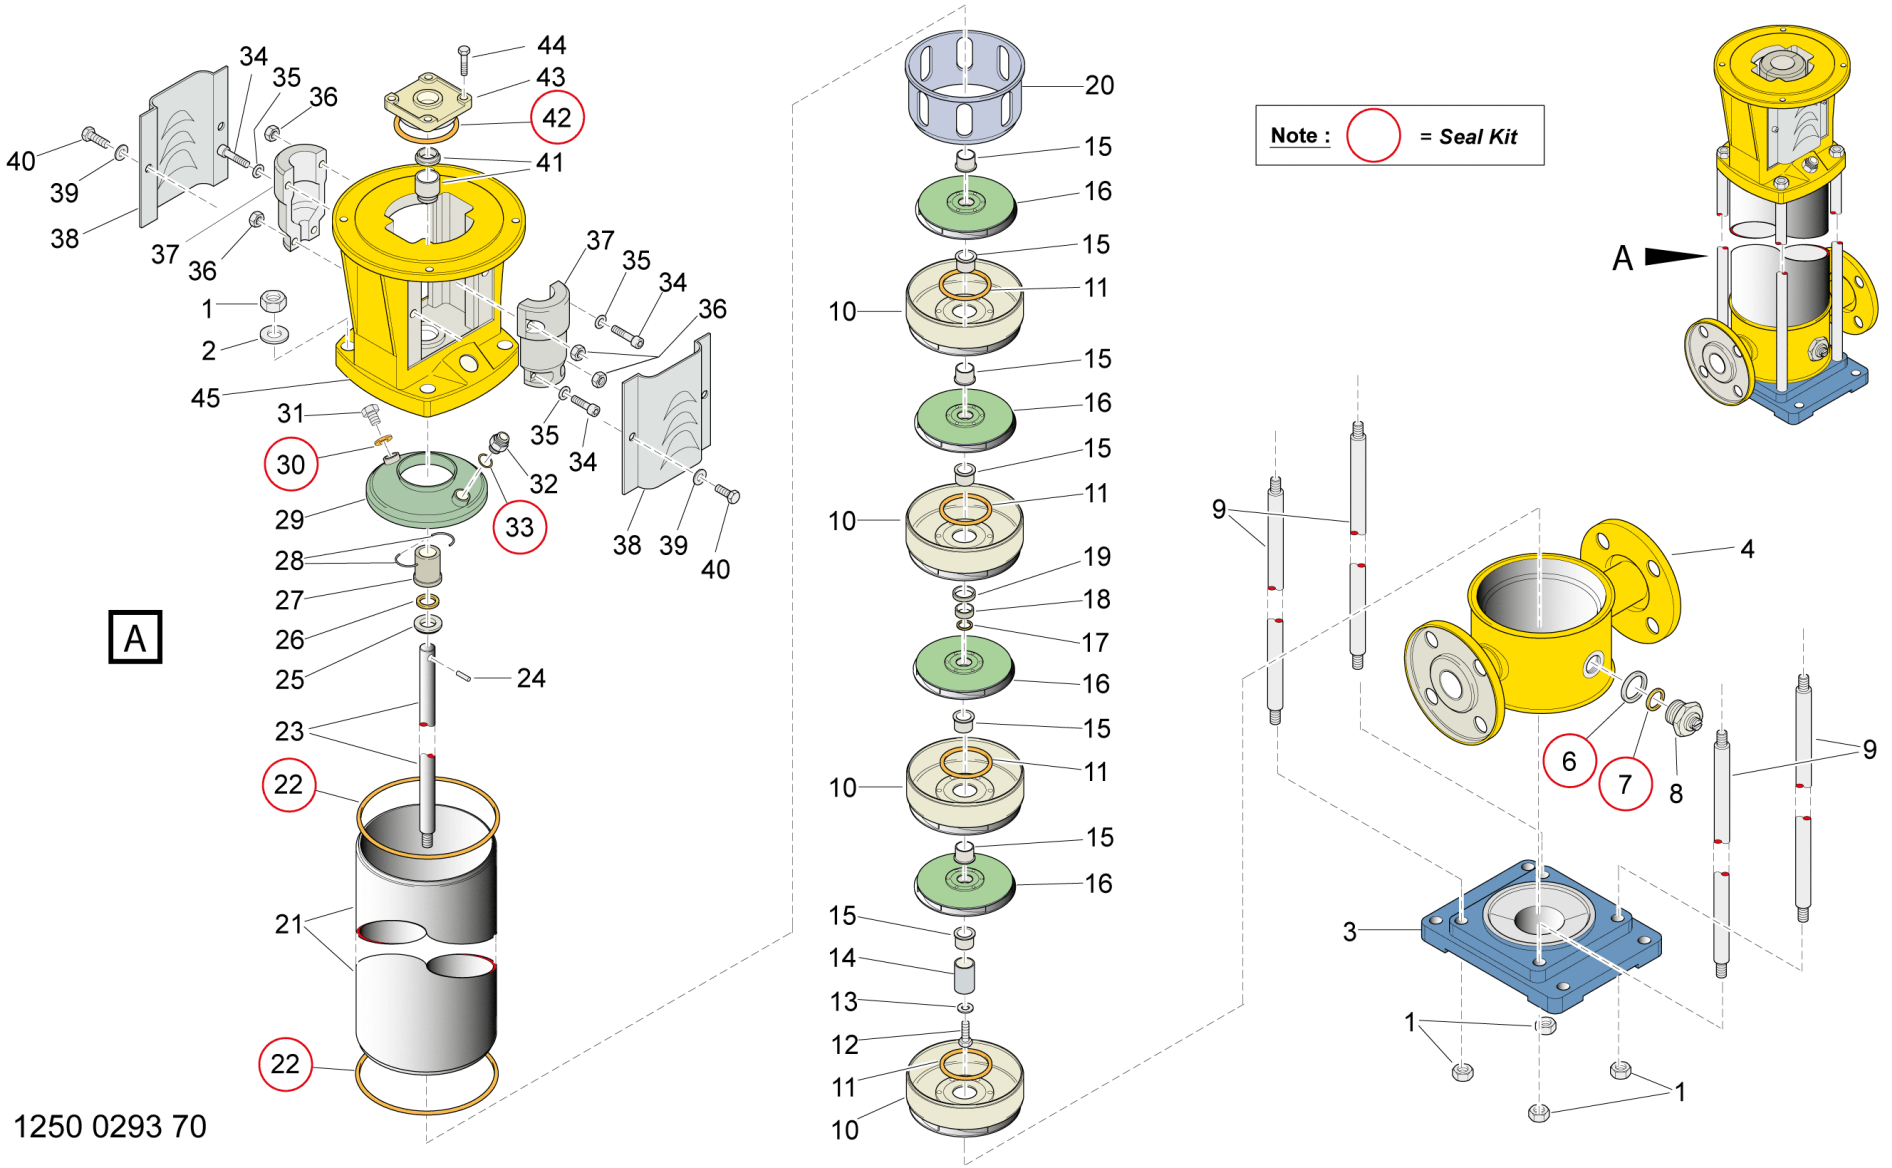
Note : = Seal Kit
A
1250 0293 70
B0056874

WATER PUMP / VATTENPUMP

3217 9255 90


(Sheet 1 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	–	1	EXPLODED VIEW	SPRÄNGBILD		
	3217 9174 07	1	SEAL KIT	TÄTNINGSSATS		INCL.POS.6,7,22(2X),30,33,42
	3218 2008 69	1	SHAFT SEAL	AXELTÄTNING		INCL.POS 41,42
1	–	8	NUT	MUTTER		NOT SOLD SEPARATELY
2	–	4	WASHER	BRICKA		NOT SOLD SEPARATELY
3	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
4	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
6	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
7	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
8	–	1	PLUG	PLUGG		NOT SOLD SEPARATELY
9	–	4	PULL ROD	DRAGSTÅNG		NOT SOLD SEPARATELY
10	–	1	DIFFUSOR	DIFFUSOR		NOT SOLD SEPARATELY
11	–	1	RING	RING		NOT SOLD SEPARATELY
12	–	1	SCREW	SKRUV		NOT SOLD SEPARATELY
13	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY
14	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
15	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
16	–	1	IMPELLER	PUMPHJUL		NOT SOLD SEPARATELY
17	–	1	RING	RING		NOT SOLD SEPARATELY
18	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
19	–	1	SPACER	DISTANS		NOT SOLD SEPARATELY
20	–	1	SPACER	DISTANS		NOT SOLD SEPARATELY
21	–	1	TUBE	RÖR		NOT SOLD SEPARATELY
22	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
23	–	1	SHAFT	AXEL		NOT SOLD SEPARATELY
24	–	1	LOCKING CLIP	LÅSSPRINT		NOT SOLD SEPARATELY
25	–	2	SPACER	DISTANS		NOT SOLD SEPARATELY
26	–	1	WASHER	BRICKA		NOT SOLD SEPARATELY
27	–	1	SLEEVE	HYLSA		NOT SOLD SEPARATELY
28	–	1	LOCK RING	LÅSRING		NOT SOLD SEPARATELY
29	–	1	DISK	SKIVA		NOT SOLD SEPARATELY
30	–	1	O-RING	O-RING		NOT SOLD SEPARATELY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
31	–	1	PLUG	PLUGG		NOT SOLD SEPARATELY
32	–	1	PLUG	PLUGG		NOT SOLD SEPARATELY
33	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
34	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
35	–	4	WASHER	BRICKA		NOT SOLD SEPARATELY
36	–	4	NUT	MUTTER		NOT SOLD SEPARATELY
37	–	2	COUPLING HALF	KOPPLINGSHALVA		NOT SOLD SEPARATELY
38	–	1	PROTECTION	SKYDD		NOT SOLD SEPARATELY
39	–	4	WASHER	BRICKA		NOT SOLD SEPARATELY
40	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY
41	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
42	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
43	–	1	COVER	LOCK		NOT SOLD SEPARATELY
44	–	4	SCREW	SKRUV		NOT SOLD SEPARATELY

EMC-SET / EMC-SATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
653	–	1	EMC-SET	EMC-SATS		EMC-CORDS
654	–	1	EMC-SET	EMC-SATS	Page 681	

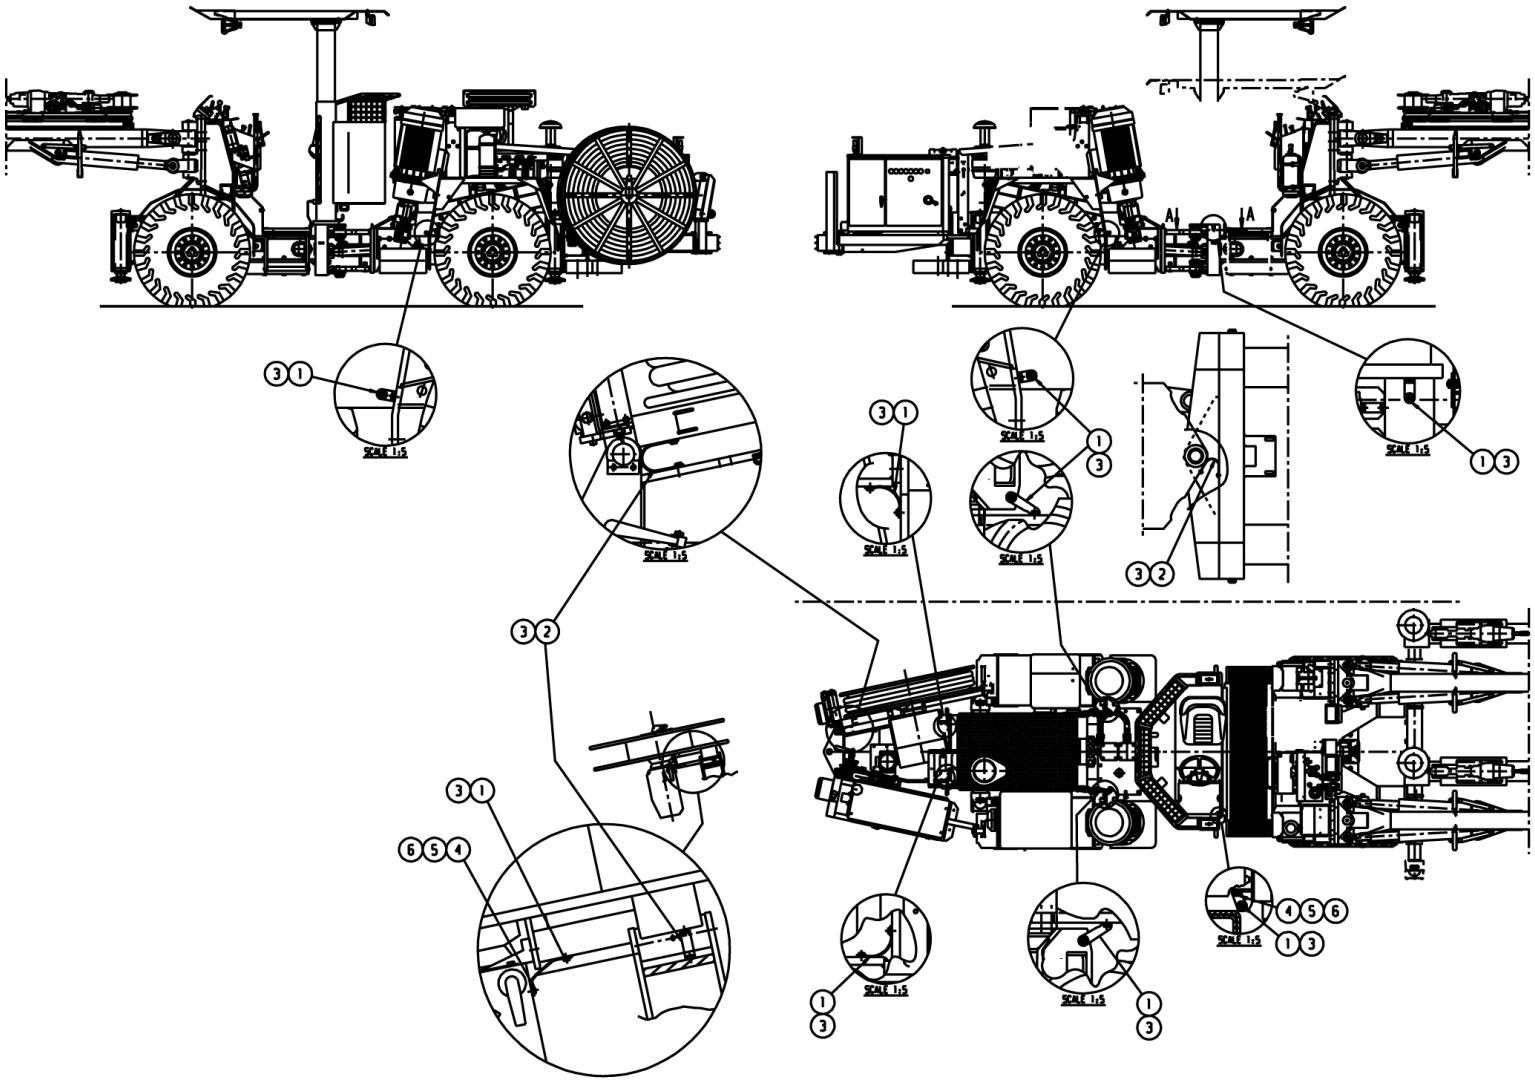


9111 3900 07/1 Ed00

B0010656

EMC-SET / EMC-SATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3222 3048 80	8	GROUND BRAID	JORDFLÄTA		
2	3222 3048 78	2	GROUND BRAID	JORDFLÄTA		
3	0226 0310 00	18	TAPPING SCREW	GÄNGANDE SKRUV		M6SF M 6 X 10 - 8.8 FZB
4	0147 1323 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 20 -8.8 FZB
5	0291 1128 18	2	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
6	0301 2335 00	4	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB

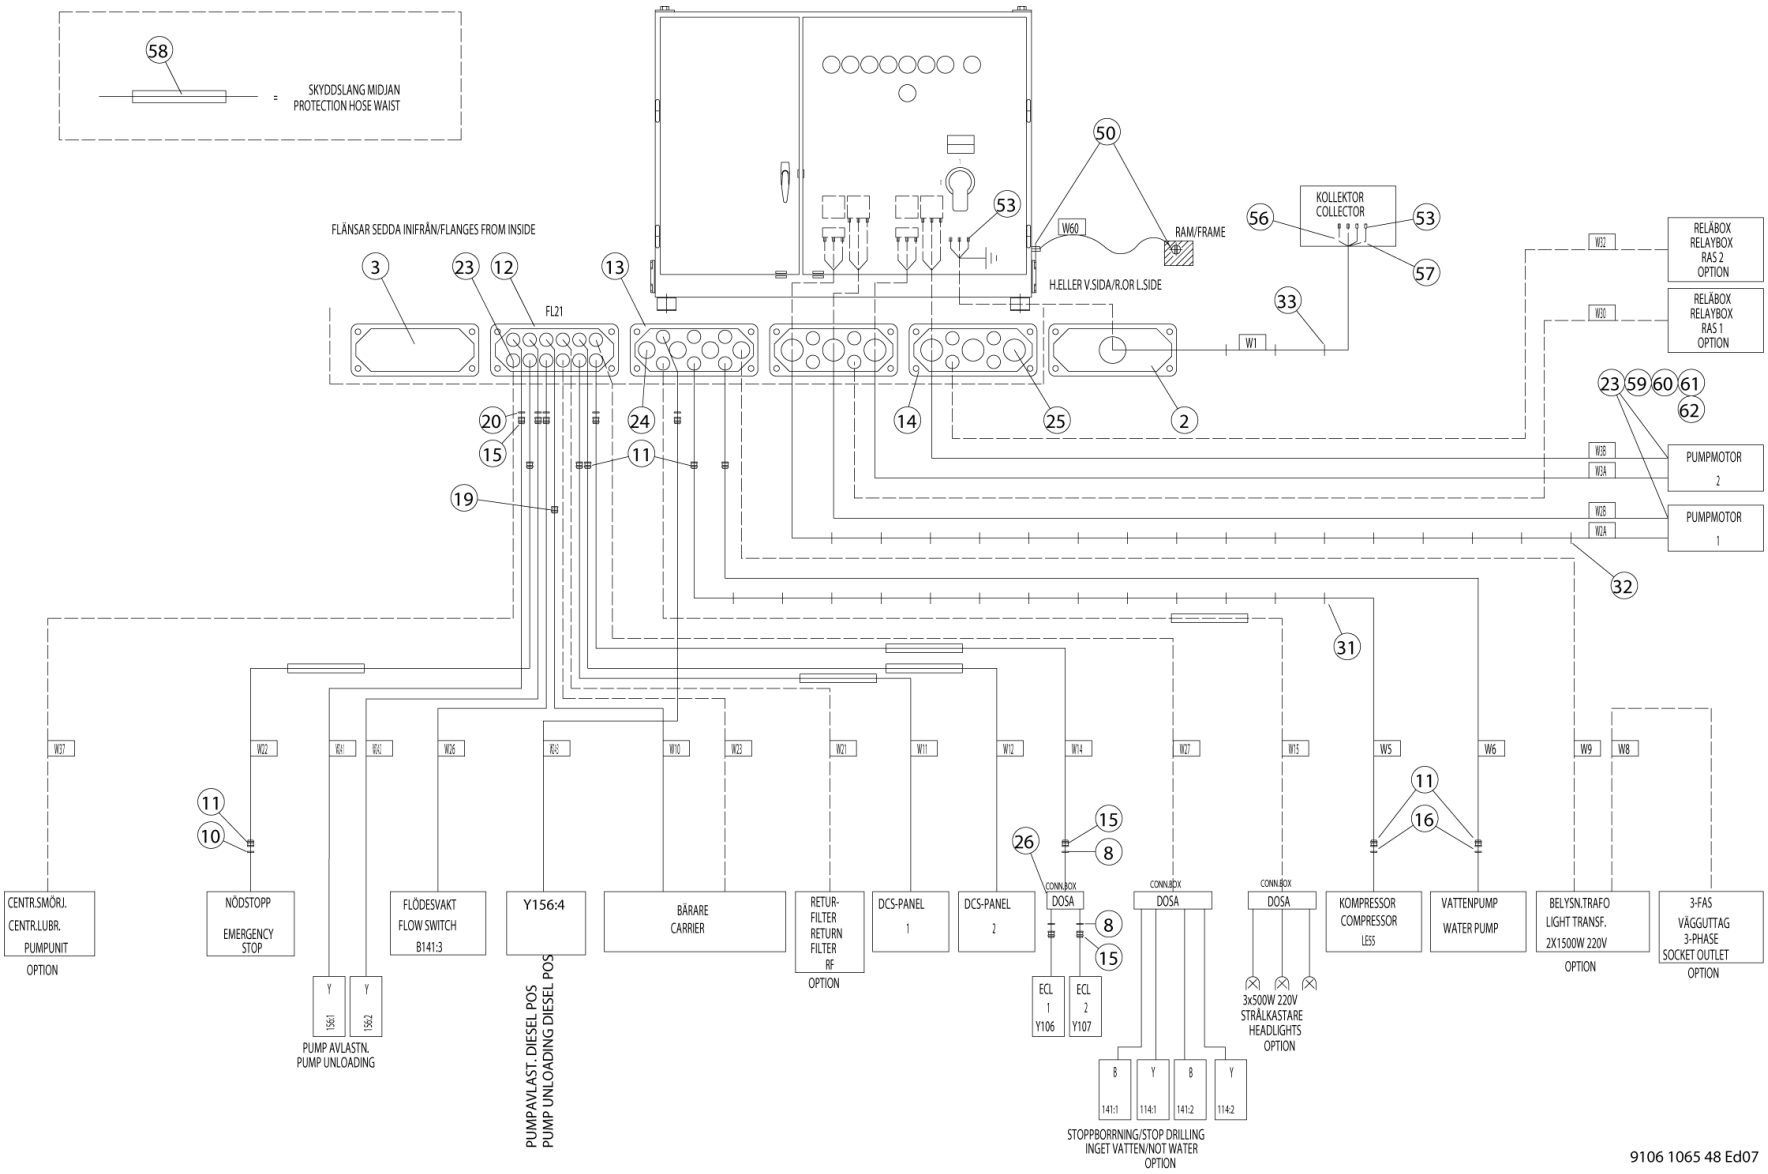
58
SKYDDSLANG MIDJAN
PROTECTION HOSE WAIST
FLÄNSAR SEDDA INIFRÅN/FLANGES FROM INSIDE
FL21
H.ELLER V.SIDA/R.OR L.SIDE
W60
RAM/FRAME
KOLLEKTOR
COLLECTOR
W1
W22
W20
RELÄBOX
RELAYBOX
RAS 2
OPTION
RELÄBOX
RELAYBOX
RAS 1
OPTION
W3B
W3A
PUMPMOTOR
2
W2B
W2A
PUMPMOTOR
1
W37
W22
W26
W10
W23
W21
W11
W12
W14
W27
W15
W5
W6
W9
W8
CENTR.SMÖRJ.
CENTR.LUBR.
PUMPUNIT
OPTION
NÖDSTOPP
EMERGENCY
STOP
FLÖDESVAKT
FLOW SWITCH
B141:3
Y156:4
BÄRARE
CARRIER
RETUR-
FILTER
RETURN
FILTER
RF
OPTION
DCS-PANEL
1
DCS-PANEL
2
CONN.BOX
DOSA
CONN.BOX
DOSA
CONN.BOX
DOSA
KOMPRESSOR
COMPRESSOR
LESS
VATTENPUMP
WATER PUMP
BELYSN.TRAFO
LIGHT TRANSF.
2X1500W 220V
OPTION
3-FAS
VÄGGUTTAG
3-PHASE
SOCKET OUTLET
OPTION
Y
156:1
Y
156:2
PUMP AVLASTN.
PUMP UNLOADING
PUMPAVLAST. DIESEL POS
PUMP UNLOADING DIESEL POS
ECL
1
Y106
ECL
2
Y107
3x500W 220V
STRÅLKASTARE
HEADLIGHTS
OPTION
B
141:1
Y
114:1
B
141:2
Y
114:2
STOPPBORRNING/STOP DRILLING
INGET VATTEN/NOT WATER
OPTION
9106 1065 48 Ed07

B0015507

ELECTRIC SET / ELSATS

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
A01	–	1	MARKING SET	MÄRKSATS		
1	–	1	CABLE SET	KABELSATS	Page 687	
2	9106 1752 10	1	FLANGE	FLÄNS		
3	3217 9876 15	5	FLANGE	FLÄNS		
4	5112 3170 31	1	WASHER	PLÅTBRICKA		
7	–	1	FLANGE SET	FLÄNSSATS	Page 689	
8	0697 9745 66	3	ADAPTER	ADAPTER		PG 11 - M 16X1,5
10	0697 9809 14	1	LOCK NUT	LÅSMUTTER		M20X1,5 A3
11	0698 5140 61	8	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
12	9106 1752 00	1	FLANGE	FLÄNS		
13	9106 1752 01	1	FLANGE	FLÄNS		
14	9106 1752 02	2	FLANGE	FLÄNS		
15	0698 5140 60	8	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
16	0697 9745 44	2	ADAPTER	ADAPTER		PG 16 - M 20X1,5
19	3176 4221 32	1	CABLE GLAND	KABELFÖRSKRUVN.		
20	0697 9745 71	5	REDUCER	REDUCERING		A3 M 20X1,5 M 16X1,5 6 15
23	0697 9810 19	16	END PLUG	AVSLUTN.PROPP		M20X1,5 A3
24	0697 9810 20	4	END PLUG	AVSLUTN.PROPP		M25X1,5 A3
25	0697 9810 21	2	END PLUG	AVSLUTN.PROPP		M32X1,5 A3
26	0698 5205 00	1	JUNCTION BOX	KOPPLINGSDOSA		3XPG11-PR18,6 77X90MM
30	0346 1002 01	10	PIPE CLAMP	RÖRKLAMMA		D=8 NORMA TYP RSGU RUBBER-COVERED
31	0346 1002 03	20	PIPE CLAMP	RÖRKLAMMA		D=12 NORMA TYP RSGU D=12 NORMA TYP RSGU
32	0346 1002 43	20	PIPE CLAMP	RÖRKLAMMA		D=19 NORMA TYP RSGU
33	–	1	CABLE CONNEC	KABELFÄSTE	Page 691	
34	0347 6103 00	1	HOSE CLIP	SLANGKLÄMMA		12,7 - 16 FZB
40	0147 1359 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 16 - 8.8 FZB
43	0226 0351 01	4	TAPPING SCREW	GÄNGANDE SKRUV		MC6S M 5 X 20 - 5.8 FZB MC6S M5X20-5.8 FZB
44	0226 0351 07	56	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
50	0694 5110 22	2	CABLE LUG	KABELSKO		RAK 50/M10

ELECTRIC SET / ELSATS

(Sheet 2 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
53	0694 5110 30	7	CABLE LUG	KABELSKO		RAK 95/M8
56	0070 4024 06	2M	PROTECTION HOSE	SKYDDSSLANG		PVC-SLANG 24X26MM BLACK
57	0070 4024 10	1	PROTECTION HOSE	SKYDDSSLANG		PVC-SLANG 24X26MM GR/YEL
58	3176 0029 63	5M	PROTECTION HOSE	SKYDDSSLANG		
59	3217 9401 07	2	FLANGE	FLÄNS		
60	0697 9745 29	4	REDUCER	REDUCERING		A3 M 40X1,5 M 32X1,5
61	0697 9810 22	2	END PLUG	AVSLUTN.PROPP		M40X1,5 A3
62	0697 9810 18	2	END PLUG	AVSLUTN.PROPP		M16X1,5 A3

CABLE SET / KABELSATS

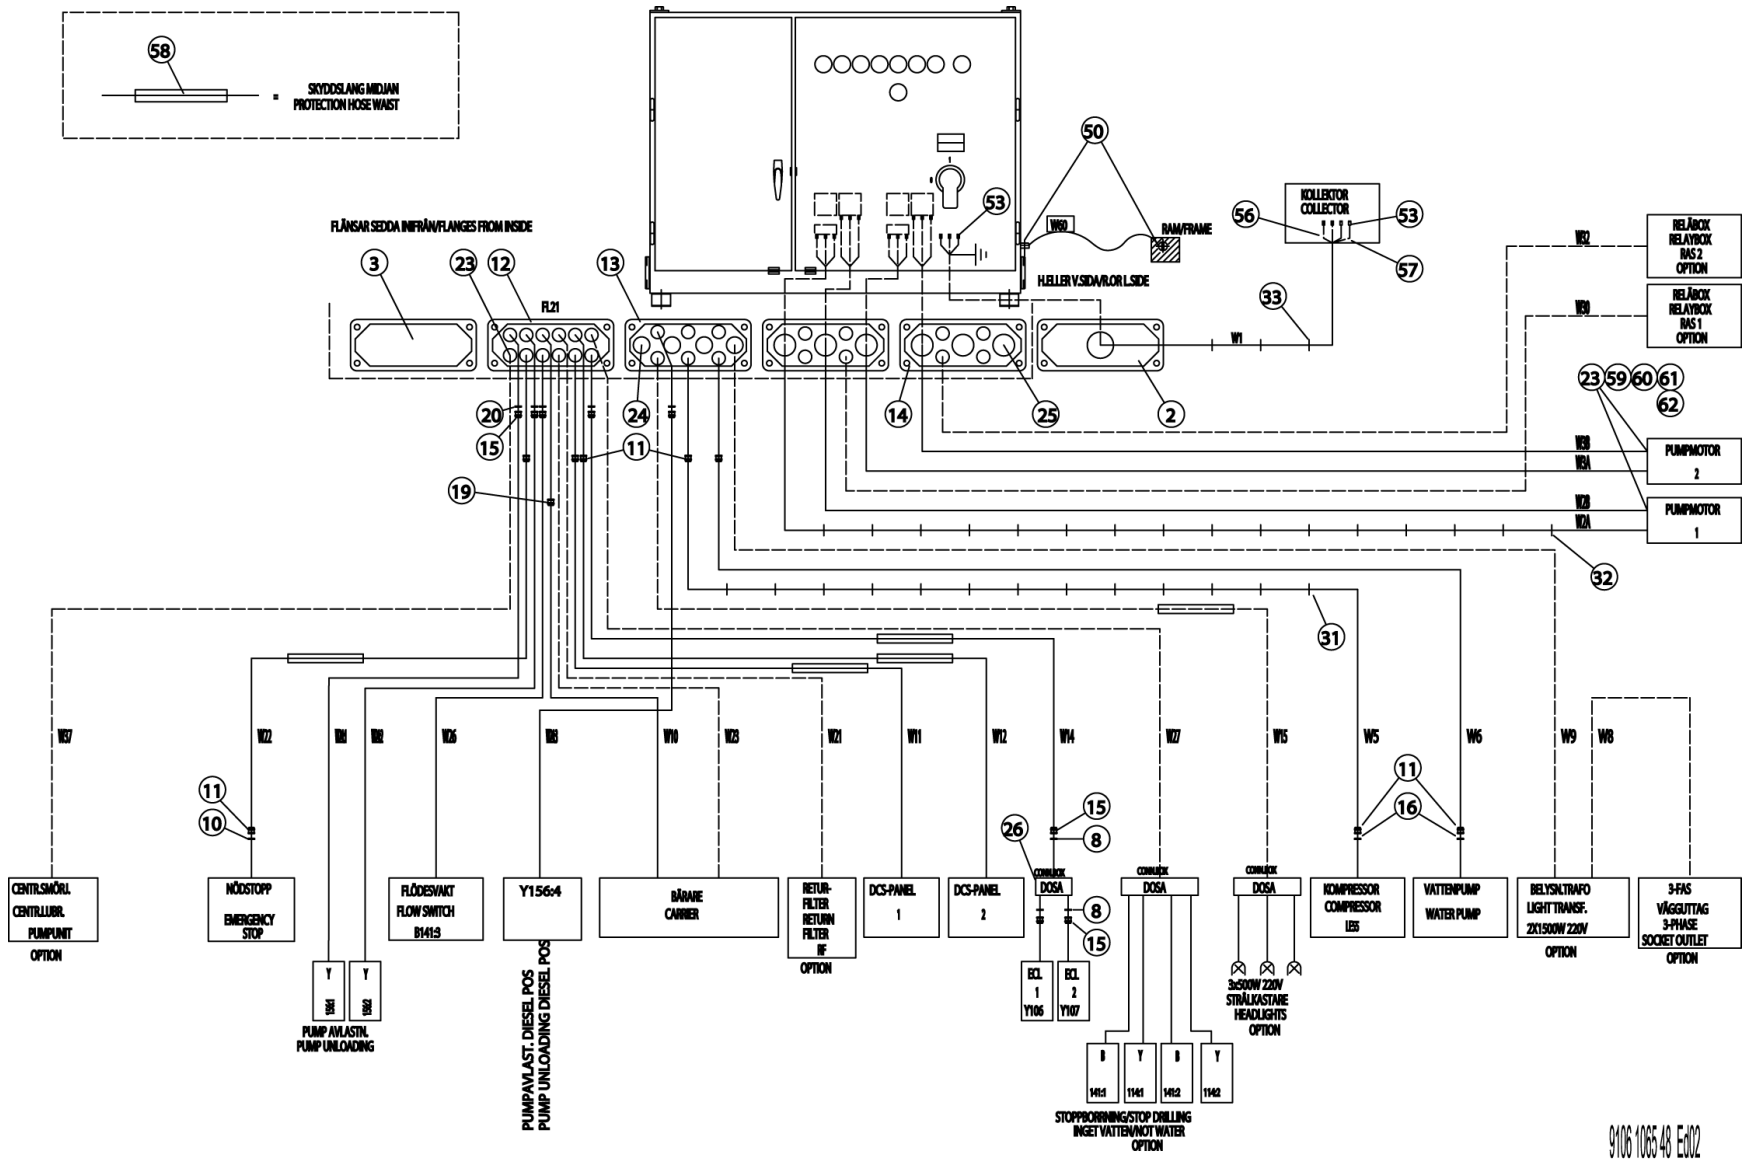

B0012978

CABLE SET / KABELSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
W 1	9106 1104 61	1	SPIR.HOSE COMP.	SPIRALSL.KOMPL.		
W 2A	–	1	SPIR.HOSE COMP.	SPIRALSL.KOMPL.		
W 2B	–	1	SPIR.HOSE COMP.	SPIRALSL.KOMPL.		
W 3A	–	1	SPIR.HOSE COMP.	SPIRALSL.KOMPL.		
W 3B	–	1	SPIR.HOSE COMP.	SPIRALSL.KOMPL.		
W 5	9106 1104 63	1	SPIR.HOSE COMP.	SPIRALSL.KOMPL.		
W 6	9106 1104 62	1	SPIR.HOSE COMP.	SPIRALSL.KOMPL.		
W 11	9111 3891 09	8M	CABLE,12-CORE	KABEL,12-LEDARE		ÖLFLEX 150 12X1.5 D2=14.5
W 12	9111 3891 09	8M	CABLE,12-CORE	KABEL,12-LEDARE		ÖLFLEX 150 12X1.5 D2=14.5
W 14	3217 9882 06	2	VALVE PLUG	VENTILKONTAKT		
W 22	9111 3891 10	8M	CABLE, 5-CORE	KABEL, 5-LEDARE		150 5G1.5 D2=9.8
W 24:1	3217 9882 06	1	VALVE PLUG	VENTILKONTAKT		
W 24:2	3217 9882 06	1	VALVE PLUG	VENTILKONTAKT		
W 24:3	3217 9882 06	1	VALVE PLUG	VENTILKONTAKT		
W 26	3217 9882 14	1	CABLE COMPLETE	KABEL KOMPLETT		
W 60	0017 2071 20	2M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 50 MM2 GR/YEL 50MM2 GREEN/YELLOW


FLANGE SET / FLÄNSSATS

X0000000

FLANGE SET / FLÄNSSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9295 17	1	GASKET	PACKNING		
2	3217 9295 31	1	FLANGE	FLÄNS		

CABLE CONNEC / KABELFÄSTE

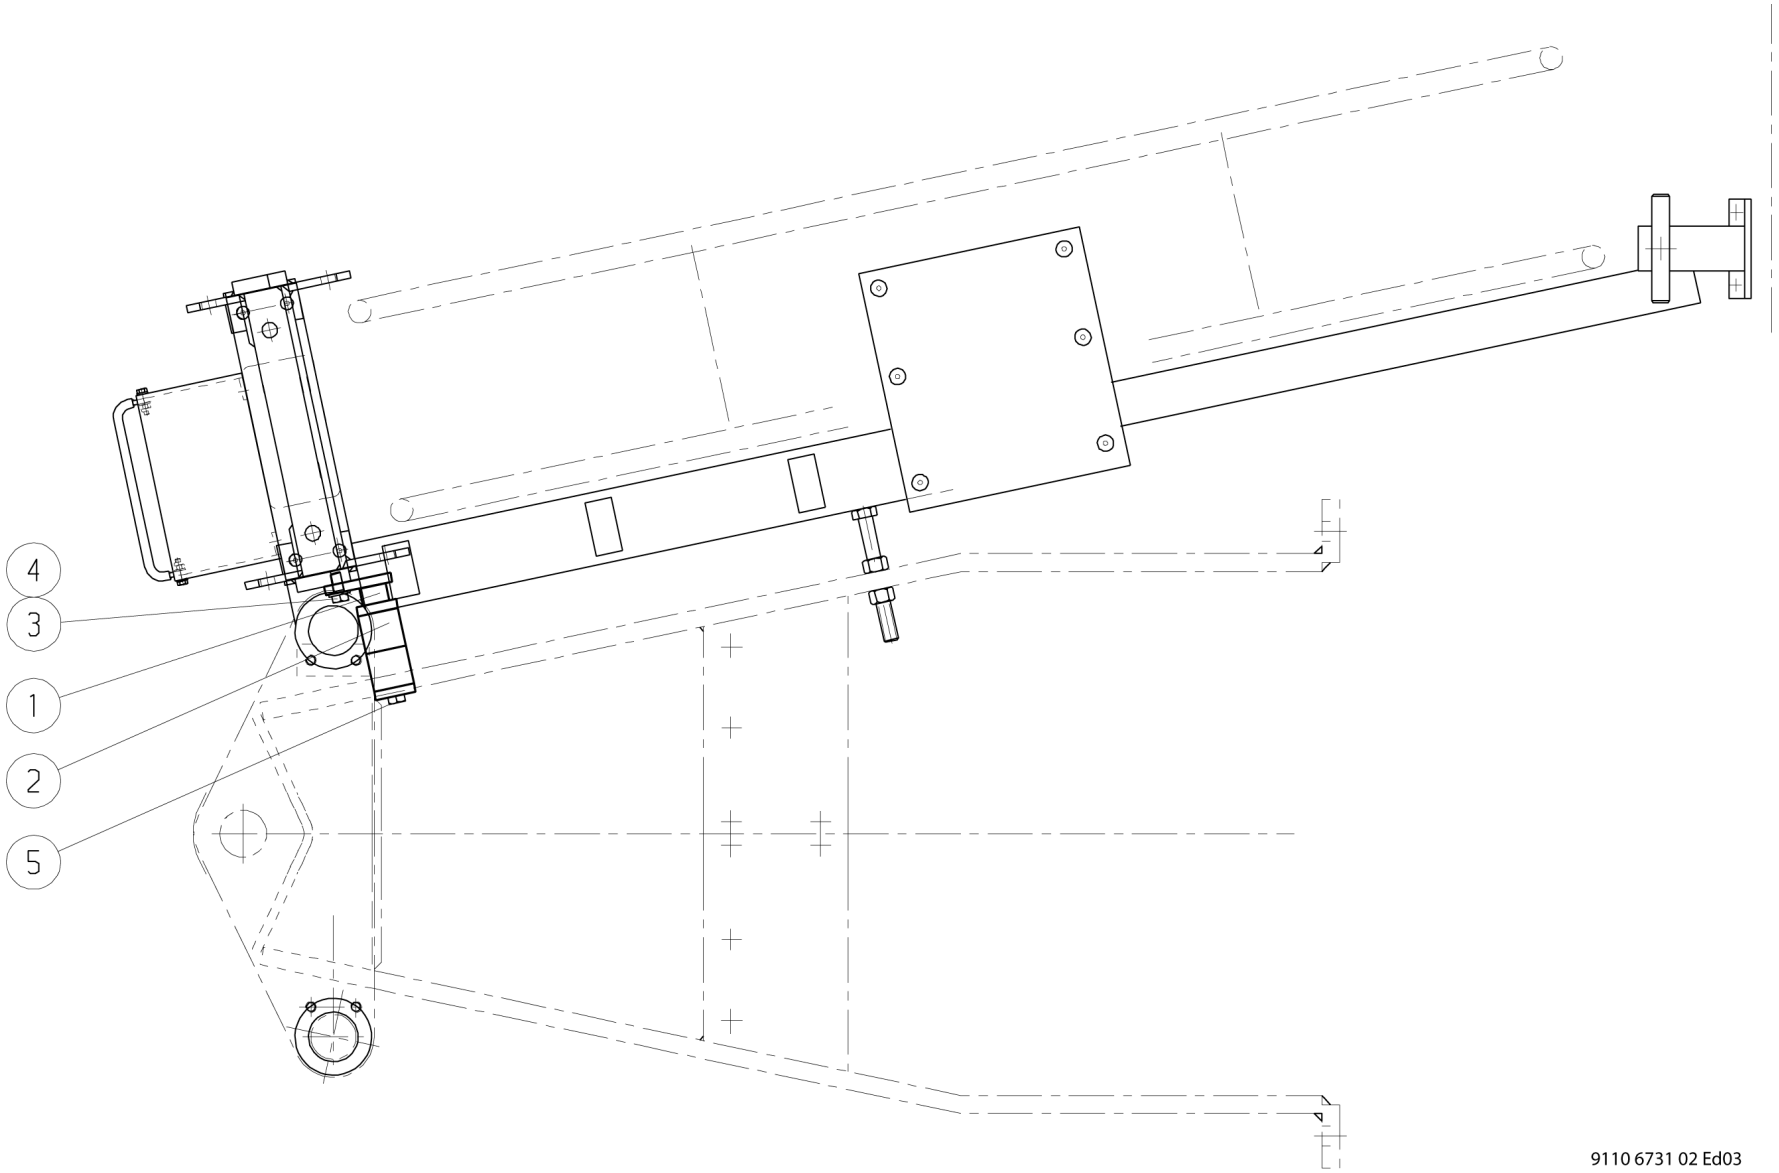


9110 6731 02 Ed03

B0024118

CABLE CONNEC / KABELFÄSTE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 6731 01	1	ATTACHMENT	FÄSTE		
2	0346 3002 38	1	CLAMP HALVES	KLAMMERHALVOR		A2 48 115 90
3	0147 1400 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 25 - 8.8 FZB
4	0301 2358 00	2	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
5	0211 1960 85	2	SCREW	SKRUV		MC6S M 12 X 100 - 12.9


HEADLIGHT SET / STRÅLKASTARSATS

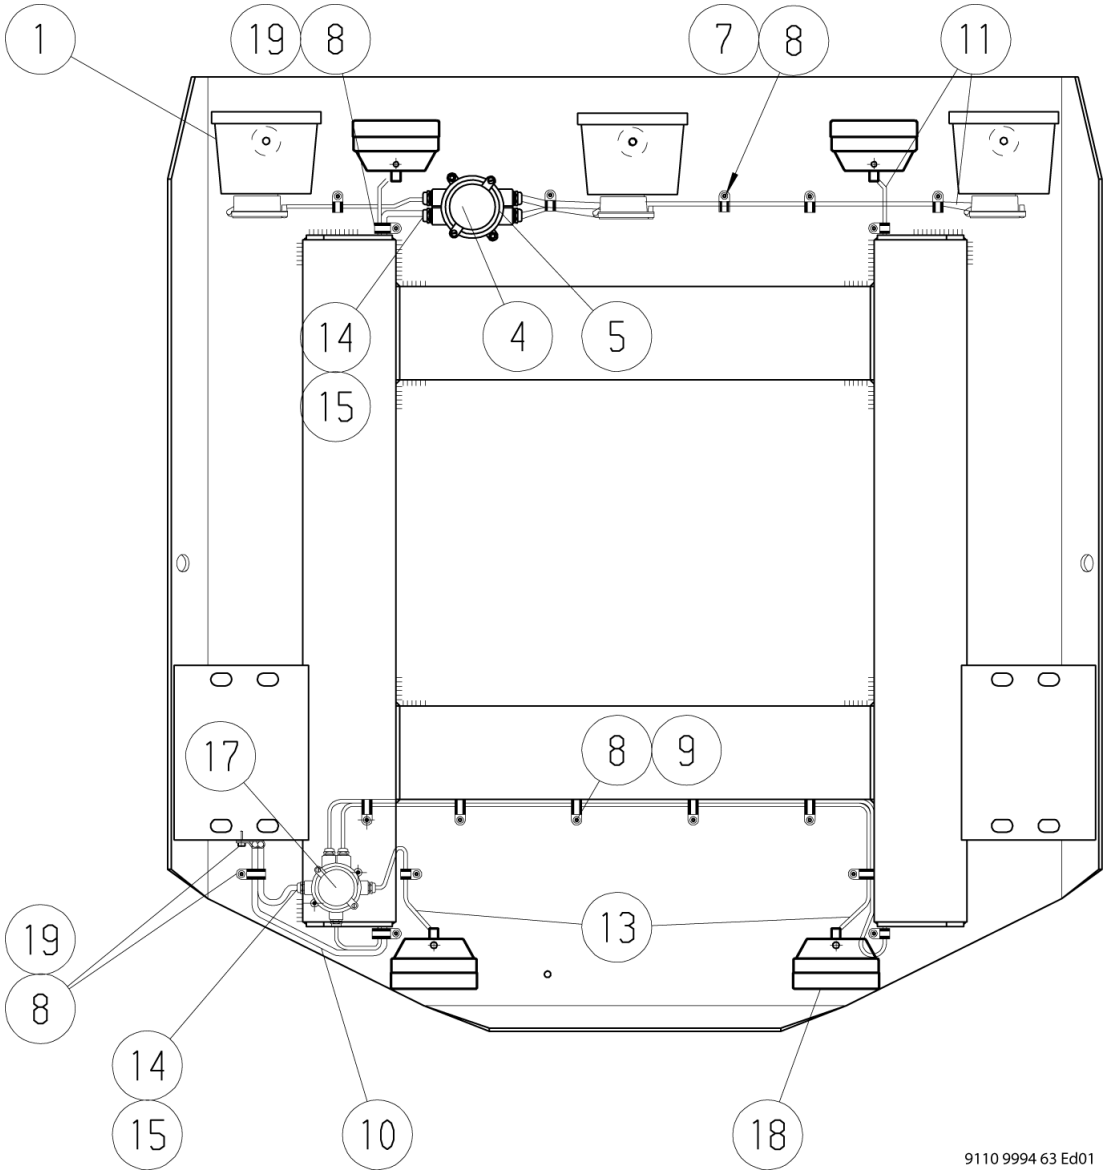

B0014516

HEADLIGHT SET / STRÅLKASTARSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	3	HEADLIGHT	STRÅLKASTARE	Page 695	
4	0698 5211 00	1	JUNCTION BOX	KOPPLINGSDOSA		1088 0126 K
5	0698 5140 60	7	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
7	0346 1002 01	8	PIPE CLAMP	RÖRKLAMMA		D=8 NORMA TYP RSGU RUBBER-COVERED
8	0226 0351 07	22	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
9	0346 1002 42	6	PIPE CLAMP	RÖRKLÄMMA		D=15 NORMA TYP RSGU
10	9111 3891 06	13M	CABLE, 3-CORE	KABEL, 3-LEDARE		3X1,5
11	9111 3891 06	4M	CABLE, 3-CORE	KABEL, 3-LEDARE		3X1,5
13	5112 3134 78	4	WIRING	KABLAGE		DT06-2S-E008+5M CABLE
14	0697 9745 31	2	ADAPTER	ADAPTER		PG 11 - M 20X1,5
15	0698 5140 61	2	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
17	1089 0227 01	1	JUNCTION BOX	KOPPLINGSDOSA		5XPG11/PR18,6 E14 395 17
18	5112 3134 81	4	HEADLIGHT	STRÅLKASTARE	Page 699	NORDIC 100 24V
19	0346 1002 43	3	PIPE CLAMP	RÖRKLAMMA		D=19 NORMA TYP RSGU

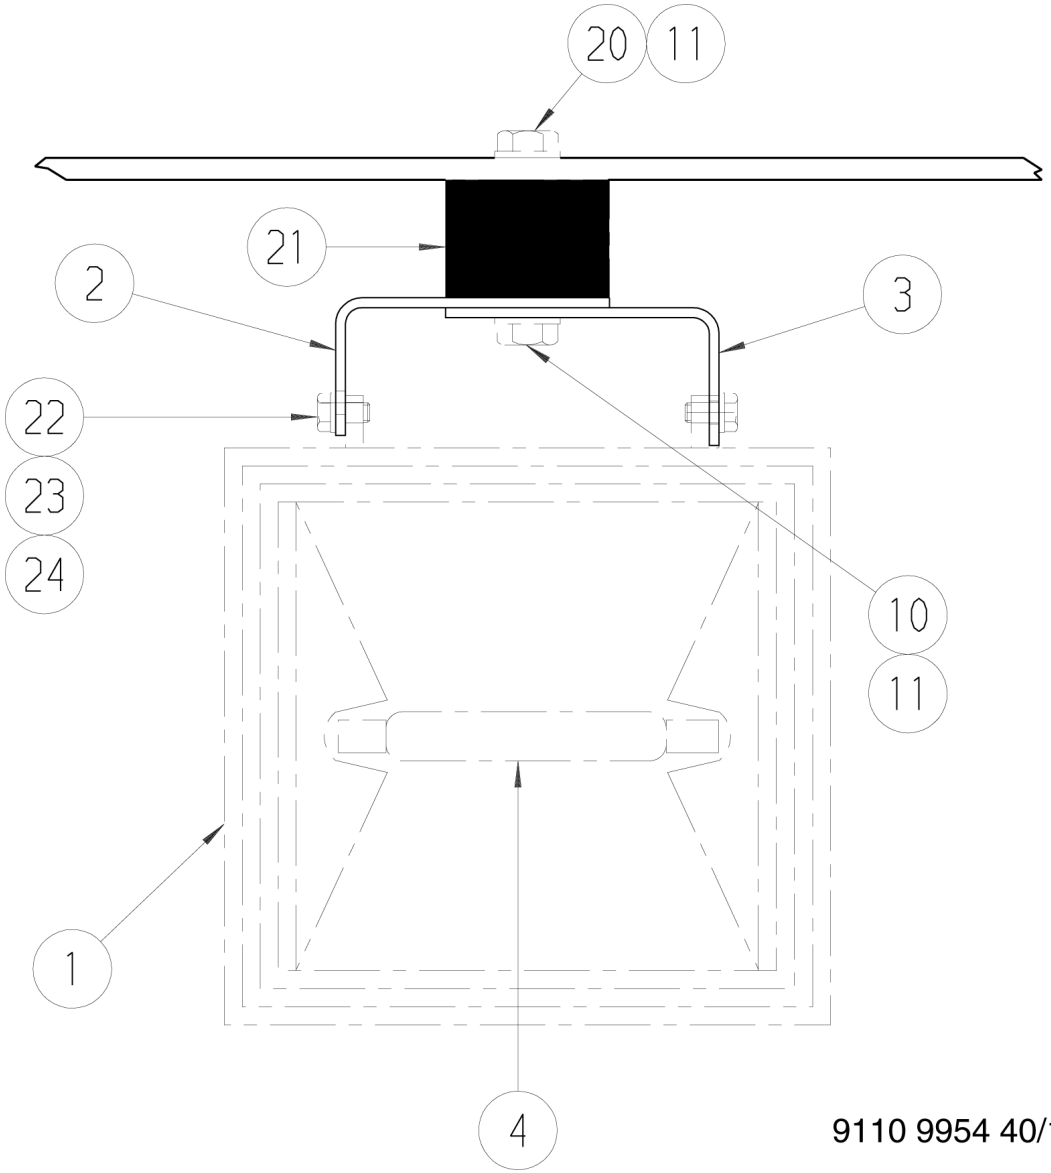


9110 9954 40/1 Ed00

B0010481

HEADLIGHT / STRÅLKASTARE

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9798 61	1	HEADLIGHT	STRÅLKASTARE		
2	–	1	YOKE	BYGEL	Page 697	
4	3176 4245 01	1	BULB	GLÖDLAMPA		T3Q/CL 500W
10	0147 1359 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 16 - 8.8 FZB
11	0301 2344 00	2	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
20	0147 1360 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
21	0392 1110 02	1	DAMPER	DÄMPARE		50 / 36 60 IRH 1800
22	0147 1246 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 16 - 8.8 FZB
23	0301 2321 00	2	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
24	0291 1128 15	2	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040

YOKE / BYGEL

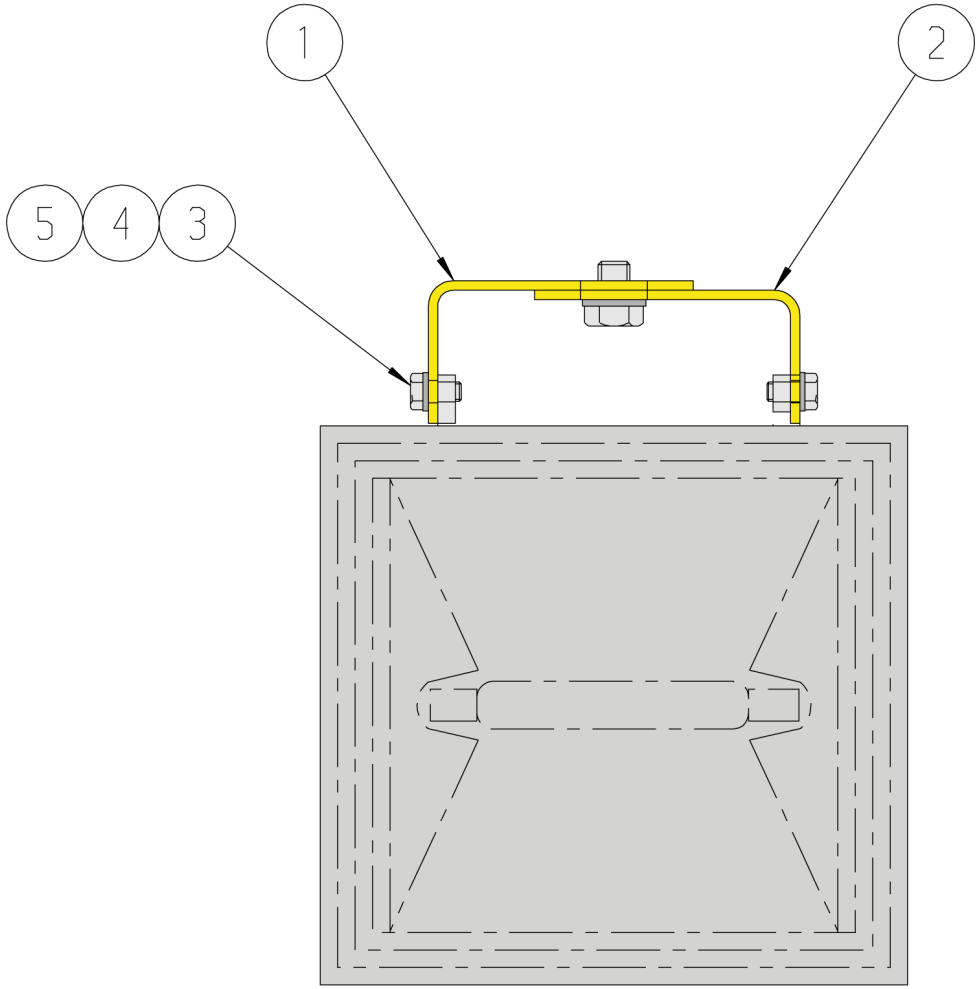


3217 9799 09 Ed00

B0039210

YOKE / BYGEL


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9799 22	1	YOKE	BYGEL		
2	3217 9799 23	1	YOKE	BYGEL		
3	0147 1246 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 16 - 8.8 FZB
4	0301 2321 00	4	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
5	0291 1128 15	4	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040

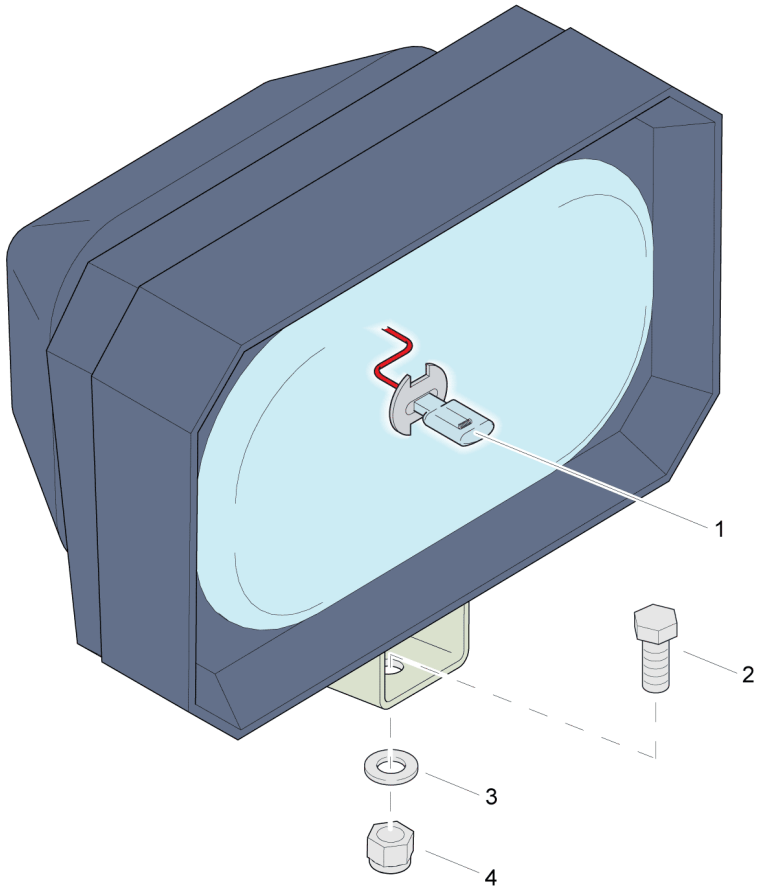

1250 0240 61

B0048346


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 4494 00	1	BULB	GLÖDLAMPA		H3 70W 24V
2	0147 1325 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 25 - 8.8 FZB
3	0300 8005 00	1	PLAIN WASHER	RUNDBRICKA		9 / 25 X 1,5 - FZB
4	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

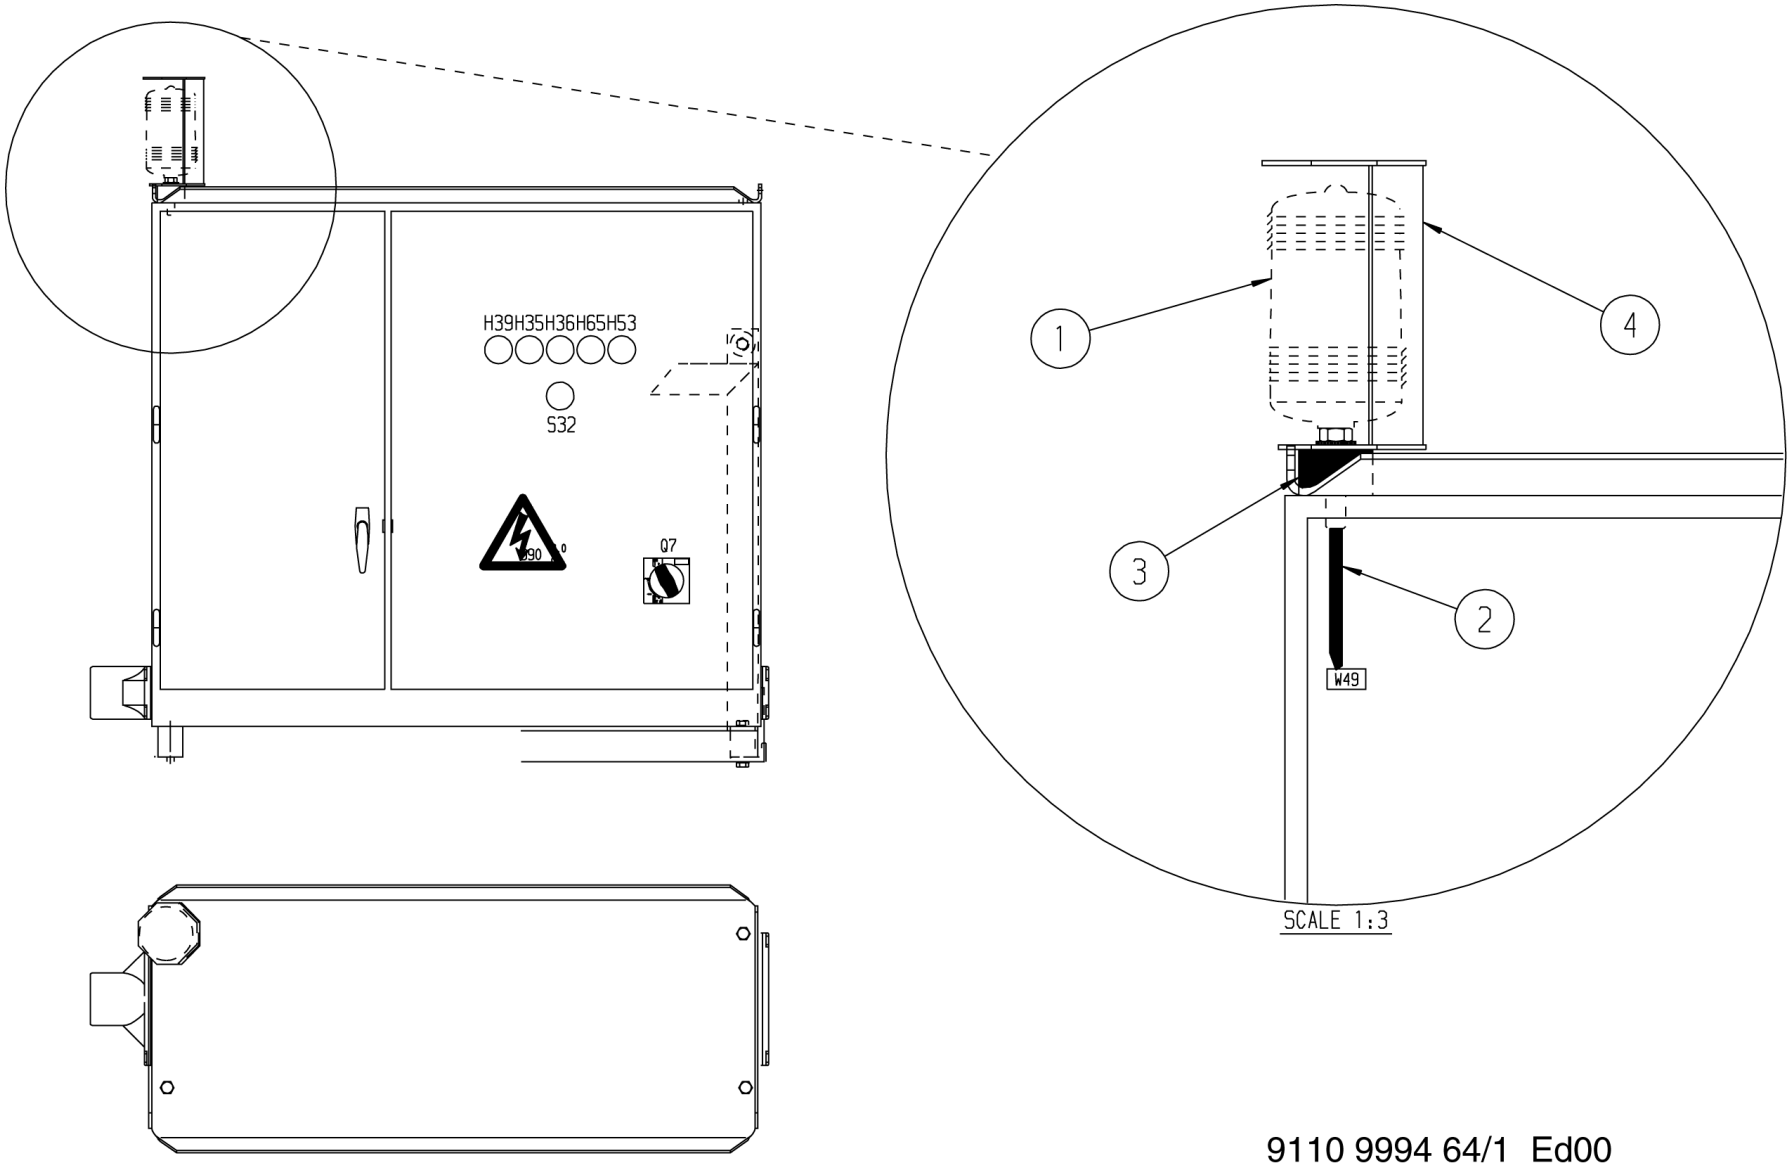

9110 9994 64/1 Ed00

B0008891

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 3139 02	1	FLASH LIGHT	BLIXTLJUS		COMPLETE WHIT ATTACHMENTS
2	9111 3891 44	10M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4
3	–	1	SPACER	DISTANS		
4	9106 0649 55	1	PROTECTION CAP	SKYDDSHUV		

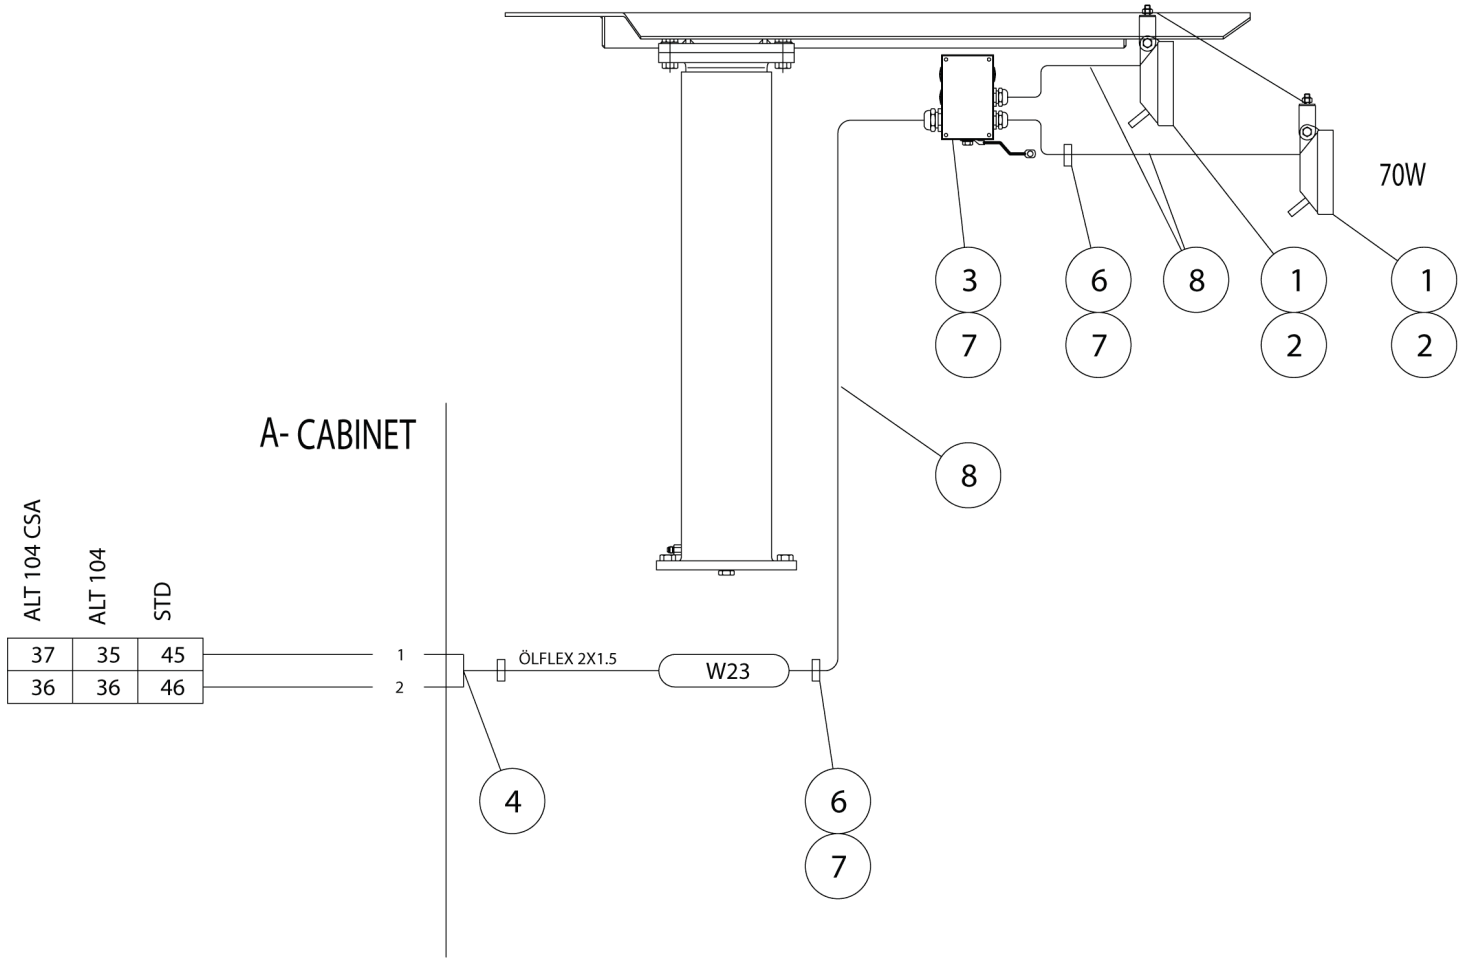

5112 3130 97 Ed03

B0047057

HEADLIGHT SET / STRÅLKASTARSATS


70W 24V DC

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0032 38	2	HEADLIGHT SET	STRÅLKASTARSATS	Page 705	
2	3176 4494 00	2	BULB	GLÖDLAMPA		H3 70W 24V
3	5112 3217 81	1	JUNCTION BOX	KOPPLINGSLÅDA	Page 707	
4	0698 5140 61	1	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B1 M20X1,5 7-13 B1
6	0346 1002 01	10	PIPE CLAMP	RÖRKLAMMA		D=8 NORMA TYP RSGU RUBBER-COVERED
7	0226 0351 07	12	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
8	9111 3891 44	10M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4

X0000000

HEADLIGHT SET / STRÅLKASTARSATS 3176 0032 38

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0030 77	1	SPOTLIGHT	SÖKARLYKTA		
2	9106 0114 71	1	LAMP ATTACHMENT	LAMPFÄSTE		

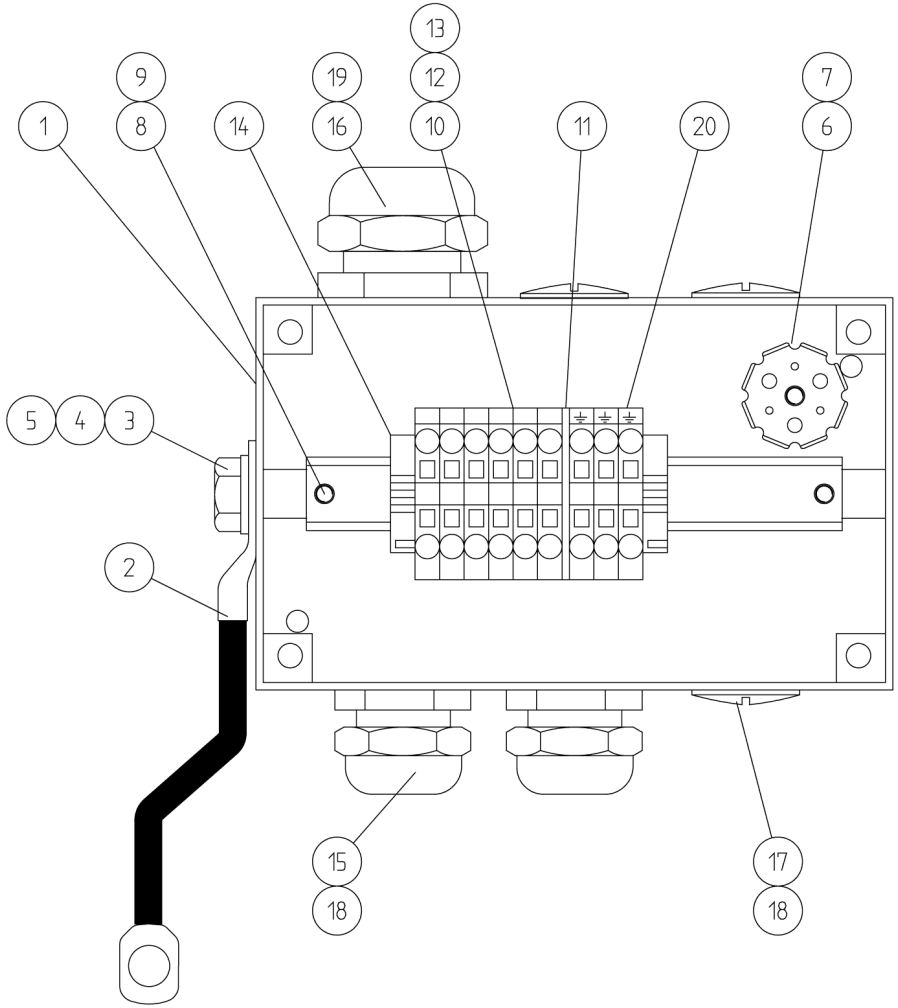

5112 3217 8401

B0040032


JUNCTION BOX / KOPPLINGSLÅDA 5112 3217 81

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3176 0027 02	1	DRILLED BOX	HÅLAD LÅDA		
2	3222 3048 77	1	GROUND BRAID	JORDFLÄTA		
3	0147 1322 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
4	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
5	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
6	5112 2216 04	1	EARTH TERMINAL	JORDPLINT		
7	0226 0351 07	1	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
8	3214 0181 00	0.15M	MOUNTING RAIL	MONTERINGSSKENA		
9	0160 6036 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 5 - 5.8 FZB
10	3176 4049 20	6	TERMINAL BLOCK	KOPPLINGSPLINT		
11	3176 4049 21	1	END PLATE	ÄNDPLATTA		
12	3176 4049 25	1	BRIDGE CONN.	ÖVERKOPPL.BLECK		
13	3176 4491 01	1	MARKING PLATE	MÄRKSKYLT		5FW 1-50 1-50
13	3176 4491 02	1	MARKING PLATE	MÄRKSKYLT		5FW 51-100 TERMINAL MARKERS
14	3176 4049 52	2	END SUPPORT	ÄNDSTÖD		
15	0698 5141 41	2	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 5-10 B1
16	0698 5141 13	1	CABLE GLAND	KABELFÖRSKRUVN.		M25X1,5 6-13 B1
17	0697 9810 19	3	END PLUG	AVSLUTN.PROPP		M20X1,5 A3
18	0697 9809 14	5	LOCK NUT	LÅSMUTTER		M20X1,5 A3
19	0697 9809 15	1	LOCK NUT	LÅSMUTTER		M25X1,5 A3
20	3176 4049 26	3	TERMINAL BLOCK	KOPPLINGSPLINT		

AIR/WATERSYSTEM / LUFT/VATTENSYST
LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	AIR/WATERSYSTEM	LUFT/VATTENSYST	711	
–	– AIR/WATERSYSTEM	– LUFT/VATTENSYST	713	
9110 9515 14	– – AIR/WATERSYSTEM	– – LUFT/VATTENSYST	715	AIR/WATERSYSTEM
9111 4061 79	– – – STRAINER	– – – SIL	717	
3217 8667 52	– – – LUBRICAT.PUMP	– – – SMÖRJPUMP	719	ECL-PUMP
3217 7403 80	– – – OIL RESERVOIR	– – – OLJEBEHÅLLARE	721	
–	– – – PRES. GAUGE SET	– – – MANOMETERSATS	723	0-60BAR
–	– – – PRES. GAUGE SET	– – – MANOMETERSATS	725	0-16BAR
–	– – HOSE SET	– – SLANGSATS	727	AIR/WATER SYSTEM
9110 9707 66	– AIR BLOWING	– LUFTBLÅSNING	729	
3217 8993 00	– – AIR BLOWING	– – LUFTBLÅSNING	731	AIR FLUSHING
1011 3510 80	– – – CONTROL VALVE	– – – REGLERVENTIL	733	
9110 9516 10	– – HOSE SET	– – SLANGSATS	735	
–	– WATERFLOW GUARD	– SPOLVATTENVAKT	737	
9110 9958 62	– – HOSE SET	– – SLANGSATS	739	
–	– – WATERFLOW GUARD	– – SPOLVATTENVAKT	741	WATERFLOW GUARD
9106 0630 14	– – – DIRECTION VALVE	– – – RIKTNINGSVENTIL	743	
3217 8988 60	– – ELECTRIC SET	– – ELSATS	745	STOP DRILLING NO FLUSHING WATER
9106 1726 20	– CLEANING UNIT	– TVÄTTUTRUSTNING	747	
–	– – HOSE SET	– – SLANGSATS	749	
9106 1250 32	– ECL-SET	– ECL-SATS	751	LUBRICATION WARNING KIT
9106 1445 72	– – JUNCTION BOX	– – KOPPLINGSLÅDA	753	
–	– – CABLE SET	– – KABELSATS	755	B380->A54



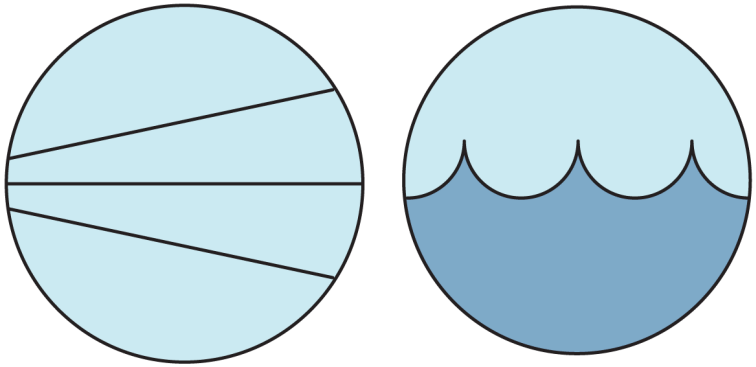


B0057490

AIR/WATERSYSTEM / LUFT/VATTENSYST

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
500	–	1	AIR/WATERSYSTEM	LUFT/VATTENSYST	Page 713	
510	9110 9707 66	1	AIR BLOWING	LUFTBLÅSNING	Page 729	
540	–	1	WATERFLOW GUARD	SPOLVATTENVAKT	Page 737	
550	9106 1726 20	1	CLEANING UNIT	TVÄTTUTRUSTNING	Page 747	
560	9106 1250 32	1	ECL-SET	ECL-SATS	Page 751	LUBRICATION WARNING KIT


AIR/WATERSYSTEM / LUFT/VATTENSYST

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
500	9110 9515 14	1	AIR/WATERSYSTEM	LUFT/VATTENSYST	Page 715	AIR/WATERSYSTEM
515	–	1	HOSE SET	SLANGSATS	Page 727	AIR/WATER SYSTEM

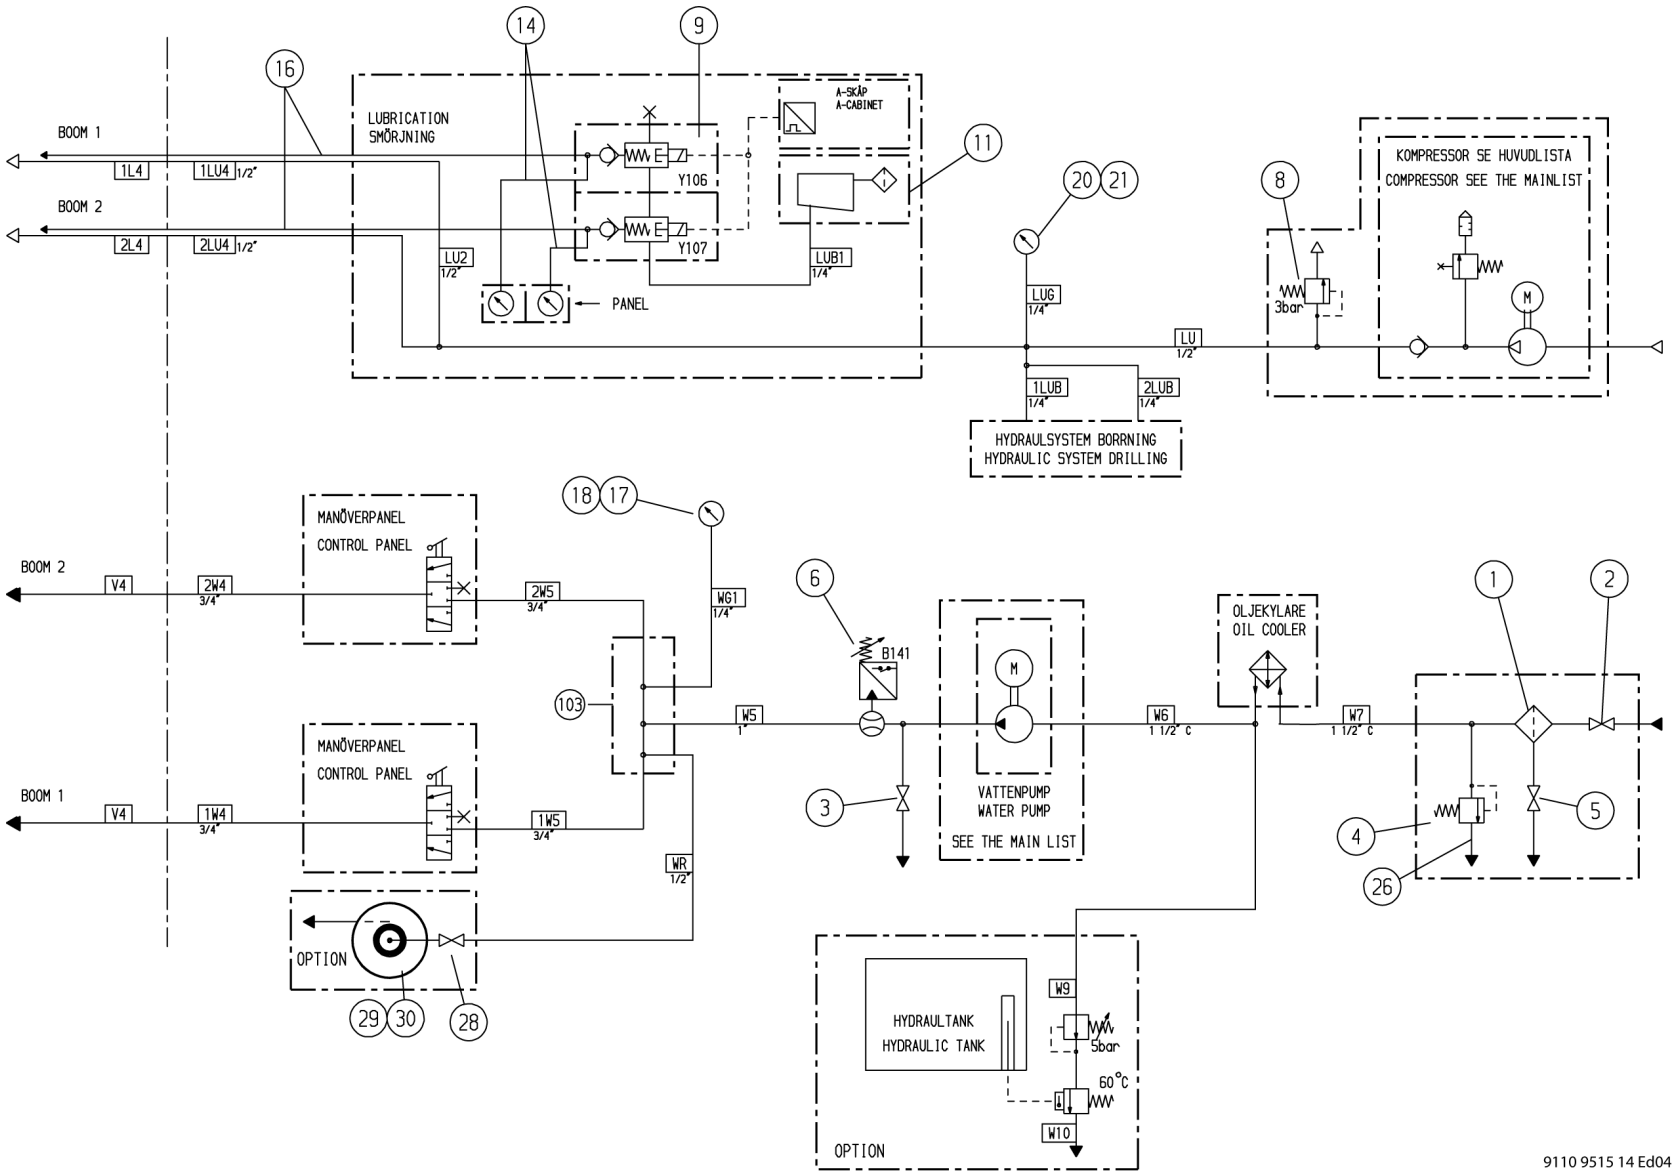
BOOM 1
1L4
1LU4 1/2"
BOOM 2
2L4
2LU4 1/2"
LUBRICATION
SMÖRJNING
A-SKÅP
A-CABINET
Y106
Y107
LU2 1/2"
LUB1 1/4"
PANEL
LUG 1/4"
LU 1/2"
1LUB 1/4"
2LUB 1/4"
HYDRAULSYSTEM BORRNING
HYDRAULIC SYSTEM DRILLING
3bar
KOMPRESSOR SE HUVUDLISTA
COMPRESSOR SEE THE MAINLIST
M
MANÖVERPANEL
CONTROL PANEL
V4
2W4 3/4"
2W5 3/4"
1W4 3/4"
1W5 3/4"
WG1 1/4"
WR 1/2"
OPTION
B141
W5 1"
W6 1 1/2" C
W7 1 1/2" C
VATTENPUMP
WATER PUMP
SEE THE MAIN LIST
OLJEKYLARE
OIL COOLER
HYDRAULTANK
HYDRAULIC TANK
W9
5bar
60°C
W10
OPTION
9110 9515 14 Ed04

B0032561


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9111 4061 79	1	STRAINER	SIL	Page 717	
2	3176 5233 00	1	VALVE	VENTIL		
3	8202 0311 37	1	BALL VALVE	KULVENTIL		BAL-1A 20 WATER
4	0834 1194 05	1	SAFETY VALVE	SÄKERHETSVENTIL		HM - 72 RSK 5003421
5	8202 0304 02	1	BALL VALVE	KULVENTIL		BAL 20 - G 3/4 - TYP A AIR SPARE PARTS SET 9090 1154 00
6	3217 9955 30	1	FLOW GUARD	FLÖDESVAKT		
8	3217 9036 02	1	SAFETY VALVE	SÄKERHETSVENTIL		351.244INSTÄLLN. 3BAR
9	3217 8667 52	2	LUBRICAT.PUMP	SMÖRJPUMP	Page 719	ECL-PUMP
11	3217 7403 80	1	OIL RESERVOIR	OLJEBEHÅLLARE	Page 721	
14	3176 7606 00	6M	POLYAMIDE HOSE	POLYAMIDSLANG		
16	3217 9273 00	50M	POLYAMIDE HOSE	POLYAMIDSLANG		13 9 ,1.8 X 3.2 SOLD BY THE METER
17	–	1	PRES. GAUGE SET	MANOMETERSATS	Page 723	0-60BAR
18	3176 6101 00	1	PLATE	SKYLT		LITEN
20	–	1	PRES. GAUGE SET	MANOMETERSATS	Page 725	0-16BAR
21	3176 6100 00	1	PLATE	SKYLT		LITEN
26	9030 0300 00	1M	AIR HOSE	LUFTSLANG		12,5 X 5
27	9030 0400 00	1	AIR HOSE	LUFTSLANG		A1 16 26
28	8202 0311 29	1	BALL VALVE	KULVENTIL		BX 15 G 1/2 R 1/2 -40BAR
29	3217 9390 01	1	NOZZLE	MUNSTYCKE		
30	3217 9783 02	1	HOSE REEL	SLANGVINDA		

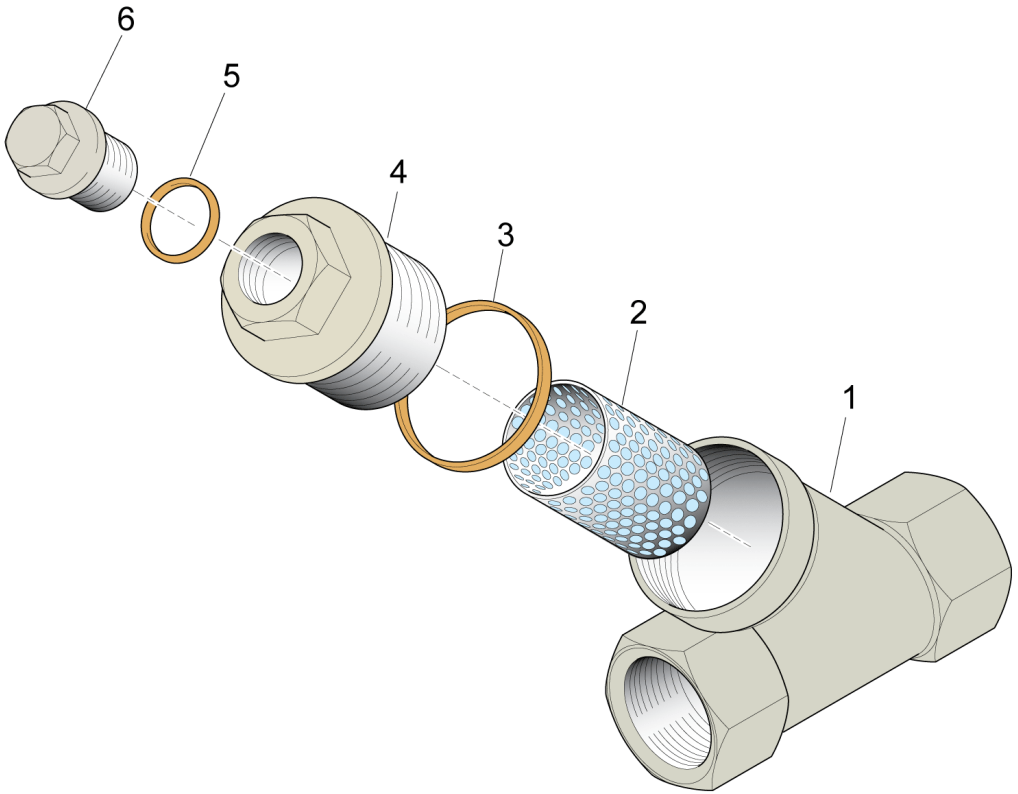

1250 0245 66


B0047277

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	9111 4061 94	1	SPARE PARTS SET	RESERVDELSSATS		INCL.POS.2,3,5
1	–	1	HOUSE	HUS		NOT SOLD SEPARATELY
2	–	1	STRAINER	SIL		NOT SOLD SEPARATELY
3	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
4	–	1	COVER	LOCK		NOT SOLD SEPARATELY
5	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
6	–	1	PLUG	PLUGG		NOT SOLD SEPARATELY

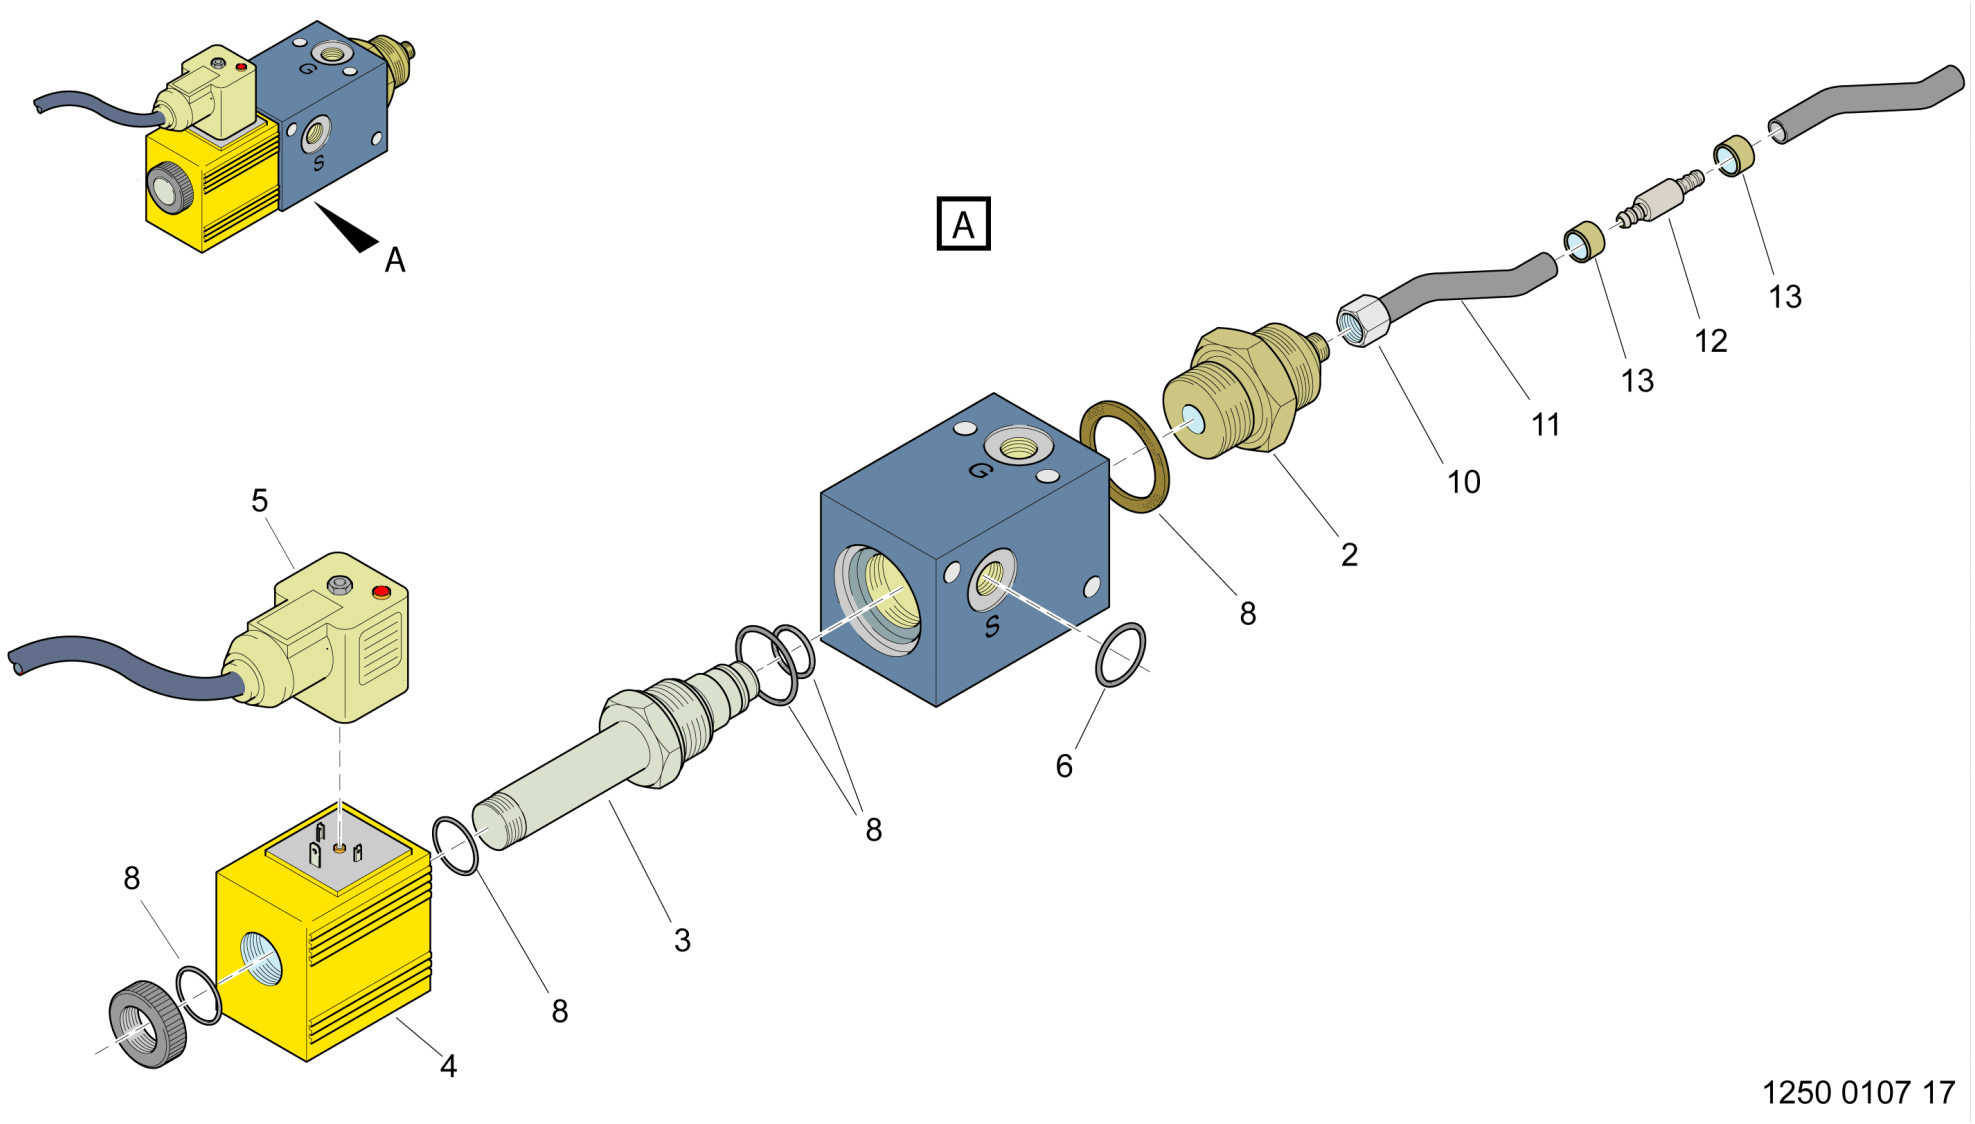

B0032563

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2	3217 8049 30	1	NIPPLE	NIPPEL		
3	3115 1648 00	1	CARTRIDGE	PATRON		
4	3115 1648 01	1	COIL	SPOLE		37W/24V
5	3217 9882 04	1	VALVE PLUG	VENTILKONTAKT		3M 5MM 2X0,5 IP67 LED+Z-DIOD
6	0663 9078 00	1	O-RING	O-RING		19,3 X 2,4 70 SHORE
8	3115 1648 02	1	SEAL KIT	TÄTNINGSSATS		
10	3115 1684 00	1	COUPLING	KOPPLING		INCL.CUTTING RING
11	3217 9273 00	1M	POLYAMIDE HOSE	POLYAMIDSLANG		13 9 ,1.8 X 3.2 SOLD BY THE METER
12	9090 1423 00	1	CONNECTION	ANSLUTNING		1,8
13	9110 8957 00	2	LOCK RING	LÅSRING		

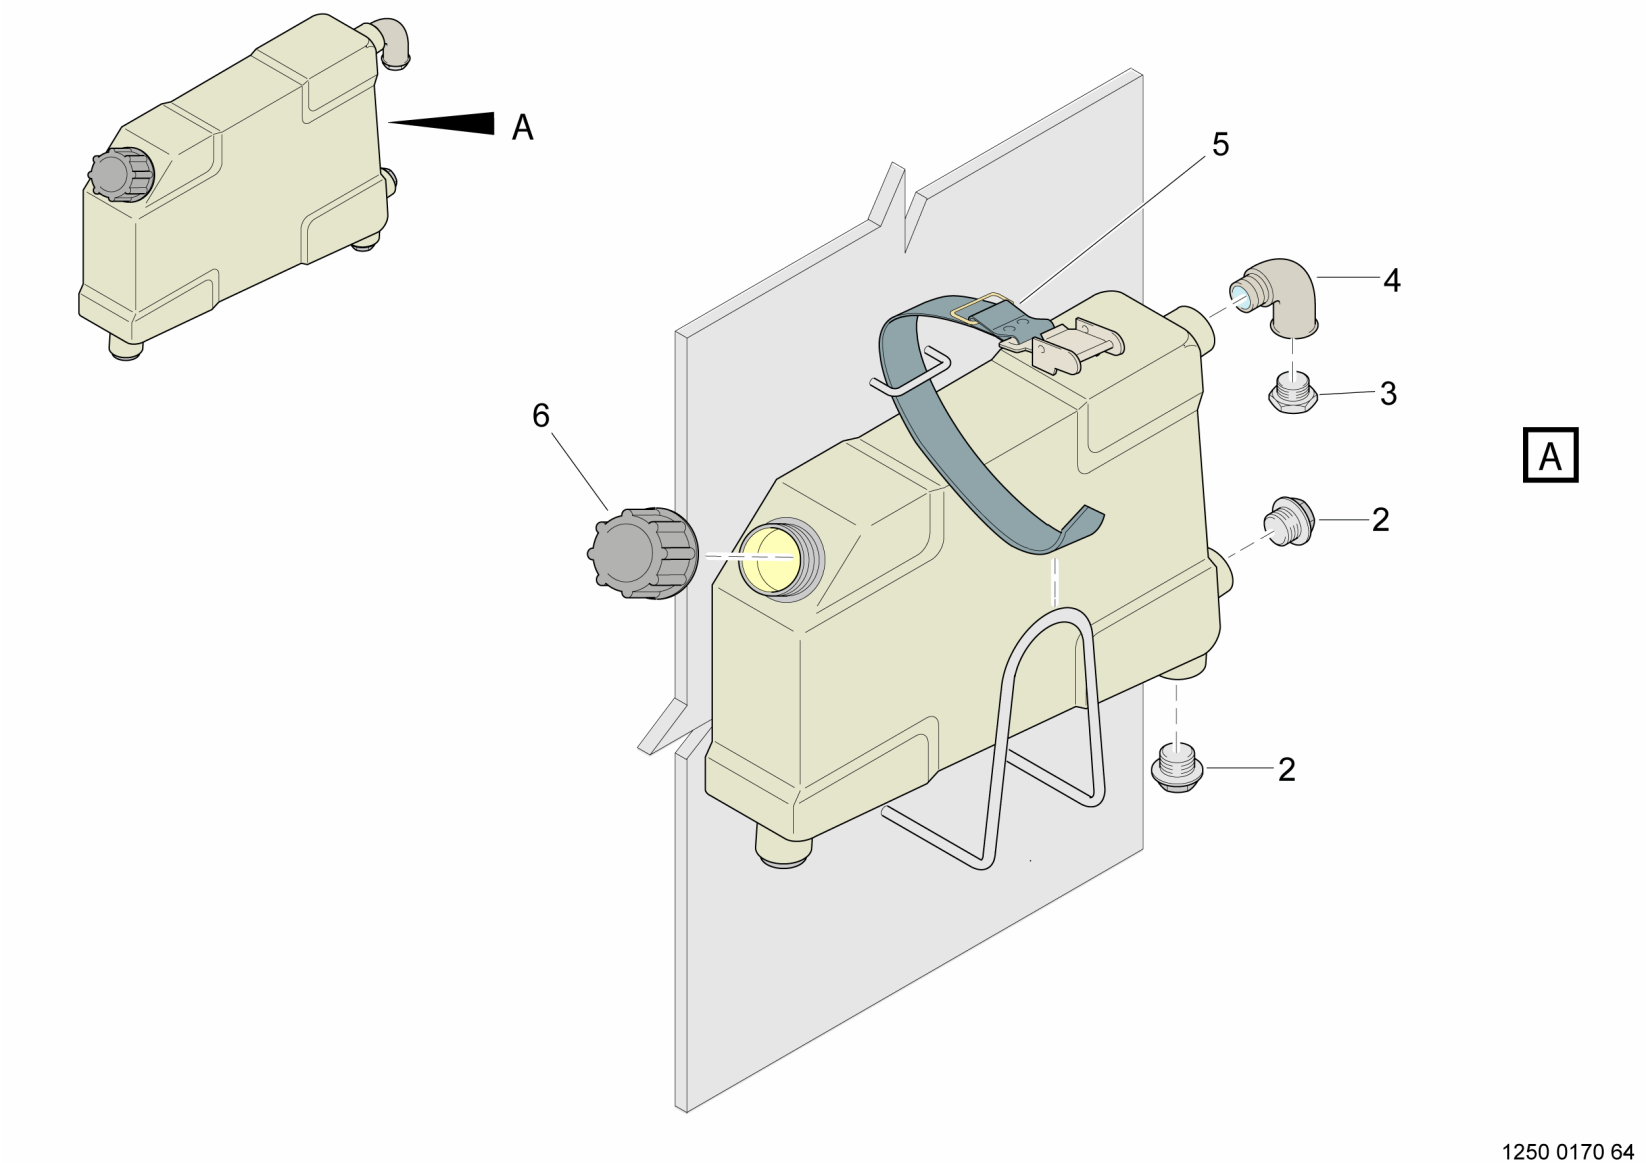


1250 0170 64

B0036558

OIL RESERVOIR / OLJEBEHÅLLARE 3217 7403 80

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 7403 00	1	RESERVOIR	BEHÅLLARE		
2	0686 3716 02	2	PLUG	PROPP		G 1/2 A 5.8 FZB
3	0803 5012 04	1	FILTER PLUG	FILTERPROPP		G 1/2 - DN 15 - TYPE B G 1/2 - DN 15 - TYPE B
4	0560 1305 03	1	ELBOW	RÖRVINKEL		RP 1/2 X ISO7-R 1/2 - 90 RP 1/2 X ISO7-R 1/2 - 90
5	3115 0212 00	1	STRAP	BAGAGEBAND		
6	3217 7403 01	1	COVER	LOCK		

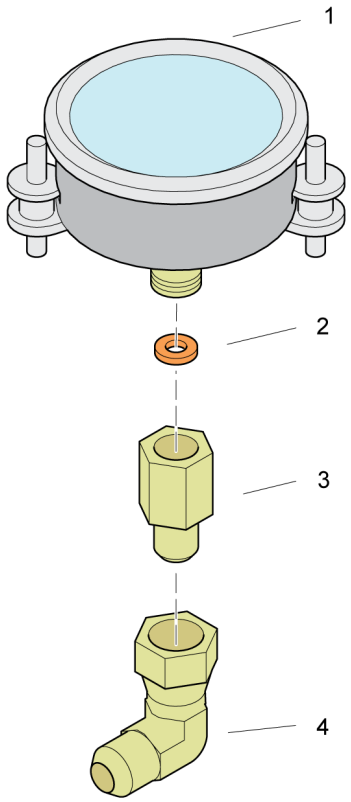


9106174000 01

B0059882

PRES. GAUGE SET / MANOMETERSATS

0-60BAR

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3177 5031 00	1	PRESSURE GAUGE	TRYCKMÄTARE		63 0-60 4113 0-60 BAR
2	0653 0905 06	1	GASKET	PACKNING		5,5 / 11 X 2 - 11 5013 12
3	3177 3070 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
4	3715 0584 00	1	ELBOW NIPPLE	VINKELNIPPEL		UNF 9/16 - UNF 9/16

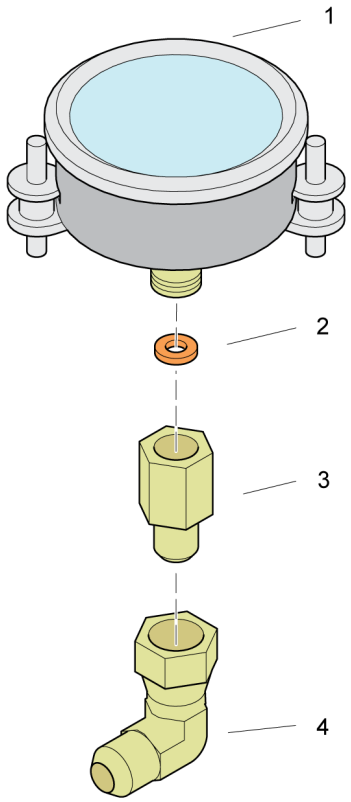


9106174000 01

B0059882

PRES. GAUGE SET / MANOMETERSATS

0-16BAR


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3177 5021 00	1	PRESSURE GAUGE	TRYCKMÄTARE		D = 63, 0 - 16 BAR 0-16 BAR
2	0653 0905 06	1	GASKET	PACKNING		5,5 / 11 X 2 - 11 5013 12
3	3177 3070 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
4	3715 0584 00	1	ELBOW NIPPLE	VINKELNIPPEL		UNF 9/16 - UNF 9/16

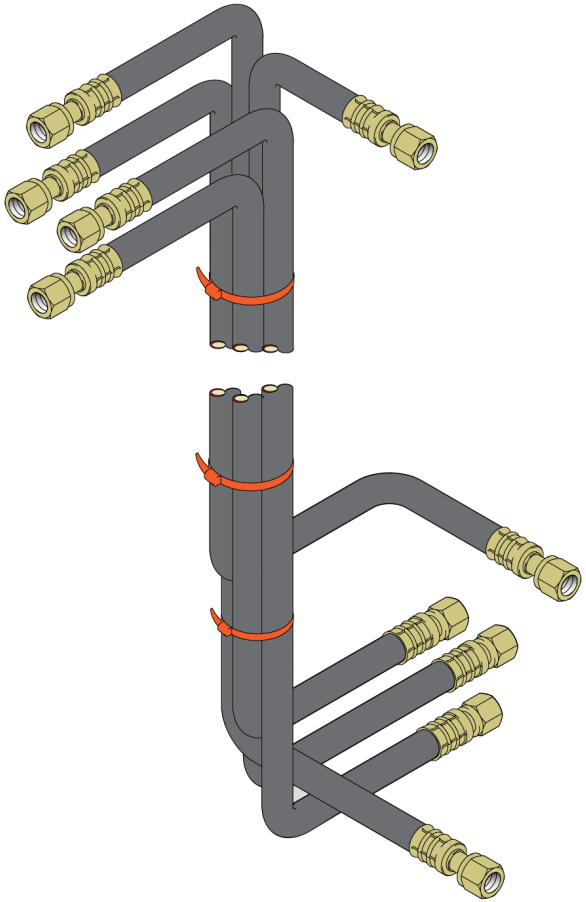

B0015365

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
LU	0574 2318 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4500 R2AT
LUB1	0574 0064 49	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 850 R2AT
LUG	0574 0274 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1700 R2AT
LU1	0574 2258 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 550 R2AT
WG1	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
W5	0574 0064 81	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 5000 R2AT
W6	0574 0069 84	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 2700 R1T
W7	0574 6025 11	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 1800 R1T
1LUB	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
1W5	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
2LUB	3176 3730 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2800 R2AT
2W5	0574 3272 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1500 R2AT


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
555	3217 8993 00	1	AIR BLOWING	LUFTBLÅSNING	Page 731	AIR FLUSHING
556	9110 9516 10	1	HOSE SET	SLANGSATS	Page 735	
558	3215 9595 10	1	ATTACHMENT	FÄSTE		

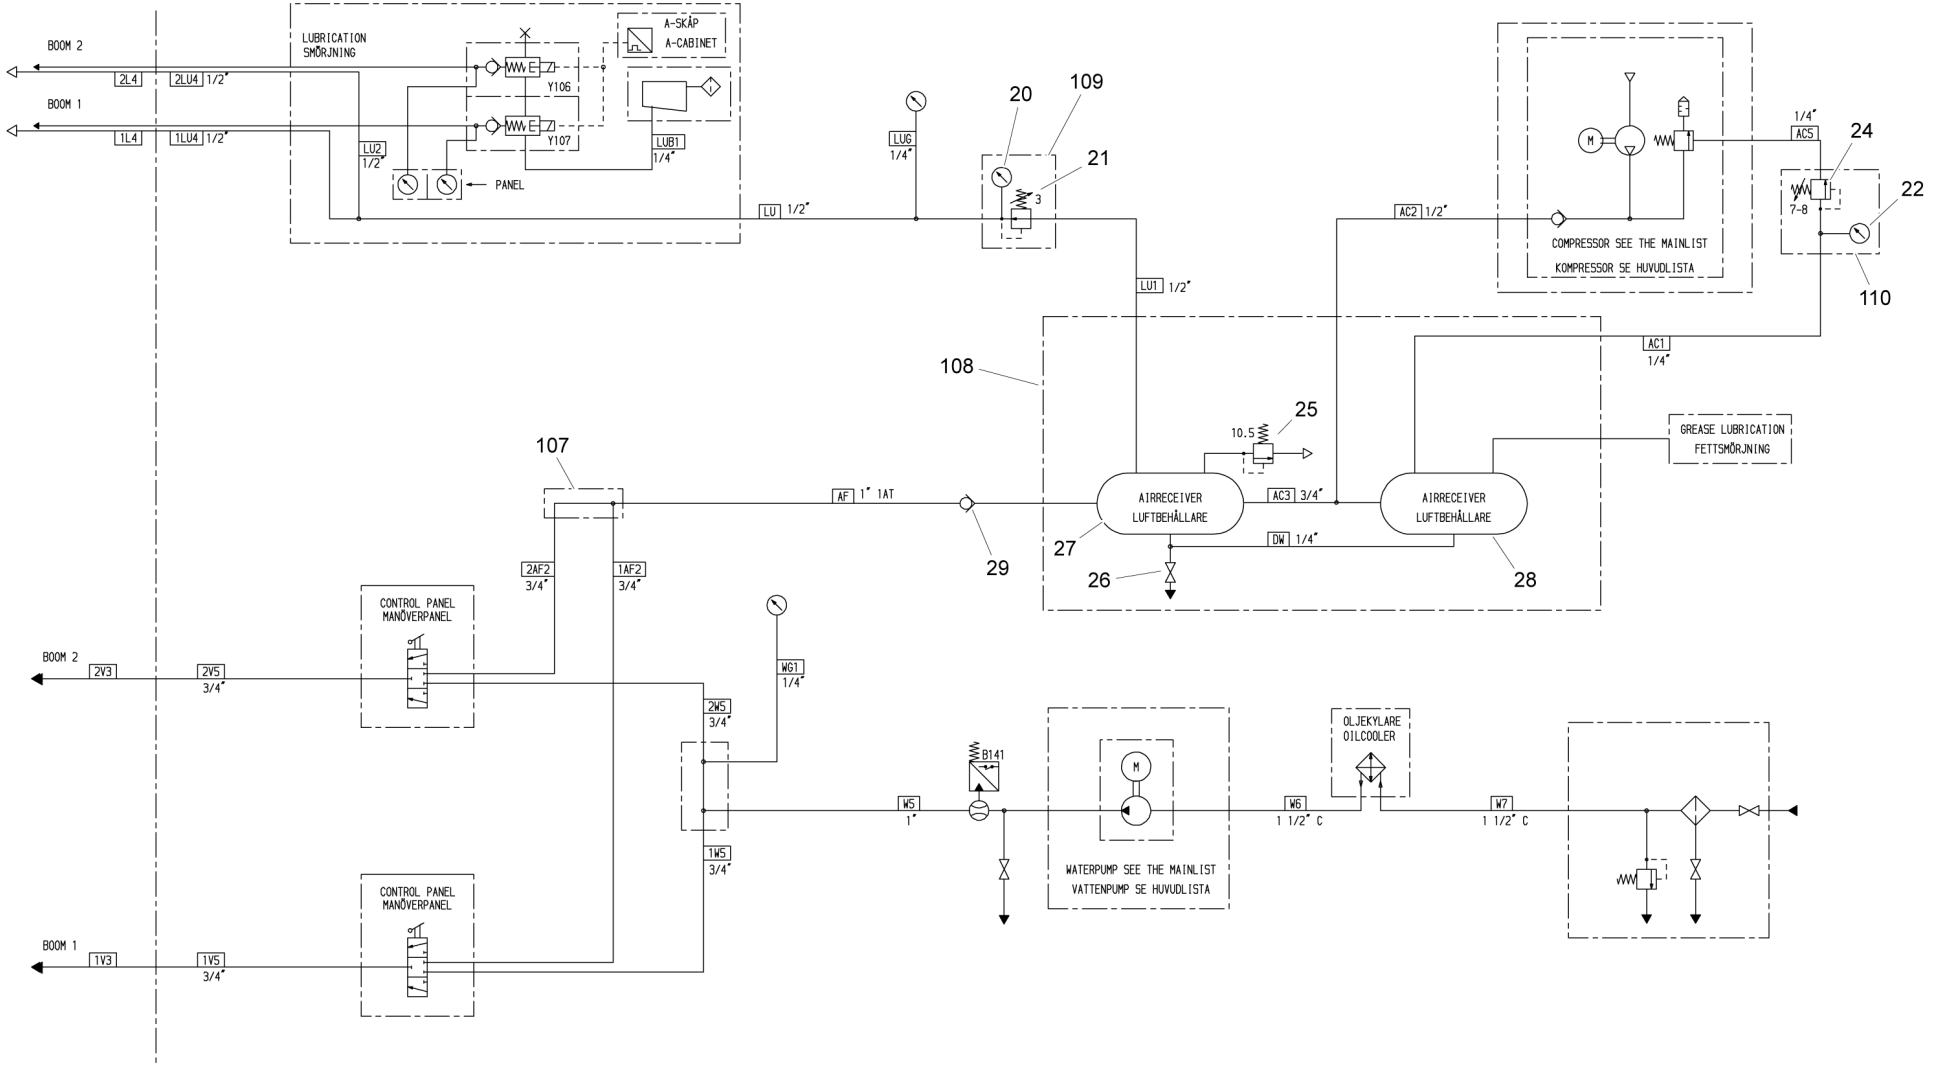


3217899300 06

B0055464

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
20	9090 1172 00	1	PRESSURE GAUGE	TRYCKMÄTARE		0-10 BAR G 1/8'
21	3215 9595 00	1	PRESS.RED.VALVE	TRYCKRED.VENTIL		1/2',0,2-8BAR
22	9090 1172 00	1	PRESSURE GAUGE	TRYCKMÄTARE		0-10 BAR G 1/8'
24	1011 3510 80	1	CONTROL VALVE	REGLERVENTIL	Page 733	
25	1503 1267 02	1	SAFETY VALVE	SÄKERHETSVENTIL		10,5 BAR
26	8202 0301 05	1	BALL VALVE	KULVENTIL		BAL 08
27	2235 1598 00	1	AIR RECEIVER	LUFTBEHÅLLARE		
28	2235 1598 00	1	AIR RECEIVER	LUFTBEHÅLLARE		
29	3217 9801 20	1	CHECK VALVE	BACKVENTIL		3/4 ,250BAR,ZINK PLATED
30	5112 3072 52	1	COLLECT. BLOCK	SAMLINGSBLOCK		
31	3217 8951 01	2	PLATE	SKYLT		

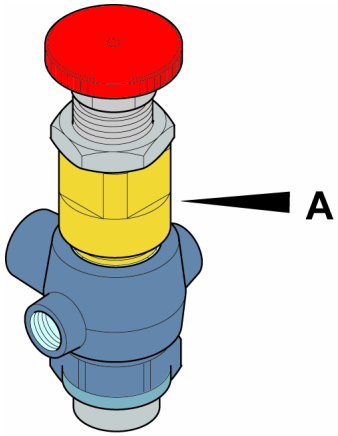


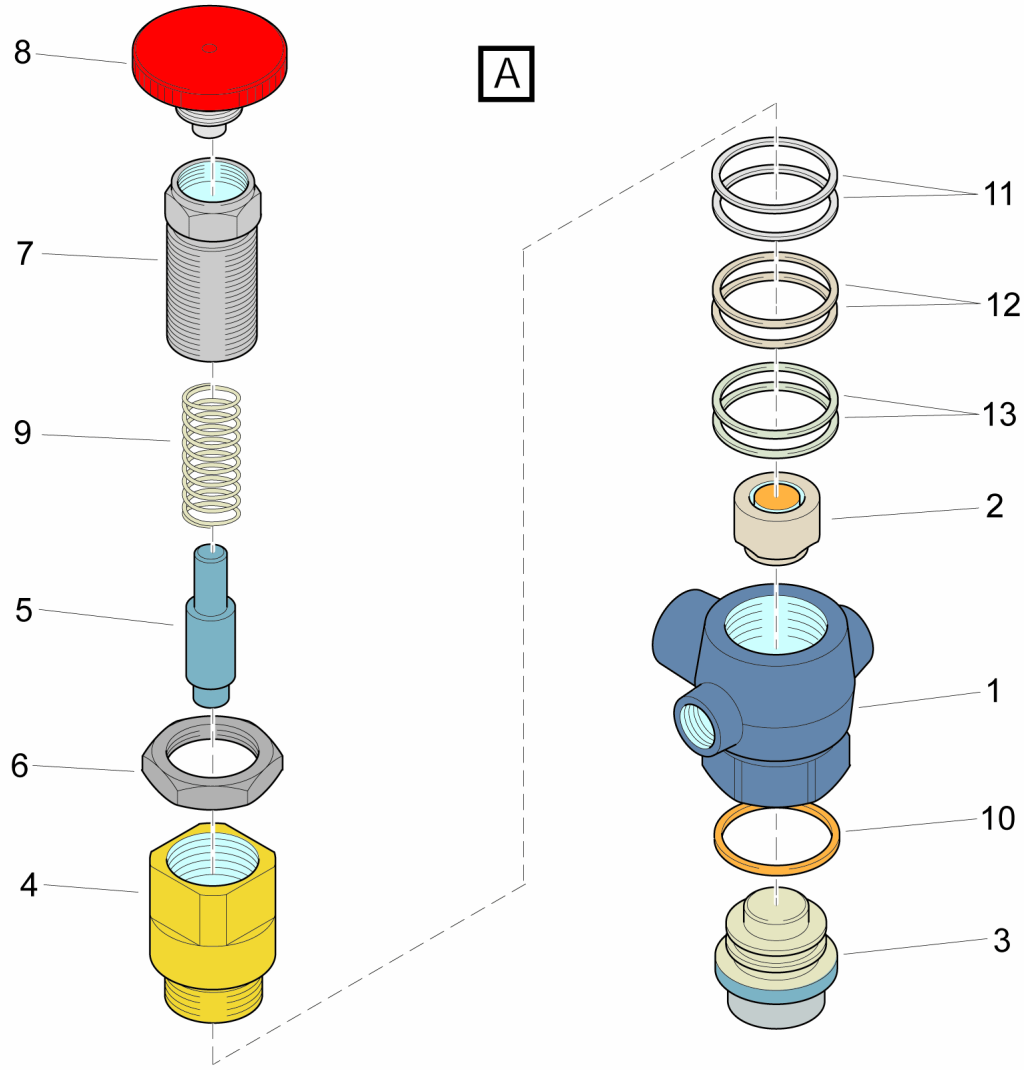

1250 0038 63

B0003910


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
-	2910 3019 00	1	REPAIR KIT	RENOVERINGSSATS		REF.NR. 10-13
1	–	1	HOUSE	HUS		
2	1011 3497 00	1	DISK	SKIVA		
3	1011 3496 00	1	SEAT	SÄTE		
4	1011 3495 00	1	SEAT	SÄTE		
5	1011 3498 00	1	GUIDE	STYRNING		
6	1010 5265 00	1	LOCK NUT	LÅSMUTTER		
7	1010 5266 00	1	SET SCREW	STOPPSKRUV		
8	1010 5267 00	1	SCREW	SKRUV		
9	1090 0367 00	1	SPRING	FJÄDER		
10	0653 0525 00	1	GASKET	PACKNING		25 32 0,5 A
11	0653 7247 00	2	SHIM	MELLANLÄGG		25 32 0,5 A
12	0653 7242 00	5	SHIM	MELLANLÄGG		25 32 0,1 A
13	0653 7241 00	2	SHIM	MELLANLÄGG		25 32 0,05 A

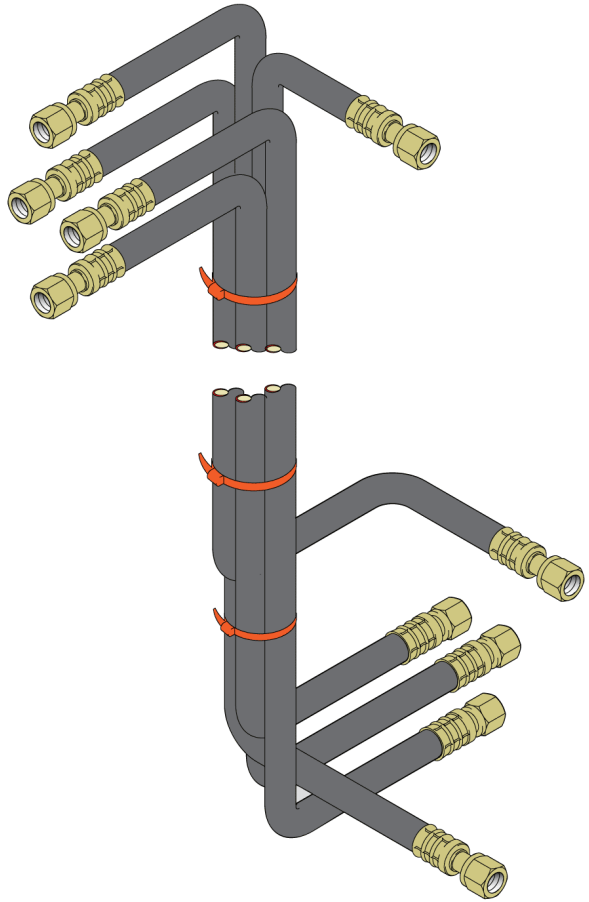

B0015365

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
AC1	3176 6856 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3000 R2AT
AC2	0574 2277 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2000 R2AT
AC3	0574 3257 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 500 R2AT
AC5	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
AF	0574 4037 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 4000 R1T
DW	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
LU	3176 8880 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 5000 R2AT
LU1	0574 2263 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 800 R2AT
1AF2	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
2AF2	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT


WATERFLOW GUARD / SPOLVATTENVAKT

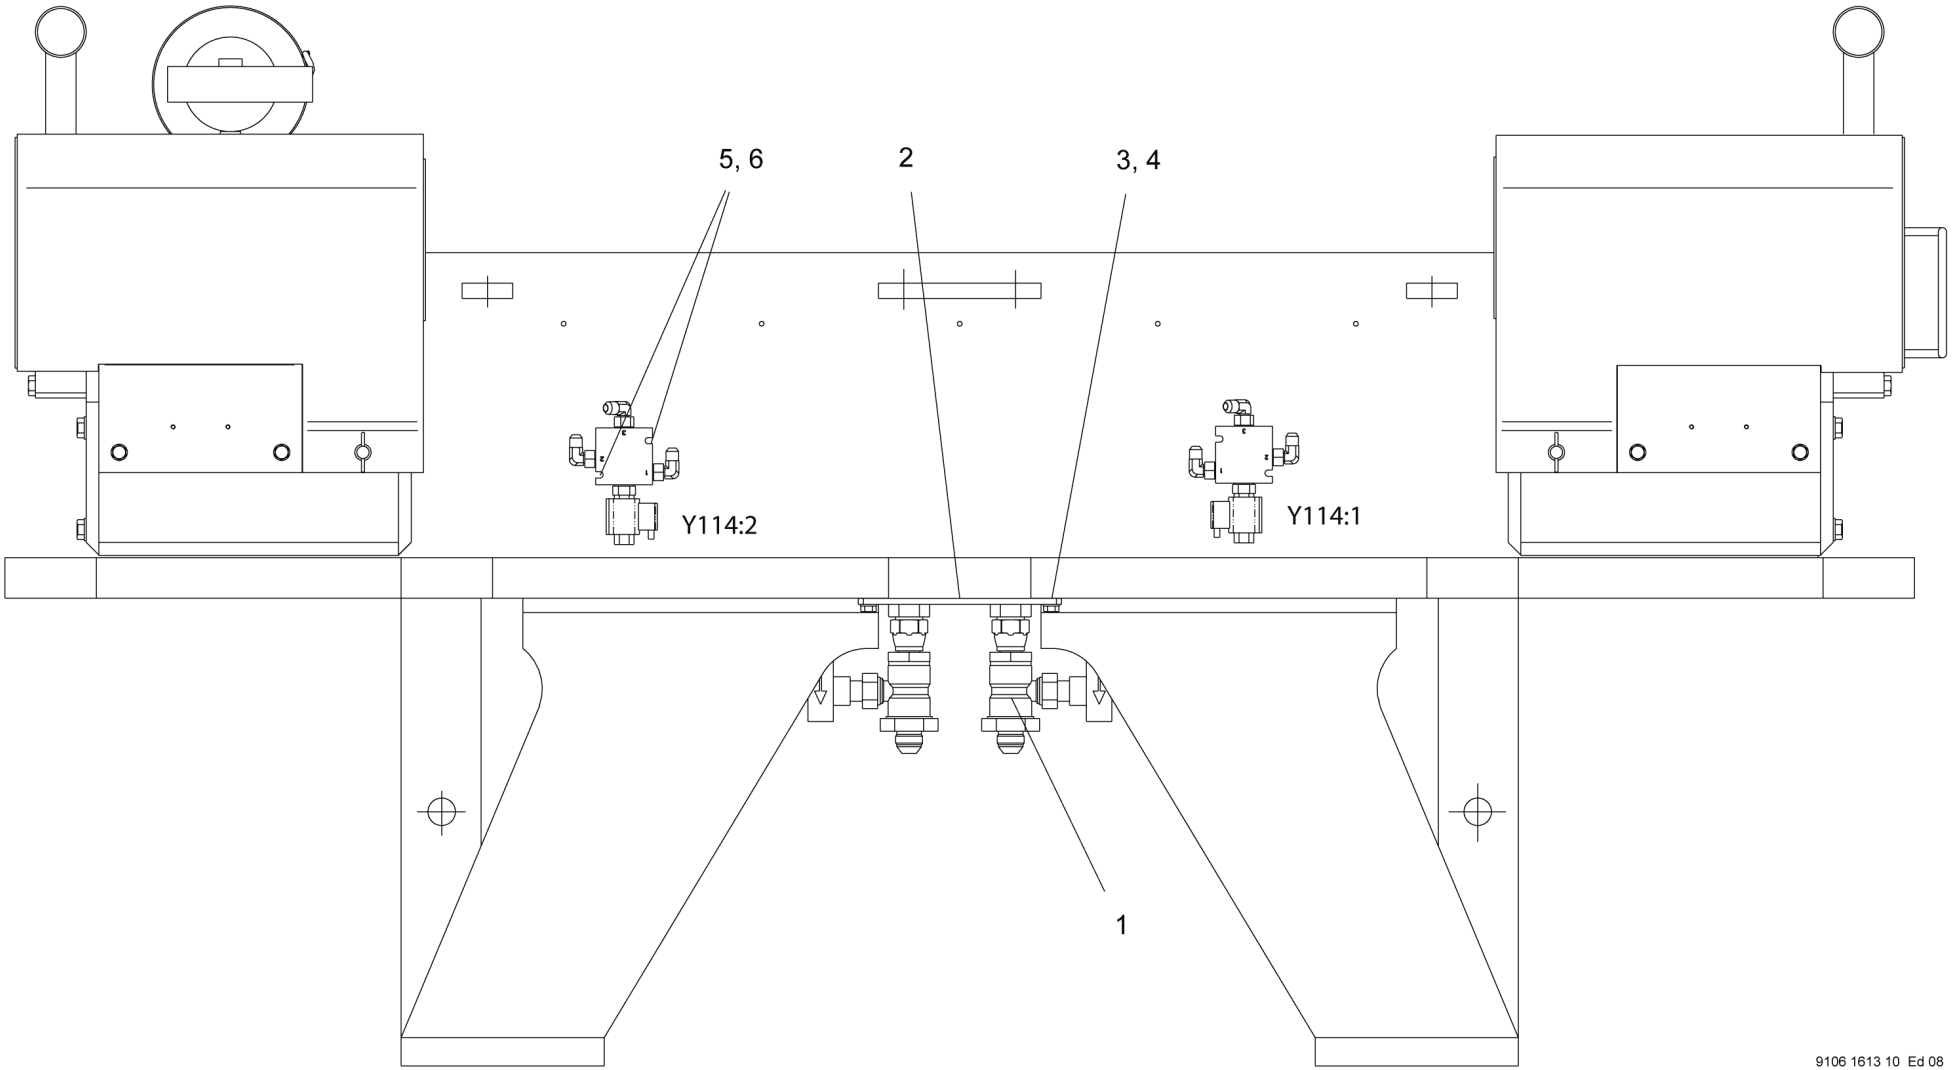

B0043659

WATERFLOW GUARD / SPOLVATTENVAKT

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
A01	9110 9958 62	1	HOSE SET	SLANGSATS	Page 739	
1	–	2	WATERFLOW GUARD	SPOLVATTENVAKT	Page 741	WATERFLOW GUARD
2	9106 0888 18	1	ATTACHMENT	FÄSTE		
3	0147 1323 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 20 -8.8 FZB
4	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
5	0147 1252 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		
6	0301 2321 00	20	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
7	3217 8988 60	1	ELECTRIC SET	ELSATS	Page 745	STOP DRILLING NO FLUSHING WATER

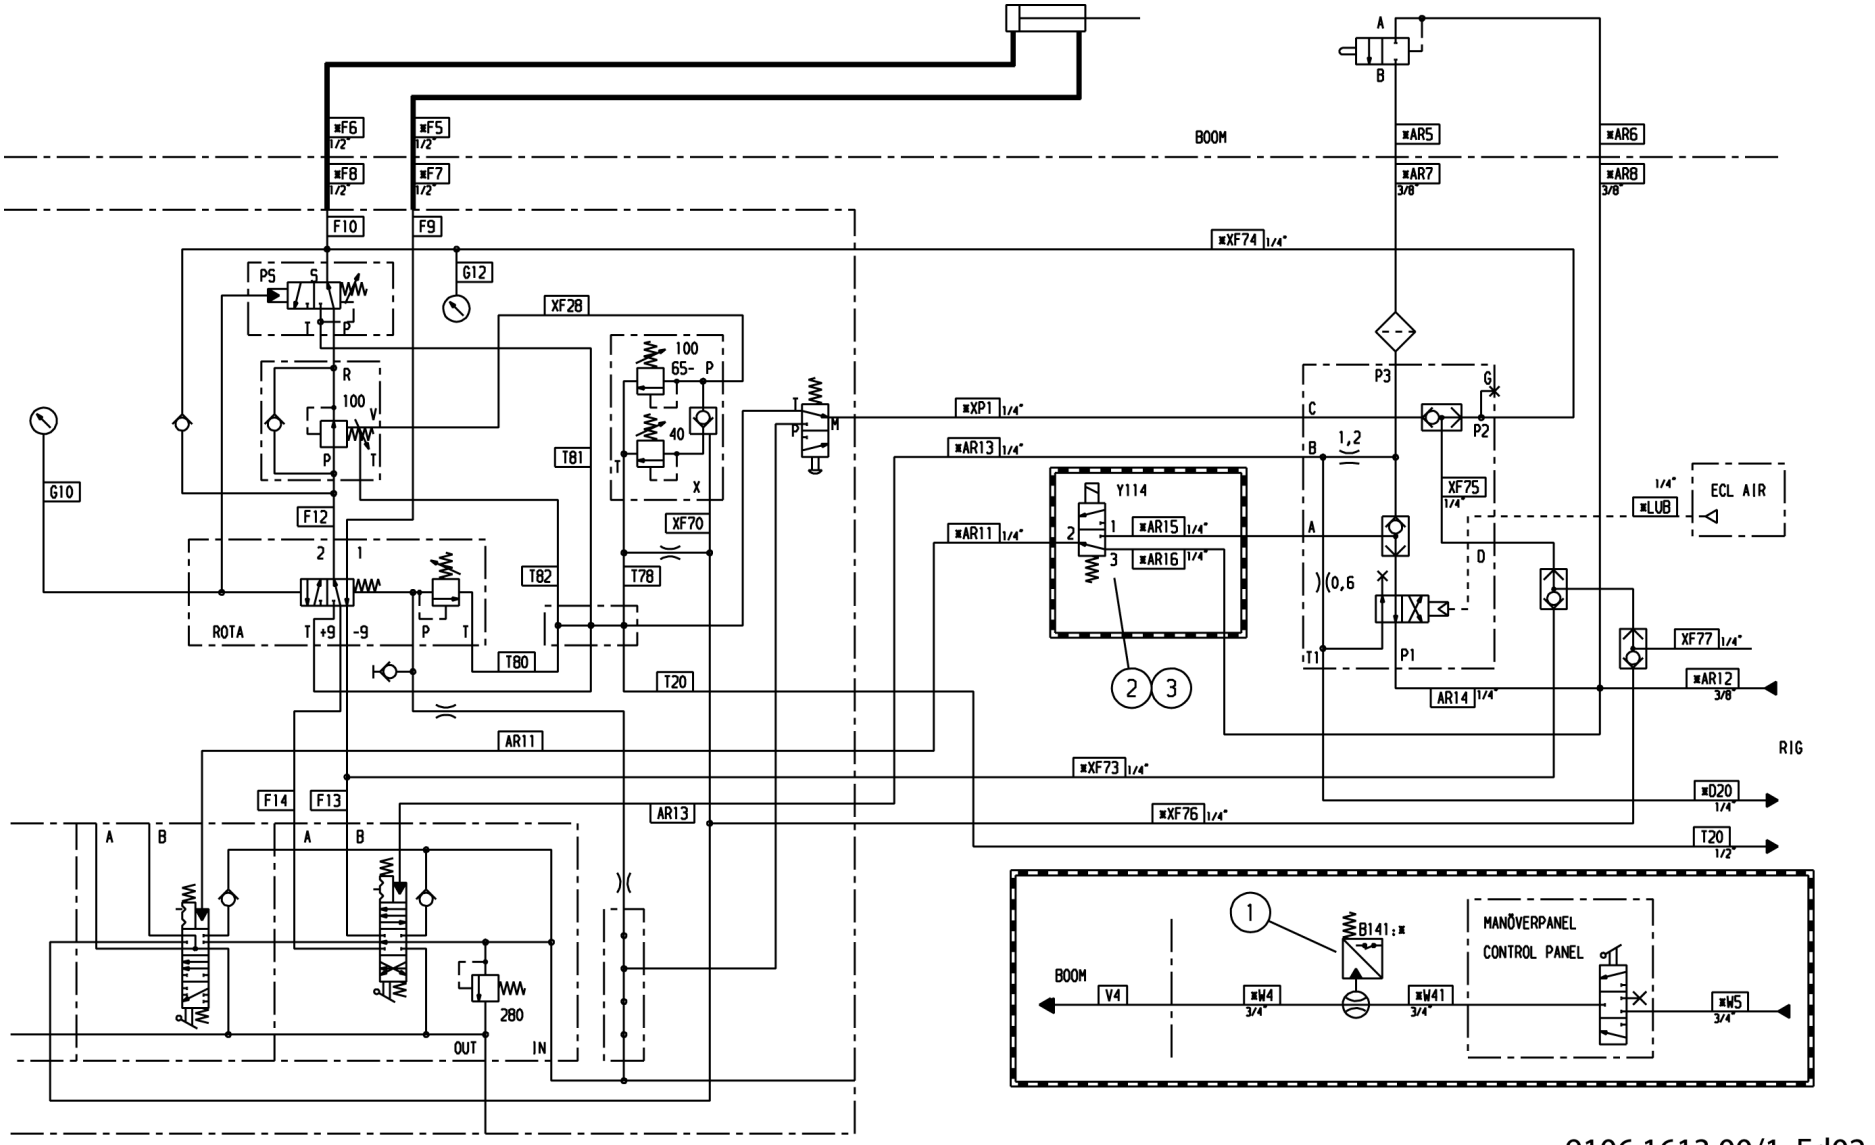


9106 1613 00/1 Ed02

B0009970

HOSE SET / SLANGSATS

9110 9958 62


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1AR15	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
1AR16	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
1W3	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
1W4	0574 3320 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2300 R2AT
2AR15	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
2AR16	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
2W3	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
2W4	0574 3320 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2300 R2AT

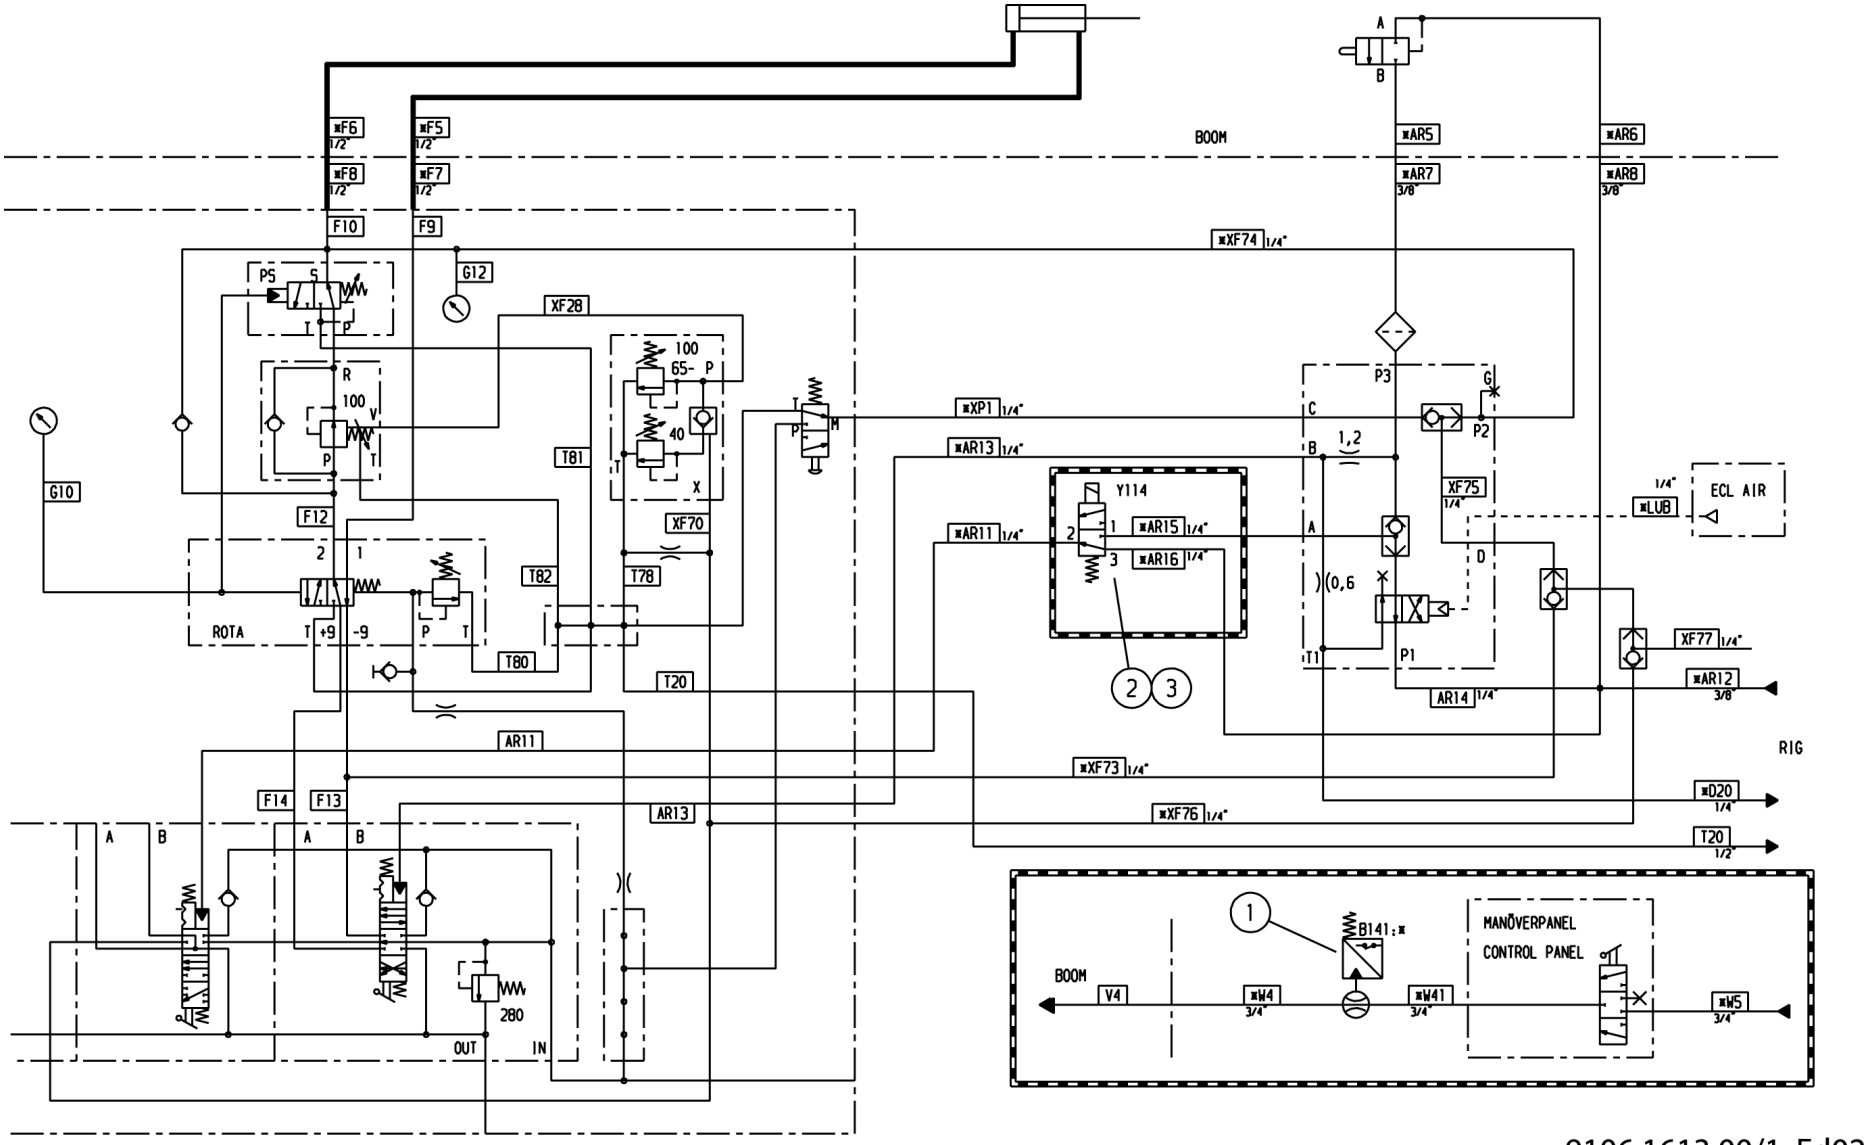

9106 1613 00/1 Ed02

B0009970


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9955 30	1	FLOW GUARD	FLÖDESVAKT		
2	9106 0630 14	1	DIRECTION VALVE	RIKTNINGSVENTIL	Page 743	

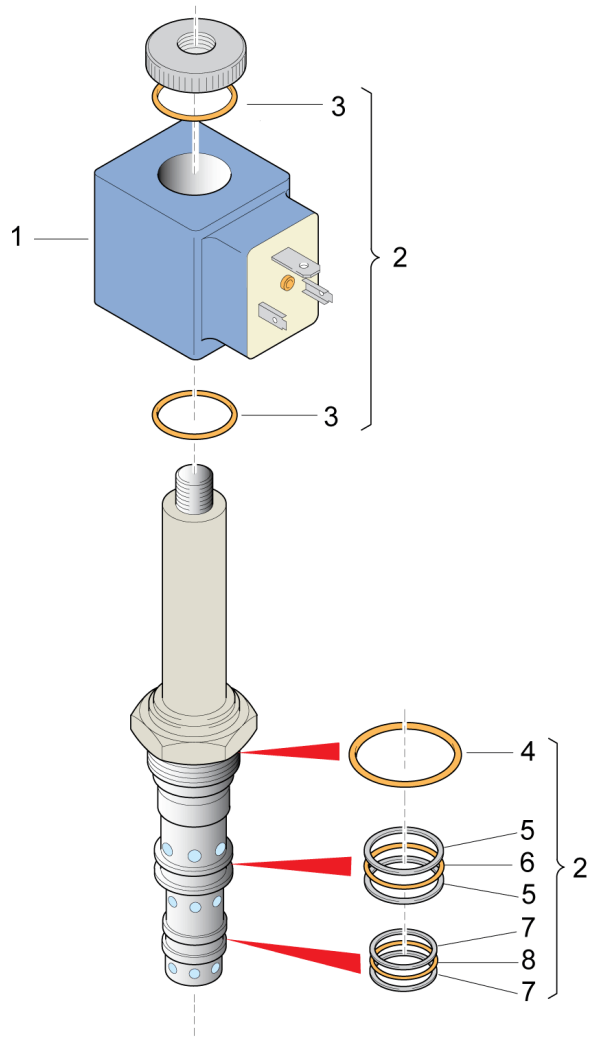

1250 0234 73

B0047201

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3222 3106 10	1	SOLENOID	MAGNETSPOLE		
2	3128 3087 31	1	SEAL KIT	TÄTNINGSSATS		INCL.POS.3-8
3	–	2	O-RING	O-RING		NOT SOLD SEPARATELY
4	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
5	–	2	BACK-UP RING	STÖDRING		NOT SOLD SEPARATELY
6	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
7	–	2	BACK-UP RING	STÖDRING		NOT SOLD SEPARATELY
8	–	1	O-RING	O-RING		NOT SOLD SEPARATELY

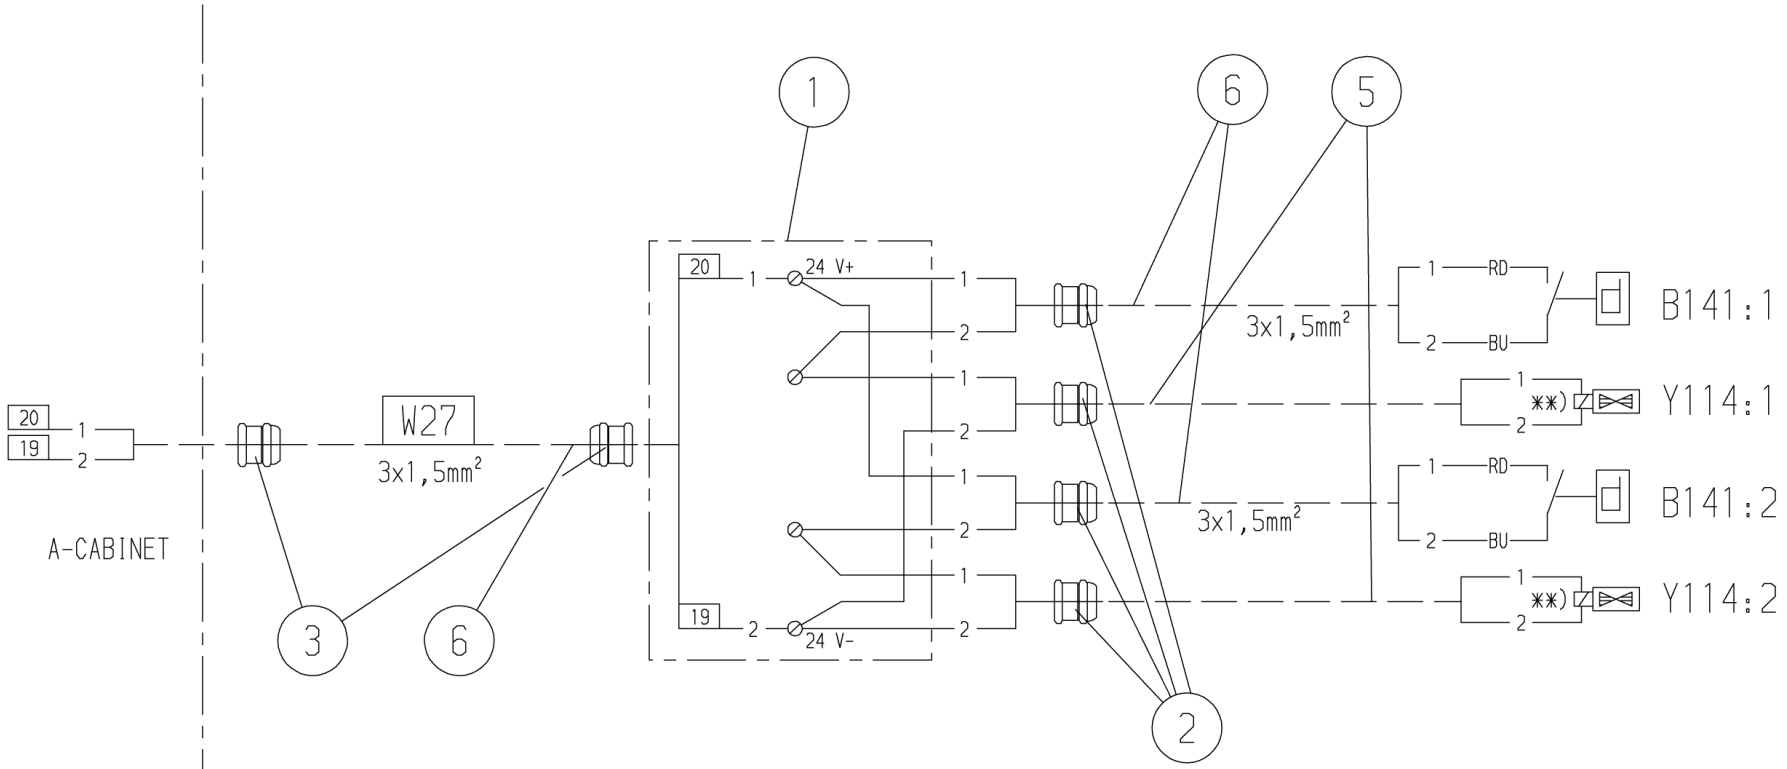

3217 8988 60 Ed03


B0046831

ELECTRIC SET / ELSATS

3217 8988 60

STOP DRILLING
NO FLUSHING WATER

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	1089 0227 01	1	JUNCTION BOX	KOPPLINGSDOSA		5XPG11/PR18,6 E14 395 17
2	0697 9745 66	4	ADAPTER	ADAPTER		PG 11 - M 16X1,5
2	0698 5141 40	4	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 2-7 B1
3	0697 9745 66	1	ADAPTER	ADAPTER		PG 11 - M 16X1,5
3	0698 5140 60	2	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
5	3217 9882 04	2	VALVE PLUG	VENTILKONTAKT		3M 5MM 2X0,5 IP67 LED+Z-DIOD
6	3217 9882 14	2	CABLE COMPLETE	KABEL KOMPLETT		

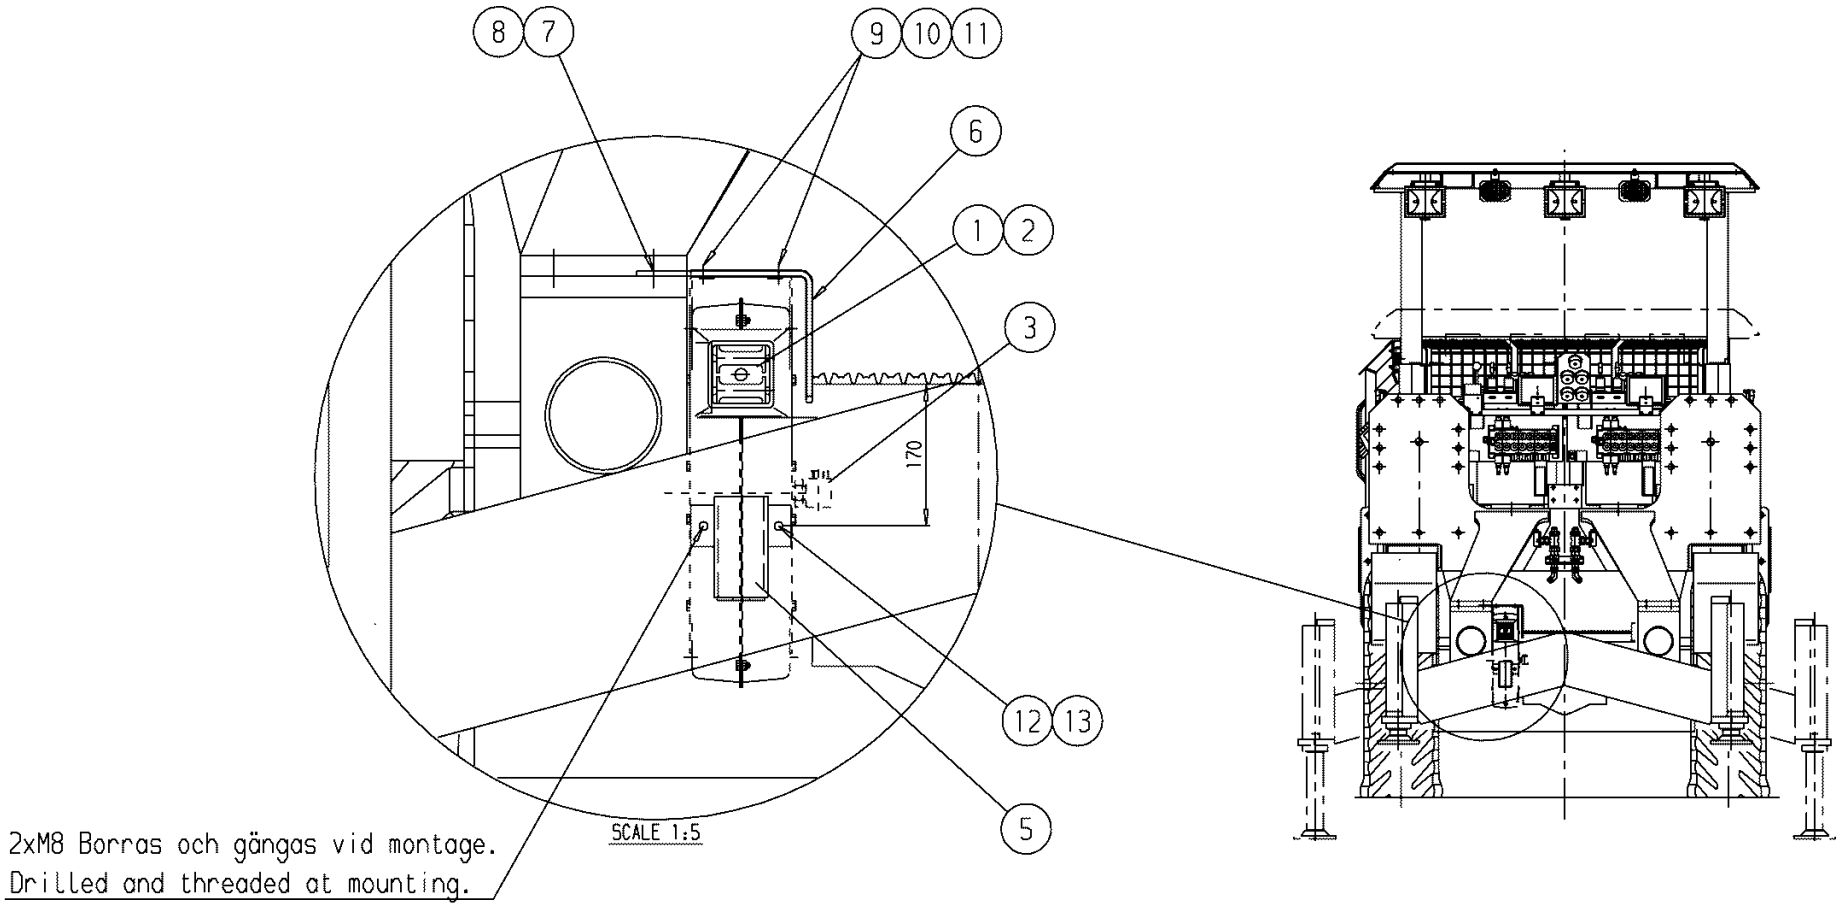


9106 1726 05

B0011183

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9783 02	1	HOSE REEL	SLANGVINDA		
2	3217 9390 01	1	NOZZLE	MUNSTYCKE		
3	8202 0311 29	1	BALL VALVE	KULVENTIL		BX 15 G 1/2 R 1/2 -40BAR
5	–	1	HOLDER	HÅLLARE		
7	0147 1398 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 20 - 8.8 FZB
8	0301 2358 00	2	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
9	0147 1360 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
10	0291 1128 20	4	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040
11	0301 2344 00	8	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
12	0147 1322 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
13	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
14	–	1	HOSE SET	SLANGSATS	Page 749	


HOSE SET / SLANGSATS

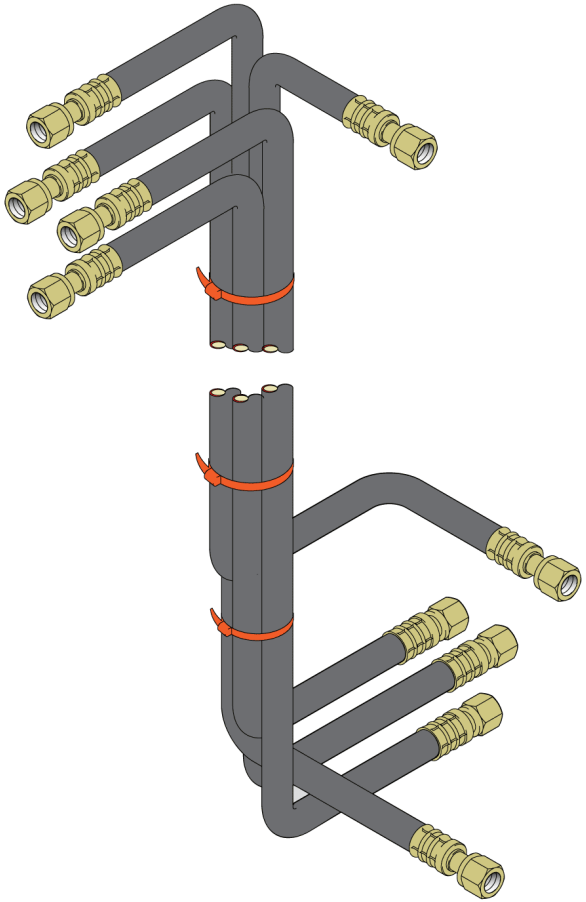

B0015365

HOSE SET / SLANGSATS


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
TV1	0574 2256 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 450 R2AT
TV2	0574 2269 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1200 R2AT

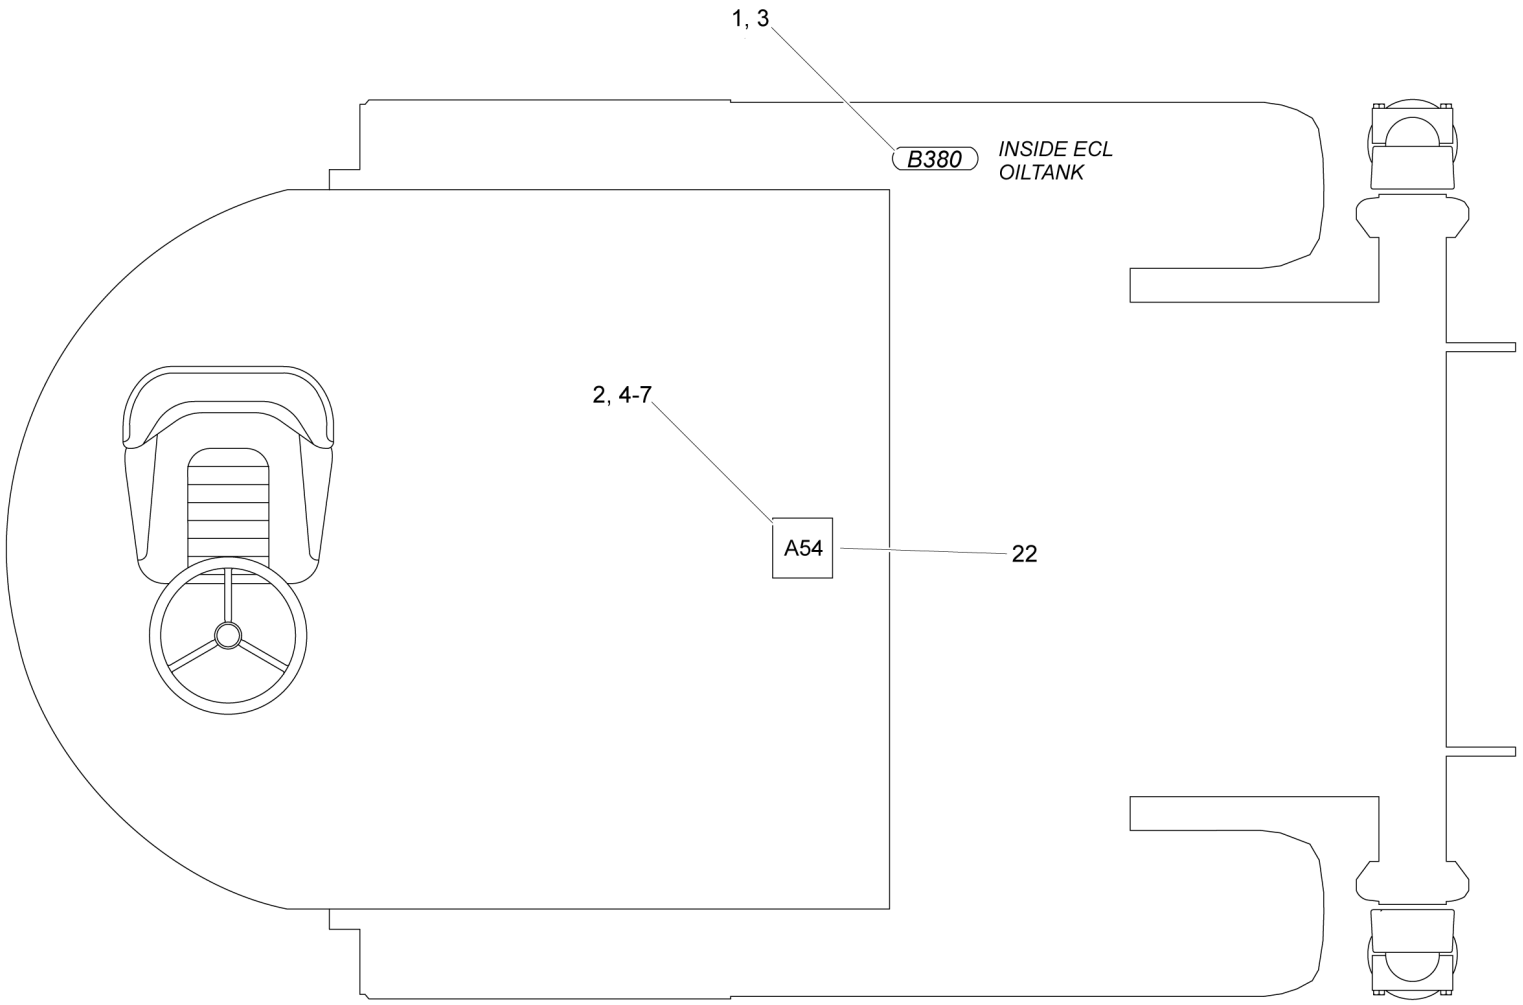

9106125032 00

B0057455

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
W14:1	9111 3891 06	12M	CABLE, 3-CORE	KABEL, 3-LEDARE		3X1,5
1	9106 2192 15	1	SENSOR	GIVARE		
2	9106 1445 72	1	JUNCTION BOX	KOPPLINGSLÅDA	Page 753	
3	–	1	CABLE SET	KABELSATS	Page 755	B380->A54
4	–	1	ATTACHMENT	FÄSTE		
5	0216 1249 00	3	SCREW	SKRUV		M 6 X 25 DIN 7991 - 10.9
6	0301 2335 00	3	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
7	0291 1128 18	3	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040
8	0605 8505 00	1	BUSHING	BUSSNING		KR 1/2 - R 1/4
22	0697 9809 13	1	LOCK NUT	LÅSMUTTER		M16X1,5 A3
22	0698 5140 60	1	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
22	9111 3891 44	2M	CABLE, 2-CORE	KABEL, 2-LEDARE		2X1.5 D2=7.4

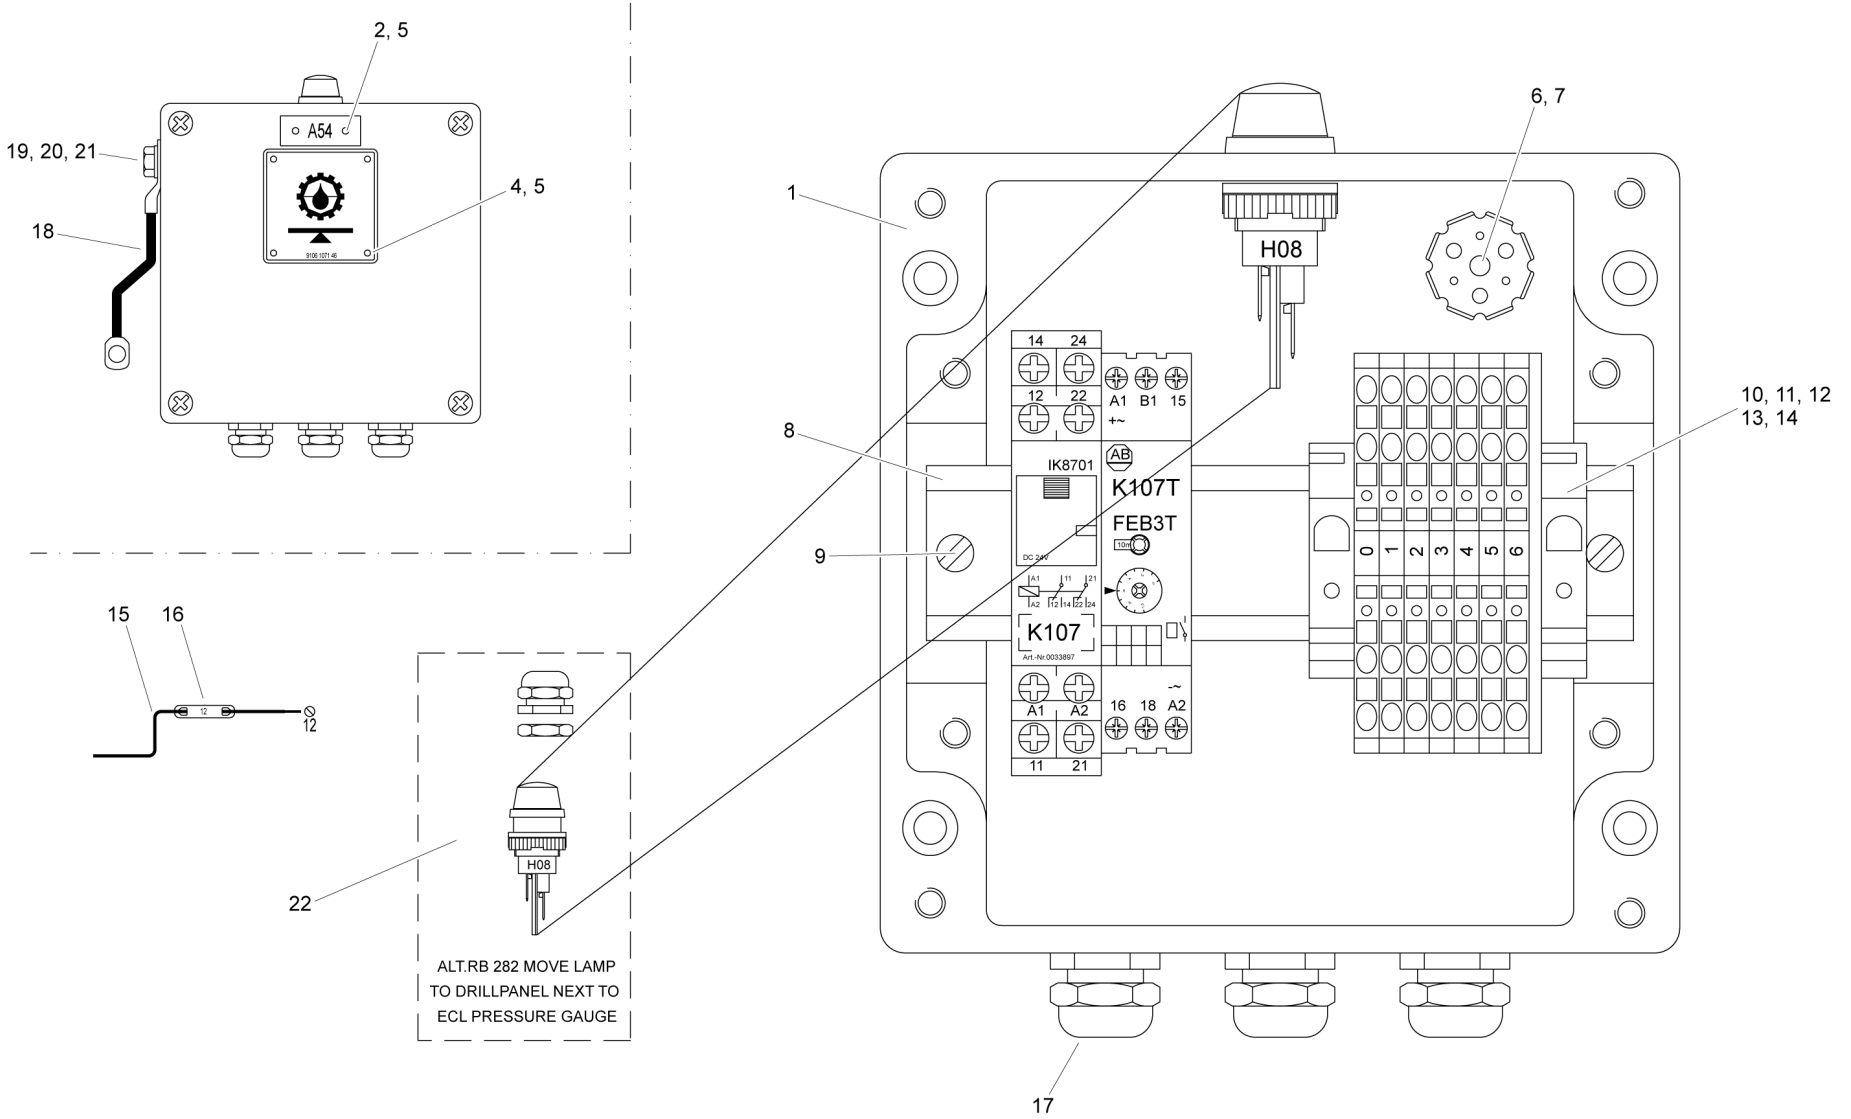
2, 5
A54
19, 20, 21
4, 5
18
15
16
12
22
H08
ALT.RB 282 MOVE LAMP
TO DRILLPANEL NEXT TO
ECL PRESSURE GAUGE
1
6, 7
H08
8
9
IK8701
K107T
FEB3T
K107
10, 11, 12
13, 14
17
9106144573 17

B0056726

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
K107T	3217 9299 06	1	TIMING RELAY	TIDRELÄ		
K107	3217 9583 01	1	RELAY	RELÄ		IK 8701.12 24V DC D & S 24 VOLT 16A
H08	3176 4158 00	1	BULB	GLÖDLAMPA		TYP.13913.ART.1378.
H08	3222 2778 00	1	LAMP HOLDER	LAMPHÅLLARE		
H08	3222 2778 01	1	LAMP CALOTTE	LAMPKALOTT		RED
1	3176 4400 54	1	JUNCTION BOX	KOPPLINGSLÅDA		
2	–	1	PLATE	SKYLT		
4	9106 1071 46	1	LUBR. OIL TANK	SMÖRJOLJEBEHÅL		
5	0129 3207 00	6	BLIND RIVET	BLINDNIT		3,2 X 9 TAP / D 48 BS
6	5112 2216 04	1	EARTH TERMINAL	JORDPLINT		
7	0226 0351 07	1	TAPPING SCREW	GÄNGANDE SKRUV		C M 5 12
8	3176 4363 08	0.15M	MOUNTING RAIL	MONTERINGSSKENA		TS35 X 7.5 E29 208 07
9	0160 1244 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 6 X 12 - 4.8
10	3176 4049 00	6	TERMINAL BLOCK	KOPPLINGSPLINT		ZDU 2.5/4AN
11	3176 4049 01	1	END PLATE	ÄNDPLATTA		FOR ZDU 2,5/4A
12	3176 4049 90	1	MARKING PLATE	MÄRKSKYLT		0
13	3176 4491 01	1	MARKING PLATE	MÄRKSKYLT		5FW 1-50 1-50
13	3176 4491 02	1	MARKING PLATE	MÄRKSKYLT		5FW 51-100 TERMINAL MARKERS
14	3176 4049 51	2	END SUPPORT	ÄNDSTÖD		TERMINAL MODULE
15	0017 2100 30	2M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 1 MM2 BLUE 1MM BLUE
17	0698 5140 60	3	CABLE GLAND	KABELFÖRSKRUVN.		M16X1,5 4,5-10 B1
18	3222 3048 77	1	GROUND BRAID	JORDFLÄTA		
19	0147 1322 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
20	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
21	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

CABLE SET / KABELSATS


B380->A54

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
10	3217 9882 18	1	CABLE COMPLETE	KABEL KOMPLETT		

CABLE REEL / KABELVINDA
LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	CABLE REEL	KABELVINDA	759	
–	– CABLE REEL	– KABELVINDA	761	
–	– – CABLE REEL	– – KABELVINDA	763	
3215 7521 00	– – – DRUM	– – – TRUMMA	765	RAC 614-301
3217 3913 81	– – – HYDRAULIC UNIT	– – – HYDRAULENHET	767	CABLE REEL
3217 9034 20	– – – – HYDRAULIC MOTOR	– – – – HYDRAULMOTOR	769	INCL. POS 2, 3
3217 3909 80	– – – GEAR HOUSING	– – – VÄXELHUS	771	
–	– SWING ARM	– SVÄNGARM	775	LEFT,CABLE VX2
9110 9555 00	– – LOCKING	– – LÅSNING	777	
9106 1165 00	– – HASP	– – HASP	779	FOR SWINGARM, EL CABINETT
9106 1165 01	– – – HASP	– – – HASP	781	ARM MOUNTED ON REAR FRAME
9110 9560 00	– – CABLE STEERING	– – KABELSTYRNING	783	
3217 9880 85	– COLLECTOR KIT	– KOLLEKTOR SATS	785	
3217 9880 81	– – COMMUTATOR	– – KOLLEKTOR	788	
5112 3183 21	– – – GUIDE SET	– – – STYRSATS	792	
5112 3045 87	– BRAKING CHOPPER	– BROMSSTYRENHET	795	
5112 0000 30	– – APPARATUS PANEL	– – APPARATLÅDA	797	X15

CABLE REEL / KABELVINDA

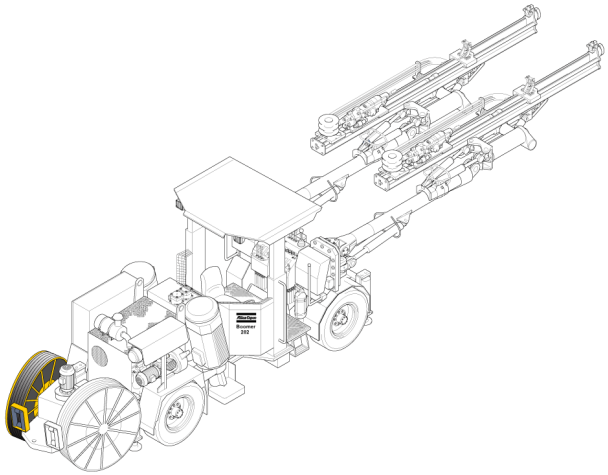




B0057491


CABLE REEL / KABELVINDA

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
800	–	1	CABLE REEL	KABELVINDA	Page 761	
805	–	1	SWING ARM	SVÄNGARM	Page 775	LEFT,CABLE VX2
820	3217 9880 85	1	COLLECTOR KIT	KOLLEKTOR SATS	Page 785	
822	5112 3045 87	1	BRAKING CHOPPER	BROMSSTYRENHET	Page 795	

CABLE REEL / KABELVINDA

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
800	–	1	CABLE REEL	KABELVINDA	Page 763	

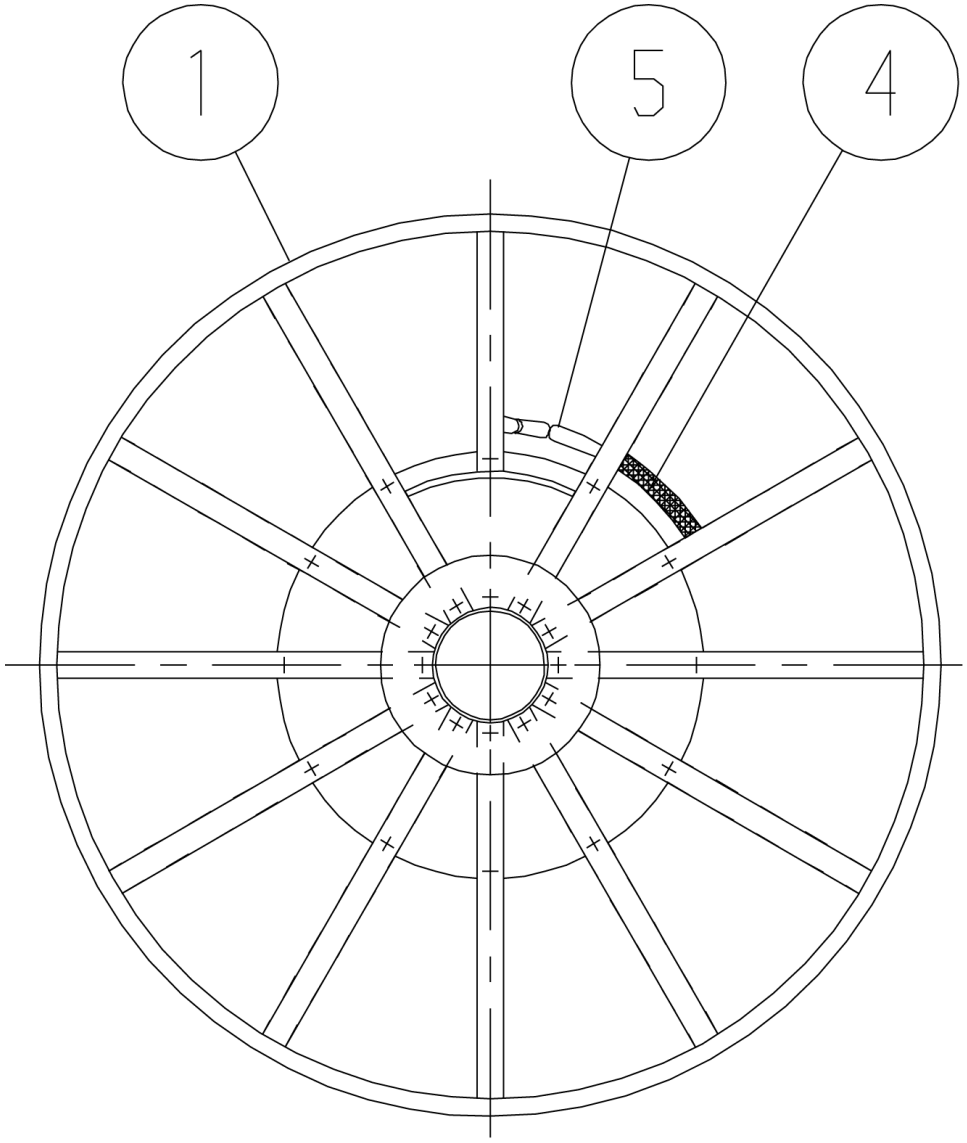

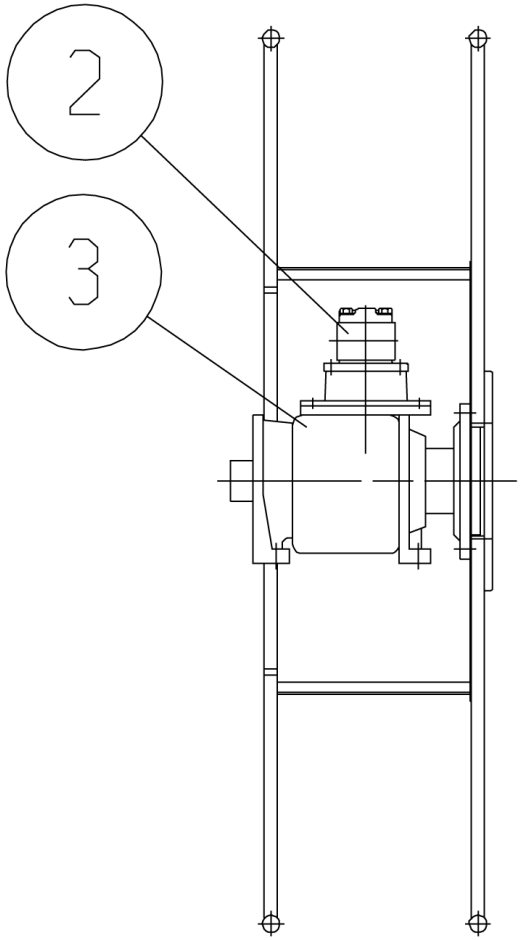


3217 7999 20/1 Ed07

B0008638


CABLE REEL / KABELVINDA


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3215 7521 00	1	DRUM	TRUMMA	Page 765	RAC 614-301
2	3217 3913 81	1	HYDRAULIC UNIT	HYDRAULENHET	Page 767	CABLE REEL
3	3217 3909 80	1	GEAR HOUSING	VÄXELHUS	Page 771	
5	3176 8266 00	1	WIRE MESH HOSE	KABELSTRUMPA		
6	3163 1854 00	1	SHACKLE	SCHACKEL		

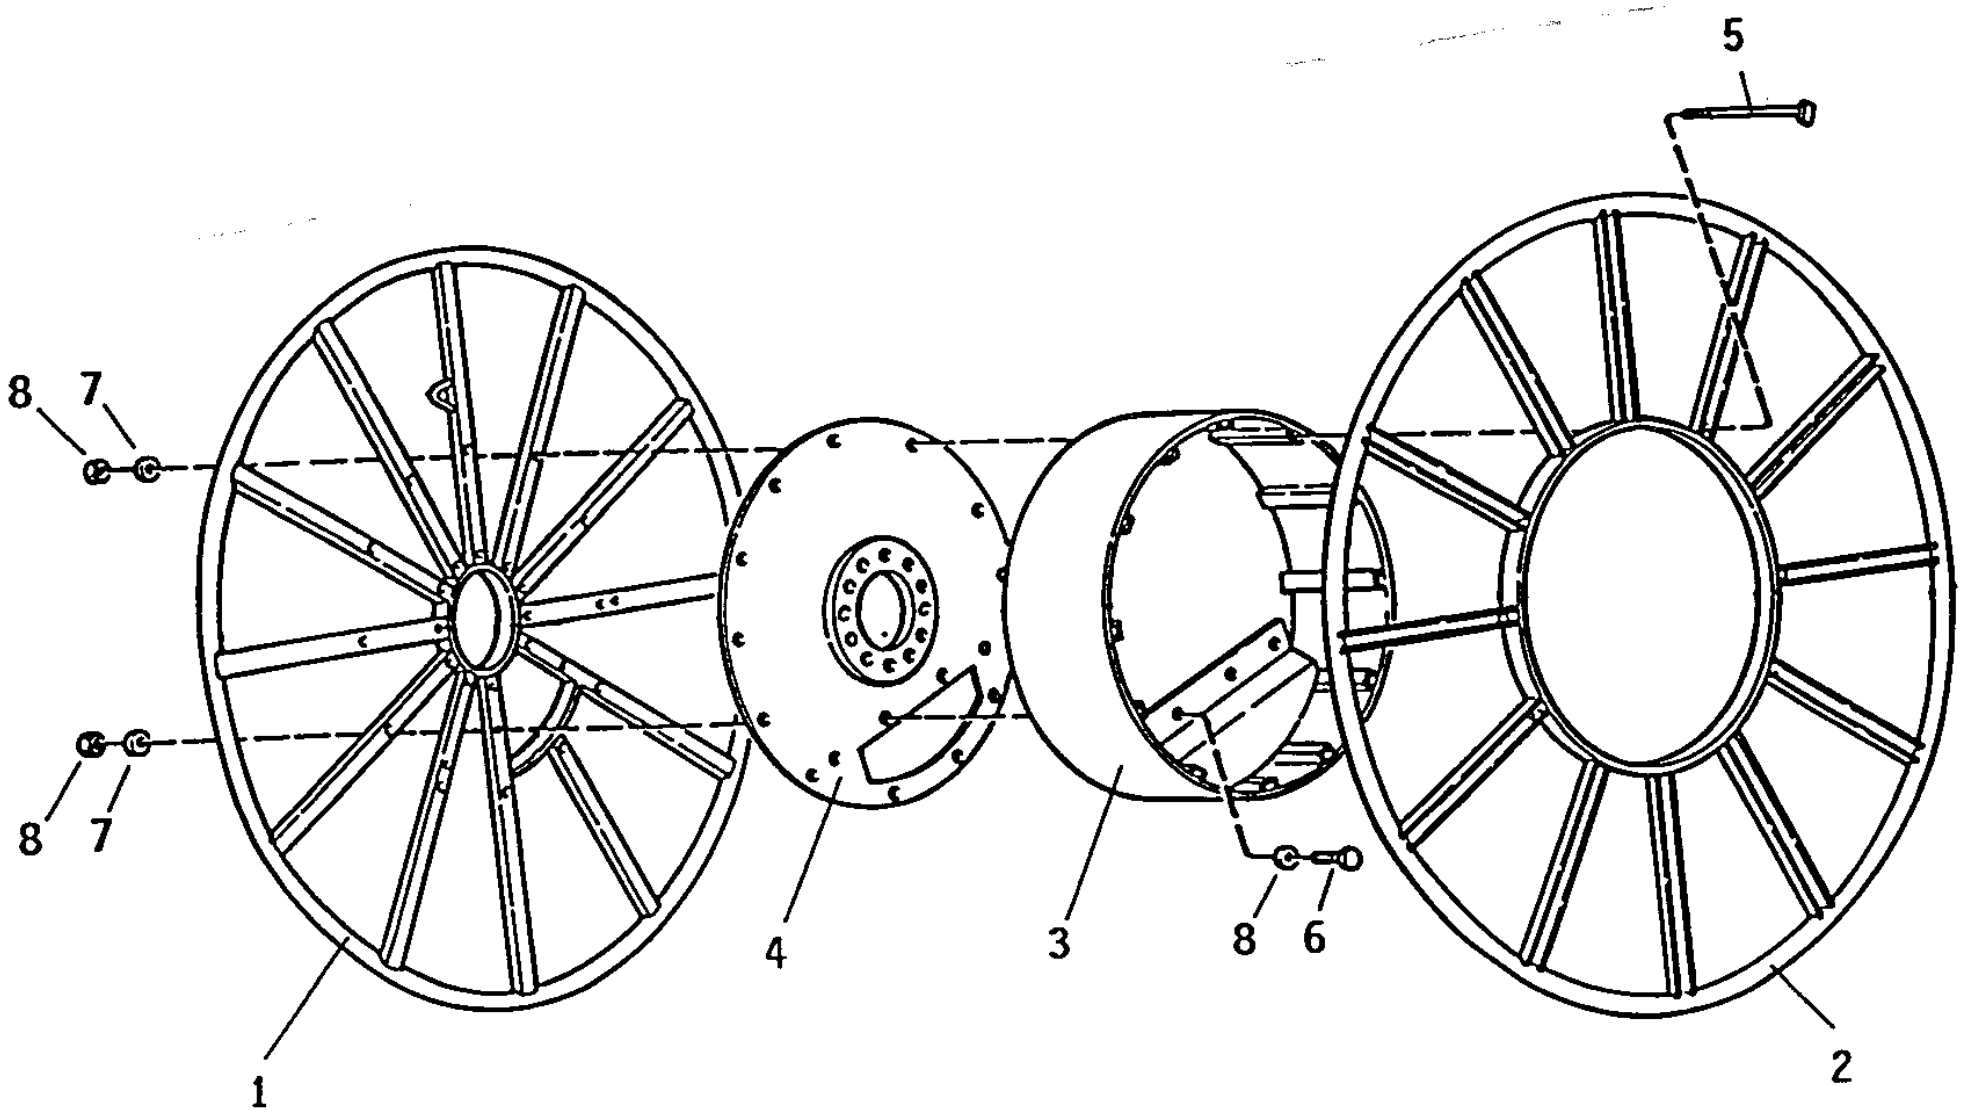

B0000084


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 5598 01	1	WHEEL	HJUL		
2	3217 5598 02	1	WHEEL	HJUL		
3	3215 7521 11	1	PLATE	PLÅT		
4	3217 5597 04	1	PROTECT. SHIELD	SKYDDSPLÅT		
5	3215 7521 12	12	BOLT	BULT		
6	0147 1360 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
7	0301 2344 00	20	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
8	0291 1128 20	16	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040

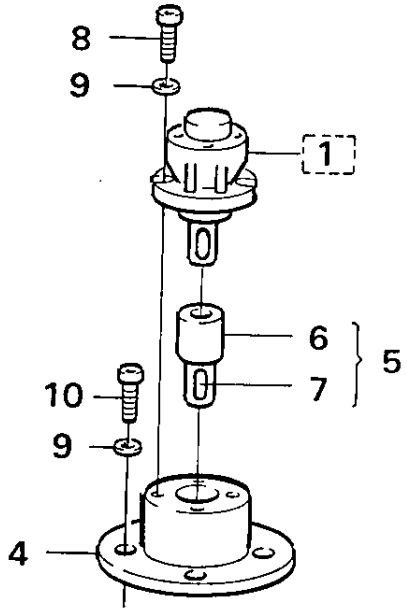

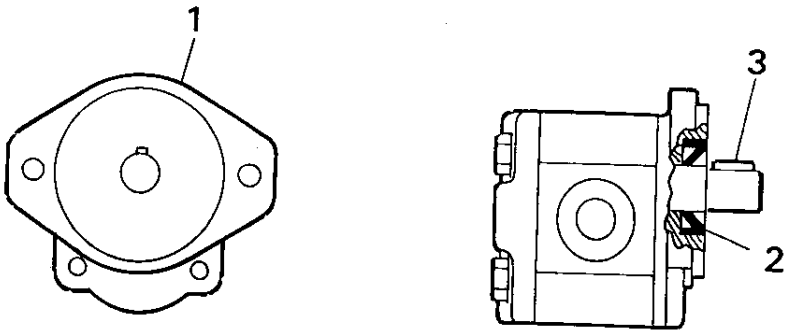


B0003436

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9034 20	1	HYDRAULIC MOTOR	HYDRAULMOTOR	Page 769	INCL. POS 2, 3
2	0666 6000 39	1	RADIAL LIP SEAL	RADIALTÄTNING		20 X 35 X 8 NBR
3	3128 3061 24	1	KEY	KIL		
4	3217 5599 01	1	INTERMED.FLANGE	MELLANFLÄNS		
5	9106 1438 80	1	SET	SATS		INCL. POS 6, 7
6	3217 3917 01	1	BUSHING	BUSSNING		
7	3217 3917 02	1	KEY	KIL		
8	0147 1362 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
9	0301 2344 00	6	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
10	0147 1360 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB

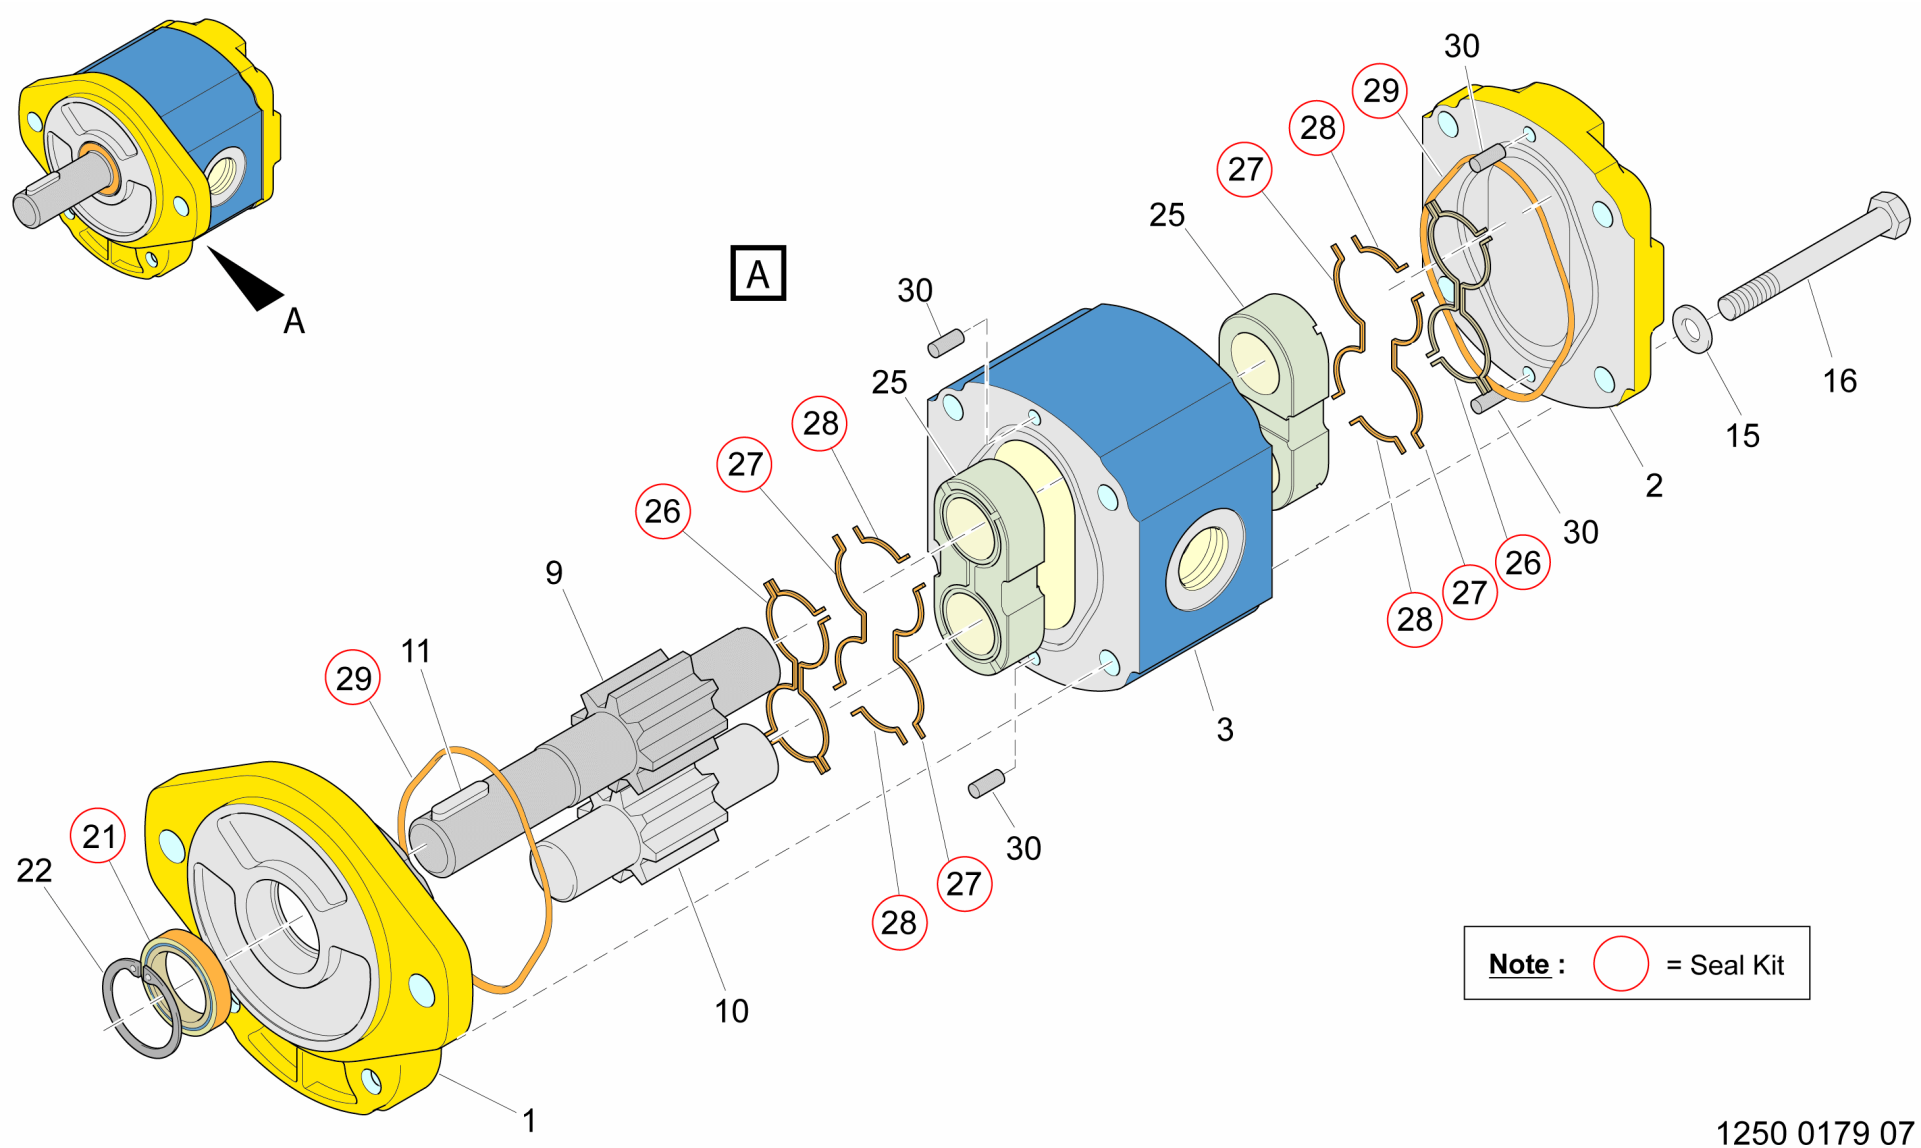
A
A
30
29
28
27
25
16
15
2
30
26
27
28
3
30
27
28
10
1
22
21
29
11
9
26
27
28
25
30
Note : = Seal Kit
1250 0179 07

B0038965

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3218 2006 65	1	SEAL KIT	TÄTNINGSSATS		POS.21,26-29
1	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
2	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
3	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
9	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
10	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
11	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
15	5507 8719 00	4	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
16	5507 8719 00	4	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
22	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
25	5507 8719 00	2	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
30	5507 8719 00	2	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY

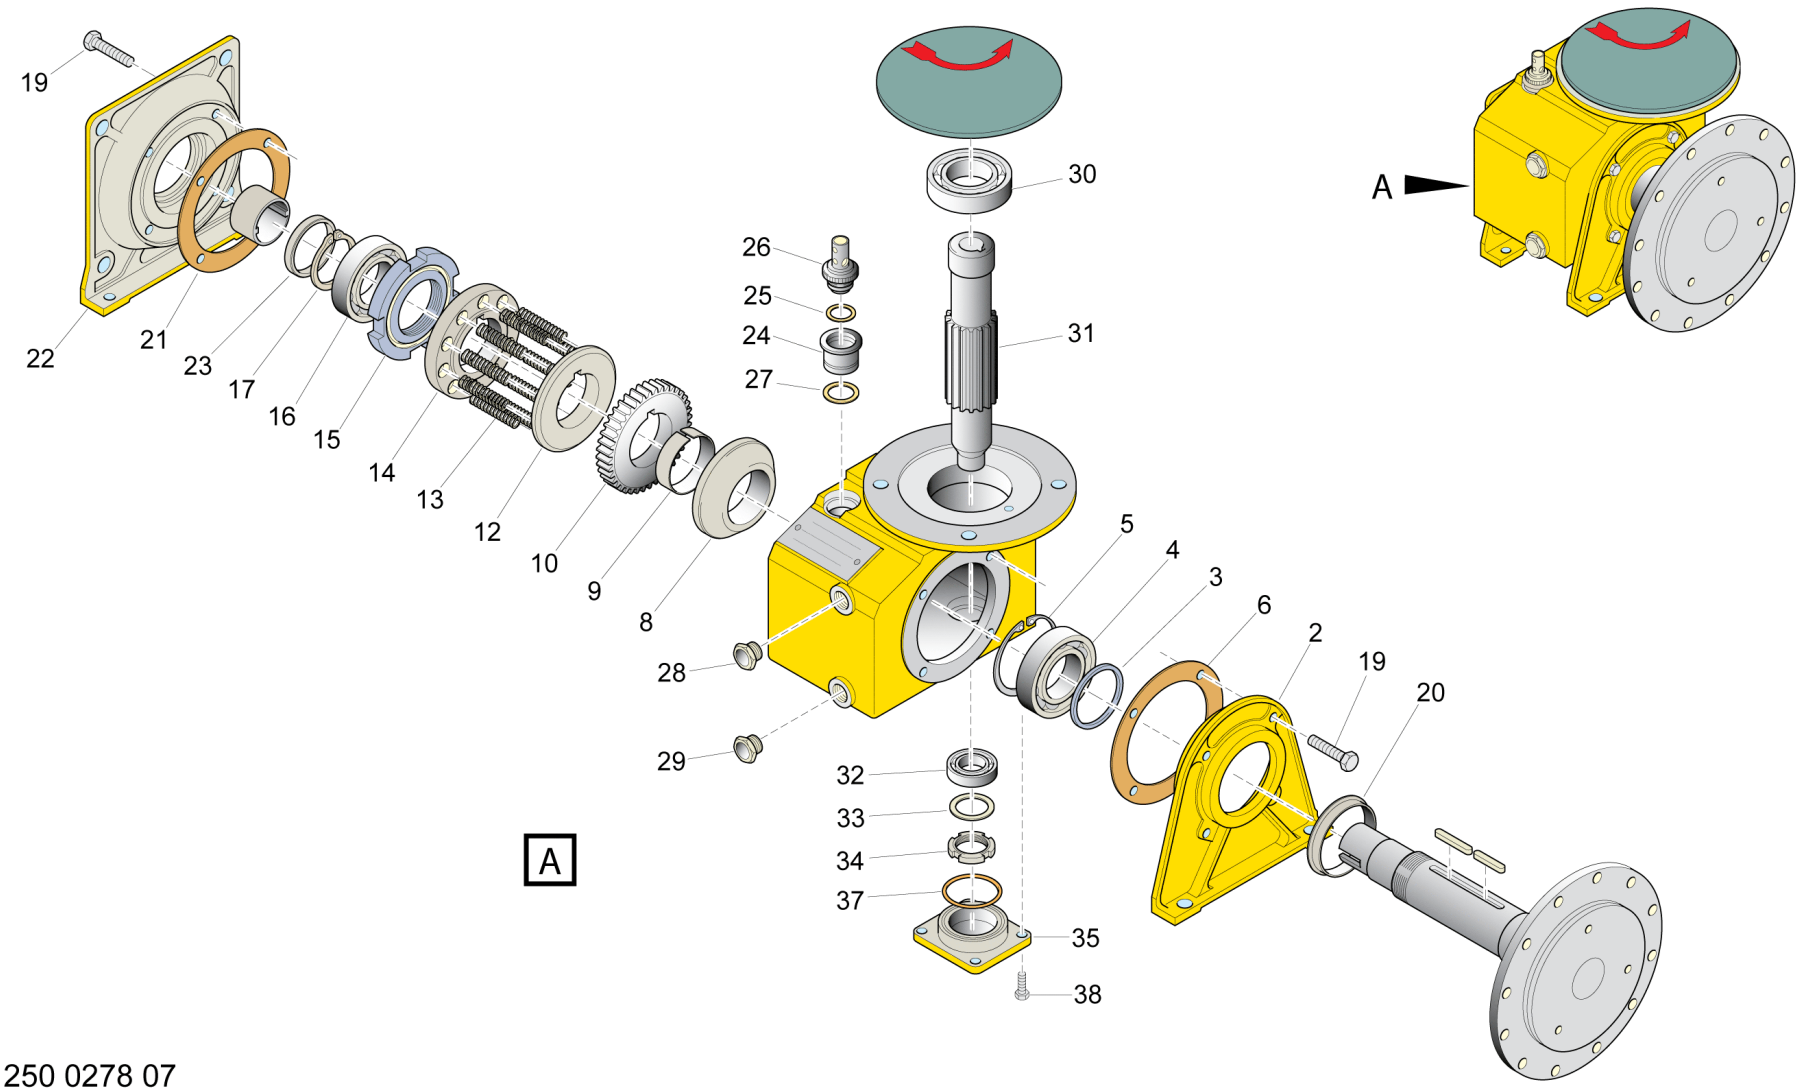

1250 0278 07


B0056826

GEAR HOUSING / VÄXELHUS 3217 3909 80

(Sheet 1 of 2)


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3217 3909 82	1	SEALING SET	PACKNINGSSATS		INCL.ITEM 3,6,20,21,23,25,27 AND 37
	3217 3909 83	1	FRICTION KIT	FRIKTIONSSATS		INCL.ITEM 8,10,12,13,31
	3217 3909 84	1	STAND FRAME	STATIVRAM		INCL.ITEM 2,22
	3217 3909 85	1	BEARING SET	LAGERSATS		INCL.ITEM 4,16,30,32
2	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
3	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
4	–	1	BEARING	LAGER		NOT SOLD SEPARATELY
5	0335 2178 00	1	CIRCLIP	SPÅRRING		SGH 130 X 4 DIN 472
6	–	1	GASKET	PACKNING		NOT SOLD SEPARATELY
8	–	1	COUPLING	KOPPLING		NOT SOLD SEPARATELY
9	–	1	INNER RING	INNERRING		NOT SOLD SEPARATELY
10	–	1	GEAR RING	KUGGKRANS		NOT SOLD SEPARATELY
12	–	1	SPRING HOLDER	FJÄDERHÅLLARE		NOT SOLD SEPARATELY
13	–	1	SPRING	FJÄDER		NOT SOLD SEPARATELY
14	3217 3909 13	1	HOLDER	HÅLLARE		
15	3217 3909 14	1	NUT	MUTTER		
16	–	1	BEARING	LAGER		NOT SOLD SEPARATELY
17	0335 1158 00	1	CIRCLIP	SPÅRRING		SGA 75 X 2,5 DIN 471
19	0211 1962 88	12	SCREW	SKRUV		MC6S M 8 X 30 - 12.9
21	–	1	GASKET	PACKNING		NOT SOLD SEPARATELY
22	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
23	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
24	3217 3909 21	1	BUSHING	BUSSNING		
25	3217 3909 23	1	SEAL RING	TÄTNINGSRING		
26	3217 3909 22	1	SETTING KEY	STÄLLNYCKEL		
27	3217 3910 24	1	SEAL RING	TÄTNINGSRING		
28	5112 0105 93	1	OIL LEVEL PLUG	OLJENIVÅPLUGG		
29	3217 3909 19	1	OIL PLUG	OLJEPLUGG		
30	–	1	BEARING	LAGER		NOT SOLD SEPARATELY
31	–	1	SHAFT	AXEL		NOT SOLD SEPARATELY
32	–	1	BEARING	LAGER		NOT SOLD SEPARATELY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
33	–	1	LOCK WASHER	LÅSBRICKA		NOT SOLD SEPARATELY
34	–	1	NUT	MUTTER		NOT SOLD SEPARATELY
35	3217 3909 29	1	COVER	LOCK		
37	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
38	0211 1963 91	4	SCREW	SKRUV		MC6S M 6 X 25 - 12.9

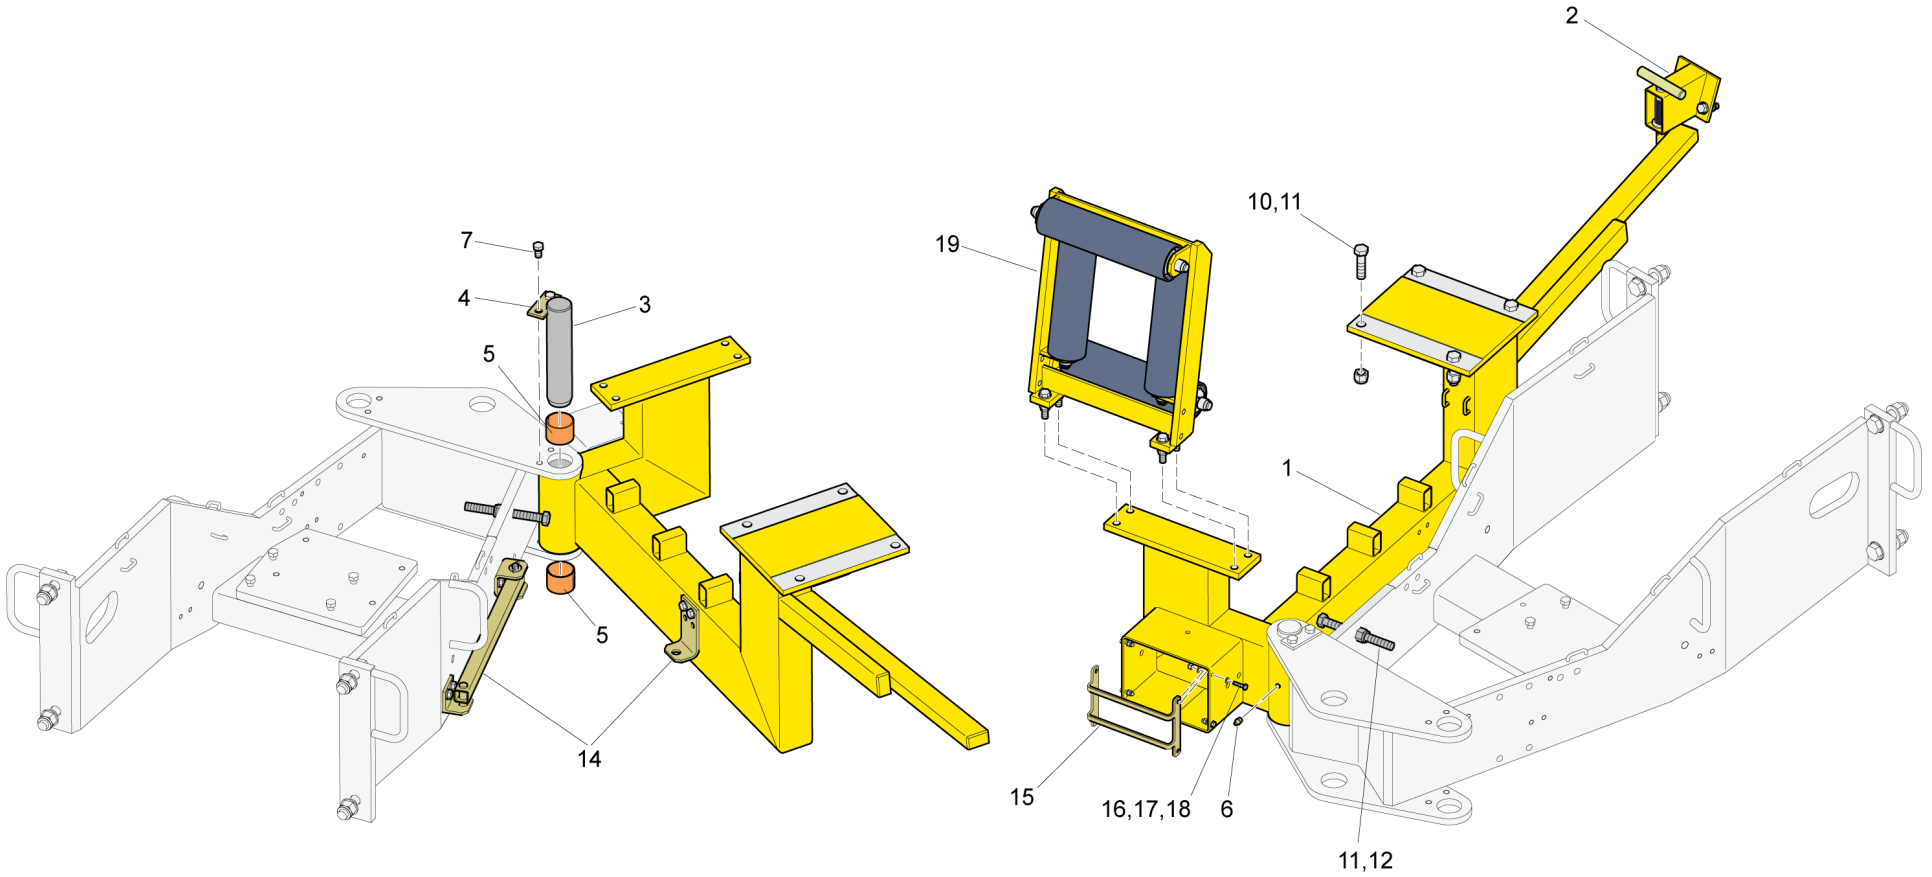

9110999470 08


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 9554 10	1	SWING ARM	SVÄNGARM		
2	9110 9555 00	1	LOCKING	LÅSNING	Page 777	
3	9110 6753 00	1	SHAFT	AXEL		
4	3217 6359 00	1	LOCK SHEET	LÅSBLECK		35X6 L=80
5	0500 4500 11	2	BUSHING	BUSSNING		50 / 55 X 40 WB802
6	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
7	0147 1398 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 20 - 8.8 FZB
10	0147 1481 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 60 - 8.8 FZB
11	0291 1128 25	4	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
12	0147 1958 99	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 160 - 8.8 FZB
13	0291 1128 25	1	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
14	9106 1165 00	1	HASP	HASP	Page 779	FOR SWINGARM, EL CABINETT
15	9106 1272 34	1	LAMP PROTECTION	LAMPSKYDD		
16	0147 1249 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 25 - 8.8 FZB
17	0291 1128 15	4	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
18	0301 2321 00	8	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
19	9110 9560 00	1	CABLE STEERING	KABELSTYRNING	Page 783	

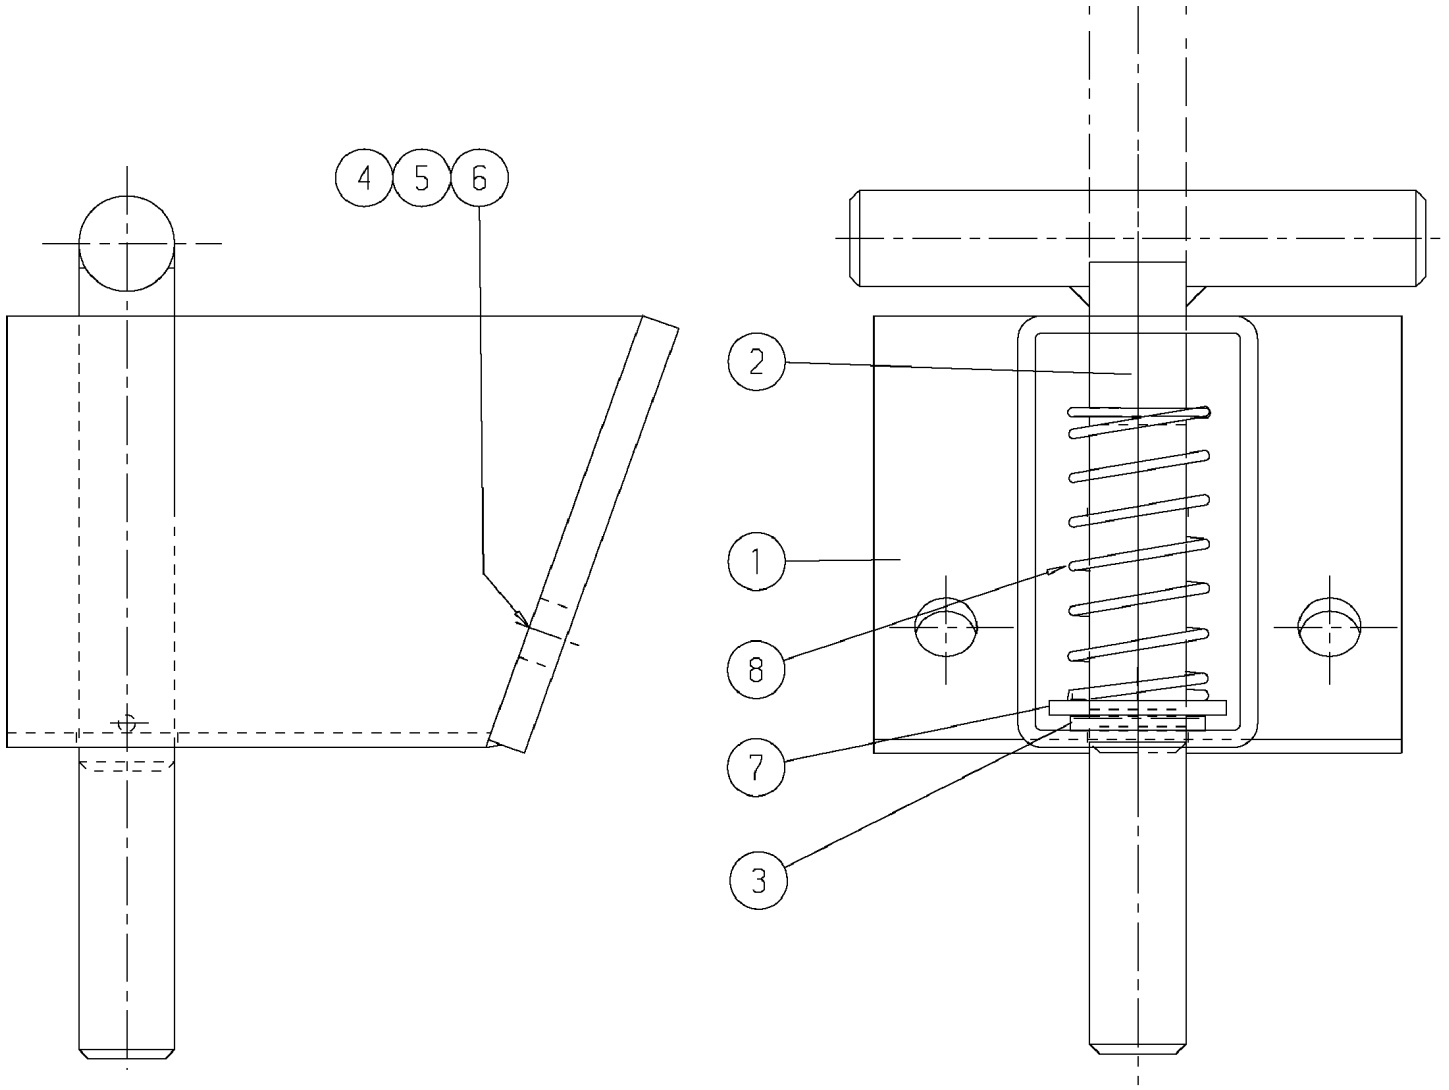

9110 9555 00/1 Ed05

B0001985

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	ATTACHMENT	FÄSTE		
2	9110 9555 02	1	CATCH	SPÄRR		
3	0108 1200 00	1	SPRING PIN	RÖRPINNE		3 X 28 DIN 1481
4	0147 1403 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 40 - 8.8 FZB
5	0291 1128 22	2	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
6	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
7	0301 2394 00	1	PLAIN WASHER	RUNDBRICKA		21 / 37 X 3 - HB 200 FZB
8	9110 9555 12	1	COMPRESS.SPRING	TRYCKFJÄDER		L0 61,D 2.0,DI 23,DO 27

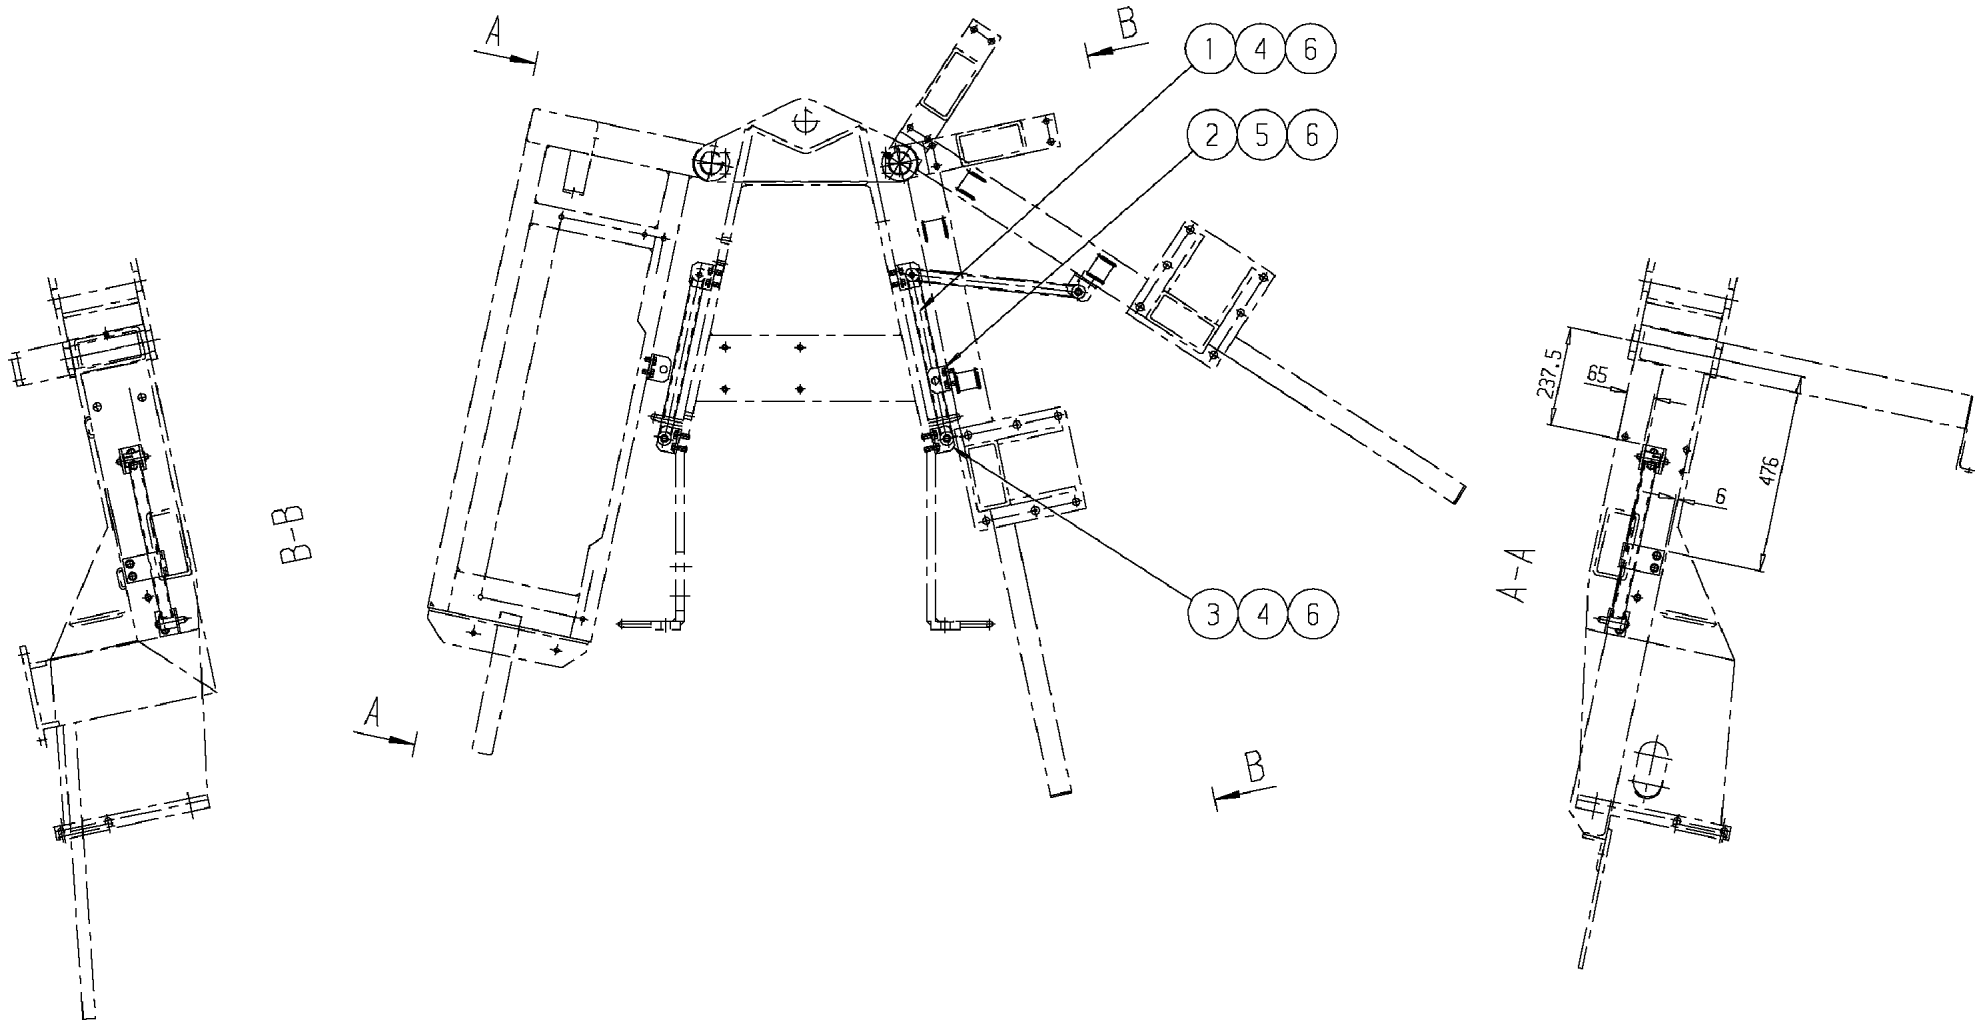


9106 1165 00/1 Ed01

B0002017

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1165 01	1	HASP	HASP	Page 781	ARM MOUNTED ON REAR FRAME
2	9106 1165 06	1	ATTACHMENT	FÄSTE		
3	9106 1165 05	1	ATTACHMENT	FÄSTE		
4	0147 1363 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 30 - 8.8 FZB
5	0147 1360 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
6	0301 2344 00	6	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB


ARM
MOUNTED ON REAR FRAME

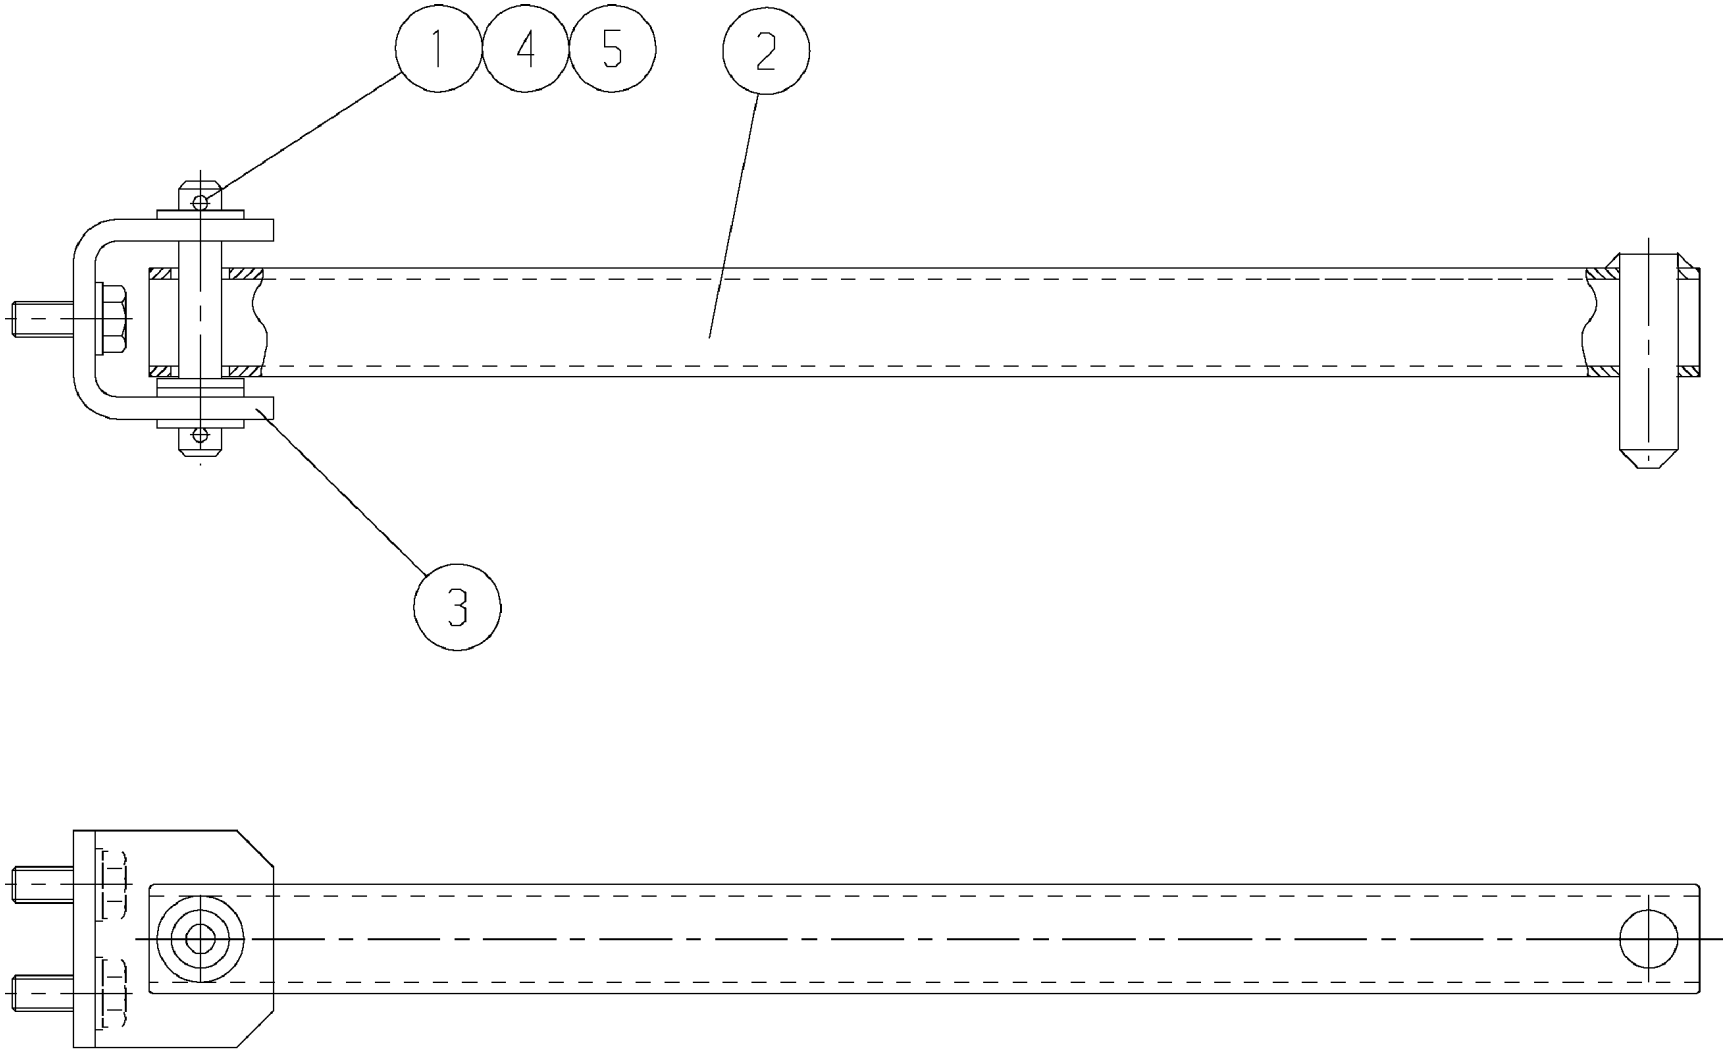

9106 1165 01/1 Ed02

B0002012

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0111 1307 00	2	SPLIT PIN	SAXPINNE		4 X 25 SP 1325 - 00
2	9106 1165 04	1	ARM	ARM		
3	9106 1165 02	1	ATTACHMENT	FÄSTE		
4	9106 1165 03	1	SHAFT	AXEL		
5	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB

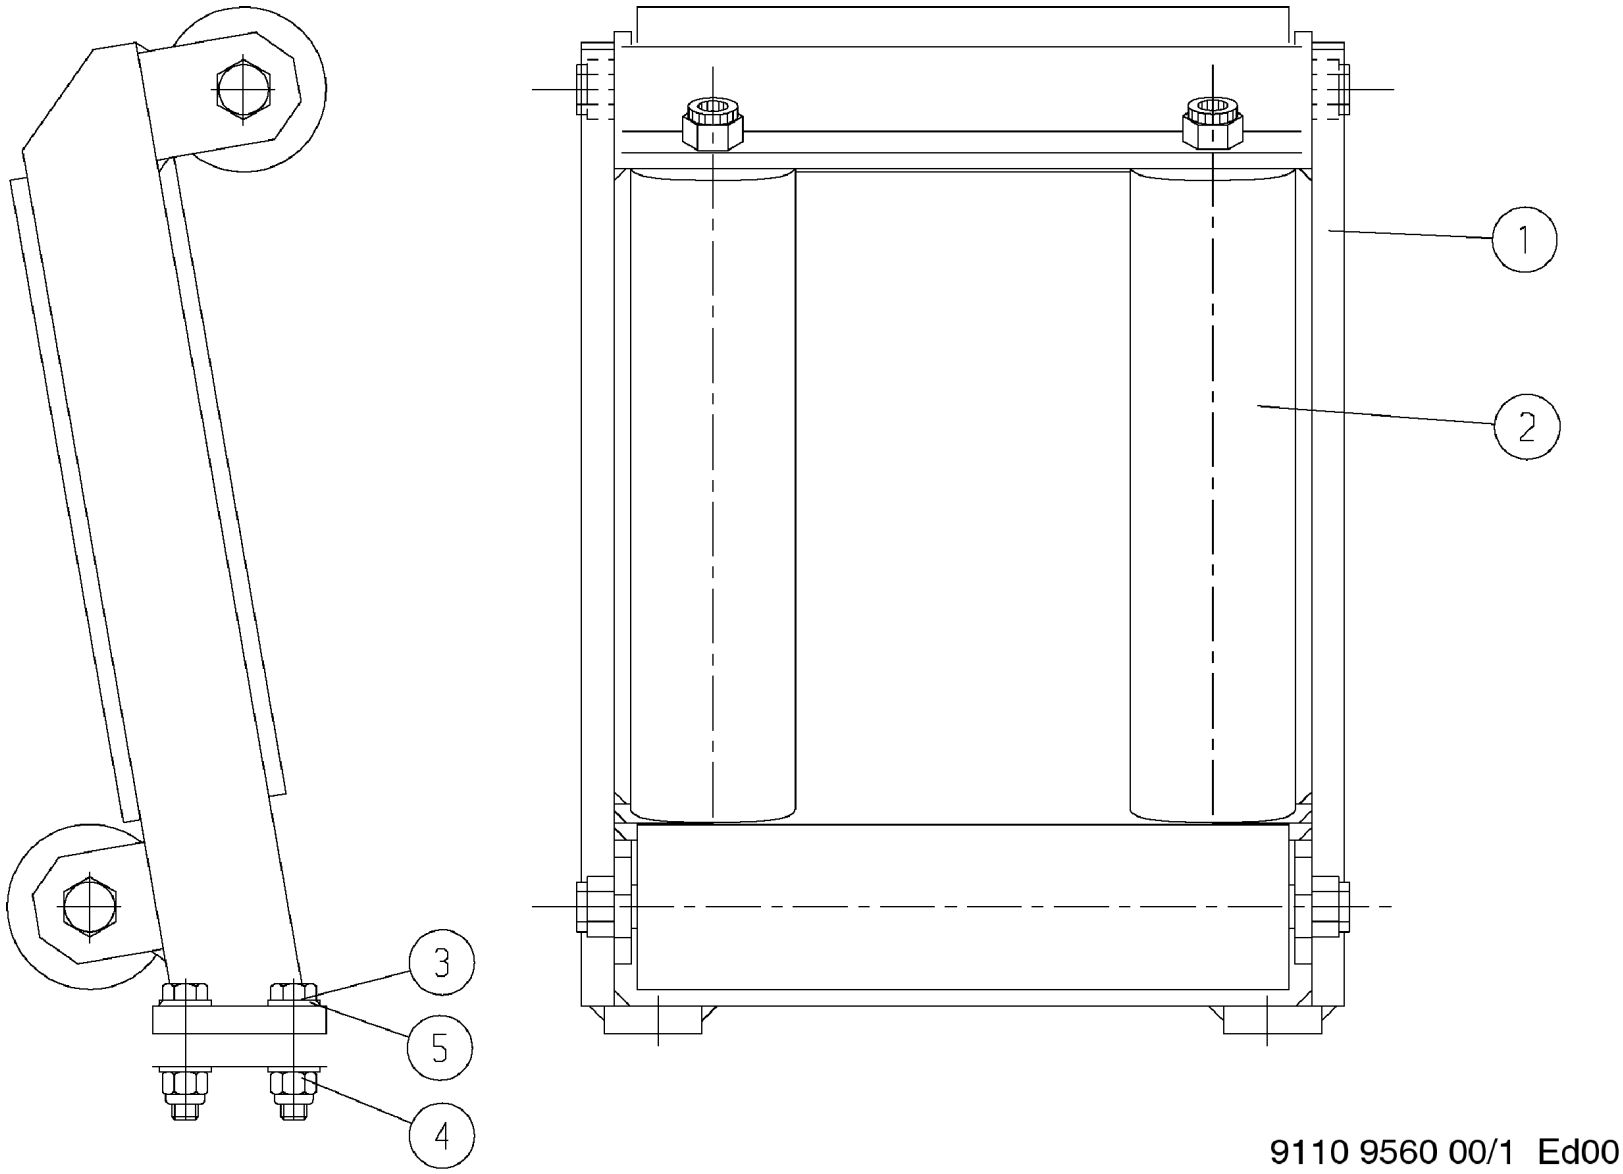

9110 9560 00/1 Ed00

B0001605


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 6731 00	1	ROLLER HOLDER	RULLHÅLLARE		
2	3177 0060 01	4	ROLLER	RULLE		
3	0147 1406 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 55 - 8.8 FZB
4	0291 1128 22	4	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
5	0301 2358 00	8	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB

X0000000

COLLECTOR KIT / KOLLEKTOR SATS 3217 9880 85

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9880 61	1	LIMIT SWITCH	GRÄNSLÄGESBRYT.		
2	3217 9880 81	1	COMMUTATOR	KOLLEKTOR	Page 788	


Fig. 1 of 2

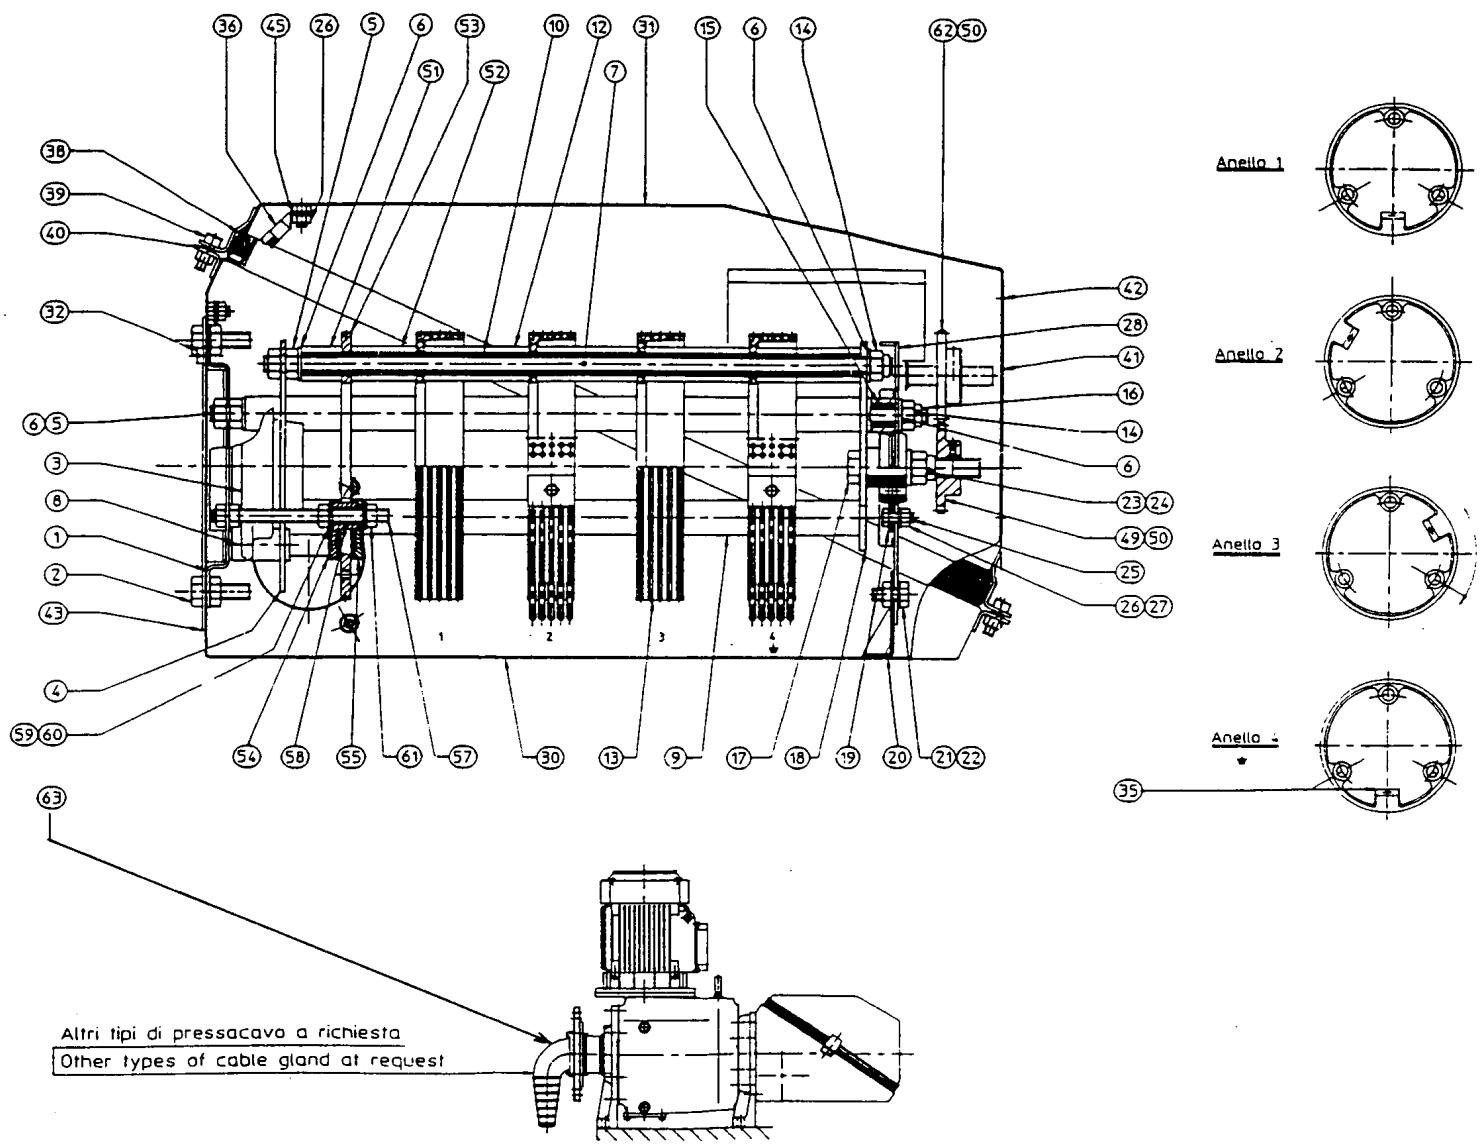

B0001379

COMMUTATOR / KOLLEKTOR **3217 9880 81**


Fig. 2 of 2

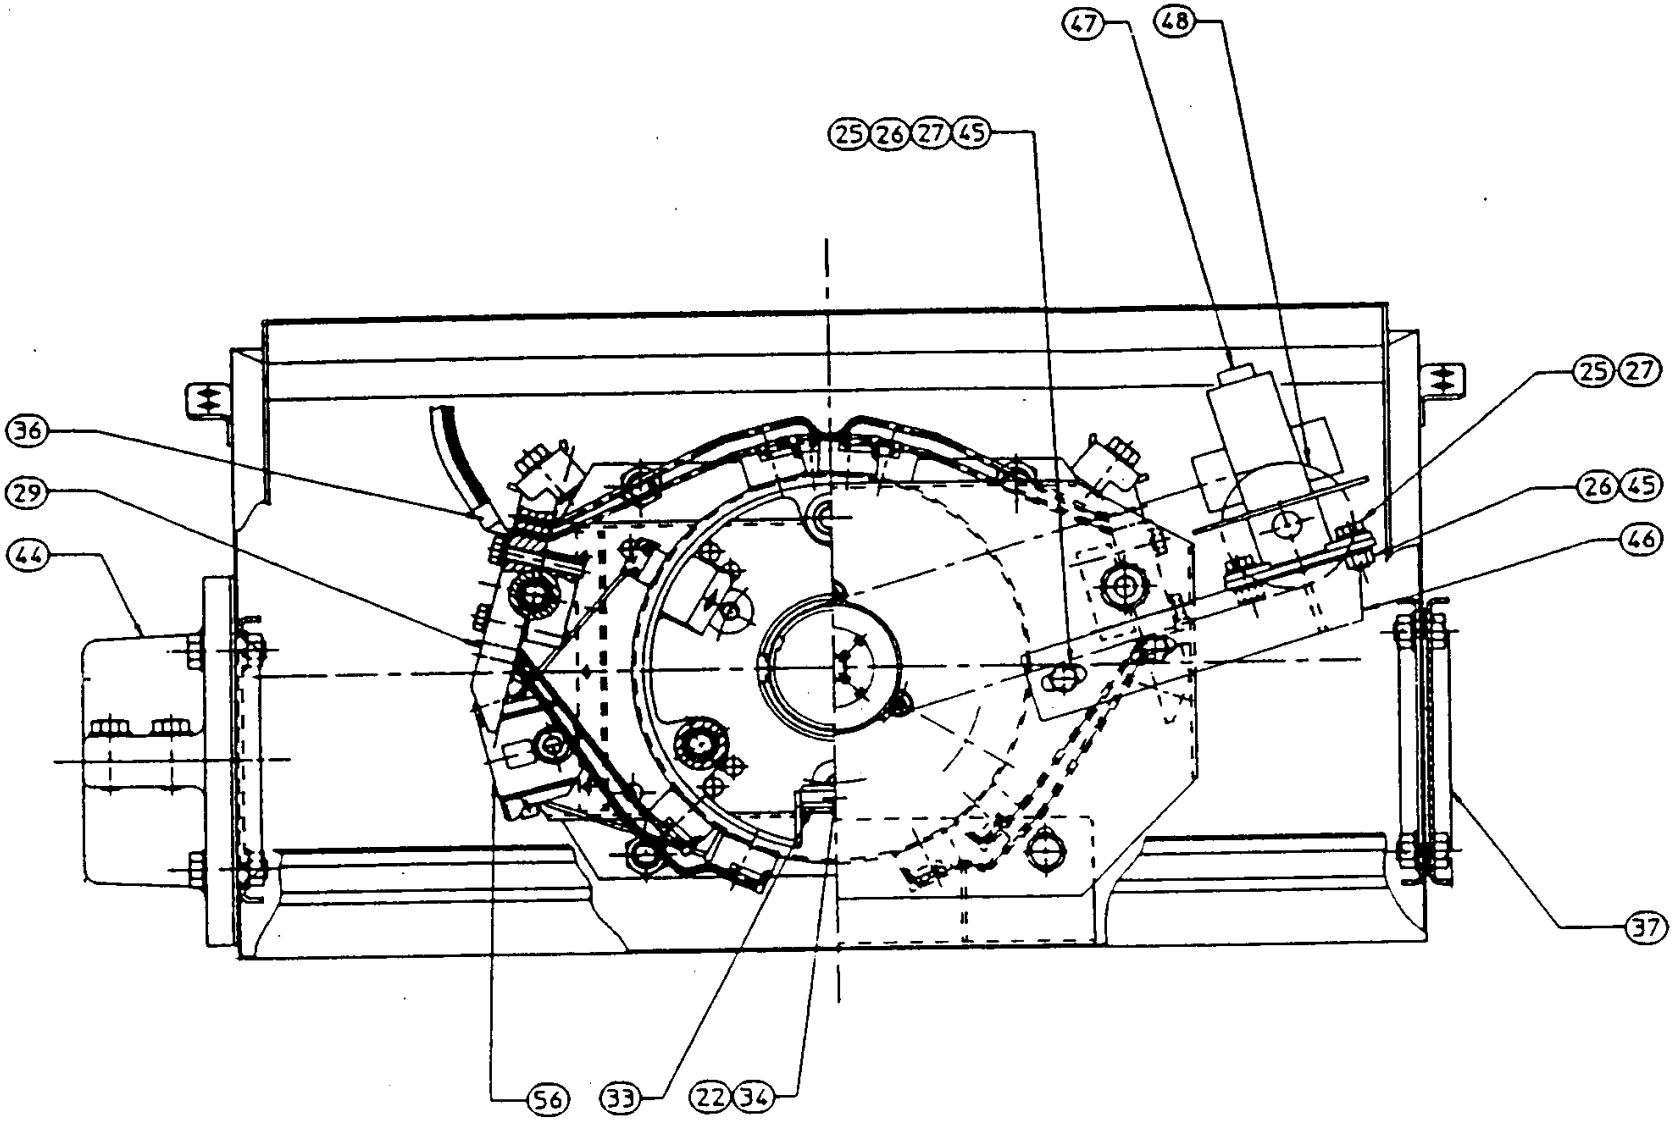

3217 9880 81 007K

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	5112 3183 21	1	GUIDE SET	STYRSATS	Page 792	
9	3217 9880 06	2	PIPE	RÖR		
13	3217 9880 04	4	SLIP RING	SLÄPRING		
29	3217 9880 05	4	BRUSH HOLDER	KOLHÅLLARE		
30	3217 9880 01	1	BOX CASING	LÅDKAPSLING		
31	3217 9880 02	1	BOX CASING	LÅDKAPSLING		
37	3217 9295 25	1	COVER PLATE	TÄCKPLATTA		
38	3217 9880 03	1	GASKET	PACKNING		
44	3217 9295 24	1	CABLE TERMINAL	KABELUTTAG		
59	0333 3127 00	2	LOCK WASHER	LÅSBRICKA		8,4 / 15 X 0,8 DIN 6789
60	0301 2335 00	2	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
63	3217 9295 26	1	CABLE TERMINAL	KABELUTTAG		


Fig. 1 of 2

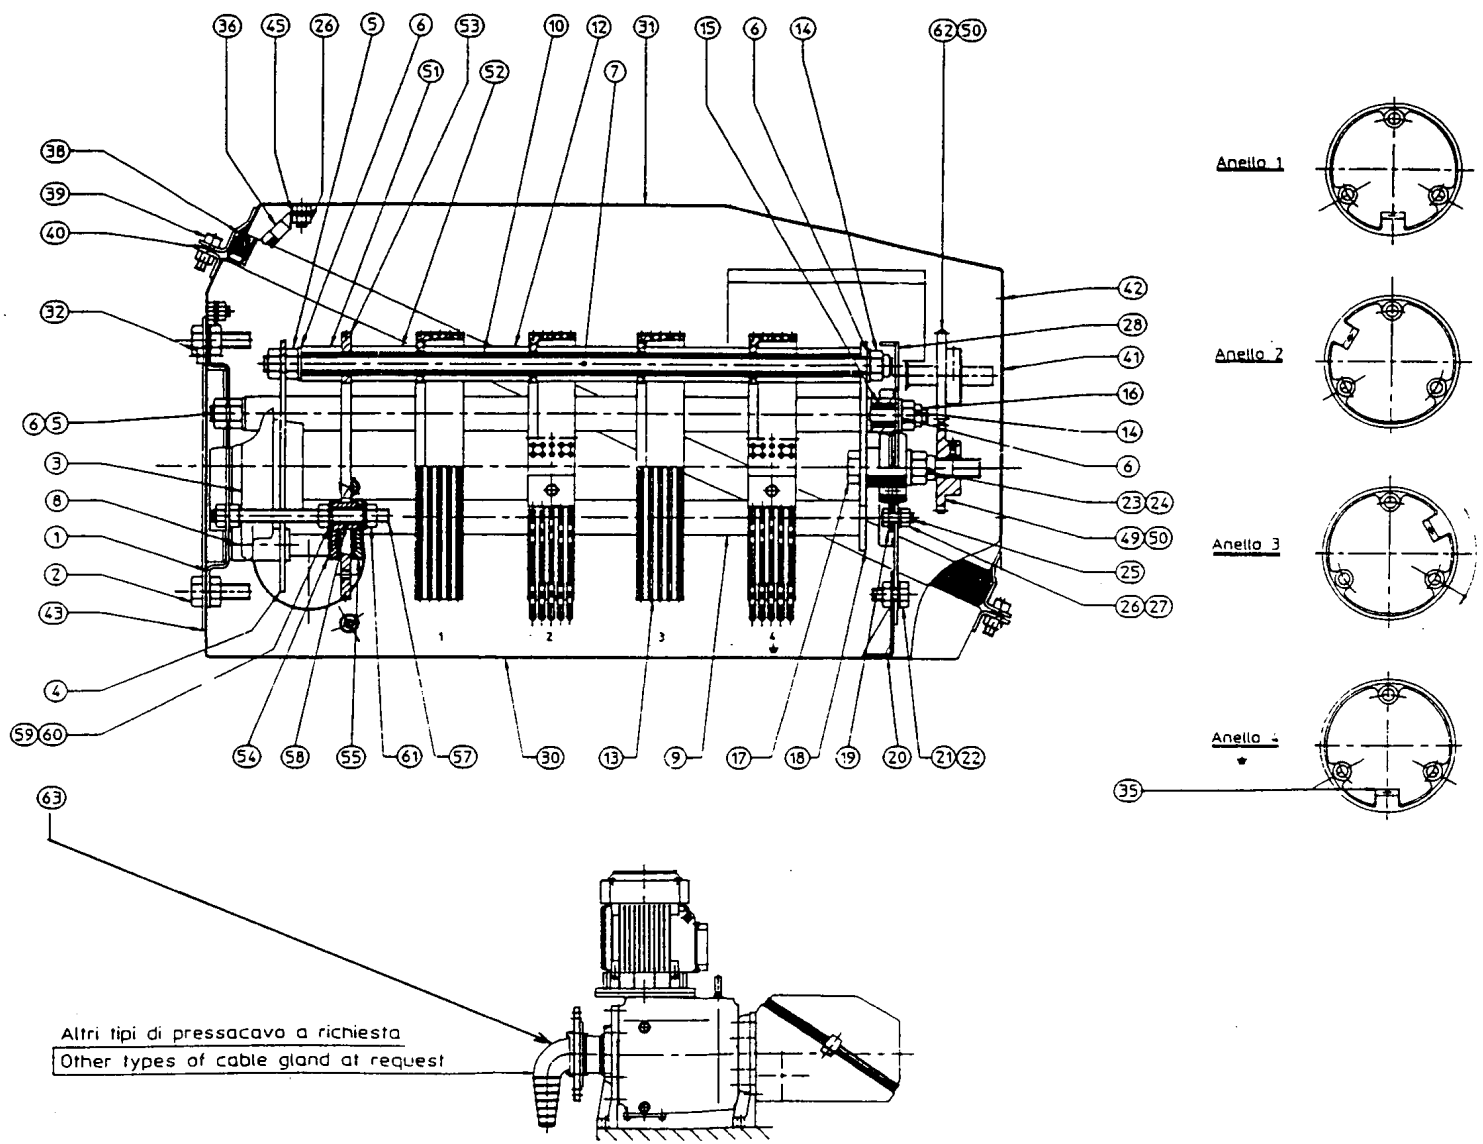

B0001379


GUIDE SET / STYRSATS **5112 3183 21**

Fig. 2 of 2

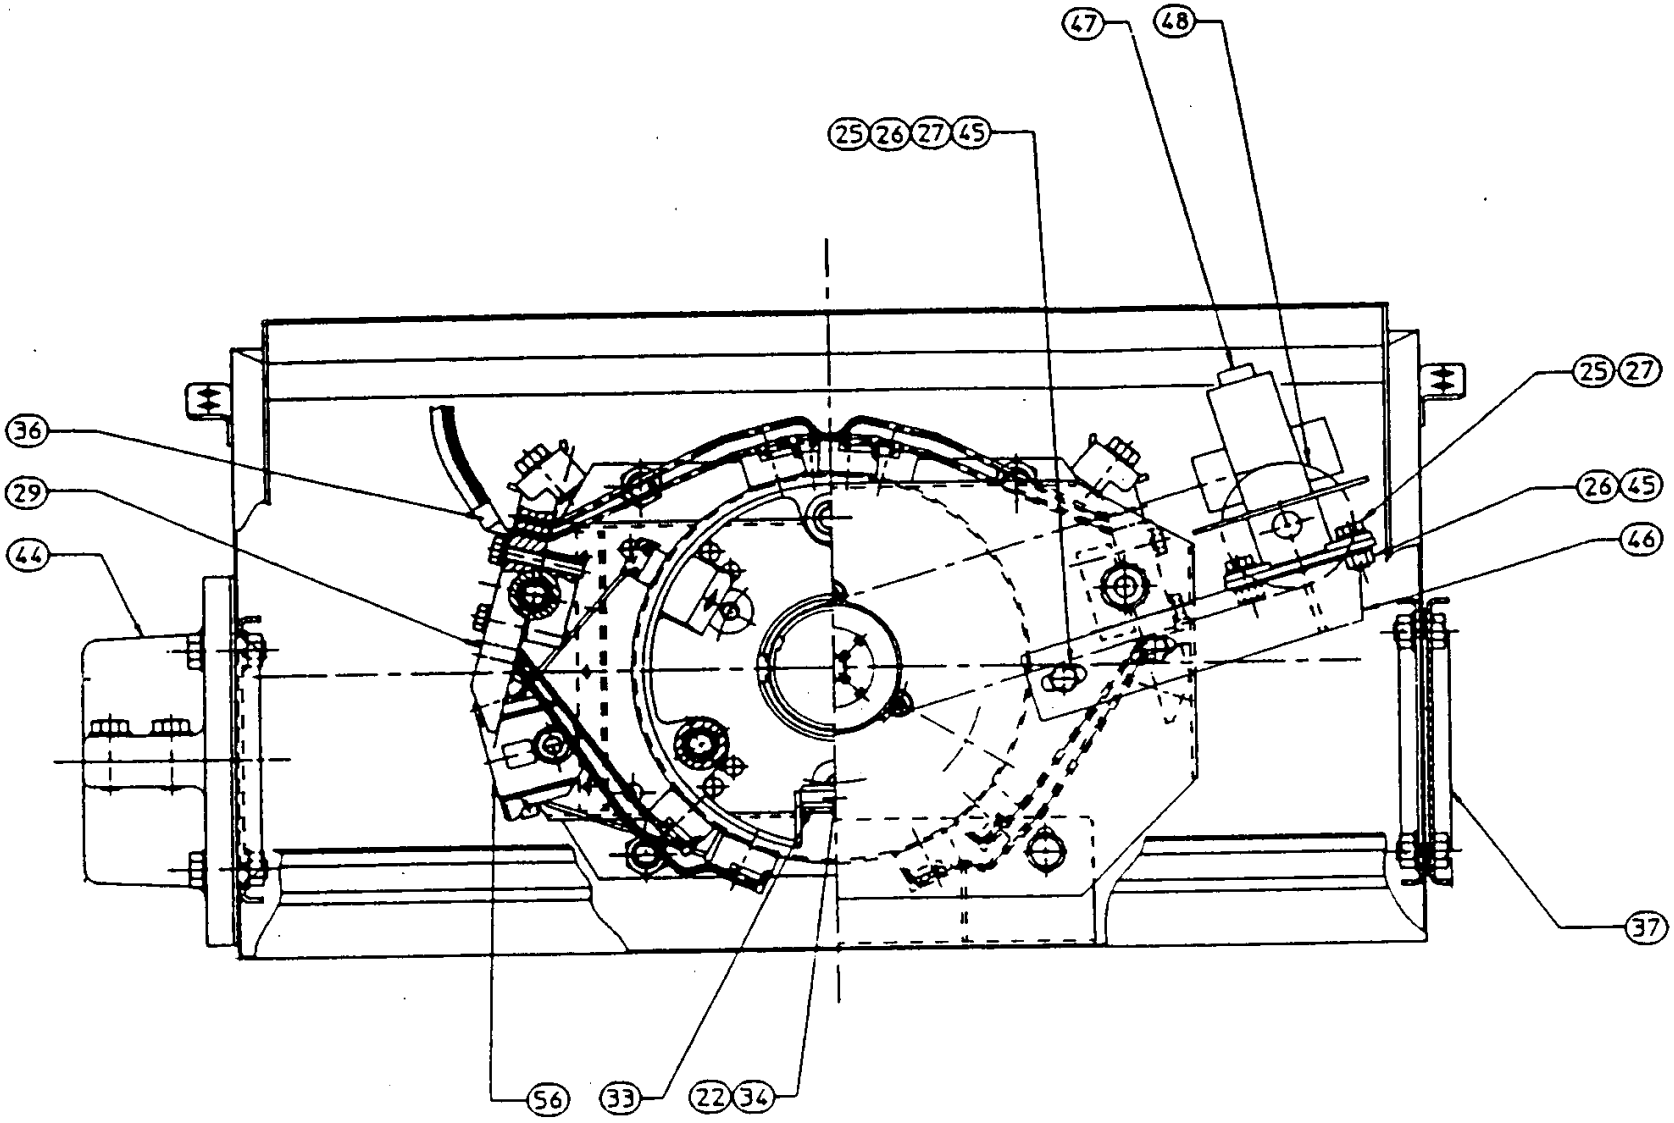


5112 3183 21 001K


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
53	3217 9880 40	1	SLIP RING	SLÄPRING		
54	5112 3183 22	1	INSULATOR	ISOLATOR		
55	5112 3183 23	1	INSULATOR	ISOLATOR		
56	5112 3183 24	1	BRUSH	BORSTE		
58	5112 3183 25	1	PIPE	RÖR		

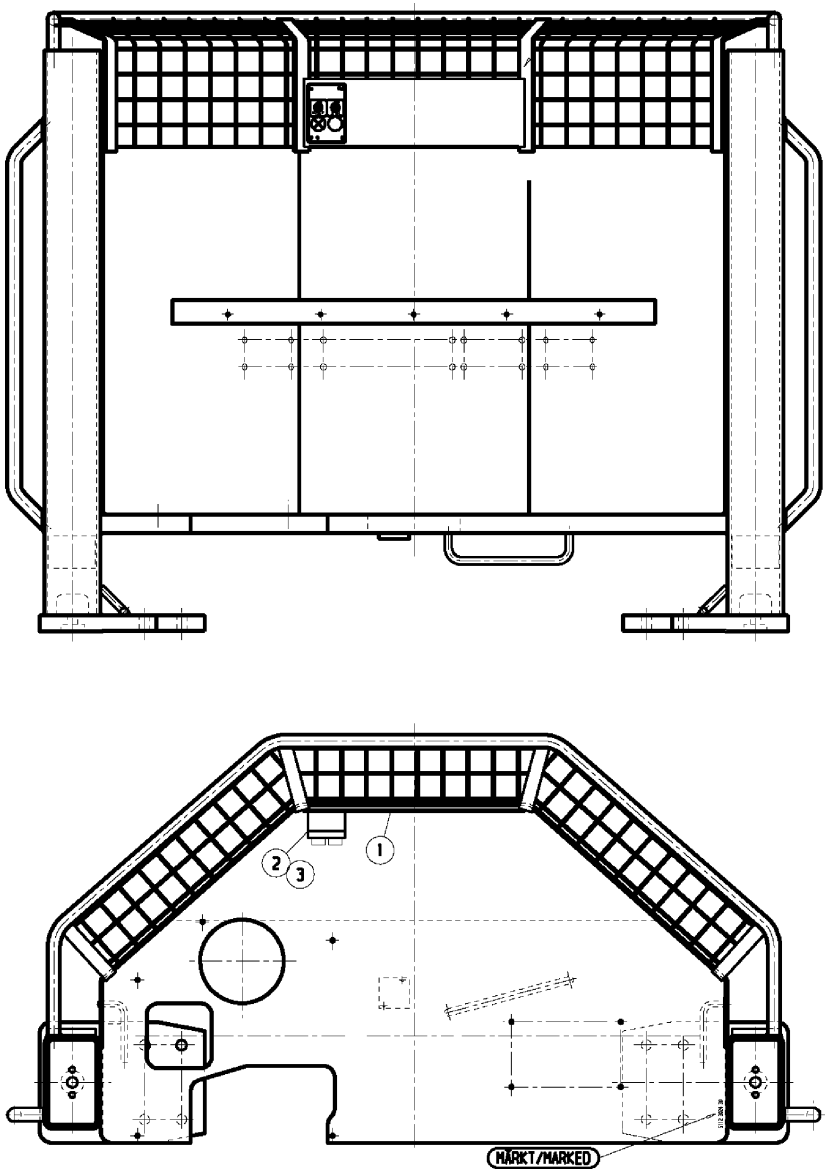


B0012814

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2	5112 0000 30	1	APPARATUS PANEL	APPARATLÅDA	Page 797	X15
3	0160 6039 00	2	SCREW, SLOTTED	SPÅRSKRUV		M 4 X 10 - 4.8 FZB
4	9111 3891 13	10M	CABLE, 7-CORE	KABEL, 7-LEDARE		7X1,5MM2
5	9111 3891 10	10M	CABLE, 5-CORE	KABEL, 5-LEDARE		150 5G1.5 D2=9.8

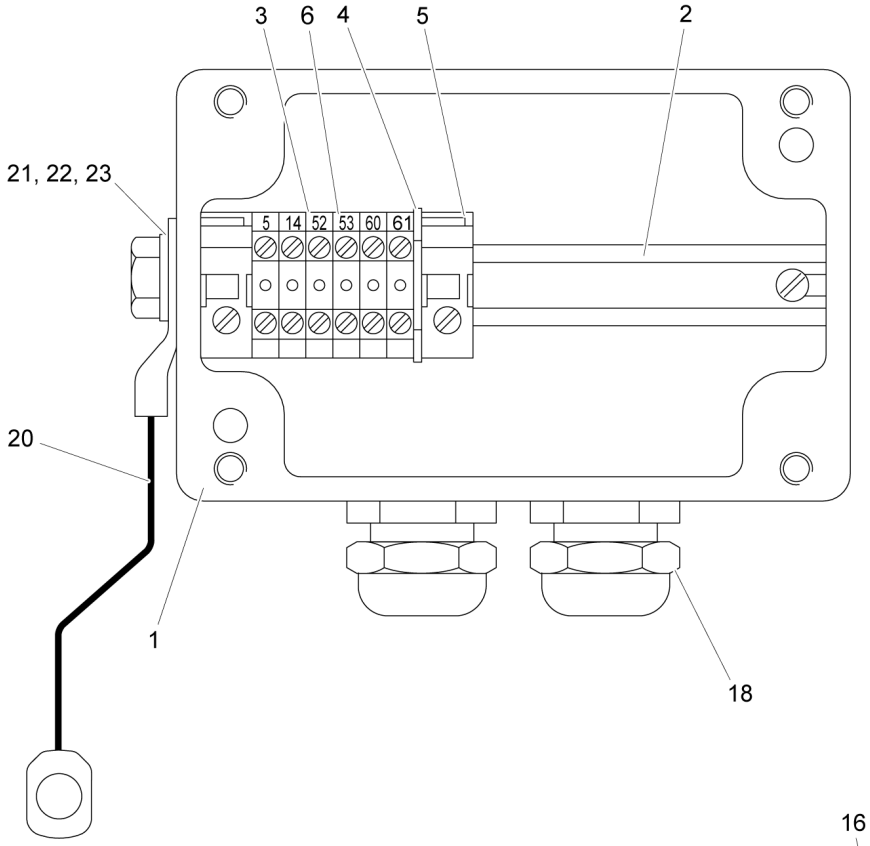

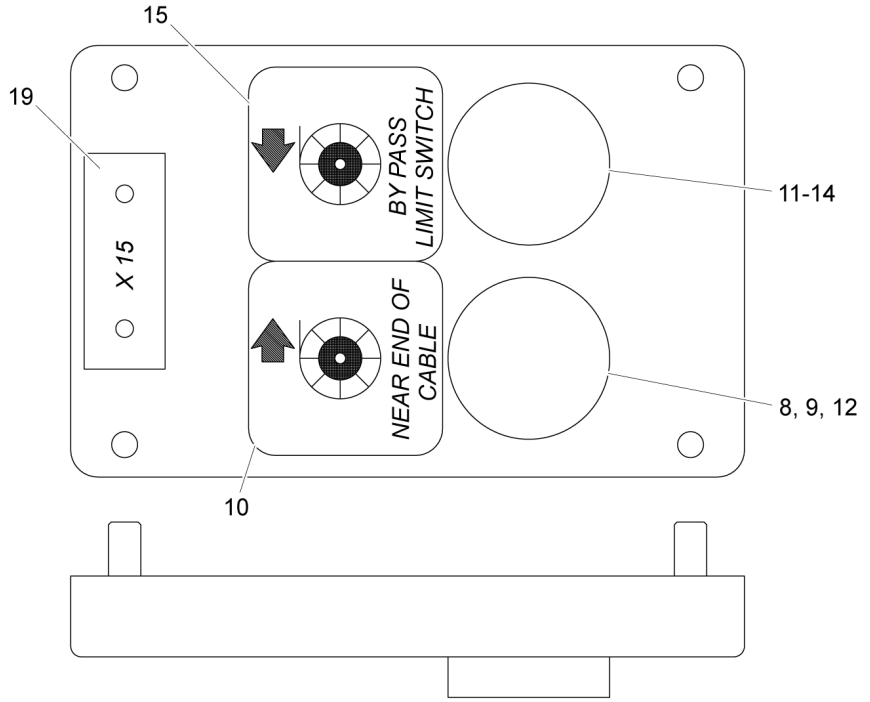

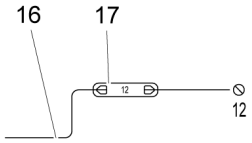

5112000031 05


B0055415

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	5112 0000 29	1	JUNCTION BOX	KOPPLINGSLÅDA		
2	3214 0181 00	0.11M	MOUNTING RAIL	MONTERINGSSKENA		
3	3176 4049 27	6	TERMINAL BLOCK	KOPPLINGSPLINT		
4	3176 4049 28	1	END PLATE	ÄNDPLATTA		
5	3176 4049 52	2	END SUPPORT	ÄNDSTÖD		
6	3176 4491 01	1	MARKING PLATE	MÄRKSKYLT		5FW 1-50 1-50
7	3176 4491 02	1	MARKING PLATE	MÄRKSKYLT		5FW 51-100 TERMINAL MARKERS
8	3217 0010 47	1	LAMP CALOTTE	LAMPKALOTT		
9	3217 0010 59	1	LAMP INSERT	LAMPINSATS		
10	–	1	SIGN	SKYLT		
11	3217 0010 02	1	TRIGGER	TRYCKE		ZB5-AA2
12	3217 0010 72	2	INTERMED. PART	MELLANDEL		
13	3217 0010 73	1	CONTACT BLOCK	KONTAKTBLOCK		NORMALLY OPEN
14	3217 0010 75	1	SEALING COVER	TÄTNINGSKÅPA		
15	–	1	SIGN	SKYLT		
16	0017 2060 40	2M	CABLE, 1-CORE	KABEL, 1-LEDARE		RK 1,5MM2 BLACK D1=3.5
18	0698 5141 62	2	CABLE GLAND	KABELFÖRSKRUVN.		M20X1,5 7-13 B2
19	5112 3170 82	1	PLATE	SKYLT		
20	3222 3048 20	1	GROUND BRAID	JORDFLÄTA		
21	0147 1322 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 16 - 8.8 FZB
22	0301 2335 00	3	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
23	0291 1128 18	1	LOCK NUT	LÅSMUTTER		M 8 - 8 FZB / ISO 7040

HOSE REEL / SLANGVINDA
LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	HOSE REEL	SLANGVINDA	801	
–	– HOSE REEL	– SLANGVINDA	803	
–	– – HOSE REEL	– – SLANGVINDA	805	
3217 3913 81	– – – HYDRAULIC UNIT	– – – HYDRAULENHET	807	CABLE REEL
3217 9034 20	– – – – HYDRAULIC MOTOR	– – – – HYDRAULMOTOR	809	INCL. POS 2, 3
3217 3909 80	– – – GEAR HOUSING	– – – VÄXELHUS	811	
3217 3921 80	– – – SWIVEL	– – – SVIVEL	815	2 INCH
–	– – SWING ARM	– – SVÄNGARM	817	
9110 9555 00	– – – LOCKING	– – – LÅSNING	819	
9106 1165 00	– – – HASP	– – – HASP	821	FOR SWINGARM, EL CABINETT
9106 1165 01	– – – – HASP	– – – – HASP	823	ARM MOUNTED ON REAR FRAME
9110 9560 00	– – CABLE STEERING	– – KABELSTYRNING	825	
–	– – NIPPLE SET	– – NIPPELSATS	827	

HOSE REEL / SLANGVINDA

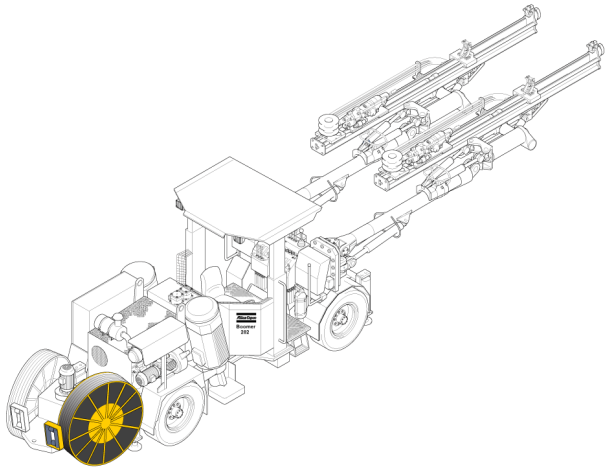



B0057492


HOSE REEL / SLANGVINDA

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
840	–	1	HOSE REEL	SLANGVINDA	Page 803	
845	0075 4005 69	70M	WATER HOSE	VATTENSLANG		1 1/2' SVART VATTENSLANG

HOSE REEL / SLANGVINDA

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
5	3217 9613 04	1	FLANGE	FLÄNS		
840	–	1	HOSE REEL	SLANGVINDA	Page 805	
841	–	1	SWING ARM	SVÄNGARM	Page 817	
842	9110 9560 00	1	CABLE STEERING	KABELSTYRNING	Page 825	
843	–	1	NIPPLE SET	NIPPELSATS	Page 827	


HOSE REEL / SLANGVINDA

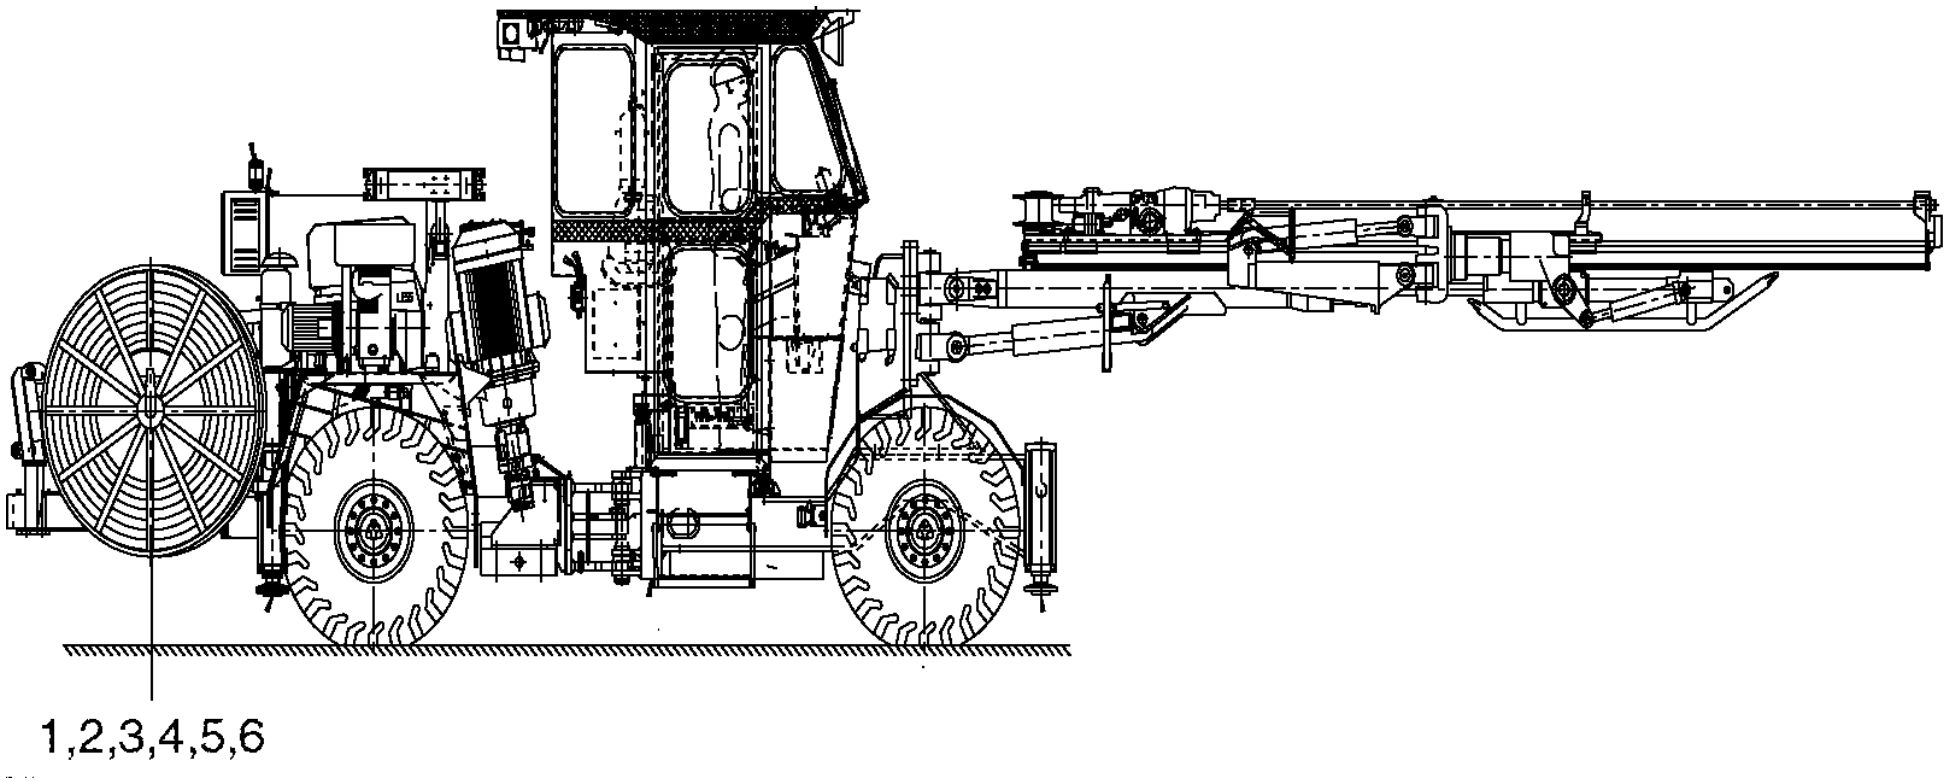


B0005144

HOSE REEL / SLANGVINDA


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 5598 80	1	DRUM	TRUMMA		RAC 614-201
2	3217 3913 81	1	HYDRAULIC UNIT	HYDRAULENHET	Page 807	CABLE REEL
3	3217 3909 80	1	GEAR HOUSING	VÄXELHUS	Page 811	
4	3217 3921 80	1	SWIVEL	SVIVEL	Page 815	2 INCH
5	3176 8267 00	1	WIRE MESH HOSE	KABELSTRUMPA		
6	3163 1854 00	1	SHACKLE	SCHACKEL		

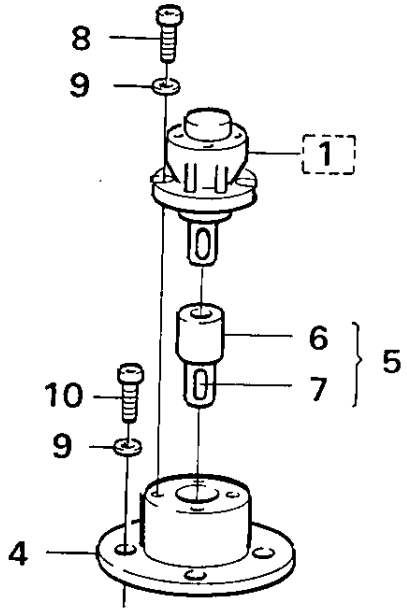

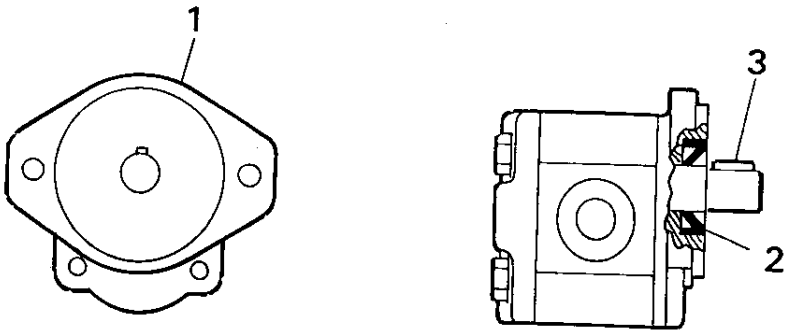


B0003436

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	3217 9034 20	1	HYDRAULIC MOTOR	HYDRAULMOTOR	Page 809	INCL. POS 2, 3
2	0666 6000 39	1	RADIAL LIP SEAL	RADIALTÄTNING		20 X 35 X 8 NBR
3	3128 3061 24	1	KEY	KIL		
4	3217 5599 01	1	INTERMED.FLANGE	MELLANFLÄNS		
5	9106 1438 80	1	SET	SATS		INCL. POS 6, 7
6	3217 3917 01	1	BUSHING	BUSSNING		
7	3217 3917 02	1	KEY	KIL		
8	0147 1362 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 25 - 8.8 FZB
9	0301 2344 00	6	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
10	0147 1360 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB

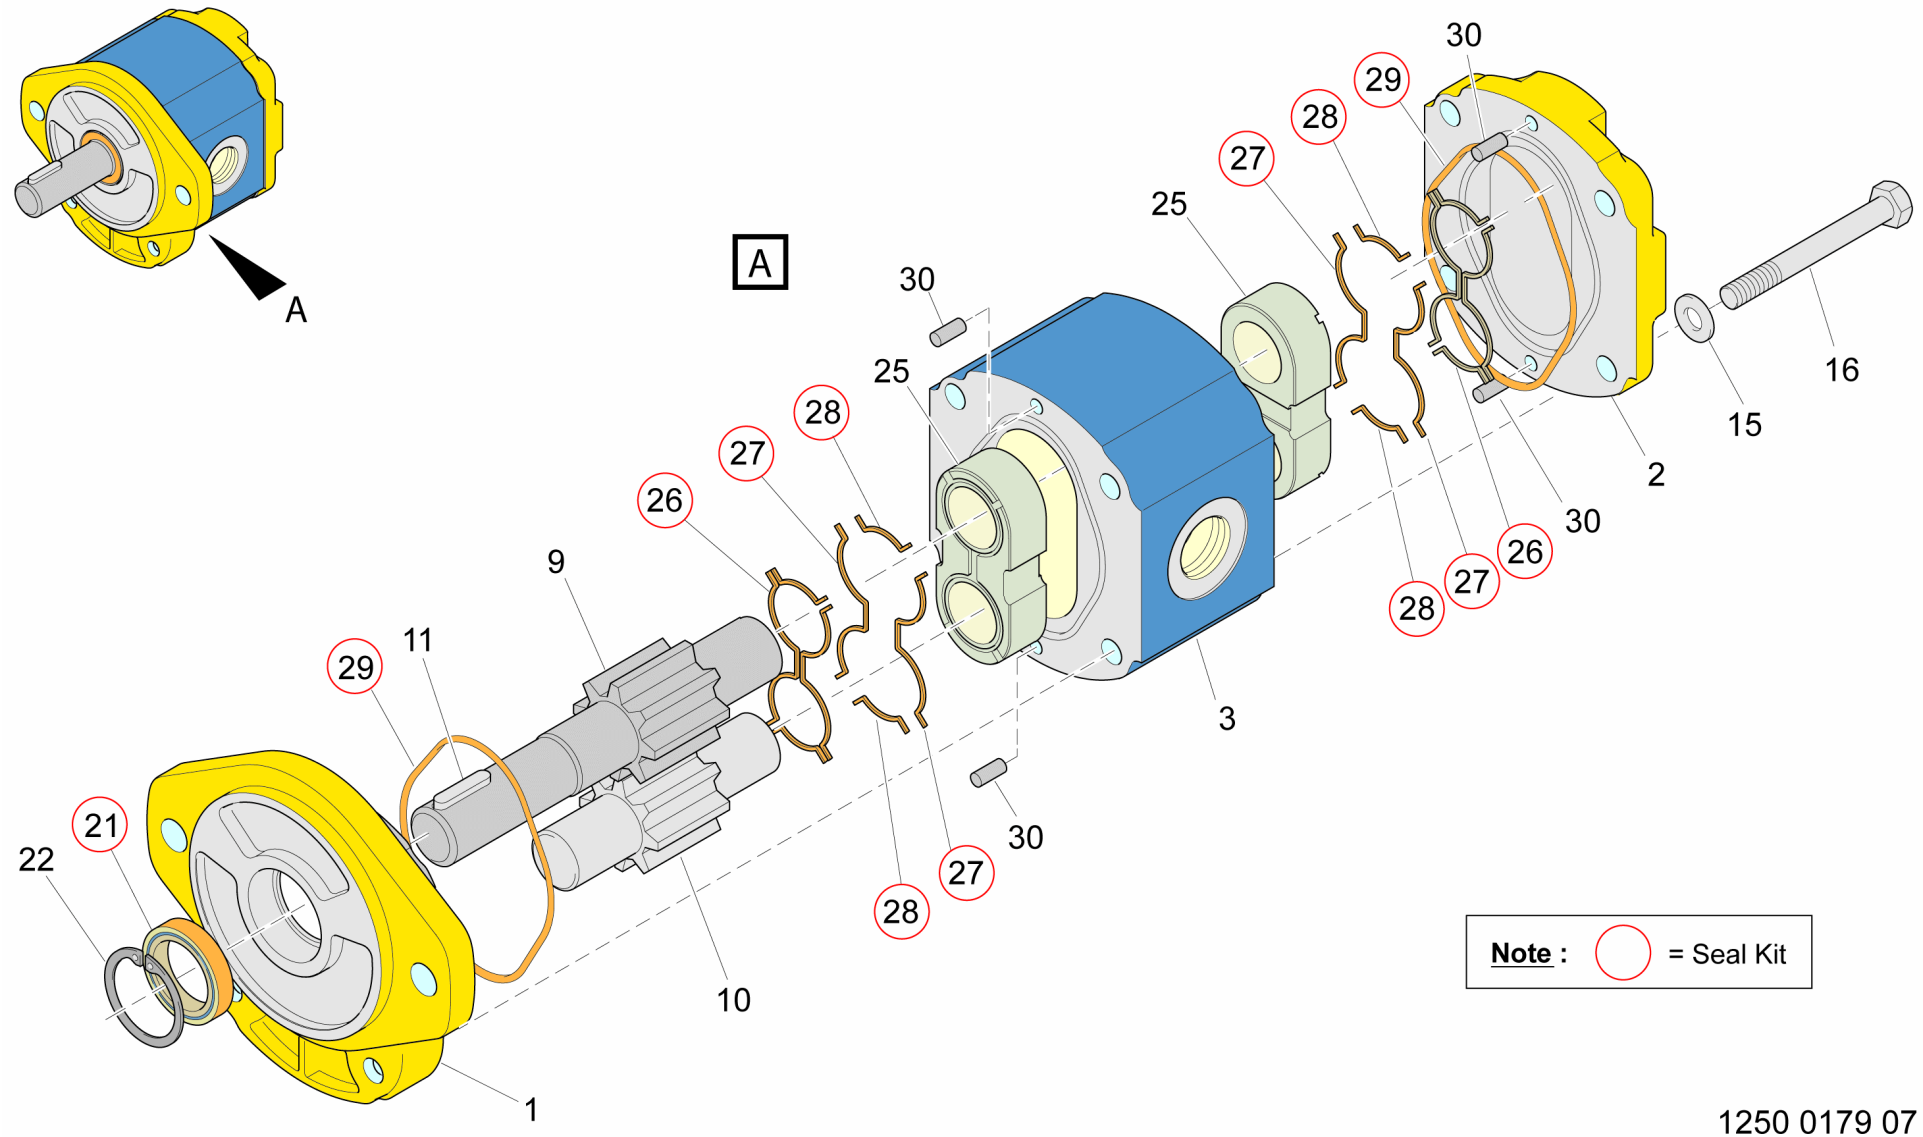
A
A
30
29
28
27
25
16
15
2
30
26
27
28
3
30
27
28
10
1
9
11
29
21
22
Note : = Seal Kit
1250 0179 07

B0038965

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3218 2006 65	1	SEAL KIT	TÄTNINGSSATS		POS.21,26-29
1	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
2	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
3	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
9	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
10	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
11	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
15	5507 8719 00	4	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
16	5507 8719 00	4	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
22	5507 8719 00	1	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
25	5507 8719 00	2	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY
30	5507 8719 00	2	WAGNER PART	WAGNER ARTIKEL		NOT SOLD SEPRETLY

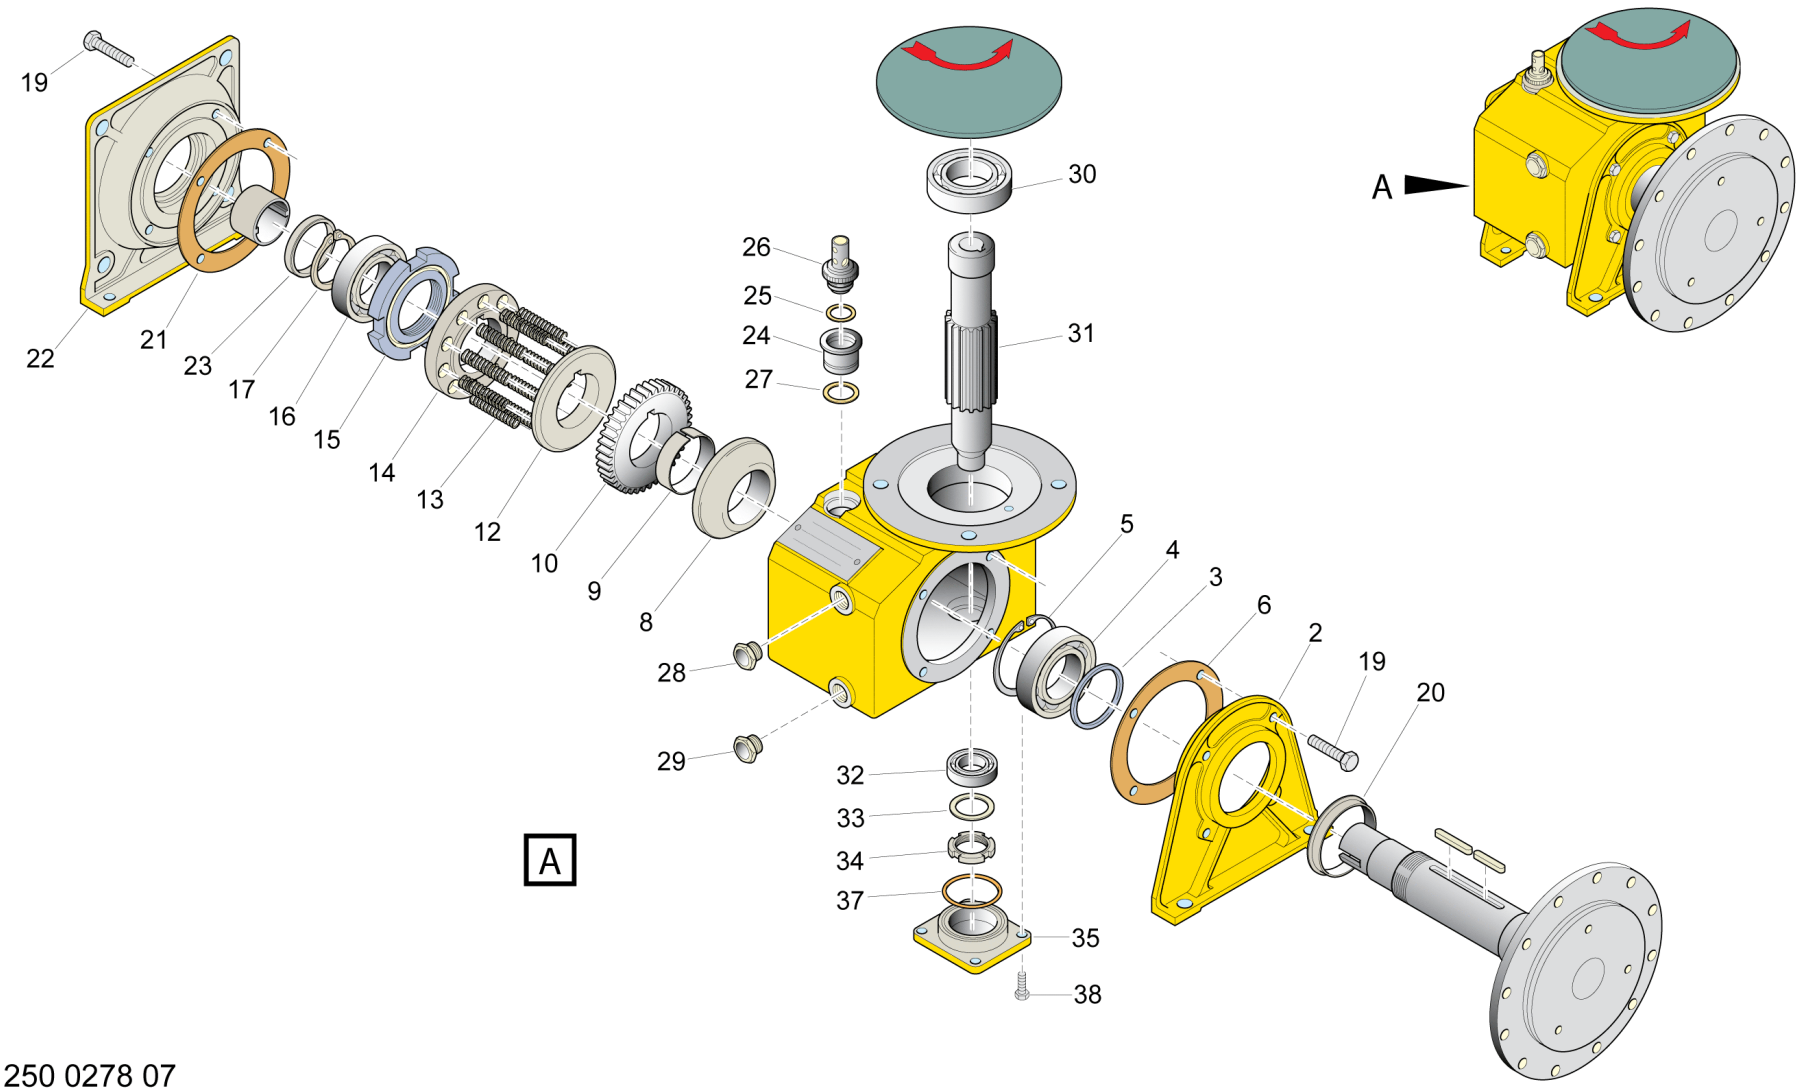

1250 0278 07


B0056826


GEAR HOUSING / VÄXELHUS 3217 3909 80

(Sheet 1 of 2)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
	3217 3909 82	1	SEALING SET	PACKNINGSSATS		INCL.ITEM 3,6,20,21,23,25,27 AND 37
	3217 3909 83	1	FRICTION KIT	FRIKTIONSSATS		INCL.ITEM 8,10,12,13,31
	3217 3909 84	1	STAND FRAME	STATIVRAM		INCL.ITEM 2,22
	3217 3909 85	1	BEARING SET	LAGERSATS		INCL.ITEM 4,16,30,32
2	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
3	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
4	–	1	BEARING	LAGER		NOT SOLD SEPARATELY
5	0335 2178 00	1	CIRCLIP	SPÅRRING		SGH 130 X 4 DIN 472
6	–	1	GASKET	PACKNING		NOT SOLD SEPARATELY
8	–	1	COUPLING	KOPPLING		NOT SOLD SEPARATELY
9	–	1	INNER RING	INNERRING		NOT SOLD SEPARATELY
10	–	1	GEAR RING	KUGGKRANS		NOT SOLD SEPARATELY
12	–	1	SPRING HOLDER	FJÄDERHÅLLARE		NOT SOLD SEPARATELY
13	–	1	SPRING	FJÄDER		NOT SOLD SEPARATELY
14	3217 3909 13	1	HOLDER	HÅLLARE		
15	3217 3909 14	1	NUT	MUTTER		
16	–	1	BEARING	LAGER		NOT SOLD SEPARATELY
17	0335 1158 00	1	CIRCLIP	SPÅRRING		SGA 75 X 2,5 DIN 471
19	0211 1962 88	12	SCREW	SKRUV		MC6S M 8 X 30 - 12.9
21	–	1	GASKET	PACKNING		NOT SOLD SEPARATELY
22	–	1	END PIECE	GAVEL		NOT SOLD SEPARATELY
23	–	1	SEAL	TÄTNING		NOT SOLD SEPARATELY
24	3217 3909 21	1	BUSHING	BUSSNING		
25	3217 3909 23	1	SEAL RING	TÄTNINGSRING		
26	3217 3909 22	1	SETTING KEY	STÄLLNYCKEL		
27	3217 3910 24	1	SEAL RING	TÄTNINGSRING		
28	5112 0105 93	1	OIL LEVEL PLUG	OLJENIVÅPLUGG		
29	3217 3909 19	1	OIL PLUG	OLJEPLUGG		
30	–	1	BEARING	LAGER		NOT SOLD SEPARATELY
31	–	1	SHAFT	AXEL		NOT SOLD SEPARATELY
32	–	1	BEARING	LAGER		NOT SOLD SEPARATELY

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
33	–	1	LOCK WASHER	LÅSBRICKA		NOT SOLD SEPARATELY
34	–	1	NUT	MUTTER		NOT SOLD SEPARATELY
35	3217 3909 29	1	COVER	LOCK		
37	–	1	O-RING	O-RING		NOT SOLD SEPARATELY
38	0211 1963 91	4	SCREW	SKRUV		MC6S M 6 X 25 - 12.9

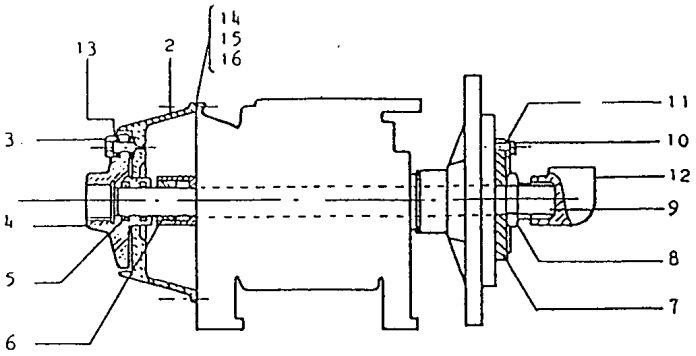


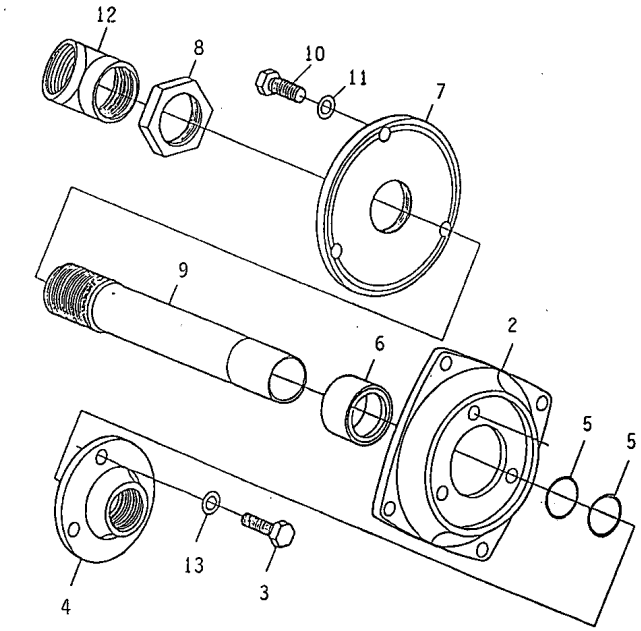

B0000082

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2	3217 3921 01	1	SUPPORT	STÖD		
3	0147 1325 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 8 X 25 - 8.8 FZB
4	3217 3921 05	1	OUTLET SECTION	UTLOPPSGAVEL		2 INCH
5	3217 9296 19	2	O-RING	O-RING		
6	3217 3921 07	1	BACK-UP RING	STÖDRING		
7	3217 3921 11	1	TUBE	TUB		
8	3217 3921 09	1	NUT	MUTTER		2 INCH
9	3217 3921 11	1	TUBE	TUB		
10	0147 1249 03	3	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 25 - 8.8 FZB
11	0301 2321 00	3	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB
12	3217 3921 13	1	PIPE	RÖR		90 DEGREE BEND
13	0301 2335 00	3	PLAIN WASHER	RUNDBRICKA		8,4 / 16 X 1,6 -HB200 FZB
16	0301 2344 00	8	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB
14	0147 1366 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 45 - 8.8 FZB
15	0291 1128 20	4	LOCK NUT	LÅSMUTTER		M 10 - 8 FZB / ISO 7040

SWING ARM / SVÄNGARM

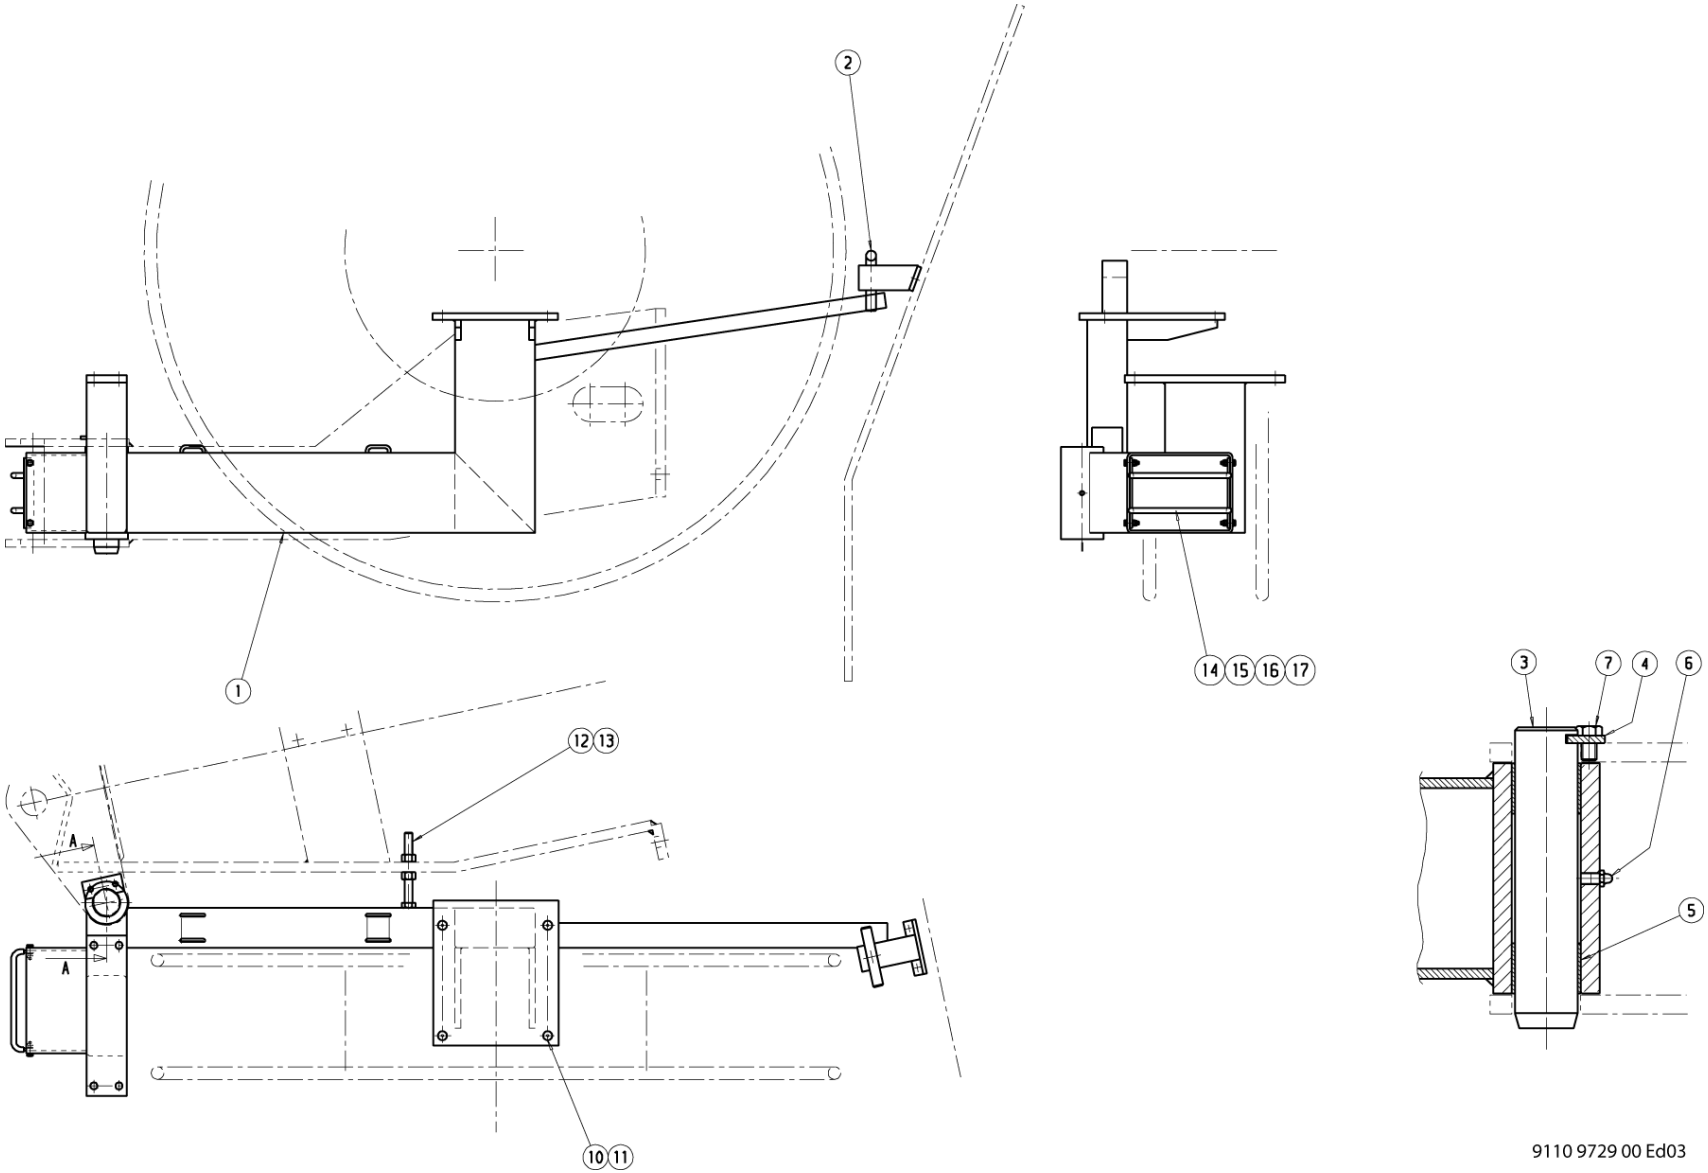


9110 9729 00 Ed03

B0015093

SWING ARM / SVÄNGARM


Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 9729 10	1	SWING ARM	SVÄNGARM		
2	9110 9555 00	1	LOCKING	LÅSNING	Page 819	
3	9110 6753 00	1	SHAFT	AXEL		
4	3217 6359 00	1	LOCK SHEET	LÅSBLECK		35X6 L=80
5	0500 4500 11	2	BUSHING	BUSSNING		50 / 55 X 40 WB802
6	0544 2162 00	1	GREASE NIPPLE	SMÖRJNIPPEL		ISO 7 - R 1/8 TYPE AH
7	0147 1398 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 20 - 8.8 FZB
10	0147 1481 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 60 - 8.8 FZB
11	0291 1128 25	4	LOCK NUT	LÅSMUTTER		M 16 - 8 FZB / ISO 7040
12	0147 1491 03	1	SCREW, HEX HEAD	SKRUV, SEXKANT		M 16 X 110 - 8.8 FZB
13	0266 2114 00	1	NUT	MUTTER		M 16 - 8 FZB
14	9106 1165 00	1	HASP	HASP	Page 821	FOR SWINGARM, EL CABINETT
15	9106 1272 34	1	LAMP PROTECTION	LAMPSKYDD		
16	0147 1249 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 6 X 25 - 8.8 FZB
17	0291 1128 15	4	LOCK NUT	LÅSMUTTER		M6 - 8 FZB / ISO 7040
18	0301 2321 00	8	PLAIN WASHER	RUNDBRICKA		6,4 / 12 X 1,6 -HB200 FZB

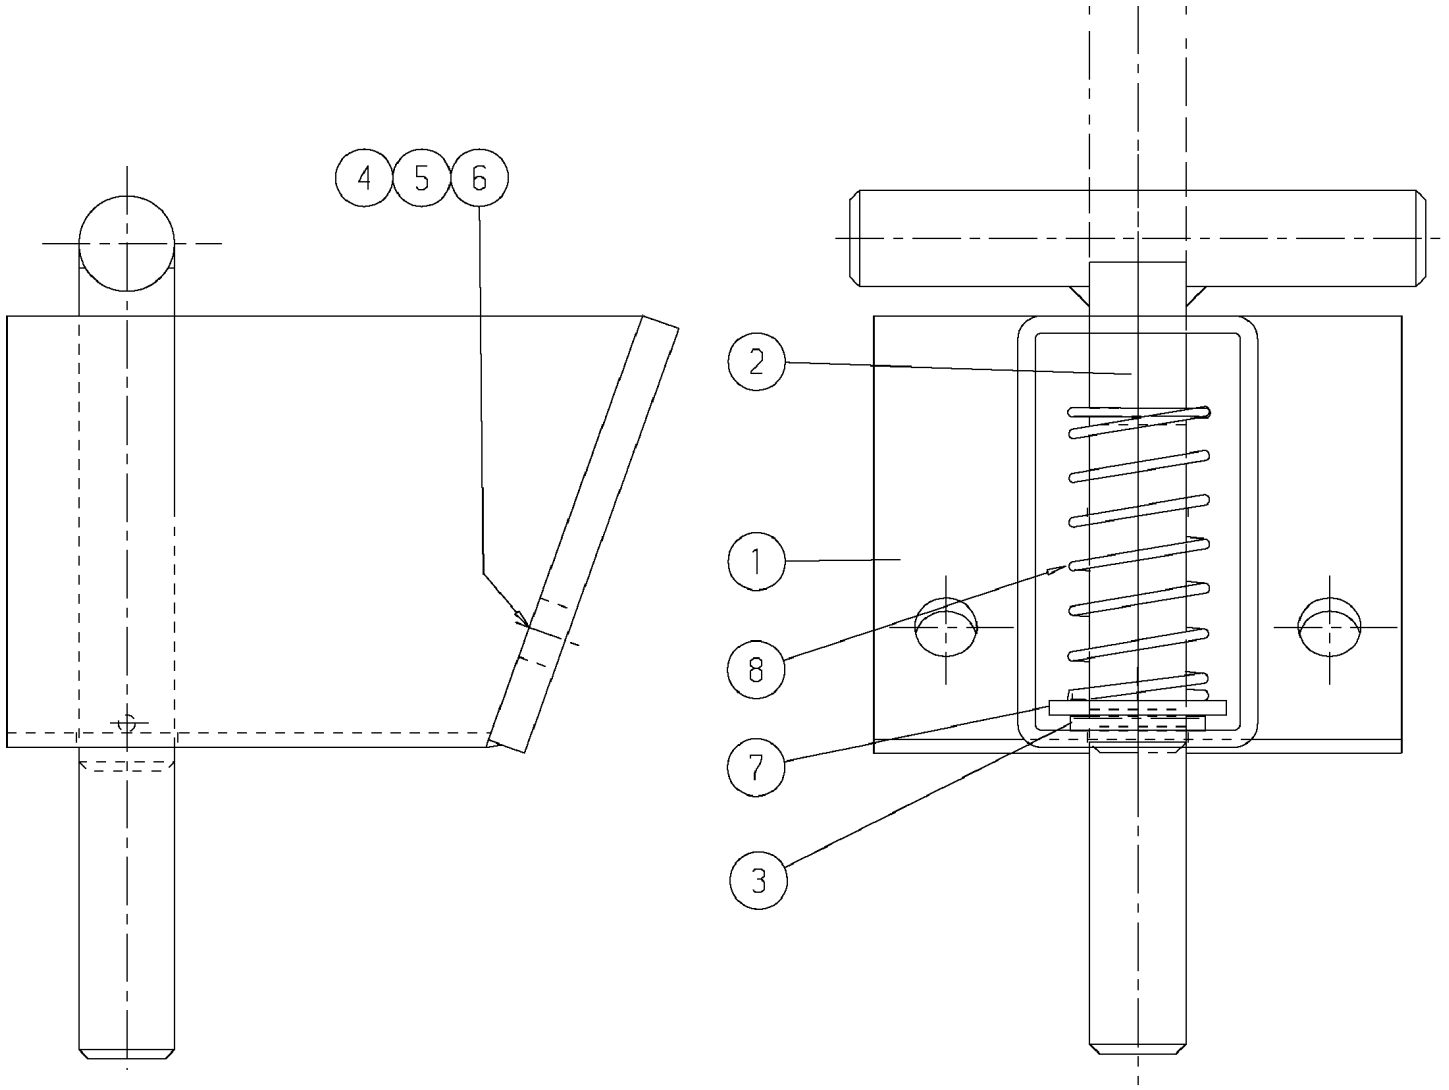

9110 9555 00/1 Ed05

B0001985

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	–	1	ATTACHMENT	FÄSTE		
2	9110 9555 02	1	CATCH	SPÄRR		
3	0108 1200 00	1	SPRING PIN	RÖRPINNE		3 X 28 DIN 1481
4	0147 1403 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 40 - 8.8 FZB
5	0291 1128 22	2	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
6	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB
7	0301 2394 00	1	PLAIN WASHER	RUNDBRICKA		21 / 37 X 3 - HB 200 FZB
8	9110 9555 12	1	COMPRESS.SPRING	TRYCKFJÄDER		L0 61,D 2.0,DI 23,DO 27

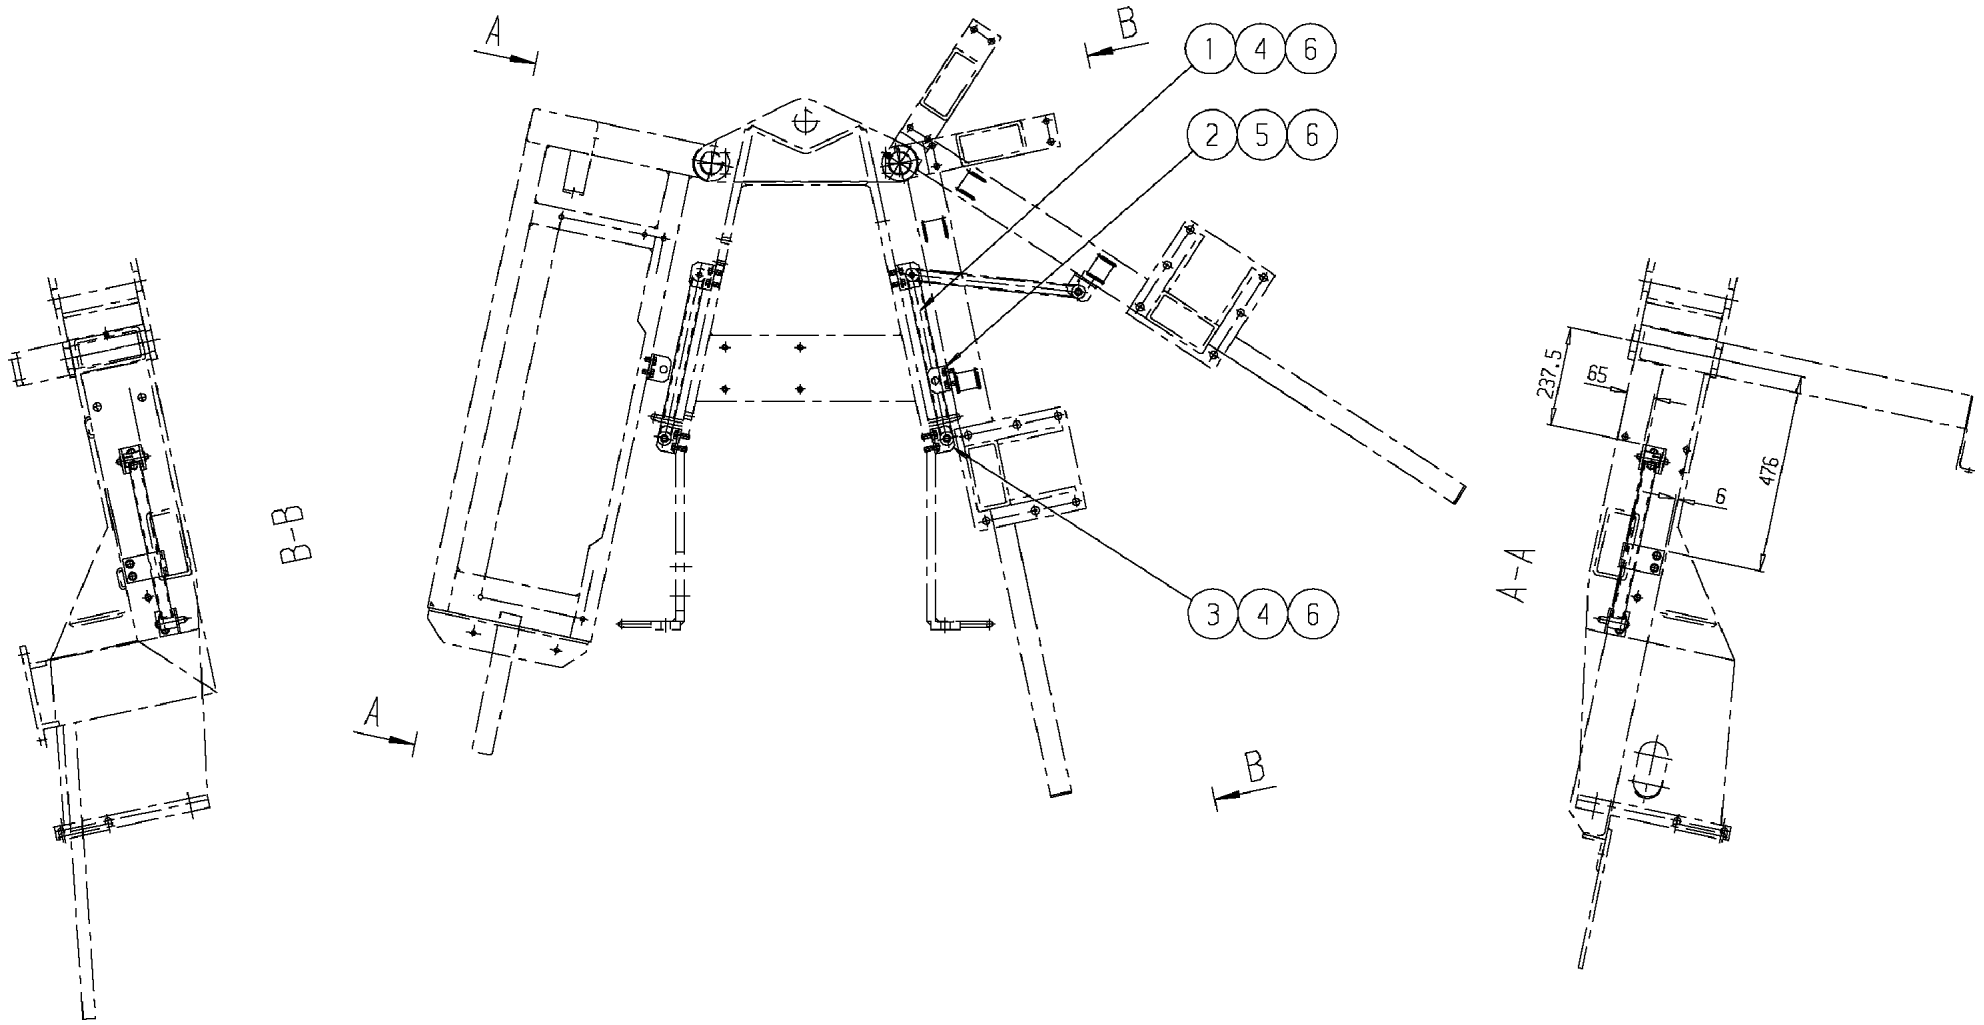


9106 1165 00/1 Ed01

B0002017

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9106 1165 01	1	HASP	HASP	Page 823	ARM MOUNTED ON REAR FRAME
2	9106 1165 06	1	ATTACHMENT	FÄSTE		
3	9106 1165 05	1	ATTACHMENT	FÄSTE		
4	0147 1363 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 30 - 8.8 FZB
5	0147 1360 03	2	SCREW, HEX HEAD	SKRUV, SEXKANT		M 10 X 20 - 8.8 FZB
6	0301 2344 00	6	PLAIN WASHER	RUNDBRICKA		10,5 / 20 X 2 -HB 200 FZB


ARM
MOUNTED ON REAR FRAME

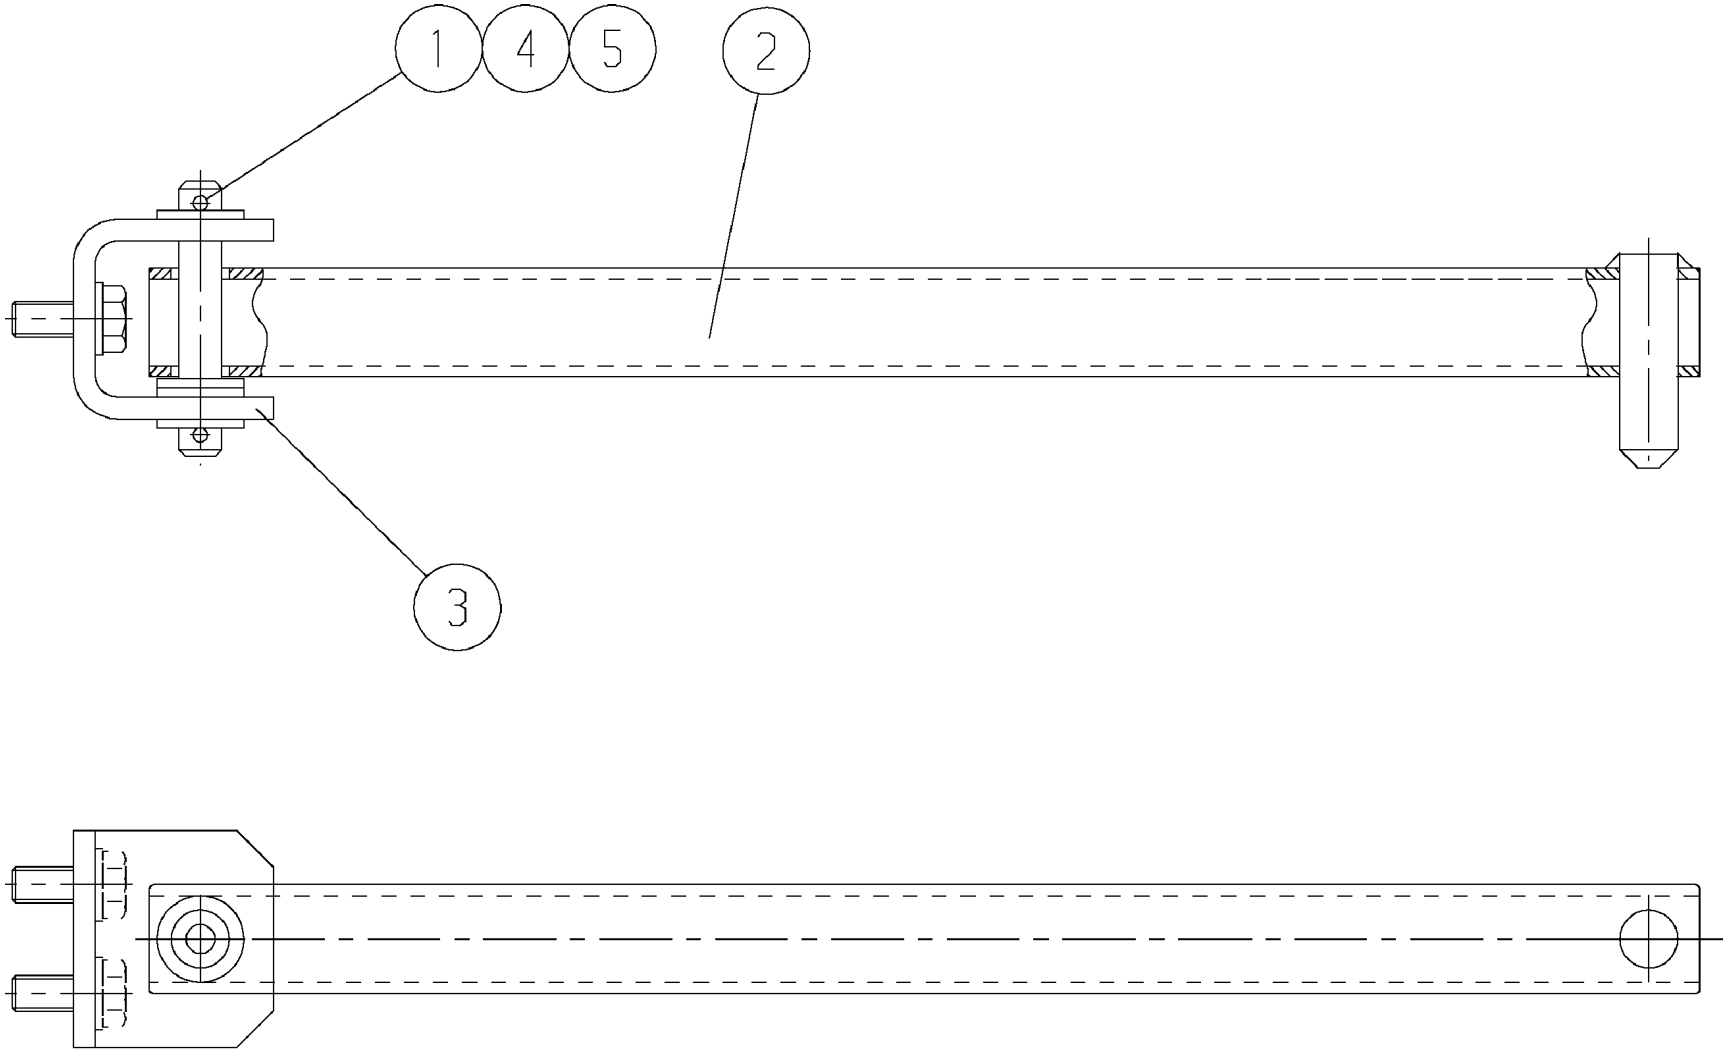

9106 1165 01/1 Ed02

B0002012

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0111 1307 00	2	SPLIT PIN	SAXPINNE		4 X 25 SP 1325 - 00
2	9106 1165 04	1	ARM	ARM		
3	9106 1165 02	1	ATTACHMENT	FÄSTE		
4	9106 1165 03	1	SHAFT	AXEL		
5	0301 2358 00	4	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB

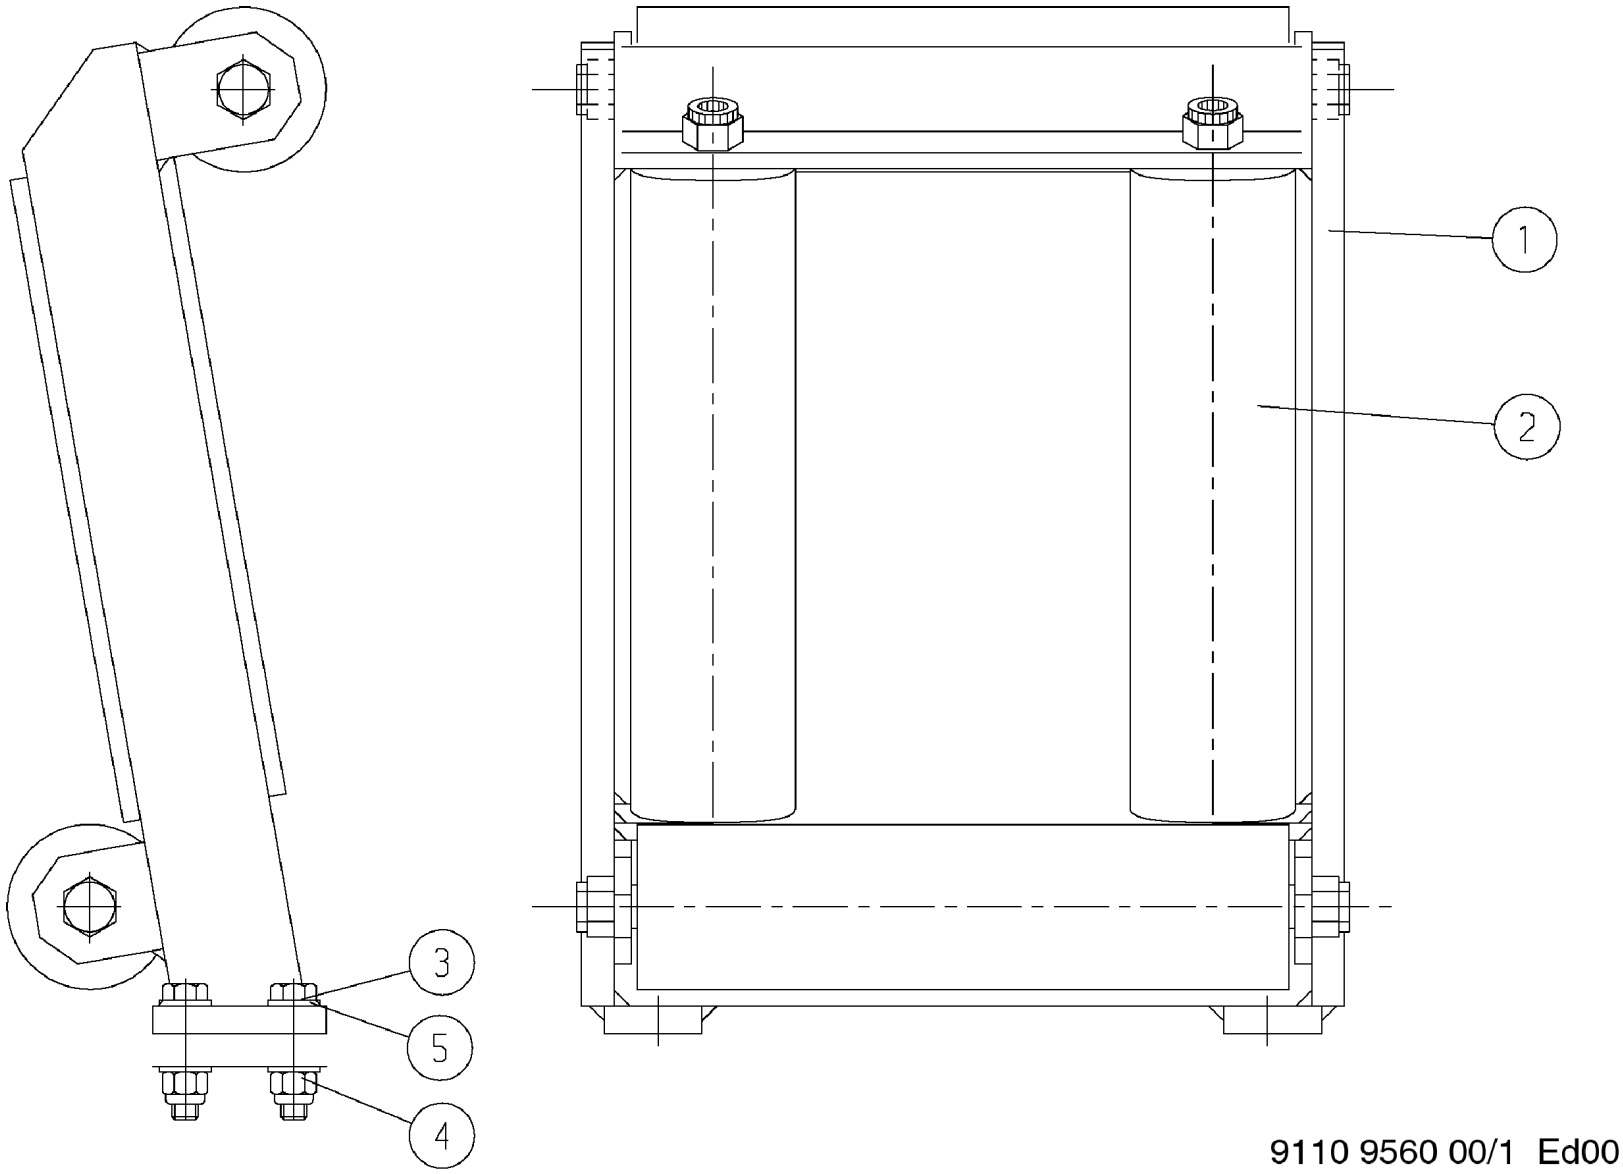


9110 9560 00/1 Ed00

B0001605

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	9110 6731 00	1	ROLLER HOLDER	RULLHÅLLARE		
2	3177 0060 01	4	ROLLER	RULLE		
3	0147 1406 03	4	SCREW, HEX HEAD	SKRUV, SEXKANT		M 12 X 55 - 8.8 FZB
4	0291 1128 22	4	LOCK NUT	LÅSMUTTER		M 12 - 8 FZB / ISO 7040
5	0301 2358 00	8	WASHER	BRICKA		13 / 24 X 2,5 -HB 200 FZB

NIPPLE SET / NIPPELSATS

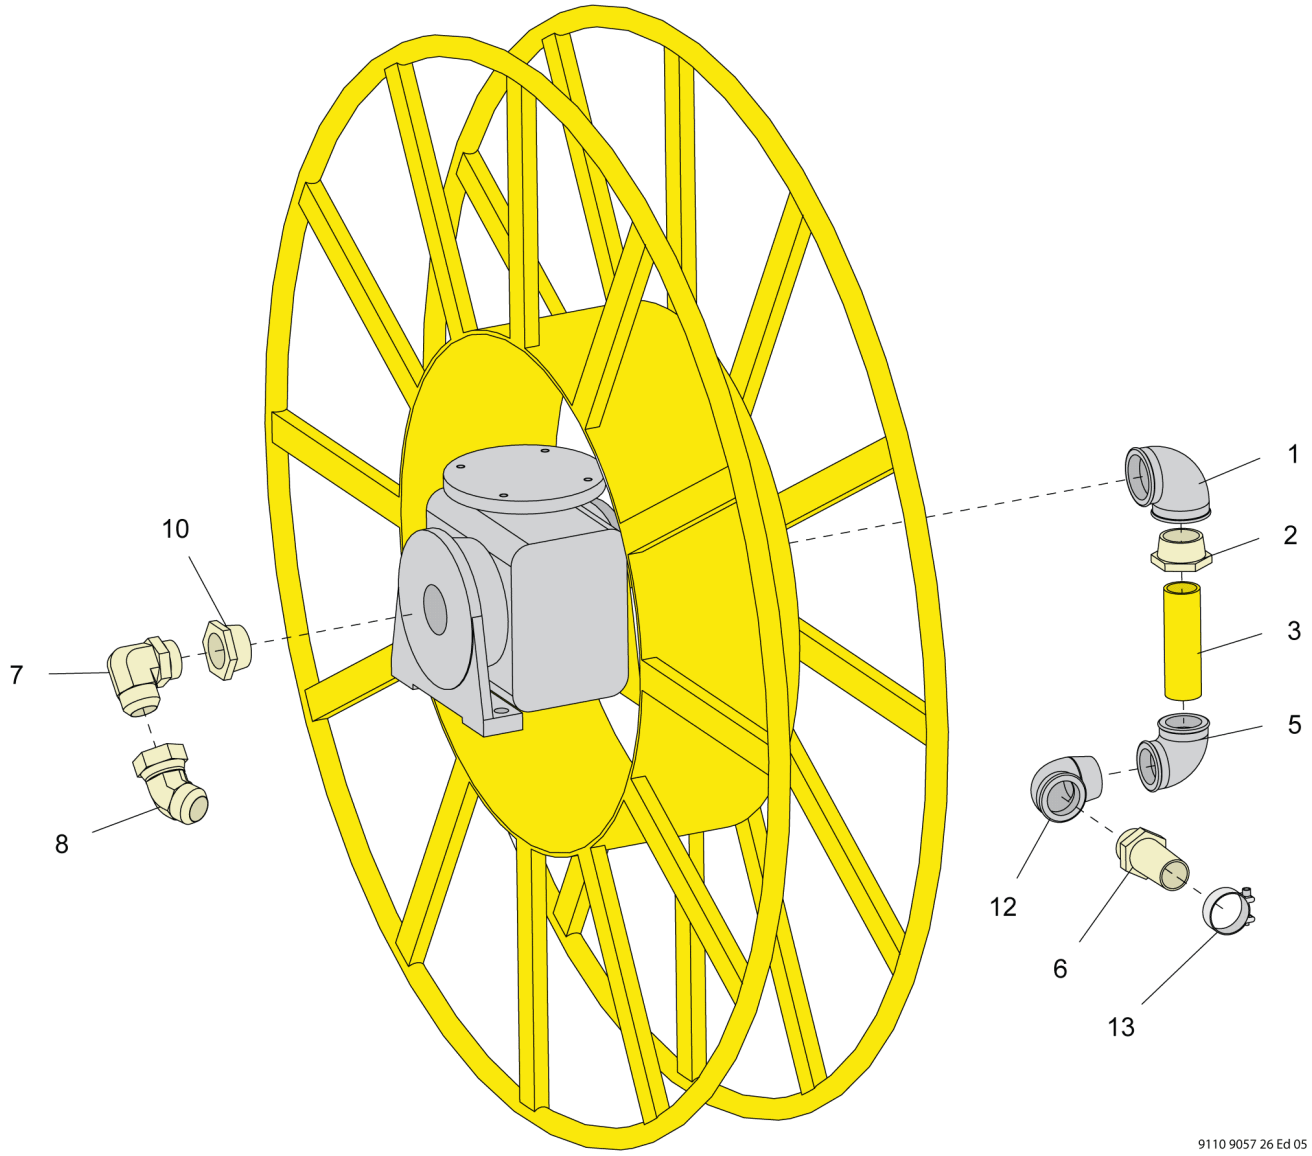

B0043337

NIPPLE SET / NIPPELSATS

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
W8	0574 0063 05	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 2800 R1T 38*2800 R1T
1	0560 1010 03	1	ELBOW	RÖRVINKEL		RP 2 X RP 2 - 90 DEG. FZV
2	0605 8536 03	1	BUSHING	BUSSNING		KR 2 -R 1 1/2 ZINC PLATED
3	0551 0000 93	1	THREADED PIPE	GÄNGAT RÖR		2 G 1 1/2 A 150 21 21 - 1
5	0560 1009 00	1	ELBOW	RÖRVINKEL		RP 1 1/2 X RP 1 1/2 - 90
6	3176 6815 00	1	HOSE NIPPLE	SLANGNIPPEL		
7	3176 6675 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
8	3176 6661 00	1	NIPPLE	NIPPEL		UN 1 7/8
10	0605 8536 03	1	BUSHING	BUSSNING		KR 2 -R 1 1/2 ZINC PLATED
12	0560 1309 03	1	ELBOW	RÖRVINKEL		RP1 1/2 X ISO7-R1 1/2 -90
13	0347 6132 18	1	HOSE CLIP	SLANGKLÄMMA		PA-RI 52 - 55


HOSE CONNECTION / SLANGANSLUTNING

LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	HOSE CONNECTION	SLANGANSLUTNING	832	

HOSE CONNECTION / SLANGANSLUTNING

Fig. 1 of 2

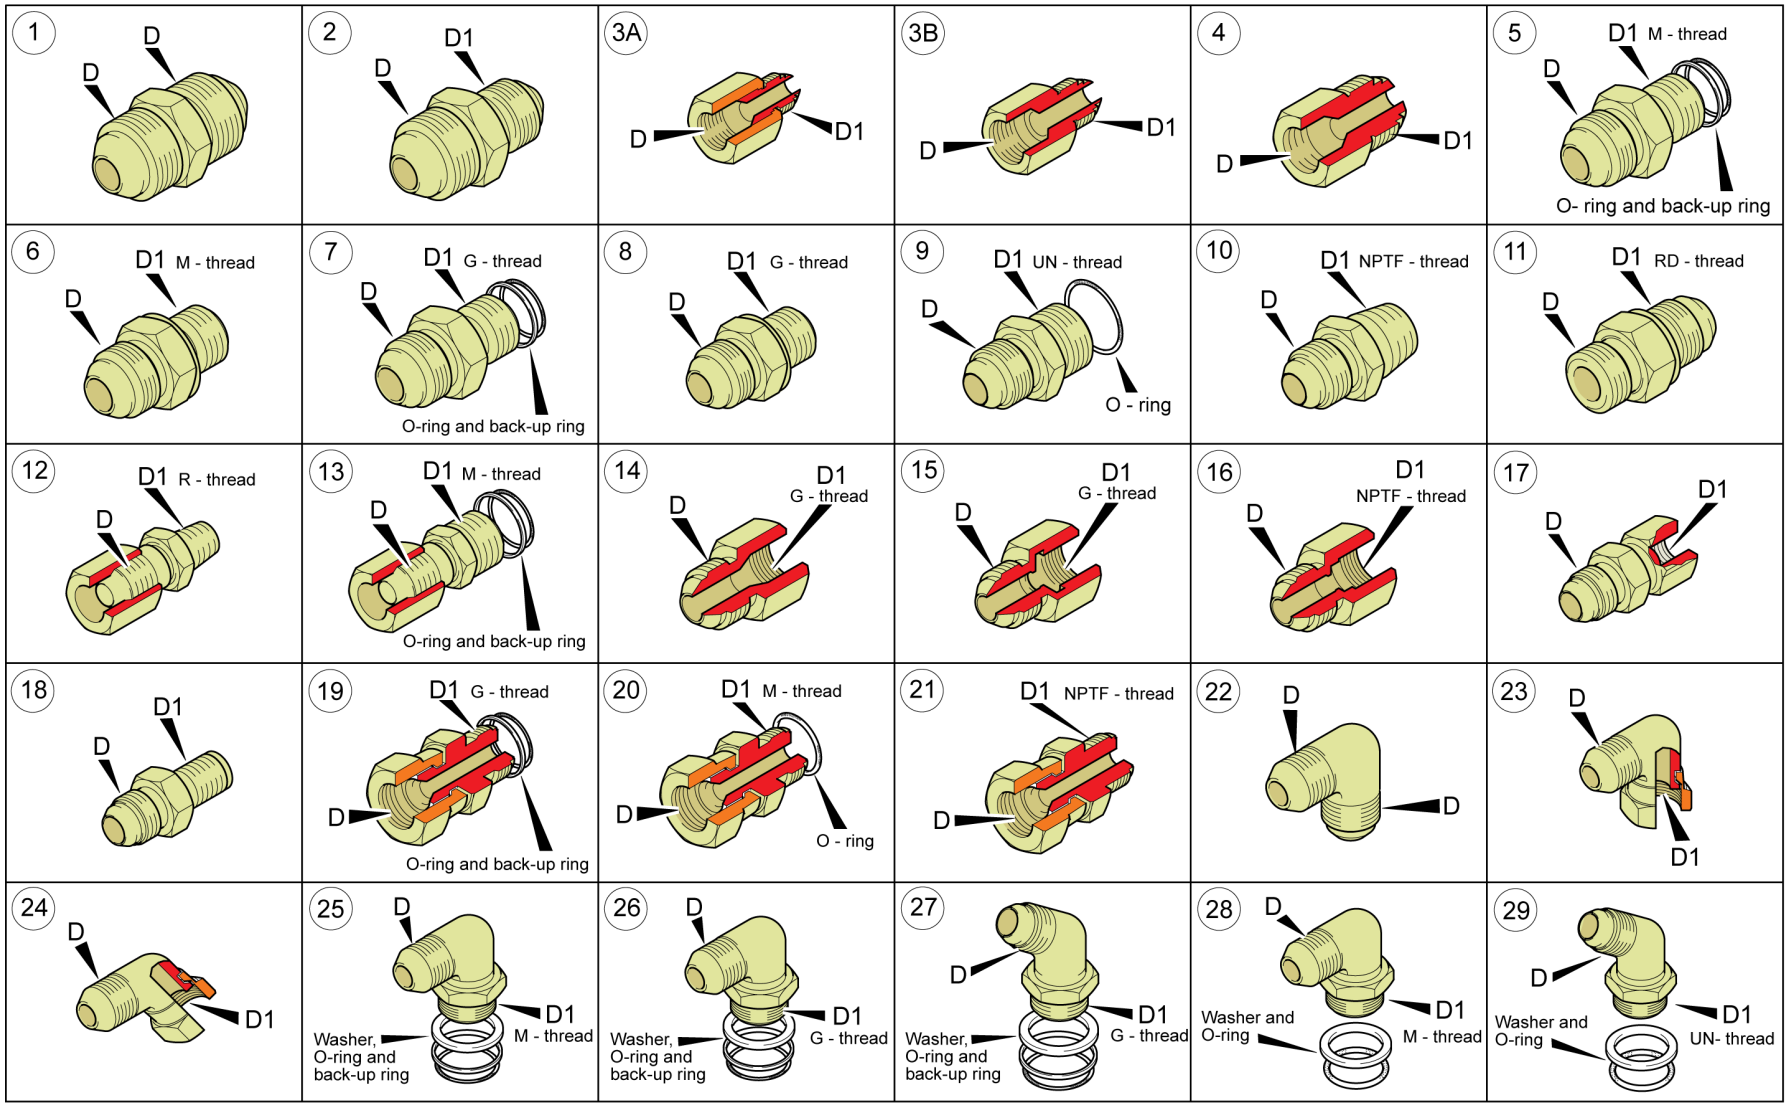


1250 0262 00

B0054217

HOSE CONNECTION / SLANGANSLUTNING

Fig. 2 of 2

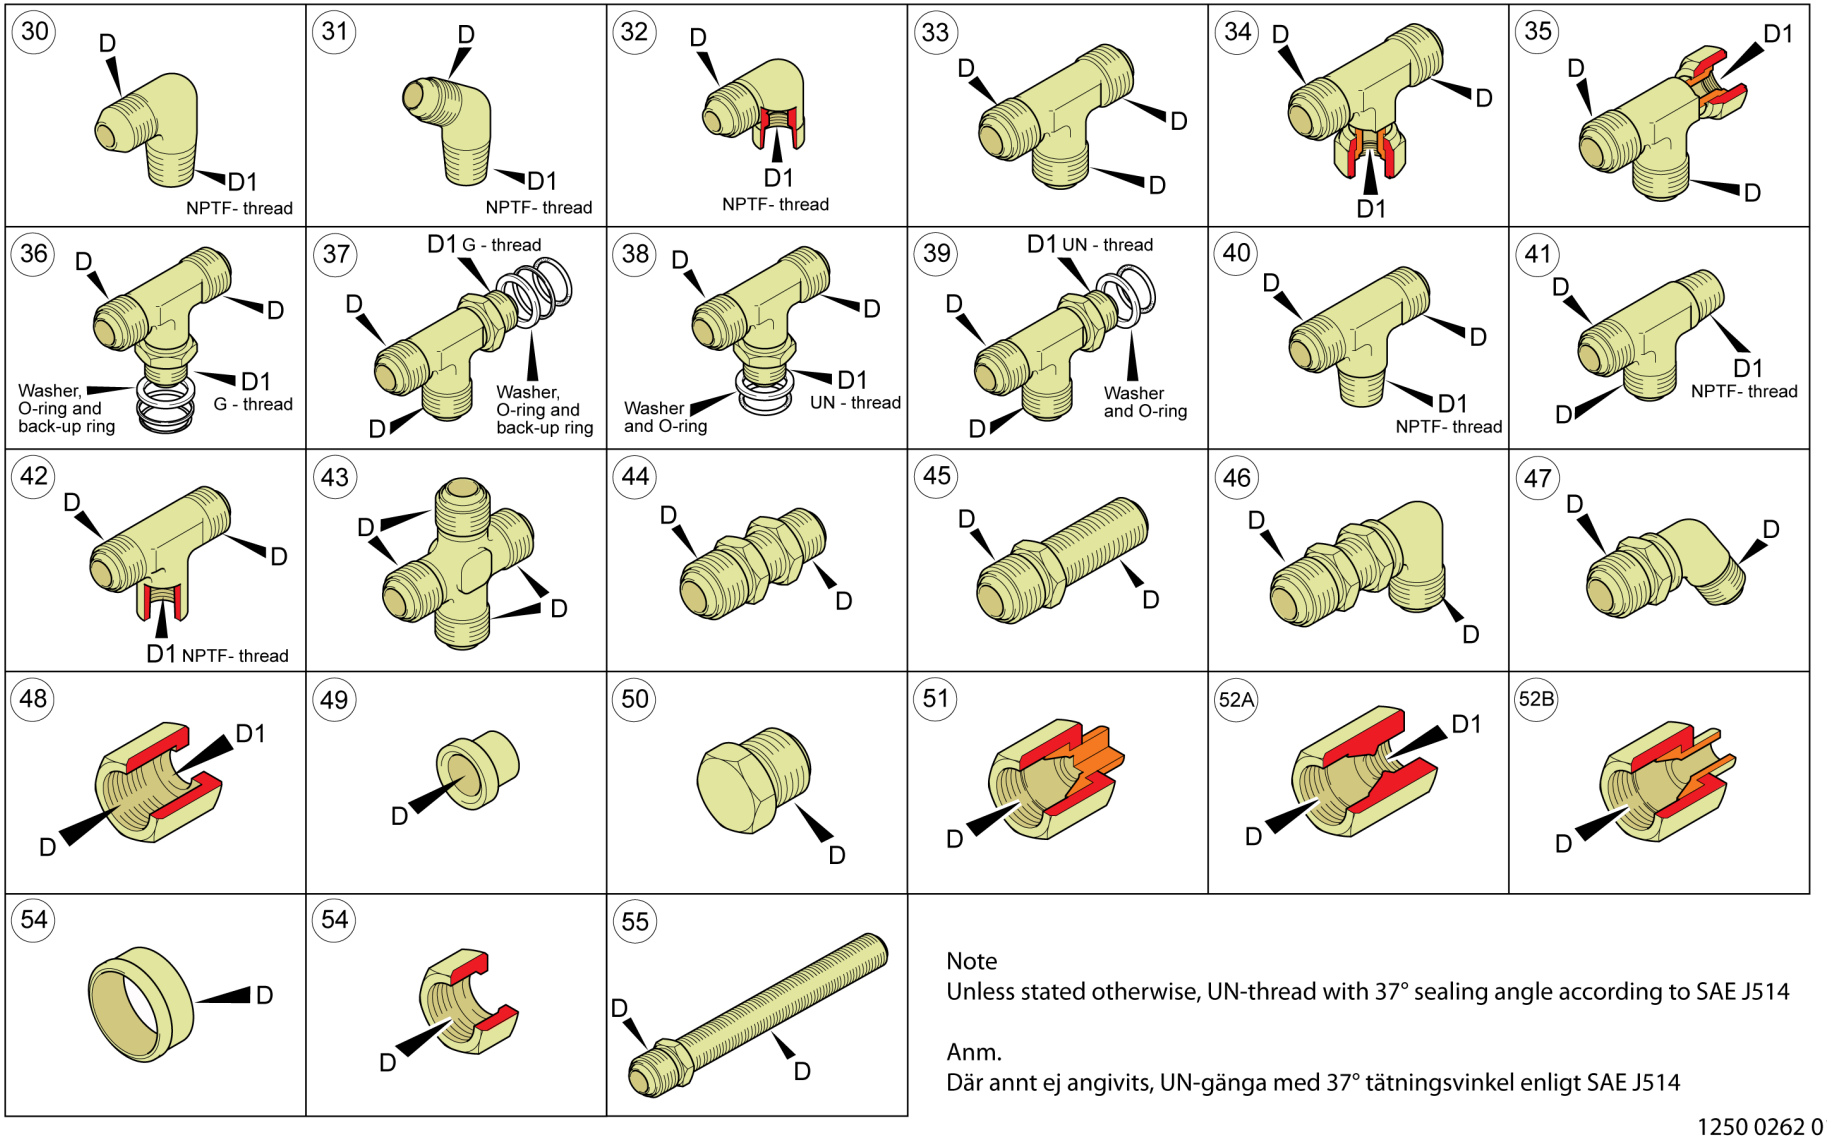

Note
Unless stated otherwise, UN-thread with 37° sealing angle according to SAE J514

Anm.
Där annt ej angivits, UN-gänga med 37° tätningsvinkel enligt SAE J514

1250 0262 01

HOSE CONNECTION / SLANGANSLUTNING

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1	0570 5000 06	1	NIPPLE	NIPPEL		UNF 7/16
1	3176 1472 00	1	NIPPLE	NIPPEL		UNF 3/4
1	3176 2279 00	1	NIPPLE	NIPPEL		UNF 7/8
1	3176 3556 00	1	NIPPLE	NIPPEL		UNF 9/16=HTXS10
1	3176 6495 00	1	NIPPLE	NIPPEL		UN 1 5/16
1	3176 6633 00	1	NIPPLE	NIPPEL		UN 1 5/8
1	3176 6634 00	1	NIPPLE	NIPPEL		UN 1 7/8
1	3176 6635 00	1	NIPPLE	NIPPEL		UN 2 1/2
1	3715 0581 00	1	NIPPLE	NIPPEL		UN 1 1/16
2	3177 3178 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 7/16
3A	3176 6501 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 9/16
3A	3176 6502 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 9/16
3A	3176 6503 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 9/16
3A	3176 6504 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 3/4
3A	3176 6506 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UNF 9/16
3A	3176 6507 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UNF 3/4
3A	3176 6508 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UNF 7/8
3A	3176 6509 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 1/16
3A	3176 6639 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UNF 7/8
3A	3176 6640 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 1/16
3A	3176 6641 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 5/16
3A	3176 7337 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 1/16
3A	3176 7338 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 5/16
3A	3176 7339 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 5/8
3A	3176 8026 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 7/16
3A	3176 8027 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 7/16
3A	3176 8251 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 7/16 UNF 3/4-UNF 7/16
3A	3177 3064 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/16
3B	3176 6505 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 7/8
3B	3176 7336 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 3/4
4	3176 6981 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 7/8

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 2 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
4	3176 7340 00	1	NIPPLE	NIPPEL		UNF 7/8 - UN 1 1/16
4	3176 7341 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 5/16
4	3217 6218 00	1	NIPPLE	NIPPEL		UNF 7/16 - UNF 9/16
5	0570 5010 01	1	NIPPLE	NIPPEL		UN 1 5/16 - M27 X 2
5	0570 5010 12	1	NIPPLE	NIPPEL		UNF 7/16 - M10 X 1
5	0570 5010 17	1	NIPPLE	NIPPEL		UNF 3/4 - M16 X 1,5
5	0570 5010 18	1	NIPPLE	NIPPEL		UNF 3/4 - M18 X 1,5
5	3176 2929 00	1	NIPPLE	NIPPEL		UN 1 1/16 - M26 X 1,5
5	3176 2932 00	1	NIPPLE	NIPPEL		UN 1 1/16 - M22 X 1,5
5	3176 7319 00	1	NIPPLE	NIPPEL		UNF 9/16 - M14 X 1,5
5	3177 3054 00	1	NIPPLE	NIPPEL		UNF 7/8 - M22 X 1,5
5	3177 3068 00	1	NIPPLE	NIPPEL		UNF 7/8 - M18 X 1,5
6	3176 1900 00	1	NIPPLE	NIPPEL		UNF 7/8 - M26 X 1,5
6	3176 1901 00	1	NIPPLE	NIPPEL		UN 1 5/16 - M22 X 1,5
6	3176 6708 00	1	NIPPLE	NIPPEL		UN 1 5/16 - M30 X 1,5
6	3176 6983 00	1	NIPPLE	NIPPEL		UNF 7/8 - M16 X 1,5
6	3176 7703 00	1	NIPPLE	NIPPEL		UNF 9/16 - M10 X 1
6	3176 7707 00	1	NIPPLE	NIPPEL		UNF 9/16 - M12 X 1,5
6	3176 8076 00	1	NIPPLE	NIPPEL		UN 1 1/16 - M33 X 2
6	3176 8077 00	1	NIPPLE	NIPPEL		UNF 7/8 - M27 X 2
6	3176 8078 00	1	NIPPLE	NIPPEL		UNF 9/16 - M16 X 1,5
6	3217 6148 00	1	NIPPLE	NIPPEL		UNF 3/4 - M12 X 1,5
7	0570 5010 11	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/2
7	3176 2904 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/8
7	3176 6348 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
7	3176 6619 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/4
7	3176 6620 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 3/8
7	0570 5010 13	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/4
7	3176 2131 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 3/4 UNF 7/8-G 3/4 STRAIGHT
7	3176 6344 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
7	3176 6349 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 3/8 UNF 9/16-G 3/8 STRAIGHT

HOSE CONNECTION / SLANGANSLUTNING

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
7	3176 6510 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/8
7	3176 6511 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/4
7	3176 6512 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
7	3176 6513 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
7	3176 6514 00	1	NIPPLE	NIPPEL		UNF 7/8 - R 3/8
7	3176 6515 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
7	3176 6516 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 1/2
7	3176 6517 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4
7	3176 6518 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 1
7	3176 6519 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 3/4
7	3176 6520 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1
7	3176 6521 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1 1/4
7	3176 6642 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1
7	3176 6643 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1 1/4
7	3176 6644 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1 1/2
7	3176 6645 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/4
7	3176 6646 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
7	3176 7304 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/8
8	3176 3031 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
8	3176 3032 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 3/8
8	3176 3034 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
8	3176 3035 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
8	3176 3036 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 3/8
8	3176 3037 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
8	3176 6037 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/4
8	3176 3040 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4
8	3176 3042 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 3/4
8	3176 8402 00	1	NIPPLE	NIPPEL		UN 2 1/2 - G 2
9	0570 5010 07	1	NIPPLE	NIPPEL		UNF 7/16 - UNF 9/16
9	0570 5010 14	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 7/16
9	3176 1271 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 3/4
9	3176 1586 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/8

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 4 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
9	3176 5000 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 3/4
9	3176 6301 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 1/16
9	3176 6483 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 5/8
9	3176 6530 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 9/16
9	3176 6531 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 9/16
9	3176 6532 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 7/8
9	3176 6533 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 3/4
9	3176 6534 00	1	NIPPLE	NIPPEL		UNF 7/8 - UN 1 1/16
9	3176 6535 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UNF 7/8
9	3176 6536 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 1/16
9	3176 6537 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 5/16
9	3176 6538 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 5/8
9	3176 6651 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 5/16
9	3176 6652 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 5/8
9	3176 6653 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 7/8
9	3176 6654 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 7/8
9	3176 6655 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 2 1/2
9	3176 6656 00	1	NIPPLE	NIPPEL		UN 2 1/2 - UN 2 1/2
9	3176 8271 00	1	NIPPLE	NIPPEL		UNF 7/16 - UNF 7/16
9	3715 0587 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 5/16
10	0570 5010 19	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/2
10	0570 5010 06	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 1
10	0570 5010 09	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 3/4
10	0570 5010 10	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1 1/4
10	0570 5010 15	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/2
10	0570 5010 16	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 1 1/2
10	0570 5010 20	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/2
10	0570 5010 21	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/4
10	0570 5010 22	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 1/2
10	0570 5010 23	1	NIPPLE	NIPPEL		UN 1 7/8 - NPTF 1 1/4
10	0570 5010 24	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 3/4
10	3176 0064 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
10	3176 0065 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 5 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
10	3176 1508 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
10	3176 1522 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 3/8
10	3176 1942 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/8 UNF 9/16-NPTF 1/8 STRAIGHT
10	3176 1943 00	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1
10	3176 2645 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 1/4
10	3176 2786 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 1/2
10	3176 3829 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 3/8
10	3176 6539 00	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
10	3176 6540 00	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
10	3176 6657 00	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
10	3176 6658 00	1	NIPPLE	NIPPEL		UN 1 7/8 - NPTF 1 1/2
10	3176 6659 00	1	NIPPLE	NIPPEL		UN 2 1/2 - NPTF 2
10	3176 7058 00	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/8
10	3177 3063 00	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
11	3176 8711 00	1	NIPPLE	NIPPEL		UN 2 1/2 - RD 65-6
11	3176 8872 00	1	NIPPLE	NIPPEL		UN 1 7/8 - RG 65-6
12	0570 5011 06	1	STRAIGHT COUPL.	RAK KOPPLING		UN 1 1/16 - ISO 7-R 1/2
13	0570 5011 05	1	STRAIGHT COUPL.	RAK KOPPLING		UNF 7/16 - M10 X 1
14	3176 6522 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4 UNF 9/16-G 1/4 INV.STRAIGHT
14	3176 6523 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 3/8
14	3176 6524 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/4
14	3176 6525 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
14	3176 6526 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
14	3176 6527 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
14	3176 6528 00	1	NIPPLE	NIPPEL		UNF 1 1/16 - G 3/4
14	3176 6529 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1
14	3176 6647 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1
14	3176 6648 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1 1/4
14	3176 6649 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/4
14	3176 6650 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
14	3176 7342 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 1/2

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 6 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
14	3176 8043 00	1	NIPPLE	NIPPEL		UNF 1/2 - G 1/4
15	0570 5020 07	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/4
15	3176 7851 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 3/8
15	3176 8292 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/2
15	3177 3012 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 3/8
15	3177 3070 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
15	3177 3136 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/4
16	0570 5020 08	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 1/2
16	3455 0402 01	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/8
16	3455 0402 02	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
16	3455 0402 03	1	NIPPLE	NIPPEL		UNF 1/2 - NPTF 1/8
16	3455 0402 04	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
16	3455 0402 05	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 3/8
16	3455 0402 06	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8
16	3455 0402 07	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
16	3455 0402 08	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
16	3455 0402 13	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 1/2
16	3455 0402 09	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
16	3455 0402 10	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
16	3455 0402 11	1	NIPPLE	NIPPEL		UN 1 7/8 - NPTF 1 1/4
16	3455 0402 12	1	NIPPLE	NIPPEL		UN 2 1/2 - NPTF 2
17	3176 3045 80	1	PIPE COUPLING	RÖRKOPPLING		UNF 9/16
17	3176 3046 80	1	PIPE COUPLING	RÖRKOPPLING		UNF 3/4
17	3176 3048 80	1	PIPE COUPLING	RÖRKOPPLING		UN 1 1/16
17	3176 3049 80	1	PIPE COUPLING	RÖRKOPPLING		UN 1 5/16
18	3176 2821 00	1	NIPPLE	NIPPEL		UNF 3/4 - 15
18	3176 3050 00	1	NIPPLE	NIPPEL		UNF 9/16 - 8
18	3176 3051 00	1	NIPPLE	NIPPEL		UNF 3/4 - 12
18	3176 3052 00	1	NIPPLE	NIPPEL		UNF 7/8 - 16
18	3176 3053 00	1	NIPPLE	NIPPEL		UN 1 1/16 - 20
18	3176 6353 00	1	NIPPLE	NIPPEL		UNF 9/16 - 12
18	3176 6542 00	1	NIPPLE	NIPPEL		UNF 3/4 - 16
18	3176 6543 00	1	NIPPLE	NIPPEL		UNF 7/8 - 12

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 7 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
18	3176 6544 00	1	NIPPLE	NIPPEL		UNF 7/8 - 20
18	3176 7767 00	1	NIPPLE	NIPPEL		UNF 9/16 - 6
18	3176 8120 00	1	NIPPLE	NIPPEL		UNF 9/16 - 10
18	3217 7310 00	1	NIPPLE	NIPPEL		UN 1 5/16 - 22
19	0570 5040 02	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1 1/4
19	0570 5040 03	1	NIPPLE	NIPPEL		UNF 9/16 - G 3/8
19	0570 5040 05	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/4
19	0570 5040 06	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
19	0570 5040 07	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/4
19	0570 5040 15	1	STRAIGHT NIPPLE	RAK NIPPEL		UN 1 7/8 - G 1 1/4
19	3176 7757 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4
19	3176 8270 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
19	3176 8489 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
19	3176 8490 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
19	3177 3025 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
19	3177 3107 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1
19	3177 3132 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/8
20	0570 5040 04	1	NIPPLE	NIPPEL		UNF 7/16 - M10 X 1
21	0570 5041 05	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
21	0570 5041 06	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
22	0570 5080 05	1	NIPPLE	NIPPEL		UN 1 5/8
22	3176 8972 00	1	NIPPLE	NIPPEL		UNF 9/16
22	3176 8973 00	1	NIPPLE	NIPPEL		UNF 7/8
23	3176 1947 00	1	NIPPLE	NIPPEL		UN 1 3/16
23	3176 3060 00	1	NIPPLE	NIPPEL		UNF 3/4
23	3176 6039 00	1	NIPPLE	NIPPEL		UN 1 5/16
23	3176 6668 00	1	NIPPLE	NIPPEL		UN 1 5/8
23	3176 6669 00	1	NIPPLE	NIPPEL		UN 1 7/8
23	3176 6670 00	1	NIPPLE	NIPPEL		UN 2 1/2
23	3176 7872 00	1	ELBOW NIPPLE	VINKELNIPPEL		UNF 7/16
23	3176 7873 00	1	NIPPLE	NIPPEL		UNF 1/2
23	3715 0584 00	1	ELBOW NIPPLE	VINKELNIPPEL		UNF 9/16 - UNF 9/16

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 8 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
23	3715 0585 00	1	NIPPLE	NIPPEL		UNF 7/8
23	3715 0589 00	1	ELBOW	RÖRVINKEL		UN 1 1/16
24	3176 1944 00	1	NIPPLE	NIPPEL		UNF 7/16
24	3176 6547 00	1	NIPPLE	NIPPEL		UNF 9/16
24	3176 6548 00	1	NIPPLE	NIPPEL		UNF 3/4
24	3176 6549 00	1	NIPPLE	NIPPEL		UNF 7/8
24	3176 6550 00	1	ELBOW	RÖRVINKEL		UN 1 1/16
24	3176 6551 00	1	ELBOW	RÖRVINKEL		UN 1 5/16
24	3176 6660 00	1	NIPPLE	NIPPEL		UN 1 5/8
24	3176 6661 00	1	NIPPLE	NIPPEL		UN 1 7/8
24	3176 6662 00	1	NIPPLE	NIPPEL		UN 2 1/2
25	0570 5090 02	1	NIPPLE	NIPPEL		UNF 3/4 - M18 X 1,5
25	0570 5090 19	1	NIPPLE	NIPPEL		UNF 3/4 - M16 X 1,5
25	0570 5090 20	1	NIPPLE	NIPPEL		UNF 7/8 - M18 X 1,5
26	3176 6351 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
26	3176 6352 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 3/8
26	3176 6612 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/4
26	3176 6671 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/8
26	0570 5090 45	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/2
26	3176 6344 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
26	3176 6563 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/4
26	3176 6564 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 1/2
26	3176 6565 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
26	3176 6566 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 1/2
26	3176 6567 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4 90 DEGREE
26	3176 6568 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 3/4
26	3176 6569 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1
26	3176 6672 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1
26	3176 6673 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1 1/4
26	3176 6674 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/4
26	3176 6675 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
26	3177 3045 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/8

HOSE CONNECTION / SLANGANSLUTNING

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
26	3177 3046 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 3/4
27	0570 5090 18	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/4
27	3176 6552 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
27	3176 6553 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
27	3176 6554 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
27	3176 6555 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4
27	3176 6556 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1
27	3176 6663 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1 1/4
27	3176 6664 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
27	3177 3195 00	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/8
28	3176 1426 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/8
28	3176 6570 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 3/4
28	3176 6571 00	1	ELBOW	RÖRVINKEL		UN 1 1/16 - UN 1 1/16
28	3176 6572 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 5/16
28	3176 6676 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 5/8
28	3177 3190 00	1	NIPPLE	NIPPEL		UNF 1/2 - UNF 1/2
28	3715 0588 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 9/16
28	3176 6677 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 7/8
28	3176 6678 00	1	NIPPLE	NIPPEL		UN 2 1/2 - UN 2 1/2
29	3176 6557 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 9/16
29	3176 6558 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 3/4
29	3176 6559 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/8
29	3176 6560 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 1/16
29	3176 6561 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 5/16
29	3176 6665 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 5/8
29	3176 6666 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 7/8
29	3176 6667 00	1	NIPPLE	NIPPEL		UN 2 1/2 - UN 2 1/2
30	0570 5090 01	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
30	0570 5090 08	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/4
30	0570 5090 16	1	NIPPLE	NIPPEL		UNF 1/2 - NPTF 1/4
30	0570 5090 21	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/8
30	0570 5090 25	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/8

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 10 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
30	0570 5090 26	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 1/4
30	3176 0062 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8 UNF 3/4-NPTF 3/8 90 DEGREE
30	3176 0063 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
30	3176 1948 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/2
30	3176 3828 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 3/8
30	0570 5090 22	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 3/4
30	0570 5090 23	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
30	0570 5090 24	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1
30	0570 5090 27	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 1/2
30	3176 1510 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
30	3176 1672 00	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
30	3176 1949 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 1/2
30A	0570 5090 13	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
30A	0570 5090 14	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
30A	0570 5090 34	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/8
30A	0570 5090 35	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
30A	0570 5090 36	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8
30A	0570 5090 37	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
30A	0570 5090 38	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
30B	0570 5090 15	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
30B	0570 5090 28	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/8
30B	0570 5090 29	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8
30B	0570 5090 30	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
30B	0570 5090 31	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
30B	0570 5090 32	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
30B	0570 5090 33	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
31	0570 5090 12	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
31	3176 0166 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
31	3176 0167 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8
31	3176 0529 00	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1 UN 1 5/16-NPTF 1 45GRAD
31	3176 1509 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 11 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
31	3176 1945 00	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
31	3176 1946 00	1	NIPPLE	NIPPEL		UN 1 7/8 - NPTF 1 1/2
31	3176 6562 00	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
32	0570 5090 03	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
32	0570 5090 04	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
33	3176 1524 00	1	NIPPLE	NIPPEL		UNF 7/8
33	3176 2644 00	1	NIPPLE	NIPPEL		UNF 3/4
33	3176 3555 00	1	NIPPLE	NIPPEL		UNF 9/16
33	3176 6574 00	1	NIPPLE	NIPPEL		UN 1 1/16
33	3176 6575 00	1	NIPPLE	NIPPEL		UN 1 5/16
33	3176 6679 00	1	NIPPLE	NIPPEL		UN 1 5/8
33	3176 6680 00	1	NIPPLE	NIPPEL		UN 1 7/8
33	3176 6681 00	1	NIPPLE	NIPPEL		UN 2 1/2
34	0570 5110 03	1	NIPPLE	NIPPEL		UNF 7/16
34	3176 5428 00	1	NIPPLE	NIPPEL		UNF 9/16
34	3176 6036 00	1	NIPPLE	NIPPEL		UNF 7/8
34	3176 6576 00	1	NIPPLE	NIPPEL		UNF 3/4
34	3176 6577 00	1	NIPPLE	NIPPEL		UN 1 1/16
34	3176 6578 00	1	NIPPLE	NIPPEL		UN 1 5/16
34	3176 6682 00	1	NIPPLE	NIPPEL		UN 1 5/8
34	3176 6683 00	1	NIPPLE	NIPPEL		UN 1 7/8
34	3176 6684 00	1	NIPPLE	NIPPEL		UN 2 1/2
35	0570 5110 01	1	NIPPLE	NIPPEL		UNF 1/2
35	3176 5427 00	1	NIPPLE	NIPPEL		UNF 9/16
35	3176 5535 00	1	NIPPLE	NIPPEL		UNF 3/4
35	3176 6590 00	1	NIPPLE	NIPPEL		UNF 7/8 T- /SVIVELNUT
35	3176 6591 00	1	NIPPLE	NIPPEL		UN 1 1/16
35	3176 6592 00	1	NIPPLE	NIPPEL		UN 1 5/16
35	3176 6690 00	1	NIPPLE	NIPPEL		UN 1 5/8
35	3176 6691 00	1	NIPPLE	NIPPEL		UN 1 7/8
35	3176 6692 00	1	NIPPLE	NIPPEL		UN 2 1/2

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 12 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
35	3177 3095 00	1	NIPPLE	NIPPEL		UNF 7/16
36	0570 5120 03	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/4
36	0570 5120 04	1	NIPPLE	NIPPEL		UN 1 1/16 - G 1/2
36	3176 6579 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
36	3176 6580 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
36	3176 6581 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2
36	3176 6582 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4
36	3176 6583 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1
36	3176 6585 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 3/4
36	3176 6586 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/8
37	0570 5120 01	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/8
37	0570 5120 05	1	NIPPLE	NIPPEL		UNF 7/16 - G 1/4
37	3176 6593 00	1	NIPPLE	NIPPEL		UNF 9/16 - G 1/4
37	3176 6594 00	1	NIPPLE	NIPPEL		UNF 3/4 - G 3/8
37	3176 6595 00	1	NIPPLE	NIPPEL		UNF 7/8 - G 1/2 UNF 7/8-G 1/2
37	3176 6596 00	1	NIPPLE	NIPPEL		UN 1 1/16 - G 3/4
37	3176 6597 00	1	NIPPLE	NIPPEL		UN 1 5/16 - G 1
37	3176 6693 00	1	NIPPLE	NIPPEL		UN 1 5/8 - G 1 1/4
37	3176 6694 00	1	NIPPLE	NIPPEL		UN 1 7/8 - G 1 1/2
38	3176 6584 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 9/16
38	3176 6585 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 3/4
38	3176 6586 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/8
38	3176 6587 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 1/16
38	3176 6588 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 5/16
38	3176 6687 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 5/8
38	3176 6688 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 7/8
38	3176 6689 00	1	NIPPLE	NIPPEL		UN 2 1/2 - UN 2 1/2
39	3176 6598 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 9/16
39	3176 6599 00	1	NIPPLE	NIPPEL		UNF 3/4 - UNF 3/4
39	3176 6600 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/8
39	3176 6601 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 1/16
39	3176 6602 00	1	NIPPLE	NIPPEL		UN 1 5/16 - UN 1 5/16

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 13 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
39	3176 6695 00	1	NIPPLE	NIPPEL		UN 1 5/8 - UN 1 5/8
39	3176 6696 00	1	NIPPLE	NIPPEL		UN 1 7/8 - UN 1 7/8
39	3176 6697 00	1	NIPPLE	NIPPEL		UN 2 1/2 - UN 2 1/2
40	3176 1300 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8
40	3176 5018 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
40	3176 1523 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
40	3176 1671 00	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
40	3176 6589 00	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
41	0570 5120 07	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/8
41	0570 5120 08	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
41	0570 5120 09	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 3/8
41	0570 5120 10	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 1/2
41	0570 5120 11	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 3/4
41	0570 5120 12	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
41	0570 5120 13	1	NIPPLE	NIPPEL		UN 1 7/8 - NPTF 1 1/2
41	3176 2710 00	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
41	3176 2809 00	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8
41	3176 6603 00	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
41	3176 6604 00	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
41	3176 6605 00	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
42	3455 0766 01	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/8
42	3455 0766 02	1	NIPPLE	NIPPEL		UNF 7/16 - NPTF 1/4
42	3455 0766 03	1	NIPPLE	NIPPEL		UNF 1/2 - NPTF 1/8
42	3455 0766 04	1	NIPPLE	NIPPEL		UNF 9/16 - NPTF 1/4
42	3455 0766 05	1	NIPPLE	NIPPEL		UNF 3/4 - NPTF 3/8
42	3455 0766 06	1	NIPPLE	NIPPEL		UNF 7/8 - NPTF 1/2
42	3455 0766 07	1	NIPPLE	NIPPEL		UN 1 1/16 - NPTF 3/4
42	3455 0766 08	1	NIPPLE	NIPPEL		UN 1 5/16 - NPTF 1
42	3455 0766 09	1	NIPPLE	NIPPEL		UN 1 5/8 - NPTF 1 1/4
43	0570 5140 05	1	NIPPLE	NIPPEL		UN 1 1/16
43	3176 7071 00	1	NIPPLE	NIPPEL		UNF 3/4

HOSE CONNECTION / SLANGANSLUTNING

(Sheet 14 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
44	3176 6496 00	1	NIPPLE	NIPPEL		UNF 9/16=WTXNS10 UNF 9/16
44	3176 6497 00	1	NIPPLE	NIPPEL		UNF 3/4
44	3176 6498 00	1	NIPPLE	NIPPEL		UNF 7/8
44	3176 8028 00	1	NIPPLE	NIPPEL		UNF 7/16
44	3176 6499 00	1	NIPPLE	NIPPEL		UN 1 1/16
44	3176 6500 00	1	NIPPLE	NIPPEL		UN 1 5/16
44	3176 6636 00	1	NIPPLE	NIPPEL		UN 1 5/8
44	3176 6637 00	1	NIPPLE	NIPPEL		UN 1 7/8
44	3176 6638 00	1	NIPPLE	NIPPEL		UN 2 1/2
45	3176 8424 00	1	NIPPLE	NIPPEL		UNF 9/16 - UNF 9/16
46	3455 0543 01	1	NIPPLE	NIPPEL		UNF 7/16
46	3455 0543 02	1	NIPPLE	NIPPEL		UNF 1/2
46	3455 0543 03	1	NIPPLE	NIPPEL		UNF 9/16
46	3455 0543 04	1	NIPPLE	NIPPEL		UNF 3/4
46	3455 0543 05	1	NIPPLE	NIPPEL		UNF 7/8
46	3455 0543 06	1	NIPPLE	NIPPEL		UN 1 1/16
46	3455 0543 07	1	NIPPLE	NIPPEL		UN 1 5/16
46	3455 0543 08	1	NIPPLE	NIPPEL		UN 1 5/8
47	0570 5160 05	1	NIPPLE	NIPPEL		UNF 7/16
47A	3176 8927 00	1	NIPPLE	NIPPEL		UNF 7/8
48	3176 2930 00	1	CAP NUT	ÖVERFALLSMUTTER		UN 1 1/16
48	3176 6613 00	1	CAP NUT	ÖVERFALLSMUTTER		UNF 7/16
48	3176 6614 00	1	CAP NUT	ÖVERFALLSMUTTER		UNF 9/16
48	3176 6615 00	1	CAP NUT	ÖVERFALLSMUTTER		UNF 3/4
48	3176 6616 00	1	CAP NUT	ÖVERFALLSMUTTER		UNF 7/8
48	3176 6618 00	1	CAP NUT	ÖVERFALLSMUTTER		UN 1 5/16
48	3176 6787 00	1	CAP NUT	ÖVERFALLSMUTTER		UN 1 5/8
48	3176 6788 00	1	CAP NUT	ÖVERFALLSMUTTER		UN 1 7/8
48	3176 6789 00	1	CAP NUT	ÖVERFALLSMUTTER		UN 2 1/2
49A	0570 5190 11	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=32
49A	3176 2905 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=30
49A	3177 3047 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=6

HOSE CONNECTION / SLANGANSLUTNING

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
49A	3177 3108 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=38
49A	3715 1505 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=20
49A	3715 3020 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=10
49A	3715 3021 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=16
49A	3715 3022 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=25
49A	3715 3030 00	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=12
49B	0570 5190 02	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=1/4
49B	0570 5190 03	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=3/8
49B	0570 5190 04	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=1/2
49B	0570 5190 05	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=3/4
49B	0570 5190 06	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=1
49B	0570 5190 07	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=1 1/4
49B	0570 5190 08	1	ADAPTER SLEEVE	KLÄMHYLSA		FÖR RÖR D=1 1/2
50	3176 5563 00	1	PLUG	PLUGG		UNF 3/4
50	3176 6698 00	1	PLUG	PLUGG		UN 1 5/8
50	3176 6699 00	1	PLUG	PLUGG		UN 1 7/8
50	3176 6700 00	1	PLUG	PLUGG		UN 2 1/2
50	3176 8289 00	1	PLUG	PLUGG		UNF 7/16
50	3715 0598 00	1	PLUG	PLUGG		UN 1 1/16
50	3715 0599 00	1	PLUG	PLUGG		UNF 7/8
50	3715 0600 00	1	PLUG	PLUGG		UNF 9/16
50	3715 0821 00	1	PLUG	PLUGG		UN 1 5/16
51	3176 5313 00	1	CAP	HUV		UNF 3/4
51	3176 5429 00	1	CAP	HUV		UNF 9/16
51	3176 6701 00	1	CAP	HUV		UN 1 5/8
51	3176 6702 00	1	CAP	HUV		UN 1 7/8
51	3176 6703 00	1	CAP	HUV		UN 2 1/2
51	3176 8029 00	1	CAP	HUV		UNF 7/16
51	3177 3197 00	1	CAP	HUV		UNF 1/2
51	3715 0597 00	1	CAP	HUV		UNF 7/8
51	3715 0819 00	1	CAP	HUV		UN 1 5/16
51	3715 0820 00	1	CAP	HUV		UN 1 1/16

HOSE CONNECTION / SLANGANSLUTNING


(Sheet 16 of 17)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
52A	0570 5191 05	1	TEST CONNECTION	TESTANSLUTNING		UNF 3/4 - G 1/4
52A	0570 5191 06	1	TEST CONNECTION	TESTANSLUTNING		UNF 7/8 - GR 1/4
52A	0570 5191 07	1	TEST CONNECTION	TESTANSLUTNING		UNF 9/16 - G 1/4
52B	0570 5191 08	1	TEST CONNECTION	TESTANSLUTNING		UN 1 1/16 - G 1/4
52B	0570 5191 09	1	TEST CONNECTION	TESTANSLUTNING		UN 1 5/16 - G 1/4
53	0584 0004 00	1	CUTTING RING	SKÄRRING		6 - PRESS.WORK 100 BAR
53	0584 0024 00	1	CUTTING RING	SKÄRRING		10 - PRESS.WORK 250 BAR
53	0584 0025 00	1	CUTTING RING	SKÄRRING		
53	0584 0027 00	1	CUTTING RING	SKÄRRING		Y 1 - 15
53	0584 0062 00	1	CUTTING RING	SKÄRRING		6 - PRESS.WORK 630 BAR
53	0584 0064 00	1	CUTTING RING	SKÄRRING		Y 1 - 8
53	0584 0065 00	1	CUTTING RING	SKÄRRING		
53	0584 0066 00	1	CUTTING RING	SKÄRRING		Y 1 - 12
53	0584 0067 00	1	CUTTING RING	SKÄRRING		14 - PRESS.WORK 630 BAR
53	0584 0068 00	1	CUTTING RING	SKÄRRING		16 - PRESS.WORK 400 BAR
53	0584 0071 00	1	CUTTING RING	SKÄRRING		Y 1 - 20
53	0584 0074 00	1	CUTTING RING	SKÄRRING		Y 1 - 25
54	0584 2004 00	1	NUT	MUTTER		M 10X1 - 6-LL DIN 3870
54	0584 2022 00	1	NUT	MUTTER		M 12X1,5 - 6-L DIN 3870
54	0584 2024 00	1	NUT	MUTTER		M 16X1,5 - 10-L DIN 3870
54	0584 2025 00	1	NUT	MUTTER		M 16X1,5 - 10-L DIN 3870
54	0584 2026 00	1	NUT	MUTTER		M 18X1,5 - 12-L DIN 3870
54	0584 2027 00	1	NUT	MUTTER		M 22X1,5 - 15-L DIN 3870
54	0584 2062 00	1	NUT	MUTTER		M 14X1,5 - 6-S DIN 3870
54	0584 2064 00	1	NUT	MUTTER		M 16X1,5 - 8-S DIN 3870
54	0584 2065 00	1	NUT	MUTTER		M 18X1,5 - 10-S DIN 3870
54	0584 2066 00	1	NUT	MUTTER		M 20X1,5 - 12-S DIN 3870
54	0584 2067 00	1	NUT	MUTTER		M 22X1,5 - 14-S DIN 3870
54	0584 2068 00	1	NUT	MUTTER		M 24X1,5 - 16-S DIN 3870
54	0584 2074 00	1	NUT	MUTTER		M 36X2 - 25-S DIN 3870
55	3176 7968 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 9/16 EXTRA LONG, FOR FEED BULKHEAD

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
55	3176 7969 00	1	NIPPLE	NIPPEL		UNF 7/8 - UNF 7/8 EXTRA LONG, FOR FEED BULKHEAD
55	3176 7970 00	1	NIPPLE	NIPPEL		UN 1 1/16 - UN 1 1/16 EXTRA LONG, FOR FEED BULKHEAD

HOSES / SLANGAR
LIST OF CONTENTS

Part no Detaljnr	Description	Benämning	See page Se sida	Remarks Anmärkning
–	HOSES	SLANGAR	851	

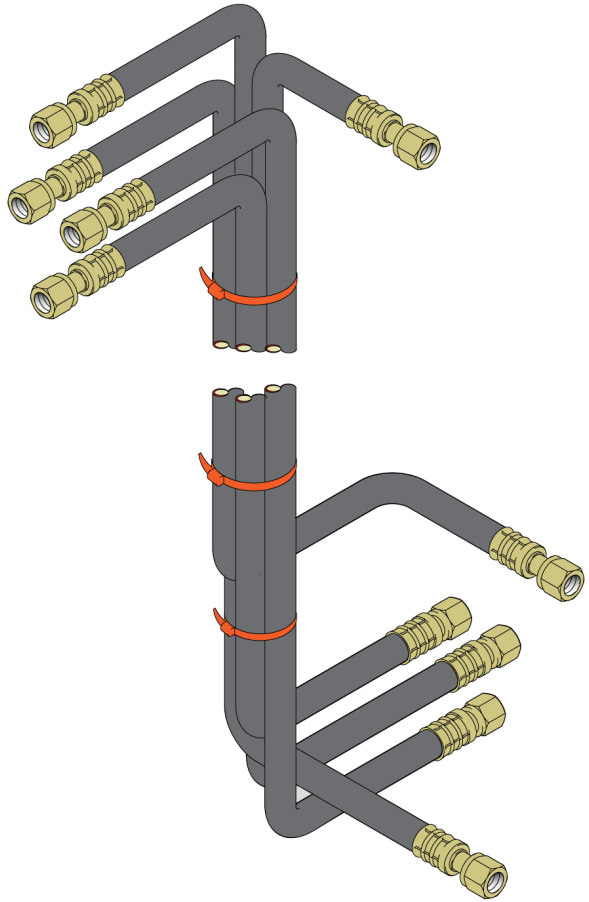

B0015365

HOSES / SLANGAR

(Sheet 1 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
ABR1	0574 1316 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2700 R2AT
ABR2	0574 1281 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2800 R2AT
AC1	3176 6856 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3000 R2AT
AC2	0574 2277 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2000 R2AT
AC3	0574 3257 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 500 R2AT
AC5	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
AF	0574 4037 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 4000 R1T
AJ1	0574 0252 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 250 R2AT
AJ3	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
AJ4	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
AR1LS1	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
AR11	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
AR13	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
AR2LS2	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
AR3	0574 1285 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3600 R2AT
AR4	0574 1285 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3600 R2AT
AR5	0574 1288 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4200 R2AT
AR6	0574 1288 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4200 R2AT
AS1	0574 0068 08	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5500 R1T RÖD
AS2	0574 0068 42	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4500 R1T RÖD
AS3	0574 0068 03	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R1T RÖD
AS4	0574 0068 36	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R1T RÖD
AS41	0574 0068 29	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2500 R1T RÖD
AS42	0574 0068 28	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2400 R1T RÖD
AS50	0574 0068 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 500 R1T RÖD
AS51	0574 0068 13	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 700 R1T RÖD
AS52	0574 0068 13	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 700 R1T RÖD
AS60	0574 0068 17	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1100 R1T RÖD
AS61	0574 0068 18	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1200 R1T RÖD
AS62	0574 0068 17	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1100 R1T RÖD
BD1	3176 6975 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2400 R2AT
BD2	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT

HOSES / SLANGAR

(Sheet 2 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
BD3	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
BE1	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
BE2	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
BFL1	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFL2	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFL4	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT
BFR1	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFR2	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
BFR4	0574 1262 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 750 R2AT
BRL2	3176 5681 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 600 R2AT
BRL6	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
BRR2	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT
BRR6	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
BR3	0574 0260 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 650 R2AT
CV1	0574 3261 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 700 R2AT
CV2	0574 3264 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 850 R2AT
DKV	0574 0324 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5800 R2AT
DVV	0574 0320 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5700 R2AT
DW	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
D1	3176 6972 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2200 R2AT
D2	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
D3	0574 0064 65	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4700 R2AT
D30	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
D31	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
D32	3176 6336 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 700 R2AT
D33	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
D7	3176 7131 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3000 R2AT
FE1	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
FE2	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
FE3	0574 1286 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3800 R2AT
FE4	0574 1286 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3800 R2AT
FE5	0574 1276 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1900 R2AT

HOSES / SLANGAR

(Sheet 3 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
FE6	0574 1276 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1900 R2AT
FG	0574 0324 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5800 R2AT
FL1	3176 6859 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3800 R2AT
FL2	3176 6859 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3800 R2AT
FL3	0574 0278 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2200 R2AT
FL4	0574 0278 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2200 R2AT
FR1	0574 0317 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4300 R2AT
FR2	0574 0289 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4400 R2AT
F1	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
F10	3176 5677 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1000 R2AT
F12	0574 1260 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 650 R2AT
F12	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT
F13	0574 1254 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 350 R2AT
F14	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
F16	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
F18	3176 5676 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 900 R2AT
F2	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
F20	3176 5676 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 900 R2AT
F21	0574 1266 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 950 R2AT
F22	0574 1266 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 950 R2AT
F22	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
F23	0574 0065 88	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3700 R2AT
F24	0574 0065 88	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3700 R2AT
F24	0574 1274 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1700 R2AT
F25	0574 0064 55	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4300 R2AT
F26	0574 0064 55	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4300 R2AT
F27	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
F28	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
F3	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
F4	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
F5	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT
F6	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT
F9	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT

HOSES / SLANGAR

(Sheet 4 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
GR1	0574 0296 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 7000 R2AT
G10	3217 9578 10	1	HOSE ASSEMBLY	SLANGLEDNING		BTR 105 ST, L= 600, 3/16"
G11	3217 9578 10	1	HOSE ASSEMBLY	SLANGLEDNING		BTR 105 ST, L= 600, 3/16"
G12	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
G12	3217 9578 07	1	HOSE ASSEMBLY	SLANGLEDNING		BTR 105 ST, L= 400, 3/16"
G13	0574 0065 96	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 275 R2AT
G13	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
HB11	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB12	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB13	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
HB14	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
HB21	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB22	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
HB23	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
HB24	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
J11	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J12	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J19	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J20	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J21	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J22	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
J23	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J24	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J31	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J32	0574 0323 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 5200 R2AT
J51	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT
J52	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT
J61	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT
J62	3176 7644 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4000 R2AT
KV1	3176 6975 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2400 R2AT
KV2	3176 6337 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2200 R2AT
KV3	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT

HOSES / SLANGAR

(Sheet 5 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
KV4	3176 5685 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 400 R2AT
KV5	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
KV6	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
LU	0574 2318 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4500 R2AT
LU	3176 8880 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 5000 R2AT
LUB1	0574 0064 49	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 850 R2AT
LUG	0574 0274 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1700 R2AT
LU1	0574 2258 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 550 R2AT
LU1	0574 2263 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 800 R2AT
L1	0574 1321 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2500 R2AT
L2	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
L20	3176 5682 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3000 R2AT
L3	0574 0064 65	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4700 R2AT
PD1	0574 1321 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2500 R2AT
PD2	0574 1284 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3400 R2AT
PD3	0574 1290 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4600 R2AT
PP1	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
PP10	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT
PP11	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
PP2	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
PP3	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP4	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP5	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP6	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
PP7	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
PP8	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
PP9	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT
P10	0574 2286 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3800 R2AT
P12	0574 2318 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 4500 R2AT
P13	0574 2280 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2600 R2AT
P14	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
P15	3176 5681 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 600 R2AT
P2	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT

HOSES / SLANGAR

(Sheet 6 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
P3	0574 0065 88	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3700 R2AT
P30	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
P31	0574 0064 54	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 550 R2AT
P31	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
P32	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
P90	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
RRX	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
RX1	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
R1	0574 3278 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2200 R2AT
R2	0574 3278 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2200 R2AT
R3	0574 3284 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R2AT
R4	0574 3284 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R2AT
R5	0574 3289 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4400 R2AT
R6	0574 3289 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4400 R2AT
STT1	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
ST1	0574 2273 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1600 R2AT
ST2	0574 0000 39	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 850 R2AT
ST3	0574 2280 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2600 R2AT
ST4	0574 2280 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2600 R2AT
SU1	5107 1536 00	1	HOSE ASSEMBLY	SLANGLEDNING		
S1	0574 0000 16	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2700 R9R
S2	0574 0065 29	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 5300 R9R
S3	0574 0000 32	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 2700 R9R
TF	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT
TF1	3176 6862 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 700 R2AT
TF2	0574 3277 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2000 R2AT
TRF	0574 3261 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 700 R2AT
TS1	0574 3320 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2300 R2AT
TS2	0574 0065 30	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 5300 R2AT
TS3	0574 0064 97	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 2700 R2AT
TV1	0574 2256 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 450 R2AT
TV2	0574 2269 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1200 R2AT

HOSES / SLANGAR

(Sheet 7 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
T10	0574 2286 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3800 R2AT
T11	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
T14	0574 2276 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1900 R2AT
T15	3176 6861 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 500 R2AT
T17	0574 0067 91	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 5600 R2AT
T19	3176 6861 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 500 R2AT
T40	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
T41	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
T41	0574 6013 11	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 800 R1T
T42	0574 6019 11	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 1200 R1T
T43	0574 0000 97	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 4300 R1T
T78	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
T80	3176 7457 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 350 R2AT
T81	3176 7457 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 350 R2AT
T82	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
T83	0574 0064 54	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 550 R2AT
T84	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT
T90	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
T92	3176 6337 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2200 R2AT
VV1	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT
VV2	0574 0000 23	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2100 R2AT
VV3	0574 1254 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 350 R2AT
VV4	0574 1254 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 350 R2AT
VV5	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
VV6	0574 0066 21	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 6800 R2AT
V0	3128 3211 13	1	HOSE ASSEMBLY	SLANGLEDNING		19X750 MULTIMAX
V1	0574 3278 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2200 R2AT
V2	0574 3284 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3400 R2AT
V3	0574 3290 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4600 R2AT
WG1	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
W5	0574 0064 81	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 5000 R2AT
W6	0574 0069 84	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 2700 R1T
W7	0574 6025 11	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 1800 R1T

HOSES / SLANGAR

(Sheet 8 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
W8	0574 0063 05	1	HOSE ASSEMBLY	SLANGLEDNING		38 X 2800 R1T
XF20	0574 0252 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 250 R2AT
XF28	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT
XF70	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
XF72	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
XP1	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
1AF2	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
1AR14	3176 3733 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 700 R2AT
1AR14	3176 5677 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1000 R2AT
1AR15	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
1AR16	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
1AR7	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
1AR8	0574 0000 23	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2100 R2AT
1BAN1	0574 0064 50	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1900 R2AT
1BE3	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
1BE4	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
1BFL3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
1BFR3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
1BRL4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
1BRR4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
1BR1	0574 0064 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2900 R2AT
1BR2	0574 0328 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 220 R2AT
1D11	0574 4265 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 900 R2AT
1D2	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
1D20	3176 5864 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1300 R2AT
1D4	0574 2326 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3100 R2AT
1FE7	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
1FE8	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
1FL5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1FL6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1FR5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1FR6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT

HOSES / SLANGAR

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1F24	0574 1273 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1600 R2AT
1F7	0574 0063 07	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3700 R2AT
1F8	0574 0000 21	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3500 R2AT
1GD	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
1LUB	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
1L4	0574 2325 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3300 R2AT
1PD10	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT
1PD4	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
1P1	0574 1272 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1500 R2AT
1P9	0574 2321 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 2300 R2AT
1RX1	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
1R13	0574 3287 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 4000 R2AT
1R7	0574 3334 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3700 R2AT
1R8	0574 3334 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3700 R2AT
1S4	0574 4536 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3800 R9R
1S7	0574 0064 84	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3900 R9R
1TS5	0574 4316 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3100 R2AT
1T2	0574 2269 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1200 R2AT
1T20	0574 2267 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1000 R2AT
1T30	0574 2288 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X4200 R2AT
1T31	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
1T50	0574 1274 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1700 R2AT
1T7	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
1T92	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
1W3	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
1W4	0574 3320 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2300 R2AT
1W4	0574 3331 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3900 R2AT
1W5	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
1XF73	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
1XF74	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
1XF75	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
1XF76	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT
1XF77	0574 0064 49	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 850 R2AT

HOSES / SLANGAR

(Sheet 10 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
1XS1	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
1XS3	3176 6860 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 4600 R2AT
1XS4	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
110	3128 3211 13	1	HOSE ASSEMBLY	SLANGLEDNING		19X750 MULTIMAX
2	9030 0500 00	.45	AIR HOSE	LUFTSLANG		20 X 5
2AF2	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
2AR11	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
2AR13	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
2AR14	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2AR15	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
2AR16	3176 5679 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 500 R2AT
2AR7	0574 0064 63	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 4100 R2AT
2AR8	0574 0000 23	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2100 R2AT
2BAN1	0574 0064 50	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1900 R2AT
2BE3	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
2BE4	3176 5221 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1800 R2AT
2BFL3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
2BFR3	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
2BRL4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
2BRR4	0574 1275 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1800 R2AT
2BR1	0574 0065 91	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3100 R2AT
2BR2	3176 7457 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 350 R2AT
2D11	0574 4263 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 800 R2AT
2D2	3176 7449 00	1	HOSE ASSEMBLY	SLANGLEDNING		D6,3X1100 R2AT
2D20	3176 5864 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1300 R2AT
2D4	0574 2326 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3100 R2AT
2FE7	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
2FE8	0574 1277 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2000 R2AT
2FL5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
2FL6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
2FR5	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT
2FR6	0574 0314 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2100 R2AT

HOSES / SLANGAR

(Sheet 11 of 12)

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2F18	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2F20	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2F24	3176 5676 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 900 R2AT
2F7	0574 0000 21	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3500 R2AT
2F8	0574 0063 07	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3700 R2AT
2GD	0574 0064 50	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1900 R2AT
2LUB	3176 3730 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 2800 R2AT
2L4	0574 2325 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3300 R2AT
2PD10	0574 1315 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2300 R2AT
2PD4	0574 0065 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 3500 R2AT
2P1	0574 1272 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1500 R2AT
2RX1	3176 6487 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1600 R2AT
2R13	0574 3285 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3600 R2AT
2R7	0574 3286 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3800 R2AT
2R8	0574 3286 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3800 R2AT
2S4	0574 4536 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3800 R9R
2S7	0574 4535 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3600 R9R
2TS5	0574 4316 11	1	HOSE ASSEMBLY	SLANGLEDNING		25 X 3100 R2AT
2T2	0574 2270 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X1300 R2AT
2T20	0574 2267 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 1000 R2AT
2T30	0574 2284 11	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 3400 R2AT
2T31	3176 5670 00	1	HOSE ASSEMBLY	SLANGLEDNING		12,5X 600 R2AT
2T50	0574 1273 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 1600 R2AT
2T7	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
2T92	3176 5675 00	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 800 R2AT
2W3	0574 0000 10	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1600 R2AT
2W4	0574 3320 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 2300 R2AT
2W4	0574 3331 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 3900 R2AT
2W5	0574 3272 11	1	HOSE ASSEMBLY	SLANGLEDNING		19 X 1500 R2AT
2XF73	0574 0063 69	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1200 R2AT
2XF74	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
2XF75	3176 5680 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3 X 800 R2AT
2XF76	0574 0272 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 1500 R2AT

Ref no	Part no Detaljnr	Qty Antal	Description	Benämning	See page Se sida	Remarks Anmärkning
2XF77	0574 0256 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 450 R2AT
2XP1	3176 6854 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 600 R2AT
2XS1	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
2XS3	0574 0335 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 3900 R2AT
2XS4	3176 5687 00	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 900 R2AT
26	9030 0300 00	1	AIR HOSE	LUFTSLANG		12,5 X 5
27	9030 0400 00	1	AIR HOSE	LUFTSLANG		A1 16 26
3	9030 0600 00	.40	AIR HOSE	LUFTSLANG		25 X 5
3BR2	0574 0064 71	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2900 R2AT
3BR3	0574 0253 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 300 R2AT
3BR4	0574 1321 11	1	HOSE ASSEMBLY	SLANGLEDNING		10 X 2500 R2AT
3BR5	0574 0255 11	1	HOSE ASSEMBLY	SLANGLEDNING		6,3X 400 R2AT

CROSS REFERENCE LIST

Part no Detaljnr	Description	Ref no	See page Se sida
0017 2060 40	CABLE, 1-CORE	W189	259
0017 2060 40	CABLE, 1-CORE	W10	259
0017 2060 40	CABLE, 1-CORE	19	263
0017 2060 40	CABLE, 1-CORE	W188	259
0017 2060 40	CABLE, 1-CORE	52	267
0017 2060 40	CABLE, 1-CORE	16	797
0017 2060 50	CABLE, 1-CORE	51	267
0017 2060 50	CABLE, 1-CORE	W10	259
0017 2060 50	CABLE, 1-CORE	W188	259
0017 2060 50	CABLE, 1-CORE	W189	259
0017 2060 70	CABLE, 1-CORE	W10	259
0017 2060 70	CABLE, 1-CORE	W188	259
0017 2060 70	CABLE, 1-CORE	50	267
0017 2060 70	CABLE, 1-CORE	18	263
0017 2060 70	CABLE, 1-CORE	W187	259
0017 2071 20	CABLE, 1-CORE	W 60	687
0017 2100 30	CABLE, 1-CORE	15	753
0018 4635 75	PLYWOOD BOX	1000	574
0018 4635 75	PLYWOOD BOX	1000	583
0070 4024 06	PROTECTION HOSE	56	684
0070 4024 10	PROTECTION HOSE	57	684
0075 4005 69	WATER HOSE	845	801
0090 7005 01	RUBBERMOULDING	6	661
0090 7005 01	RUBBERMOULDING	6	663
0101 1364 00	PIN	7	469
0101 2316 00	PIN	33	133
0102 0320 00	PIN	27	55
0102 0415 00	PIN	8	469
0102 0458 00	PIN	45	608
0102 0473 00	PIN	162	542
0102 0473 00	PIN	162	581
0108 1193 00	SPRING PIN	29	55
0108 1200 00	SPRING PIN	3	819
0108 1200 00	SPRING PIN	3	777
0108 1400 00	SPRING PIN	9	339
0108 3322 00	SPRING PIN	30	603
0108 3359 00	SPRING PIN	7	603
0108 3392 00	SPRING PIN	4	393
0111 1281 00	SPLIT PIN	22	595
0111 1307 00	SPLIT PIN	1	823
0111 1307 00	SPLIT PIN	1	781
0111 1377 00	SPLIT PIN	8	607
0113 2231 00	BOLT	32	595
0113 2413 00	BOLT	7	607
0129 3104 00	BLIND RIVET	45	339
0129 3104 00	BLIND RIVET	23	471
0129 3104 00	BLIND RIVET	45	267
0129 3104 00	BLIND RIVET	41	604
0129 3104 00	BLIND RIVET	1	381
0129 3207 00	BLIND RIVET	5	753
0129 3207 00	BLIND RIVET	23	263
0144 3326 03	SCREW, HEX HEAD	8	95
0144 3363 03	SCREW, HEX HEAD	4	211
0144 3363 03	SCREW, HEX HEAD	3	117
0144 4000 32	SCREW, HEX HEAD	8	301
0144 4000 32	SCREW, HEX HEAD	32	339
0144 4291 00	SCREW, HEX HEAD	1	321
0144 4291 00	SCREW, HEX HEAD	3	325

Part no Detaljnr	Description	Ref no	See page Se sida
0144 4291 00	SCREW, HEX HEAD	6	343
0147 1244 03	SCREW, HEX HEAD	7	327
0147 1244 03	SCREW, HEX HEAD	14	266
0147 1244 03	SCREW, HEX HEAD	15	385
0147 1246 03	SCREW, HEX HEAD	22	695
0147 1246 03	SCREW, HEX HEAD	7	375
0147 1246 03	SCREW, HEX HEAD	15	393
0147 1246 03	SCREW, HEX HEAD	3	697
0147 1246 03	SCREW, HEX HEAD	10	315
0147 1246 03	SCREW, HEX HEAD	4	317
0147 1246 03	SCREW, HEX HEAD	12	266
0147 1247 03	SCREW, HEX HEAD	11	255
0147 1248 03	SCREW, HEX HEAD	3	313
0147 1249 03	SCREW, HEX HEAD	76	411
0147 1249 03	SCREW, HEX HEAD	16	775
0147 1249 03	SCREW, HEX HEAD	16	817
0147 1249 03	SCREW, HEX HEAD	10	815
0147 1249 03	SCREW, HEX HEAD	2	255
0147 1249 03	SCREW, HEX HEAD	17	595
0147 1252 03	SCREW, HEX HEAD	5	737
0147 1252 03	SCREW, HEX HEAD	10	375
0147 1253 03	SCREW, HEX HEAD	2	49
0147 1259 03	SCREW, HEX HEAD	65	53
0147 1320 03	SCREW, HEX HEAD	5	453
0147 1320 03	SCREW, HEX HEAD	6	439
0147 1320 03	SCREW, HEX HEAD	4	441
0147 1321 03	SCREW, HEX HEAD	5	41
0147 1322 03	SCREW, HEX HEAD	12	747
0147 1322 03	SCREW, HEX HEAD	12	387
0147 1322 03	SCREW, HEX HEAD	21	797
0147 1322 03	SCREW, HEX HEAD	3	707
0147 1322 03	SCREW, HEX HEAD	12	417
0147 1322 03	SCREW, HEX HEAD	3	295
0147 1322 03	SCREW, HEX HEAD	5	263
0147 1322 03	SCREW, HEX HEAD	19	753
0147 1323 03	SCREW, HEX HEAD	2	377
0147 1323 03	SCREW, HEX HEAD	4	681
0147 1323 03	SCREW, HEX HEAD	8	315
0147 1323 03	SCREW, HEX HEAD	3	737
0147 1323 03	SCREW, HEX HEAD	12	285
0147 1325 03	SCREW, HEX HEAD	2	699
0147 1325 03	SCREW, HEX HEAD	2	293
0147 1325 03	SCREW, HEX HEAD	21	231
0147 1325 03	SCREW, HEX HEAD	17	266
0147 1325 03	SCREW, HEX HEAD	3	815
0147 1325 03	SCREW, HEX HEAD	2	291
0147 1325 03	SCREW, HEX HEAD	3	297
0147 1326 03	SCREW, HEX HEAD	52	246
0147 1326 03	SCREW, HEX HEAD	73	411
0147 1326 03	SCREW, HEX HEAD	4	603
0147 1326 03	SCREW, HEX HEAD	4	531
0147 1326 03	SCREW, HEX HEAD	3	375
0147 1327 03	SCREW, HEX HEAD	3	311
0147 1327 03	SCREW, HEX HEAD	9	307
0147 1328 03	SCREW, HEX HEAD	23	553
0147 1330 03	SCREW, HEX HEAD	35	604
0147 1332 03	SCREW, HEX HEAD	29	229
0147 1356 03	SCREW, HEX HEAD	6	49
0147 1359 03	SCREW, HEX HEAD	10	695
0147 1359 03	SCREW, HEX HEAD	4	651

Part no Detaljnr	Description	Ref no	See page Se sida
0147 1359 03	SCREW, HEX HEAD	40	683
0147 1359 03	SCREW, HEX HEAD	27	595
0147 1359 03	SCREW, HEX HEAD	28	603
0147 1359 03	SCREW, HEX HEAD	4	649
0147 1360 03	SCREW, HEX HEAD	5	821
0147 1360 03	SCREW, HEX HEAD	9	747
0147 1360 03	SCREW, HEX HEAD	20	387
0147 1360 03	SCREW, HEX HEAD	5	779
0147 1360 03	SCREW, HEX HEAD	19	333
0147 1360 03	SCREW, HEX HEAD	1	233
0147 1360 03	SCREW, HEX HEAD	20	695
0147 1360 03	SCREW, HEX HEAD	39	608
0147 1360 03	SCREW, HEX HEAD	23	286
0147 1360 03	SCREW, HEX HEAD	6	765
0147 1360 03	SCREW, HEX HEAD	10	767
0147 1360 03	SCREW, HEX HEAD	8	417
0147 1360 03	SCREW, HEX HEAD	10	807
0147 1360 03	SCREW, HEX HEAD	3	257
0147 1360 03	SCREW, HEX HEAD	3	649
0147 1360 03	SCREW, HEX HEAD	16	339
0147 1360 03	SCREW, HEX HEAD	3	651
0147 1361 03	SCREW, HEX HEAD	6	379
0147 1362 03	SCREW, HEX HEAD	3	445
0147 1362 03	SCREW, HEX HEAD	8	807
0147 1362 03	SCREW, HEX HEAD	6	229
0147 1362 03	SCREW, HEX HEAD	1	355
0147 1362 03	SCREW, HEX HEAD	8	375
0147 1362 03	SCREW, HEX HEAD	19	607
0147 1362 03	SCREW, HEX HEAD	8	767
0147 1362 03	SCREW, HEX HEAD	4	607

Part no Detaljnr	Description	Ref no	See page Se sida
0147 1362 03	SCREW, HEX HEAD	61	411
0147 1362 03	SCREW, HEX HEAD	4	333
0147 1363 03	SCREW, HEX HEAD	5	49
0147 1363 03	SCREW, HEX HEAD	20	333
0147 1363 03	SCREW, HEX HEAD	6	385
0147 1363 03	SCREW, HEX HEAD	4	779
0147 1363 03	SCREW, HEX HEAD	4	821
0147 1363 03	SCREW, HEX HEAD	1	249
0147 1363 03	SCREW, HEX HEAD	12	301
0147 1364 03	SCREW, HEX HEAD	22	339
0147 1364 03	SCREW, HEX HEAD	7	387
0147 1364 03	SCREW, HEX HEAD	5	375
0147 1365 03	SCREW, HEX HEAD	2	415
0147 1365 03	SCREW, HEX HEAD	58	340
0147 1366 03	SCREW, HEX HEAD	14	815
0147 1366 03	SCREW, HEX HEAD	8	365
0147 1366 03	SCREW, HEX HEAD	24	507
0147 1367 03	SCREW, HEX HEAD	13	245
0147 1367 03	SCREW, HEX HEAD	12	339
0147 1370 03	SCREW, HEX HEAD	23	339
0147 1370 03	SCREW, HEX HEAD	3	387
0147 1397 03	SCREW, HEX HEAD	5	329
0147 1398 03	SCREW, HEX HEAD	6	417
0147 1398 03	SCREW, HEX HEAD	7	747
0147 1398 03	SCREW, HEX HEAD	7	775
0147 1398 03	SCREW, HEX HEAD	7	817
0147 1400 03	SCREW, HEX HEAD	13	649
0147 1400 03	SCREW, HEX HEAD	10	595
0147 1400 03	SCREW, HEX HEAD	18	603
0147 1400 03	SCREW, HEX HEAD	3	691

Part no Detaljnr	Description	Ref no	See page Se sida
0147 1400 03	SCREW, HEX HEAD	11	607
0147 1400 03	SCREW, HEX HEAD	6	317
0147 1400 03	SCREW, HEX HEAD	4	301
0147 1400 03	SCREW, HEX HEAD	37	245
0147 1401 03	SCREW, HEX HEAD	9	607
0147 1401 03	SCREW, HEX HEAD	60	246
0147 1401 03	SCREW, HEX HEAD	22	603
0147 1402 03	SCREW, HEX HEAD	14	285
0147 1402 03	SCREW, HEX HEAD	16	623
0147 1402 03	SCREW, HEX HEAD	26	607
0147 1402 03	SCREW, HEX HEAD	59	246
0147 1402 03	SCREW, HEX HEAD	5	603
0147 1402 03	SCREW, HEX HEAD	5	507
0147 1402 03	SCREW, HEX HEAD	3	365
0147 1402 03	SCREW, HEX HEAD	12	607
0147 1403 03	SCREW, HEX HEAD	4	819
0147 1403 03	SCREW, HEX HEAD	33	603
0147 1403 03	SCREW, HEX HEAD	20	229
0147 1403 03	SCREW, HEX HEAD	10	385
0147 1403 03	SCREW, HEX HEAD	4	777
0147 1403 09	SCREW, HEX HEAD	5	301
0147 1404 03	SCREW, HEX HEAD	39	245
0147 1404 03	SCREW, HEX HEAD	19	286
0147 1405 03	SCREW, HEX HEAD	16	333
0147 1405 03	SCREW, HEX HEAD	42	608
0147 1406 03	SCREW, HEX HEAD	3	783
0147 1406 03	SCREW, HEX HEAD	3	825
0147 1407 03	SCREW, HEX HEAD	9	245
0147 1407 03	SCREW, HEX HEAD	18	333
0147 1408 03	SCREW, HEX HEAD	27	339
0147 1408 03	SCREW, HEX HEAD	25	603
0147 1409 03	SCREW, HEX HEAD	18	339
0147 1413 03	SCREW, HEX HEAD	38	608
0147 1415 03	SCREW, HEX HEAD	5	509
0147 1415 03	SCREW, HEX HEAD	3	463
0147 1415 03	SCREW, HEX HEAD	2	301
0147 1415 12	SCREW, HEX HEAD	7	509
0147 1417 03	SCREW, HEX HEAD	6	509
0147 1419 03	SCREW, HEX HEAD	3	501
0147 1438 03	SCREW, HEX HEAD	34	583
0147 1438 03	SCREW, HEX HEAD	34	573
0147 1438 03	SCREW, HEX HEAD	34	539
0147 1475 03	SCREW, HEX HEAD	6	339
0147 1475 03	SCREW, HEX HEAD	2	245
0147 1475 03	SCREW, HEX HEAD	31	437
0147 1478 03	SCREW, HEX HEAD	33	471
0147 1478 03	SCREW, HEX HEAD	3	95
0147 1479 03	SCREW, HEX HEAD	32	437
0147 1479 03	SCREW, HEX HEAD	188	547
0147 1479 03	SCREW, HEX HEAD	6	507
0147 1479 03	SCREW, HEX HEAD	2	159
0147 1479 03	SCREW, HEX HEAD	188	573
0147 1479 03	SCREW, HEX HEAD	3	603
0147 1479 03	SCREW, HEX HEAD	188	542
0147 1479 03	SCREW, HEX HEAD	8	525
0147 1479 03	SCREW, HEX HEAD	4	389
0147 1480 03	SCREW, HEX HEAD	30	437
0147 1481 03	SCREW, HEX HEAD	94	583
0147 1481 03	SCREW, HEX HEAD	10	817
0147 1481 03	SCREW, HEX HEAD	94	573

Part no Detaljnr	Description	Ref no	See page Se sida
0147 1481 03	SCREW, HEX HEAD	94	540
0147 1481 03	SCREW, HEX HEAD	10	775
0147 1482 03	SCREW, HEX HEAD	56	246
0147 1482 03	SCREW, HEX HEAD	1	625
0147 1483 03	SCREW, HEX HEAD	4	525
0147 1483 03	SCREW, HEX HEAD	15	595
0147 1483 03	SCREW, HEX HEAD	1	553
0147 1484 03	SCREW, HEX HEAD	4	95
0147 1485 03	SCREW, HEX HEAD	2	607
0147 1485 03	SCREW, HEX HEAD	24	595
0147 1487 03	SCREW, HEX HEAD	6	389
0147 1487 03	SCREW, HEX HEAD	14	607
0147 1487 03	SCREW, HEX HEAD	21	607
0147 1489 03	SCREW, HEX HEAD	46	608
0147 1491 03	SCREW, HEX HEAD	18	229
0147 1491 03	SCREW, HEX HEAD	55	340
0147 1491 03	SCREW, HEX HEAD	12	817
0147 1494 03	SCREW, HEX HEAD	35	595
0147 1496 03	SCREW, HEX HEAD	3	479
0147 1496 03	SCREW, HEX HEAD	3	481
0147 1499 03	SCREW, HEX HEAD	40	451
0147 1499 03	SCREW, HEX HEAD	3	449
0147 1500 03	SCREW, HEX HEAD	1	595
0147 1501 03	SCREW, HEX HEAD	3	447
0147 1553 03	SCREW, HEX HEAD	2	353
0147 1553 03	SCREW, HEX HEAD	42	245
0147 1553 03	SCREW, HEX HEAD	10	229
0147 1555 03	SCREW, HEX HEAD	9	229
0147 1557 03	SCREW, HEX HEAD	10	393
0147 1559 03	SCREW, HEX HEAD	40	245

Part no Detaljnr	Description	Ref no	See page Se sida
0147 1958 29	SCREW, HEX HEAD	29	595
0147 1958 65	SCREW, HEX HEAD	41	245
0147 1958 99	SCREW, HEX HEAD	12	775
0147 1960 28	SCREW, HEX HEAD	3	477
0160 1244 00	SCREW, SLOTTED	3	263
0160 1244 00	SCREW, SLOTTED	9	753
0160 6036 00	SCREW, SLOTTED	9	707
0160 6036 00	SCREW, SLOTTED	9	283
0160 6036 00	SCREW, SLOTTED	9	295
0160 6036 00	SCREW, SLOTTED	9	281
0160 6039 00	SCREW, SLOTTED	9	649
0160 6039 00	SCREW, SLOTTED	3	795
0160 6041 00	SCREW, SLOTTED	2	381
0160 6042 00	SCREW, SLOTTED	35	267
0160 6054 00	SCREW, SLOTTED	20	55
0160 6061 00	SCREW, SLOTTED	1	259
0162 4174 00	SCREW, SLOTTED	3	266
0162 4204 00	SCREW, SLOTTED	6	353
0162 4205 00	SCREW, SLOTTED	14	659
0192 1170 00	SET SCREW	2	47
0194 1320 00	SET SCREW	8	391
0194 1326 00	SET SCREW	2	45
0196 1203 00	SET SCREW	9	395
0196 1552 10	SET SCREW	11	223
0196 1552 10	SET SCREW	13	485
0196 1552 24	SET SCREW	3	615
0196 1552 24	SET SCREW	2	349
0211 1102 72	HEX SOCK. SCREW	47	53
0211 1173 00	SCREW	129	59
0211 1174 00	SCREW	19	55

Part no Detaljnr	Description	Ref no	See page Se sida
0211 1177 03	SCREW	3	145
0211 1179 00	SCREW	128	59
0211 1205 03	SCREW	13	659
0211 1207 00	SCREW	9	231
0211 1208 03	SCREW	2	85
0211 1214 00	SCREW	18	55
0211 1215 00	SCREW	3	335
0211 1215 03	SCREW	96	103
0211 1215 03	SCREW	63	53
0211 1251 03	SCREW	10	37
0211 1252 03	SCREW	9	37
0211 1325 03	SCREW	2	355
0211 1327 03	SCREW	12	469
0211 1477 03	SCREW	28	133
0211 1960 78	SCREW	11	465
0211 1960 82	SCREW	85	213
0211 1960 83	SCREW	39	513
0211 1960 83	SCREW	39	491
0211 1960 84	SCREW	4	129
0211 1960 84	SCREW	80	573
0211 1960 84	SCREW	80	540
0211 1960 84	SCREW	80	583
0211 1960 85	SCREW	5	691
0211 1960 86	SCREW	27	133
0211 1962 11	SCREW	6	85
0211 1962 78	SCREW	8	465
0211 1962 80	SCREW	14	245
0211 1962 81	SCREW	10	469
0211 1962 85	SCREW	32	607
0211 1962 88	SCREW	19	771
0211 1962 88	SCREW	19	811
0211 1962 89	SCREW	38	513
0211 1962 89	SCREW	10	509
0211 1962 89	SCREW	38	491
0211 1962 91	SCREW	26	453
0211 1962 91	SCREW	35	491
0211 1962 91	SCREW	35	513
0211 1962 92	SCREW	27	229
0211 1962 94	SCREW	3	121
0211 1962 94	SCREW	1	465
0211 1963 09	SCREW	37	513
0211 1963 09	SCREW	37	491
0211 1963 14	SCREW	30	453
0211 1963 28	SCREW	30	491
0211 1963 28	SCREW	30	513
0211 1963 28	SCREW	30	471
0211 1963 41	SCREW	4	387
0211 1963 47	SCREW	11	469
0211 1963 48	SCREW	36	513
0211 1963 48	SCREW	36	491
0211 1963 51	SCREW	47	340
0211 1963 83	SCREW	8	625
0211 1963 91	SCREW	38	812
0211 1963 91	SCREW	38	772
0211 1964 02	HEX SOCK. SCREW	6	387
0211 1964 35	HEX SOCK. SCREW	6	361
0211 5328 00	SCREW	4	126
0211 5365 00	SCREW	3	119
0211 5365 00	SCREW	3	115
0211 5379 00	HEX SOCK. SCREW	40	126

Part no Detaljnr	Description	Ref no	See page Se sida
0216 1249 00	SCREW	5	751
0223 1322 02	WING SCREW	17	387
0226 0306 00	TAPPING SCREW	2	99
0226 0307 00	TAPPING SCREW	64	411
0226 0310 00	TAPPING SCREW	3	681
0226 0326 00	TAPPING SCREW	13	260
0226 0350 05	TAPPING SCREW	15	659
0226 0351 01	TAPPING SCREW	57	246
0226 0351 01	TAPPING SCREW	7	285
0226 0351 01	TAPPING SCREW	43	683
0226 0351 01	TAPPING SCREW	4	257
0226 0351 07	TAPPING SCREW	2	289
0226 0351 07	TAPPING SCREW	7	703
0226 0351 07	TAPPING SCREW	8	693
0226 0351 07	TAPPING SCREW	28	266
0226 0351 07	TAPPING SCREW	44	683
0226 0351 07	TAPPING SCREW	7	753
0226 0351 07	TAPPING SCREW	21	263
0226 0351 07	TAPPING SCREW	7	295
0226 0351 07	TAPPING SCREW	7	707
0226 9915 12	SCREW	34	507
0246 1956 52	STUD	12	509
0259 0011 00	THREAD INSERT	6	539
0259 0068 00	THREAD INSERT	58	540
0259 0084 00	THREAD INSERT	173	542
0259 0150 10	THREAD INSERT	4	631
0259 0311 00	THREAD INSERT	5	539
0259 2009 00	THREAD INSERT	3	629
0259 2009 00	THREAD INSERT	3	631
0259 2061 00	THREAD INSERT	7	539

Part no Detaljnr	Description	Ref no	See page Se sida
0259 2061 00	THREAD INSERT	4	629
0259 2061 00	THREAD INSERT	57	540
0259 2062 00	THREAD INSERT	1	631
0259 2062 00	THREAD INSERT	1	629
0261 2110 00	NUT	32	55
0266 1115 04	NUT	3	379
0266 2107 00	NUT	12	659
0266 2108 00	NUT	35	507
0266 2110 00	NUT	11	659
0266 2110 00	NUT	2	39
0266 2111 00	NUT	2	249
0266 2111 00	NUT	2	253
0266 2111 00	NUT	18	266
0266 2111 00	NUT	16	385
0266 2112 00	NUT	13	607
0266 2114 00	NUT	20	603
0266 2114 00	NUT	13	817
0291 1128 13	LOCK NUT	33	267
0291 1128 13	LOCK NUT	3	381
0291 1128 13	LOCK NUT	5	266
0291 1128 14	LOCK NUT	2	259
0291 1128 14	LOCK NUT	4	335
0291 1128 15	LOCK NUT	5	315
0291 1128 15	LOCK NUT	5	697
0291 1128 15	LOCK NUT	7	317
0291 1128 15	LOCK NUT	24	695
0291 1128 15	LOCK NUT	5	313
0291 1128 15	LOCK NUT	18	595
0291 1128 15	LOCK NUT	3	255
0291 1128 15	LOCK NUT	77	411

Part no Detaljnr	Description	Ref no	See page Se sida
0291 1128 15	LOCK NUT	17	775
0291 1128 15	LOCK NUT	8	285
0291 1128 15	LOCK NUT	17	817
0291 1128 15	LOCK NUT	3	49
0291 1128 16	LOCK NUT	15	266
0291 1128 18	LOCK NUT	19	266
0291 1128 18	LOCK NUT	31	603
0291 1128 18	LOCK NUT	75	411
0291 1128 18	LOCK NUT	5	295
0291 1128 18	LOCK NUT	4	293
0291 1128 18	LOCK NUT	19	387
0291 1128 18	LOCK NUT	6	311
0291 1128 18	LOCK NUT	4	291
0291 1128 18	LOCK NUT	22	245
0291 1128 18	LOCK NUT	4	699
0291 1128 18	LOCK NUT	7	751
0291 1128 18	LOCK NUT	22	231
0291 1128 18	LOCK NUT	4	375
0291 1128 18	LOCK NUT	21	753
0291 1128 18	LOCK NUT	23	797
0291 1128 18	LOCK NUT	10	307
0291 1128 18	LOCK NUT	31	229
0291 1128 18	LOCK NUT	3	355
0291 1128 18	LOCK NUT	5	681
0291 1128 18	LOCK NUT	5	707
0291 1128 18	LOCK NUT	13	285
0291 1128 19	LOCK NUT	11	379
0291 1128 19	LOCK NUT	24	553
0291 1128 20	LOCK NUT	15	815
0291 1128 20	LOCK NUT	7	365
0291 1128 20	LOCK NUT	41	608
0291 1128 20	LOCK NUT	10	747
0291 1128 20	LOCK NUT	63	411
0291 1128 20	LOCK NUT	20	339
0291 1128 20	LOCK NUT	21	245
0291 1128 20	LOCK NUT	5	333
0291 1128 20	LOCK NUT	7	49
0291 1128 20	LOCK NUT	9	417
0291 1128 20	LOCK NUT	8	387
0291 1128 20	LOCK NUT	3	415
0291 1128 20	LOCK NUT	25	507
0291 1128 20	LOCK NUT	8	765
0291 1128 21	LOCK NUT	22	333
0291 1128 21	LOCK NUT	4	255
0291 1128 22	LOCK NUT	5	777
0291 1128 22	LOCK NUT	5	365
0291 1128 22	LOCK NUT	4	501
0291 1128 22	LOCK NUT	17	333
0291 1128 22	LOCK NUT	17	339
0291 1128 22	LOCK NUT	7	301
0291 1128 22	LOCK NUT	34	604
0291 1128 22	LOCK NUT	4	783
0291 1128 22	LOCK NUT	17	623
0291 1128 22	LOCK NUT	4	463
0291 1128 22	LOCK NUT	8	509
0291 1128 22	LOCK NUT	5	819
0291 1128 22	LOCK NUT	4	825
0291 1128 22	LOCK NUT	24	245
0291 1128 25	LOCK NUT	11	775
0291 1128 25	LOCK NUT	13	775

Part no Detaljnr	Description	Ref no	See page Se sida
0291 1128 25	LOCK NUT	9	525
0291 1128 25	LOCK NUT	3	159
0291 1128 25	LOCK NUT	7	507
0291 1128 25	LOCK NUT	40	437
0291 1128 25	LOCK NUT	5	481
0291 1128 25	LOCK NUT	42	471
0291 1128 25	LOCK NUT	4	479
0291 1128 25	LOCK NUT	55	246
0291 1128 25	LOCK NUT	60	451
0291 1128 25	LOCK NUT	4	449
0291 1128 25	LOCK NUT	11	817
0291 1128 25	LOCK NUT	4	477
0291 1128 25	LOCK NUT	4	447
0291 1128 25	LOCK NUT	5	95
0291 1128 26	LOCK NUT	40	471
0291 1128 28	LOCK NUT	41	437
0291 1128 28	LOCK NUT	23	245
0291 1128 28	LOCK NUT	5	339
0291 1128 28	LOCK NUT	41	471
0291 1128 28	LOCK NUT	9	393
0291 1128 28	LOCK NUT	23	229
0291 1128 30	LOCK NUT	44	513
0291 1128 30	LOCK NUT	5	387
0291 1128 30	LOCK NUT	44	491
0295 3113 00	LOCK NUT	4	339
0296 1110 00	WING NUT	5	377
0299 1000 06	WHEEL NUT	2	235
0299 1000 06	WHEEL NUT	2	345
0299 1000 10	WHEEL NUT	2	373
0300 8005 00	PLAIN WASHER	3	291
0300 8005 00	PLAIN WASHER	3	293
0300 8005 00	PLAIN WASHER	3	699
0300 8011 00	PLAIN WASHER	4	507
0300 8011 00	PLAIN WASHER	11	385
0301 2315 00	PLAIN WASHER	8	381
0301 2315 00	PLAIN WASHER	4	266
0301 2318 00	PLAIN WASHER	9	335
0301 2318 00	PLAIN WASHER	16	659
0301 2318 00	PLAIN WASHER	10	231
0301 2321 00	PLAIN WASHER	8	327
0301 2321 00	PLAIN WASHER	4	313
0301 2321 00	PLAIN WASHER	11	815
0301 2321 00	PLAIN WASHER	19	595
0301 2321 00	PLAIN WASHER	18	775
0301 2321 00	PLAIN WASHER	9	315
0301 2321 00	PLAIN WASHER	9	375
0301 2321 00	PLAIN WASHER	5	255
0301 2321 00	PLAIN WASHER	3	317
0301 2321 00	PLAIN WASHER	4	697
0301 2321 00	PLAIN WASHER	18	817
0301 2321 00	PLAIN WASHER	4	49
0301 2321 00	PLAIN WASHER	23	695
0301 2321 00	PLAIN WASHER	36	507
0301 2321 00	PLAIN WASHER	65	411
0301 2321 00	PLAIN WASHER	6	737
0301 2335 00	PLAIN WASHER	74	411
0301 2335 00	PLAIN WASHER	15	249
0301 2335 00	PLAIN WASHER	27	603
0301 2335 00	PLAIN WASHER	6	681
0301 2335 00	PLAIN WASHER	8	307

Part no Detaljnr	Description	Ref no	See page Se sida
0301 2335 00	PLAIN WASHER	4	355
0301 2335 00	PLAIN WASHER	4	295
0301 2335 00	PLAIN WASHER	60	788
0301 2335 00	PLAIN WASHER	7	315
0301 2335 00	PLAIN WASHER	13	815
0301 2335 00	PLAIN WASHER	53	246
0301 2335 00	PLAIN WASHER	22	797
0301 2335 00	PLAIN WASHER	5	531
0301 2335 00	PLAIN WASHER	20	753
0301 2335 00	PLAIN WASHER	6	263
0301 2335 00	PLAIN WASHER	62	246
0301 2335 00	PLAIN WASHER	6	751
0301 2335 00	PLAIN WASHER	13	387
0301 2335 00	PLAIN WASHER	4	707
0301 2335 00	PLAIN WASHER	6	41
0301 2335 00	PLAIN WASHER	13	747
0301 2335 00	PLAIN WASHER	10	659
0301 2335 00	PLAIN WASHER	4	737
0301 2335 00	PLAIN WASHER	13	417
0301 2335 00	PLAIN WASHER	4	311
0301 2344 00	PLAIN WASHER	61	246
0301 2344 00	PLAIN WASHER	6	821
0301 2344 00	PLAIN WASHER	5	229
0301 2344 00	PLAIN WASHER	5	651
0301 2344 00	PLAIN WASHER	62	411
0301 2344 00	PLAIN WASHER	7	385
0301 2344 00	PLAIN WASHER	8	49
0301 2344 00	PLAIN WASHER	11	747
0301 2344 00	PLAIN WASHER	24	286
0301 2344 00	PLAIN WASHER	6	779

Part no Detaljnr	Description	Ref no	See page Se sida
0301 2344 00	PLAIN WASHER	24	339
0301 2344 00	PLAIN WASHER	13	301
0301 2344 00	PLAIN WASHER	3	253
0301 2344 00	PLAIN WASHER	4	415
0301 2344 00	PLAIN WASHER	10	379
0301 2344 00	PLAIN WASHER	11	695
0301 2344 00	PLAIN WASHER	9	807
0301 2344 00	PLAIN WASHER	21	387
0301 2344 00	PLAIN WASHER	8	333
0301 2344 00	PLAIN WASHER	5	649
0301 2344 00	PLAIN WASHER	7	765
0301 2344 00	PLAIN WASHER	6	375
0301 2344 00	PLAIN WASHER	7	355
0301 2344 00	PLAIN WASHER	9	767
0301 2344 00	PLAIN WASHER	16	815
0301 2344 00	PLAIN WASHER	10	417
0301 2358 00	WASHER	5	317
0301 2358 00	WASHER	6	115
0301 2358 00	WASHER	28	245
0301 2358 00	WASHER	4	365
0301 2358 00	WASHER	3	211
0301 2358 00	WASHER	6	777
0301 2358 00	WASHER	6	819
0301 2358 00	WASHER	14	649
0301 2358 00	WASHER	6	117
0301 2358 00	WASHER	21	333
0301 2358 00	WASHER	5	783
0301 2358 00	WASHER	21	595
0301 2358 00	WASHER	14	229
0301 2358 00	WASHER	29	603

Part no Detaljnr	Description	Ref no	See page Se sida
0301 2358 00	WASHER	5	823
0301 2358 00	WASHER	5	825
0301 2358 00	WASHER	8	747
0301 2358 00	WASHER	7	417
0301 2358 00	WASHER	9	509
0301 2358 00	WASHER	4	691
0301 2358 00	WASHER	5	781
0301 2358 00	WASHER	3	301
0301 2358 00	WASHER	57	340
0301 2358 00	WASHER	20	286
0301 2358 00	WASHER	15	285
0301 2358 00	WASHER	34	607
0301 2378 00	PLAIN WASHER	24	607
0301 2378 00	PLAIN WASHER	3	389
0301 2378 00	PLAIN WASHER	5	525
0301 2378 00	PLAIN WASHER	50	437
0301 2378 00	PLAIN WASHER	50	491
0301 2378 00	PLAIN WASHER	3	245
0301 2378 00	PLAIN WASHER	16	595
0301 2378 00	PLAIN WASHER	50	513
0301 2378 00	PLAIN WASHER	10	339
0301 2378 00	PLAIN WASHER	28	229
0301 2378 00	PLAIN WASHER	50	471
0301 2378 00	PLAIN WASHER	4	159
0301 2378 00	PLAIN WASHER	6	95
0301 2394 00	PLAIN WASHER	46	339
0301 2394 00	PLAIN WASHER	7	819
0301 2394 00	PLAIN WASHER	3	353
0301 2394 00	PLAIN WASHER	43	245
0301 2394 00	PLAIN WASHER	8	603

Part no Detaljnr	Description	Ref no	See page Se sida
0301 2394 00	PLAIN WASHER	7	777
0301 2394 00	PLAIN WASHER	8	393
0301 2405 00	PLAIN WASHER	10	387
0303 1274 01	PLAIN WASHER	30	229
0304 1012 00	SPERIC WASHER	6	393
0304 1062 00	SPERIC WASHER	7	393
0333 0500 24	SPERIC WASHER	1	373
0333 3127 00	LOCK WASHER	59	788
0333 3132 00	LOCK WASHER	25	286
0333 3137 00	LOCK WASHER	16	285
0333 5200 09	LOCK WASHER	40	608
0333 6113 00	LOCK WASHER	3	339
0335 1132 00	CIRCLIP	49	340
0335 1158 00	CIRCLIP	17	771
0335 1158 00	CIRCLIP	17	811
0335 2130 00	CIRCLIP	249	573
0335 2130 00	CIRCLIP	249	583
0335 2130 00	CIRCLIP	249	543
0335 2136 00	CIRCLIP	56	340
0335 2141 00	CIRCLIP	14	615
0335 2143 00	CIRCLIP	15	349
0335 2152 00	CIRCLIP	12	603
0335 2155 00	CIRCLIP	5	485
0335 2165 00	CIRCLIP	5	459
0335 2165 00	CIRCLIP	13	223
0335 2169 00	CIRCLIP	108	573
0335 2169 00	CIRCLIP	108	541
0335 2169 00	CIRCLIP	108	545
0335 2173 00	CIRCLIP	155	573
0335 2173 00	CIRCLIP	155	542

Part no Detaljnr	Description	Ref no	See page Se sida
0335 2178 00	CIRCLIP	5	811
0335 2178 00	CIRCLIP	5	771
0335 3108 00	RETAINING RING	33	55
0335 3500 10	LOCK RING	68	540
0335 3500 10	LOCK RING	68	573
0335 3500 10	LOCK RING	68	583
0339 1000 20	CLAMPING UNIT	9	603
0346 1000 07	PIPE CLAMP	16	266
0346 1002 01	PIPE CLAMP	7	693
0346 1002 01	PIPE CLAMP	3	289
0346 1002 01	PIPE CLAMP	30	683
0346 1002 01	PIPE CLAMP	6	703
0346 1002 03	PIPE CLAMP	4	289
0346 1002 03	PIPE CLAMP	14	260
0346 1002 03	PIPE CLAMP	31	683
0346 1002 42	PIPE CLAMP	9	693
0346 1002 42	PIPE CLAMP	8	385
0346 1002 43	PIPE CLAMP	8	297
0346 1002 43	PIPE CLAMP	19	693
0346 1002 43	PIPE CLAMP	32	683
0346 3002 38	CLAMP HALVES	2	691
0347 4344 00	HOSE CLIP	90	213
0347 4676 00	HOSE CLIP	4	361
0347 6100 04	HOSE CLIP	5	115
0347 6100 04	HOSE CLIP	5	119
0347 6100 21	HOSE CLIP	7	307
0347 6100 22	HOSE CLIP	6	307
0347 6103 00	HOSE CLIP	34	683
0347 6113 00	HOSE CLIP	5	121
0347 6113 00	HOSE CLIP	5	117

Part no Detaljnr	Description	Ref no	See page Se sida
0347 6114 00	HOSE CLIP	17	231
0347 6132 18	HOSE CLIP	13	827
0362 1109 00	BALL KNOB	1	87
0371 1100 02	LIFTING EYE	50	565
0392 1110 02	DAMPER	2	649
0392 1110 02	DAMPER	21	695
0392 1110 02	DAMPER	2	651
0500 0324 00	PLAIN BEARING	46	245
0500 1296 00	PLAIN BEARING	51	245
0500 4500 03	FLANGE BEARING	2	495
0500 4500 03	FLANGE BEARING	2	515
0500 4500 11	BUSHING	5	817
0500 4500 11	BUSHING	5	775
0500 4520 03	BUSHING	2	473
0500 4536 20	BUSHING	3	627
0500 4536 20	BUSHING	1	597
0501 0000 16	BEARING,SP.PL.	6	485
0501 0013 00	BEARING,SP.PL.	13	615
0501 0014 00	BEARING,SP.PL.	6	349
0501 0019 00	BEARING,SP.PL.	6	459
0501 0019 01	BEARING,SP.PL.	2	223
0501 1005 05	ROD END	5	385
0502 1226 01	BALL BEARING	13	603
0502 8010 21	BEARING HOUSING	1	343
0503 2109 00	BALL BEARING	2	343
0509 0221 00	ROLLER BEARING	121	573
0509 0221 00	ROLLER BEARING	121	541
0509 0221 00	ROLLER BEARING	121	583
0509 0223 00	ROLLER BEARING	122	541
0509 0223 00	ROLLER BEARING	122	583

Part no Detaljnr	Description	Ref no	See page Se sida
0509 0223 00	ROLLER BEARING	122	573
0516 1504 01	NEEDLE BEARING	124	583
0516 1504 01	NEEDLE BEARING	124	541
0516 1504 01	NEEDLE BEARING	124	573
0516 1538 00	NEEDLE BEARING	126	573
0516 1538 00	NEEDLE BEARING	126	583
0516 1538 00	NEEDLE BEARING	126	541
0544 1100 11	GREASE NIPPLE	4	671
0544 2106 00	GREASE NIPPLE	12	615
0544 2106 00	GREASE NIPPLE	23	485
0544 2106 00	GREASE NIPPLE	23	459
0544 2153 00	GREASE NIPPLE	3	475
0544 2153 00	GREASE NIPPLE	2	441
0544 2153 00	GREASE NIPPLE	3	443
0544 2162 00	GREASE NIPPLE	106	545
0544 2162 00	GREASE NIPPLE	3	473
0544 2162 00	GREASE NIPPLE	106	569
0544 2162 00	GREASE NIPPLE	72	604
0544 2162 00	GREASE NIPPLE	9	469
0544 2162 00	GREASE NIPPLE	4	495
0544 2162 00	GREASE NIPPLE	3	453
0544 2162 00	GREASE NIPPLE	4	515
0544 2162 00	GREASE NIPPLE	14	499
0544 2162 00	GREASE NIPPLE	4	627
0544 2162 00	GREASE NIPPLE	3	483
0544 2162 00	GREASE NIPPLE	6	817
0544 2162 00	GREASE NIPPLE	6	775
0544 2162 00	GREASE NIPPLE	106	541
0544 2562 00	GREASE NIPPLE	2	335
0544 2562 00	GREASE NIPPLE	3	439

Part no Detaljnr	Description	Ref no	See page Se sida
0551 0000 93	THREADED PIPE	3	827
0560 1009 00	ELBOW	5	827
0560 1010 03	ELBOW	1	827
0560 1305 03	ELBOW	4	721
0560 1309 03	ELBOW	12	827
0570 5000 06	NIPPLE	1	832
0570 5010 01	NIPPLE	5	833
0570 5010 06	NIPPLE	10	835
0570 5010 07	NIPPLE	9	834
0570 5010 09	NIPPLE	10	835
0570 5010 10	NIPPLE	10	835
0570 5010 11	NIPPLE	7	833
0570 5010 12	NIPPLE	5	833
0570 5010 13	NIPPLE	7	833
0570 5010 14	NIPPLE	9	834
0570 5010 15	NIPPLE	10	835
0570 5010 16	NIPPLE	10	835
0570 5010 17	NIPPLE	5	833
0570 5010 18	NIPPLE	5	833
0570 5010 19	NIPPLE	10	835
0570 5010 20	NIPPLE	10	835
0570 5010 21	NIPPLE	10	835
0570 5010 22	NIPPLE	10	835
0570 5010 23	NIPPLE	10	835
0570 5010 24	NIPPLE	10	835
0570 5010 30	NIPPLE	19	211
0570 5010 31	NIPPLE	12	211
0570 5010 34	NIPPLE	46	212
0570 5011 05	STRAIGHT COUPL.	13	836
0570 5011 06	STRAIGHT COUPL.	12	836

Part no Detaljnr	Description	Ref no	See page Se sida
0570 5020 07	NIPPLE	15	837
0570 5020 08	NIPPLE	16	837
0570 5040 02	NIPPLE	19	838
0570 5040 03	NIPPLE	19	838
0570 5040 04	NIPPLE	20	838
0570 5040 05	NIPPLE	19	838
0570 5040 06	NIPPLE	19	838
0570 5040 07	NIPPLE	19	838
0570 5040 15	STRAIGHT NIPPLE	19	838
0570 5041 05	NIPPLE	21	838
0570 5041 06	NIPPLE	21	838
0570 5080 05	NIPPLE	22	838
0570 5090 01	NIPPLE	30	840
0570 5090 02	NIPPLE	25	839
0570 5090 03	NIPPLE	32	842
0570 5090 04	NIPPLE	32	842
0570 5090 08	NIPPLE	30	840
0570 5090 12	NIPPLE	31	841
0570 5090 13	NIPPLE	30A	841
0570 5090 14	NIPPLE	30A	841
0570 5090 15	NIPPLE	30B	841
0570 5090 16	NIPPLE	30	840
0570 5090 18	NIPPLE	27	840
0570 5090 19	NIPPLE	25	839
0570 5090 20	NIPPLE	25	839
0570 5090 21	NIPPLE	30	840
0570 5090 22	NIPPLE	30	841
0570 5090 23	NIPPLE	30	841
0570 5090 24	NIPPLE	30	841
0570 5090 25	NIPPLE	30	840
0570 5090 26	NIPPLE	30	841
0570 5090 27	NIPPLE	30	841
0570 5090 28	NIPPLE	30B	841
0570 5090 29	NIPPLE	30B	841
0570 5090 30	NIPPLE	30B	841
0570 5090 31	NIPPLE	30B	841
0570 5090 32	NIPPLE	30B	841
0570 5090 33	NIPPLE	30B	841
0570 5090 34	NIPPLE	30A	841
0570 5090 35	NIPPLE	30A	841
0570 5090 36	NIPPLE	30A	841
0570 5090 37	NIPPLE	30A	841
0570 5090 38	NIPPLE	30A	841
0570 5090 45	NIPPLE	26	839
0570 5110 01	NIPPLE	35	842
0570 5110 03	NIPPLE	34	842
0570 5120 01	NIPPLE	37	843
0570 5120 03	NIPPLE	36	843
0570 5120 04	NIPPLE	36	843
0570 5120 05	NIPPLE	37	843
0570 5120 07	NIPPLE	41	844
0570 5120 08	NIPPLE	41	844
0570 5120 09	NIPPLE	41	844
0570 5120 10	NIPPLE	41	844
0570 5120 11	NIPPLE	41	844
0570 5120 12	NIPPLE	41	844
0570 5120 13	NIPPLE	41	844
0570 5140 05	NIPPLE	43	844
0570 5160 05	NIPPLE	47	845
0570 5190 02	ADAPTER SLEEVE	49B	846

Part no Detaljnr	Description	Ref no	See page Se sida
0570 5190 03	ADAPTER SLEEVE	49B	846
0570 5190 04	ADAPTER SLEEVE	49B	846
0570 5190 05	ADAPTER SLEEVE	49B	846
0570 5190 06	ADAPTER SLEEVE	49B	846
0570 5190 07	ADAPTER SLEEVE	49B	846
0570 5190 08	ADAPTER SLEEVE	49B	846
0570 5190 11	ADAPTER SLEEVE	49A	845
0570 5191 05	TEST CONNECTION	52A	847
0570 5191 05	TEST CONNECTION	23	211
0570 5191 06	TEST CONNECTION	16	211
0570 5191 06	TEST CONNECTION	52A	847
0570 5191 07	TEST CONNECTION	52A	847
0570 5191 07	TEST CONNECTION	29	212
0570 5191 08	TEST CONNECTION	52B	847
0570 5191 09	TEST CONNECTION	52B	847
0574 0000 10	HOSE ASSEMBLY	1T7	154
0574 0000 10	HOSE ASSEMBLY	1AF2	858
0574 0000 10	HOSE ASSEMBLY	1W3	739
0574 0000 10	HOSE ASSEMBLY	2W3	861
0574 0000 10	HOSE ASSEMBLY	2AF2	735
0574 0000 10	HOSE ASSEMBLY	2T7	861
0574 0000 10	HOSE ASSEMBLY	2T7	154
0574 0000 10	HOSE ASSEMBLY	2AF2	860
0574 0000 10	HOSE ASSEMBLY	1W5	859
0574 0000 10	HOSE ASSEMBLY	1W5	727
0574 0000 10	HOSE ASSEMBLY	2W3	739
0574 0000 10	HOSE ASSEMBLY	1T7	859
0574 0000 10	HOSE ASSEMBLY	1W3	859
0574 0000 10	HOSE ASSEMBLY	1AF2	735
0574 0000 16	HOSE ASSEMBLY	S1	641
0574 0000 16	HOSE ASSEMBLY	S1	856
0574 0000 21	HOSE ASSEMBLY	1F8	859
0574 0000 21	HOSE ASSEMBLY	2F7	861
0574 0000 21	HOSE ASSEMBLY	1F8	521
0574 0000 21	HOSE ASSEMBLY	2F7	523
0574 0000 23	HOSE ASSEMBLY	VV2	857
0574 0000 23	HOSE ASSEMBLY	1AR8	521
0574 0000 23	HOSE ASSEMBLY	2AR8	860
0574 0000 23	HOSE ASSEMBLY	1AR8	858
0574 0000 23	HOSE ASSEMBLY	2AR8	523
0574 0000 23	HOSE ASSEMBLY	VV2	153
0574 0000 32	HOSE ASSEMBLY	S3	856
0574 0000 32	HOSE ASSEMBLY	S3	519
0574 0000 39	HOSE ASSEMBLY	ST2	215
0574 0000 39	HOSE ASSEMBLY	ST2	856
0574 0000 97	HOSE ASSEMBLY	T43	857
0574 0000 97	HOSE ASSEMBLY	T43	153
0574 0063 05	HOSE ASSEMBLY	W8	827
0574 0063 05	HOSE ASSEMBLY	W8	858
0574 0063 07	HOSE ASSEMBLY	1F7	521
0574 0063 07	HOSE ASSEMBLY	2F8	523
0574 0063 07	HOSE ASSEMBLY	2F8	861
0574 0063 07	HOSE ASSEMBLY	1F7	859
0574 0063 69	HOSE ASSEMBLY	2XF73	155
0574 0063 69	HOSE ASSEMBLY	2XF73	861
0574 0064 49	HOSE ASSEMBLY	1XF77	859
0574 0064 49	HOSE ASSEMBLY	LUB1	727
0574 0064 49	HOSE ASSEMBLY	LUB1	855
0574 0064 49	HOSE ASSEMBLY	1XF77	155
0574 0064 50	HOSE ASSEMBLY	2BAN1	523

Part no Detaljnr	Description	Ref no	See page Se sida
0574 0064 50	HOSE ASSEMBLY	1BAN1	858
0574 0064 50	HOSE ASSEMBLY	2GD	154
0574 0064 50	HOSE ASSEMBLY	2GD	861
0574 0064 50	HOSE ASSEMBLY	2BAN1	860
0574 0064 50	HOSE ASSEMBLY	1BAN1	521
0574 0064 54	HOSE ASSEMBLY	P31	93
0574 0064 54	HOSE ASSEMBLY	P31	856
0574 0064 54	HOSE ASSEMBLY	T83	43
0574 0064 54	HOSE ASSEMBLY	T83	857
0574 0064 55	HOSE ASSEMBLY	F25	519
0574 0064 55	HOSE ASSEMBLY	F26	519
0574 0064 55	HOSE ASSEMBLY	F25	853
0574 0064 55	HOSE ASSEMBLY	F26	853
0574 0064 63	HOSE ASSEMBLY	BFR2	852
0574 0064 63	HOSE ASSEMBLY	1AR7	858
0574 0064 63	HOSE ASSEMBLY	BFL2	852
0574 0064 63	HOSE ASSEMBLY	BFR2	505
0574 0064 63	HOSE ASSEMBLY	2AR7	523
0574 0064 63	HOSE ASSEMBLY	BFL1	852
0574 0064 63	HOSE ASSEMBLY	BFR1	852
0574 0064 63	HOSE ASSEMBLY	BFR1	505
0574 0064 63	HOSE ASSEMBLY	BFL2	505
0574 0064 63	HOSE ASSEMBLY	BFL1	505
0574 0064 63	HOSE ASSEMBLY	2AR7	860
0574 0064 63	HOSE ASSEMBLY	1AR7	521
0574 0064 65	HOSE ASSEMBLY	L3	519
0574 0064 65	HOSE ASSEMBLY	D3	519
0574 0064 65	HOSE ASSEMBLY	L3	855
0574 0064 65	HOSE ASSEMBLY	D3	852
0574 0064 71	HOSE ASSEMBLY	3BR2	862
0574 0064 71	HOSE ASSEMBLY	3BR2	215
0574 0064 71	HOSE ASSEMBLY	1BR1	215
0574 0064 71	HOSE ASSEMBLY	1BR1	858
0574 0064 81	HOSE ASSEMBLY	W5	727
0574 0064 81	HOSE ASSEMBLY	W5	857
0574 0064 84	HOSE ASSEMBLY	1S7	154
0574 0064 84	HOSE ASSEMBLY	1S7	859
0574 0064 97	HOSE ASSEMBLY	TS3	856
0574 0064 97	HOSE ASSEMBLY	TS3	519
0574 0065 29	HOSE ASSEMBLY	S2	519
0574 0065 29	HOSE ASSEMBLY	S2	856
0574 0065 30	HOSE ASSEMBLY	TS2	856
0574 0065 30	HOSE ASSEMBLY	TS2	519
0574 0065 71	HOSE ASSEMBLY	1PD4	521
0574 0065 71	HOSE ASSEMBLY	F28	197
0574 0065 71	HOSE ASSEMBLY	F27	853
0574 0065 71	HOSE ASSEMBLY	F27	197
0574 0065 71	HOSE ASSEMBLY	2PD4	523
0574 0065 71	HOSE ASSEMBLY	2PD4	861
0574 0065 71	HOSE ASSEMBLY	1PD4	859
0574 0065 71	HOSE ASSEMBLY	F28	853
0574 0065 88	HOSE ASSEMBLY	F24	519
0574 0065 88	HOSE ASSEMBLY	F23	519
0574 0065 88	HOSE ASSEMBLY	F24	853
0574 0065 88	HOSE ASSEMBLY	P3	856
0574 0065 88	HOSE ASSEMBLY	F23	853
0574 0065 88	HOSE ASSEMBLY	P3	153
0574 0065 91	HOSE ASSEMBLY	2BR1	215
0574 0065 91	HOSE ASSEMBLY	2BR1	860
0574 0065 96	HOSE ASSEMBLY	G13	854

Part no Detaljnr	Description	Ref no	See page Se sida
0574 0065 96	HOSE ASSEMBLY	G13	43
0574 0066 21	HOSE ASSEMBLY	VV5	153
0574 0066 21	HOSE ASSEMBLY	KV5	153
0574 0066 21	HOSE ASSEMBLY	VV5	857
0574 0066 21	HOSE ASSEMBLY	KV5	855
0574 0066 21	HOSE ASSEMBLY	KV6	153
0574 0066 21	HOSE ASSEMBLY	KV6	855
0574 0066 21	HOSE ASSEMBLY	VV6	857
0574 0066 21	HOSE ASSEMBLY	VV6	153
0574 0067 91	HOSE ASSEMBLY	T17	857
0574 0067 91	HOSE ASSEMBLY	T17	153
0574 0068 03	HOSE ASSEMBLY	AS3	851
0574 0068 03	HOSE ASSEMBLY	AS3	413
0574 0068 08	HOSE ASSEMBLY	AS1	413
0574 0068 08	HOSE ASSEMBLY	AS1	851
0574 0068 11	HOSE ASSEMBLY	AS50	413
0574 0068 11	HOSE ASSEMBLY	AS50	851
0574 0068 13	HOSE ASSEMBLY	AS52	413
0574 0068 13	HOSE ASSEMBLY	AS52	851
0574 0068 13	HOSE ASSEMBLY	AS51	851
0574 0068 13	HOSE ASSEMBLY	AS51	413
0574 0068 17	HOSE ASSEMBLY	AS62	413
0574 0068 17	HOSE ASSEMBLY	AS60	413
0574 0068 17	HOSE ASSEMBLY	AS60	851
0574 0068 17	HOSE ASSEMBLY	AS62	851
0574 0068 18	HOSE ASSEMBLY	AS61	851
0574 0068 18	HOSE ASSEMBLY	AS61	413
0574 0068 28	HOSE ASSEMBLY	AS42	851
0574 0068 28	HOSE ASSEMBLY	AS42	413
0574 0068 29	HOSE ASSEMBLY	AS41	413
0574 0068 29	HOSE ASSEMBLY	AS41	851
0574 0068 36	HOSE ASSEMBLY	AS4	413
0574 0068 36	HOSE ASSEMBLY	AS4	851
0574 0068 42	HOSE ASSEMBLY	AS2	851
0574 0068 42	HOSE ASSEMBLY	AS2	413
0574 0069 84	HOSE ASSEMBLY	W6	857
0574 0069 84	HOSE ASSEMBLY	W6	727
0574 0252 11	HOSE ASSEMBLY	XF20	61
0574 0252 11	HOSE ASSEMBLY	AJ1	43
0574 0252 11	HOSE ASSEMBLY	XF20	858
0574 0252 11	HOSE ASSEMBLY	AJ1	851
0574 0253 11	HOSE ASSEMBLY	T82	43
0574 0253 11	HOSE ASSEMBLY	3BR3	862
0574 0253 11	HOSE ASSEMBLY	PP1	93
0574 0253 11	HOSE ASSEMBLY	T82	857
0574 0253 11	HOSE ASSEMBLY	P32	856
0574 0253 11	HOSE ASSEMBLY	PP2	93
0574 0253 11	HOSE ASSEMBLY	P32	93
0574 0253 11	HOSE ASSEMBLY	3BR3	215
0574 0253 11	HOSE ASSEMBLY	PP1	855
0574 0253 11	HOSE ASSEMBLY	PP2	855
0574 0255 11	HOSE ASSEMBLY	D33	852
0574 0255 11	HOSE ASSEMBLY	BD3	215
0574 0255 11	HOSE ASSEMBLY	D31	852
0574 0255 11	HOSE ASSEMBLY	DW	735
0574 0255 11	HOSE ASSEMBLY	T84	61
0574 0255 11	HOSE ASSEMBLY	G13	197
0574 0255 11	HOSE ASSEMBLY	T84	857
0574 0255 11	HOSE ASSEMBLY	G13	854
0574 0255 11	HOSE ASSEMBLY	DW	852

Part no Detaljnr	Description	Ref no	See page Se sida
0574 0255 11	HOSE ASSEMBLY	3BR5	862
0574 0255 11	HOSE ASSEMBLY	BD3	852
0574 0255 11	HOSE ASSEMBLY	D31	93
0574 0255 11	HOSE ASSEMBLY	3BR5	215
0574 0255 11	HOSE ASSEMBLY	D33	93
0574 0256 11	HOSE ASSEMBLY	PP9	855
0574 0256 11	HOSE ASSEMBLY	PP9	93
0574 0256 11	HOSE ASSEMBLY	2XF77	862
0574 0256 11	HOSE ASSEMBLY	XF28	43
0574 0256 11	HOSE ASSEMBLY	PP10	855
0574 0256 11	HOSE ASSEMBLY	PP10	93
0574 0256 11	HOSE ASSEMBLY	XF28	858
0574 0256 11	HOSE ASSEMBLY	2XF77	155
0574 0260 11	HOSE ASSEMBLY	BR3	215
0574 0260 11	HOSE ASSEMBLY	BR3	852
0574 0272 11	HOSE ASSEMBLY	2XF76	861
0574 0272 11	HOSE ASSEMBLY	WG1	857
0574 0272 11	HOSE ASSEMBLY	AR2LS 2	623
0574 0272 11	HOSE ASSEMBLY	AR2LS 2	851
0574 0272 11	HOSE ASSEMBLY	WG1	727
0574 0272 11	HOSE ASSEMBLY	T41	197
0574 0272 11	HOSE ASSEMBLY	T41	857
0574 0272 11	HOSE ASSEMBLY	2XF76	155
0574 0272 11	HOSE ASSEMBLY	1XF76	859
0574 0272 11	HOSE ASSEMBLY	1XF76	155
0574 0274 11	HOSE ASSEMBLY	LUG	855
0574 0274 11	HOSE ASSEMBLY	LUG	727
0574 0278 11	HOSE ASSEMBLY	FL4	853
0574 0278 11	HOSE ASSEMBLY	FL3	505
0574 0278 11	HOSE ASSEMBLY	FL4	505
0574 0278 11	HOSE ASSEMBLY	FL3	853
0574 0289 11	HOSE ASSEMBLY	FR2	853
0574 0289 11	HOSE ASSEMBLY	FR2	505
0574 0296 11	HOSE ASSEMBLY	GR1	425
0574 0296 11	HOSE ASSEMBLY	GR1	854
0574 0314 11	HOSE ASSEMBLY	1FR5	858
0574 0314 11	HOSE ASSEMBLY	1GD	154
0574 0314 11	HOSE ASSEMBLY	2FR6	523
0574 0314 11	HOSE ASSEMBLY	1FR6	858
0574 0314 11	HOSE ASSEMBLY	2FR5	523
0574 0314 11	HOSE ASSEMBLY	1GD	859
0574 0314 11	HOSE ASSEMBLY	1FL6	858
0574 0314 11	HOSE ASSEMBLY	1FR6	521
0574 0314 11	HOSE ASSEMBLY	2FL5	860
0574 0314 11	HOSE ASSEMBLY	1FR5	521
0574 0314 11	HOSE ASSEMBLY	2FL6	523
0574 0314 11	HOSE ASSEMBLY	2FL6	860
0574 0314 11	HOSE ASSEMBLY	2FR5	860
0574 0314 11	HOSE ASSEMBLY	2FR6	860
0574 0314 11	HOSE ASSEMBLY	1FL6	521
0574 0314 11	HOSE ASSEMBLY	2FL5	523
0574 0314 11	HOSE ASSEMBLY	1FL5	521
0574 0314 11	HOSE ASSEMBLY	1FL5	858
0574 0317 11	HOSE ASSEMBLY	FR1	853
0574 0317 11	HOSE ASSEMBLY	FR1	505
0574 0320 11	HOSE ASSEMBLY	DVV	852
0574 0320 11	HOSE ASSEMBLY	DVV	153
0574 0323 11	HOSE ASSEMBLY	J24	854

Part no Detaljnr	Description	Ref no	See page Se sida
0574 0323 11	HOSE ASSEMBLY	J32	854
0574 0323 11	HOSE ASSEMBLY	J12	854
0574 0323 11	HOSE ASSEMBLY	J11	854
0574 0323 11	HOSE ASSEMBLY	J12	151
0574 0323 11	HOSE ASSEMBLY	J23	151
0574 0323 11	HOSE ASSEMBLY	J23	854
0574 0323 11	HOSE ASSEMBLY	J31	854
0574 0323 11	HOSE ASSEMBLY	J32	151
0574 0323 11	HOSE ASSEMBLY	J31	151
0574 0323 11	HOSE ASSEMBLY	J24	151
0574 0323 11	HOSE ASSEMBLY	J11	151
0574 0324 11	HOSE ASSEMBLY	FG	853
0574 0324 11	HOSE ASSEMBLY	FG	153
0574 0324 11	HOSE ASSEMBLY	DKV	153
0574 0324 11	HOSE ASSEMBLY	DKV	852
0574 0328 11	HOSE ASSEMBLY	1BR2	215
0574 0328 11	HOSE ASSEMBLY	1BR2	858
0574 0335 11	HOSE ASSEMBLY	2XS3	862
0574 0335 11	HOSE ASSEMBLY	2XS3	155
0574 1254 11	HOSE ASSEMBLY	F13	43
0574 1254 11	HOSE ASSEMBLY	VV3	153
0574 1254 11	HOSE ASSEMBLY	VV4	153
0574 1254 11	HOSE ASSEMBLY	VV4	857
0574 1254 11	HOSE ASSEMBLY	VV3	857
0574 1254 11	HOSE ASSEMBLY	F13	853
0574 1260 11	HOSE ASSEMBLY	F12	853
0574 1260 11	HOSE ASSEMBLY	F12	43
0574 1262 11	HOSE ASSEMBLY	BFR4	852
0574 1262 11	HOSE ASSEMBLY	BFR4	505
0574 1266 11	HOSE ASSEMBLY	F21	853
0574 1266 11	HOSE ASSEMBLY	F22	853
0574 1266 11	HOSE ASSEMBLY	F22	613
0574 1266 11	HOSE ASSEMBLY	F21	613
0574 1272 11	HOSE ASSEMBLY	2P1	154
0574 1272 11	HOSE ASSEMBLY	1P1	154
0574 1272 11	HOSE ASSEMBLY	2P1	861
0574 1272 11	HOSE ASSEMBLY	1P1	859
0574 1273 11	HOSE ASSEMBLY	2T50	154
0574 1273 11	HOSE ASSEMBLY	1F24	859
0574 1273 11	HOSE ASSEMBLY	1F24	63
0574 1273 11	HOSE ASSEMBLY	2T50	861
0574 1274 11	HOSE ASSEMBLY	1T50	859
0574 1274 11	HOSE ASSEMBLY	F24	853
0574 1274 11	HOSE ASSEMBLY	F24	61
0574 1274 11	HOSE ASSEMBLY	1T50	154
0574 1275 11	HOSE ASSEMBLY	2BFL3	860
0574 1275 11	HOSE ASSEMBLY	2BFR3	860
0574 1275 11	HOSE ASSEMBLY	1BRR4	858
0574 1275 11	HOSE ASSEMBLY	F2	853
0574 1275 11	HOSE ASSEMBLY	2BRL4	860
0574 1275 11	HOSE ASSEMBLY	2BRR4	860
0574 1275 11	HOSE ASSEMBLY	1BRL4	858
0574 1275 11	HOSE ASSEMBLY	1BFR3	858
0574 1275 11	HOSE ASSEMBLY	F2	635
0574 1275 11	HOSE ASSEMBLY	1BFL3	858
0574 1275 11	HOSE ASSEMBLY	F1	635
0574 1275 11	HOSE ASSEMBLY	2BRR4	523
0574 1275 11	HOSE ASSEMBLY	2BRL4	523
0574 1275 11	HOSE ASSEMBLY	2BFL3	523
0574 1275 11	HOSE ASSEMBLY	2BFR3	523

Part no Detaljnr	Description	Ref no	See page Se sida
0574 1275 11	HOSE ASSEMBLY	F1	853
0574 1275 11	HOSE ASSEMBLY	1BFL3	521
0574 1275 11	HOSE ASSEMBLY	1BFR3	521
0574 1275 11	HOSE ASSEMBLY	1BRL4	521
0574 1275 11	HOSE ASSEMBLY	1BRR4	521
0574 1276 11	HOSE ASSEMBLY	FE6	853
0574 1276 11	HOSE ASSEMBLY	FE6	505
0574 1276 11	HOSE ASSEMBLY	FE5	852
0574 1276 11	HOSE ASSEMBLY	FE5	505
0574 1277 11	HOSE ASSEMBLY	2FE7	523
0574 1277 11	HOSE ASSEMBLY	T40	857
0574 1277 11	HOSE ASSEMBLY	1FE8	858
0574 1277 11	HOSE ASSEMBLY	2FE8	860
0574 1277 11	HOSE ASSEMBLY	1FE8	521
0574 1277 11	HOSE ASSEMBLY	T40	197
0574 1277 11	HOSE ASSEMBLY	2FE7	860
0574 1277 11	HOSE ASSEMBLY	2FE8	523
0574 1277 11	HOSE ASSEMBLY	1FE7	521
0574 1277 11	HOSE ASSEMBLY	1FE7	858
0574 1281 11	HOSE ASSEMBLY	ABR2	851
0574 1281 11	HOSE ASSEMBLY	ABR2	215
0574 1284 11	HOSE ASSEMBLY	PD2	855
0574 1284 11	HOSE ASSEMBLY	PD2	519
0574 1285 11	HOSE ASSEMBLY	AR3	519
0574 1285 11	HOSE ASSEMBLY	AR3	851
0574 1285 11	HOSE ASSEMBLY	AR4	519
0574 1285 11	HOSE ASSEMBLY	AR4	851
0574 1286 11	HOSE ASSEMBLY	FE3	505
0574 1286 11	HOSE ASSEMBLY	FE4	852
0574 1286 11	HOSE ASSEMBLY	FE3	852
0574 1286 11	HOSE ASSEMBLY	FE4	505
0574 1288 11	HOSE ASSEMBLY	AR6	851
0574 1288 11	HOSE ASSEMBLY	AR6	519
0574 1288 11	HOSE ASSEMBLY	AR5	851
0574 1288 11	HOSE ASSEMBLY	AR5	519
0574 1290 11	HOSE ASSEMBLY	PD3	855
0574 1290 11	HOSE ASSEMBLY	PD3	519
0574 1315 11	HOSE ASSEMBLY	P2	153
0574 1315 11	HOSE ASSEMBLY	P2	855
0574 1315 11	HOSE ASSEMBLY	VV1	857
0574 1315 11	HOSE ASSEMBLY	1PD10	859
0574 1315 11	HOSE ASSEMBLY	2PD10	155
0574 1315 11	HOSE ASSEMBLY	2PD10	861
0574 1315 11	HOSE ASSEMBLY	VV1	153
0574 1315 11	HOSE ASSEMBLY	1PD10	155
0574 1316 11	HOSE ASSEMBLY	ABR1	215
0574 1316 11	HOSE ASSEMBLY	ABR1	851
0574 1321 11	HOSE ASSEMBLY	L1	641
0574 1321 11	HOSE ASSEMBLY	PD1	641
0574 1321 11	HOSE ASSEMBLY	PD1	855
0574 1321 11	HOSE ASSEMBLY	3BR4	862
0574 1321 11	HOSE ASSEMBLY	3BR4	215
0574 1321 11	HOSE ASSEMBLY	L1	855
0574 2256 11	HOSE ASSEMBLY	TV1	749
0574 2256 11	HOSE ASSEMBLY	TV1	856
0574 2258 11	HOSE ASSEMBLY	LU1	727
0574 2258 11	HOSE ASSEMBLY	LU1	855
0574 2263 11	HOSE ASSEMBLY	LU1	735
0574 2263 11	HOSE ASSEMBLY	LU1	855
0574 2267 11	HOSE ASSEMBLY	2T20	154

Part no Detaljnr	Description	Ref no	See page Se sida
0574 2267 11	HOSE ASSEMBLY	2T20	861
0574 2267 11	HOSE ASSEMBLY	1T20	154
0574 2267 11	HOSE ASSEMBLY	1T20	859
0574 2269 11	HOSE ASSEMBLY	TV2	749
0574 2269 11	HOSE ASSEMBLY	TV2	856
0574 2269 11	HOSE ASSEMBLY	1T2	154
0574 2269 11	HOSE ASSEMBLY	1T2	859
0574 2270 11	HOSE ASSEMBLY	2T2	154
0574 2270 11	HOSE ASSEMBLY	2T2	861
0574 2273 11	HOSE ASSEMBLY	ST1	215
0574 2273 11	HOSE ASSEMBLY	ST1	856
0574 2276 11	HOSE ASSEMBLY	T14	153
0574 2276 11	HOSE ASSEMBLY	T14	857
0574 2277 11	HOSE ASSEMBLY	AC2	851
0574 2277 11	HOSE ASSEMBLY	AC2	735
0574 2280 11	HOSE ASSEMBLY	ST4	856
0574 2280 11	HOSE ASSEMBLY	ST4	215
0574 2280 11	HOSE ASSEMBLY	P13	215
0574 2280 11	HOSE ASSEMBLY	P13	855
0574 2280 11	HOSE ASSEMBLY	ST3	215
0574 2280 11	HOSE ASSEMBLY	ST3	856
0574 2284 11	HOSE ASSEMBLY	L2	519
0574 2284 11	HOSE ASSEMBLY	STT1	215
0574 2284 11	HOSE ASSEMBLY	L2	855
0574 2284 11	HOSE ASSEMBLY	F4	853
0574 2284 11	HOSE ASSEMBLY	2T30	861
0574 2284 11	HOSE ASSEMBLY	2T30	154
0574 2284 11	HOSE ASSEMBLY	F4	519
0574 2284 11	HOSE ASSEMBLY	D2	852
0574 2284 11	HOSE ASSEMBLY	F3	853
0574 2284 11	HOSE ASSEMBLY	D2	519
0574 2284 11	HOSE ASSEMBLY	STT1	856
0574 2284 11	HOSE ASSEMBLY	F3	519
0574 2286 11	HOSE ASSEMBLY	P10	855
0574 2286 11	HOSE ASSEMBLY	T10	857
0574 2286 11	HOSE ASSEMBLY	T10	153
0574 2286 11	HOSE ASSEMBLY	P10	153
0574 2288 11	HOSE ASSEMBLY	1T30	154
0574 2288 11	HOSE ASSEMBLY	F6	853
0574 2288 11	HOSE ASSEMBLY	F5	519
0574 2288 11	HOSE ASSEMBLY	F6	519
0574 2288 11	HOSE ASSEMBLY	F5	853
0574 2288 11	HOSE ASSEMBLY	1T30	859
0574 2288 11	HOSE ASSEMBLY	TF	856
0574 2288 11	HOSE ASSEMBLY	TF	153
0574 2318 11	HOSE ASSEMBLY	P12	855
0574 2318 11	HOSE ASSEMBLY	LU	855
0574 2318 11	HOSE ASSEMBLY	LU	727
0574 2318 11	HOSE ASSEMBLY	P12	153
0574 2321 11	HOSE ASSEMBLY	1P9	154
0574 2321 11	HOSE ASSEMBLY	1P9	859
0574 2325 11	HOSE ASSEMBLY	1L4	521
0574 2325 11	HOSE ASSEMBLY	2L4	523
0574 2325 11	HOSE ASSEMBLY	2L4	861
0574 2325 11	HOSE ASSEMBLY	1L4	859
0574 2326 11	HOSE ASSEMBLY	2D4	523
0574 2326 11	HOSE ASSEMBLY	1D4	858
0574 2326 11	HOSE ASSEMBLY	1D4	521
0574 2326 11	HOSE ASSEMBLY	2D4	860
0574 3257 11	HOSE ASSEMBLY	AC3	735

Part no Detaljnr	Description	Ref no	See page Se sida
0574 3257 11	HOSE ASSEMBLY	AC3	851
0574 3261 11	HOSE ASSEMBLY	CV1	215
0574 3261 11	HOSE ASSEMBLY	TRF	215
0574 3261 11	HOSE ASSEMBLY	CV1	852
0574 3261 11	HOSE ASSEMBLY	TRF	856
0574 3264 11	HOSE ASSEMBLY	CV2	215
0574 3264 11	HOSE ASSEMBLY	CV2	852
0574 3272 11	HOSE ASSEMBLY	2W5	861
0574 3272 11	HOSE ASSEMBLY	2W5	727
0574 3277 11	HOSE ASSEMBLY	TF2	856
0574 3277 11	HOSE ASSEMBLY	TF2	189
0574 3278 11	HOSE ASSEMBLY	V1	857
0574 3278 11	HOSE ASSEMBLY	R2	856
0574 3278 11	HOSE ASSEMBLY	R1	856
0574 3278 11	HOSE ASSEMBLY	V1	641
0574 3278 11	HOSE ASSEMBLY	R1	641
0574 3278 11	HOSE ASSEMBLY	R2	641
0574 3284 11	HOSE ASSEMBLY	V2	519
0574 3284 11	HOSE ASSEMBLY	R4	519
0574 3284 11	HOSE ASSEMBLY	R3	519
0574 3284 11	HOSE ASSEMBLY	V2	857
0574 3284 11	HOSE ASSEMBLY	R3	856
0574 3284 11	HOSE ASSEMBLY	R4	856
0574 3285 11	HOSE ASSEMBLY	2R13	154
0574 3285 11	HOSE ASSEMBLY	2R13	861
0574 3286 11	HOSE ASSEMBLY	2R8	861
0574 3286 11	HOSE ASSEMBLY	2R7	523
0574 3286 11	HOSE ASSEMBLY	2R8	523
0574 3286 11	HOSE ASSEMBLY	2R7	861
0574 3287 11	HOSE ASSEMBLY	1R13	154
0574 3287 11	HOSE ASSEMBLY	1R13	859
0574 3289 11	HOSE ASSEMBLY	R5	856
0574 3289 11	HOSE ASSEMBLY	R5	519
0574 3289 11	HOSE ASSEMBLY	R6	519
0574 3289 11	HOSE ASSEMBLY	R6	856
0574 3290 11	HOSE ASSEMBLY	V3	857
0574 3290 11	HOSE ASSEMBLY	V3	519
0574 3320 11	HOSE ASSEMBLY	2W4	739
0574 3320 11	HOSE ASSEMBLY	1W4	739
0574 3320 11	HOSE ASSEMBLY	2W4	861
0574 3320 11	HOSE ASSEMBLY	TS1	641
0574 3320 11	HOSE ASSEMBLY	1W4	859
0574 3320 11	HOSE ASSEMBLY	TS1	856
0574 3331 11	HOSE ASSEMBLY	1W4	521
0574 3331 11	HOSE ASSEMBLY	1W4	859
0574 3331 11	HOSE ASSEMBLY	2W4	861
0574 3331 11	HOSE ASSEMBLY	2W4	523
0574 3334 11	HOSE ASSEMBLY	1R8	521
0574 3334 11	HOSE ASSEMBLY	1R7	521
0574 3334 11	HOSE ASSEMBLY	1R8	859
0574 3334 11	HOSE ASSEMBLY	1R7	859
0574 4037 11	HOSE ASSEMBLY	AF	735
0574 4037 11	HOSE ASSEMBLY	AF	851
0574 4263 11	HOSE ASSEMBLY	2D11	860
0574 4263 11	HOSE ASSEMBLY	2D11	154
0574 4265 11	HOSE ASSEMBLY	1D11	858
0574 4265 11	HOSE ASSEMBLY	1D11	154
0574 4316 11	HOSE ASSEMBLY	2TS5	861
0574 4316 11	HOSE ASSEMBLY	2TS5	523
0574 4316 11	HOSE ASSEMBLY	1TS5	859

Part no Detaljnr	Description	Ref no	See page Se sida
0574 4316 11	HOSE ASSEMBLY	1TS5	521
0574 4535 11	HOSE ASSEMBLY	2S7	154
0574 4535 11	HOSE ASSEMBLY	2S7	861
0574 4536 11	HOSE ASSEMBLY	2S4	861
0574 4536 11	HOSE ASSEMBLY	1S4	859
0574 4536 11	HOSE ASSEMBLY	2S4	523
0574 4536 11	HOSE ASSEMBLY	1S4	521
0574 6013 11	HOSE ASSEMBLY	T41	153
0574 6013 11	HOSE ASSEMBLY	T41	857
0574 6019 11	HOSE ASSEMBLY	T42	153
0574 6019 11	HOSE ASSEMBLY	T42	857
0574 6025 11	HOSE ASSEMBLY	W7	857
0574 6025 11	HOSE ASSEMBLY	W7	727
0580 0013 11	PIPE COUPLING	2	337
0580 2202 00	PIPE COUPLING	5	335
0584 0004 00	CUTTING RING	53	847
0584 0024 00	CUTTING RING	53	847
0584 0025 00	CUTTING RING	53	847
0584 0027 00	CUTTING RING	53	847
0584 0062 00	CUTTING RING	53	847
0584 0064 00	CUTTING RING	53	847
0584 0065 00	CUTTING RING	53	847
0584 0066 00	CUTTING RING	53	847
0584 0067 00	CUTTING RING	53	847
0584 0068 00	CUTTING RING	53	847
0584 0071 00	CUTTING RING	53	847
0584 0074 00	CUTTING RING	53	847
0584 2004 00	NUT	54	847
0584 2022 00	NUT	54	847
0584 2024 00	NUT	54	847

Part no Detaljnr	Description	Ref no	See page Se sida
0584 2025 00	NUT	54	847
0584 2026 00	NUT	54	847
0584 2027 00	NUT	54	847
0584 2062 00	NUT	54	847
0584 2064 00	NUT	54	847
0584 2065 00	NUT	54	847
0584 2066 00	NUT	54	847
0584 2067 00	NUT	54	847
0584 2068 00	NUT	54	847
0584 2074 00	NUT	54	847
0603 4225 00	HEXAGON NIPPLE	40	212
0605 8505 00	BUSHING	8	751
0605 8536 03	BUSHING	2	827
0605 8536 03	BUSHING	10	827
0627 4209 00	PRESSURE SCREW	1	331
0627 4224 03	PRESSURE SCREW	1	319
0638 0527 00	FLANGE HALF	84	213
0638 0545 00	FLANGE HALF	2	121
0638 0547 00	FLANGE HALF	2	119
0638 0547 00	FLANGE HALF	2	115
0653 0525 00	GASKET	10	733
0653 0905 06	GASKET	2	723
0653 0905 06	GASKET	2	725
0653 1026 00	GASKET	38	55
0653 1041 00	GASKET	3	337
0653 1055 00	GASKET	4	249
0653 1055 00	GASKET	10	211
0653 1057 00	GASKET	3	329
0653 1070 00	GASKET	2	331
0653 1070 00	GASKET	3	285

Part no Detaljnr	Description	Ref no	See page Se sida
0653 1124 00	GASKET	5	39
0653 1128 00	GASKET	3	235
0653 1128 00	GASKET	3	345
0653 1174 00	GASKET	5	285
0653 1174 00	GASKET	2	359
0653 1174 00	GASKET	2	319
0653 7241 00	SHIM	13	733
0653 7242 00	SHIM	12	733
0653 7247 00	SHIM	11	733
0653 9038 00	GASKET	105	545
0653 9038 00	GASKET	105	541
0653 9038 00	GASKET	105	569
0661 1000 13	SEAL WASHER	9	485
0661 1000 16	SEAL WASHER	25	485
0661 1020 00	SEAL WASHER	8	211
0661 1020 00	SEAL WASHER	56	569
0661 1020 00	SEAL WASHER	56	540
0661 1020 00	SEAL WASHER	13	393
0661 1020 00	SEAL WASHER	15	45
0661 1020 00	SEAL WASHER	14	349
0661 1026 00	SEAL WASHER	4	633
0661 1033 00	SEAL WASHER	38	212
0661 1034 00	SEAL WASHER	10	569
0661 1034 00	SEAL WASHER	10	539
0661 1038 00	SEAL WASHER	13	553
0661 1038 00	SEAL WASHER	14	231
0661 1038 00	SEAL WASHER	231	569
0661 1056 00	SEAL WASHER	2	211
0661 1062 00	SEAL WASHER	5	249
0661 1500 65	BACK-UP RING	9	497
0661 1500 65	BACK-UP RING	7	615
0661 1500 66	BACK-UP RING	9	467
0661 1500 66	BACK-UP RING	10	637
0661 1500 66	BACK-UP RING	11	395
0661 1500 66	BACK-UP RING	10	349
0661 1500 68	BACK-UP RING	18	485
0661 1500 68	BACK-UP RING	3	489
0661 1500 95	BACK-UP RING	3	351
0661 1510 00	BACK-UP RING	10	391
0661 1540 00	BACK-UP RING	3	391
0661 1568 00	BACK-UP RING	5	223
0663 2100 26	O-RING	2	89
0663 2100 62	O-RING		571
0663 2100 62	O-RING	81	540
0663 2100 62	O-RING	3	567
0663 2103 56	O-RING	6	129
0663 2103 64	O-RING	24	133
0663 2104 64	O-RING	37	27
0663 2104 64	O-RING	37	29
0663 2104 64	O-RING	3	31
0663 2104 64	O-RING	37	21
0663 2104 64	O-RING	1	25
0663 2104 64	O-RING	6	19
0663 2104 94	O-RING	70	540
0663 2104 94	O-RING		571
0663 2105 31	O-RING	23	133
0663 2105 96	O-RING	69	540
0663 2105 96	O-RING		571
0663 2108 46	O-RING	1	47
0663 2109 36	O-RING	4	567

Part no Detaljnr	Description	Ref no	See page Se sida
0663 2109 37	O-RING	6	553
0663 2109 37	O-RING	231	569
0663 2109 37	O-RING		571
0663 2110 00	O-RING	14	549
0663 2110 00	O-RING		571
0663 2110 00	O-RING	14	551
0663 2115 00	O-RING		571
0663 2116 00	O-RING	1	467
0663 2116 00	O-RING	1	497
0663 2118 01	O-RING	2	351
0663 2118 01	O-RING	3	39
0663 2118 01	O-RING	11	391
0663 2119 00	O-RING	1	251
0663 2120 00	O-RING	136	541
0663 2120 00	O-RING		571
0663 2127 00	O-RING	35	212
0663 2128 00	O-RING	9	553
0663 2128 00	O-RING	231	569
0663 2128 00	O-RING		571
0663 2128 00	O-RING	5	37
0663 2129 01	O-RING	231	569
0663 2129 01	O-RING	7	553
0663 2129 01	O-RING	78	540
0663 2129 01	O-RING		571
0663 2131 00	O-RING	16	485
0663 2133 01	O-RING	48	540
0663 2133 01	O-RING	135	541
0663 2133 01	O-RING	47	539
0663 2133 01	O-RING		571
0663 2134 00	O-RING		571
0663 2134 00	O-RING	5	391
0663 2135 00	O-RING	8	497
0663 2135 00	O-RING	52	471
0663 2135 00	O-RING	6	615
0663 2135 00	O-RING	9	223
0663 2143 00	O-RING	193	547
0663 2143 00	O-RING		571
0663 2143 00	O-RING	193	542
0663 2143 00	O-RING	193	569
0663 2144 00	O-RING		571
0663 2145 01	O-RING	195	547
0663 2145 01	O-RING	195	542
0663 2145 01	O-RING		571
0663 2150 00	O-RING	6	223
0663 3117 00	O-RING	3	45
0663 3120 00	O-RING	2	327
0663 6121 00	O-RING	13	551
0663 6121 00	O-RING	13	549
0663 6121 00	O-RING		571
0663 6123 00	O-RING	10	615
0663 6127 00	O-RING	7	395
0663 6127 00	O-RING	8	349
0663 6134 01	O-RING		571
0663 6134 01	O-RING	46	539
0663 6134 01	O-RING	45	539
0663 6135 00	O-RING		571
0663 6135 00	O-RING	4	395
0663 6135 00	O-RING	8	467
0663 6135 00	O-RING	27	539
0663 6135 00	O-RING	9	349

Part no Detaljnr	Description	Ref no	See page Se sida
0663 6135 01	O-RING		571
0663 6136 00	O-RING	51	437
0663 6136 00	O-RING	17	539
0663 6136 00	O-RING		571
0663 6138 00	O-RING	93	540
0663 6138 00	O-RING		571
0663 6138 00	O-RING	6	531
0663 6143 00	O-RING		571
0663 6143 00	O-RING	2	489
0663 6143 00	O-RING	17	485
0663 6143 00	O-RING	4	391
0663 6144 00	O-RING		571
0663 6151 00	O-RING	164	542
0663 6151 00	O-RING	164	581
0663 6151 00	O-RING		571
0663 9032 01	O-RING	107	59
0663 9032 01	O-RING	3	19
0663 9032 01	O-RING	105	59
0663 9050 01	O-RING	24	55
0663 9050 01	O-RING	9	57
0663 9050 01	O-RING	113	59
0663 9051 01	O-RING	25	55
0663 9056 00	O-RING	12	549
0663 9056 00	O-RING	12	551
0663 9056 00	O-RING		571
0663 9076 01	O-RING	2	19
0663 9078 00	O-RING	6	719
0663 9096 00	O-RING	32	21
0663 9096 00	O-RING	32	27
0663 9099 00	O-RING	1	351
0663 9099 00	O-RING	12	391
0663 9104 01	O-RING		571
0663 9112 00	O-RING	33	27
0663 9112 00	O-RING	33	21
0663 9158 00	O-RING		571
0663 9191 01	O-RING	86	213
0663 9191 01	O-RING	3	126
0663 9197 01	O-RING	4	117
0663 9203 00	O-RING	4	119
0663 9203 00	O-RING	4	115
0663 9205 00	O-RING	4	121
0663 9822 00	O-RING	5	45
0665 0010 12	SEAL RING	11	349
0665 0010 12	SEAL RING	8	615
0665 0010 12	SEAL RING	11	497
0665 0010 14	SEAL RING	11	467
0665 0010 14	SEAL RING	3	395
0665 0010 16	SEAL RING	20	485
0665 0010 18	PISTON ROD SEAL	7	223
0665 0020 18	PISTON SEAL	8	395
0665 0020 18	PISTON SEAL	7	349
0665 0020 18	PISTON SEAL	3	467
0665 0800 21	PISTON SEAL	6	391
0665 0800 34	PISTON SEAL	14	485
0665 0800 35	PISTON SEAL	12	223
0665 1000 46	SEAL	2	391
0665 9100 16	WIPER	8	223
0665 9100 17	WIPER	12	349
0665 9100 17	WIPER	9	615
0665 9100 17	WIPER	12	497

Part no Detaljnr	Description	Ref no	See page Se sida
0665 9170 00	WIPER	12	467
0665 9170 01	WIPER	1	395
0665 9181 00	WIPER	22	485
0665 9181 00	WIPER	5	489
0665 9214 00	WIPER	1	391
0665 9300 46	GUIDE RING, EXT	7	391
0666 6000 39	RADIAL LIP SEAL	2	807
0666 6000 39	RADIAL LIP SEAL	2	767
0666 6718 00	RADIAL LIP SEAL	3	595
0666 7188 01	RADIAL LIP SEAL	107	545
0666 7188 01	RADIAL LIP SEAL	107	569
0666 7188 01	RADIAL LIP SEAL	107	541
0666 7190 01	RADIAL LIP SEAL	154	569
0666 7190 01	RADIAL LIP SEAL	154	542
0666 8007 04	AXIAL SEAL	8	595
0666 8096 03	AXIAL SEAL	6	491
0666 8096 03	AXIAL SEAL	6	513
0667 1206 00	SEAL	128	541
0667 1206 00	SEAL	128	569
0686 3103 00	PLUG	16	349
0686 3702 00	PLUG	33	607
0686 3710 00	PLUG	6	249
0686 3716 02	PLUG	2	721
0686 3718 02	PLUG	7	165
0686 3718 02	PLUG	2	171
0686 4201 03	PLUG	104	541
0686 4201 03	PLUG	104	545
0686 4201 03	PLUG	104	569
0686 6101 00	PLUG	5	439
0686 6442 00	PLUG	55	540
0686 6442 00	PLUG	13	349
0686 6442 03	PLUG	13	45
0686 6442 07	PLUG	1	109
0686 6442 07	PLUG	7	179
0686 6442 07	PLUG	3	183
0686 6442 07	PLUG	2	81
0686 6442 07	PLUG	3	113
0686 6442 07	PLUG	1	73
0686 6442 07	PLUG	5	165
0686 6442 07	PLUG	9	179
0686 6447 04	PLUG	9	539
0686 6457 04	PLUG	21	55
0686 9010 54	PROTECTING PLUG		553
0686 9110 00	PROTECTION PLUG	87	540
0686 9250 26	PLUG		543
0686 9250 27	PLUG		543
0686 9250 60	CAP	74	15
0686 9250 61	CAP	75	15
0686 9250 62	CAP	76	15
0686 9250 63	CAP	77	15
0686 9250 63	CAP	30	133
0686 9252 27	PROTECTION CAP	10	335
0686 9252 27	PROTECTION CAP	4	453
0686 9252 27	PROTECTION CAP	5	495
0686 9252 27	PROTECTION CAP	4	473
0686 9252 27	PROTECTION CAP	73	604
0686 9252 27	PROTECTION CAP	4	443
0686 9252 27	PROTECTION CAP	5	515
0686 9252 27	PROTECTION CAP	4	439
0686 9252 27	PROTECTION CAP	4	475

Part no Detaljnr	Description	Ref no	See page Se sida
0686 9252 27	PROTECTION CAP	3	441
0686 9252 27	PROTECTION CAP	13	469
0686 9252 27	PROTECTION CAP	4	483
0690 1116 00	PLATE	22	471
0690 1132 00	PLATE	1001	583
0690 1132 00	PLATE	1001	574
0690 1132 02	LOGOTYPE LABEL	40	401
0694 5110 22	CABLE LUG	50	683
0694 5110 30	CABLE LUG	53	684
0697 9745 29	REDUCER	60	684
0697 9745 31	ADAPTER	14	693
0697 9745 44	ADAPTER	16	683
0697 9745 66	ADAPTER	2	745
0697 9745 66	ADAPTER	3	745
0697 9745 66	ADAPTER	5	299
0697 9745 66	ADAPTER	8	683
0697 9745 71	REDUCER	20	683
0697 9745 71	REDUCER	38	267
0697 9809 13	LOCK NUT	7	377
0697 9809 13	LOCK NUT	7	299
0697 9809 13	LOCK NUT	22	751
0697 9809 13	LOCK NUT	40	267
0697 9809 14	LOCK NUT	9	377
0697 9809 14	LOCK NUT	41	267
0697 9809 14	LOCK NUT	21	286
0697 9809 14	LOCK NUT	10	683
0697 9809 14	LOCK NUT	18	707
0697 9809 14	LOCK NUT	12	260
0697 9809 14	LOCK NUT	18	295
0697 9809 15	LOCK NUT	19	295
0697 9809 15	LOCK NUT	19	707
0697 9809 16	LOCK NUT	6	260
0697 9810 18	END PLUG	62	684
0697 9810 18	END PLUG	6	377
0697 9810 19	END PLUG	17	295
0697 9810 19	END PLUG	36	267
0697 9810 19	END PLUG	17	707
0697 9810 19	END PLUG	11	260
0697 9810 19	END PLUG	8	377
0697 9810 19	END PLUG	23	683
0697 9810 20	END PLUG	24	683
0697 9810 21	END PLUG	25	683
0697 9810 22	END PLUG	61	684
0697 9810 54	END PLUG	16	283
0697 9810 54	END PLUG	16	281
0698 5140 60	CABLE GLAND	22	751
0698 5140 60	CABLE GLAND	1	289
0698 5140 60	CABLE GLAND	3	745
0698 5140 60	CABLE GLAND	37	267
0698 5140 60	CABLE GLAND	15	683
0698 5140 60	CABLE GLAND	6	299
0698 5140 60	CABLE GLAND	5	693
0698 5140 60	CABLE GLAND	17	753
0698 5140 61	CABLE GLAND	10	651
0698 5140 61	CABLE GLAND	11	683
0698 5140 61	CABLE GLAND	2	669
0698 5140 61	CABLE GLAND	2	667
0698 5140 61	CABLE GLAND	9	297
0698 5140 61	CABLE GLAND	11	649
0698 5140 61	CABLE GLAND	15	693

Part no Detaljnr	Description	Ref no	See page Se sida
0698 5140 61	CABLE GLAND	4	703
0698 5140 61	CABLE GLAND	8	260
0698 5140 61	CABLE GLAND	39	267
0698 5140 61	CABLE GLAND	6	191
0698 5141 13	CABLE GLAND	16	707
0698 5141 13	CABLE GLAND	16	295
0698 5141 40	CABLE GLAND	2	745
0698 5141 41	CABLE GLAND	15	295
0698 5141 41	CABLE GLAND	15	707
0698 5141 62	CABLE GLAND	18	797
0698 5141 70	CABLE GLAND	15	281
0698 5141 70	CABLE GLAND	15	283
0698 5141 71	CABLE GLAND	18	283
0698 5141 71	CABLE GLAND	18	281
0698 5205 00	JUNCTION BOX	26	683
0698 5205 00	JUNCTION BOX	4	299
0698 5211 00	JUNCTION BOX	4	693
0803 5012 04	FILTER PLUG	3	721
0823 0050 17	CHECK VALVE	71	15
0823 0090 06	CHECK VALVE	3	185
0834 1194 05	SAFETY VALVE	4	715
0872 1000 24	MANOMETER	77	103
0926 5051 00	BATTERY	G100	285
1010 5265 00	LOCK NUT	6	733
1010 5266 00	SET SCREW	7	733
1010 5267 00	SCREW	8	733
1011 3495 00	SEAT	4	733
1011 3496 00	SEAT	3	733
1011 3497 00	DISK	2	733
1011 3498 00	GUIDE	5	733

Part no Detaljnr	Description	Ref no	See page Se sida
1011 3510 80	CONTROL VALVE	24	731
1030 1005 03	HOSE CLIP	5	311
1088 0003 01	FLAT PIN SLEEVE	4	275
1088 0003 01	FLAT PIN SLEEVE	10	299
1088 0003 01	FLAT PIN SLEEVE	13	266
1088 0003 01	FLAT PIN SLEEVE	3	271
1088 0004 09	FLAT PIN SLEEVE	4	259
1088 1301 01	ASSEMBLY STRIP	8	231
1089 0227 01	JUNCTION BOX	17	693
1089 0227 01	JUNCTION BOX	1	745
1089 0289 01	INDICATION LAMP	23	14
1090 0367 00	SPRING	9	733
1261 1000 05	PLUG	14	77
1503 1267 02	SAFETY VALVE	25	731
2235 1598 00	AIR RECEIVER	27	731
2235 1598 00	AIR RECEIVER	28	731
2910 3019 00	REPAIR KIT	-	733
3035 3313 73	AUX. CONTACT	K 74	654
3035 3313 73	AUX. CONTACT	K 64	654
3035 3313 73	AUX. CONTACT	K 28	653
3115 0212 00	STRAP	5	721
3115 0262 00	VALVE	4	551
3115 0262 00	VALVE	4	549
3115 0262 00	VALVE	211	583
3115 0262 00	VALVE	211	573
3115 0273 00	WASHER	109	545
3115 0273 00	WASHER	109	541
3115 0274 00	GEAR WHEEL	123	541
3115 0277 00	COUPLING	248	543
3115 0286 00	DOME NUT	251	579

Part no Detaljnr	Description	Ref no	See page Se sida
3115 0286 00	DOME NUT	251	573
3115 0286 00	DOME NUT	251	543
3115 0287 00	WASHER	252	543
3115 0287 00	WASHER	252	579
3115 0287 00	WASHER	252	573
3115 0297 01	SHIM	137	573
3115 0297 01	SHIM	137	583
3115 0297 01	SHIM	137	541
3115 0297 02	SHIM	138	541
3115 0297 02	SHIM	138	583
3115 0297 02	SHIM	138	573
3115 0297 03	SHIM	139	541
3115 0297 03	SHIM	139	573
3115 0297 03	SHIM	139	583
3115 0327 00	GASKET	247	543
3115 0327 00	GASKET	247	569
3115 0821 00	SHAFT	130	541
3115 0823 00	WASHER	125	541
3115 0824 00	SLEEVE	127	541
3115 0970 00	SEAL KIT	16	569
3115 0970 00	SEAL KIT	16	539
3115 1156 00	SEAL KIT	26	539
3115 1156 00	SEAL KIT	26	569
3115 1165 00	STUD	11	539
3115 1457 00	SIDE BOLT	133	583
3115 1457 00	SIDE BOLT	133	573
3115 1457 00	SIDE BOLT	133	541
3115 1459 00	NIPPLE	3	563
3115 1582 00	DRIVER	131	577
3115 1582 00	DRIVER	131	541
3115 1582 00	DRIVER	131	583
3115 1603 91	NIPPLE SET		543
3115 1648 00	CARTRIDGE	3	719
3115 1648 01	COIL	4	719
3115 1648 02	SEAL KIT	8	719
3115 1680 00	PISTON GUIDE	29	539
3115 1680 00	PISTON GUIDE	29	577
3115 1680 00	PISTON GUIDE	29	583
3115 1684 00	COUPLING	10	719
3115 1697 00	SEAL WASHER	37	569
3115 1697 00	SEAL WASHER	37	539
3115 1732 81	ROT.CHUCK	116	541
3115 1746 06	NOZZLE	71	540
3115 1746 06	NOZZLE	59	540
3115 1765 00	VALVE PISTON	31	539
3115 1822 01	DIAPHRAGM	211	583
3115 1822 01	DIAPHRAGM	3	549
3115 1822 01	DIAPHRAGM	3	551
3115 1822 01	DIAPHRAGM	211	573
3115 1825 00	PLUG	8	539
3115 1825 00	PLUG	187	542
3115 1870 00	PROTECTION PLUG		551
3115 1870 00	PROTECTION PLUG		549
3115 1879 00	SEAL KIT	84	540
3115 1880 00	SEAL KIT	85	540
3115 1880 90	SEAL KIT	85	569
3115 1881 00	BUSHING	118	541
3115 1881 00	BUSHING	118	583
3115 1881 00	BUSHING	118	577
3115 1926 02	DIAPHRAGM	231	573

Part no Detaljnr	Description	Ref no	See page Se sida
3115 1926 02	DIAPHRAGM	231	583
3115 1926 02	DIAPHRAGM	10	553
3115 1944 80	CYLINDER	2	539
3115 2076 05	VALVE COVER	33	539
3115 2077 03	VALVE COVER	32	539
3115 2112 00	GUIDE	12	539
3115 2122 00	STOP RING	185	547
3115 2122 00	STOP RING	185	577
3115 2122 00	STOP RING	185	542
3115 2163 00	MANDREL	20	565
3115 2196 81	TEST VALVE	5	549
3115 2196 81	TEST VALVE	5	551
3115 2231 00	DRILL COLLAR	301	543
3115 2275 00	CLAMP	21	553
3115 2276 00	HOLDER	22	553
3115 2333 00	CUP SEAL	175	569
3115 2333 00	CUP SEAL	175	542
3115 2333 00	CUP SEAL	175	547
3115 2383 00	VALVE CONE	77	540
3115 2384 00	VALVE SEAT	76	540
3115 2401 00	PLUG	60	540
3115 2583 45	INTERMED. PART	53	540
3115 2583 81	INTERM. COMPL.	52	540
3115 2615 20	TUBE	2	553
3115 2615 91	RETURN ACCUM.	231	542
3115 2617 10	PLUG	231	583
3115 2617 10	PLUG	231	573
3115 2617 20	PLUG	11	553
3115 2618 00	END PIECE	8	553
3115 2702 10	SCREW	10	551
3115 2702 10	SCREW	211	573
3115 2702 10	SCREW	211	583
3115 2702 10	SCREW	10	549
3115 2714 90	LABEL SET	9	549
3115 2714 90	LABEL SET	211	573
3115 2714 90	LABEL SET	211	583
3115 2715 90	LABEL SET	221	583
3115 2715 90	LABEL SET	221	573
3115 2715 90	LABEL SET	9	551
3115 2724 80	DISASSEMB.TOOLS	30	565
3115 2742 00	GUIDE SLEEVE	129	541
3115 2766 80	SEAL HOUSE COMP	14	539
3115 2772 80	SEAL HOUSE COMP	24	539
3115 2885 00	TUBE COVER	3	553
3115 2886 00	PIPE	4	553
3115 2887 80	CONNECT. PLATE	200	565
3115 2888 00	PRESSURE SCREW	2	567
3115 2889 00	PRESSURE SCREW	5	553
3115 2968 00	ROT.CH.BUSHING	132	577
3115 2968 00	ROT.CH.BUSHING	132	541
3115 2968 00	ROT.CH.BUSHING	132	583
3115 2971 00	DAMPING PISTON	86	577
3115 2971 00	DAMPING PISTON	86	583
3115 2971 00	DAMPING PISTON	86	540
3115 2988 00	SEAL RING		571
3115 2988 00	SEAL RING	82	540
3115 3024 00	WIPER	178	542
3115 3024 00	WIPER	178	547
3115 3024 00	WIPER	178	569
3115 3164 00	LABEL	291	583

Part no Detaljnr	Description	Ref no	See page Se sida
3115 3164 00	LABEL	291	543
3115 3164 00	LABEL	291	574
3115 3214 00	NUT	36	539
3115 3223 00	REG. PLUG	100	565
3115 3245 00	SEAL RING	163	542
3115 3245 00	SEAL RING		571
3115 3245 00	SEAL RING	181	547
3115 3245 00	SEAL RING	181	542
3115 3245 00	SEAL RING	38	539
3115 3245 00	SEAL RING	163	581
3115 3245 00	SEAL RING	134	541
3115 3289 17	SEAL RING	192	569
3115 3289 17	SEAL RING	192	547
3115 3289 17	SEAL RING	192	542
3115 3291 00	REG. PLUG	35	539
3115 3308 00	LABEL	292	574
3115 3308 00	LABEL	292	583
3115 3445 00	SEAL RING	190	569
3115 3445 00	SEAL RING	190	542
3115 3445 00	SEAL RING	190	547
3115 3451 81	ACCUMULATOR	211	542
3115 3455 00	CONNECT. PLATE	79	540
3115 3473 80	HYDRAULIC MOTOR	241	542
3115 3473 81	HYDRAULIC MOTOR	241	542
3115 3473 83	HYDRAULIC MOTOR	241	542
3115 3473 85	HYDRAULIC MOTOR	241	542
3115 3473 90	SEAL KIT		557
3115 3473 90	SEAL KIT		559
3115 3473 90	SEAL KIT		561
3115 3473 90	SEAL KIT		555

Part no Detaljnr	Description	Ref no	See page Se sida
3115 3474 00	LINER	66	540
3115 3481 00	BACK HEAD	92	540
3115 3511 81	ACCUMULATOR	221	542
3115 3548 00	NUT	246	542
3115 3548 00	NUT	246	583
3115 3548 00	NUT	246	573
3115 3613 00	STUD	111	541
3115 3613 00	STUD	149	573
3115 3613 00	STUD	111	545
3115 3635 00	PISTON	21	539
3115 3635 01	PISTON	21	577
3115 3635 01	PISTON	21	579
3115 3744 00	BUSHING	67	583
3115 3744 00	BUSHING	67	577
3115 3744 00	BUSHING	67	540
3115 5035 81	GEAR HOUSING	102	541
3115 5035 81	GEAR HOUSING	102	579
3115 5036 00	COVER	153	541
3115 5036 80	COVER COMPL.	152	581
3115 5036 80	COVER COMPL.	152	541
3115 5040 00	SIDE BOLT	161	581
3115 5040 00	SIDE BOLT	161	542
3115 5040 00	SIDE BOLT	161	573
3115 5042 00	FRONT PART	172	542
3115 5042 00	FRONT PART	172	547
3115 5042 80	FRONT PART COMP	171	579
3115 5042 80	FRONT PART COMP	171	542
3115 5042 90	CONVERSION KIT	690	565
3115 5042 93	CONVERSION KIT	690	565
3115 5043 00	CONNECT. PLATE	186	542

Part no Detaljnr	Description	Ref no	See page Se sida
3115 5043 10	CONNECT. PLATE	186	547
3115 5044 00	FLUSHING HEAD	174	542
3115 5044 00	FLUSHING HEAD	174	547
3115 5044 10	FLUSHING HEAD	211	565
3115 5044 20	FLUSHING HEAD	221	565
3115 5045 01	GUIDE	177	542
3115 5045 01	GUIDE	177	577
3115 5045 01	GUIDE	177	547
3115 5045 11	GUIDE	212	565
3115 5045 21	GUIDE	222	565
3115 5050 01	PISTON GUIDE	19	579
3115 5050 01	PISTON GUIDE	19	577
3115 5050 01	PISTON GUIDE	19	539
3115 5146 01	SEAL RING	83	540
3115 5146 01	SEAL RING	83	579
3115 5146 01	SEAL RING	83	569
3115 5190 00	CUP SEAL	176	547
3115 5190 00	CUP SEAL	176	542
3115 5190 00	CUP SEAL	176	569
3115 5240 00	LABEL	292	543
3115 5255 00	DISASSEMB.TOOLS	40	565
3115 9150 99	SEAL KIT	250	565
3115 9150 99	SEAL KIT		573
3115 9150 99	SEAL KIT		583
3115 9153 90	O-RING SET		569
3115 9238 91	OVERHAUL KIT	251	565
3115 9238 91	OVERHAUL KIT		577
3115 9238 92	OVERHAUL KIT	252	565
3122 0309 00	RUBBER RING	10	513
3122 0309 00	RUBBER RING	10	491

Part no Detaljnr	Description	Ref no	See page Se sida
3125 0634 00	DOWEL	16	607
3125 0639 00	BUFFER	23	595
3125 0906 00	VALVE COIL	2	37
3125 0906 91	VALVE UNIT	5	14
3125 0907 00	COMPRESS.SPRING	4	37
3125 1974 80	EXPANDING SHAFT	4	471
3125 1981 80	EXPANDING SHAFT	6	437
3125 1981 81	EXPANDING SHAFT	8	437
3125 1982 80	EXPANDING SHAFT	7	471
3125 1997 80	HOSE PROTECTION	41	507
3125 2002 00	SPACER RING	4	481
3125 2005 00	SPACER RING	50	451
3125 2178 00	BUSHING	30	451
3125 2178 00	BUSHING	2	449
3125 2178 00	BUSHING	2	447
3125 2179 00	BUSHING	2	477
3125 2179 00	BUSHING	2	479
3125 2525 00	COLLECT. BLOCK	21	66
3125 3188 90	SIGN SET	51	66
3125 4924 00	SHIM	4	491
3125 4924 00	SHIM	4	513
3125 4937 00	BUSHING	1	481
3125 4937 80	EXPANDING SHAFT	8	471
3125 4941 00	COVER	3	491
3125 4941 00	COVER	3	513
3125 4944 03	BEARING HOUSING	1	469
3125 4944 86	BEARING HOUSING	4	465
3125 4946 80	EXPANDING SHAFT	5	437
3125 4952 00	SHAFT	1	501
3125 4952 80	EXPANDING SHAFT	14	513

Part no Detaljnr	Description	Ref no	See page Se sida
3125 4952 80	EXPANDING SHAFT	14	491
3125 4953 00	BUSHING	2	501
3125 4963 00	WASHER	17	491
3125 4963 00	WASHER	17	513
3125 4964 00	BUSHING	15	491
3125 4964 00	BUSHING	15	513
3125 4965 00	BUSHING	16	513
3125 4965 00	BUSHING	16	491
3125 4968 00	SHAFT	1	463
3125 4968 80	EXPANDING SHAFT	16	437
3125 4968 80	EXPANDING SHAFT	13	491
3125 4968 80	EXPANDING SHAFT	13	513
3125 4969 00	BUSHING	2	463
3125 4974 00	RING	5	465
3125 4976 01	CRADLE	3	465
3125 5623 10	VALVE COVER	6	37
3125 9005 02	DIRECTION VALVE	72	15
3125 9005 02	DIRECTION VALVE	29	66
3128 0224 00	PROTECTION COIL	30	507
3128 0225 01	PROTECTION COIL	31	507
3128 0244 00	ATTACHMENT	13	507
3128 0251 02	ATTACHMENT	12	471
3128 0251 10	CYLINDER GUARD	11	471
3128 0287 00	CHAIN	16	507
3128 0289 01	ELBOW PLATE	27	507
3128 0289 03	RING PIN	22	507
3128 0289 04	CHAIN	17	507
3128 0289 05	CHAIN	18	507
3128 0458 01	SLIDE BAR	9	631
3128 0458 01	SLIDE BAR	8	629

Part no Detaljnr	Description	Ref no	See page Se sida
3128 0475 10	HOSE DRUM	6	625
3128 0476 00	WASHER	28	595
3128 0476 00	WASHER	11	603
3128 0481 00	SHAFT	15	603
3128 0482 00	WASHER	39	604
3128 0484 00	CRADLE PLATE	31	595
3128 0485 00	PLATE	9	595
3128 0486 00	PIPE	6	595
3128 0494 00	SPACER SLEEVE	12	639
3128 0494 00	SPACER SLEEVE	12	591
3128 0497 00	COVER	2	595
3128 0551 01	RETURN ROPE	9	591
3128 0551 01	RETURN ROPE	9	639
3128 0609 00	SPACER	7	625
3128 0610 00	SPACER	3	625
3128 0619 00	KEY	3	601
3128 0619 00	KEY	2	619
3128 0619 00	KEY	1	529
3128 0619 00	KEY	1	527
3128 0619 00	KEY	2	621
3128 0619 00	KEY	3	599
3128 0647 02	PULL ROPE	10	591
3128 0647 02	PULL ROPE	10	639
3128 0709 00	BUSHING	1	617
3128 0768 00	CLAMP	5	607
3128 0781 90	PULLEY WHEEL	14	603
3128 0781 96	SPACER	13	639
3128 0781 96	SPACER	13	591
3128 0782 58	CRADLE PLATE	10	603
3128 0782 66	NIPPLE	3	633

Part no Detaljnr	Description	Ref no	See page Se sida
3128 0782 73	DATA PLATE	40	604
3128 0782 85	LOWER PART	31	607
3128 0782 87	TOP PART	30	607
3128 0783 60	ATTACHMENT	6	607
3128 0783 67	ATTACHMENT	32	603
3128 0783 78	WIPER	6	603
3128 0784 30	PULLEY WHEEL	7	595
3128 0784 38	HOLDER	2	529
3128 0784 39	HOLDER	2	527
3128 0785 36	WASHER	1	603
3128 0785 48	HOLDER	1	619
3128 0785 48	HOLDER	1	599
3128 0785 49	HOLDER	1	601
3128 0785 49	HOLDER	1	621
3128 0786 26	END PIECE	26	595
3128 0827 00	PLUNGER	3	617
3128 0893 00	PROFILE	24	603
3128 0902 00	SPACER	14	437
3128 0940 00	ATTACHM. PLATE	7	525
3128 0940 37	HOLDER	20	607
3128 0940 38	SHIM	35	607
3128 0940 39	ASSEMBLY SET	171	433
3128 0940 39	ASSEMBLY SET	172	433
3128 0940 50	GABLE PLATE	82	589
3128 0940 50	GABLE PLATE	81	589
3128 0969 87	HOSE FRAME SET	51	435
3128 0969 87	HOSE FRAME SET	51	511
3128 0981 00	PROTECTION	13	623
3128 1036 80	FEED	52	589
3128 1036 81	FEED	51	589

Part no Detaljnr	Description	Ref no	See page Se sida
3128 1036 82	BASIC PART SET	1	639
3128 1036 82	BASIC PART SET	1	591
3128 2019 49	GUIDE PLATE	17	66
3128 2019 54	HOSE NIPPLE	83	213
3128 2020 15	PRESS.RED.VALVE	27	211
3128 2020 15	PRESS.RED.VALVE	40	66
3128 2090 57	DIRECTION VALVE	1	66
3128 2090 59	BOOM HYD. KIT	140	11
3128 2090 72	DIRECTION VALVE	75	173
3128 2090 74	DIRECTION VALVE	86	103
3128 2090 76	PLUG	2	73
3128 2090 76	PLUG	2	109
3128 2090 77	DIRECTION VALVE	1	157
3128 2091 01	INLET SECTION	1	107
3128 2091 02	VALVE SECTION	2	177
3128 2091 05	CHECK VALVE	5	79
3128 2091 05	CHECK VALVE	8	167
3128 2091 05	CHECK VALVE	10	77
3128 2091 05	CHECK VALVE	10	75
3128 2091 05	CHECK VALVE	12	181
3128 2091 05	CHECK VALVE	8	169
3128 2091 06	KIT		79
3128 2091 07	KIT		79
3128 2091 08	SPRING SET	7	79
3128 2091 09	PULL ROD SET		71
3128 2091 22	INLET SECTION	1	177
3128 2091 24	OUTLET SECTION	3	177
3128 2091 25	PRESS.REL.VALVE	8	179
3128 2091 25	PRESS.REL.VALVE	8	165
3128 2091 26	PULL ROD SET		183

Part no Detaljnr	Description	Ref no	See page Se sida
3128 2091 28	END PIECE SET		167
3128 2091 28	END PIECE SET		169
3128 2091 38	SPOOL VALVE	2	107
3128 2091 39	OUTLET SECTION	3	107
3128 2091 40	PLUG	12	111
3128 2091 41	TIE ROD KIT		113
3128 2091 44	SEAL KIT		493
3128 2091 45	BEARING KIT		493
3128 2091 49	PROTECT.BELLOWS	3	169
3128 2091 49	PROTECT.BELLOWS	5	167
3128 2091 49	PROTECT.BELLOWS	5	77
3128 2091 49	PROTECT.BELLOWS	5	75
3128 2091 69	LEVER SET	76	173
3128 2091 69	LEVER SET	87	103
3128 2091 69	LEVER SET	2	66
3128 2091 69	LEVER SET	10	157
3128 2091 69	LEVER SET	2	157
3128 2091 72	ASSEMBLY SET		161
3128 2091 73	INLET SECTION	1	161
3128 2091 74	VALVE SECTION	2	161
3128 2091 75	VALVE SECTION	3	161
3128 2091 76	OUTLET SECTION	4	161
3128 2091 84	SPRING	7	75
3128 2091 84	SPRING	7	77
3128 2092 06	DIRECTION VALVE	9	157
3128 2097 00	SLEEVE	3	507
3128 2098 00	ATTACHM. PLATE	2	507
3128 2098 01	ATTACHM. PLATE	8	507
3128 2099 33	FLOW REGULATOR	45	53
3128 2099 55	CHECK VALVE	13	391
3128 2099 55	CHECK VALVE	17	349
3128 2165 00	COVER	3	469
3128 2166 00	SEAL	4	469
3128 2169 00	BUSHING SEGMENT	5	469
3128 2172 02	CYLIND.BRACKET	1	483
3128 2172 03	CYLIND.BRACKET	9	471
3128 2281 01	FLOW REGULATOR	50	66
3128 2538 06	EXTENDER	7	439
3128 2561 36	SPACER	34	595
3128 2561 37	SPACER	33	595
3128 2561 39	BACK HEAD	25	595
3128 2592 42	HYDR. CYLINDER	2	465
3128 2592 43	HYDR. CYLINDER	8	513
3128 2592 43	HYDR. CYLINDER	8	491
3128 2592 49	WASHER	2	497
3128 2592 54	SEAL KIT		497
3128 2592 55	PISTON	4	497
3128 2592 56	SPACER	6	497
3128 2592 57	PISTON ROD	13	497
3128 2592 58	SEAL KIT		467
3128 2592 59	WASHER	2	467
3128 2592 61	PISTON	4	467
3128 2592 62	SPACER	6	467
3128 2592 63	PISTON ROD	13	467
3128 2594 01	HYDR. CYLINDER	5	633
3128 2594 05	SEAL KIT		637
3128 2800 05	LINK	2	471
3128 2800 07	LINK	3	471
3128 2800 08	THRUST BEARING	20	437
3128 2800 08	THRUST BEARING	13	471

Part no Detaljnr	Description	Ref no	See page Se sida
3128 2800 09	THRUST BEARING	19	437
3128 2800 09	THRUST BEARING	14	471
3128 2800 10	THRUST BEARING	15	471
3128 2800 27	BOOM ATTACHMENT	1	439
3128 2800 31	BOOM ATTACHMENT	1	437
3128 2800 36	BOOM LINK	2	437
3128 2801 30	CYLINDER SET	3	607
3128 2900 20	COVER	2	531
3128 2900 21	COVER	3	531
3128 3004 07	PLUG	6	631
3128 3004 07	PLUG	6	629
3128 3005 37	PLUG	4	337
3128 3005 38	CUTTING RING	1	337
3128 3008 53	PLATE	20	595
3128 3011 68	STOP	225	433
3128 3020 00	PIN	10	465
3128 3020 54	RUBBER CLOTH	19	471
3128 3020 55	ATTACHMENT	17	471
3128 3020 56	FLAT BAR	18	471
3128 3023 71	INSERT	1	221
3128 3023 71	INSERT	1	91
3128 3023 72	SEAL KIT		91
3128 3023 72	SEAL KIT		221
3128 3024 28	CHECK VALVE		35
3128 3035 69	SUPPORT	13	437
3128 3035 70	PROTECTION	11	437
3128 3035 71	PROTECTION	12	437
3128 3038 97	BUSHING	2	483
3128 3038 97	BUSHING	2	453
3128 3038 97	BUSHING	2	439

Part no Detaljnr	Description	Ref no	See page Se sida
3128 3039 30	SLIDING PIECE	2	601
3128 3039 30	SLIDING PIECE	2	599
3128 3043 11	O-RING	11	35
3128 3051 49	ATTACHMENT	2	603
3128 3052 25	DRIVER	2	625
3128 3055 75	CLAMP	26	603
3128 3056 26	RUBBER CLOTH	16	471
3128 3059 15	SPACER SLEEVE	18	491
3128 3059 15	SPACER SLEEVE	18	513
3128 3061 02	ATTACHMENT LUG	26	507
3128 3061 24	KEY	3	767
3128 3061 24	KEY	3	807
3128 3061 63	HOLDER SET	22	607
3128 3061 64	HOLDER SET	23	607
3128 3061 74	CRADLE	4	625
3128 3061 75	ROCK DRILL KIT	2	591
3128 3061 75	ROCK DRILL KIT	2	639
3128 3061 80	HOLDER	2	525
3128 3061 81	HOLDER	1	525
3128 3061 83	LIMIT SWITCH	17	607
3128 3061 86	SEAL PLUG	9	617
3128 3062 56	HOSE HOLDER	1	507
3128 3062 57	YOKE	1	509
3128 3062 61	ATTACHMENT	3	509
3128 3063 18	CLAMP	4	509
3128 3069 51	SHAFT	5	471
3128 3069 54	BOLT	31	471
3128 3069 55	BOLT	32	471
3128 3069 55	BOLT	33	437
3128 3074 88	SLIDING PIECE	3	527

Part no Detaljnr	Description	Ref no	See page Se sida
3128 3074 88	SLIDING PIECE	3	619
3128 3074 88	SLIDING PIECE	3	621
3128 3074 88	SLIDING PIECE	3	529
3128 3076 64	VALVE	3	143
3128 3076 66	VALVE	5	143
3128 3076 67	SEAL KIT	6	143
3128 3076 68	VALVE	9	143
3128 3076 68	VALVE	7	143
3128 3077 19	HOSE HOLDER	21	507
3128 3077 86	SHAFT	1	477
3128 3079 58	HOSE GUIDE	21	603
3128 3079 77	HOSE HOLDER	23	603
3128 3079 82	BULKHEAD CONN.	18	437
3128 3079 83	BULKHEAD CONN.	17	437
3128 3080 39	BOOM	9	437
3128 3080 42	BOOM ATTACHMENT	1	473
3128 3080 43	BOOM	1	453
3128 3080 92	COVER	1	531
3128 3083 03	SHAFT	7	437
3128 3083 03	SHAFT	6	471
3128 3083 67	HOSE NIPPLE SET	50	435
3128 3083 67	HOSE NIPPLE SET	50	511
3128 3083 68	HOSE SET	1	503
3128 3087 31	SEAL KIT	2	743
3128 3087 31	SEAL KIT	2	219
3128 3090 03	COVER SET	960	433
3128 3097 56	SEAL KIT	4	143
3128 3108 40	SPACER	11	509
3128 3115 41	HOSE ATTACHMENT	19	603
3128 3125 77	KEY	6	465
3128 3125 79	EXTENSION TUBE	7	465
3128 3126 44	TURNING DEVICE	1	513
3128 3126 44	TURNING DEVICE	1	491
3128 3126 88	END CAP	4	493
3128 3127 07	KIT		493
3128 3127 08	HOUSE	1	493
3128 3127 09	SHAFT	2	493
3128 3127 10	PISTON	3	493
3128 3127 11	LOCK NUT	5	493
3128 3127 12	VALVE	401	493
3128 3127 13	TUBE	406	493
3128 3134 42	PROTECTION	17	603
3128 3136 18	BUSHING	14	639
3128 3136 18	BUSHING	14	591
3128 3136 21	HOLDER	43	608
3128 3136 23	SUPPORT HALF	44	608
3128 3140 12	HOLDER SET	12	595
3128 3140 13	HOLDER SET	13	595
3128 3140 86	PROTECTION	2	491
3128 3140 86	PROTECTION	2	513
3128 3141 67	BUSHING	3	495
3128 3141 67	BUSHING	3	515
3128 3143 31	BOOM PART	3	435
3128 3144 26	BASIC BOOM	131	433
3128 3144 27	BASIC BOOM	132	433
3128 3146 43	BEARING HOUSING	1	495
3128 3146 44	BEARING HOUSING	5	491
3128 3146 59	BEARING HOUSING	5	513
3128 3146 72	CYLINDER LINK	3	437
3128 3148 00	HOLDER	25	607

Part no Detaljnr	Description	Ref no	See page Se sida
3128 3151 47	GREASE NIPPLE	111	493
3128 3151 48	BLEEDER SCREW	112	493
3128 3153 65	BRACKET	10	607
3128 3154 50	FLANGE	2	445
3128 3154 51	SHAFT COMPL.	4	437
3128 3160 02	DRILL STEEL SUP	15	607
3128 3160 08	ATTACHM. PLATE	18	607
3128 3182 08	HOSE SET	1	611
3128 3184 72	FEED BEAM	3	639
3128 3184 72	FEED BEAM	3	591
3128 3184 73	FEED BEAM	4	639
3128 3184 73	FEED BEAM	4	591
3128 3186 98	END PLATE	1	607
3128 3211 13	HOSE ASSEMBLY	V0	857
3128 3211 13	HOSE ASSEMBLY	V0	641
3128 3211 13	HOSE ASSEMBLY	110	565
3128 3211 13	HOSE ASSEMBLY	110	860
3128 3217 71	FEED HOLDER	7	491
3128 3217 72	FEED HOLDER	7	513
3128 3219 00	HYDR. CYLINDER	12	491
3128 3219 00	HYDR. CYLINDER	12	513
3128 3219 36	SEAL KIT		499
3128 3219 59	WASHER	6	469
3128 3219 85	PISTON ROD	16	499
3128 3219 86	BUSHING	21	499
3128 3219 97	PLUG	12	499
3128 3220 28	PISTON	15	499
3128 3222 13	COVER	18	499
3128 3222 19	SCREW	19	499
3128 3222 45	PISTON ROD EYE	20	499

Part no Detaljnr	Description	Ref no	See page Se sida
3153 8650 00	WASHER	9	513
3153 8650 00	WASHER	9	491
3163 1854 00	SHACKLE	6	763
3163 1854 00	SHACKLE	6	805
3176 0000 90	LOUDWHISTLEHORN	H186	257
3176 0001 14	LIGHT EMIT. DIO	1	667
3176 0001 45	WARNING BUZZER	U2	266
3176 0001 45	WARNING BUZZER	1	297
3176 0001 56	REVERSE ALARM	H121	257
3176 0006 14	PUSH-BUTTON-BOX	1	191
3176 0007 55	RELAY	K104	265
3176 0012 58	PLATE	4	157
3176 0026 14	HOUR METER	1	271
3176 0026 97	BATTERY SWITCH	S300	285
3176 0027 02	DRILLED BOX	1	283
3176 0027 02	DRILLED BOX	1	295
3176 0027 02	DRILLED BOX	1	281
3176 0027 02	DRILLED BOX	1	707
3176 0029 08	TIMING RELAY	K148	265
3176 0029 60	PROTECTION HOSE	W10	259
3176 0029 60	PROTECTION HOSE	W187	259
3176 0029 60	PROTECTION HOSE	W188	259
3176 0029 62	PROTECTION HOSE	W189	259
3176 0029 63	PROTECTION HOSE	58	684
3176 0029 69	HOSE COUPLING	10	260
3176 0029 69	HOSE COUPLING	21	286
3176 0029 70	HOSE COUPLING	9	260
3176 0029 71	HOSE COUPLING	W189	259
3176 0030 77	SPOTLIGHT	1	705
3176 0032 38	HEADLIGHT SET	1	703

Part no Detaljnr	Description	Ref no	See page Se sida
3176 0062 00	NIPPLE	30	841
3176 0063 00	NIPPLE	30	841
3176 0063 00	NIPPLE	57	411
3176 0064 00	NIPPLE	10	835
3176 0064 00	NIPPLE	54	411
3176 0065 00	NIPPLE	10	835
3176 0166 00	NIPPLE	31	841
3176 0167 00	NIPPLE	31	841
3176 0529 00	NIPPLE	31	841
3176 1271 00	NIPPLE	9	834
3176 1300 00	NIPPLE	40	844
3176 1426 00	NIPPLE	28	840
3176 1472 00	NIPPLE	1	832
3176 1508 00	NIPPLE	81	411
3176 1508 00	NIPPLE	10	836
3176 1509 00	NIPPLE	31	841
3176 1510 00	NIPPLE	30	841
3176 1522 00	NIPPLE	10	836
3176 1523 00	NIPPLE	60	411
3176 1523 00	NIPPLE	40	844
3176 1524 00	NIPPLE	33	842
3176 1586 00	NIPPLE	9	834
3176 1671 00	NIPPLE	40	844
3176 1672 00	NIPPLE	30	841
3176 1900 00	NIPPLE	6	833
3176 1901 00	NIPPLE	6	833
3176 1942 00	NIPPLE	10	836
3176 1942 00	NIPPLE	2	285
3176 1943 00	NIPPLE	10	836
3176 1944 00	NIPPLE	24	839
3176 1945 00	NIPPLE	31	842
3176 1946 00	NIPPLE	31	842
3176 1947 00	NIPPLE	23	838
3176 1948 00	NIPPLE	30	841
3176 1949 00	NIPPLE	30	841
3176 2053 00	CONNECT. PLATE	52	53
3176 2131 00	NIPPLE	7	833
3176 2131 00	NIPPLE	13	211
3176 2279 00	NIPPLE	1	832
3176 2644 00	NIPPLE	33	842
3176 2645 00	NIPPLE	10	836
3176 2710 00	NIPPLE	41	844
3176 2786 00	NIPPLE	10	836
3176 2809 00	NIPPLE	41	844
3176 2821 00	NIPPLE	18	837
3176 2904 00	NIPPLE	7	833
3176 2905 00	ADAPTER SLEEVE	49A	845
3176 2929 00	NIPPLE	5	833
3176 2930 00	CAP NUT	77	213
3176 2930 00	CAP NUT	48	845
3176 2932 00	NIPPLE	5	833
3176 2935 10	RETURN BLOCK	85	103
3176 3031 00	NIPPLE	8	834
3176 3032 00	NIPPLE	8	834
3176 3034 00	NIPPLE	8	834
3176 3035 00	NIPPLE	8	834
3176 3036 00	NIPPLE	8	834
3176 3037 00	NIPPLE	8	834
3176 3040 00	NIPPLE	8	834
3176 3042 00	NIPPLE	8	834

Part no Detaljnr	Description	Ref no	See page Se sida
3176 3045 80	PIPE COUPLING	17	837
3176 3046 80	PIPE COUPLING	17	837
3176 3048 80	PIPE COUPLING	17	837
3176 3049 80	PIPE COUPLING	17	837
3176 3050 00	NIPPLE	18	837
3176 3051 00	NIPPLE	18	837
3176 3052 00	NIPPLE	18	837
3176 3053 00	NIPPLE	18	837
3176 3060 00	NIPPLE	5	211
3176 3060 00	NIPPLE	12	611
3176 3060 00	NIPPLE	23	838
3176 3060 00	NIPPLE	93	213
3176 3060 00	NIPPLE	2	633
3176 3555 00	NIPPLE	33	842
3176 3556 00	NIPPLE	1	832
3176 3681 00	STRAP	50	245
3176 3681 00	STRAP	40	507
3176 3730 00	HOSE ASSEMBLY	2LUB	861
3176 3730 00	HOSE ASSEMBLY	2LUB	727
3176 3733 00	HOSE ASSEMBLY	F12	197
3176 3733 00	HOSE ASSEMBLY	BRR2	852
3176 3733 00	HOSE ASSEMBLY	F12	853
3176 3733 00	HOSE ASSEMBLY	1AR14	155
3176 3733 00	HOSE ASSEMBLY	1AR14	858
3176 3733 00	HOSE ASSEMBLY	BFL4	505
3176 3733 00	HOSE ASSEMBLY	BRR2	505
3176 3733 00	HOSE ASSEMBLY	BFL4	852
3176 3828 00	NIPPLE	30	841
3176 3829 00	NIPPLE	10	836
3176 4049 00	TERMINAL BLOCK	21	266
3176 4049 00	TERMINAL BLOCK	8	263
3176 4049 00	TERMINAL BLOCK	12	656
3176 4049 00	TERMINAL BLOCK	10	753
3176 4049 01	END PLATE	9	263
3176 4049 01	END PLATE	13	656
3176 4049 01	END PLATE	11	753
3176 4049 01	END PLATE	23	266
3176 4049 02	BRIDGE CONN.	14	656
3176 4049 02	BRIDGE CONN.	22	266
3176 4049 04	TERMINAL BLOCK	15	656
3176 4049 11	TERMINAL BLOCK	10	263
3176 4049 11	TERMINAL BLOCK	24	266
3176 4049 11	TERMINAL BLOCK	16	656
3176 4049 12	END PLATE	26	266
3176 4049 12	END PLATE	11	263
3176 4049 12	END PLATE	20	656
3176 4049 13	BRIDGE CONN.	25	266
3176 4049 13	BRIDGE CONN.	12	263
3176 4049 20	TERMINAL BLOCK	10	707
3176 4049 20	TERMINAL BLOCK	10	283
3176 4049 20	TERMINAL BLOCK	10	295
3176 4049 20	TERMINAL BLOCK	10	281
3176 4049 21	END PLATE	11	283
3176 4049 21	END PLATE	11	295
3176 4049 21	END PLATE	11	281
3176 4049 21	END PLATE	11	707
3176 4049 25	BRIDGE CONN.	12	707
3176 4049 25	BRIDGE CONN.	12	283
3176 4049 25	BRIDGE CONN.	12	295
3176 4049 25	BRIDGE CONN.	12	281

Part no Detaljnr	Description	Ref no	See page Se sida
3176 4049 26	TERMINAL BLOCK	20	707
3176 4049 26	TERMINAL BLOCK	6	283
3176 4049 26	TERMINAL BLOCK	6	281
3176 4049 26	TERMINAL BLOCK	20	295
3176 4049 27	TERMINAL BLOCK	3	797
3176 4049 28	END PLATE	4	797
3176 4049 30	TERMINAL BLOCK	8	299
3176 4049 40	TERMINAL BLOCK	17	656
3176 4049 51	END SUPPORT	14	753
3176 4049 51	END SUPPORT	18	656
3176 4049 51	END SUPPORT	7	263
3176 4049 51	END SUPPORT	20	266
3176 4049 52	END SUPPORT	14	281
3176 4049 52	END SUPPORT	14	295
3176 4049 52	END SUPPORT	5	797
3176 4049 52	END SUPPORT	14	283
3176 4049 52	END SUPPORT	14	707
3176 4049 61	MARKING PLATE	14	263
3176 4049 61	MARKING PLATE	13	283
3176 4049 61	MARKING PLATE	13	281
3176 4049 62	MARKING PLATE	13	281
3176 4049 65	MARKING PLATE	13	283
3176 4049 67	MARKING PLATE	13	299
3176 4049 90	MARKING PLATE	12	753
3176 4108 00	DIODE	K 29	654
3176 4158 00	BULB	2	266
3176 4158 00	BULB	H08	753
3176 4221 32	CABLE GLAND	19	683
3176 4245 01	BULB	4	695
3176 4258 01	MIN CIRC BREAK	F 76	653
3176 4258 01	MIN CIRC BREAK	F 66	653
3176 4261 01	RELAY	K 29	654
3176 4324 02	RELAY SOCKET	K 29	654
3176 4325 03	CAPACITOR	C 69	653
3176 4326 01	DIODE UNIT	V 33	655
3176 4329 05	RECTIFIER	U 68	655
3176 4329 30	COOLING FLANGE	U 68	655
3176 4343 01	HOUSING	34	267
3176 4344 02	PIN INSERT	31	266
3176 4363 08	MOUNTING RAIL	8	753
3176 4363 08	MOUNTING RAIL	2	263
3176 4394 00	FUSE	F101	285
3176 4400 54	JUNCTION BOX	1	753
3176 4491 01	MARKING PLATE	13	753
3176 4491 01	MARKING PLATE	13	707
3176 4491 01	MARKING PLATE	13	295
3176 4491 01	MARKING PLATE	13	263
3176 4491 01	MARKING PLATE	6	797
3176 4491 02	MARKING PLATE	13	263
3176 4491 02	MARKING PLATE	13	295
3176 4491 02	MARKING PLATE	13	753
3176 4491 02	MARKING PLATE	13	707
3176 4491 02	MARKING PLATE	7	797
3176 4491 03	MARKING PLATE	21	656
3176 4491 04	MARKING PLATE	22	656
3176 4492 01	MIN CIRC BREAK	F 17	653
3176 4492 02	MIN CIRC BREAK	F 49	653
3176 4492 03	MIN CIRC BREAK	F 48	653
3176 4492 03	MIN CIRC BREAK	F 22	653
3176 4492 21	MIN CIRC BREAK	F 77	653

Part no Detaljnr	Description	Ref no	See page Se sida
3176 4492 22	MIN CIRC BREAK	F 67	653
3176 4494 00	BULB	1	699
3176 4494 00	BULB	1	291
3176 4494 00	BULB	2	703
3176 4494 00	BULB	1	293
3176 4568 03	SOCKET OUTLET	X1	655
3176 4589 05	PRESSURE SWITCH	9	14
3176 5000 00	NIPPLE	9	835
3176 5018 00	NIPPLE	40	844
3176 5221 00	HOSE ASSEMBLY	1BE3	521
3176 5221 00	HOSE ASSEMBLY	1BE4	521
3176 5221 00	HOSE ASSEMBLY	2BE3	860
3176 5221 00	HOSE ASSEMBLY	2BE4	523
3176 5221 00	HOSE ASSEMBLY	2BE3	523
3176 5221 00	HOSE ASSEMBLY	HB24	151
3176 5221 00	HOSE ASSEMBLY	HB14	151
3176 5221 00	HOSE ASSEMBLY	HB24	854
3176 5221 00	HOSE ASSEMBLY	HB23	854
3176 5221 00	HOSE ASSEMBLY	HB14	854
3176 5221 00	HOSE ASSEMBLY	HB13	854
3176 5221 00	HOSE ASSEMBLY	HB23	151
3176 5221 00	HOSE ASSEMBLY	HB13	151
3176 5221 00	HOSE ASSEMBLY	1BE4	858
3176 5221 00	HOSE ASSEMBLY	1BE3	858
3176 5221 00	HOSE ASSEMBLY	2BE4	860
3176 5233 00	VALVE	2	715
3176 5313 00	CAP	20	611
3176 5313 00	CAP	51	846
3176 5427 00	NIPPLE	35	842
3176 5427 00	NIPPLE	71	212
3176 5427 00	NIPPLE	56	411
3176 5428 00	NIPPLE	34	842
3176 5428 00	NIPPLE	45	212
3176 5429 00	CAP	15	623
3176 5429 00	CAP	51	846
3176 5535 00	NIPPLE	35	842
3176 5535 00	NIPPLE	22	211
3176 5563 00	PLUG	50	846
3176 5670 00	HOSE ASSEMBLY	1T31	859
3176 5670 00	HOSE ASSEMBLY	T11	857
3176 5670 00	HOSE ASSEMBLY	P14	855
3176 5670 00	HOSE ASSEMBLY	1T31	154
3176 5670 00	HOSE ASSEMBLY	P14	153
3176 5670 00	HOSE ASSEMBLY	T11	153
3176 5670 00	HOSE ASSEMBLY	2T31	861
3176 5670 00	HOSE ASSEMBLY	2T31	154
3176 5675 00	HOSE ASSEMBLY	1T92	859
3176 5675 00	HOSE ASSEMBLY	2F18	63
3176 5675 00	HOSE ASSEMBLY	F22	853
3176 5675 00	HOSE ASSEMBLY	1T92	63
3176 5675 00	HOSE ASSEMBLY	2T92	861
3176 5675 00	HOSE ASSEMBLY	2T92	63
3176 5675 00	HOSE ASSEMBLY	F16	43
3176 5675 00	HOSE ASSEMBLY	2AR14	155
3176 5675 00	HOSE ASSEMBLY	2AR14	860
3176 5675 00	HOSE ASSEMBLY	2F20	861
3176 5675 00	HOSE ASSEMBLY	F16	853
3176 5675 00	HOSE ASSEMBLY	2F20	63
3176 5675 00	HOSE ASSEMBLY	F22	61
3176 5675 00	HOSE ASSEMBLY	2F18	861

Part no Detaljnr	Description	Ref no	See page Se sida
3176 5676 00	HOSE ASSEMBLY	F20	61
3176 5676 00	HOSE ASSEMBLY	2F24	63
3176 5676 00	HOSE ASSEMBLY	F20	853
3176 5676 00	HOSE ASSEMBLY	2F24	861
3176 5676 00	HOSE ASSEMBLY	F18	853
3176 5676 00	HOSE ASSEMBLY	F18	61
3176 5677 00	HOSE ASSEMBLY	1AR14	155
3176 5677 00	HOSE ASSEMBLY	F10	197
3176 5677 00	HOSE ASSEMBLY	F10	853
3176 5677 00	HOSE ASSEMBLY	1AR14	858
3176 5679 00	HOSE ASSEMBLY	D30	93
3176 5679 00	HOSE ASSEMBLY	PP6	93
3176 5679 00	HOSE ASSEMBLY	1AR16	858
3176 5679 00	HOSE ASSEMBLY	HB21	151
3176 5679 00	HOSE ASSEMBLY	2AR16	739
3176 5679 00	HOSE ASSEMBLY	XF72	858
3176 5679 00	HOSE ASSEMBLY	XF70	43
3176 5679 00	HOSE ASSEMBLY	PP5	93
3176 5679 00	HOSE ASSEMBLY	PP3	855
3176 5679 00	HOSE ASSEMBLY	AC5	735
3176 5679 00	HOSE ASSEMBLY	D30	852
3176 5679 00	HOSE ASSEMBLY	2AR16	860
3176 5679 00	HOSE ASSEMBLY	1AR16	739
3176 5679 00	HOSE ASSEMBLY	HB11	854
3176 5679 00	HOSE ASSEMBLY	HB22	854
3176 5679 00	HOSE ASSEMBLY	PP6	855
3176 5679 00	HOSE ASSEMBLY	XF72	43
3176 5679 00	HOSE ASSEMBLY	HB12	151
3176 5679 00	HOSE ASSEMBLY	XF70	858
3176 5679 00	HOSE ASSEMBLY	PP3	93

Part no Detaljnr	Description	Ref no	See page Se sida
3176 5679 00	HOSE ASSEMBLY	PP5	855
3176 5679 00	HOSE ASSEMBLY	HB12	854
3176 5679 00	HOSE ASSEMBLY	PP4	93
3176 5679 00	HOSE ASSEMBLY	HB21	854
3176 5679 00	HOSE ASSEMBLY	HB11	151
3176 5679 00	HOSE ASSEMBLY	PP4	855
3176 5679 00	HOSE ASSEMBLY	AC5	851
3176 5679 00	HOSE ASSEMBLY	HB22	151
3176 5680 00	HOSE ASSEMBLY	J21	854
3176 5680 00	HOSE ASSEMBLY	T90	61
3176 5680 00	HOSE ASSEMBLY	2XF74	155
3176 5680 00	HOSE ASSEMBLY	XP1	43
3176 5680 00	HOSE ASSEMBLY	T90	857
3176 5680 00	HOSE ASSEMBLY	BE2	852
3176 5680 00	HOSE ASSEMBLY	G12	854
3176 5680 00	HOSE ASSEMBLY	RX1	61
3176 5680 00	HOSE ASSEMBLY	G12	197
3176 5680 00	HOSE ASSEMBLY	XP1	858
3176 5680 00	HOSE ASSEMBLY	2XF75	155
3176 5680 00	HOSE ASSEMBLY	1XF74	859
3176 5680 00	HOSE ASSEMBLY	2XF75	861
3176 5680 00	HOSE ASSEMBLY	RRX	61
3176 5680 00	HOSE ASSEMBLY	P90	61
3176 5680 00	HOSE ASSEMBLY	1XF75	155
3176 5680 00	HOSE ASSEMBLY	RRX	856
3176 5680 00	HOSE ASSEMBLY	J22	854
3176 5680 00	HOSE ASSEMBLY	J20	151
3176 5680 00	HOSE ASSEMBLY	2XF74	861
3176 5680 00	HOSE ASSEMBLY	J20	854
3176 5680 00	HOSE ASSEMBLY	J19	854

Part no Detaljnr	Description	Ref no	See page Se sida
3176 5680 00	HOSE ASSEMBLY	1XF74	155
3176 5680 00	HOSE ASSEMBLY	1XF75	859
3176 5680 00	HOSE ASSEMBLY	P90	856
3176 5680 00	HOSE ASSEMBLY	J22	151
3176 5680 00	HOSE ASSEMBLY	BE1	505
3176 5680 00	HOSE ASSEMBLY	BE2	505
3176 5680 00	HOSE ASSEMBLY	RX1	856
3176 5680 00	HOSE ASSEMBLY	BE1	852
3176 5680 00	HOSE ASSEMBLY	J19	151
3176 5680 00	HOSE ASSEMBLY	J21	151
3176 5681 00	HOSE ASSEMBLY	BRL2	505
3176 5681 00	HOSE ASSEMBLY	P15	855
3176 5681 00	HOSE ASSEMBLY	P15	153
3176 5681 00	HOSE ASSEMBLY	BRL2	852
3176 5682 00	HOSE ASSEMBLY	L20	855
3176 5682 00	HOSE ASSEMBLY	L20	425
3176 5685 00	HOSE ASSEMBLY	FE2	852
3176 5685 00	HOSE ASSEMBLY	BD2	851
3176 5685 00	HOSE ASSEMBLY	BRL6	505
3176 5685 00	HOSE ASSEMBLY	BRR6	852
3176 5685 00	HOSE ASSEMBLY	FE1	505
3176 5685 00	HOSE ASSEMBLY	BRL6	852
3176 5685 00	HOSE ASSEMBLY	KV3	153
3176 5685 00	HOSE ASSEMBLY	KV4	153
3176 5685 00	HOSE ASSEMBLY	BRR6	505
3176 5685 00	HOSE ASSEMBLY	FE2	505
3176 5685 00	HOSE ASSEMBLY	F14	853
3176 5685 00	HOSE ASSEMBLY	F9	197
3176 5685 00	HOSE ASSEMBLY	BD2	215
3176 5685 00	HOSE ASSEMBLY	KV3	854

Part no Detaljnr	Description	Ref no	See page Se sida
3176 5685 00	HOSE ASSEMBLY	KV4	855
3176 5685 00	HOSE ASSEMBLY	F14	43
3176 5685 00	HOSE ASSEMBLY	F9	853
3176 5685 00	HOSE ASSEMBLY	FE1	852
3176 5687 00	HOSE ASSEMBLY	2XS4	155
3176 5687 00	HOSE ASSEMBLY	2XS1	862
3176 5687 00	HOSE ASSEMBLY	T78	857
3176 5687 00	HOSE ASSEMBLY	1AR15	739
3176 5687 00	HOSE ASSEMBLY	2AR15	739
3176 5687 00	HOSE ASSEMBLY	P30	43
3176 5687 00	HOSE ASSEMBLY	T78	43
3176 5687 00	HOSE ASSEMBLY	2AR15	860
3176 5687 00	HOSE ASSEMBLY	2XS1	154
3176 5687 00	HOSE ASSEMBLY	1XS1	860
3176 5687 00	HOSE ASSEMBLY	1AR15	858
3176 5687 00	HOSE ASSEMBLY	1XS1	154
3176 5687 00	HOSE ASSEMBLY	P30	856
3176 5687 00	HOSE ASSEMBLY	2XS4	862
3176 5864 00	HOSE ASSEMBLY	1D20	154
3176 5864 00	HOSE ASSEMBLY	1D20	858
3176 5864 00	HOSE ASSEMBLY	2D20	860
3176 5864 00	HOSE ASSEMBLY	2D20	154
3176 6036 00	NIPPLE	80	411
3176 6036 00	NIPPLE	34	842
3176 6037 00	NIPPLE	8	834
3176 6039 00	NIPPLE	23	838
3176 6100 00	PLATE	21	715
3176 6101 00	PLATE	18	715
3176 6101 00	PLATE	14	157
3176 6126 00	PLATE	34	126

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6301 00	NIPPLE	9	835
3176 6336 00	HOSE ASSEMBLY	AR11	851
3176 6336 00	HOSE ASSEMBLY	D32	852
3176 6336 00	HOSE ASSEMBLY	D32	93
3176 6336 00	HOSE ASSEMBLY	AJ3	43
3176 6336 00	HOSE ASSEMBLY	AJ3	851
3176 6336 00	HOSE ASSEMBLY	AR13	851
3176 6336 00	HOSE ASSEMBLY	AR11	43
3176 6336 00	HOSE ASSEMBLY	AR13	43
3176 6337 00	HOSE ASSEMBLY	T92	857
3176 6337 00	HOSE ASSEMBLY	T92	61
3176 6337 00	HOSE ASSEMBLY	KV2	153
3176 6337 00	HOSE ASSEMBLY	KV2	854
3176 6344 00	NIPPLE	36	212
3176 6344 00	NIPPLE	26	839
3176 6344 00	NIPPLE	7	833
3176 6348 00	NIPPLE	27	419
3176 6348 00	NIPPLE	7	833
3176 6348 00	NIPPLE	25	211
3176 6349 00	NIPPLE	7	833
3176 6351 00	NIPPLE	8	331
3176 6351 00	NIPPLE	2	623
3176 6351 00	NIPPLE	26	839
3176 6351 00	NIPPLE	28	211
3176 6352 00	NIPPLE	26	839
3176 6353 00	NIPPLE	18	837
3176 6483 00	NIPPLE	9	835
3176 6487 00	HOSE ASSEMBLY	2RX1	861
3176 6487 00	HOSE ASSEMBLY	1RX1	63
3176 6487 00	HOSE ASSEMBLY	1LUB	859
3176 6487 00	HOSE ASSEMBLY	AR1LS 1	623
3176 6487 00	HOSE ASSEMBLY	1LUB	727
3176 6487 00	HOSE ASSEMBLY	AR1LS 1	851
3176 6487 00	HOSE ASSEMBLY	2RX1	63
3176 6487 00	HOSE ASSEMBLY	1RX1	859
3176 6495 00	NIPPLE	1	832
3176 6496 00	NIPPLE	44	845
3176 6496 00	NIPPLE	12	623
3176 6497 00	NIPPLE	21	611
3176 6497 00	NIPPLE	44	845
3176 6498 00	NIPPLE	44	845
3176 6498 00	NIPPLE	79	411
3176 6499 00	NIPPLE	4	327
3176 6499 00	NIPPLE	44	845
3176 6500 00	NIPPLE	44	845
3176 6501 00	NIPPLE	34	212
3176 6501 00	NIPPLE	3A	832
3176 6502 00	NIPPLE	3A	832
3176 6503 00	NIPPLE	3A	832
3176 6504 00	NIPPLE	3A	832
3176 6504 00	NIPPLE	76	212
3176 6505 00	NIPPLE	53	212
3176 6505 00	NIPPLE	3B	832
3176 6506 00	NIPPLE	3A	832
3176 6507 00	NIPPLE	3A	832
3176 6508 00	NIPPLE	3A	832
3176 6509 00	NIPPLE	3A	832
3176 6510 00	NIPPLE	7	834

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6511 00	NIPPLE	47	212
3176 6511 00	NIPPLE	7	834
3176 6511 00	NIPPLE	26	419
3176 6512 00	NIPPLE	7	834
3176 6512 00	NIPPLE	262	543
3176 6512 00	NIPPLE	6	633
3176 6513 00	NIPPLE	23	611
3176 6513 00	NIPPLE	7	834
3176 6514 00	NIPPLE	261	543
3176 6514 00	NIPPLE	7	834
3176 6514 00	NIPPLE	1	633
3176 6515 00	NIPPLE	82	213
3176 6515 00	NIPPLE	4	563
3176 6515 00	NIPPLE	7	834
3176 6516 00	NIPPLE	7	834
3176 6517 00	NIPPLE	7	834
3176 6517 00	NIPPLE	75	212
3176 6518 00	NIPPLE	7	834
3176 6519 00	NIPPLE	7	834
3176 6520 00	NIPPLE	7	834
3176 6521 00	NIPPLE	7	834
3176 6522 00	NIPPLE	14	836
3176 6523 00	NIPPLE	14	836
3176 6524 00	NIPPLE	14	836
3176 6525 00	NIPPLE	14	836
3176 6526 00	NIPPLE	14	836
3176 6527 00	NIPPLE	14	836
3176 6527 00	NIPPLE	51	411
3176 6528 00	NIPPLE	14	553
3176 6528 00	NIPPLE	14	836

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6529 00	NIPPLE	14	836
3176 6530 00	NIPPLE	9	835
3176 6531 00	NIPPLE	9	835
3176 6532 00	NIPPLE	9	835
3176 6533 00	NIPPLE	9	835
3176 6534 00	NIPPLE	9	835
3176 6535 00	NIPPLE	9	835
3176 6535 00	NIPPLE	5	359
3176 6536 00	NIPPLE	9	835
3176 6537 00	NIPPLE	9	835
3176 6538 00	NIPPLE	9	835
3176 6539 00	NIPPLE	70	411
3176 6539 00	NIPPLE	10	836
3176 6540 00	NIPPLE	10	836
3176 6542 00	NIPPLE	18	837
3176 6543 00	NIPPLE	18	837
3176 6544 00	NIPPLE	18	838
3176 6547 00	NIPPLE	24	839
3176 6548 00	NIPPLE	24	839
3176 6549 00	NIPPLE	24	839
3176 6549 00	NIPPLE	14	211
3176 6549 00	NIPPLE	78	411
3176 6550 00	ELBOW	52	411
3176 6550 00	ELBOW	24	839
3176 6550 00	ELBOW	3	327
3176 6551 00	ELBOW	24	839
3176 6552 00	NIPPLE	27	840
3176 6553 00	NIPPLE	27	840
3176 6554 00	NIPPLE	27	840
3176 6555 00	NIPPLE	27	840

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6556 00	NIPPLE	27	840
3176 6557 00	NIPPLE	29	840
3176 6558 00	NIPPLE	29	840
3176 6559 00	NIPPLE	29	840
3176 6560 00	NIPPLE	4	359
3176 6560 00	NIPPLE	29	840
3176 6561 00	NIPPLE	29	840
3176 6562 00	NIPPLE	31	842
3176 6562 00	NIPPLE	53	411
3176 6563 00	NIPPLE	26	839
3176 6564 00	NIPPLE	26	839
3176 6564 00	NIPPLE	24	611
3176 6564 00	NIPPLE	39	212
3176 6565 00	NIPPLE	2	563
3176 6565 00	NIPPLE	26	839
3176 6566 00	NIPPLE	3	359
3176 6566 00	NIPPLE	26	839
3176 6567 00	NIPPLE	26	839
3176 6568 00	NIPPLE	26	839
3176 6569 00	NIPPLE	26	839
3176 6570 00	NIPPLE	28	840
3176 6571 00	ELBOW	28	840
3176 6572 00	NIPPLE	28	840
3176 6574 00	NIPPLE	33	842
3176 6575 00	NIPPLE	33	842
3176 6576 00	NIPPLE	30	212
3176 6576 00	NIPPLE	34	842
3176 6577 00	NIPPLE	34	842
3176 6578 00	NIPPLE	34	842
3176 6579 00	NIPPLE	36	843
3176 6580 00	NIPPLE	36	843
3176 6581 00	NIPPLE	36	843
3176 6582 00	NIPPLE	36	843
3176 6583 00	NIPPLE	36	843
3176 6584 00	NIPPLE	38	843
3176 6585 00	NIPPLE	38	843
3176 6585 00	NIPPLE	36	843
3176 6586 00	NIPPLE	36	843
3176 6586 00	NIPPLE	38	843
3176 6587 00	NIPPLE	38	843
3176 6588 00	NIPPLE	38	843
3176 6589 00	NIPPLE	40	844
3176 6590 00	NIPPLE	35	842
3176 6590 00	NIPPLE	15	211
3176 6590 00	NIPPLE	82	411
3176 6590 00	NIPPLE	48	212
3176 6591 00	NIPPLE	35	842
3176 6592 00	NIPPLE	35	842
3176 6593 00	NIPPLE	37	843
3176 6594 00	NIPPLE	37	843
3176 6595 00	NIPPLE	37	843
3176 6596 00	NIPPLE	37	843
3176 6597 00	NIPPLE	37	843
3176 6598 00	NIPPLE	39	843
3176 6599 00	NIPPLE	39	843
3176 6600 00	NIPPLE	39	843
3176 6601 00	NIPPLE	39	843
3176 6602 00	NIPPLE	39	843
3176 6603 00	NIPPLE	41	844
3176 6604 00	NIPPLE	41	844

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6605 00	NIPPLE	41	844
3176 6612 00	NIPPLE	26	839
3176 6613 00	CAP NUT	48	845
3176 6614 00	CAP NUT	48	845
3176 6615 00	CAP NUT	33	212
3176 6615 00	CAP NUT	48	845
3176 6616 00	CAP NUT	48	845
3176 6618 00	CAP NUT	48	845
3176 6619 00	NIPPLE	7	833
3176 6620 00	NIPPLE	7	833
3176 6633 00	NIPPLE	1	832
3176 6634 00	NIPPLE	1	832
3176 6635 00	NIPPLE	1	832
3176 6636 00	NIPPLE	44	845
3176 6637 00	NIPPLE	44	845
3176 6638 00	NIPPLE	44	845
3176 6639 00	NIPPLE	3A	832
3176 6640 00	NIPPLE	3A	832
3176 6641 00	NIPPLE	3A	832
3176 6642 00	NIPPLE	7	834
3176 6643 00	NIPPLE	7	834
3176 6644 00	NIPPLE	7	834
3176 6645 00	NIPPLE	7	834
3176 6646 00	NIPPLE	7	834
3176 6646 00	NIPPLE	50	212
3176 6647 00	NIPPLE	14	836
3176 6648 00	NIPPLE	14	836
3176 6649 00	NIPPLE	14	836
3176 6650 00	NIPPLE	14	836
3176 6651 00	NIPPLE	9	835
3176 6652 00	NIPPLE	9	835
3176 6653 00	NIPPLE	9	835
3176 6654 00	NIPPLE	9	835
3176 6655 00	NIPPLE	9	835
3176 6656 00	NIPPLE	9	835
3176 6657 00	NIPPLE	10	836
3176 6658 00	NIPPLE	10	836
3176 6659 00	NIPPLE	10	836
3176 6660 00	NIPPLE	24	839
3176 6661 00	NIPPLE	8	827
3176 6661 00	NIPPLE	24	839
3176 6662 00	NIPPLE	24	839
3176 6663 00	NIPPLE	27	840
3176 6664 00	NIPPLE	27	840
3176 6665 00	NIPPLE	29	840
3176 6666 00	NIPPLE	29	840
3176 6667 00	NIPPLE	29	840
3176 6668 00	NIPPLE	23	838
3176 6669 00	NIPPLE	23	838
3176 6670 00	NIPPLE	23	838
3176 6671 00	NIPPLE	26	839
3176 6672 00	NIPPLE	26	839
3176 6673 00	NIPPLE	26	839
3176 6674 00	NIPPLE	26	839
3176 6675 00	NIPPLE	26	839
3176 6675 00	NIPPLE	7	827
3176 6676 00	NIPPLE	28	840
3176 6677 00	NIPPLE	28	840
3176 6678 00	NIPPLE	28	840
3176 6679 00	NIPPLE	33	842

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6680 00	NIPPLE	33	842
3176 6681 00	NIPPLE	33	842
3176 6682 00	NIPPLE	34	842
3176 6683 00	NIPPLE	34	842
3176 6684 00	NIPPLE	34	842
3176 6687 00	NIPPLE	38	843
3176 6688 00	NIPPLE	38	843
3176 6689 00	NIPPLE	38	843
3176 6690 00	NIPPLE	35	842
3176 6691 00	NIPPLE	35	842
3176 6692 00	NIPPLE	35	842
3176 6693 00	NIPPLE	37	843
3176 6694 00	NIPPLE	37	843
3176 6695 00	NIPPLE	39	844
3176 6696 00	NIPPLE	39	844
3176 6697 00	NIPPLE	39	844
3176 6698 00	PLUG	50	846
3176 6699 00	PLUG	50	846
3176 6700 00	PLUG	50	846
3176 6701 00	CAP	51	846
3176 6702 00	CAP	51	846
3176 6703 00	CAP	51	846
3176 6708 00	NIPPLE	6	833
3176 6787 00	CAP NUT	48	845
3176 6788 00	CAP NUT	51	212
3176 6788 00	CAP NUT	48	845
3176 6789 00	CAP NUT	48	845
3176 6815 00	HOSE NIPPLE	6	827
3176 6854 00	HOSE ASSEMBLY	PP7	93
3176 6854 00	HOSE ASSEMBLY	2XP1	862

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6854 00	HOSE ASSEMBLY	PP8	93
3176 6854 00	HOSE ASSEMBLY	2AR13	155
3176 6854 00	HOSE ASSEMBLY	2AR11	860
3176 6854 00	HOSE ASSEMBLY	2AR13	860
3176 6854 00	HOSE ASSEMBLY	PP11	93
3176 6854 00	HOSE ASSEMBLY	AJ4	61
3176 6854 00	HOSE ASSEMBLY	PP11	855
3176 6854 00	HOSE ASSEMBLY	PP7	855
3176 6854 00	HOSE ASSEMBLY	PP8	855
3176 6854 00	HOSE ASSEMBLY	2AR11	155
3176 6854 00	HOSE ASSEMBLY	AJ4	851
3176 6854 00	HOSE ASSEMBLY	2XP1	154
3176 6856 00	HOSE ASSEMBLY	AC1	851
3176 6856 00	HOSE ASSEMBLY	AC1	735
3176 6859 00	HOSE ASSEMBLY	FL1	505
3176 6859 00	HOSE ASSEMBLY	FL2	505
3176 6859 00	HOSE ASSEMBLY	FL2	853
3176 6859 00	HOSE ASSEMBLY	FL1	853
3176 6860 00	HOSE ASSEMBLY	1XS3	154
3176 6860 00	HOSE ASSEMBLY	1XS3	860
3176 6861 00	HOSE ASSEMBLY	T19	857
3176 6861 00	HOSE ASSEMBLY	T15	153
3176 6861 00	HOSE ASSEMBLY	T15	857
3176 6861 00	HOSE ASSEMBLY	T19	153
3176 6862 00	HOSE ASSEMBLY	TF1	856
3176 6862 00	HOSE ASSEMBLY	TF1	189
3176 6972 00	HOSE ASSEMBLY	D1	641
3176 6972 00	HOSE ASSEMBLY	D1	852
3176 6975 00	HOSE ASSEMBLY	BD1	215
3176 6975 00	HOSE ASSEMBLY	KV1	153

Part no Detaljnr	Description	Ref no	See page Se sida
3176 6975 00	HOSE ASSEMBLY	KV1	854
3176 6975 00	HOSE ASSEMBLY	BD1	851
3176 6981 00	NIPPLE	4	832
3176 6983 00	NIPPLE	6	833
3176 7058 00	NIPPLE	10	836
3176 7071 00	NIPPLE	43	844
3176 7131 00	HOSE ASSEMBLY	D7	852
3176 7131 00	HOSE ASSEMBLY	D7	153
3176 7304 00	NIPPLE	7	834
3176 7319 00	NIPPLE	4	331
3176 7319 00	NIPPLE	5	833
3176 7336 00	NIPPLE	3B	832
3176 7337 00	NIPPLE	52	212
3176 7337 00	NIPPLE	3A	832
3176 7338 00	NIPPLE	3A	832
3176 7339 00	NIPPLE	3A	832
3176 7340 00	NIPPLE	4	833
3176 7341 00	NIPPLE	4	833
3176 7342 00	NIPPLE	14	836
3176 7358 00	U-BOLT	18	387
3176 7449 00	HOSE ASSEMBLY	P31	856
3176 7449 00	HOSE ASSEMBLY	1XF73	155
3176 7449 00	HOSE ASSEMBLY	1XF73	859
3176 7449 00	HOSE ASSEMBLY	1XS4	154
3176 7449 00	HOSE ASSEMBLY	2D2	154
3176 7449 00	HOSE ASSEMBLY	1D2	154
3176 7449 00	HOSE ASSEMBLY	1D2	858
3176 7449 00	HOSE ASSEMBLY	1XS4	860
3176 7449 00	HOSE ASSEMBLY	P31	43
3176 7449 00	HOSE ASSEMBLY	2D2	860

Part no Detaljnr	Description	Ref no	See page Se sida
3176 7457 00	HOSE ASSEMBLY	T81	43
3176 7457 00	HOSE ASSEMBLY	T80	43
3176 7457 00	HOSE ASSEMBLY	T81	857
3176 7457 00	HOSE ASSEMBLY	T80	857
3176 7457 00	HOSE ASSEMBLY	2BR2	215
3176 7457 00	HOSE ASSEMBLY	2BR2	860
3176 7570 00	PLATE	88	103
3176 7572 00	PLATE	3	157
3176 7573 01	PLATE	6	157
3176 7573 02	PLATE	7	157
3176 7574 00	PLATE	78	173
3176 7575 00	PLATE	13	157
3176 7606 00	POLYAMIDE HOSE	14	715
3176 7644 00	HOSE ASSEMBLY	J51	151
3176 7644 00	HOSE ASSEMBLY	J61	151
3176 7644 00	HOSE ASSEMBLY	J51	854
3176 7644 00	HOSE ASSEMBLY	J62	151
3176 7644 00	HOSE ASSEMBLY	J52	854
3176 7644 00	HOSE ASSEMBLY	J61	854
3176 7644 00	HOSE ASSEMBLY	J62	854
3176 7644 00	HOSE ASSEMBLY	J52	151
3176 7703 00	NIPPLE	6	833
3176 7707 00	NIPPLE	6	833
3176 7707 00	NIPPLE	11	211
3176 7757 00	NIPPLE	19	838
3176 7767 00	NIPPLE	18	838
3176 7851 00	NIPPLE	15	837
3176 7872 00	ELBOW NIPPLE	23	838
3176 7873 00	NIPPLE	23	838
3176 7922 00	FLANGE HALF	2	117

Part no Detaljnr	Description	Ref no	See page Se sida
3176 7968 00	NIPPLE	55	847
3176 7969 00	NIPPLE	55	848
3176 7970 00	NIPPLE	55	848
3176 8026 00	NIPPLE	3A	832
3176 8027 00	NIPPLE	3A	832
3176 8028 00	NIPPLE	44	845
3176 8029 00	CAP	51	846
3176 8043 00	NIPPLE	14	837
3176 8060 00	END PIECE	3	37
3176 8076 00	NIPPLE	6	833
3176 8077 00	NIPPLE	6	833
3176 8078 00	NIPPLE	6	833
3176 8120 00	NIPPLE	18	838
3176 8251 00	NIPPLE	3A	832
3176 8264 00	FLOW CONT.VALVE	35	195
3176 8264 00	FLOW CONT.VALVE	32	195
3176 8266 00	WIRE MESH HOSE	5	763
3176 8267 00	WIRE MESH HOSE	5	805
3176 8270 00	NIPPLE	19	838
3176 8271 00	NIPPLE	9	835
3176 8289 00	PLUG	50	846
3176 8292 00	NIPPLE	15	837
3176 8377 00	SHUTTLE VALVE	75	126
3176 8377 00	SHUTTLE VALVE	74	126
3176 8377 00	SHUTTLE VALVE	11	157
3176 8402 00	NIPPLE	8	834
3176 8424 00	NIPPLE	45	845
3176 8489 00	NIPPLE	6	331
3176 8489 00	NIPPLE	26	211
3176 8489 00	NIPPLE	19	838
3176 8490 00	NIPPLE	19	838
3176 8505 00	RESTRICTION	27	66
3176 8505 00	RESTRICTION	74	173
3176 8505 00	RESTRICTION	28	66
3176 8695 00	PRESSURE GAUGE	18	14
3176 8711 00	NIPPLE	11	836
3176 8872 00	NIPPLE	11	836
3176 8880 00	HOSE ASSEMBLY	LU	735
3176 8880 00	HOSE ASSEMBLY	LU	855
3176 8927 00	NIPPLE	47A	845
3176 8972 00	NIPPLE	22	838
3176 8973 00	NIPPLE	22	838
3177 0002 17	OIL PLUG	1	305
3177 0002 18	GASKET	5	305
3177 0002 19	GENERATOR	8	305
3177 0013 01	DISK		97
3177 0060 01	ROLLER	2	783
3177 0060 01	ROLLER	2	825
3177 0074 00	BEARING BUSHING	2	475
3177 0074 01	BEARING BUSHING	2	443
3177 0074 13	CROSSING NIPPLE	58	411
3177 3012 00	NIPPLE	15	837
3177 3016 00	COUPLING	50	126
3177 3016 00	COUPLING	34	195
3177 3016 00	COUPLING	85	126
3177 3016 00	COUPLING	52	126
3177 3016 00	COUPLING	17	211
3177 3016 00	COUPLING	66	126
3177 3016 00	COUPLING	65	126
3177 3016 00	COUPLING	51	126

Part no Detaljnr	Description	Ref no	See page Se sida
3177 3016 00	COUPLING	56	126
3177 3016 00	COUPLING	30	14
3177 3016 00	COUPLING	30	195
3177 3023 00	DIRECTION VALVE	48	53
3177 3023 35	BELLOW	35	55
3177 3023 90	SEALING SET	-	55
3177 3025 00	NIPPLE	19	838
3177 3032 00	PRESSURE GAUGE	14	14
3177 3032 00	PRESSURE GAUGE	33	126
3177 3032 00	PRESSURE GAUGE	16	14
3177 3045 00	NIPPLE	26	839
3177 3046 00	NIPPLE	26	840
3177 3046 00	NIPPLE	1	563
3177 3046 00	NIPPLE	21	211
3177 3047 00	ADAPTER SLEEVE	49A	845
3177 3054 00	NIPPLE	5	833
3177 3063 00	NIPPLE	10	836
3177 3064 00	NIPPLE	3A	832
3177 3068 00	NIPPLE	20	211
3177 3068 00	NIPPLE	5	833
3177 3070 00	NIPPLE	3	723
3177 3070 00	NIPPLE	3	725
3177 3070 00	NIPPLE	15	837
3177 3073 06	SAE-FLANGE	2	126
3177 3077 00	ASSEMBLY PLATE	62	53
3177 3077 00	ASSEMBLY PLATE	95	103
3177 3092 55	COIL	2	123
3177 3092 56	SEAL KIT	3	123
3177 3092 57	NUT	1	123
3177 3092 88	DIRECTION VALVE	94	103

Part no Detaljnr	Description	Ref no	See page Se sida
3177 3095 00	NIPPLE	35	843
3177 3107 00	NIPPLE	19	838
3177 3108 00	ADAPTER SLEEVE	49A	846
3177 3126 03	FLOW CONT.VALVE	12	157
3177 3132 00	NIPPLE	19	838
3177 3136 00	NIPPLE	15	837
3177 3147 00	PRESSURE GAUGE	15	14
3177 3156 07	DIRECTION VALVE	61	53
3177 3157 04	COVER	4	59
3177 3157 09	COVER	9	59
3177 3157 12	BUSHING	12	59
3177 3157 40	WASHER	60	59
3177 3157 41	SPRING	71	59
3177 3157 42	SPRING	72	59
3177 3157 47	RESTRICTION	186	59
3177 3157 90	O-RING SET		59
3177 3173 01	PRESS.REL.VALVE	31	195
3177 3178 00	NIPPLE	2	832
3177 3190 00	NIPPLE	28	840
3177 3195 00	NIPPLE	27	840
3177 3197 00	CAP	51	846
3177 5021 00	PRESSURE GAUGE	1	725
3177 5031 00	PRESSURE GAUGE	1	723
3177 5048 00	BALL COCK	24	14
3214 0181 00	MOUNTING RAIL	8	281
3214 0181 00	MOUNTING RAIL	8	283
3214 0181 00	MOUNTING RAIL	8	295
3214 0181 00	MOUNTING RAIL	2	797
3214 0181 00	MOUNTING RAIL	8	707
3214 7391 00	DOUBLE CH.VALVE	51	53

Part no Detaljnr	Description	Ref no	See page Se sida
3214 7669 81	FLOW REGULATOR	5	126
3214 7669 81	FLOW REGULATOR	35	126
3214 7675 92	SEAL KIT	5	141
3215 7521 00	DRUM	1	763
3215 7521 11	PLATE	3	765
3215 7521 12	BOLT	5	765
3215 9595 00	PRESS.RED.VALVE	21	731
3215 9595 10	ATTACHMENT	558	729
3216 1531 00	FUSE	F100	285
3216 5295 00	GASKET	6	253
3216 7390 00	SYMBOL PLATE	79	103
3216 7882 00	NIPPLE	24	419
3217 0010 02	TRIGGER	11	797
3217 0010 02	TRIGGER	1	279
3217 0010 02	TRIGGER	20	14
3217 0010 02	TRIGGER	S 32	655
3217 0010 06	TRIGGER	1	277
3217 0010 45	LAMP CALOTTE	H 53	653
3217 0010 47	LAMP CALOTTE	H 35	653
3217 0010 47	LAMP CALOTTE	H 36	653
3217 0010 47	LAMP CALOTTE	8	797
3217 0010 47	LAMP CALOTTE	H 65	653
3217 0010 47	LAMP CALOTTE	H 38	653
3217 0010 47	LAMP CALOTTE	1	269
3217 0010 47	LAMP CALOTTE	H 39	653
3217 0010 59	LAMP INSERT	3	269
3217 0010 59	LAMP INSERT	H 35	653
3217 0010 59	LAMP INSERT	9	797
3217 0010 61	LAMP INSERT	H 53	653
3217 0010 72	INTERMED. PART	2	273
3217 0010 72	INTERMED. PART	2	279
3217 0010 72	INTERMED. PART	2	269
3217 0010 72	INTERMED. PART	12	797
3217 0010 72	INTERMED. PART	S 32	655
3217 0010 72	INTERMED. PART	2	277
3217 0010 72	INTERMED. PART	H 35	653
3217 0010 72	INTERMED. PART	20	14
3217 0010 72	INTERMED. PART	21	14
3217 0010 73	CONTACT BLOCK	3	279
3217 0010 73	CONTACT BLOCK	13	797
3217 0010 73	CONTACT BLOCK	20	14
3217 0010 73	CONTACT BLOCK	3	273
3217 0010 73	CONTACT BLOCK	S 32	655
3217 0010 74	CONTACT BLOCK	21	14
3217 0010 74	CONTACT BLOCK	3	277
3217 0010 74	CONTACT BLOCK	4	273
3217 0010 75	SEALING COVER	14	797
3217 0010 75	SEALING COVER	4	277
3217 0010 75	SEALING COVER	4	279
3217 0010 75	SEALING COVER	20	14
3217 0010 87	MUSHROOM PUSHB.	21	14
3217 0011 07	MUSHROOM PUSHB.	1	273
3217 0011 09	EMERG. STOP BOX	9	651
3217 0011 09	EMERG. STOP BOX	6	649
3217 0011 09	EMERG. STOP BOX	1	669
3217 0012 00	PUSH BUTTON	S178	265
3217 0012 05	INDICATION LAMP	H204	265
3217 0012 05	INDICATION LAMP	H208	265
3217 0012 05	INDICATION LAMP	H239	265
3217 0012 05	INDICATION LAMP	H202	265

Part no Detaljnr	Description	Ref no	See page Se sida
3217 0012 05	INDICATION LAMP	H203	265
3217 0012 05	INDICATION LAMP	H201	265
3217 0012 05	INDICATION LAMP	H219	265
3217 0012 05	INDICATION LAMP	H206	265
3217 0012 35	MUSHROOM PUSHB.	S138	265
3217 0012 58	PUSH BUTTON	S186	265
3217 0012 58	PUSH BUTTON	S157	265
3217 3124 00	SHACKLE	23	507
3217 3909 13	HOLDER	14	771
3217 3909 13	HOLDER	14	811
3217 3909 14	NUT	15	771
3217 3909 14	NUT	15	811
3217 3909 19	OIL PLUG	29	811
3217 3909 19	OIL PLUG	29	771
3217 3909 21	BUSHING	24	771
3217 3909 21	BUSHING	24	811
3217 3909 22	SETTING KEY	26	771
3217 3909 22	SETTING KEY	26	811
3217 3909 23	SEAL RING	25	811
3217 3909 23	SEAL RING	25	771
3217 3909 29	COVER	35	812
3217 3909 29	COVER	35	772
3217 3909 80	GEAR HOUSING	3	805
3217 3909 80	GEAR HOUSING	3	763
3217 3909 82	SEALING SET		811
3217 3909 82	SEALING SET		771
3217 3909 83	FRICTION KIT		771
3217 3909 83	FRICTION KIT		811
3217 3909 84	STAND FRAME		771
3217 3909 84	STAND FRAME		811

Part no Detaljnr	Description	Ref no	See page Se sida
3217 3909 85	BEARING SET		811
3217 3909 85	BEARING SET		771
3217 3910 24	SEAL RING	27	811
3217 3910 24	SEAL RING	27	771
3217 3913 81	HYDRAULIC UNIT	2	763
3217 3913 81	HYDRAULIC UNIT	2	805
3217 3917 01	BUSHING	6	767
3217 3917 01	BUSHING	6	807
3217 3917 02	KEY	7	807
3217 3917 02	KEY	7	767
3217 3921 01	SUPPORT	2	815
3217 3921 05	OUTLET SECTION	4	815
3217 3921 07	BACK-UP RING	6	815
3217 3921 09	NUT	8	815
3217 3921 11	TUBE	9	815
3217 3921 11	TUBE	7	815
3217 3921 13	PIPE	12	815
3217 3921 80	SWIVEL	4	805
3217 5597 04	PROTECT. SHIELD	4	765
3217 5598 01	WHEEL	1	765
3217 5598 02	WHEEL	2	765
3217 5598 80	DRUM	1	805
3217 5599 01	INTERMED.FLANGE	4	807
3217 5599 01	INTERMED.FLANGE	4	767
3217 5977 00	ATTACHMENT	64	53
3217 6148 00	NIPPLE	6	833
3217 6218 00	NIPPLE	4	833
3217 6218 00	NIPPLE	78	103
3217 6359 00	LOCK SHEET	4	775
3217 6359 00	LOCK SHEET	4	817

Part no Detaljnr	Description	Ref no	See page Se sida
3217 6512 01	RESTRICTION	55	212
3217 6513 01	RESTRICTION	17	14
3217 6513 01	RESTRICTION	26	14
3217 6513 01	RESTRICTION	19	14
3217 6513 02	RESTRICTION	13	14
3217 6513 02	RESTRICTION	36	195
3217 6814 00	SHAFT	48	340
3217 6993 00	SCREW	11	393
3217 7310 00	NIPPLE	18	838
3217 7403 00	RESERVOIR	1	721
3217 7403 01	COVER	6	721
3217 7403 80	OIL RESERVOIR	11	715
3217 7471 10	HOSE NIPPLE	1	121
3217 7592 10	HOSE NIPPLE	1	117
3217 8014 01	SEQUENCE VALVE	60	53
3217 8014 01	SEQUENCE VALVE	70	15
3217 8049 30	NIPPLE	2	719
3217 8180 00	HOSE NIPPLE	1	119
3217 8525 02	INTERM. RING	5	129
3217 8661 00	VALVE PLATE	49	53
3217 8667 52	LUBRICAT.PUMP	9	715
3217 8674 00	STRAINER	10	126
3217 8762 00	HYDRAULIC PUMP	1	129
3217 8762 03	SHAFT COUPLING	3	129
3217 8835 56	CONTROL PANEL	15	11
3217 8840 05	THROTTLE VALVE	6	14
3217 8840 05	THROTTLE VALVE	7	14
3217 8840 06	SCREW	4	39
3217 8840 08	RESTRICT. SCREW	1	39
3217 8840 51	DISTRIBUT. PIPE	8	14

Part no Detaljnr	Description	Ref no	See page Se sida
3217 8870 37	HATCH	2	41
3217 8870 40	PANEL FRAME	25	14
3217 8870 41	ATTACHMENT	83	15
3217 8870 42	ATTACHMENT	1	49
3217 8937 01	VALVE BLOCK	3	14
3217 8937 01	VALVE BLOCK	33	195
3217 8937 11	SEAL KIT		35
3217 8937 13	PRESS.REL.CART.	1	35
3217 8937 13	PRESS.REL.CART.	1	139
3217 8937 20	VALVE BLOCK	41	126
3217 8937 21	O-RING	11	141
3217 8937 22	CHECK VALVE	2	141
3217 8937 23	RESTRICTION	8	141
3217 8937 40	VALVE BLOCK	42	126
3217 8945 00	PRESS.REL.VALVE	2	33
3217 8945 00	PRESS.REL.VALVE	8	37
3217 8945 10	PRESS.REL.VALVE	1	33
3217 8945 12	SEAL KIT	-	33
3217 8945 12	SEAL KIT	8	143
3217 8945 13	SEAL KIT	-	33
3217 8945 14	VALVE	4	33
3217 8945 15	PILOT OP.CHECKV	3	33
3217 8946 10	LEVER	27	14
3217 8951 00	PLATE	40	15
3217 8951 01	PLATE	31	731
3217 8951 05	PLATE	73	15
3217 8951 10	PLATE	50	15
3217 8951 11	PLATE	59	53
3217 8951 11	PLATE	44	53
3217 8951 13	PLATE	47	15

Part no Detaljnr	Description	Ref no	See page Se sida
3217 8951 20	PLATE	42	15
3217 8964 07	HYDRAULIC SET	360	193
3217 8964 07	HYDRAULIC SET	360	199
3217 8966 20	PIPE	38	15
3217 8968 00	VALVE BLOCK	2	14
3217 8969 21	HYDRAULIC SET	1	51
3217 8969 40	REAMER SET	84	15
3217 8988 60	ELECTRIC SET	7	737
3217 8993 00	AIR BLOWING	555	729
3217 9034 20	HYDRAULIC MOTOR	1	807
3217 9034 20	HYDRAULIC MOTOR	1	767
3217 9036 02	SAFETY VALVE	8	715
3217 9038 09	O-RING	2	25
3217 9038 09	O-RING	35	29
3217 9038 09	O-RING	2	31
3217 9038 09	O-RING	5	19
3217 9038 09	O-RING	35	21
3217 9038 09	O-RING	35	27
3217 9082 05	PRESS.REL.VALVE	50	53
3217 9082 17	PRESS.REL.VALVE	2	57
3217 9174 07	SEAL KIT		675
3217 9196 00	LIGHTNING	22	14
3217 9203 02	PILOT VALVE	2	131
3217 9203 58	PLUG	4	135
3217 9203 59	O-RING	2	135
3217 9206 11	PUMP UNIT	1	133
3217 9206 12	REG PISTON	2	133
3217 9206 14	PISTON	4	133
3217 9206 15	PUMP HOUSING	5	133
3217 9206 18	SHAFT	8	133

Part no Detaljnr	Description	Ref no	See page Se sida
3217 9206 19	PISTON GUIDE	9	133
3217 9206 22	WASHER	12	133
3217 9206 23	SPRING	13	133
3217 9206 25	ROLLER BEARING	15	133
3217 9206 26	ROLLER BEARING	16	133
3217 9206 27	BEARING PLATE	17	133
3217 9206 30	O-RING	22	133
3217 9206 48	CRADLE	7	133
3217 9206 49	SEAL	20	133
3217 9206 50	LOCK RING	25	133
3217 9206 82	SEAL KIT	-	133
3217 9255 90	WATER PUMP	5	671
3217 9273 00	POLYAMIDE HOSE	16	715
3217 9273 00	POLYAMIDE HOSE	11	719
3217 9277 37	VOLT METER	P 12	655
3217 9295 17	GASKET	1	689
3217 9295 24	CABLE TERMINAL	44	788
3217 9295 25	COVER PLATE	37	788
3217 9295 26	CABLE TERMINAL	63	788
3217 9295 31	FLANGE	2	689
3217 9296 19	O-RING	5	815
3217 9299 05	TIMING RELAY	K 32	654
3217 9299 05	TIMING RELAY	K133	655
3217 9299 06	TIMING RELAY	K107T	753
3217 9311 55	MOTORPROTECTOR	F 6	653
3217 9311 60	MOTORPROTECTOR	F131	673
3217 9311 61	MOTORPROTECTOR	F126	673
3217 9311 65	MOTORPROTECTOR	F 18	653
3217 9311 66	MOTORPROTECTOR	F 19	653
3217 9311 70	AUX. CONTACTS	F131	673

Part no Detaljnr	Description	Ref no	See page Se sida
3217 9311 70	AUX. CONTACTS	F126	673
3217 9311 80	MOTORPROTECTOR	F 20	653
3217 9316 02	SAFETY VALVE	9	405
3217 9316 11	NOZZLE	13	405
3217 9316 14	LOCK WASHER	14	405
3217 9316 18	TRIGGER	6	405
3217 9316 19	GAS CARTRIDGE	7	405
3217 9316 24	CHECK VALVE	10	405
3217 9316 28	ATTACHMENT	5	415
3217 9316 28	ATTACHMENT	8	405
3217 9316 30	BRANCH BLOCK	11	405
3217 9316 42	ATTACHMENT	2	405
3217 9316 44	ATTACHMENT	5	405
3217 9390 01	NOZZLE	2	747
3217 9390 01	NOZZLE	29	715
3217 9401 07	FLANGE	59	684
3217 9504 00	HOSE	99	103
3217 9504 01	HOSE	98	103
3217 9512 02	TRANSFORMER	T 11	655
3217 9553 66	HYDRAULIC PUMP	1	126
3217 9554 10	HYDRAULIC PUMP	2	129
3217 9561 04	ELECTRIC MOTOR	6	671
3217 9578 07	HOSE ASSEMBLY	G12	854
3217 9578 07	HOSE ASSEMBLY	G12	43
3217 9578 10	HOSE ASSEMBLY	G11	854
3217 9578 10	HOSE ASSEMBLY	G10	43
3217 9578 10	HOSE ASSEMBLY	G10	854
3217 9578 10	HOSE ASSEMBLY	G11	43
3217 9583 01	RELAY	K106	265
3217 9583 01	RELAY	K105	265
3217 9583 01	RELAY	K107	753
3217 9583 01	RELAY	K140	265
3217 9583 01	RELAY	K163	655
3217 9583 01	RELAY	K164	655
3217 9583 01	RELAY	K102	265
3217 9583 03	RELAY	K 31	654
3217 9584 20	DIRECTION VALVE	2	145
3217 9584 40	VALVE BLOCK	91	126
3217 9584 42	VALVE BLOCK	1	145
3217 9584 43	RESTRICTION	1	147
3217 9584 44	RESTRICTION	2	147
3217 9613 04	FLANGE	5	803
3217 9655 10	TRANSFORMER	T 72	655
3217 9655 10	TRANSFORMER	T 62	655
3217 9655 22	TRANSFORMER	T 10	655
3217 9656 15	TRANSFORMER	T 16	655
3217 9658 02	HOUR METER	P 76	655
3217 9658 02	HOUR METER	P 66	655
3217 9666 02	EARTHFAULTRELAY	K 10	653
3217 9674 07	BATTERY CHARGER	U158	655
3217 9708 06	PHASE SEQ.RELAY	K 26	653
3217 9766 01	DRUM PUMP	1	419
3217 9766 03	COVER	3	419
3217 9766 10	SWIVEL	7	419
3217 9766 11	EXTENSION	9	419
3217 9766 12	LUBR. VALVE	8	419
3217 9766 13	VALVE		421
3217 9766 14	VALVE		421
3217 9766 15	ADAPTER	48	422
3217 9766 15	ADAPTER	4	419

Part no Detaljnr	Description	Ref no	See page Se sida
3217 9766 16	COVER	10	419
3217 9783 02	HOSE REEL	30	715
3217 9783 02	HOSE REEL	1	747
3217 9783 03	HOSE REEL	5	419
3217 9787 53	RELAY	K 64	654
3217 9787 53	RELAY	K 28	654
3217 9787 53	RELAY	K 74	654
3217 9787 53	RELAY	K 30	654
3217 9788 51	TIMING RELAY	K 61DT	654
3217 9788 51	TIMING RELAY	K 71T	654
3217 9788 51	TIMING RELAY	K 61T	654
3217 9788 51	TIMING RELAY	K 30T	654
3217 9788 51	TIMING RELAY	K 71DT	654
3217 9789 02	TRANSFORMER	T 50	655
3217 9798 61	HEADLIGHT	1	695
3217 9799 22	YOKE	1	697
3217 9799 23	YOKE	2	697
3217 9801 20	CHECK VALVE	29	731
3217 9834 00	DIRECTION VALVE	1	14
3217 9834 01	PULL ROD SET	1	17
3217 9834 05	INLET SECTION	2	17
3217 9834 06	PRESS.REL.VALVE	1	19
3217 9834 07	SEAL KIT	-	19
3217 9834 07	SEAL KIT	16	29
3217 9834 09	SEAL KIT	-	31
3217 9834 09	SEAL KIT	-	17
3217 9834 09	SEAL KIT	-	21
3217 9834 09	SEAL KIT	-	19
3217 9834 09	SEAL KIT	-	27
3217 9834 09	SEAL KIT	-	25
3217 9834 09	SEAL KIT		29
3217 9834 10	CONTROL SET	3	17
3217 9834 11	SEAL HOLDER	3	21
3217 9834 11	SEAL HOLDER	3	27
3217 9834 11	SEAL HOLDER	4	29
3217 9834 12	SEAL KIT	-	21
3217 9834 12	SEAL KIT	-	27
3217 9834 13	COVER	5	27
3217 9834 13	COVER	5	21
3217 9834 14	CHECK VALVE	7	21
3217 9834 14	CHECK VALVE	15	29
3217 9834 14	CHECK VALVE	7	27
3217 9834 15	HOLDER	9	21
3217 9834 15	HOLDER	9	27
3217 9834 16	SCREW	15	27
3217 9834 16	SCREW	15	21
3217 9834 17	SCREW	16	27
3217 9834 17	SCREW	16	21
3217 9834 18	STUD	19	27
3217 9834 18	STUD	19	21
3217 9834 19	NUT	27	27
3217 9834 19	NUT	27	21
3217 9834 20	CENTERING SET	30	21
3217 9834 20	CENTERING SET	30	27
3217 9834 21	CATCH	31	21
3217 9834 21	CATCH	31	27
3217 9834 22	LEVER SET	26	21
3217 9834 22	LEVER SET	26	29
3217 9834 23	LEVER HOLDER	25	21
3217 9834 23	LEVER HOLDER	25	27

Part no Detaljnr	Description	Ref no	See page Se sida
3217 9834 23	LEVER HOLDER	25	29
3217 9834 24	PIN	6	23
3217 9834 25	CIRCLIP	7	23
3217 9834 30	INTERMED. PART	4	17
3217 9834 35	CONTROL SET	5	17
3217 9834 36	LEVER SET	26	27
3217 9834 40	INTERMED. PART	6	17
3217 9834 45	CONTROL SET	7	17
3217 9834 46	SEAL KIT	3	29
3217 9834 47	CATCH	6	29
3217 9834 48	PRESS.REL.VALVE	13	29
3217 9834 49	PRESS.REL.VALVE	17	29
3217 9834 51	COVER	8	17
3217 9834 77	LOCK WASHER	9	23
3217 9834 83	LINK	3	23
3217 9834 84	LOCK NUT	4	23
3217 9834 85	SCREW	5	23
3217 9834 86	SCREW	8	23
3217 9841 11	SWITCH	S 13	655
3217 9841 12	SWITCH	S 51	655
3217 9841 12	SWITCH	S 52	655
3217 9871 00	PULSE UNIT	ECL	653
3217 9873 02	EARTHFAULTRELAY	F 91	653
3217 9876 15	FLANGE	3	683
3217 9880 01	BOX CASING	30	788
3217 9880 02	BOX CASING	31	788
3217 9880 03	GASKET	38	788
3217 9880 04	SLIP RING	13	788
3217 9880 05	BRUSH HOLDER	29	788
3217 9880 06	PIPE	9	788

Part no Detaljnr	Description	Ref no	See page Se sida
3217 9880 40	SLIP RING	53	792
3217 9880 61	LIMIT SWITCH	1	785
3217 9880 81	COMMUTATOR	2	785
3217 9880 85	COLLECTOR KIT	820	759
3217 9881 00	DRAINAGE BLOCK	28	14
3217 9881 10	BRANCH BLOCK	29	14
3217 9882 04	VALVE PLUG	Y216	257
3217 9882 04	VALVE PLUG	5	745
3217 9882 04	VALVE PLUG	5	719
3217 9882 06	VALVE PLUG	W 24:2	687
3217 9882 06	VALVE PLUG	W 24:1	687
3217 9882 06	VALVE PLUG	W 24:3	687
3217 9882 06	VALVE PLUG	W 14	687
3217 9882 14	CABLE COMPLETE	W 26	687
3217 9882 14	CABLE COMPLETE	6	745
3217 9882 18	CABLE COMPLETE	10	755
3217 9897 01	DIODE UNIT	24	263
3217 9904 96	OVERLOAD RELAY	F 70	673
3217 9904 96	OVERLOAD RELAY	F 60	673
3217 9955 30	FLOW GUARD	1	741
3217 9955 30	FLOW GUARD	6	715
3218 2006 65	SEAL KIT		809
3218 2006 65	SEAL KIT		769
3218 2007 58	CONTROL VALVE	1	135
3218 2007 60	SCREW	3	135
3218 2008 28	TANK	1	405
3218 2008 31	SEAL	1	409
3218 2008 32	STEEL WIRE	2	409
3218 2008 69	SHAFT SEAL		675
3222 2778 00	LAMP HOLDER	H08	753

Part no Detaljnr	Description	Ref no	See page Se sida
3222 2778 01	LAMP CALOTTE	H08	753
3222 3026 48	SEAL KIT		139
3222 3048 20	GROUND BRAID	20	797
3222 3048 77	GROUND BRAID	18	753
3222 3048 77	GROUND BRAID	2	295
3222 3048 77	GROUND BRAID	2	707
3222 3048 78	GROUND BRAID	2	681
3222 3048 80	GROUND BRAID	1	681
3222 3097 49	ROPE TENSION	30	595
3222 3104 40	NIPPLE	70	604
3222 3104 54	EXTENDER	71	604
3222 3106 10	SOLENOID	1	219
3222 3106 10	SOLENOID	1	743
3222 3143 65	SOLENOID CARTR.	1	143
3222 3168 52	SIGN	38	604
3222 3264 90	VALVE		165
3222 3264 90	VALVE		179
3222 3264 94	RESTRICTION	10	179
3222 3264 95	SEAL KIT		109
3222 3264 95	SEAL KIT		71
3222 3264 95	SEAL KIT		163
3222 3264 95	SEAL KIT		179
3222 3264 95	SEAL KIT		111
3222 3264 95	SEAL KIT		181
3222 3264 97	NUT SET	5	163
3222 3264 97	NUT SET		71
3222 3264 98	LEVER HOLDER		77
3222 3264 98	LEVER HOLDER		75
3222 3264 98	LEVER HOLDER		167
3222 3264 98	LEVER HOLDER		181
3222 3264 98	LEVER HOLDER		111
3222 3264 98	LEVER HOLDER		169
3222 3264 99	ACTUATOR		111
3222 3264 99	ACTUATOR		77
3222 3264 99	ACTUATOR		75
3222 3264 99	ACTUATOR		181
3222 3265 01	SPRING	7	181
3222 3265 01	SPRING	7	111
3222 3266 76	SEAL KIT		139
3222 3266 77	FLOW REGULATOR	2	139
3222 3266 78	STEERING WH.SET	14	139
3222 3274 10	PULL ROD SET		163
3222 3294 80	SPRING SET	10	167
3222 3294 80	SPRING SET	10	169
3310 4076 00	CAP	11	551
3310 4076 00	CAP	11	549
3315 0195 10	LOCK WASHER	189	573
3315 0195 10	LOCK WASHER	9	625
3315 0195 10	LOCK WASHER	189	547
3315 0195 10	LOCK WASHER	189	542
3455 0402 01	NIPPLE	16	837
3455 0402 02	NIPPLE	16	837
3455 0402 03	NIPPLE	16	837
3455 0402 04	NIPPLE	16	837
3455 0402 05	NIPPLE	16	837
3455 0402 06	NIPPLE	16	837
3455 0402 07	NIPPLE	16	837
3455 0402 08	NIPPLE	16	837
3455 0402 09	NIPPLE	16	837
3455 0402 10	NIPPLE	16	837

Part no Detaljnr	Description	Ref no	See page Se sida
3455 0402 11	NIPPLE	16	837
3455 0402 12	NIPPLE	16	837
3455 0402 13	NIPPLE	16	837
3455 0543 01	NIPPLE	46	845
3455 0543 02	NIPPLE	46	845
3455 0543 03	NIPPLE	46	845
3455 0543 04	NIPPLE	46	845
3455 0543 05	NIPPLE	46	845
3455 0543 06	NIPPLE	46	845
3455 0543 06	NIPPLE	5	319
3455 0543 07	NIPPLE	46	845
3455 0543 08	NIPPLE	46	845
3455 0766 01	NIPPLE	42	844
3455 0766 02	NIPPLE	42	844
3455 0766 03	NIPPLE	42	844
3455 0766 04	NIPPLE	42	844
3455 0766 05	NIPPLE	42	844
3455 0766 06	NIPPLE	42	844
3455 0766 07	NIPPLE	42	844
3455 0766 08	NIPPLE	42	844
3455 0766 09	NIPPLE	42	844
3715 0581 00	NIPPLE	1	832
3715 0584 00	ELBOW NIPPLE	44	212
3715 0584 00	ELBOW NIPPLE	6	623
3715 0584 00	ELBOW NIPPLE	55	411
3715 0584 00	ELBOW NIPPLE	4	723
3715 0584 00	ELBOW NIPPLE	5	331
3715 0584 00	ELBOW NIPPLE	23	838
3715 0584 00	ELBOW NIPPLE	4	725
3715 0585 00	NIPPLE	92	213
3715 0585 00	NIPPLE	23	839
3715 0587 00	NIPPLE	9	835
3715 0588 00	NIPPLE	28	840
3715 0589 00	ELBOW	23	839
3715 0597 00	CAP	49	212
3715 0597 00	CAP	51	846
3715 0598 00	PLUG	50	846
3715 0599 00	PLUG	50	846
3715 0600 00	PLUG	50	846
3715 0819 00	CAP	51	846
3715 0820 00	CAP	6	319
3715 0820 00	CAP	6	327
3715 0820 00	CAP	51	846
3715 0821 00	PLUG	50	846
3715 1505 00	ADAPTER SLEEVE	49A	846
3715 3020 00	ADAPTER SLEEVE	49A	846
3715 3021 00	ADAPTER SLEEVE	49A	846
3715 3022 00	ADAPTER SLEEVE	49A	846
3715 3030 00	ADAPTER SLEEVE	49A	846
4310 0464 00	PLAST.,ST.CABLE	9	285
4330 1016 00	BULLDOG GRIP	10	285
5054 0140 00	PLASTIC TUBING	7	231
5107 1534 00	NIPPLE	1	211
5107 1536 00	HOSE ASSEMBLY	SU1	212
5107 1536 00	HOSE ASSEMBLY	SU1	856
5112 0000 29	JUNCTION BOX	1	797
5112 0000 30	APPARATUS PANEL	2	795
5112 0001 83	GASKET	5	361
5112 0007 77	SAFETY BELT	2	357
5112 0007 80	CHAIR COMPL.	5	355

Part no Detaljnr	Description	Ref no	See page Se sida
5112 0020 41	JUNCTION BOX	X2	259
5112 0020 42	DRILLED BOX	1	263
5112 0104 01	JUNCTION BOX	X2	257
5112 0104 04	SWITCH PANEL	X5	257
5112 0104 09	DRIVING LIGHT.	2	257
5112 0104 17	EL EQUIPM.MOTOR	1	257
5112 0105 24	DRIVERS CHAIR	1	357
5112 0105 41	CABLE COMPLETE	W501	285
5112 0105 48	JUNCTION BOX	X8	257
5112 0105 50	JUNCTION BOX	X9	257
5112 0105 93	OIL LEVEL PLUG	28	771
5112 0105 93	OIL LEVEL PLUG	28	811
5112 0107 19	ATTACHMENT	69	411
5112 0115 67	CABLE COMPLETE	7	297
5112 0115 67	CABLE COMPLETE	H121	257
5112 1423 00	SUCT.-RETURN P.	11	231
5112 1579 00	PROTECTION COIL	W188	259
5112 1758 00	SLEEVE INSERT	W189	259
5112 1886 00	BOLT SET	3	315
5112 1933 80	HYDR. CYLINDER	54	212
5112 2021 00	FLOOR RACK	3	333
5112 2051 00	SILENCER	1	365
5112 2083 81	LEVEL SENSOR	13	231
5112 2086 00	HOLDER	18	286
5112 2088 00	CABLE COMPLETE	W533	285
5112 2093 00	RING PIN	47	245
5112 2163 00	VALVE HOUSING	5	337
5112 2163 80	LUBR. VALVE	1	335
5112 2164 00	HIGH POWER PIPE	8	335
5112 2185 00	CUSHION	8	379

Part no Detaljnr	Description	Ref no	See page Se sida
5112 2215 00	SEAL	32	266
5112 2216 00	GROUND BRAID	22	286
5112 2216 04	EARTH TERMINAL	27	266
5112 2216 04	EARTH TERMINAL	6	295
5112 2216 04	EARTH TERMINAL	6	707
5112 2216 04	EARTH TERMINAL	20	263
5112 2216 04	EARTH TERMINAL	6	753
5112 2320 00	PLATFORM	9	333
5112 2322 00	DAMPER	11	333
5112 2325 00	WAIST SHAFT	2	339
5112 2326 00	SHAFT	8	339
5112 2328 00	BUSHING	1	359
5112 2331 80	FUEL TANK	4	229
5112 2331 81	FUEL TANK	1	231
5112 2335 08	RIM COLLAR	2	371
5112 2335 09	LOCK RING	4	371
5112 2335 10	RING	3	371
5112 2335 80	RIM COMPL.	1	369
5112 2336 00	CLAMP	4	379
5112 2337 00	ANGLE BRACKET	7	379
5112 2338 00	TANK COVER	3	233
5112 2338 07	FILLER PIPE	18	231
5112 2339 00	GASKET	4	233
5112 2340 00	COVER	6	231
5112 2341 00	GASKET	5	231
5112 2347 80	PILOT VALVE	88	213
5112 2347 92	SEALING SET		225
5112 2348 80	VALVE BLOCK	89	213
5112 2348 91	SEAL KIT		227
5112 2348 93	ASSEMBLY SET	9	379

Part no Detaljnr	Description	Ref no	See page Se sida
5112 2349 80	STEERING SHANK	5	379
5112 2350 15	STEERING KPL	1	379
5112 2360 06	PISTON ROD	5	349
5112 2360 80	HYDR. CYLINDER	51	340
5112 2363 00	SHAFT	50	340
5112 2368 00	CABLE COMPLETE	G100	285
5112 2387 00	STAY	48	245
5112 2396 84	TRUNNION BLOCK	3	321
5112 2403 00	FENDER	19	339
5112 2404 00	DAMPER BIT	15	339
5112 2405 06	RUBBER PROTEC	49	245
5112 2405 08	RUBBER PROTEC	14	339
5112 2425 00	EDGE LIST	1	333
5112 2447 00	YOKE	6	333
5112 2479 00	NIPPLE	7	249
5112 2493 00	PLATE	42	267
5112 2523 00	CUSHION	26	229
5112 2524 00	COVER	21	229
5112 2525 00	BUSHING	22	229
5112 2531 04	PROTECTION	14	249
5112 2579 00	BAND	6	365
5112 2595 00	PRESSURE SWITCH	9	211
5112 2607 00	KNOB	7	255
5112 2608 00	RUBBER STROP	8	255
5112 2610 00	BATTERY COVER	9	255
5112 2646 00	U-BOLT	19	231
5112 2710 00	ATTACHM. PLATE	17	229
5112 2710 00	ATTACHM. PLATE	53	340
5112 2731 24	BATTERY SHELF	10	255
5112 2863 00	RELAY SHELF	10	266

Part no Detaljnr	Description	Ref no	See page Se sida
5112 2865 00	GEAR CONTROL	S137	265
5112 2877 19	HYDR. SYSTEM	13	209
5112 2877 37	HYDR. SYSTEM	1	209
5112 2877 71	PRESSURE SWITCH	9	299
5112 2878 05	BRAKE VALVE	32	212
5112 2878 84	SEAL KIT		137
5112 2879 00	CUSHION	11	266
5112 2909 00	COVER	46	267
5112 2915 00	ACCUMULATOR	41	212
5112 2921 01	PRESSURE SWITCH	6	211
5112 2931 00	LEVEL-TEMP.IND.	8	249
5112 2931 01	PRESSURE SCREW	2	251
5112 2931 02	THERMOMETER	3	251
5112 2931 03	PRESSURE SCREW	4	251
5112 2931 90	SPARE PARTS SET	5	251
5112 2943 00	PEDAL	2	313
5112 2946 01	RUBBER BUFFER	58	246
5112 2949 00	PROTECT. COVER	7	211
5112 2949 01	PROTECT. COVER	11	299
5112 2949 01	PROTECT. COVER	31	212
5112 3000 35	ATTACHM. PLATE	25	339
5112 3000 38	CARDAN PROTECT.	26	339
5112 3000 85	BRACKET	32	229
5112 3000 86	BRACKET	24	229
5112 3000 90	BUSHING	25	229
5112 3001 59	FLANGE SCR.SET	10	301
5112 3001 70	PROTECTION	11	339
5112 3001 71	PROTECTION	13	339
5112 3003 07	LOCK SHEET	3	239
5112 3003 10	FRICTION RING	8	243

Part no Detaljnr	Description	Ref no	See page Se sida
5112 3003 10	FRICTION RING	13	347
5112 3003 15	PIN	6	347
5112 3003 23	NUT	30	239
5112 3003 35	WHEEL BOLT	1	345
5112 3003 35	WHEEL BOLT	1	235
5112 3003 37	PLUG	4	235
5112 3003 37	PLUG	4	345
5112 3003 59	DISK	2	237
5112 3003 60	DISK	4	237
5112 3003 75	BEARING	5	239
5112 3003 77	PIN	13	243
5112 3003 77	PIN	10	347
5112 3003 78	BEARING	5	239
5112 3003 79	BEARING	27	239
5112 3003 80	BEARING	35	239
5112 3005 03	O-RING	3	237
5112 3007 09	FAN BELT	6	305
5112 3007 59	OIL FILTER	3	305
5112 3010 18	SPACER	5	239
5112 3012 00	BUSHING	37	212
5112 3020 43	STUD	6	255
5112 3020 69	SPACER	6	301
5112 3020 70	MOTOR FRAME	1	229
5112 3020 91	HOOK	11	245
5112 3020 92	SPACER	12	245
5112 3020 93	CARDAN SHAFT	14	301
5112 3020 94	CARDAN SHAFT	9	301
5112 3020 95	CARDAN SHAFT	29	339
5112 3021 00	FRAME	1	339
5112 3021 07	COVER	4	377
5112 3021 08	SUPPORT BEAM	54	246
5112 3021 12	HYDRAULIC PUMP	18	211
5112 3021 15	DRIVE SHAFT	11	229
5112 3021 20	CHAIR SUPPORT	6	355
5112 3021 33	PROTECTION	1	311
5112 3021 78	CABLE COMPLETE	W534	285
5112 3021 81	NIPPLE	4	285
5112 3021 84	DRIVE SHAFT	36	339
5112 3021 86	THERMOSTAT	B357	285
5112 3021 88	PRESSURE SWITCH	B355	285
5112 3022 18	HOSE	16	231
5112 3022 87	JACK TUBE	52	340
5112 3022 93	PRESSURE SWITCH	B356	285
5112 3023 43	PRESSURE SWITCH	91	213
5112 3024 33	CONTROL PANEL	1	377
5112 3024 50	ACCUMULAT.BLOCK	42	212
5112 3024 66	BRAKE DISC KIT		235
5112 3024 66	BRAKE DISC KIT		345
5112 3024 68	CROWN WHEEL KIT		235
5112 3024 68	CROWN WHEEL KIT		345
5112 3024 71	PLANET GEAR KIT		235
5112 3024 71	PLANET GEAR KIT		345
5112 3024 73	ATTACHMENT	20	231
5112 3024 98	FILTER	1	323
5112 3024 99	ANGLE POINTER	11	375
5112 3025 14	STEERING SYSTEM	2	375
5112 3025 20	CONTROL PANEL	1	375
5112 3030 99	CABLE COMPLETE	W502	285
5112 3032 14	O-RING	4	239
5112 3032 14	O-RING	1	237

Part no Detaljnr	Description	Ref no	See page Se sida
5112 3032 73	HOLDER	4	319
5112 3038 12	HOUSE	1	329
5112 3038 13	SCREW	2	329
5112 3040 69	THROTTLE WIRE	1	315
5112 3041 80	FILLER SET	15	301
5112 3043 10	FUSE CON. TERM.	29	266
5112 3043 10	FUSE CON. TERM.	15	263
5112 3043 12	MARKING PLATE	16	263
5112 3043 13	BRIDGE CONN.	30	266
5112 3043 15	FUSE	F115	265
5112 3043 15	FUSE	F111	265
5112 3043 15	FUSE	F117	265
5112 3043 15	FUSE	F114	265
5112 3043 15	FUSE	F112	265
5112 3043 15	FUSE	F113	265
5112 3043 16	FUSE	F116	265
5112 3043 16	FUSE	17	263
5112 3043 33	DIODE UNIT	V100	266
5112 3043 40	HEADLIGHT	E101	289
5112 3043 40	HEADLIGHT	E102	289
5112 3044 36	NIPPLE	1	285
5112 3045 87	BRAKING CHOPPER	822	759
5112 3045 99	PLATE	43	267
5112 3046 72	IGNITION LOCK	1	275
5112 3046 73	IGNITON KEY	2	275
5112 3046 91	FLAT PIN SLEEVE	3	275
5112 3046 92	IGNITION LOCK	S139	265
5112 3049 06	CAP	1	407
5112 3049 08	GUIDE DISC	16	405
5112 3049 11	ATTACHMENT	67	411
5112 3049 30	FIRE EXTING.SET	1	403
5112 3052 41	AIR FILTER	1	307
5112 3052 42	FILTER ELEMENT	2	309
5112 3052 43	SAFETY CARTR.	1	309
5112 3052 44	HOLDER	2	307
5112 3052 46	FILT.INDICATOR	3	307
5112 3054 00	PLATE	2	398
5112 3064 12	MUDGUARD	21	339
5112 3064 13	MUDGUARD	7	339
5112 3064 24	MUDGUARD	36	245
5112 3064 25	MUDGUARD	33	245
5112 3064 41	BRACKET	38	245
5112 3072 52	COLLECT. BLOCK	30	731
5112 3100 56	SEAL KIT		217
5112 3101 59	STARTER	9	305
5112 3102 43	ANGLE POINTER	5	381
5112 3102 48	EXHAUST BEND	9	365
5112 3102 60	BY PASS VALVE	8	253
5112 3102 71	TRUNNION BLOCK	1	325
5112 3102 71	TRUNNION BLOCK	7	343
5112 3102 71	TRUNNION BLOCK	2	321
5112 3102 77	GREASE NIPPLE	2	325
5112 3102 78	GREASE NIPPLE	4	325
5112 3102 79	WASHER	4	343
5112 3102 80	NUT	5	343
5112 3102 81	FLANGE FORK	4	321
5112 3102 84	BALL	7	321
5112 3102 85	CLAMP	6	321
5112 3102 86	SPAT	5	321
5112 3102 99	LEVEL GLASS	16	301

Part no Detaljnr	Description	Ref no	See page Se sida
5112 3103 12	OIL LEVEL GLASS	4	329
5112 3104 74	PLANET GEAR HO.	5	235
5112 3104 74	PLANET GEAR HO.	5	345
5112 3109 18	SEAL KIT		343
5112 3109 23	COUNTER FLANGE	3	343
5112 3111 75	CONNECTION	1	327
5112 3120 19	SHOCK VALVE		227
5112 3120 40	FLANGE	6	235
5112 3124 73	BRAKE LIGHT	1	299
5112 3125 40	BULB	2	299
5112 3125 51	PAWL PIN	217	383
5112 3125 53	ATTACHMENT	2	385
5112 3125 54	HOLDER	3	385
5112 3125 58	GUIDE	4	385
5112 3125 60	PROTECTION	218	383
5112 3125 61	PAWL PIN	1	385
5112 3126 05	BRAKE LIGHT	11	257
5112 3133 08	O-RING	8	239
5112 3133 17	O-RING	23	239
5112 3133 49	SEAL	32	239
5112 3133 74	HYDR. RESERVOIR	1	245
5112 3133 75	HYDR.OIL TANK	12	249
5112 3133 98	DRIVERS PLATF.	1	353
5112 3134 22	ATTACHMENT	1	415
5112 3134 38	DRIVERS PLATF.	11	209
5112 3134 78	WIRING	13	693
5112 3134 78	WIRING	E104	289
5112 3134 78	WIRING	E103	289
5112 3134 81	HEADLIGHT	E104	289
5112 3134 81	HEADLIGHT	E103	289

Part no Detaljnr	Description	Ref no	See page Se sida
5112 3134 81	HEADLIGHT	18	693
5112 3135 77	PROTECT. COVER	15	387
5112 3135 82	PROTECT. COVER	16	387
5112 3137 68	FUEL GAUGE	P111	265
5112 3138 08	SWITCH	S308	266
5112 3138 08	SWITCH	S307	266
5112 3139 02	FLASH LIGHT	1	701
5112 3149 72	SET	9	321
5112 3152 90	WASHER	4	353
5112 3152 91	COVER	5	353
5112 3156 06	EL.OIL FILLER	315	11
5112 3162 07	ELECTRIC SET	6	185
5112 3170 31	WASHER	4	683
5112 3170 82	PLATE	19	797
5112 3171 40	TRIGGER	3	405
5112 3177 03	FUSE BOX	A37	285
5112 3183 21	GUIDE SET		788
5112 3183 22	INSULATOR	54	792
5112 3183 23	INSULATOR	55	792
5112 3183 24	BRUSH	56	792
5112 3183 25	PIPE	58	792
5112 3187 75	BOLT	7	239
5112 3187 77	SPRING WASHER	20	239
5112 3187 77	SPRING WASHER	7	243
5112 3187 77	SPRING WASHER	5	347
5112 3187 85	SHIM	24	239
5112 3187 87	O-RING	29	239
5112 3188 03	DIFFERENT.WHEEL	11	243
5112 3188 03	DIFFERENT.WHEEL	7	347
5112 3188 04	SHAFT	15	243

Part no Detaljnr	Description	Ref no	See page Se sida
5112 3188 08	DIFF.SPIDER	9	347
5112 3188 08	DIFF.SPIDER	14	243
5112 3188 09	SHAFT	11	347
5112 3188 09	SHAFT	12	243
5112 3190 14	SIDE WHEEL	12	347
5112 3190 14	SIDE WHEEL	9	243
5112 3190 15	BOLT	6	243
5112 3190 15	BOLT	14	347
5112 3190 16	COVER	31	347
5112 3190 16	COVER	19	243
5112 3190 17	DIFF.CASE	17	243
5112 3190 17	DIFF.CASE	32	347
5112 3190 18	DIFF.KIT		345
5112 3193 84	COVER PLATE	28	239
5112 3197 44	DIFF.KIT		235
5112 3202 37	GASKET	3	363
5112 3202 38	CLAMP	2	363
5112 3202 39	CATALYSER	4	363
5112 3216 64	HYDR.TRANSMISS.	11	301
5112 3217 13	WIRING	W182	259
5112 3217 29	SOLENOID	2	323
5112 3217 46	CONTROL ATTM.	2	315
5112 3217 49	ACCELERATOR	4	315
5112 3217 56	RELIEF VALVE		227
5112 3217 81	JUNCTION BOX	3	703
5112 3217 81	JUNCTION BOX	X12	289
5112 3223 56	WHEEL COMPL.	1	367
5112 3226 16	FILTER	10	305
5112 3226 17	V-BELT	7	305
5112 3228 66	HOLDER	1	317
5112 3228 67	HOLDER	2	317
5112 3228 68	CABLE HOLDER	5	303
5112 3230 50	DIESEL ENGINE	1	303
5112 3230 54	DIESEL ENG.UNIT	1	301
5112 3231 28	EXHAUST SYSTEM	15	209
5112 3231 31	INLET	5	363
5112 3231 32	OUTLET	1	363
5112 3231 33	INLET	2	365
5112 3231 35	EXHAUST HOSE	3	361
5112 3231 37	LOCK NUT	7	361
5112 3231 60	AIR INLET	3	303
5112 3231 69	HOSE	3	319
5112 3231 73	SPACER SLEEVE	7	303
5112 3231 74	BACK HEAD	26	245
5112 3231 82	CAP	15	245
5112 3231 86	FUEL HOSE	3	331
5112 3231 87	FUEL HOSE	9	331
5112 3231 88	THROTTLE CONTR.	1	313
5112 3231 93	INLET PORT	5	307
5112 3231 96	INTAKE HOSE	4	307
5112 3232 48	RESTR. WASHER	6	363
5112 3232 52	CATALYSER	1	361
5112 3235 27	SET OF WHEELS	16	209
5112 3302 52	ASSEMBLY SET	2	367
5118 0188 00	GASKET	12	231
5118 0899 00	RELAY	K101	259
5118 0904 00	RUBBER PROTEC	11	285
5118 0905 00	RUBBER PROTEC	17	285
5118 0910 00	LINK ROD HEAD	6	315
5118 1159 00	PLUG	15	231

Part no Detaljnr	Description	Ref no	See page Se sida
5500 3057 00	SEAL WASHER	2	305
5500 5110 00	PIPE CONNECTION	66	411
5507 8719 00	WAGNER PART	15	769
5507 8719 00	WAGNER PART	30	769
5507 8719 00	WAGNER PART	22	809
5507 8719 00	WAGNER PART	2	769
5507 8719 00	WAGNER PART	1	769
5507 8719 00	WAGNER PART	30	809
5507 8719 00	WAGNER PART	11	809
5507 8719 00	WAGNER PART	25	769
5507 8719 00	WAGNER PART	11	769
5507 8719 00	WAGNER PART	10	809
5507 8719 00	WAGNER PART	16	769
5507 8719 00	WAGNER PART	15	809
5507 8719 00	WAGNER PART	9	769
5507 8719 00	WAGNER PART	9	809
5507 8719 00	WAGNER PART	22	769
5507 8719 00	WAGNER PART	25	809
5507 8719 00	WAGNER PART	16	809
5507 8719 00	WAGNER PART	3	809
5507 8719 00	WAGNER PART	2	809
5507 8719 00	WAGNER PART	1	809
5507 8719 00	WAGNER PART	3	769
5507 8719 00	WAGNER PART	10	769
5580 0041 28	FUEL FILTER	4	305
5580 0105 81	PLUG	10	141
5580 0105 82	PLUG	9	141
5580 0110 80	WASHER	10	243
5580 0110 80	WASHER	8	347
5580 0147 74	SEAL KIT		617

Part no Detaljnr	Description	Ref no	See page Se sida
7490 5160 87	SHANK ADAPTER	300	543
7490 5160 88	SHANK ADAPTER	300	543
7490 5160 98	SHANK ADAPTER	300	543
7490 5160 99	SHANK ADAPTER	300	543
7490 5161 20	SHANK ADAPTER	300	543
7490 5161 21	SHANK ADAPTER	300	543
8115 4705 96	COMPRESSOR	7	671
8202 0301 05	BALL VALVE	20	419
8202 0301 05	BALL VALVE	26	731
8202 0301 05	BALL VALVE	7	331
8202 0304 02	BALL VALVE	5	715
8202 0304 02	BALL VALVE	13	249
8202 0311 29	BALL VALVE	3	747
8202 0311 29	BALL VALVE	28	715
8202 0311 37	BALL VALVE	3	715
8202 1205 59	QUICK COUPLING	23	419
8202 1300 38	QUICK COUPLING	22	419
8231 0853 45	O-RING	4	253
8231 0853 46	O-RING	5	253
8231 0854 19	BREATHER FILTER	11	249
8231 0854 84	MANOMETER	9	249
8231 0858 23	COVER COMPL.	7	253
8231 1018 04	FILTER INSERT	1	253
8231 1202 86	CHECK VALVE	10	485
8231 1202 86	CHECK VALVE	10	459
8231 1203 06	OVERCENT.VALVE	11	485
8231 1203 67	OVERCENT.VALVE	12	459
8231 1206 86	OVERCENT.VALVE	13	499
8231 1206 98	SEAL KIT	-	487
8231 1206 98	SEAL KIT	-	461

Part no Detaljnr	Description	Ref no	See page Se sida
8231 1206 98	SEAL KIT		485
8234 0200 36	FILTER, COMPL.	10	249
8234 0200 37	PR.CONTR.VALVE	30	66
8915 0025 73	INFORMATION LAB	32	398
8915 0027 02	INFO SIGN	34	398
9030 0300 00	AIR HOSE	26	862
9030 0300 00	AIR HOSE	26	715
9030 0400 00	AIR HOSE	27	715
9030 0400 00	AIR HOSE	27	862
9030 0500 00	AIR HOSE	2	860
9030 0600 00	AIR HOSE	3	862
9090 1172 00	PRESSURE GAUGE	20	731
9090 1172 00	PRESSURE GAUGE	22	731
9090 1423 00	CONNECTION	12	719
9106 0110 81	HOSE GUIDE	59	340
9106 0114 71	LAMP ATTACHMENT	2	705
9106 0630 10	DOUBLE CH.VALVE	73	173
9106 0630 10	DOUBLE CH.VALVE	11	491
9106 0630 10	DOUBLE CH.VALVE	17	453
9106 0630 10	DOUBLE CH.VALVE	11	513
9106 0630 11	DOUBLE CH.VALVE	29	453
9106 0630 14	DIRECTION VALVE	24	211
9106 0630 14	DIRECTION VALVE	2	741
9106 0631 23	CARTRIDGE	2	457
9106 0631 23	CARTRIDGE	2	455
9106 0631 23	CARTRIDGE	2	175
9106 0631 24	SEAL KIT	1	457
9106 0631 24	SEAL KIT	1	175
9106 0631 24	SEAL KIT	1	455
9106 0649 55	PROTECTION CAP	4	701

Part no Detaljnr	Description	Ref no	See page Se sida
9106 0658 52	SUCT.CONNECTION	91	103
9106 0658 73	SUCT.CONNECTION	93	103
9106 0658 83	SUCT.CONNECTION	90	103
9106 0658 85	SUCT.CONNECTION	92	103
9106 0713 01	POWER UNIT	U180	655
9106 0790 12	RUBBER CLOTH	25	419
9106 0796 62	HYDRAULIC PUMP	1	185
9106 0833 01	CHECK VALVE	2	185
9106 0888 18	ATTACHMENT	2	737
9106 0981 02	VALVE ATTM.	1	159
9106 1069 05	SPACER TUBE	3	671
9106 1069 39	PROTECTION ROOF	12	649
9106 1071 01	READ INSTR.BOOK	21	398
9106 1071 03	NO ADMITTANCE	22	398
9106 1071 06	SIGN	23	398
9106 1071 07	SYMBOL PLATE	24	398
9106 1071 09	SYMBOL PLATE	33	398
9106 1071 11	WELDING INSTR.	25	398
9106 1071 12	BATTERY SWITCH	26	398
9106 1071 13	LABEL	27	398
9106 1071 15	FUEL	28	398
9106 1071 27	LUBRICATING OIL	29	398
9106 1071 32	PLATE	30	398
9106 1071 46	LUBR. OIL TANK	4	753
9106 1071 93	PLATE	31	398
9106 1071 94	DATA PLATE CE	1	398
9106 1071 95	DATA PLATE	1	398
9106 1073 00	ELECTRIC. SHOCK	3	398
9106 1073 01	ELECTRIC. SHOCK	4	398
9106 1073 04	RISK OF CRUSH.	5	398

Part no Detaljnr	Description	Ref no	See page Se sida
9106 1073 09	TIPPING HAZ. TR	7	398
9106 1073 13	FALLING BOOM	8	398
9106 1073 14	WARNING SIGN	9	398
9106 1073 16	RISK OF CRUSH.	10	398
9106 1073 21	TIPP. HAZ. DOWN	7	381
9106 1073 21	TIPP. HAZ. DOWN	11	398
9106 1073 26	TIPPING HAZ. DR	12	398
9106 1077 76	COLLECT. BLOCK	89	103
9106 1080 05	MOTOR	17	187
9106 1080 06	PUMP	18	187
9106 1080 07	REPAIR SET		187
9106 1080 09	CONE	19	187
9106 1080 10	SPRING	20	187
9106 1080 11	SCREW	21	187
9106 1080 12	REPAIR SET		187
9106 1089 03	ELECTRIC MOTOR	2	671
9106 1104 61	SPIR.HOSE COMP.	W 1	687
9106 1104 62	SPIR.HOSE COMP.	W 6	687
9106 1104 63	SPIR.HOSE COMP.	W 5	687
9106 1120 09	LATCH	4	661
9106 1120 09	LATCH	4	663
9106 1120 13	ADAPTER	3	661
9106 1120 13	ADAPTER	3	663
9106 1120 14	ROD	2	661
9106 1120 14	ROD	2	663
9106 1120 50	HANDLE	5	661
9106 1120 50	HANDLE	5	663
9106 1125 12	PROTECTION	3	665
9106 1125 13	CONTACT BLOCK	4	665
9106 1125 15	COIL	5	665

Part no Detaljnr	Description	Ref no	See page Se sida
9106 1125 16	PALM GRIP	6	665
9106 1125 20	CONTACT BREAKER	1	665
9106 1125 21	TRIGGER	2	665
9106 1125 35	CABEL LUG SET	7	665
9106 1125 50	MAIN SWITCH	Q 7	655
9106 1157 05	CONTACTOR	K132	655
9106 1157 05	CONTACTOR	K127	655
9106 1157 61	CONTACTOR	K 61Y	654
9106 1157 61	CONTACTOR	K 71Y	654
9106 1157 62	CONTACTOR	K 71D	654
9106 1157 62	CONTACTOR	K 71	654
9106 1157 62	CONTACTOR	K 61D	654
9106 1157 62	CONTACTOR	K 61	654
9106 1165 00	HASP	14	775
9106 1165 00	HASP	14	817
9106 1165 01	HASP	1	779
9106 1165 01	HASP	1	821
9106 1165 02	ATTACHMENT	3	781
9106 1165 02	ATTACHMENT	3	823
9106 1165 03	SHAFT	4	823
9106 1165 03	SHAFT	4	781
9106 1165 04	ARM	2	823
9106 1165 04	ARM	2	781
9106 1165 05	ATTACHMENT	3	779
9106 1165 05	ATTACHMENT	3	821
9106 1165 06	ATTACHMENT	2	779
9106 1165 06	ATTACHMENT	2	821
9106 1223 62	ELECTRIC SET	15	649
9106 1250 32	ECL-SET	560	711
9106 1264 09	CONNECTING PIPE	84	103

Part no Detaljnr	Description	Ref no	See page Se sida
9106 1272 34	LAMP PROTECTION	15	775
9106 1272 34	LAMP PROTECTION	15	817
9106 1286 31	ELECTR.CABINET	1	653
9106 1286 40	CABINET	1	659
9106 1286 41	DOOR	6	659
9106 1286 42	DOOR	5	659
9106 1286 44	TOUCH GUARD	2	659
9106 1286 44	TOUCH GUARD	5	653
9106 1286 47	SLIDE	3	659
9106 1286 55	DOOR	1	663
9106 1286 63	MOUNTING PLATE	7	659
9106 1286 64	MOUNTING PLATE	8	659
9106 1288 40	BUSBAR MODULE	6	653
9106 1289 61	ELECTR.CABINET	1	651
9106 1312 00	SPARE PARTS SET		105
9106 1331 00	SEALING SET		421
9106 1331 01	REPAIR KIT		421
9106 1427 41	PLATE	41	401
9106 1427 52	SIGN	42	401
9106 1434 46	HOSE SET	5	185
9106 1438 80	SET	5	807
9106 1438 80	SET	5	767
9106 1445 72	JUNCTION BOX	2	751
9106 1490 30	MANOMETERHOLDER	302	101
9106 1492 04	SEAL KIT		35
9106 1492 04	SEAL KIT		139
9106 1492 04	SEAL KIT	2	143
9106 1509 11	HYDR. SYSTEM	301	101
9106 1607 27	CHECK VALVE	6	141
9106 1607 29	RESTRICTION	7	141

Part no Detaljnr	Description	Ref no	See page Se sida
9106 1608 62	OIL COOLER	82	103
9106 1609 60	HYDRAULIC SET	440	101
9106 1609 64	HYDR. SYSTEM	300	101
9106 1609 96	HYD.SET REEL	400	101
9106 1611 59	SEAL KIT		167
9106 1611 59	SEAL KIT		169
9106 1611 59	SEAL KIT		77
9106 1611 59	SEAL KIT		75
9106 1682 10	LABEL LIST	267	207
9106 1726 20	CLEANING UNIT	550	711
9106 1752 00	FLANGE	12	683
9106 1752 01	FLANGE	13	683
9106 1752 02	FLANGE	14	683
9106 1752 10	FLANGE	2	683
9106 1804 77	COVER PLUG	2	389
9106 2192 15	SENSOR	1	751
9106 3207 43	MOTOR BRACKET	11	305
9106 8870 45	SPACER	9	49
9110 6731 00	ROLLER HOLDER	1	825
9110 6731 00	ROLLER HOLDER	1	783
9110 6731 01	ATTACHMENT	1	691
9110 6735 01	PROTECTION ROOF	3	393
9110 6736 00	INNER TUBE	1	393
9110 6753 00	SHAFT	3	775
9110 6753 00	SHAFT	3	817
9110 7438 80	PROTECTION ROOF	235	207
9110 8060 04	WASHER	7	95
9110 8324 00	NIPPLE	12	393
9110 8336 00	STEP	12	333
9110 8351 00	WASHER	14	333

Part no Detaljnr	Description	Ref no	See page Se sida
9110 8352 00	WASHER	15	333
9110 8551 00	SUPPORT LEG	230	207
9110 8772 00	HATCH	14	393
9110 8818 01	STRINGER	13	333
9110 8924 00	HOSE NIPPLE	1	115
9110 8940 02	SHAFT COUPLING	2	95
9110 8957 00	LOCK RING	13	719
9110 8967 00	FOOT PLATE	5	389
9110 9515 14	AIR/WATERSYSTEM	500	713
9110 9516 10	HOSE SET	556	729
9110 9554 10	SWING ARM	1	775
9110 9555 00	LOCKING	2	775
9110 9555 00	LOCKING	2	817
9110 9555 02	CATCH	2	819
9110 9555 02	CATCH	2	777
9110 9555 12	COMPRESS.SPRING	8	777
9110 9555 12	COMPRESS.SPRING	8	819
9110 9556 10	HANDLE	2	387
9110 9560 00	CABLE STEERING	842	803
9110 9560 00	CABLE STEERING	19	775
9110 9672 00	CLUTCH CASE	1	95
9110 9707 66	AIR BLOWING	510	711
9110 9729 10	SWING ARM	1	817
9110 9760 23	BINDER BOX	970	207
9110 9787 23	HOLDER	5	417
9110 9958 62	HOSE SET	A01	737
9110 9986 50	ATTACHMENT	12	299
9110 9994 64	FLASHING BEACON	681	647
9111 0020 30	CABLE GEAR	W189	259
9111 3734 10	RELAY	K128	655
9111 3734 30	TRANSIENT PROT.	K128	655
9111 3734 31	TRANSIENT PROT.	K127	655
9111 3734 31	TRANSIENT PROT.	K 64	654
9111 3734 31	TRANSIENT PROT.	K 28	654
9111 3734 31	TRANSIENT PROT.	K 30	654
9111 3734 31	TRANSIENT PROT.	K132	655
9111 3734 31	TRANSIENT PROT.	K 74	654
9111 3734 32	TRANSIENT PROT.	K 61D	654
9111 3734 32	TRANSIENT PROT.	K 71	654
9111 3734 32	TRANSIENT PROT.	K 71D	654
9111 3734 32	TRANSIENT PROT.	K 71Y	654
9111 3734 32	TRANSIENT PROT.	K 61Y	654
9111 3734 32	TRANSIENT PROT.	K 61	654
9111 3770 04	PRESS.REGULATOR	3	35
9111 3891 06	CABLE, 3-CORE	W14:1	751
9111 3891 06	CABLE, 3-CORE	10	693
9111 3891 06	CABLE, 3-CORE	11	693
9111 3891 09	CABLE,12-CORE	W 12	687
9111 3891 09	CABLE,12-CORE	W 11	687
9111 3891 10	CABLE, 5-CORE	W52	257
9111 3891 10	CABLE, 5-CORE	W 22	687
9111 3891 10	CABLE, 5-CORE	W511	259
9111 3891 10	CABLE, 5-CORE	W77	289
9111 3891 10	CABLE, 5-CORE	3	669
9111 3891 10	CABLE, 5-CORE	11	651
9111 3891 10	CABLE, 5-CORE	5	795
9111 3891 13	CABLE, 7-CORE	W51	257
9111 3891 13	CABLE, 7-CORE	4	795
9111 3891 13	CABLE, 7-CORE	W51	259
9111 3891 44	CABLE, 2-CORE	22	751

Part no Detaljnr	Description	Ref no	See page Se sida
9111 3891 44	CABLE, 2-CORE	3	299
9111 3891 44	CABLE, 2-CORE	2	701
9111 3891 44	CABLE, 2-CORE	B351	257
9111 3891 44	CABLE, 2-CORE	8	703
9111 3891 44	CABLE, 2-CORE	E102	289
9111 3891 44	CABLE, 2-CORE	B143	259
9111 3891 44	CABLE, 2-CORE	B350	257
9111 3891 44	CABLE, 2-CORE	B352	257
9111 3891 44	CABLE, 2-CORE	B359	257
9111 3891 44	CABLE, 2-CORE	H186	257
9111 3891 44	CABLE, 2-CORE	H215	257
9111 3891 44	CABLE, 2-CORE	E101	289
9111 3891 59	CABLE, 2-CORE	7	191
9111 3891 59	CABLE, 2-CORE	8	191
9111 4061 79	STRAINER	1	715
9111 4061 94	SPARE PARTS SET		717
9111 4169 71	PLASTIC SHEET	1	99
9120 0292 02	PRESS.REL.VALVE	13	77
9120 0292 06	PRESS.REL.VALVE	12	77
9120 0590 52	LEVER SET	4	83
9120 0690 51	SETTING SCREW	11	45
9120 0893 02	LEVER JOINT	1	83
9120 0893 91	BOLT SET	2	83
9120 0990 07	SEALING SET		615
9120 0990 08	SEAL KIT		349
9120 0990 09	SEALING SET		395
9120 0990 14	SEALING SET		223
9120 0990 20	SEAL KIT		391
9120 0990 20	SEAL KIT		349
9120 0994 01	SEAL KIT		459
9120 0994 01	SEAL KIT		485
9120 0994 01	SEAL KIT		499
9121 5500 08	CONNECT.ADAPTER	77	173
9121 5500 08	CONNECT.ADAPTER	15	157
9121 5913 01	HYDR. CYLINDER	1	389
9121 5913 50	SEAL KIT		391
9121 6696 50	SEAL KIT		459
9121 7017 02	HYDR. CYLINDER	10	471
9121 7017 50	SEAL KIT		485
9121 7032 00	HYDR. CYLINDER	10	437
9122 4352 00	VALVE	38	66
9123 3552 00	CYLINDER COVER	10	497
9123 3552 00	CYLINDER COVER	5	615
9123 3553 00	CYLINDER COVER	4	349
9123 3554 00	COVER	2	395
9123 3554 00	COVER	10	467
9123 3557 00	COVER	1	489
9123 6507 11	COVER COMPL.	19	485
9123 6507 13	CYLINDER COVER	4	223
9123 6624 00	PISTON ROD	3	223
9123 7603 00	COVER	19	459
9123 9198 00	PISTON ROD	3	459
9123 9854 00	PLATE	5	85
9123 9855 00	DISK	7	85
9124 7986 00	NUT	1	85
9124 9564 00	PISTON	2	615
9124 9565 00	PISTON	6	395
9124 9565 00	PISTON	3	349
9124 9567 00	PISTON	15	485
9124 9568 00	PISTON	10	223

Part no Detaljnr	Description	Ref no	See page Se sida
9124 9568 00	PISTON	15	459
9124 9746 00	BELLOW	3	87
9125 6059 00	O-RING	21	485
9125 6186 00	O-RING	1	485
9125 6191 00	O-RING	12	553
9125 6191 00	O-RING		571
9125 6191 00	O-RING	231	569
9125 6283 00	O-RING	108	59
9125 6584 00	SEALRING	4	489
9125 6648 00	SEAL WASHER	8	485
9125 6720 00	PISTON SEAL	4	615
9125 6871 00	O-RING	22	55
9125 6889 00	O-RING	3	25
9125 6889 00	O-RING	4	19
9125 6889 00	O-RING	23	55
9125 6889 00	O-RING	1	31
9125 6889 00	O-RING	36	27
9125 6889 00	O-RING	36	21
9125 6889 00	O-RING	36	29
9125 7295 00	SET SCREW	5	467
9125 7295 00	SET SCREW	5	497
9125 7729 00	NUT	4	87
9125 8016 00	PLUG	24	485
9125 9463 00	LOCKING	5	87
9126 1580 00	HYDR. CYLINDER	5	393
9126 1581 00	PISTON ROD	5	395
9126 1812 03	PISTON ROD	3	485
9126 1816 19	SPRING SET	3	83
9126 2010 01	PISTON ROD	15	391
9126 2011 00	COVER	17	391

Part no Detaljnr	Description	Ref no	See page Se sida
9126 2012 00	PISTON	16	391
9126 2322 00	HYDR. CYLINDER	31	611
9126 3951 00	COVER	13	637
9126 4300 03	PISTON ROD	11	615
9126 4492 02	PIPE	2	485
9126 4610 02	PIPE	26	499
9126 4610 09	PIPE	2	459
9127 2300 00	SCREW	24	499
9127 2300 00	SCREW	7	459
9127 2300 00	SCREW	7	485
9127 3199 33	PLUG	1	89
9127 3547 70	WASHER	2	637
9128 2273 00	DISK	4	85
9128 3768 00	RETURN SPRING	7	83
9128 6954 00	LEVER	2	87
9128 6962 00	PRESS. PLATE	3	85
9128 6998 00	SLIDE	18	349
9128 7076 00	PISTON	9	391
9128 7342 00	BUSHING	14	497
9128 7342 00	BUSHING	14	467
9128 7344 00	BUSHING	4	485
9128 7345 00	BUSHING	4	459
9128 7776 00	SPRING	3	89
9128 9452 00	SPRING	8	45
9139 6004 56	FLAT PIN SLEEVE	3	259
9236 2010 29	PISTON	4	637
9721 0800 00	FUEL	32	209
9853 1189 01	OVERH. INSTRUC.		573
9853 1189 01	OVERH. INSTRUC.		579
9853 6667 20	SPARE PART.LIST		573

Part no Detaljnr	Description	Ref no	See page Se sida
9853 6667 20	SPARE PART.LIST		579
9900 0003 00	PLASTIC BAG		571
9900 0004 00	PLASTIC BAG	5	563